


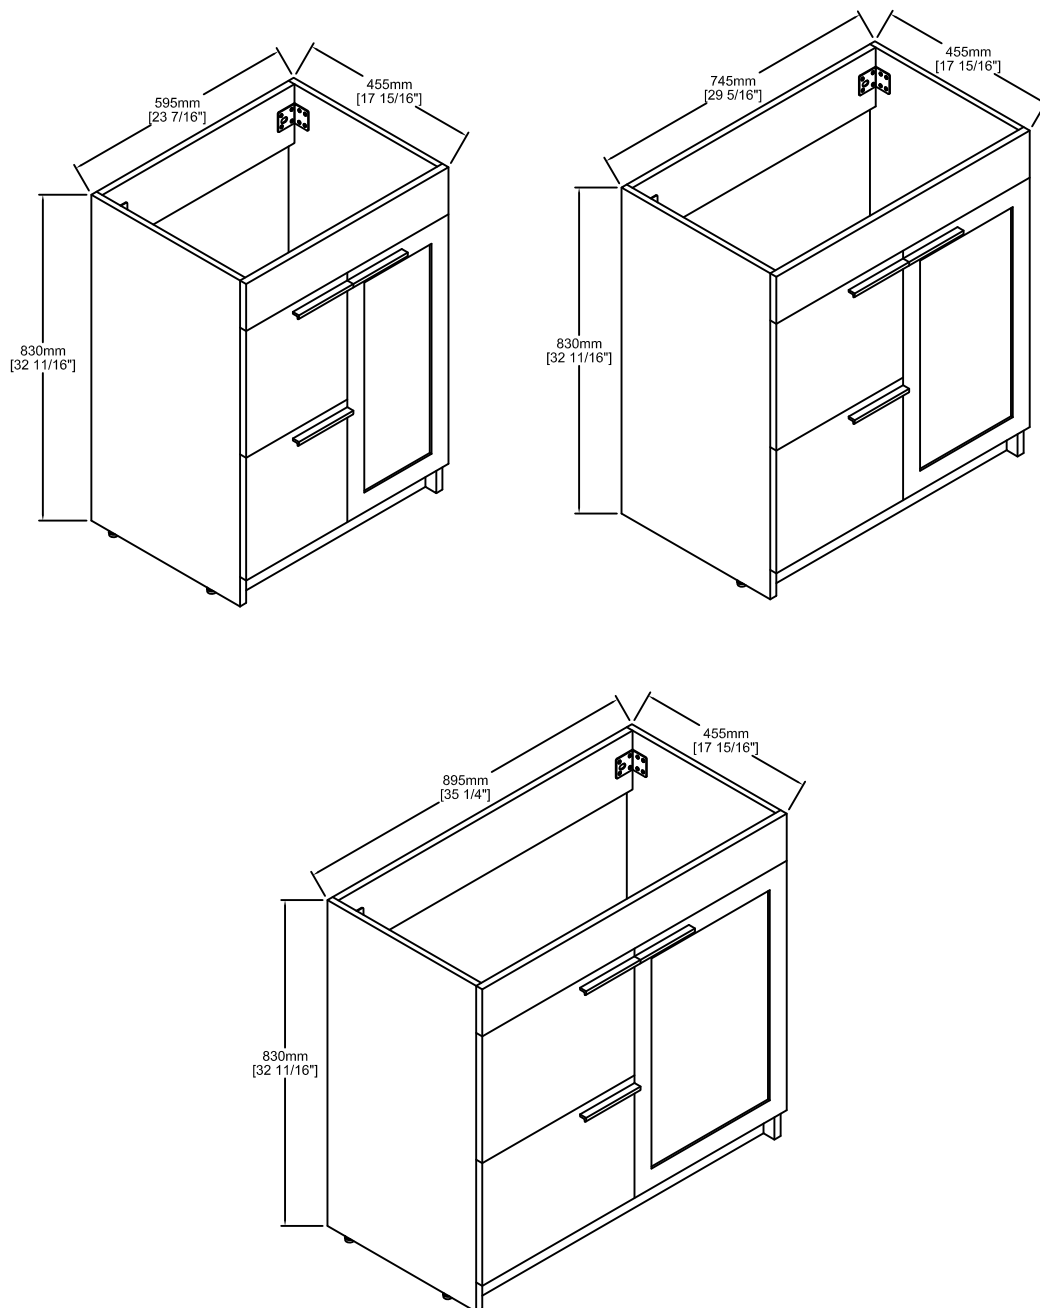

Specifcation & Installation Guide

Features

- Modern design with matte white or melamine finishes.
- Soft-closing doors .
- Compatible ceramic basins or artificial stone basins.
- Compatible matching mirror, medicine cabinet or LED mirror, medicine cabinet.
- Easy installation

Package Dimension

24" 26-3/8" x 20-7/8" x 36-7/16"

30" 32-5/16" x 20-7/8" x 36-7/16"

36" 38-3/16" x 20-7/8" x 36-7/16"

Colors / Finishes

MATT WHITE - 01

CHARCOAL - 28

CLASSIC OAK - 29

CALI WALNUT - 30

Gross Weight

24" 70 LBS


30" 83 LBS

36" 91 LBS

Sink Top Options


	Vanities	Ceramic basin	Artificial stone basin
24"	V8029 - 24	C04 2418	A10 2418 25
30"	V8029 - 30	C04 3018	A10 3018 25
36"	V8029 - 36	C04 3618	A10 3618 25

24" 23-7/16"x 17-15/16"x 32-11/16"

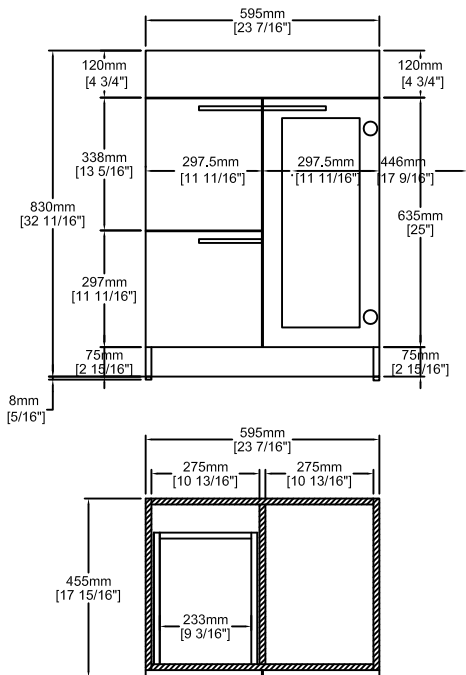


TOP VIEW

30" 29-5/16"x 17-15/16" x 32-11/16"

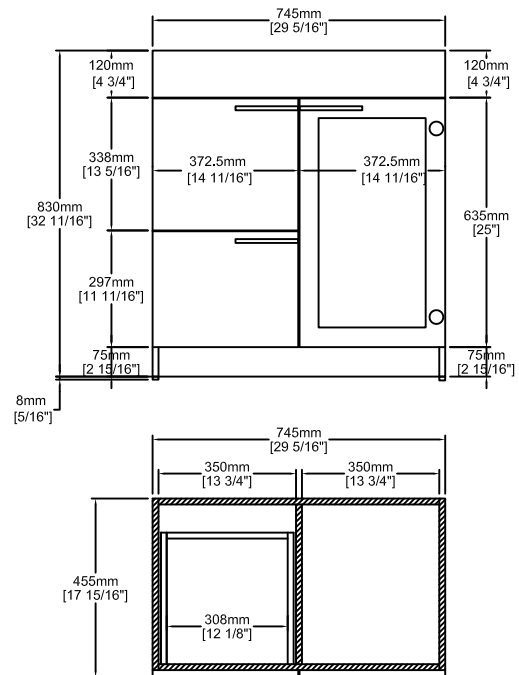


TOP VIEW

36" 35-1/4"x 17-15/16"x 32-11/16"

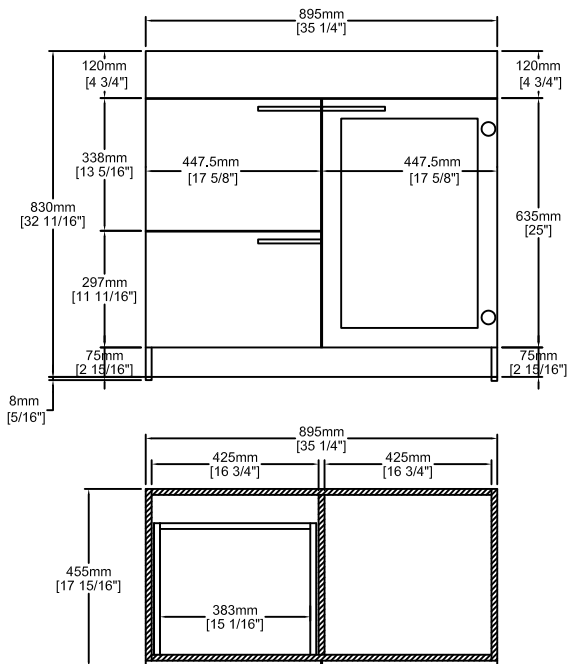


TOP VIEW

Side View

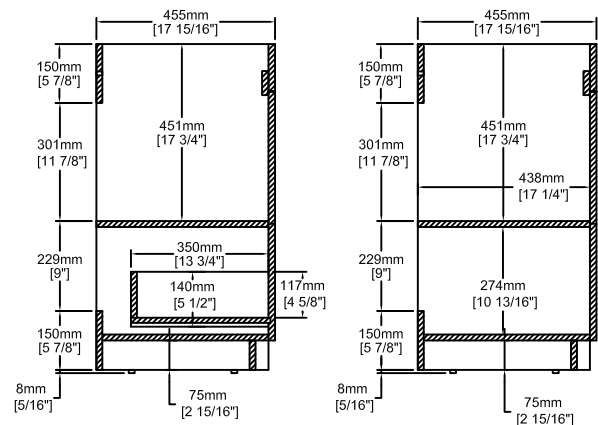


SECTION VIEW

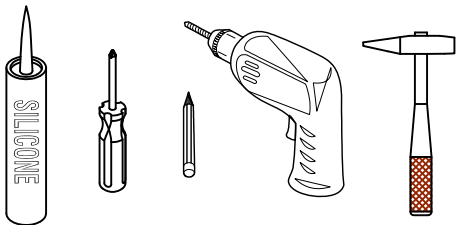Hardware				Tools (not includes)	
NO.		Draw	QTY		
A	Adjust feet		4		
B	White rubber plug(Ø6mm)		2		
C	Screws(Ø4 x 68mm)		2		
D	Stainless steel cover		2		

Wall blocking is required for all installation


The suggested heights without the sink are 30-5/8" for Blossom Resin Basin, or 32-5/8" for Blossom Ceramic Basin.

Depending on the sinks selected, the total height will vary from 33-1/2"(850mm) to 35-1/4"(895mm). If an alternate height desired, adjust the rough-in and backing material heights using the dimensions provided.

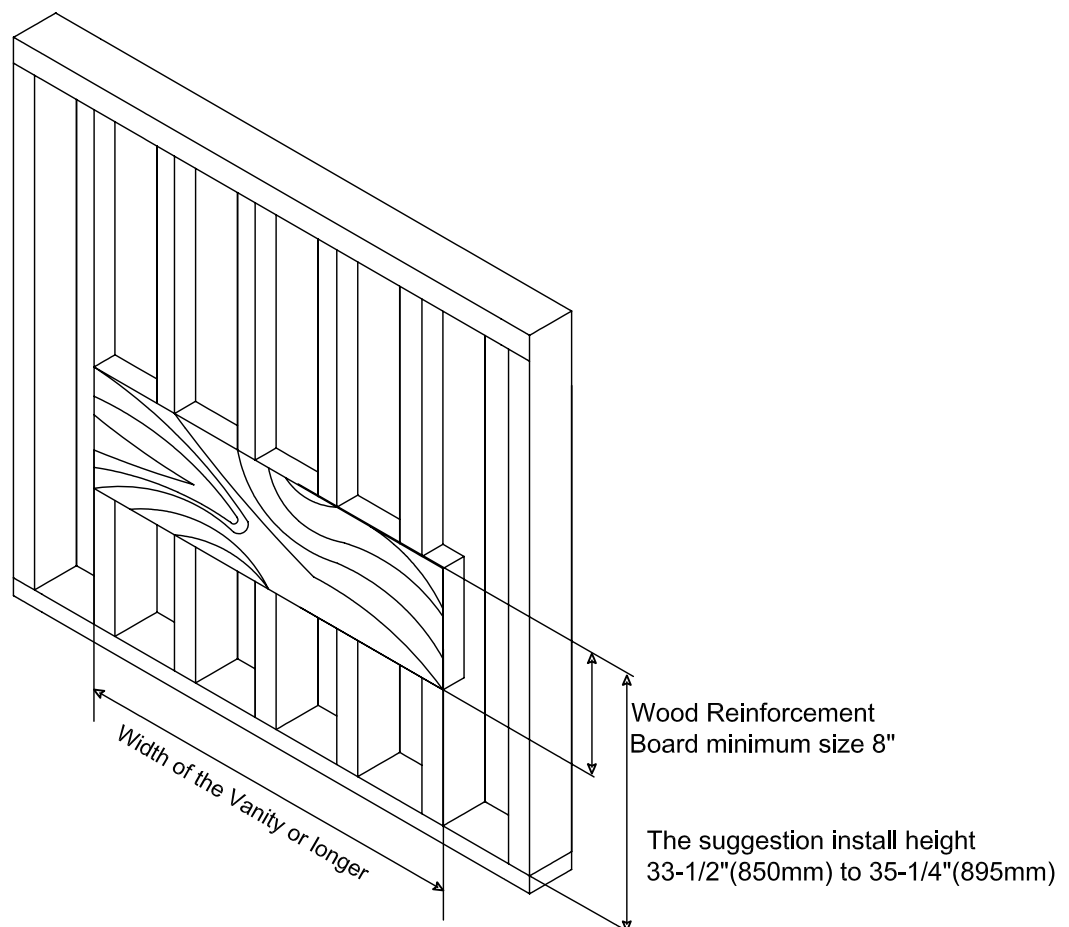


STEP 1

- Mark the pre-drilled holes with a pencil or marker after positioning the vanity.
- Drill the holes with suitable drill-bits base on different condition of the wall.

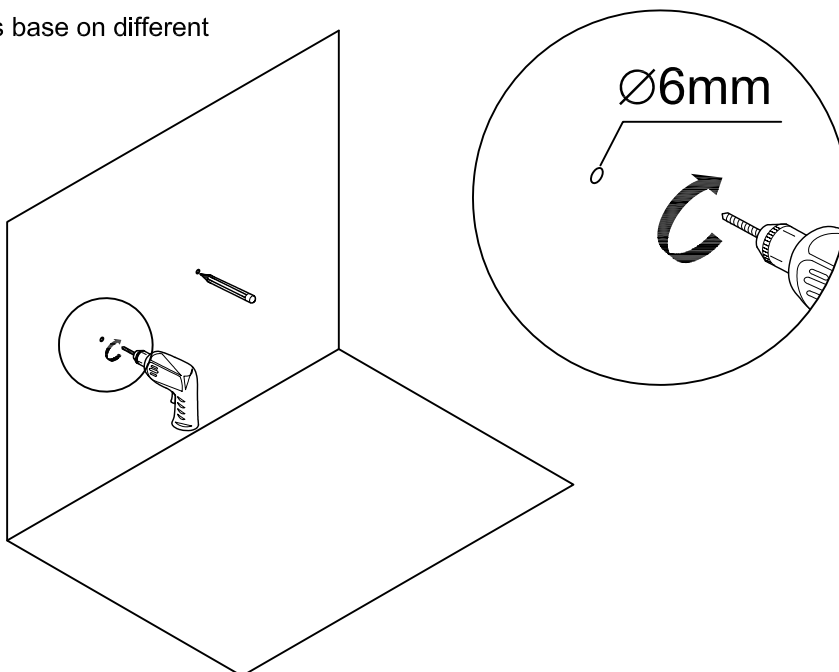
**STEP 2**

- White rubber plug for brick wall or concrete wall.


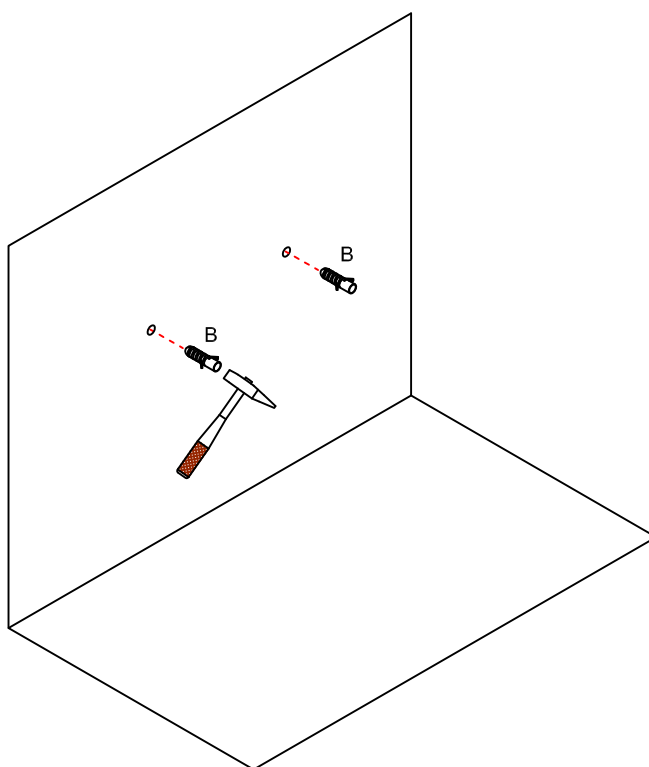


STEP 3

- Screw the lifting foot into the screw hole at the bottom.
- The adjusting screw at the bottom of the metal foot can be raised 0-9/16"(0-15mm).

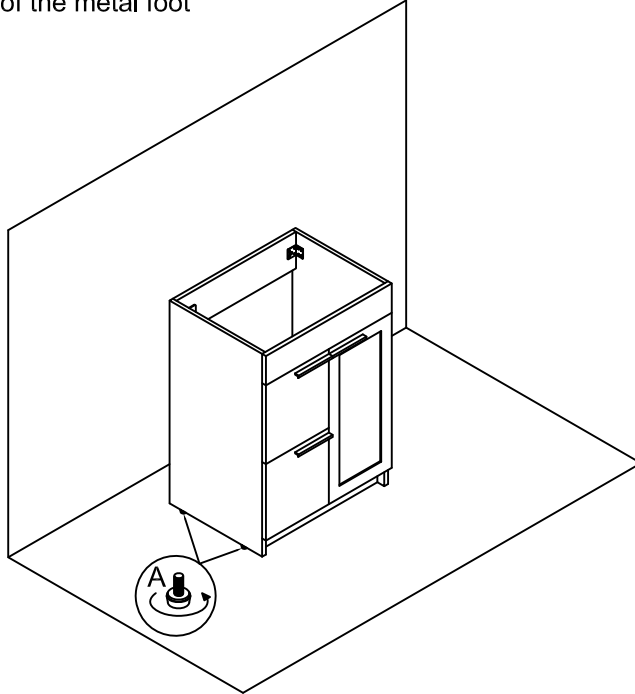
**STEP 4**

- Fix the cabinet to the wall with screw C and cover it with a stainless steel lid D.

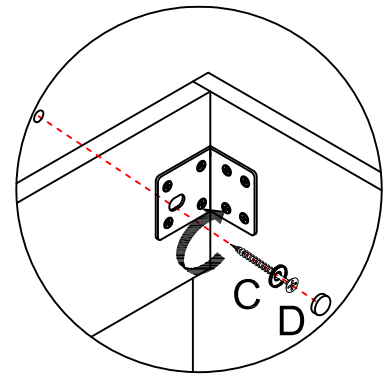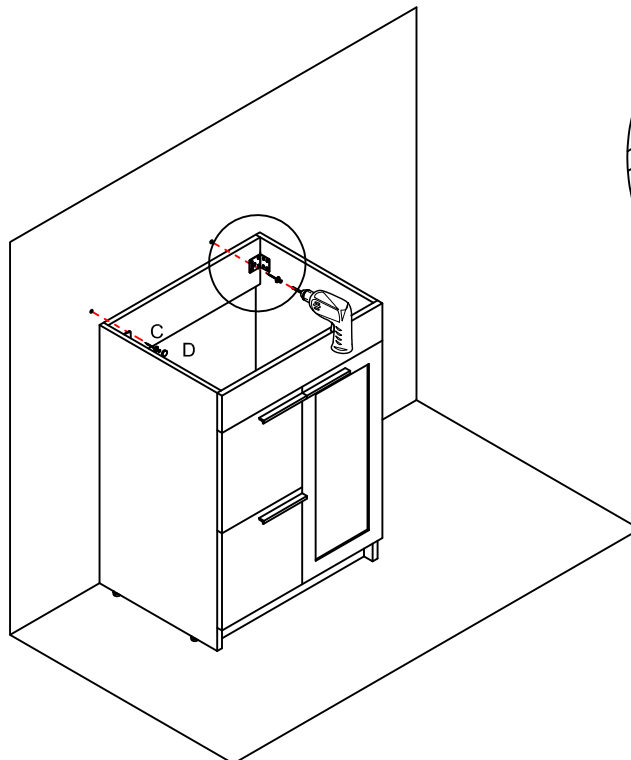

STEP 5

- Install the basin with silicone.

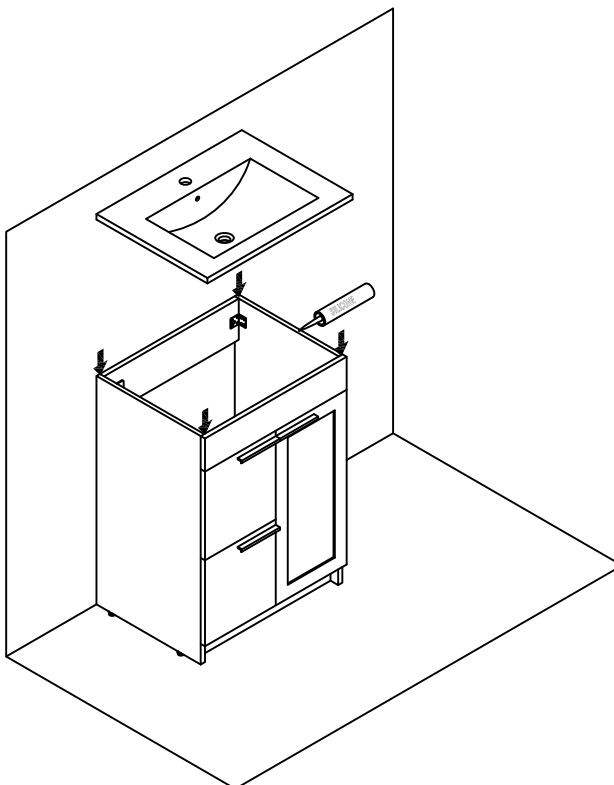**STEP 6**

- Installation complete.

