



# SHOE BENCH

## INSTRUCTION MANUAL

200BW/GY/BL



# PART 01

## Product parts and quantities



### Kind Tips

- ▶ 1. Product includes all required parts and tools. It can be operated by one person.
- ▶ 2. Please carefully distinguish each plate (front or back) and parts before installation.
- ▶ 3. To avoid incorrect installation, do not tighten the screws until fully assembled to facilitate correction.
- ▶ 4. After complete assembly, tighten all screws and check that each unit operates smoothly.

# Parts and Tools

## Self-tapping screw

**A** × 32



4X40mm

**B** × 12



3.5X12mm

**C** × 14



3.5X14mm

**D** × 1



Eccentric  
rod

**E** × 1



Eccentric  
wheel

**F** × 2



Spring  
shelf pin

**G** × 2



Skin file

**H** × 2







Straight arm  
hinge

**I** × 1



Screwdriver

# Panel

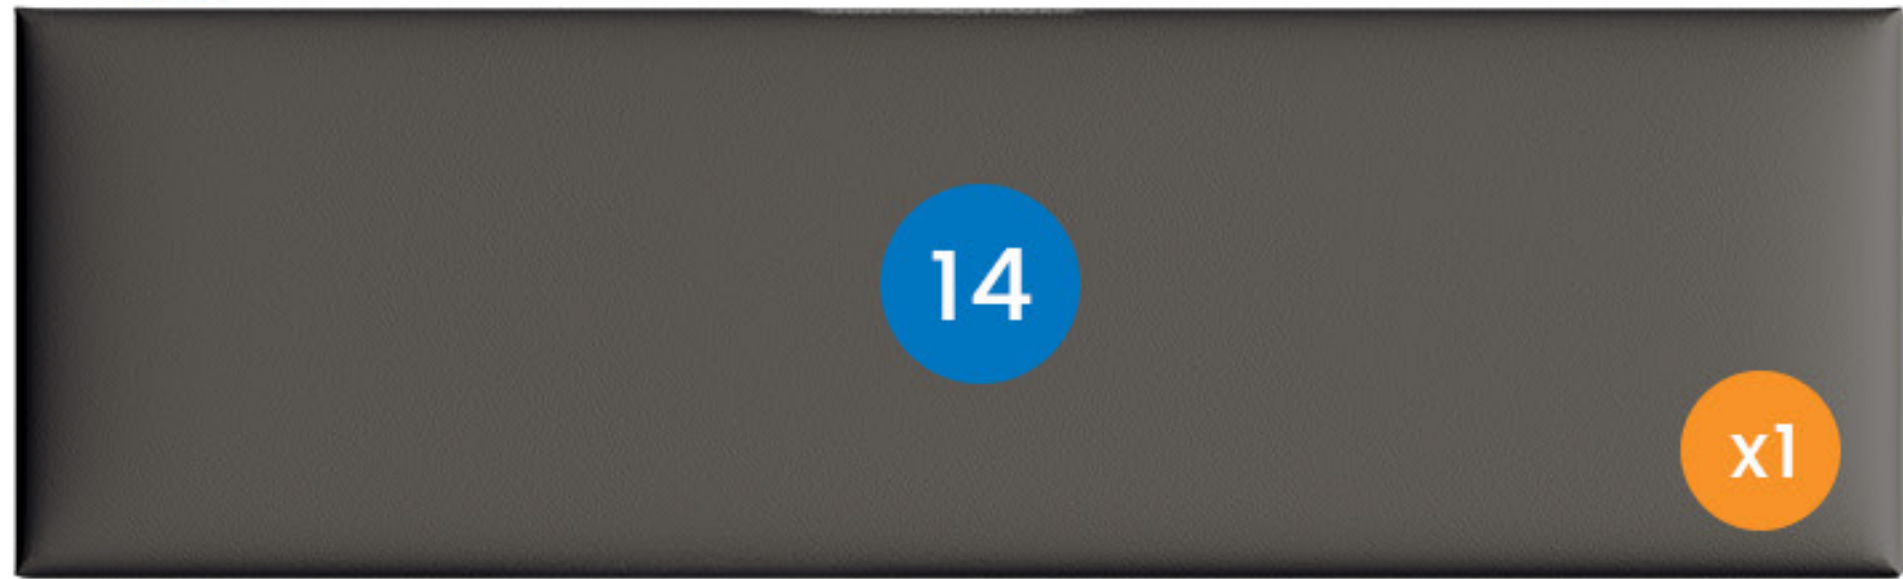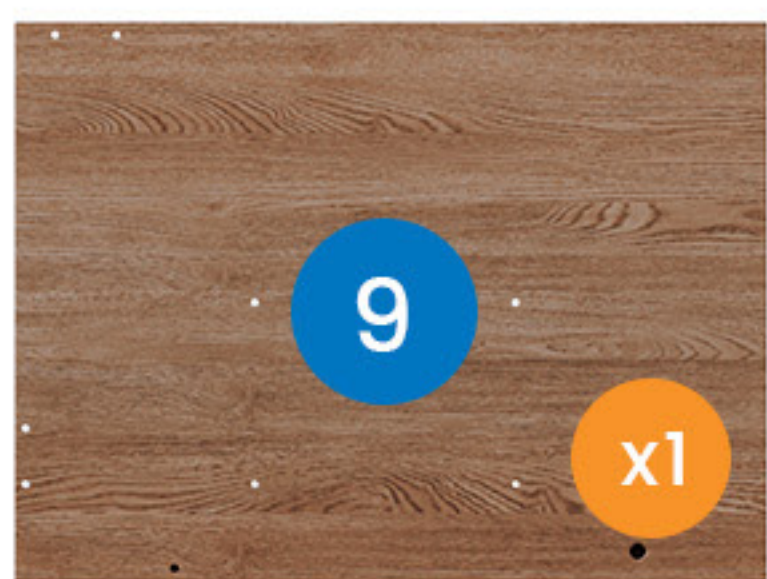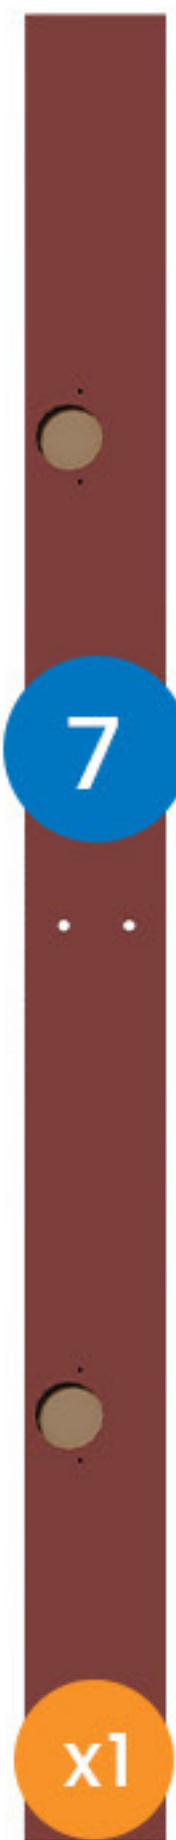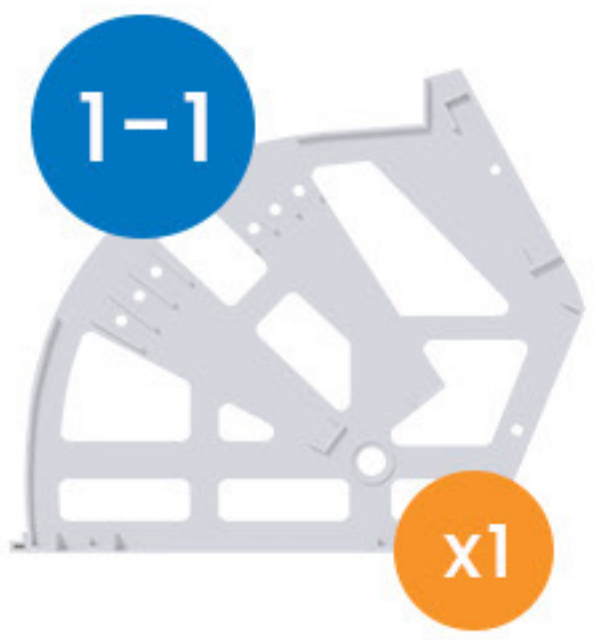

# PART 02

Install clamshell drawer



# Step 1

Place panels 1-1 and 1-2 on top of panel 2 and align the screw holes. Secure with screws C.




# Step 2

Place the two panels 3 in the grooves between panels 1-1 and 1-2 and secure with screws C.




## Step 3

Insert the two F parts into the small holes on both sides of panel 2.

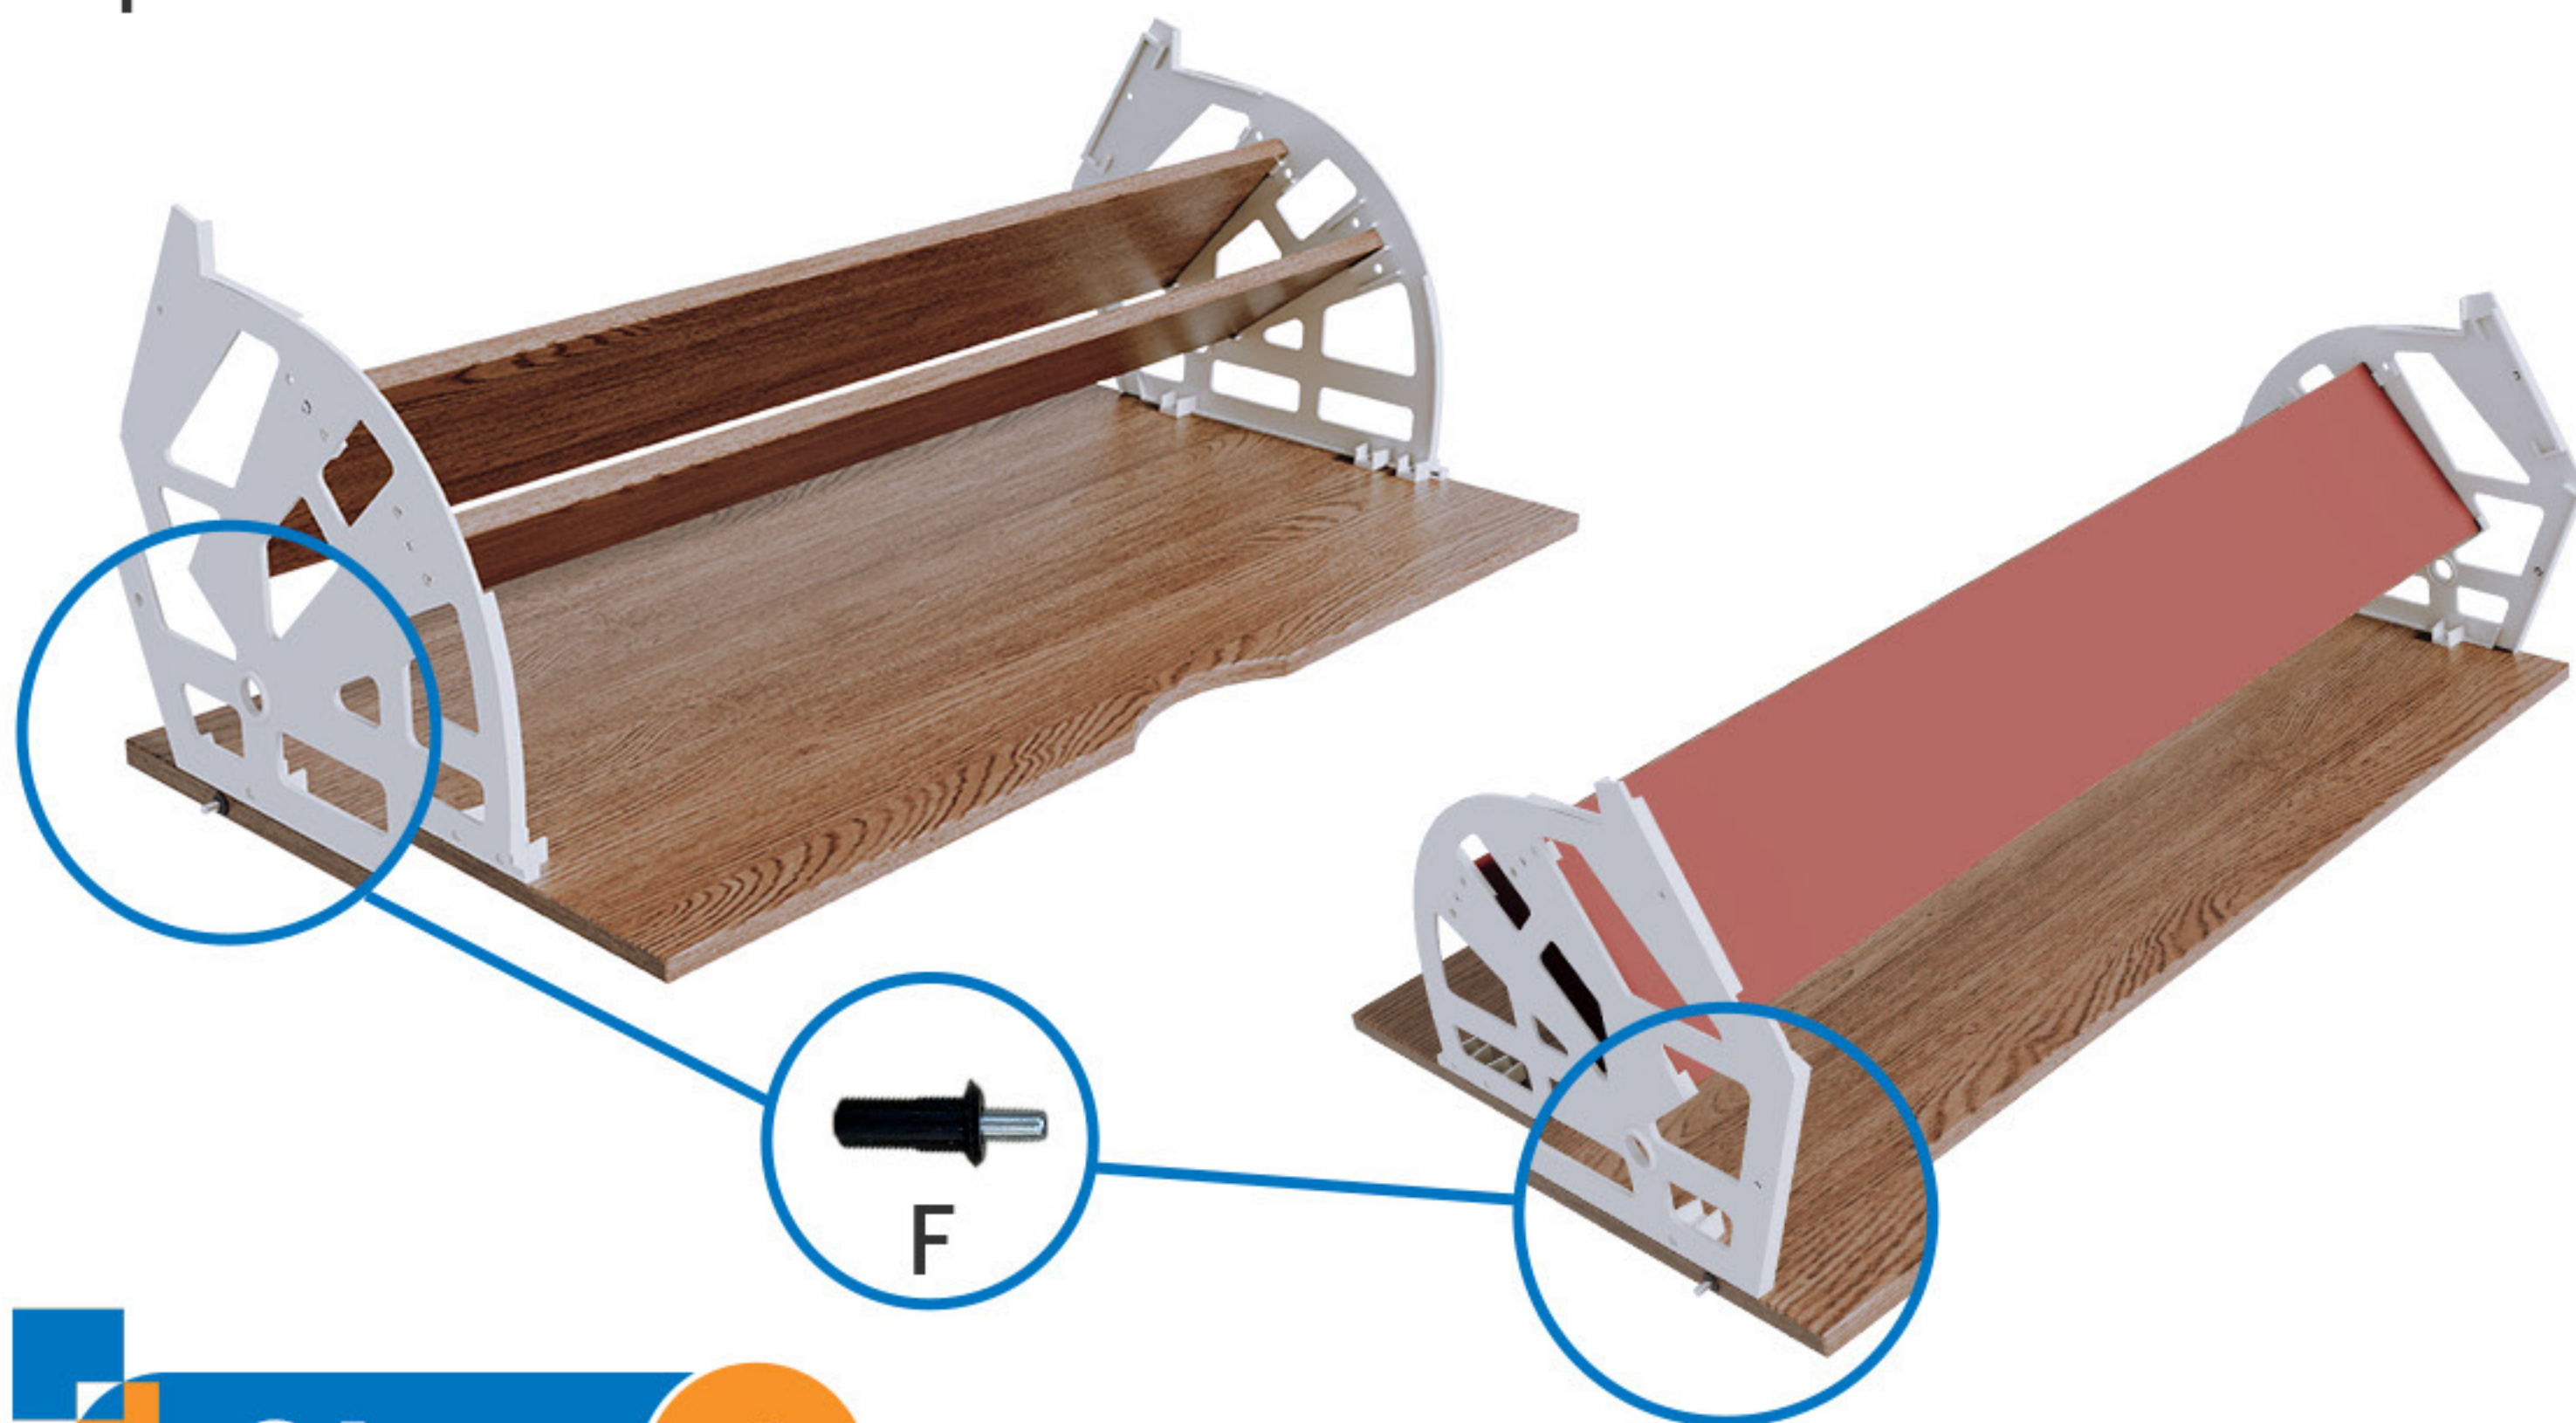

## Step 4

Place panel 4 and panel 3 in the grooves below and above between 1-1 and 1-2 respectively, and secure with screws C.

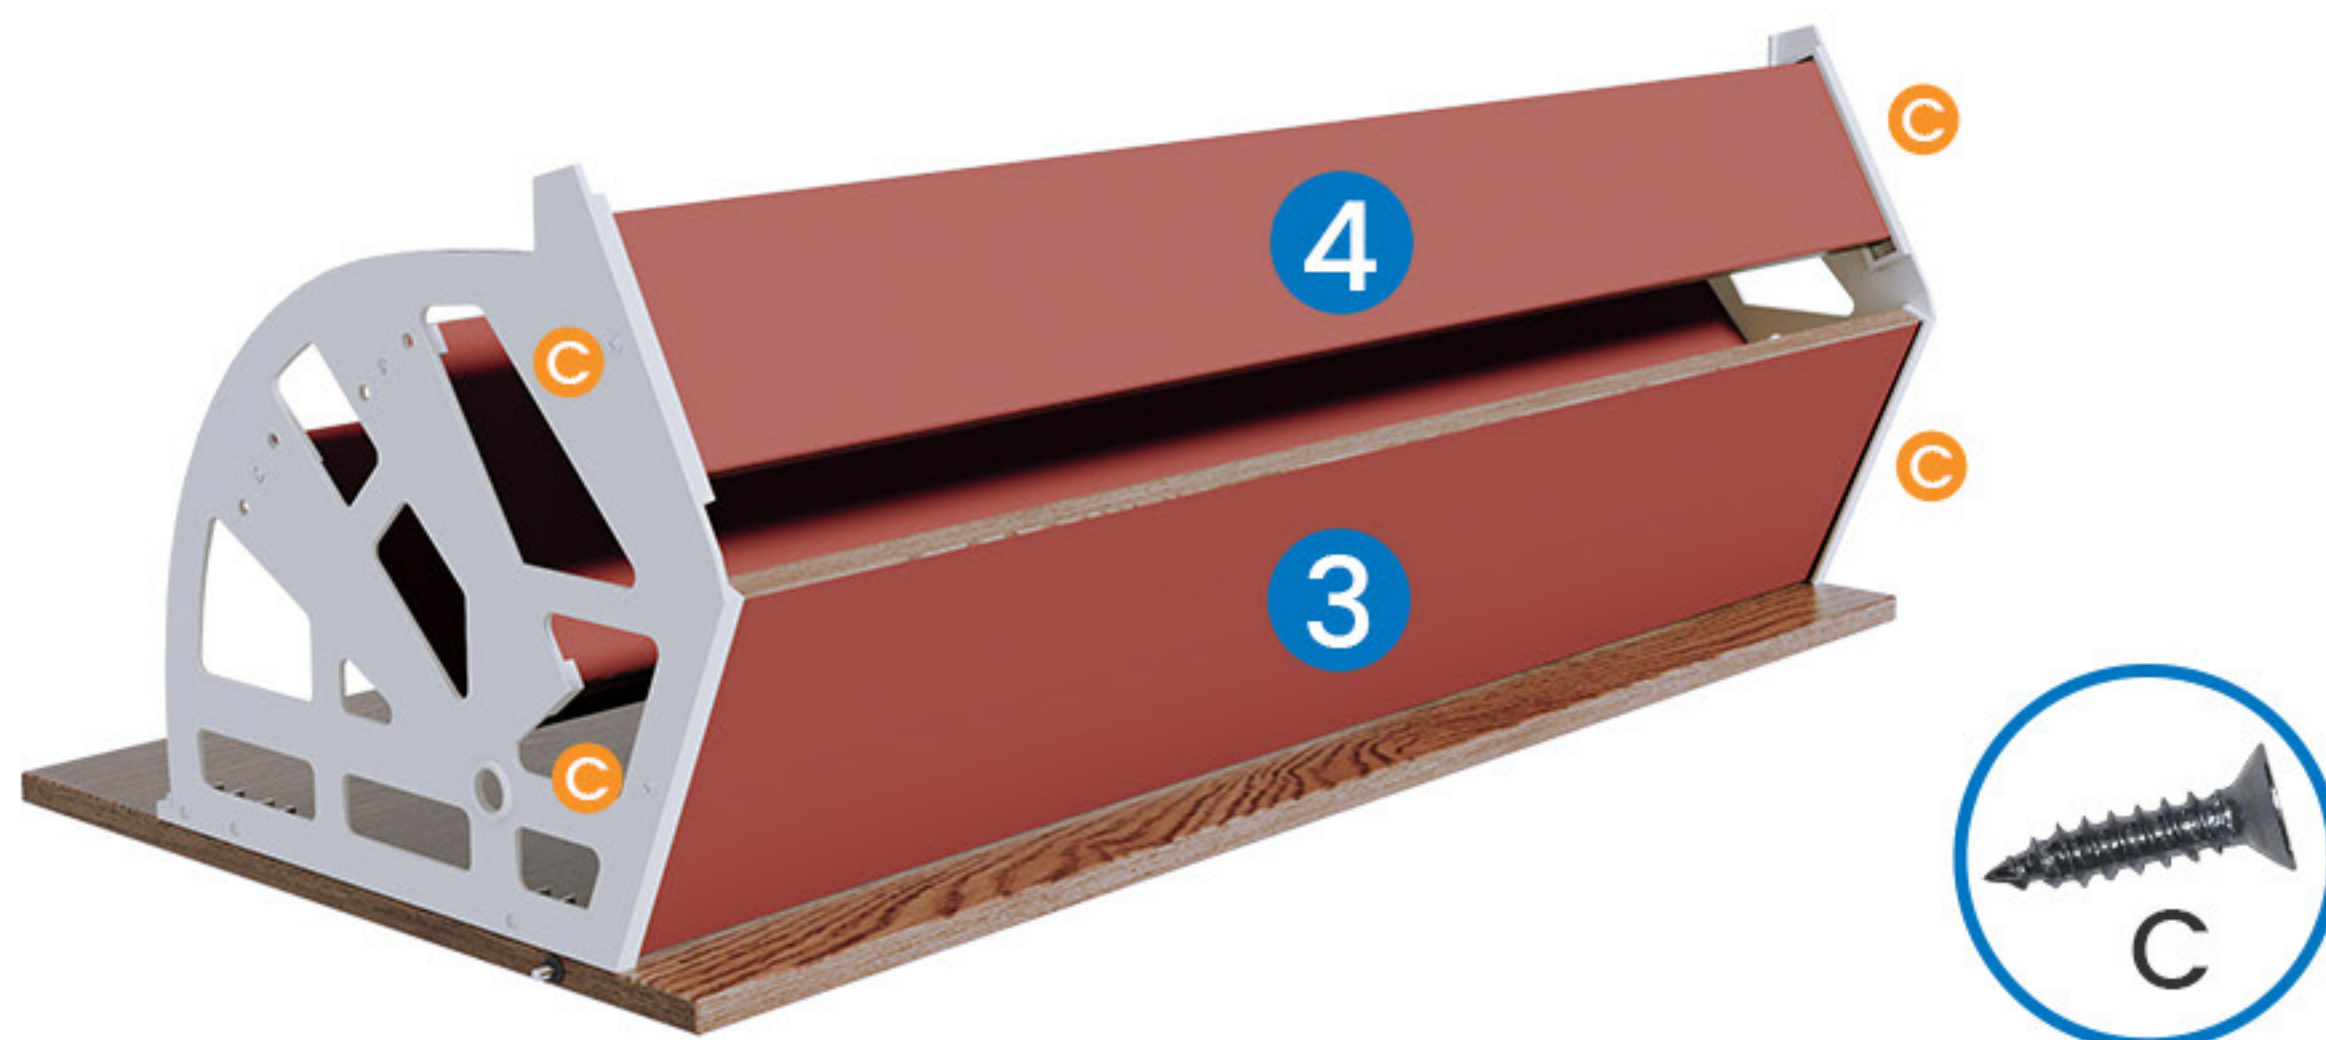

# ■ PART 03



Install the shoe cabinet outer box



# Step 1

Place panel 7 between panels 5 and 6 and secure with screws A.

! This hole faces inwards.

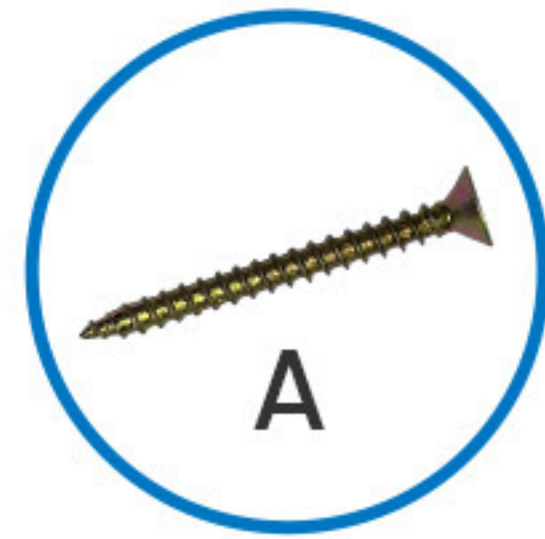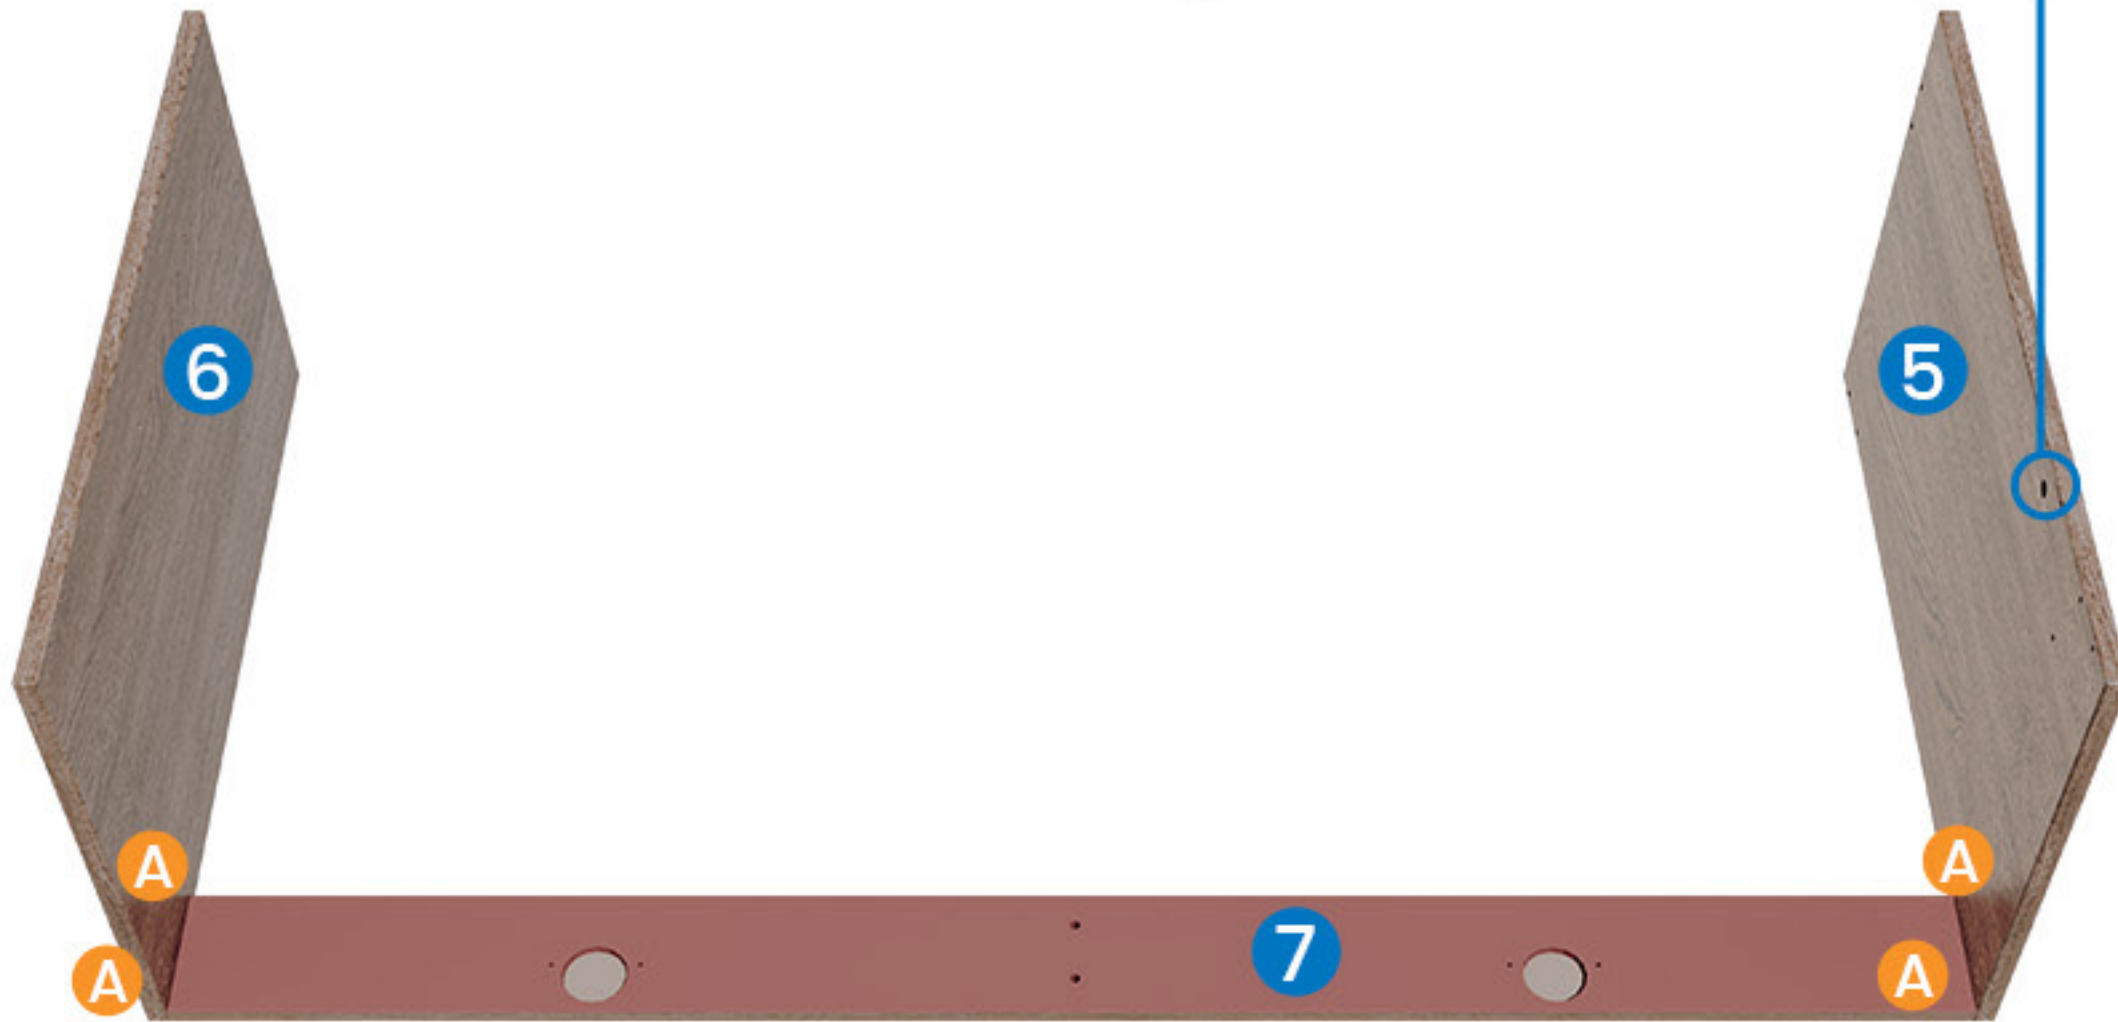


# Step 2

Place panel 8 on the front of panel 7 and secure with screw A.




## Step 3

Place panel 9 under panel 8 and secure with screws A.

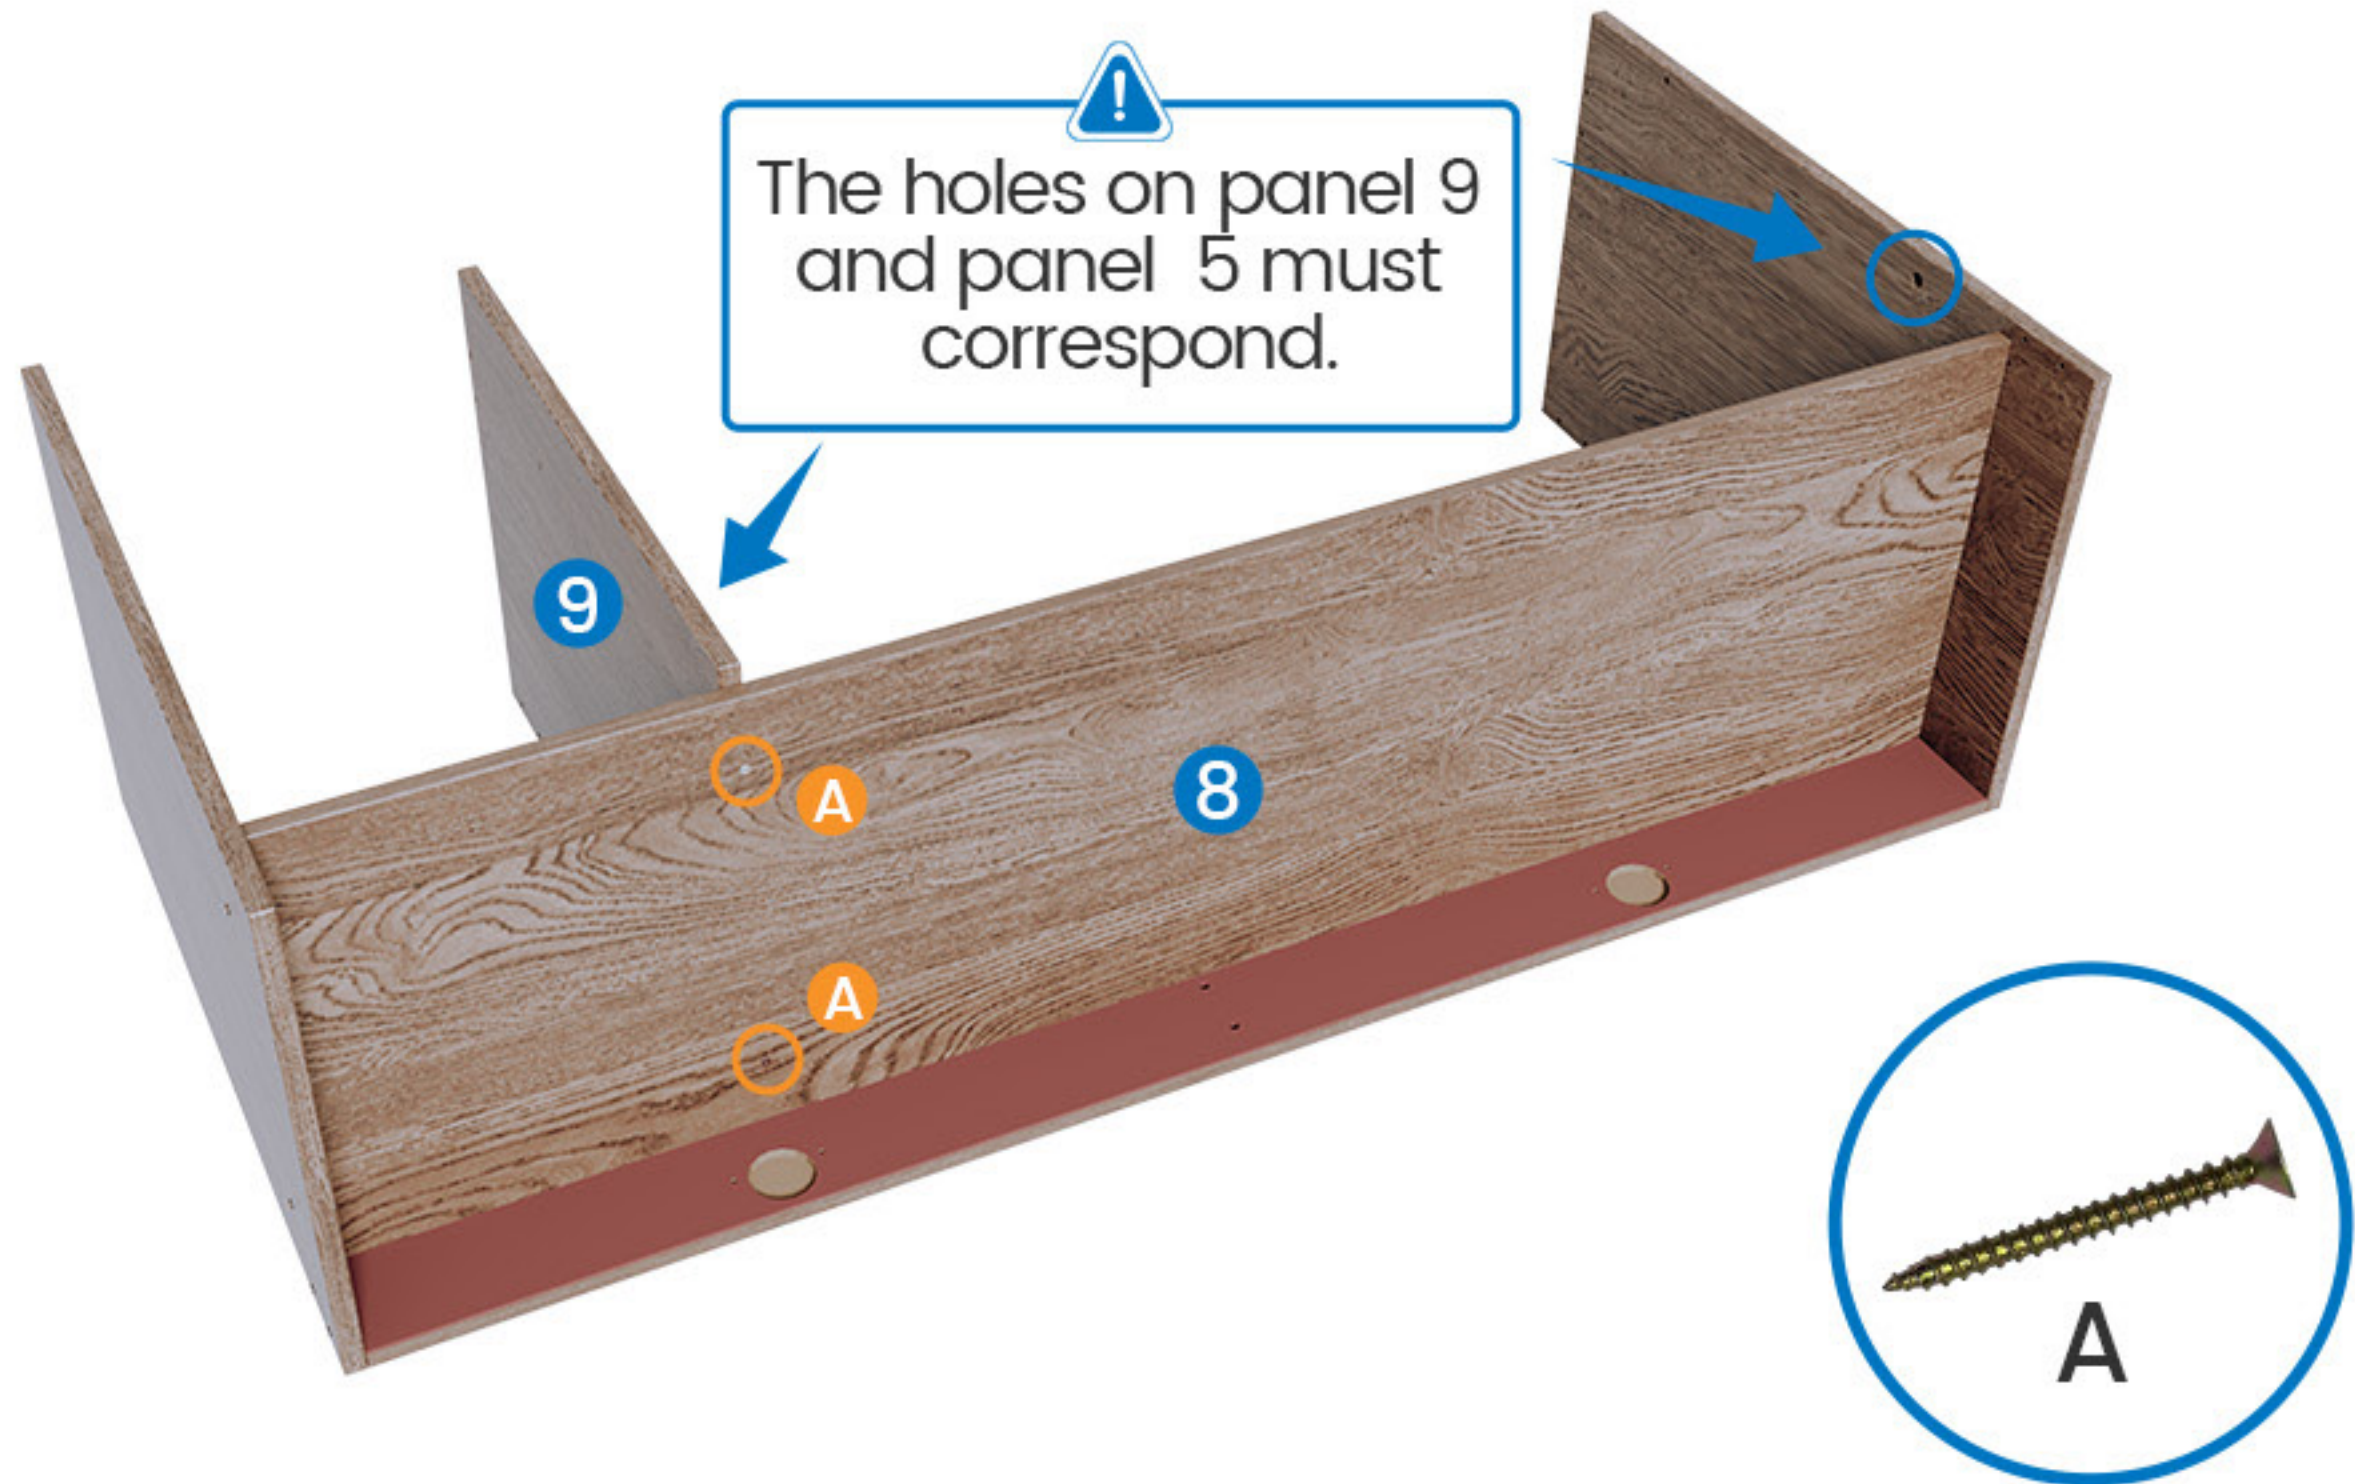



## Step 4

Place panels 10 and 15 between panels 5 and 9 and secure with screws A.

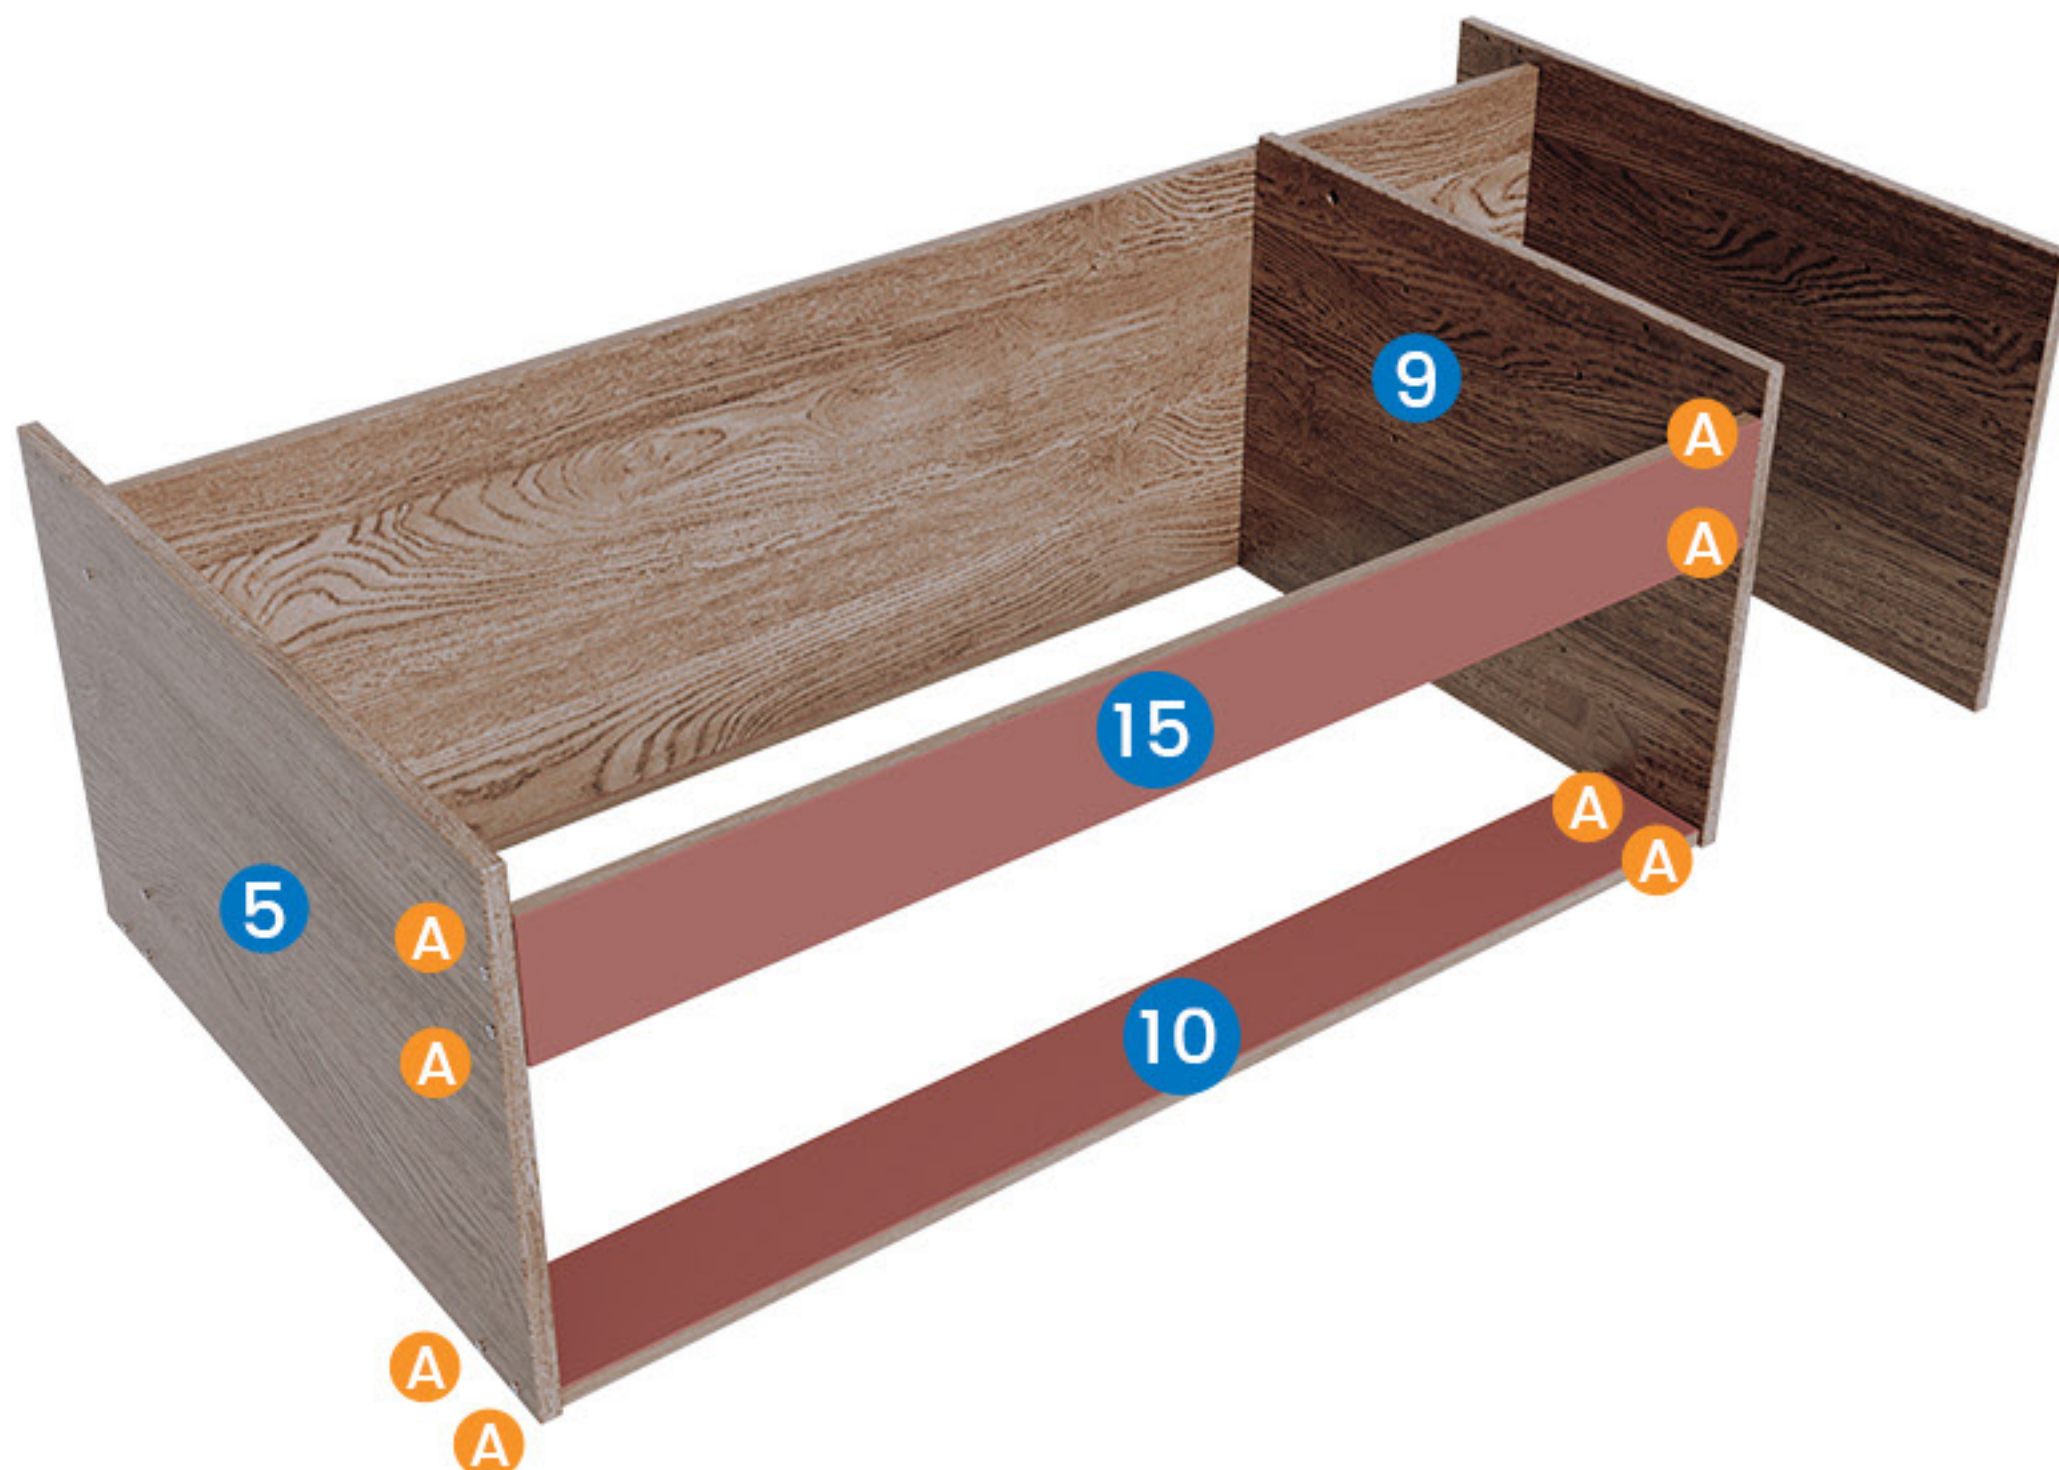


## Step 5

Place the two panels 11 between panels 6 and 9 and secure with screws A.

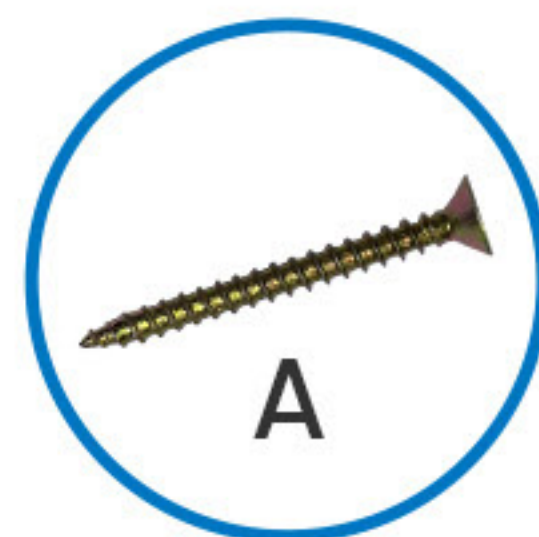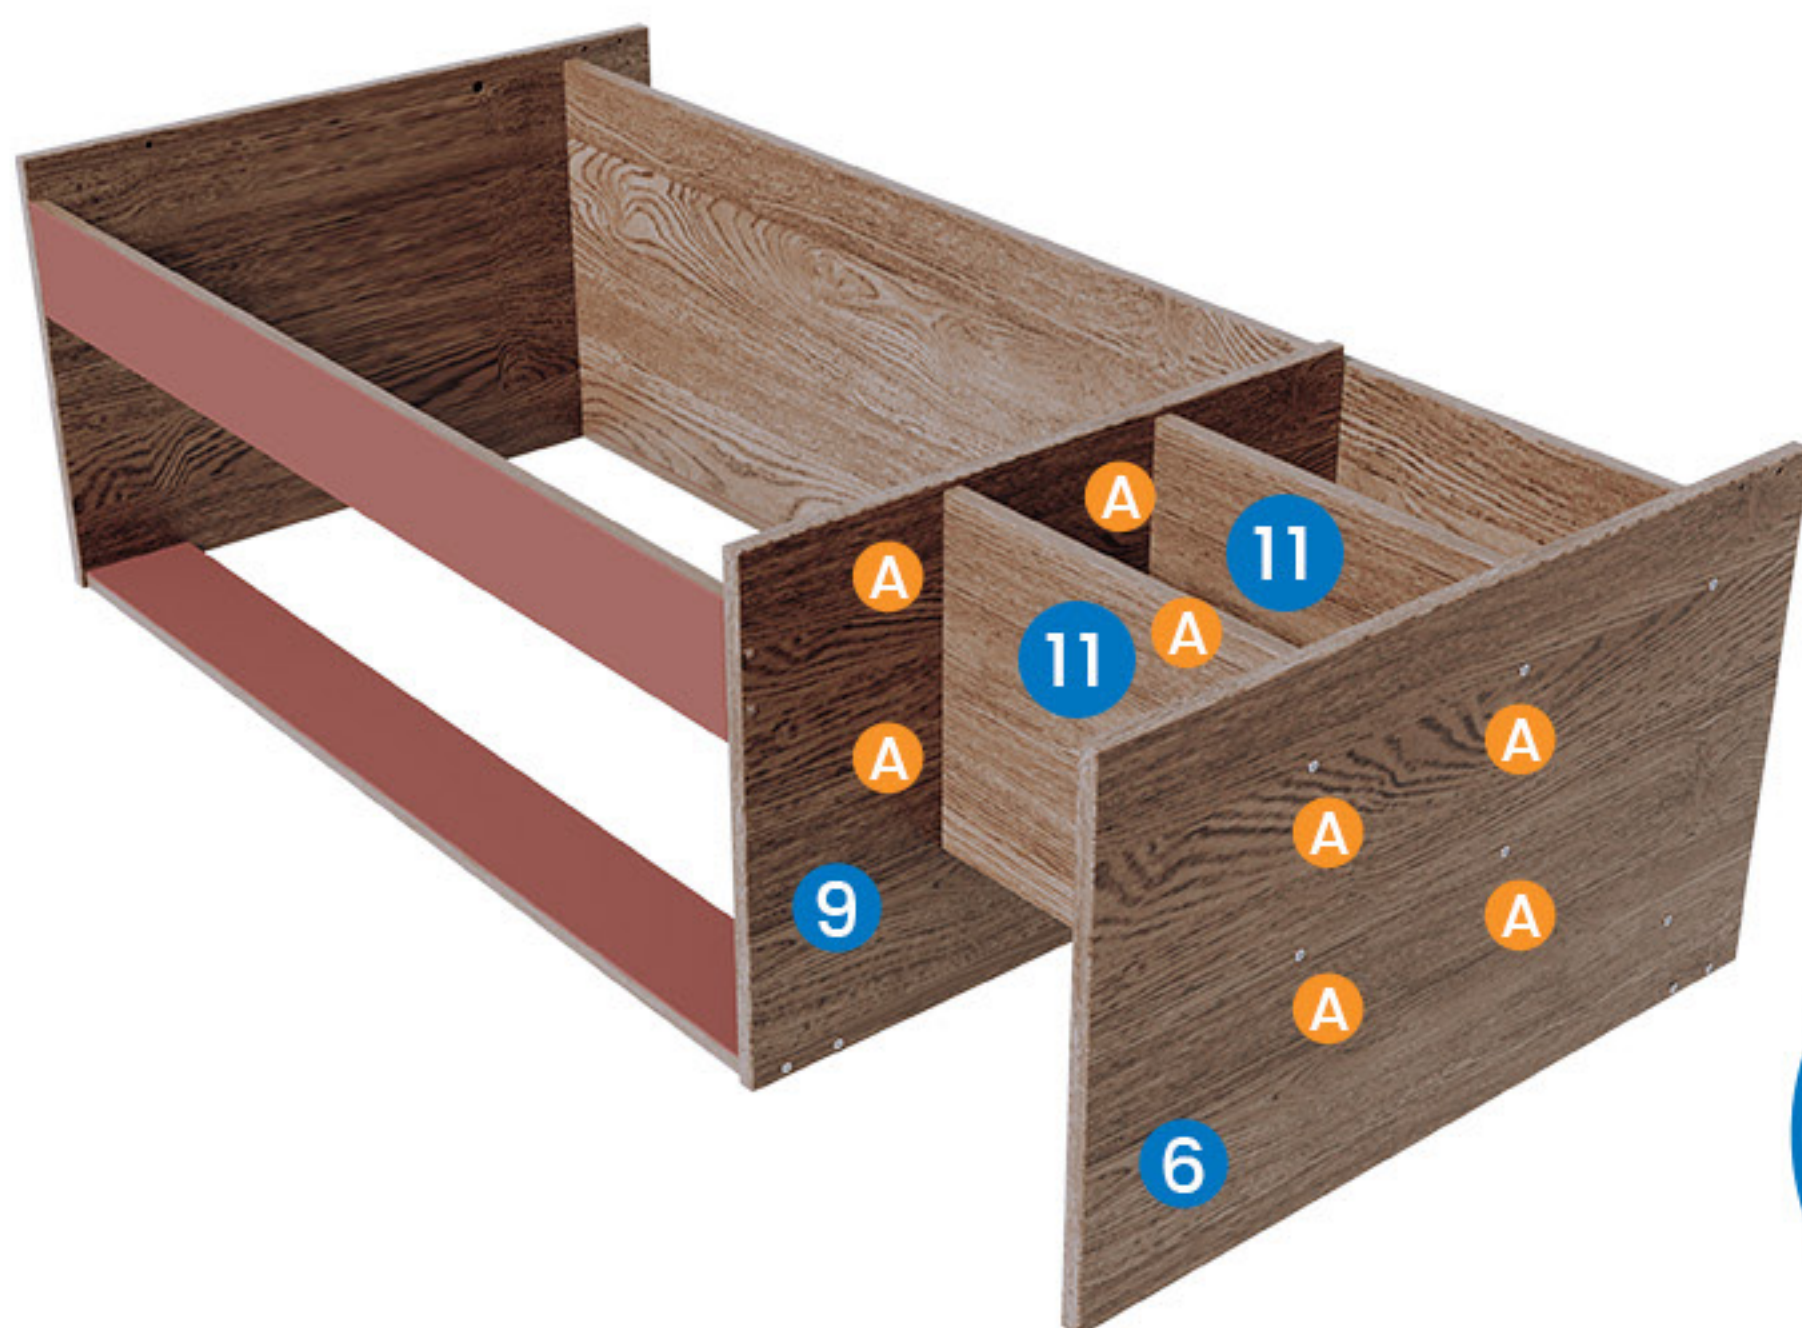

## Step 6




Place panel 12 in the middle above panel 8 and secure with screws A.

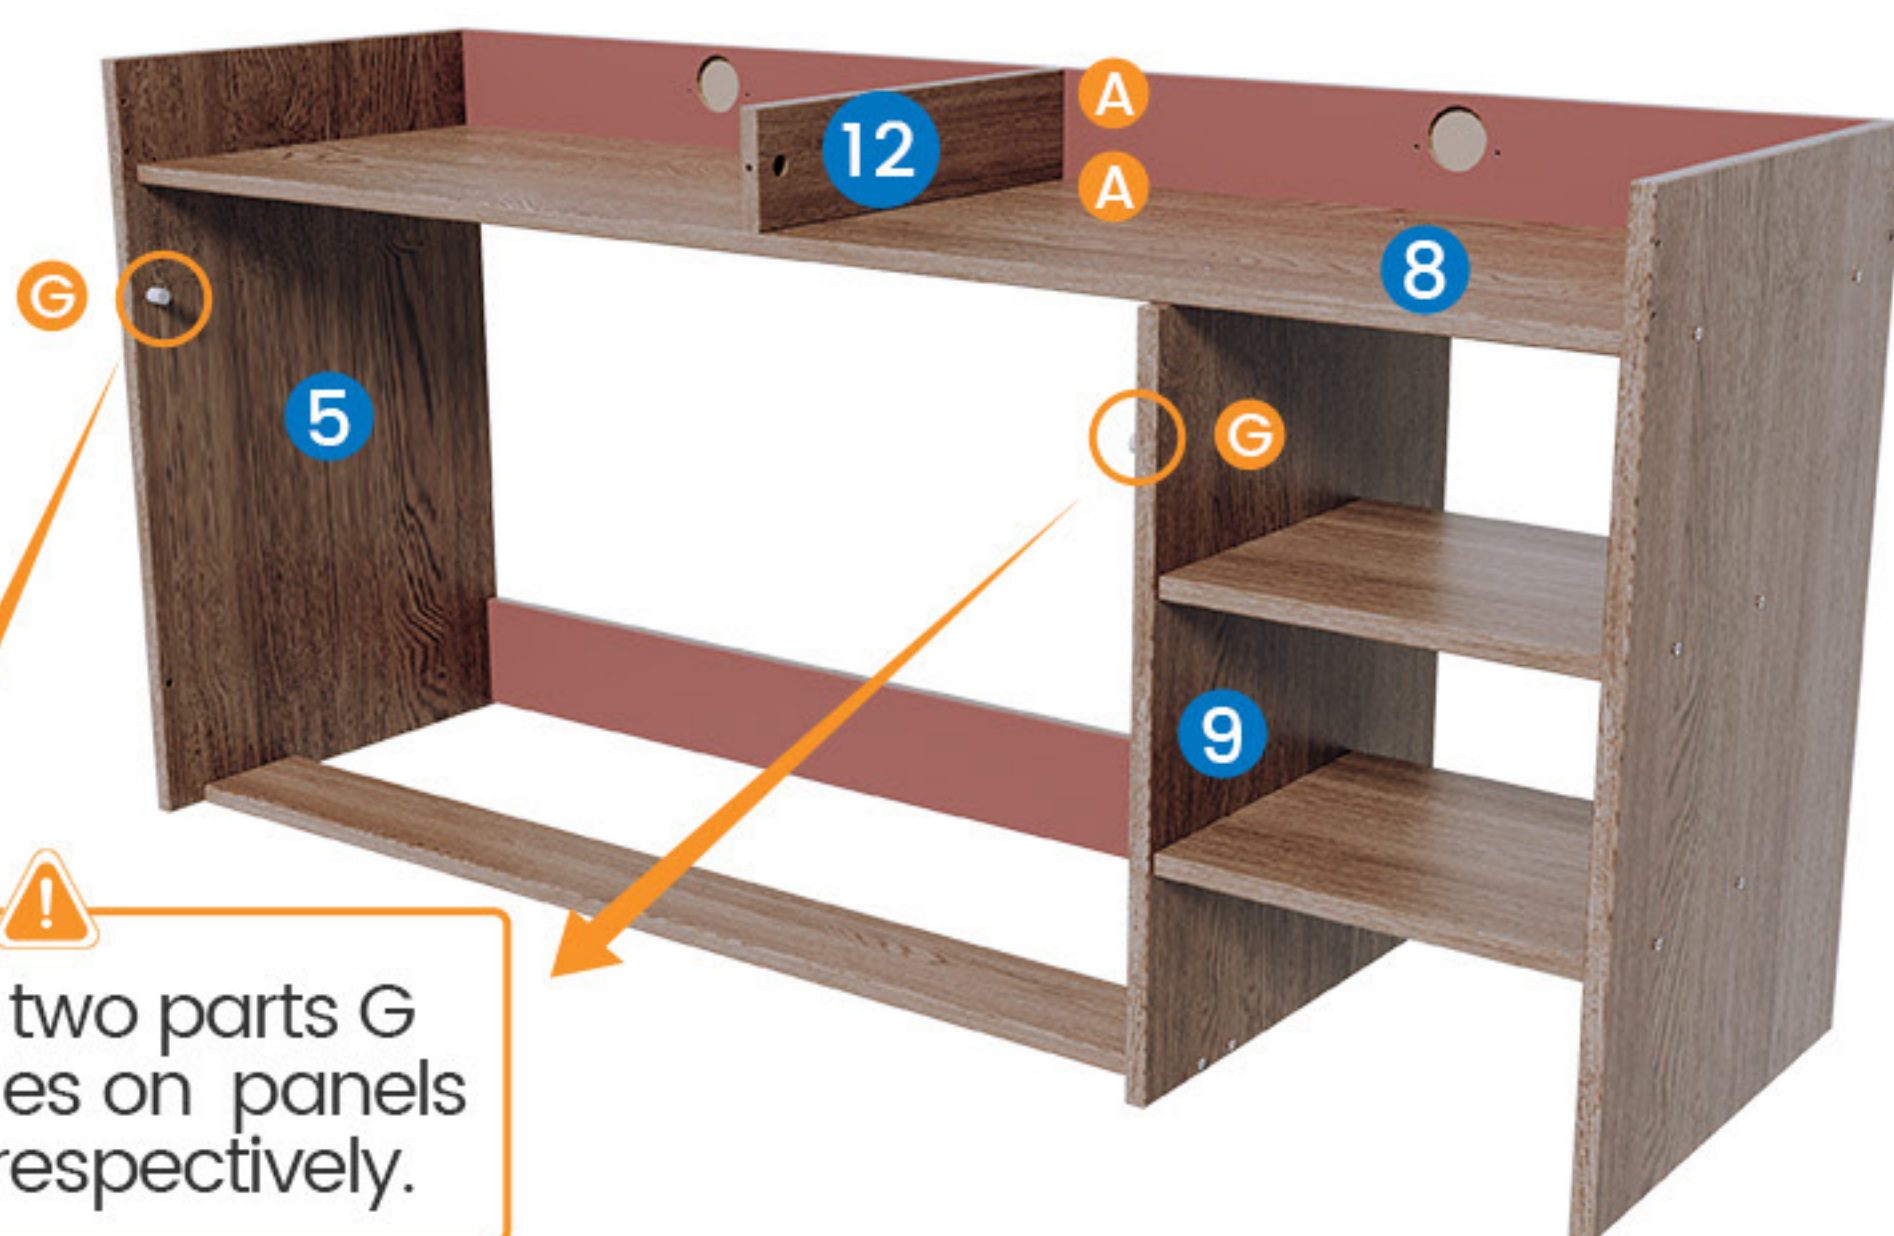

Insert the two parts G into the holes on panels 5 and 9 respectively.



# Step 7

Insert part D into the hole in the middle of panel 13. Then place panel 13 in front of panel 12, insert part D into the hole in front of panel 12, and fix it with screws A on both sides.

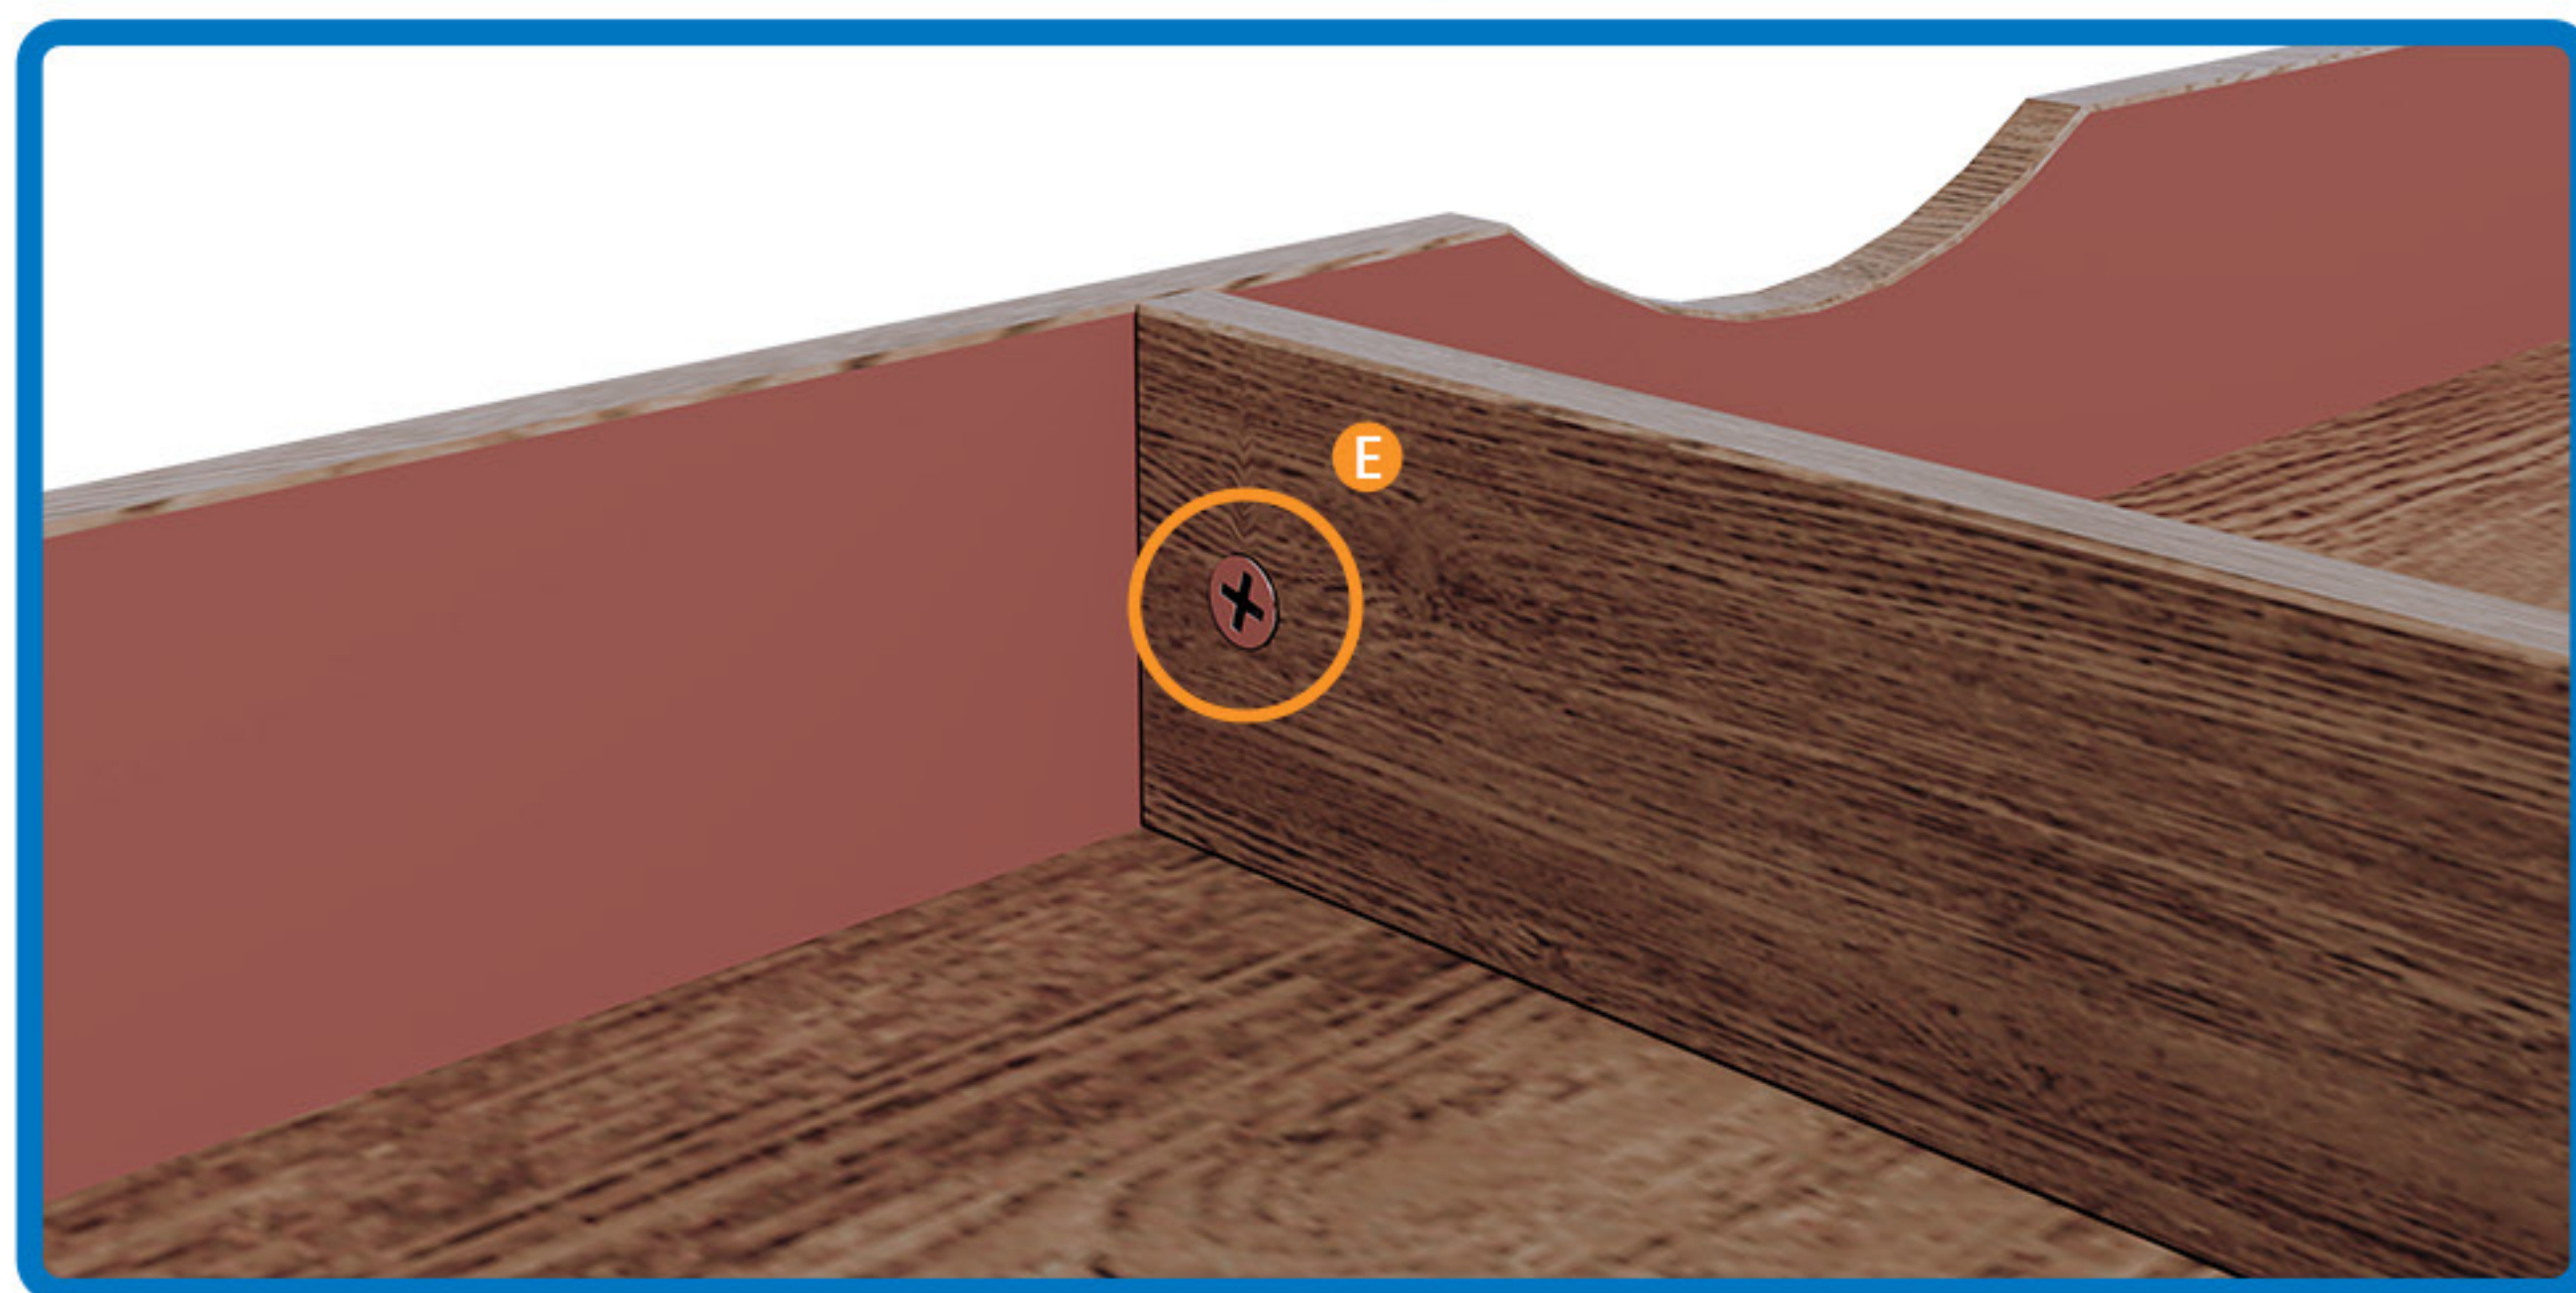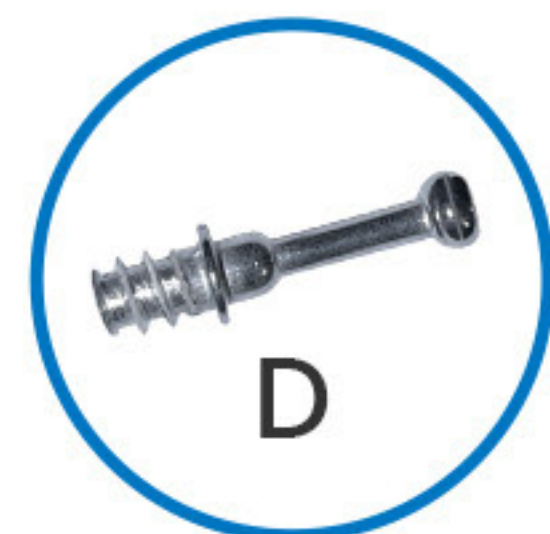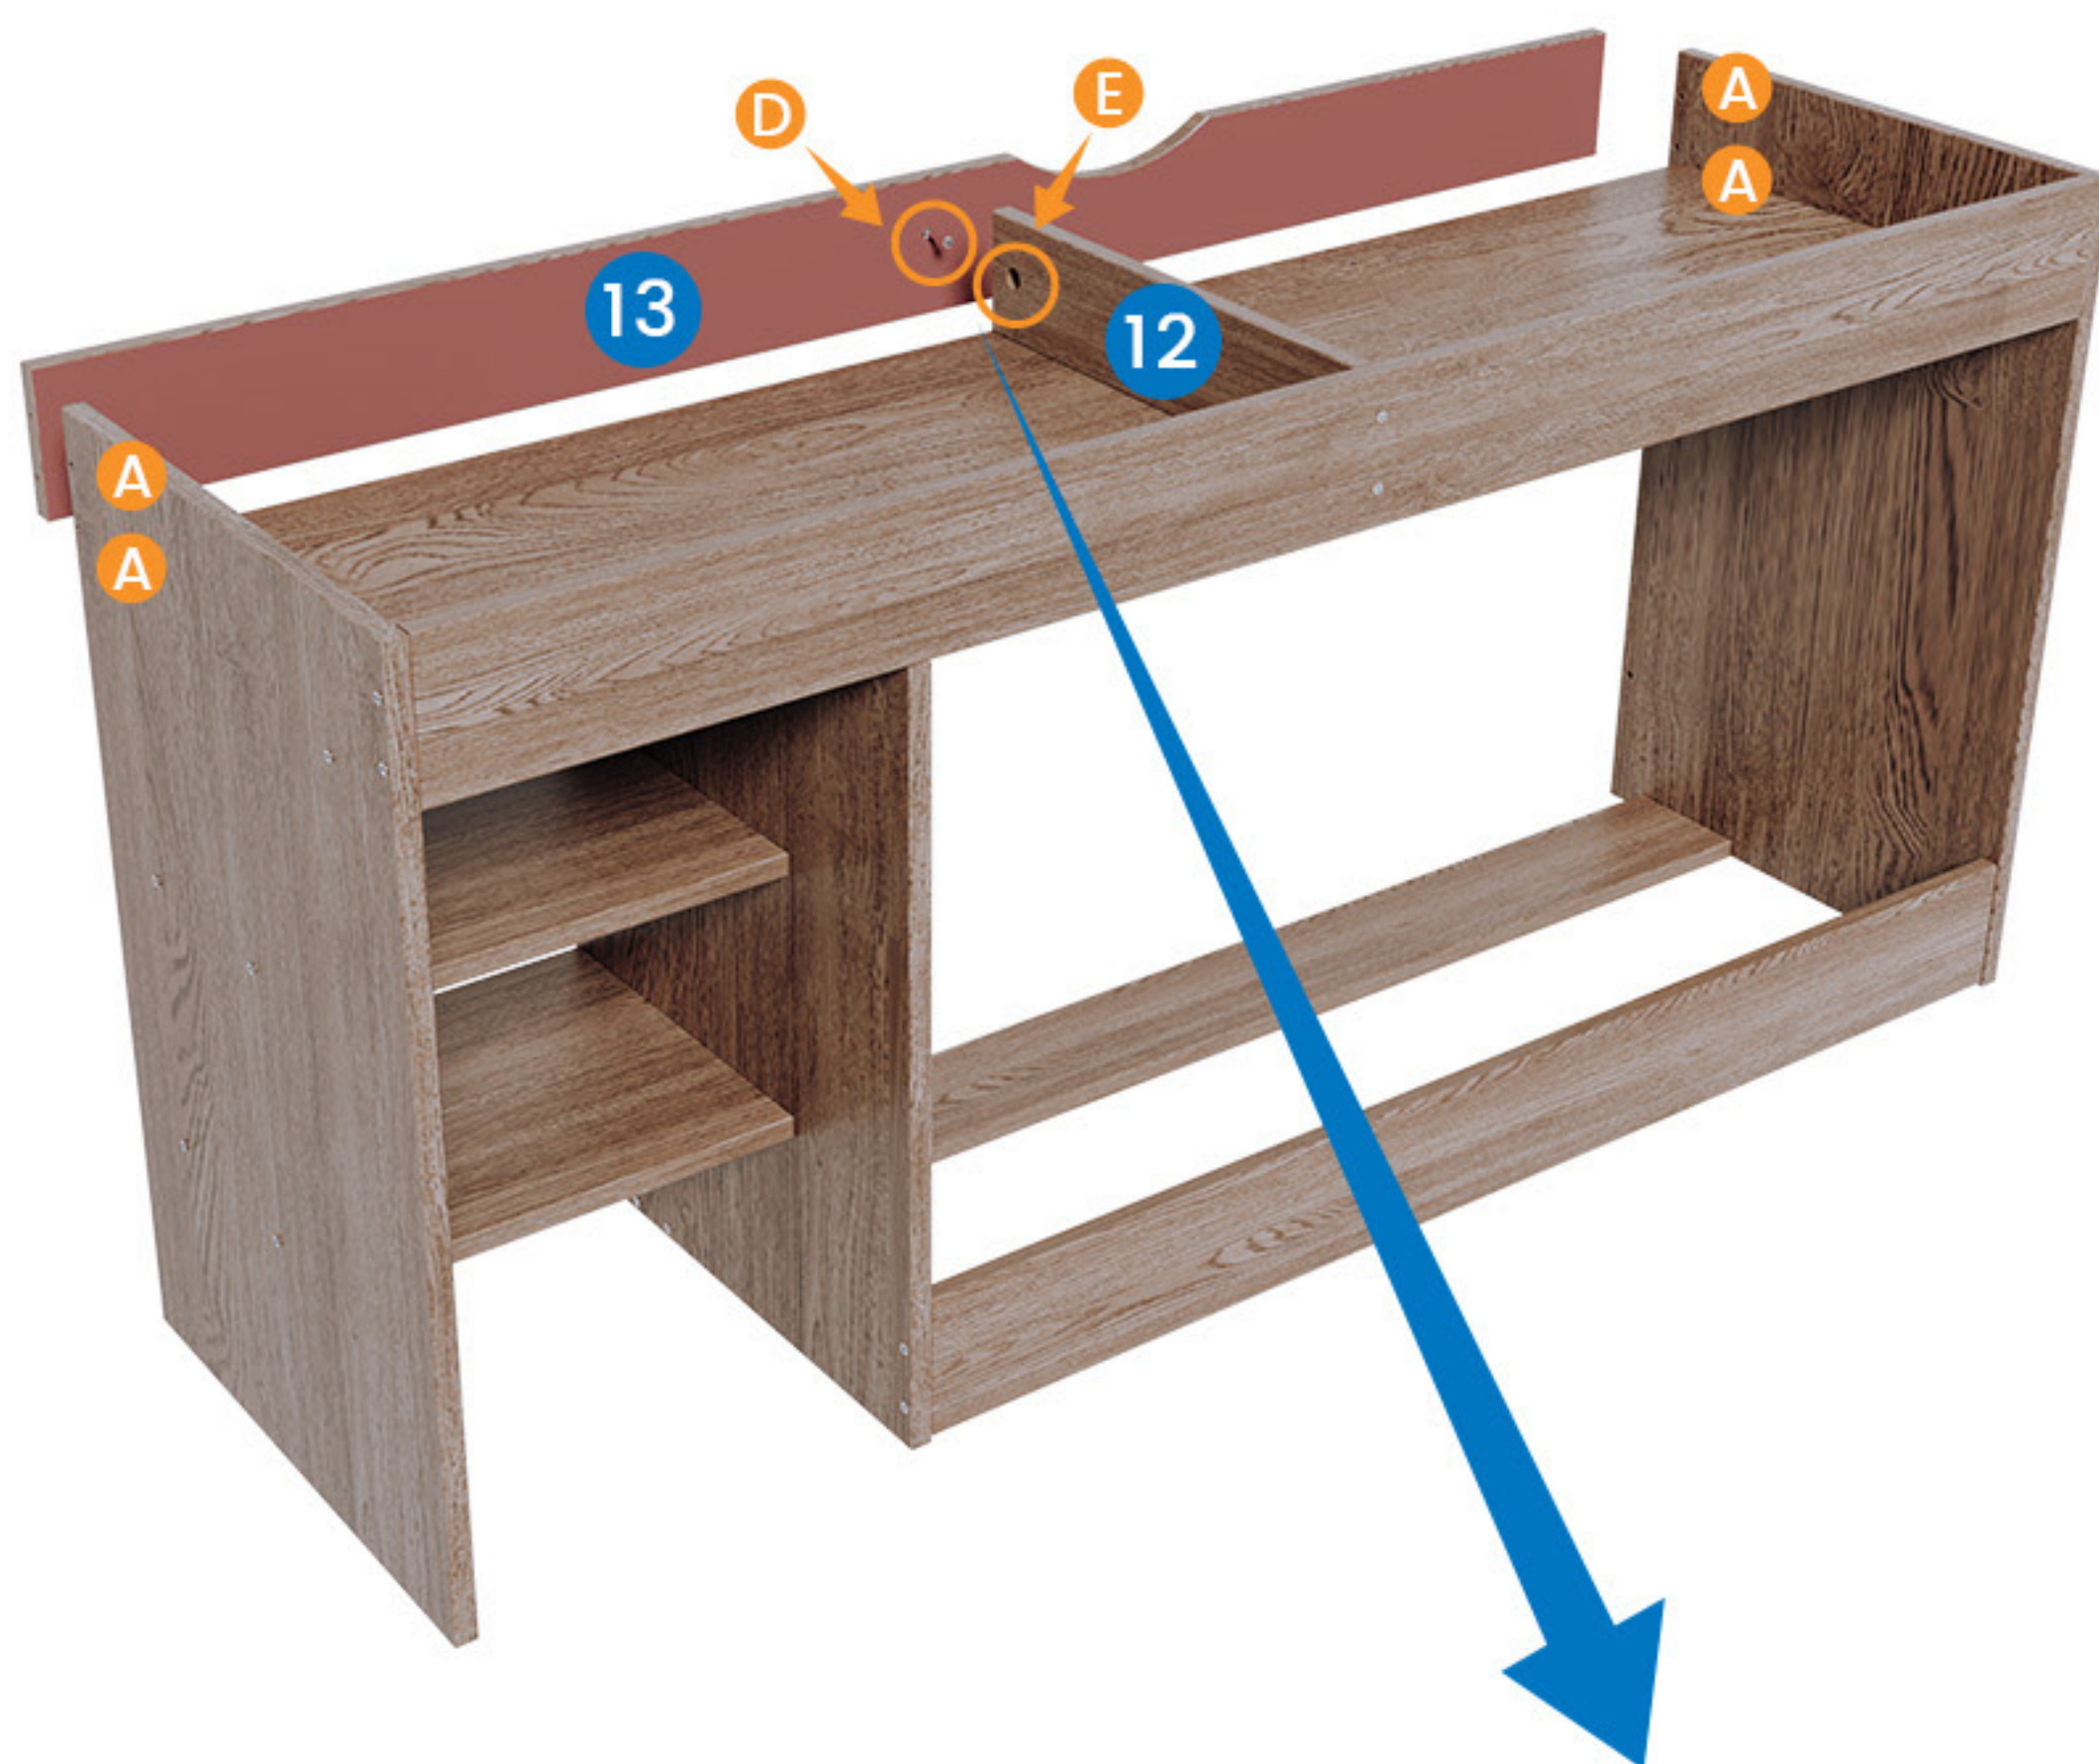


## Step 8

Place the two parts F in the round holes of panel 7 and secure with screws B.

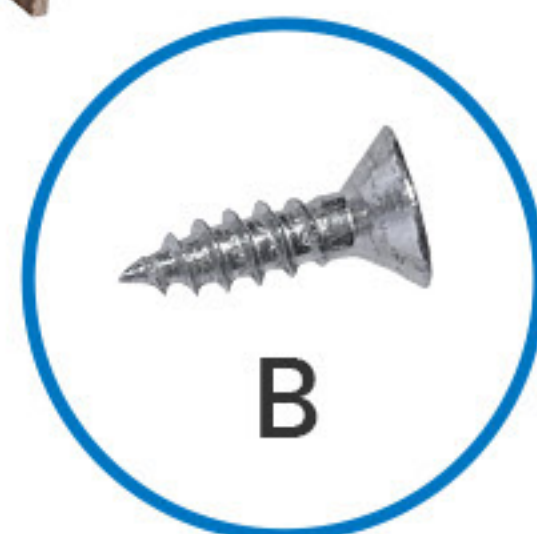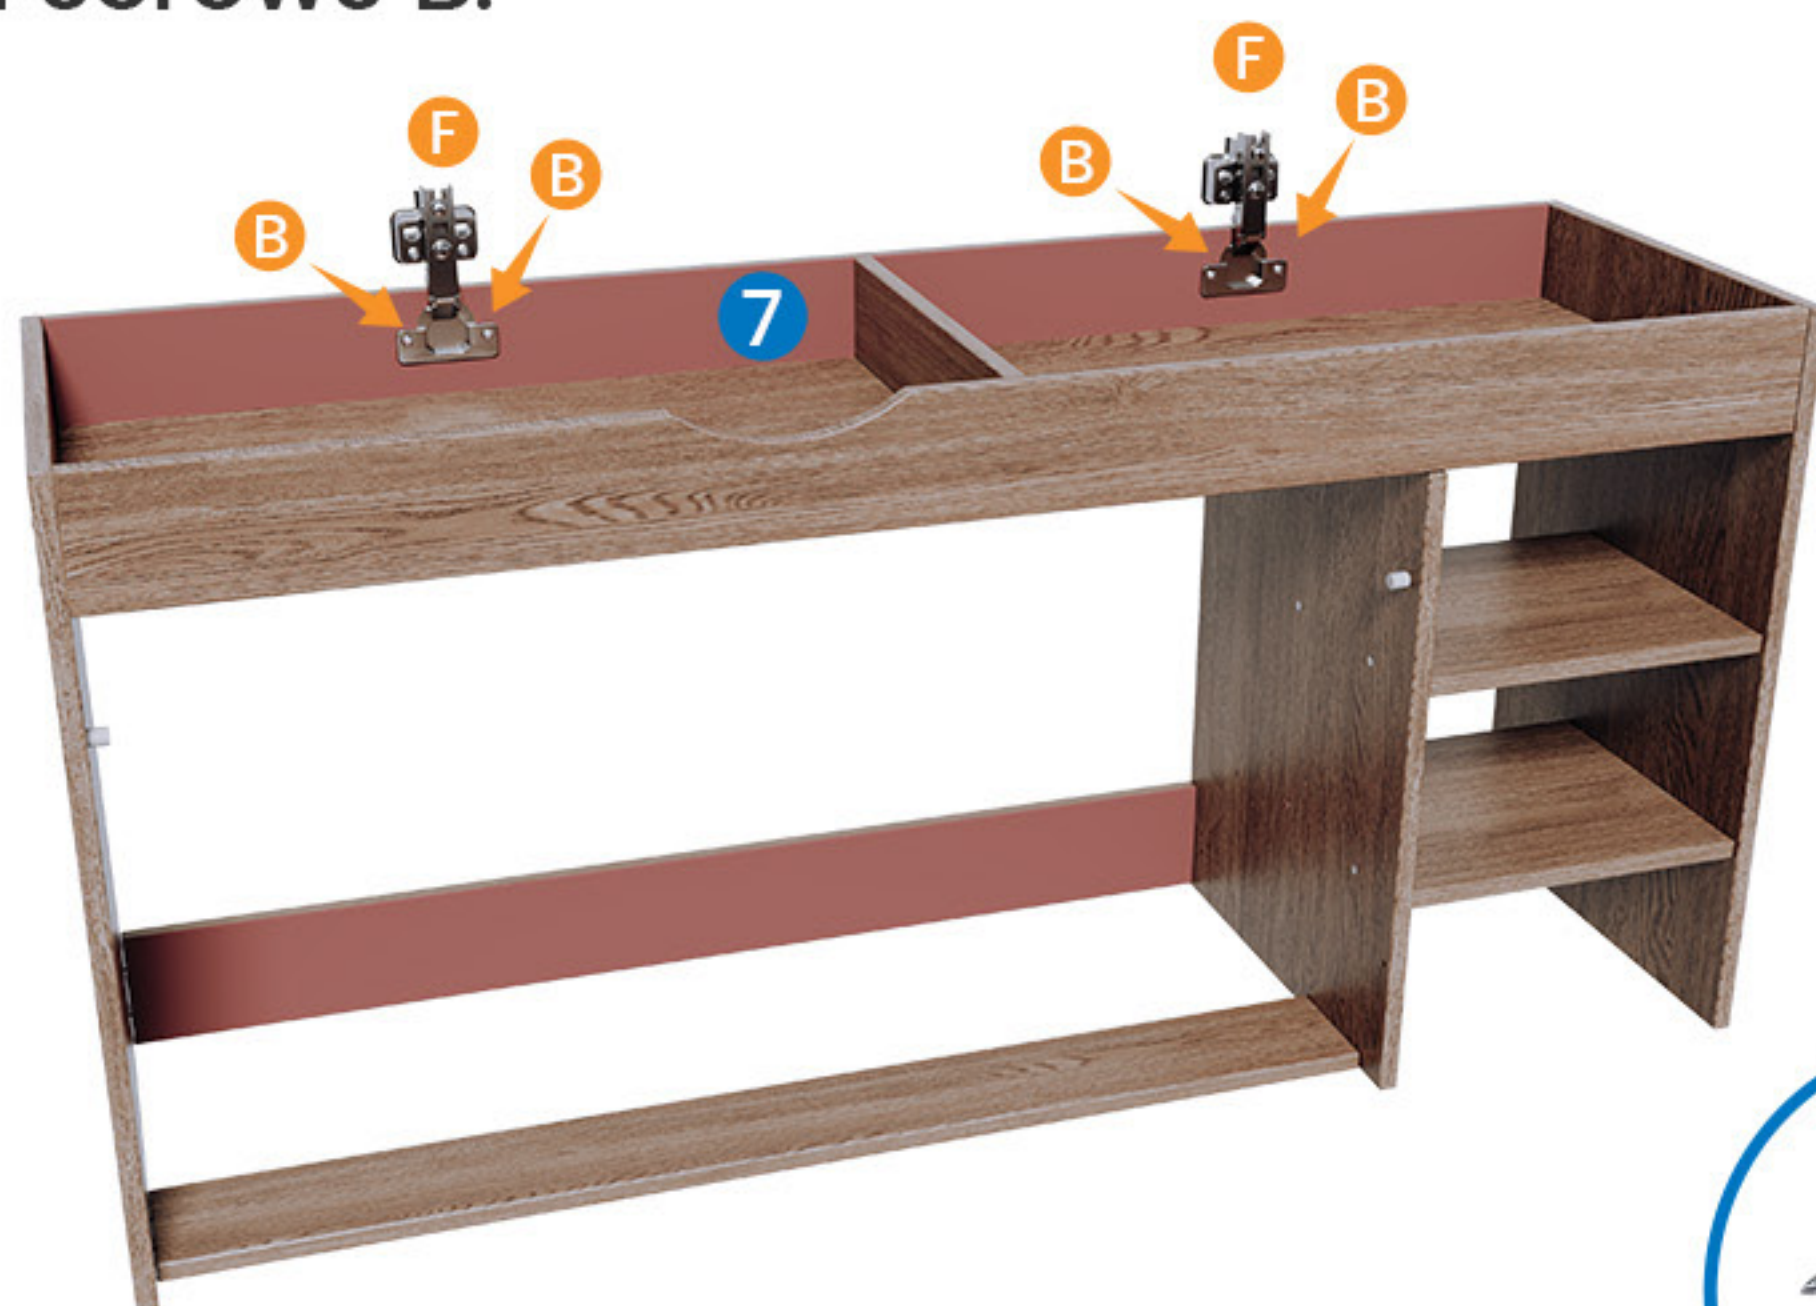


## Step 6

Place panel 12 in the middle above panel 8 and secure with screws A.

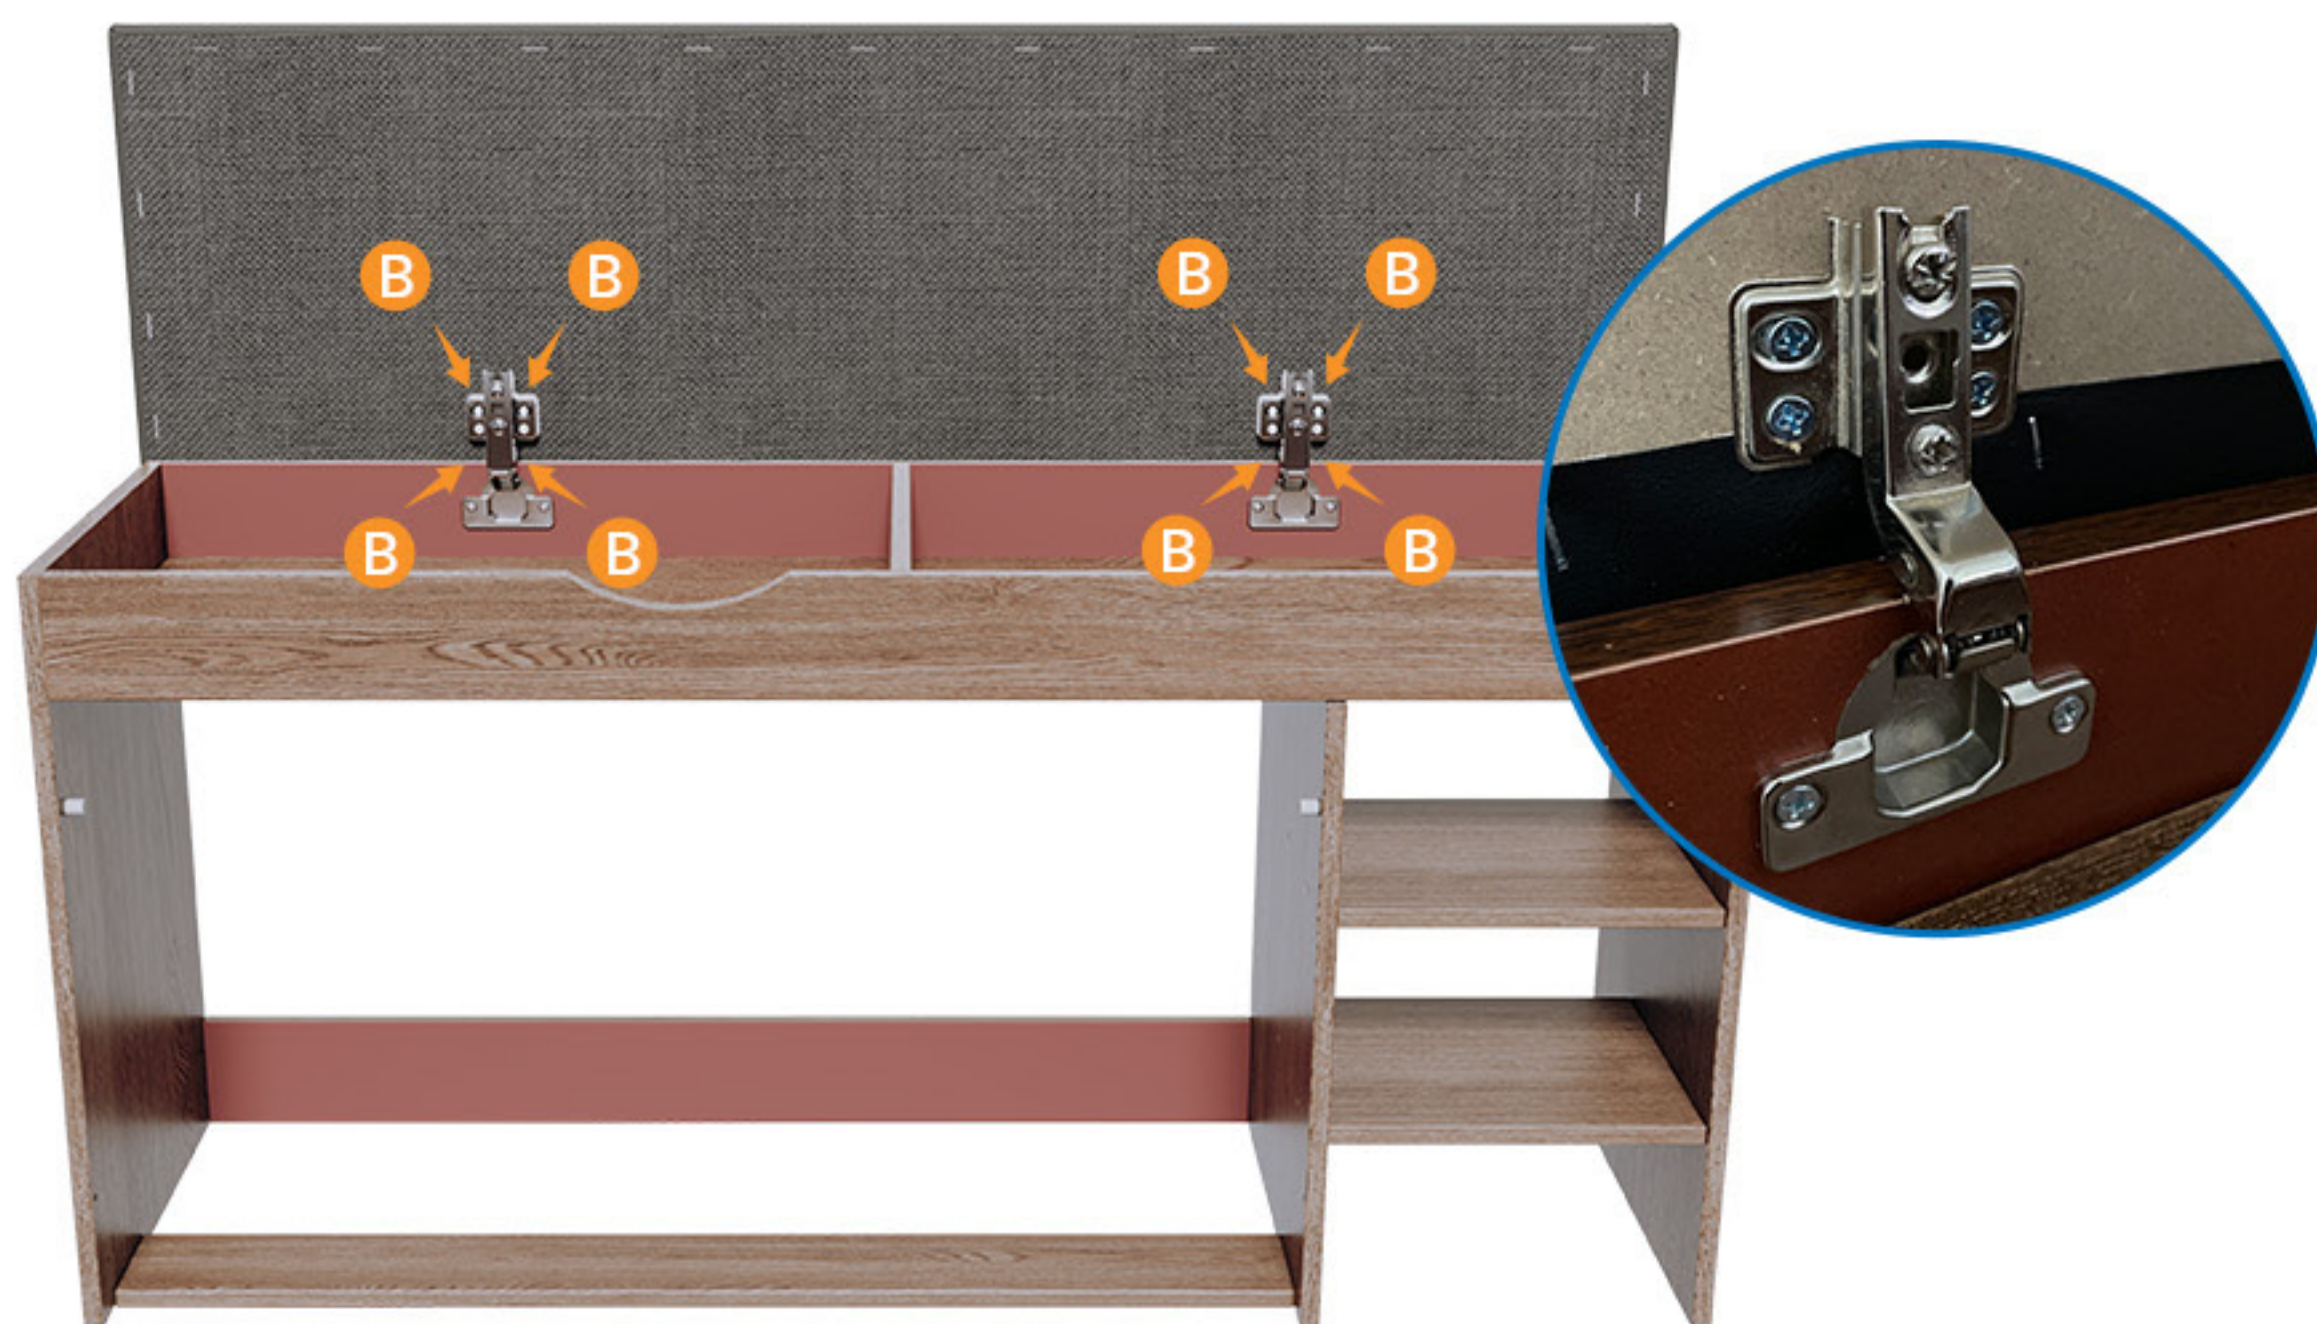

# Step 10

Contract the spring of F so that it aligns with the small holes in panels 5 and 9, sandwiching the flip drawer between the two panels.

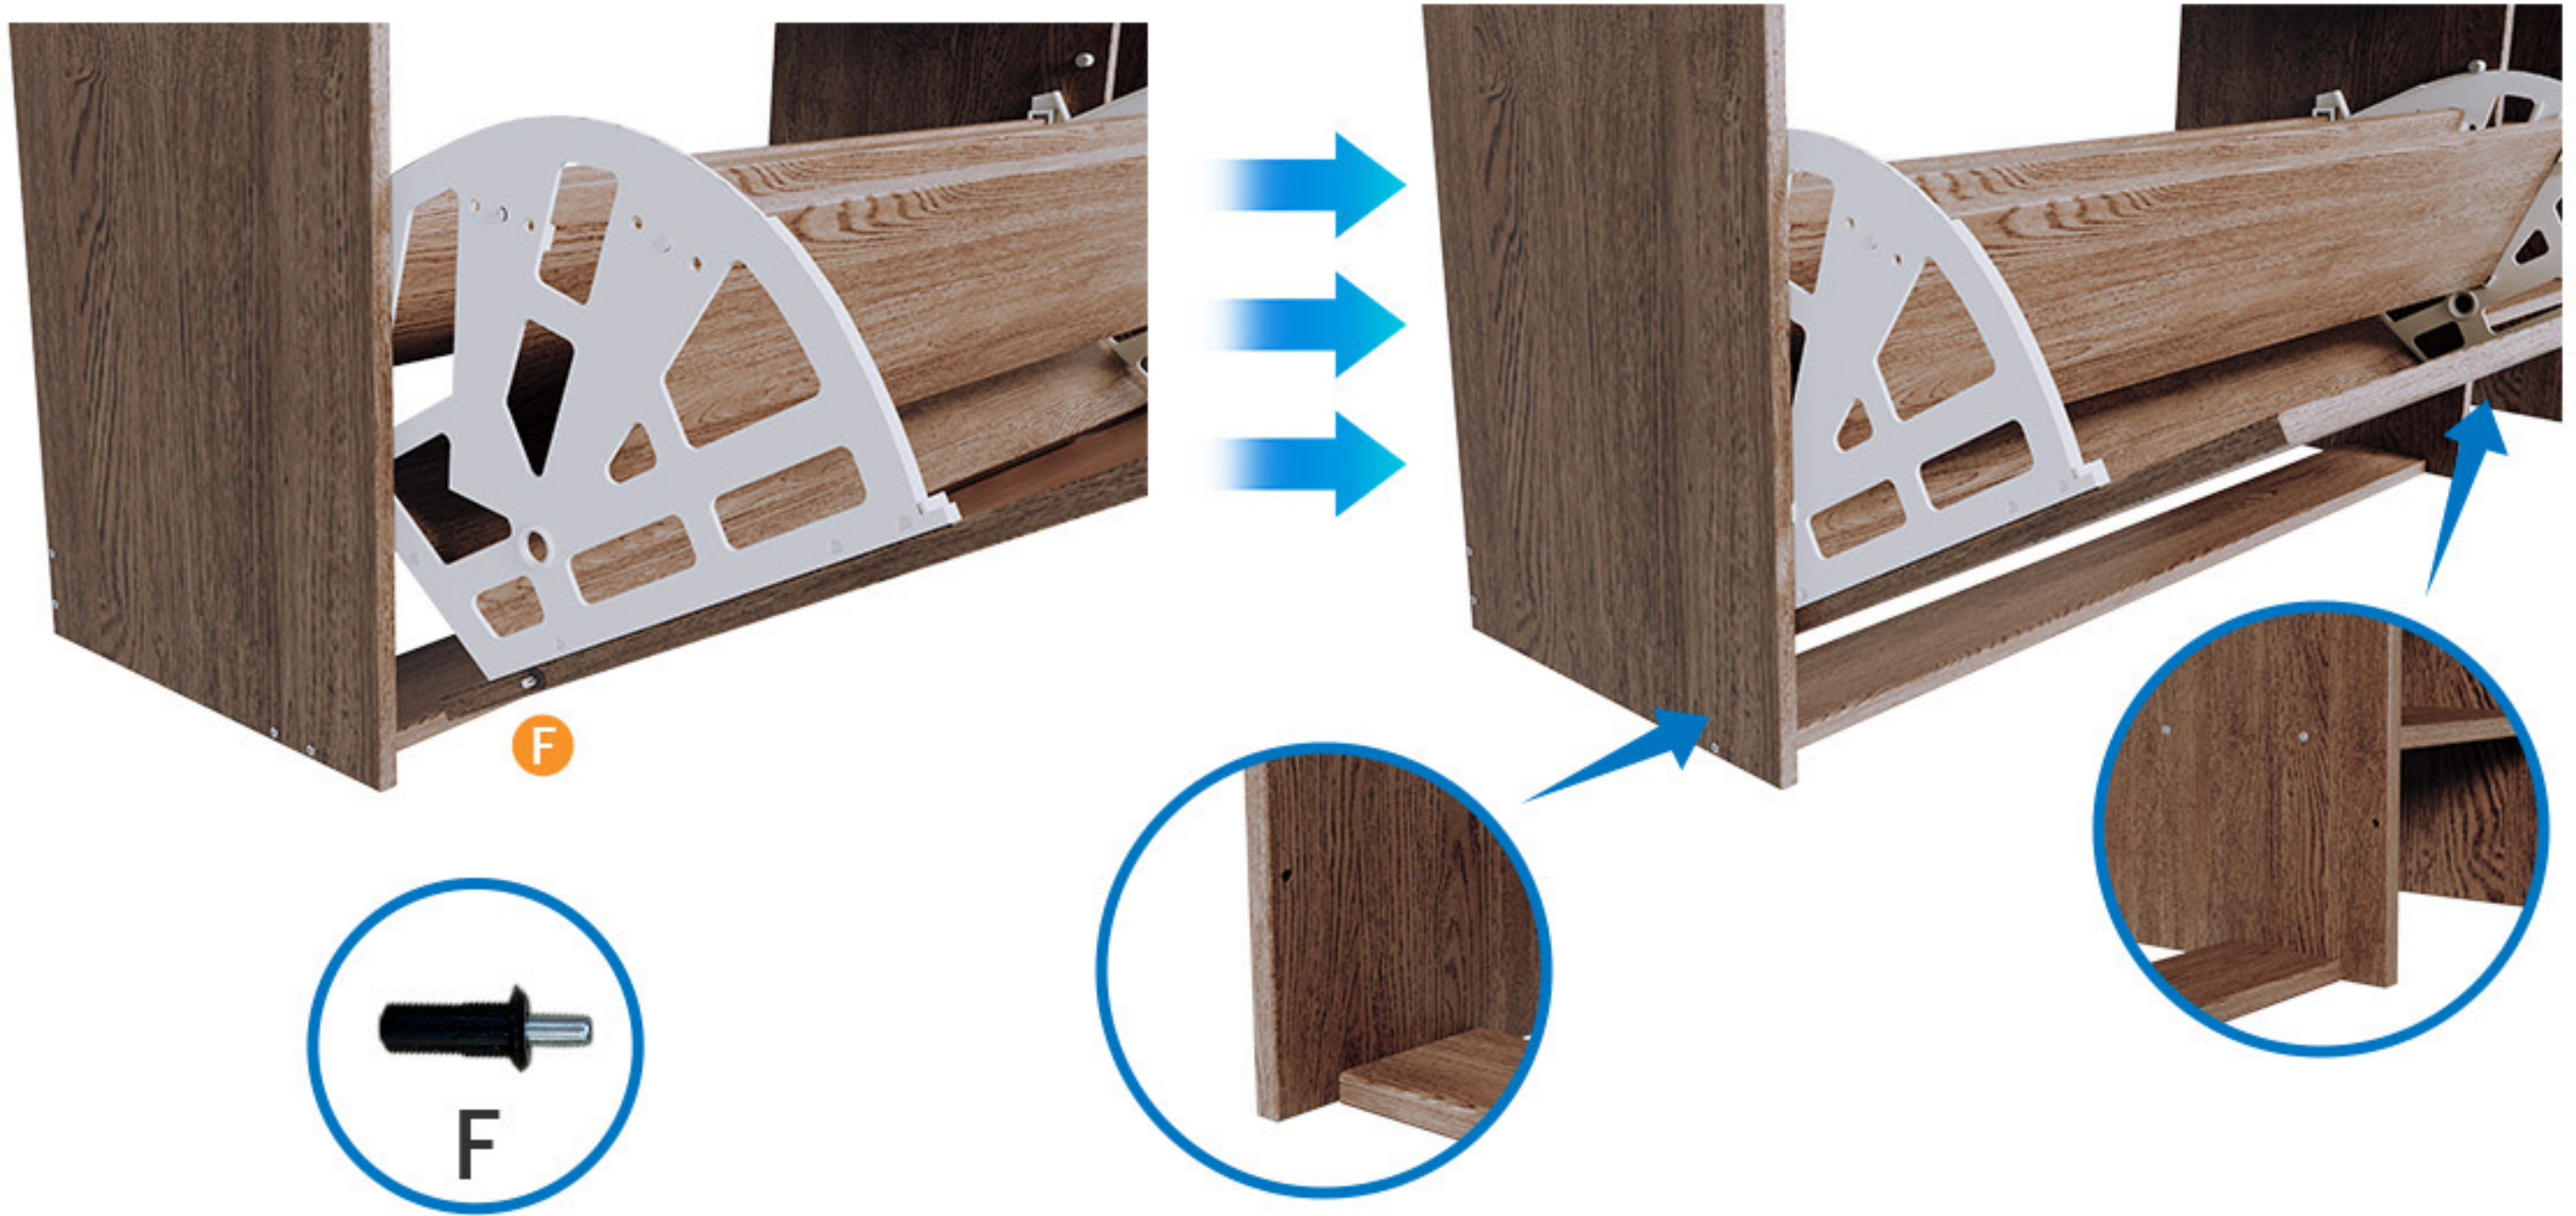

**Finish! ✓**



Scan the QR code to watch the animated tutorial. If you have any questions, please contact our customer service.

