




Upholstered Back 24" Counter Height Stool

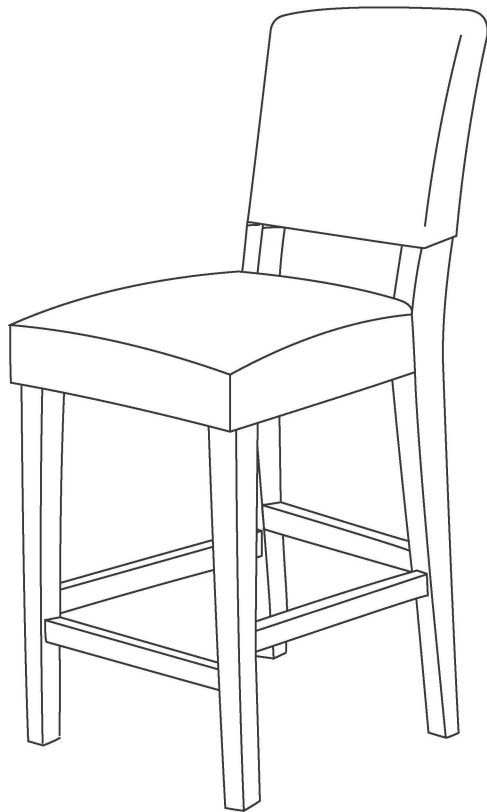

A: Chair Back



B: Seat Pad



C: (2) Side Stretchers L & R



D: Front Stretcher



E: (2) Front Legs



G: (4) Allen Bolts 1/4" x 40



H: (4) Allen Bolts 1/4" x 60



I: (6) Screws 4 x 50



J: Allen Wrench



K: Glue




L: (4) Shoes




Step 1

Fasten the seat frame onto chair back. Do not tighten.

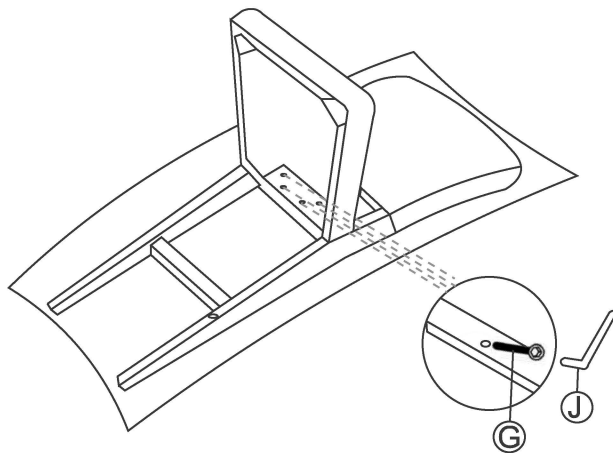

Step 2

Place the chair assembly upside down on a table. Insert two side stretchers with glue into back leg holes. Tighten bolts when all stretchers are in place and all legs are properly leveled.

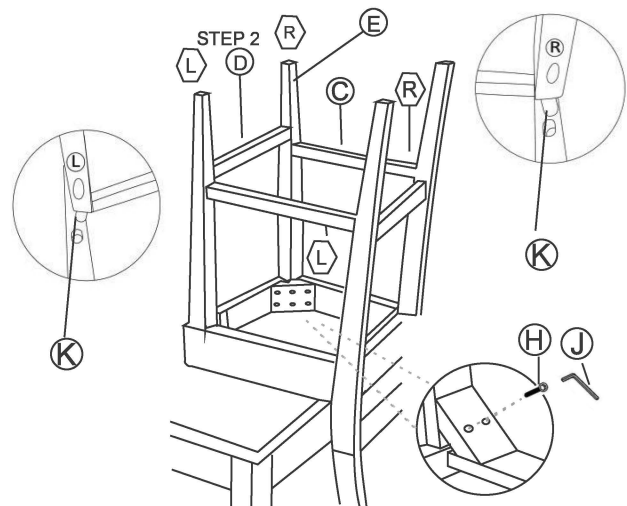

Step 3

Fasten the stretchers and legs with screws.

