


PE Rattan Furniture Set_SS16576

Assembly Instructions

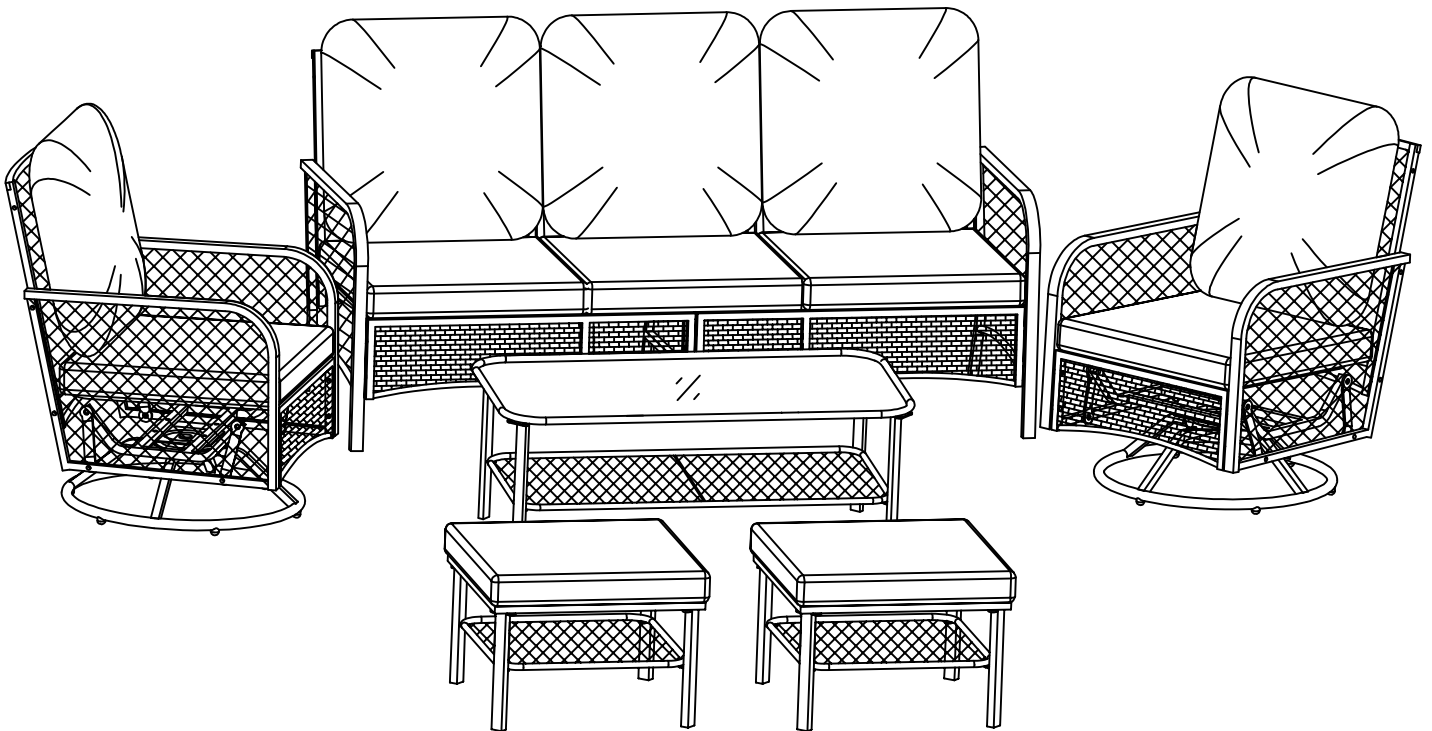


Attention

Thanks for choosing our product.


1. There will be three boxes in total for this whole product. Before assembling, please check you receive all the parts listed below. If there is any missing or damaged part, or if you have any question, please feel free to contact our service team for help.
2. Two persons are recommended to assemble the set.
3. Recommend to use waterproof furniture cover for entire furniture set when it is used outdoor to keep them longer lifetime.
4. Sofa cushion covers can be removed and cleaned up by cleaner when there are stains.

Package A Parts List


Ⓐ x2

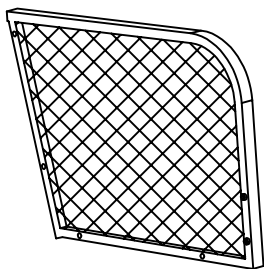


Ⓑ x2

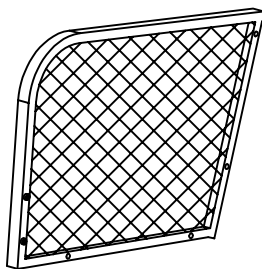

Ⓒ x5

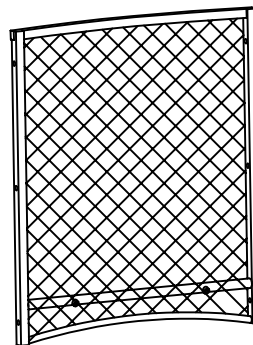

Ⓓ x2

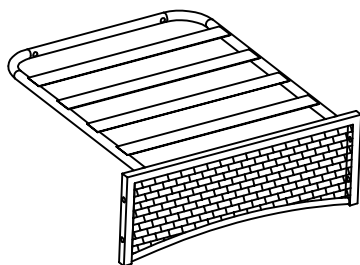


Ⓔ x2




Ⓕ x2



Ⓖ x2

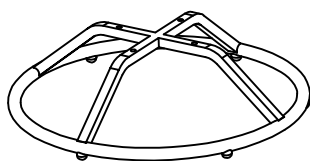


Ⓚ x8

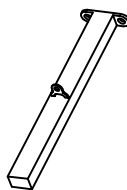

Ⓤ x2



Ⓥ x2

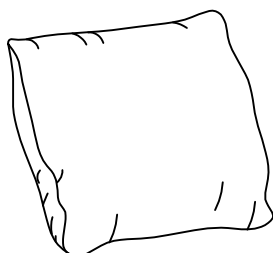


Ⓦ x2




Package B Parts List

Ⓡ x1



Ⓢ x1



Ⓣ x4



① x36



M6x15

② x16



M6x35

③ x36




M6x40

④ x20



M6x55

⑤ x2



M6x60

⑥ x46



M6

⑦ x156




M6

⑧ x1



M6


⑨ x1

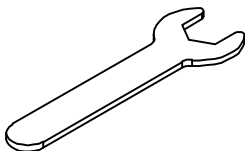


M6

Package C Parts List


H x1

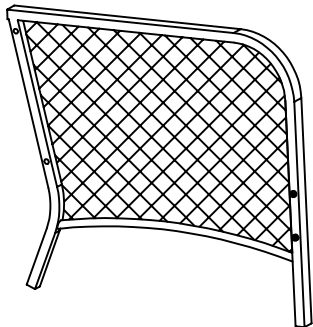


J x1

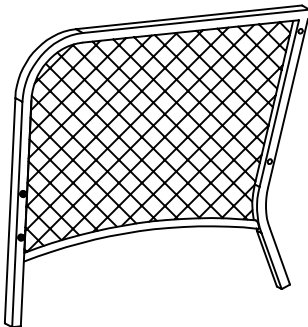


K x2

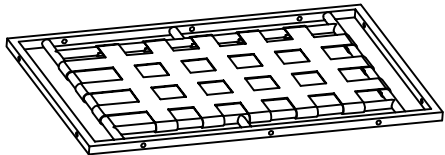


L x1

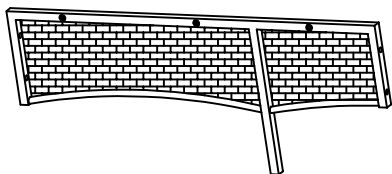


M x1

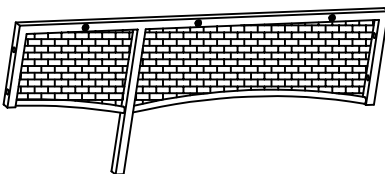


N x1

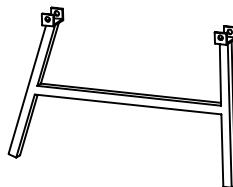


O x2

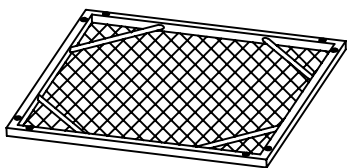


P x2

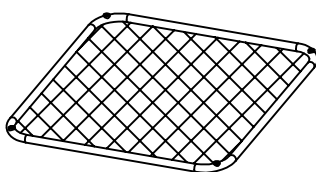

U x3

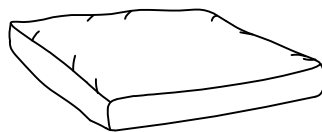


V x3

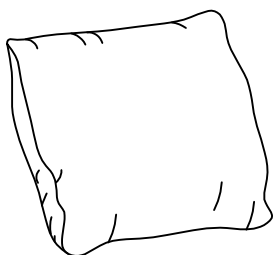


STEP 1

4	x4
	M6x55
6	x4
	M6
7	x8
	M6

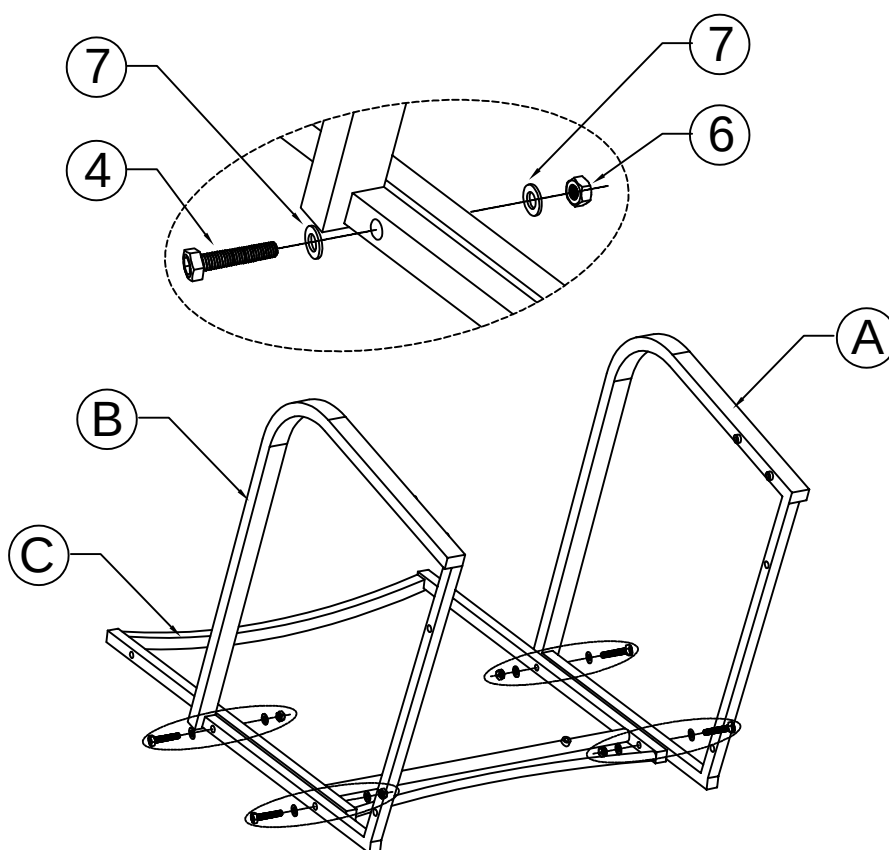


STEP 2

3	x4
	M6x40
7	x4
	M6

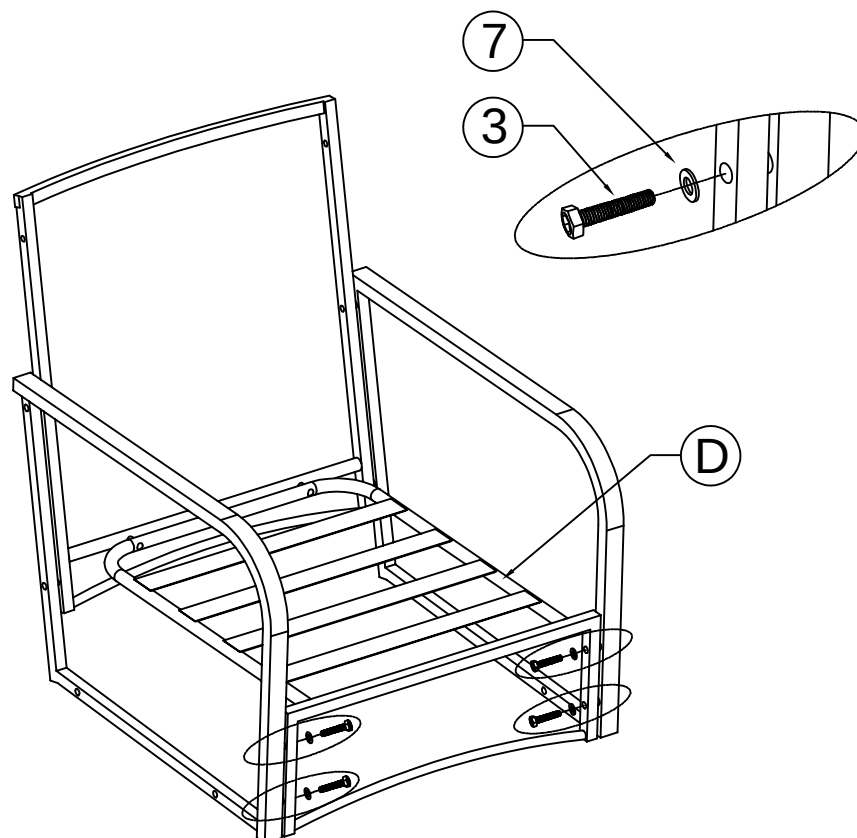


STEP 3

3	x2
	
M6x40	
7	x2
	
M6	

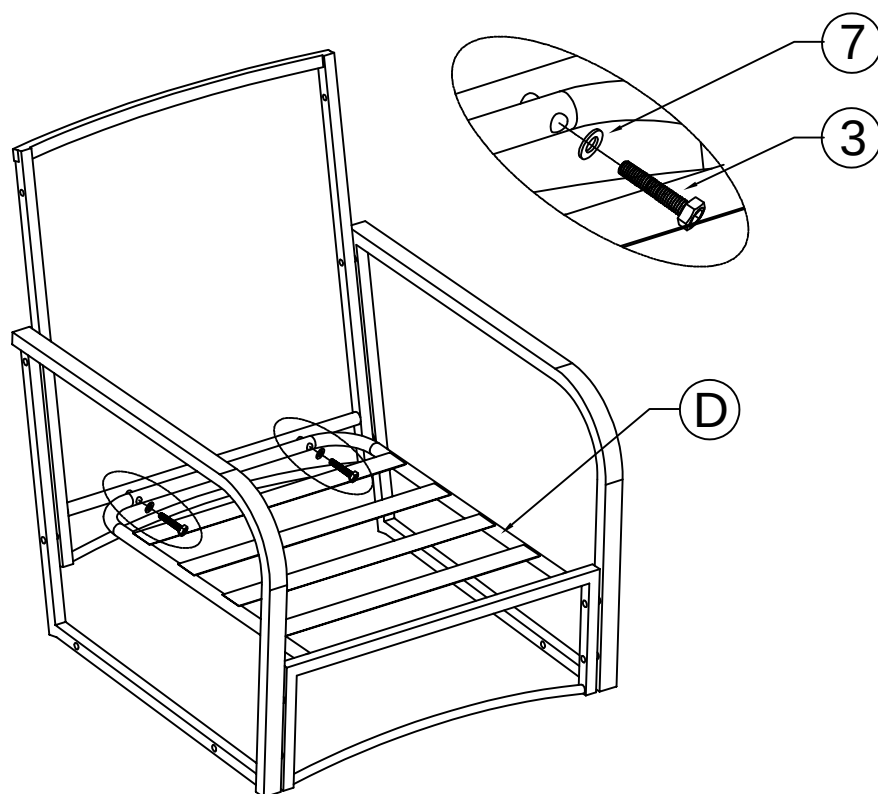


STEP 4

2	x4
	
M6x35	
6	x4
	
M6	
7	x8
	
M6	

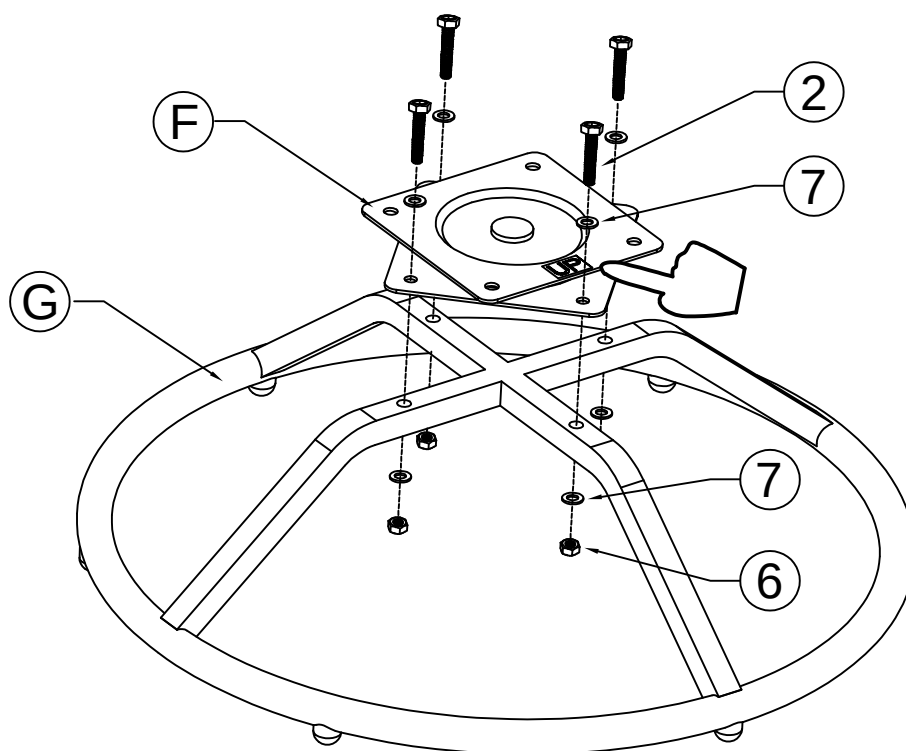


STEP 5

2	x4
	M6x35
6	x4
	M6
7	x8
	M6

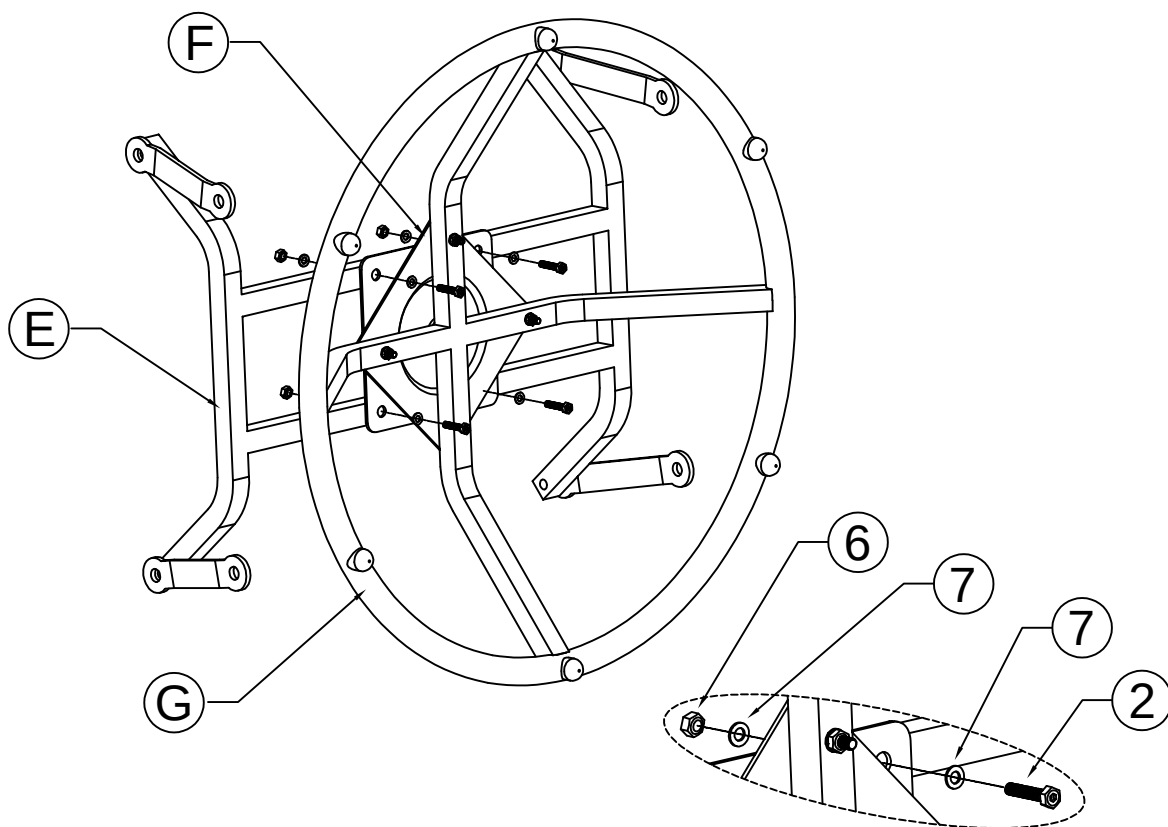


STEP 6

3	x4
	M6x40
6	x4
	M6
7	x8
	M6


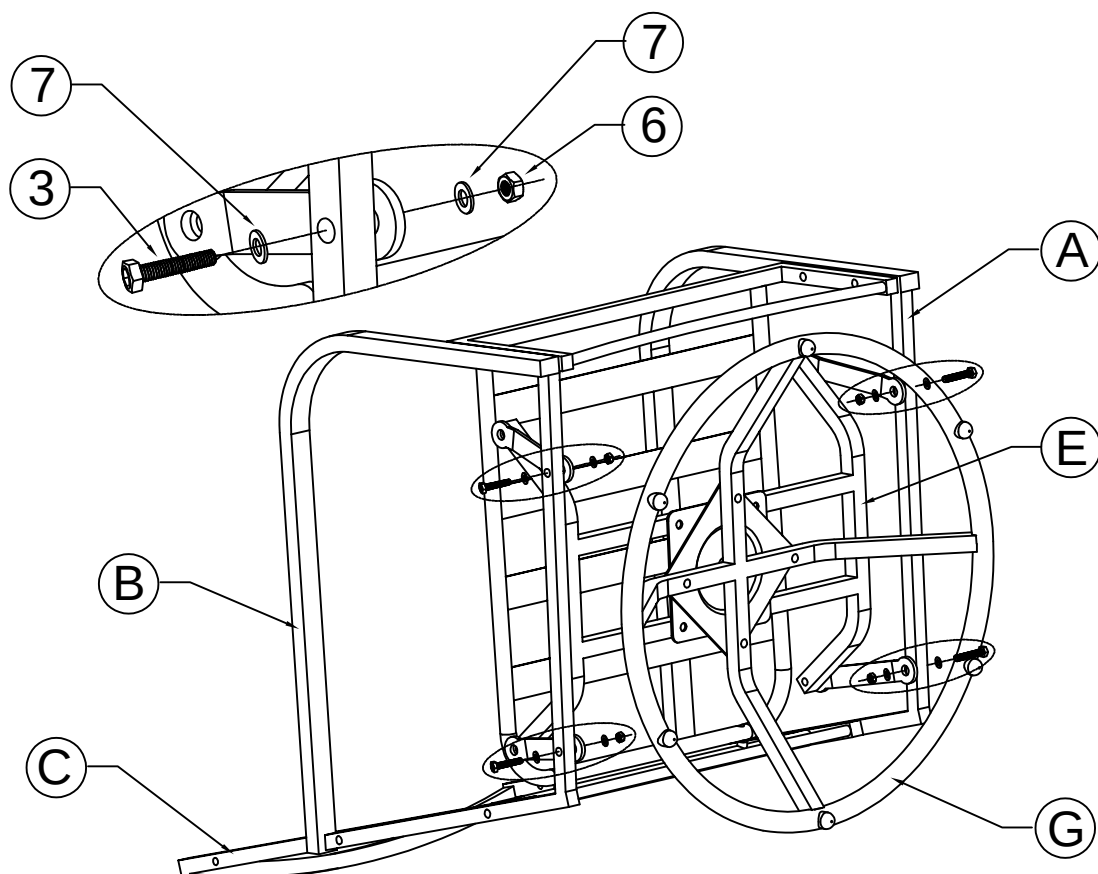


STEP 7

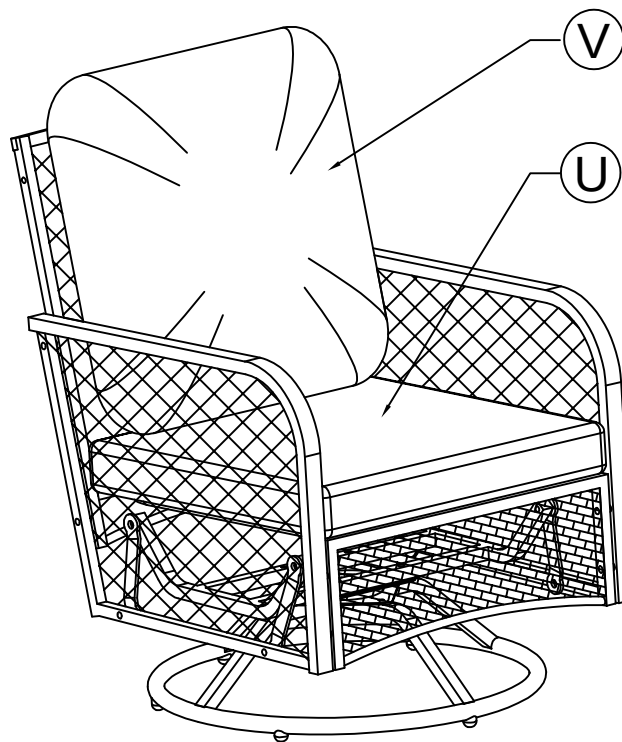


STEP 8

3	x3
	
M6x40	
7	x3
	
M6	

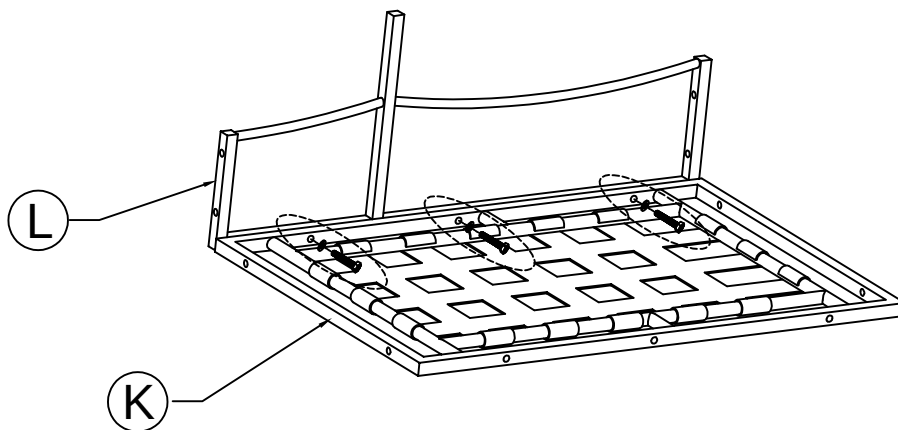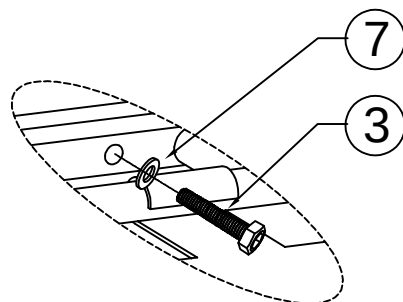


STEP 9

3	x3
	
M6x40	
7	x3
	
M6	

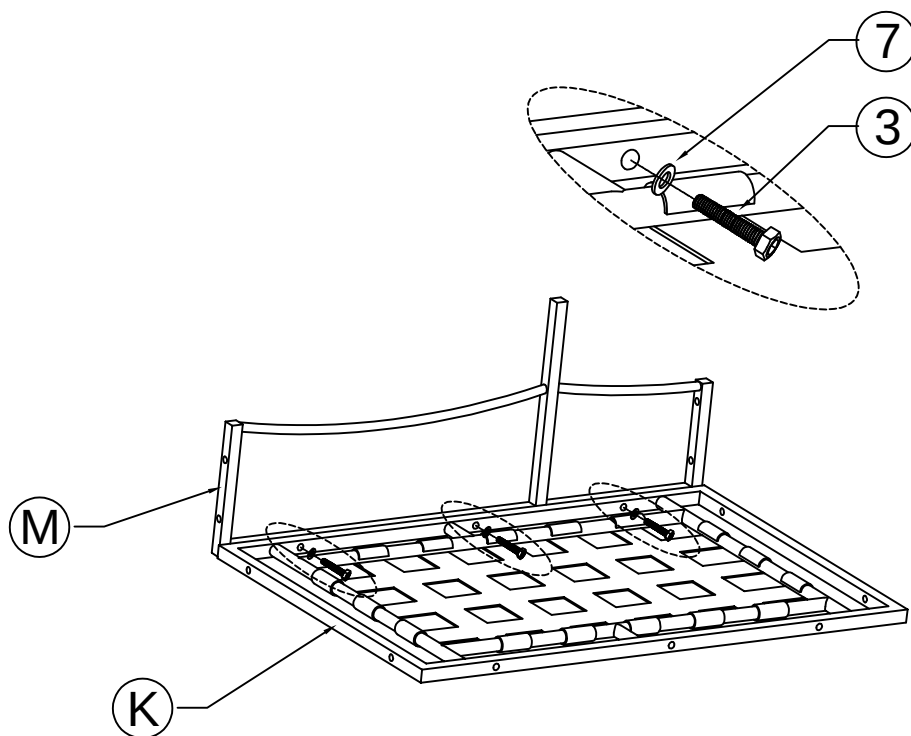


STEP 10

4	x2
	
M6x55	
6	x2
	
M6	
7	x4
	
M6	

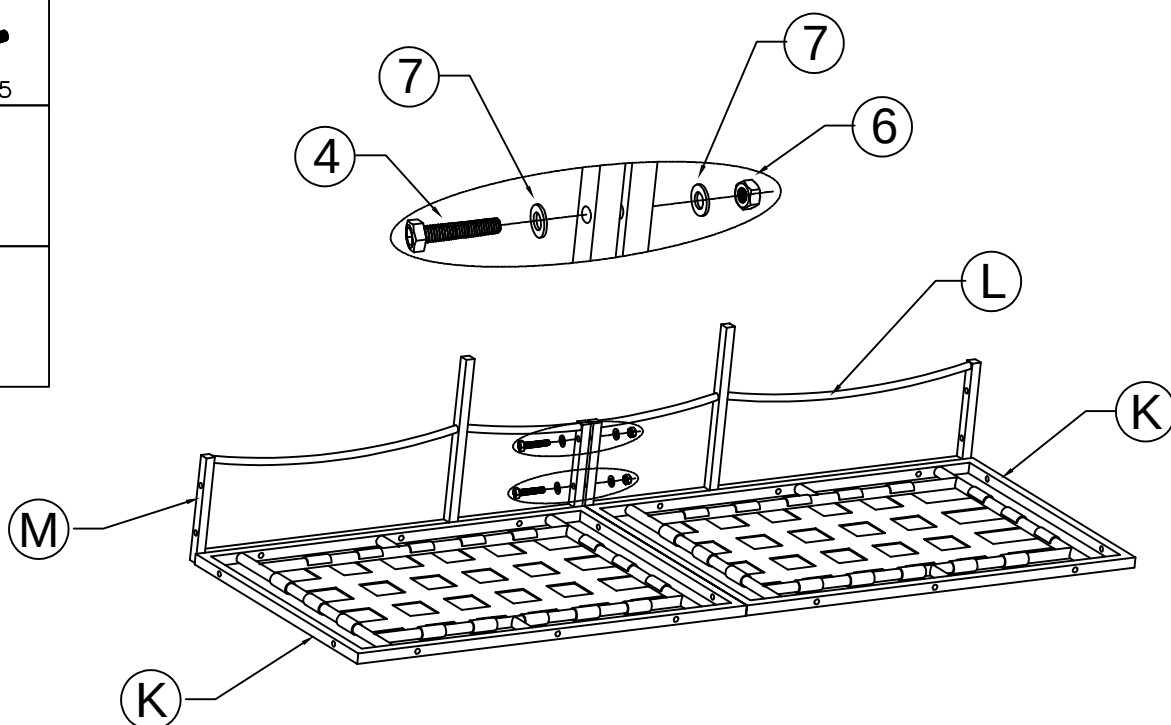


STEP 11

5	x2
	M6x60
6	x2
	M6
7	x4
	M6

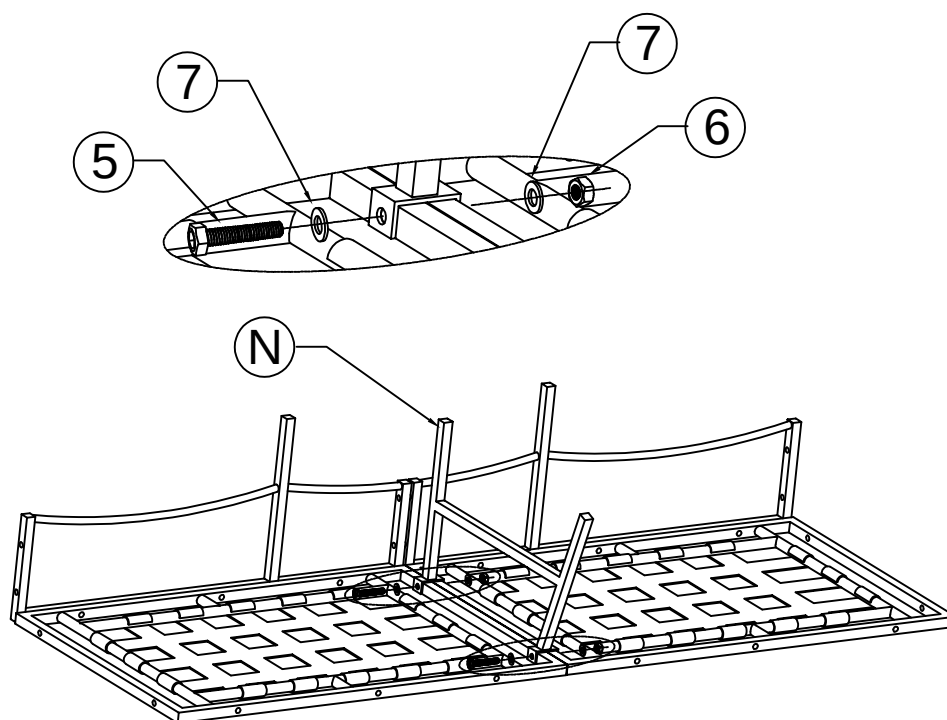



STEP 12

4	x6
	M6x55
6	x6
	M6
7	x12
	M6

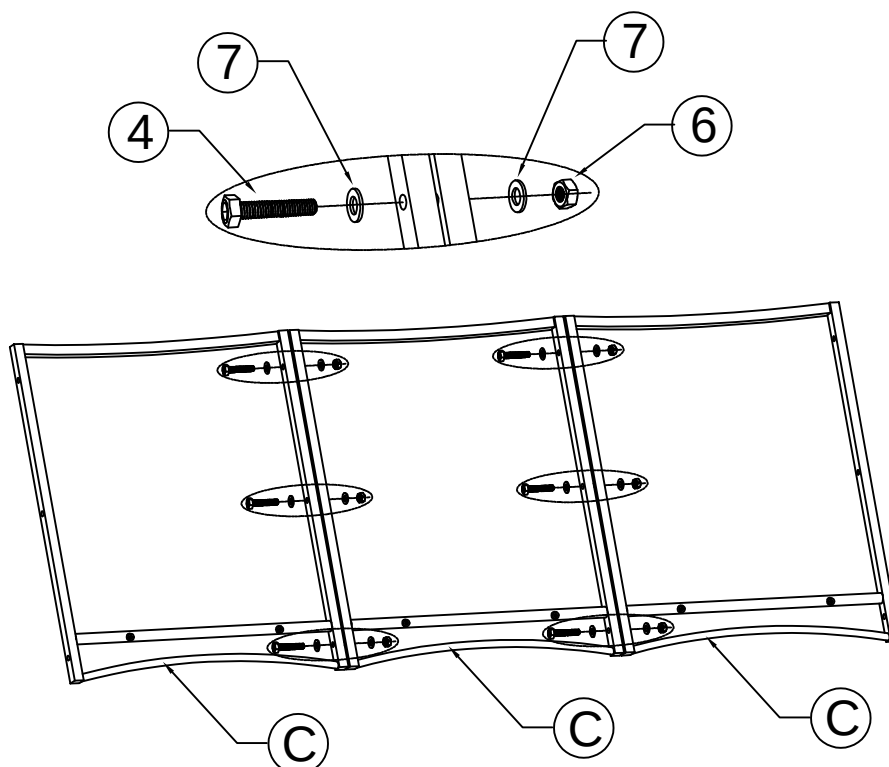



STEP 13

3	x6
	M6x40
7	x6
	M6

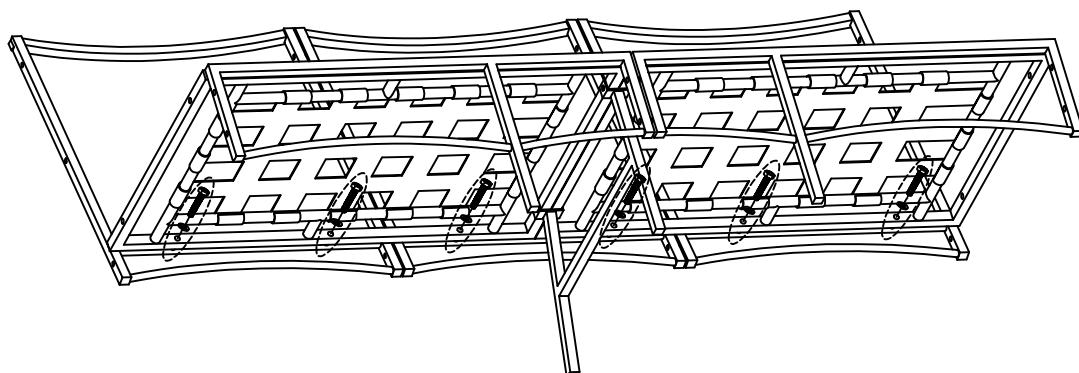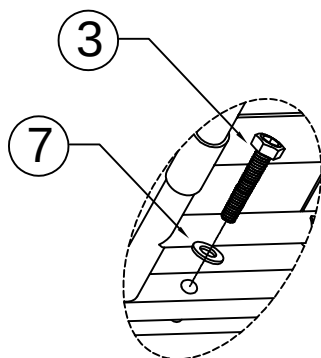


STEP 14

4	x4
	M6x55
6	x4
	M6
7	x8
	M6

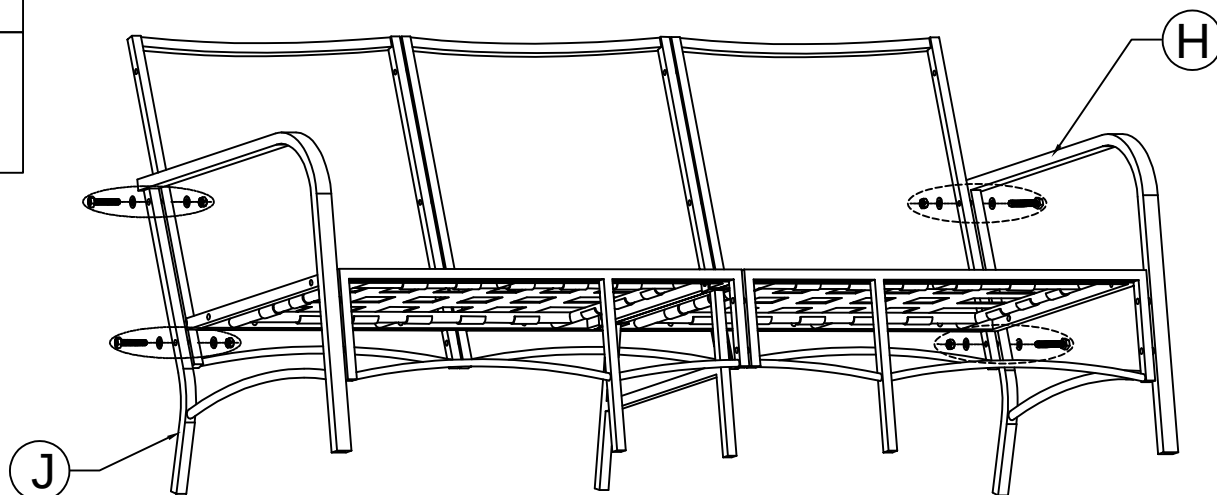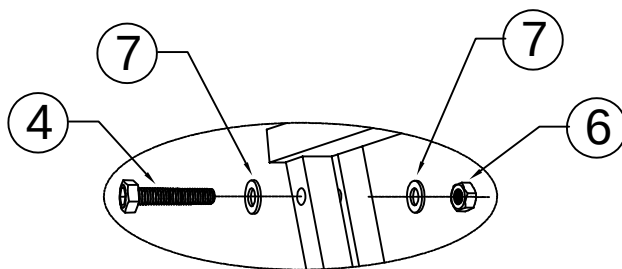


STEP 15

3	x4
	
	M6x40
7	x4
	
	M6

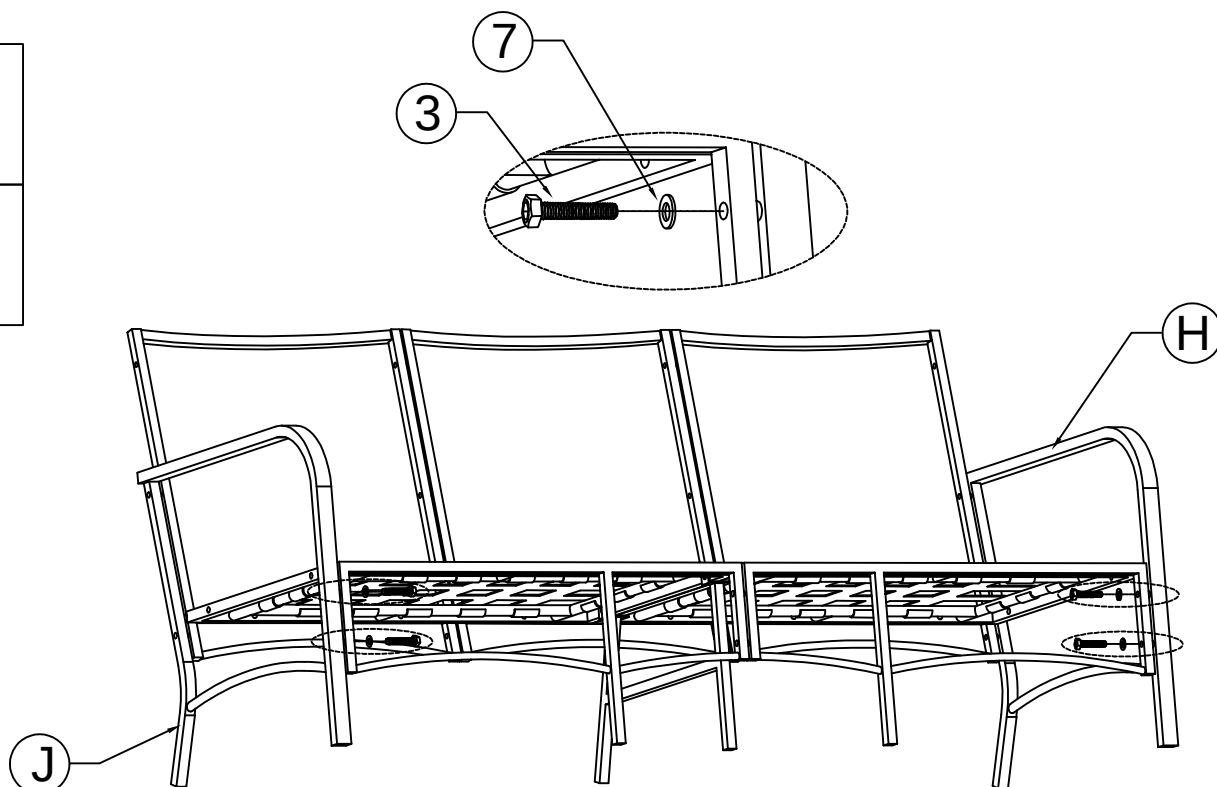


STEP 16

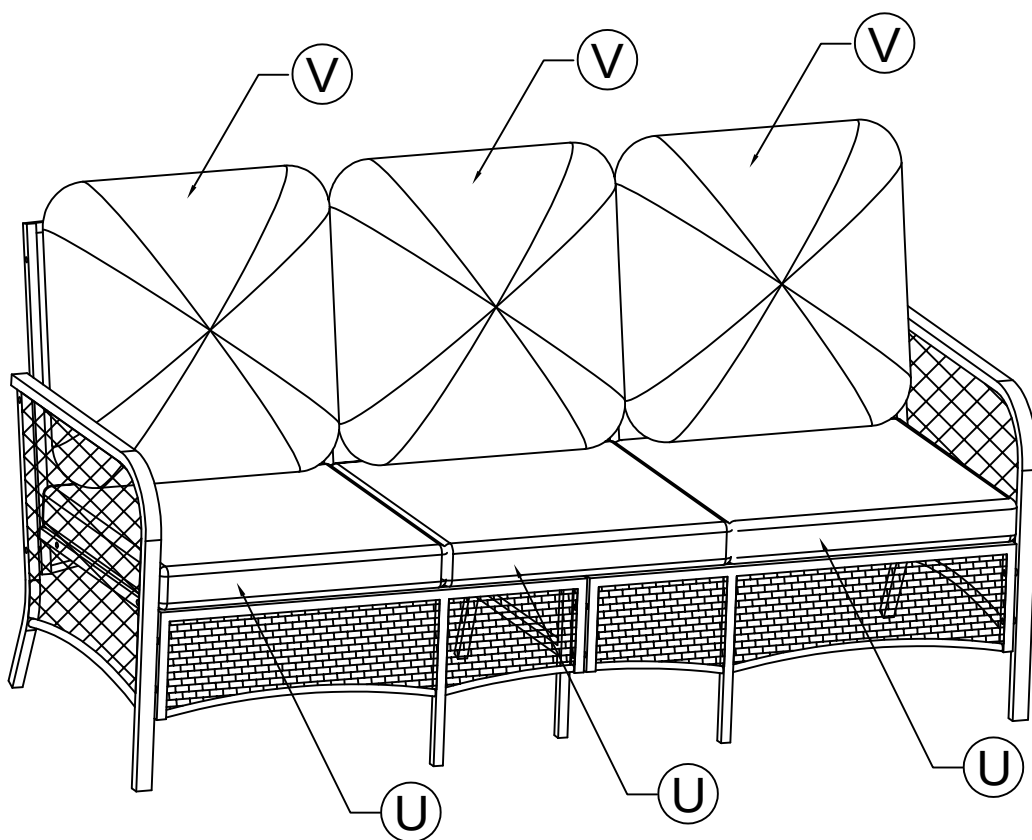


STEP 17

1	x8
	M6x15
7	x8
	M6

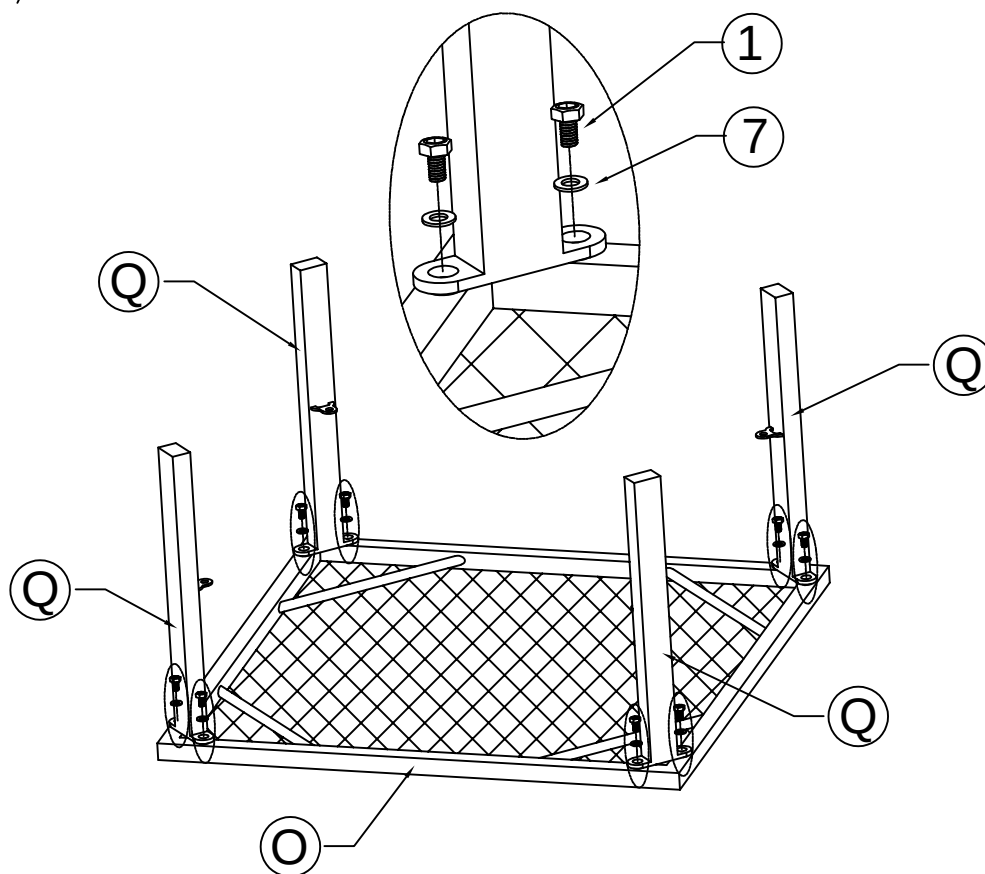


STEP 18

1	x4
	M6x15
7	x4
	M6

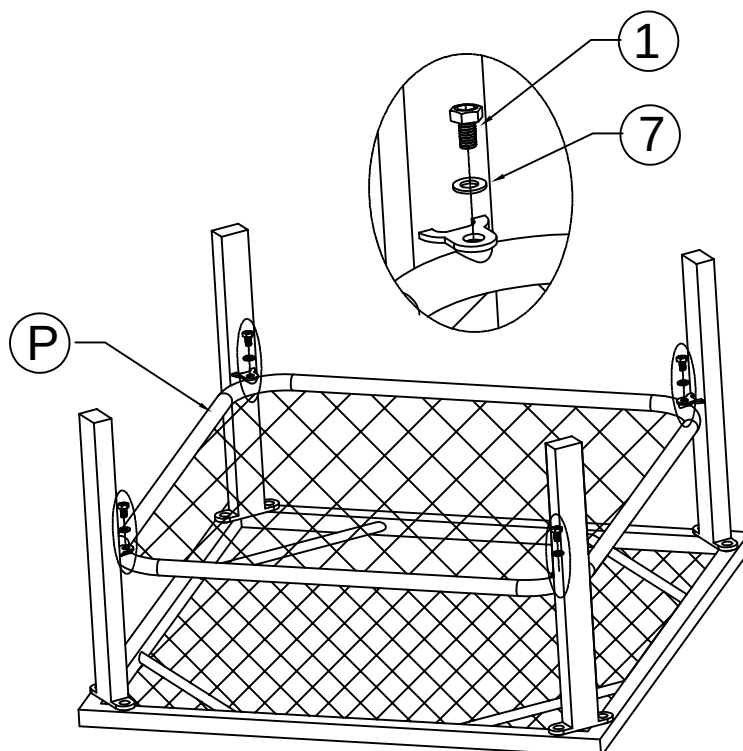


STEP 19

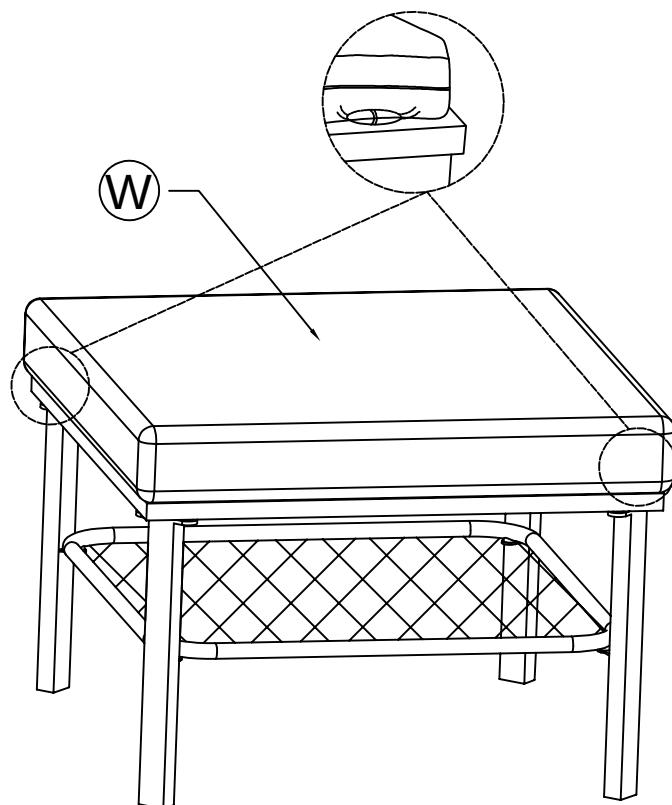


STEP 20

1	x8
	M6x15
7	x8
	M6

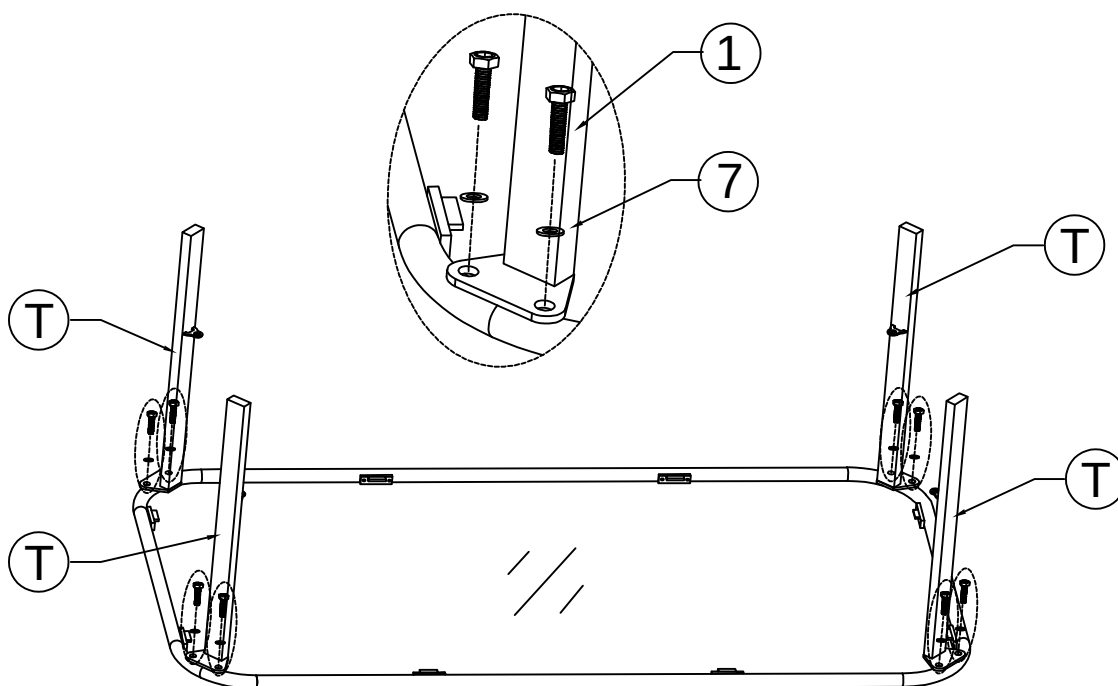


STEP 21

1	x4
	
M6x15	
7	x4
	
M6	

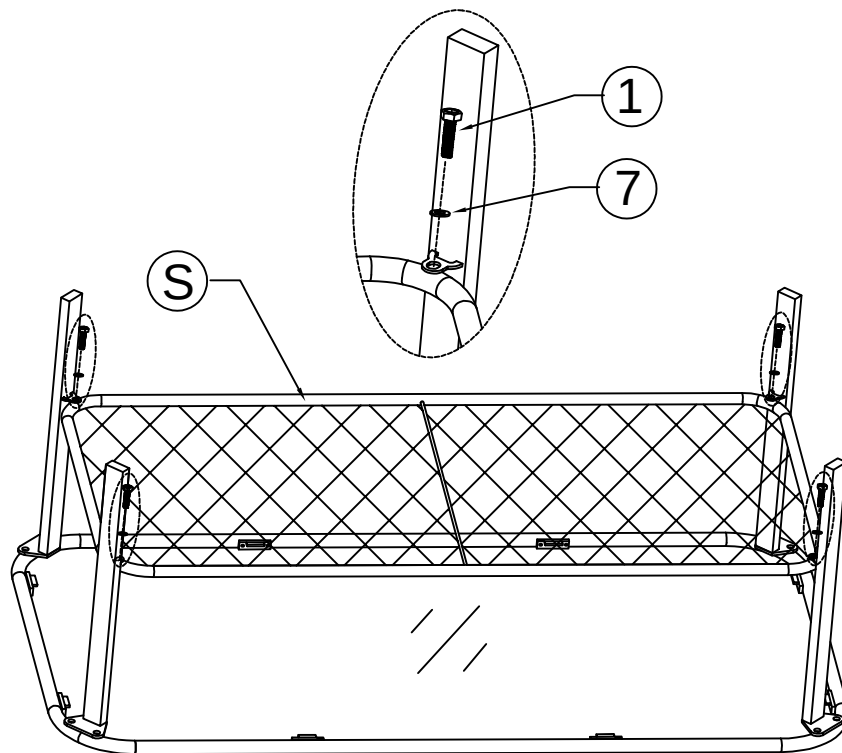

STEP 22

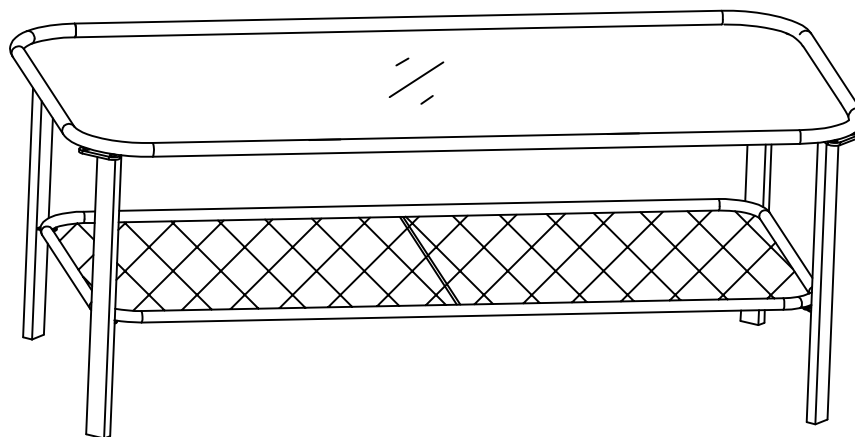

STEP 23

