

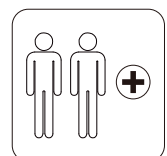
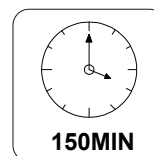
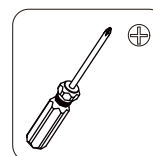
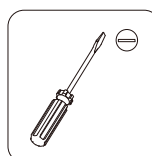



Installation & Assembly

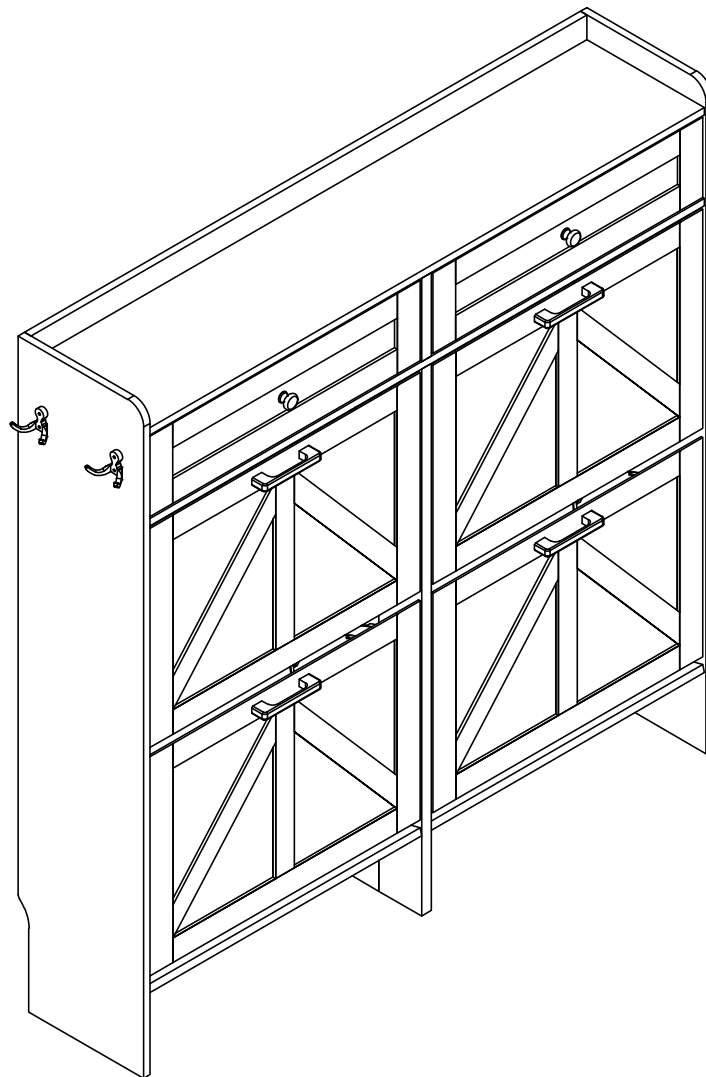


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

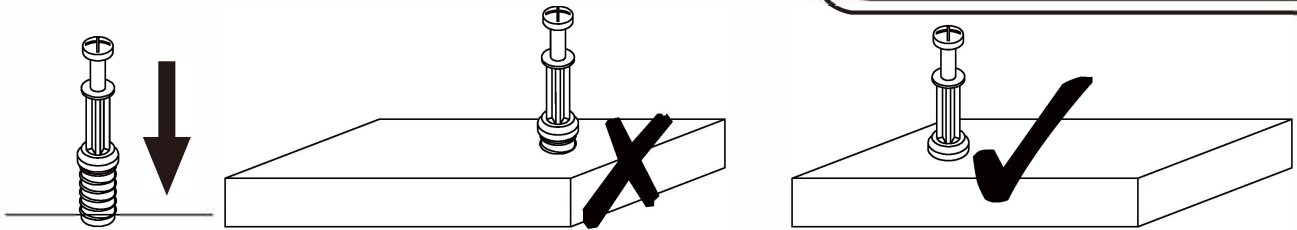


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

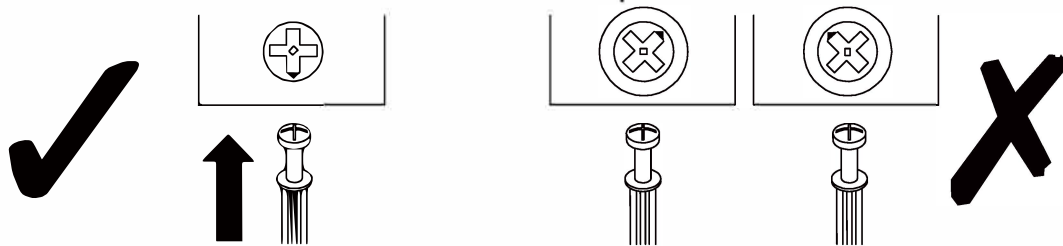











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










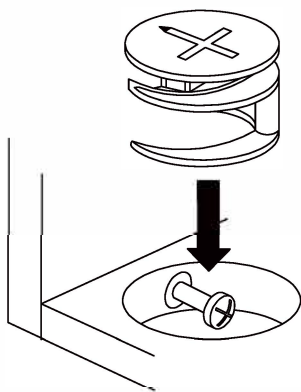


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

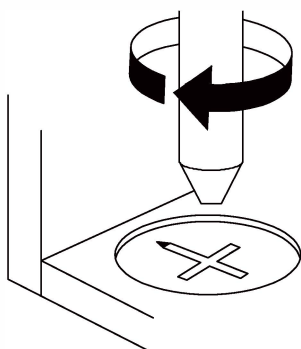


EN_Turn cam lock clockwise to tighten.

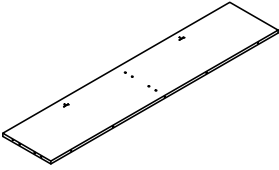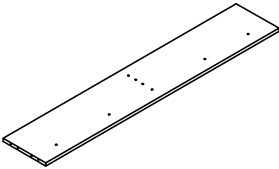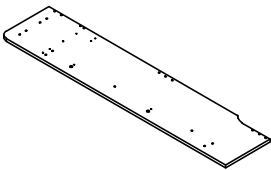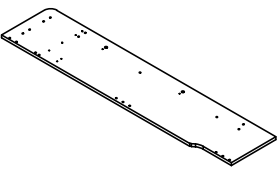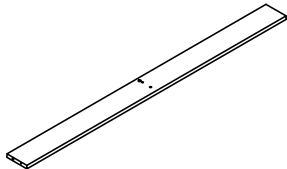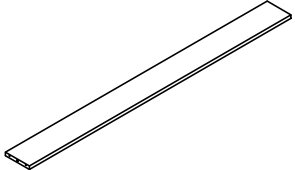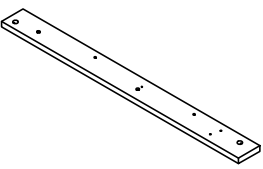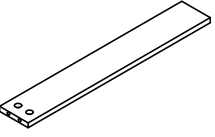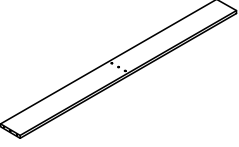NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x2	
⑩		x1	

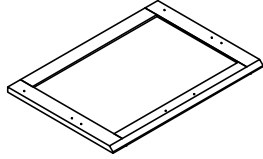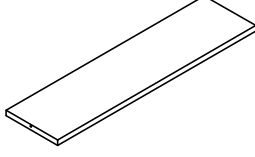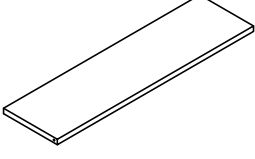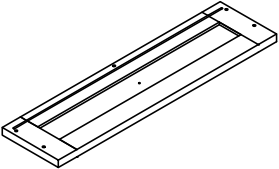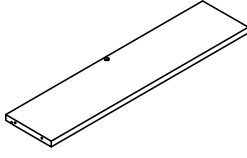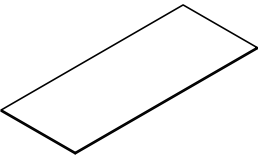
NO.	PARTS	QTY	SPARE
⑪		x4	
⑫		x4	
⑬		x8	
⑭		x2	
⑮		x2	
⑯		x2	
⑰		x2	
⑱		x2	
⑲		x2	
⑳		x1	





NO.	PARTS	QTY	SPARE
	 Hardware Kit	x1	

PARTS

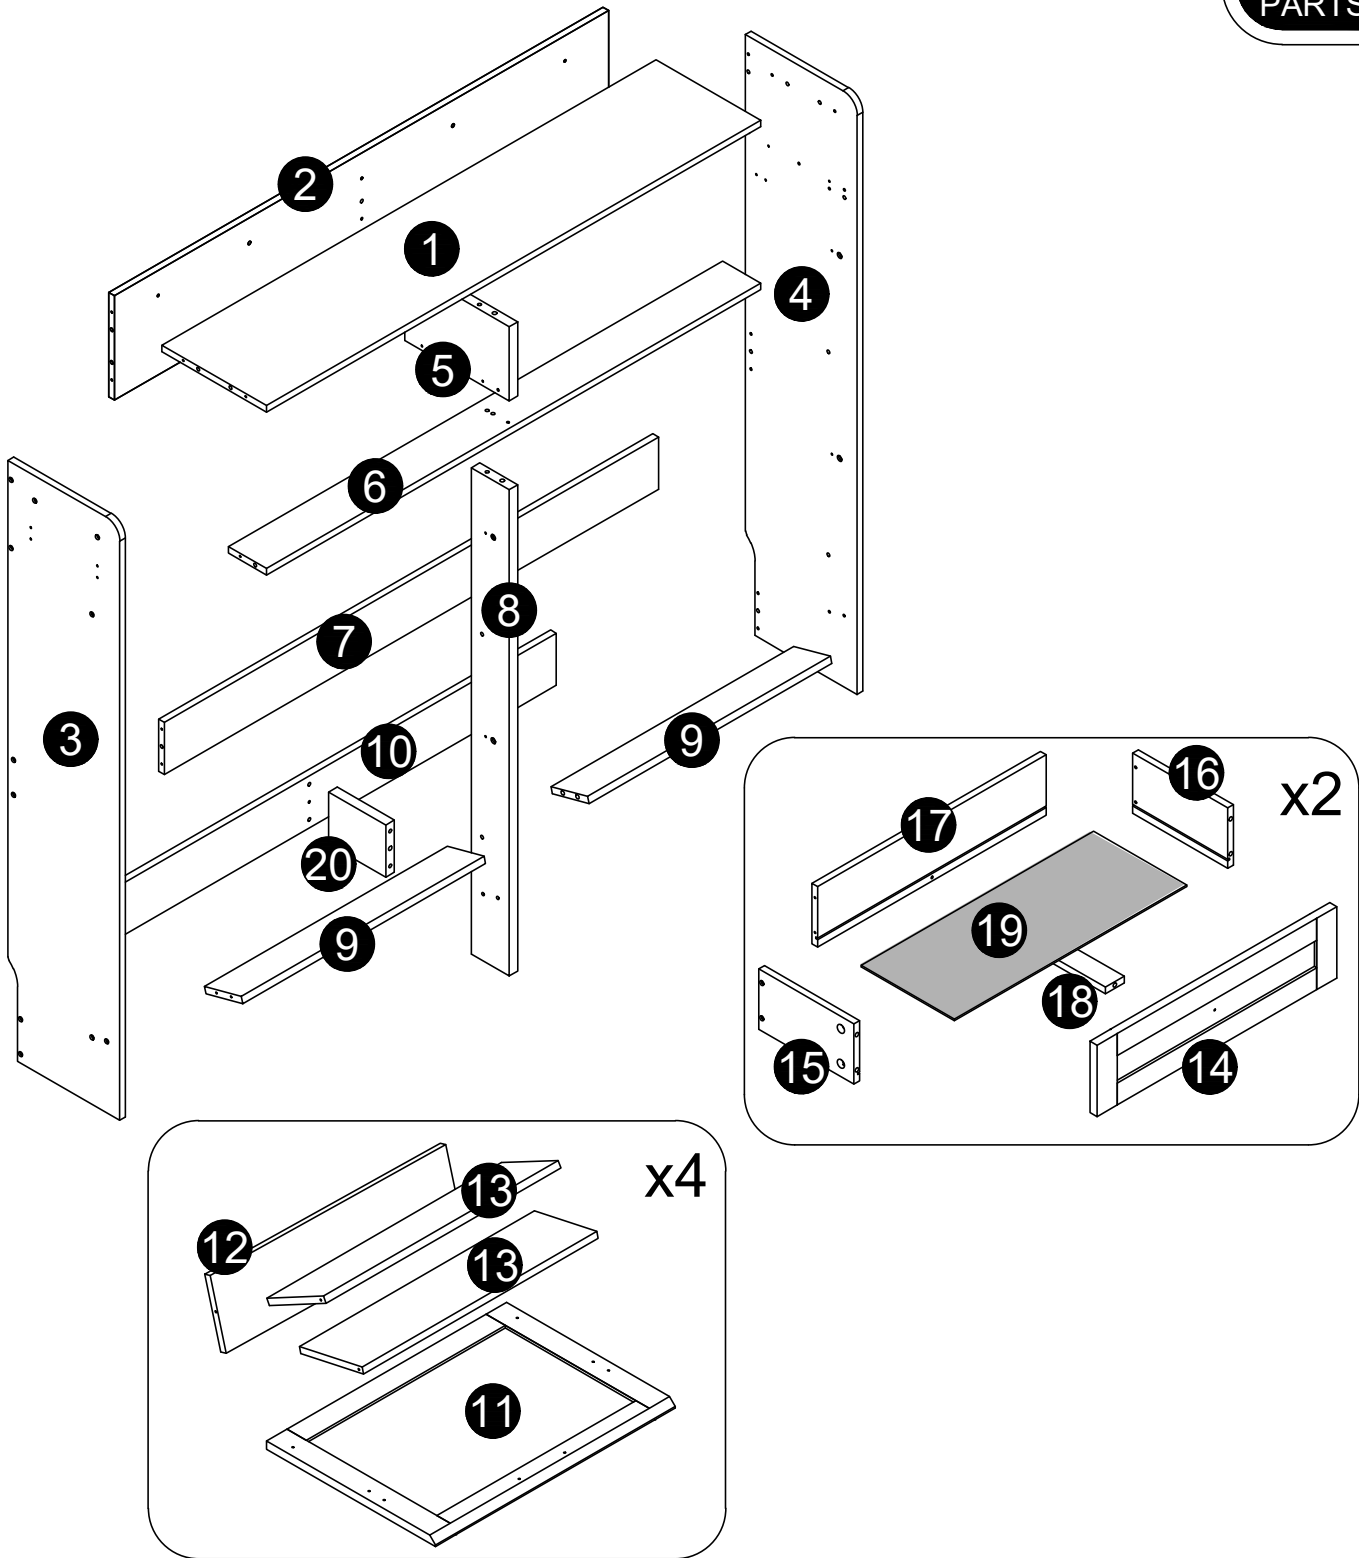

A x17 $\varnothing 6 \times 35 \text{ mm}$ +1(spare)	B x18 $\varnothing 15 \times 10 \text{ mm}$ +1(spare)	C x26 $\varnothing 6 \times 30 \text{ mm}$ +2(spare)	D x38 $\varnothing 4 \times 35 \text{ mm}$ +3(spare)	E x58 $\varnothing 3.5 \times 14 \text{ mm}$ +5(spare)	F x2 F-1 F-2
G x4 G-1 G-2	H x4	I x8 +1(spare)	J x2 $\varnothing 4 \times 12 \text{ mm}$ J-1 J-2	K x2 K-1 K-2	M x26 +4(spare)
N x8 N-1 +1(spare) N-2 +1(spare) N-3	O x2	L x4	R x4	P x2 P-1 P-2	
Q x1 M5	S x1 S-1 S-2				


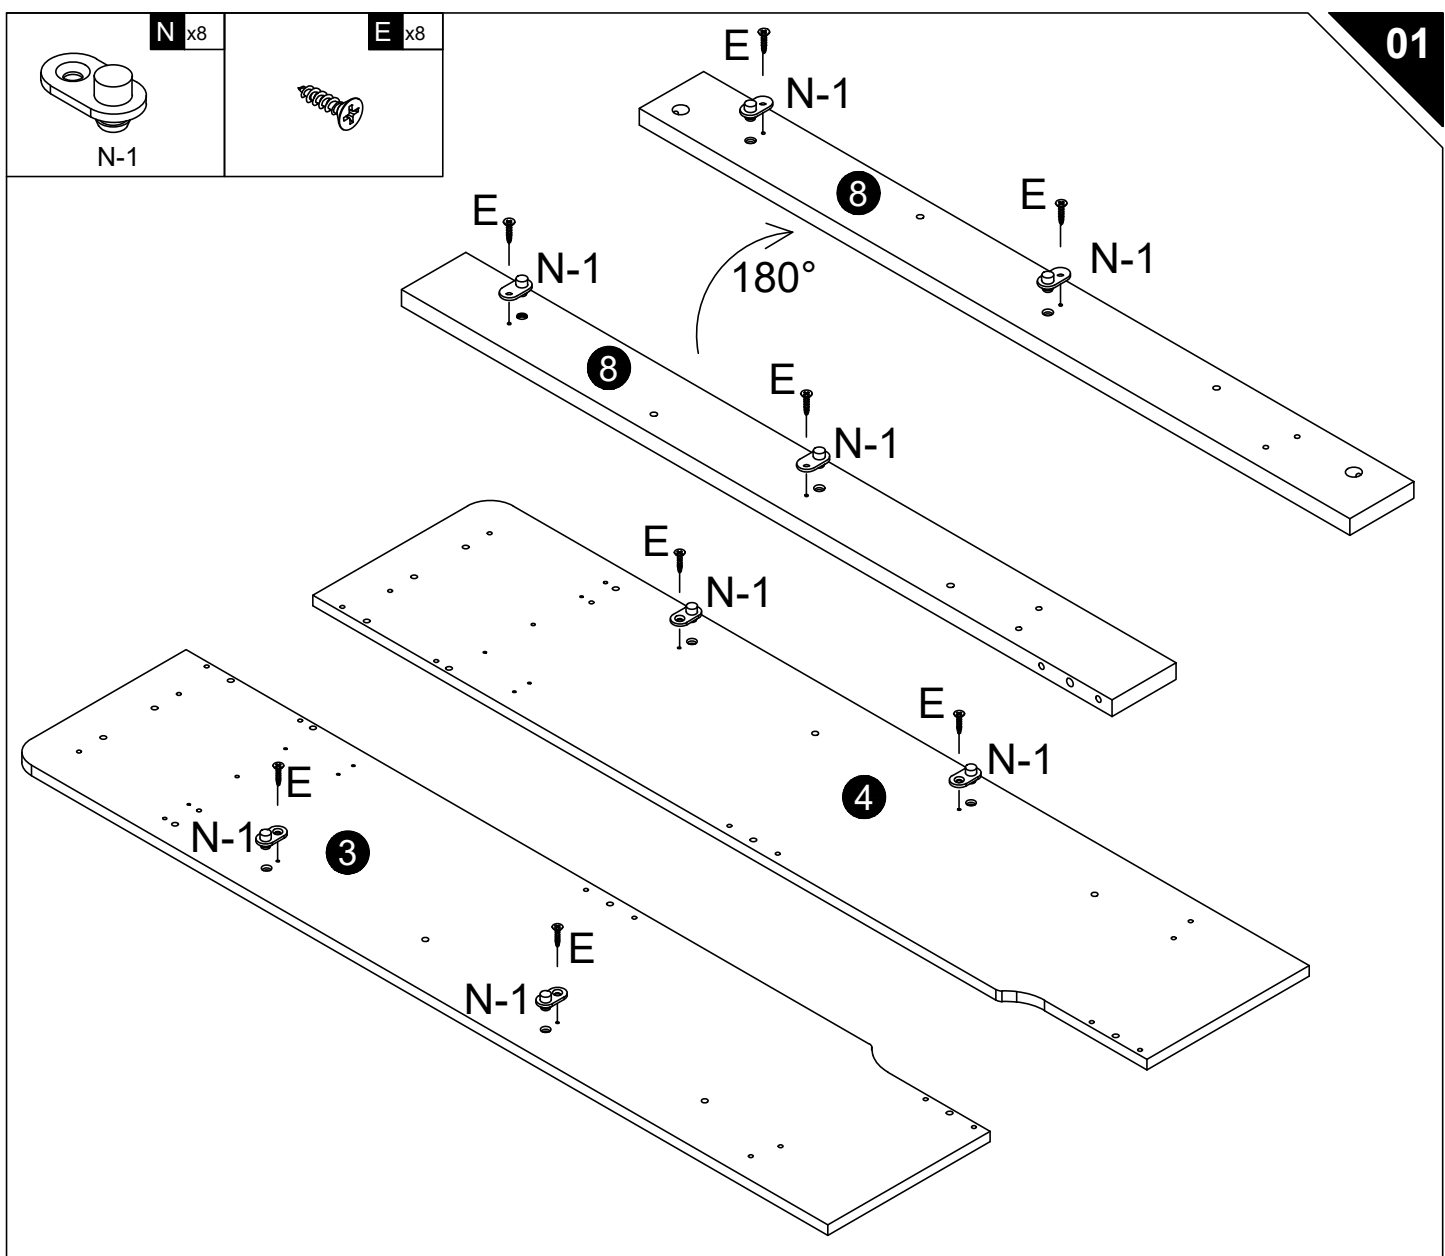


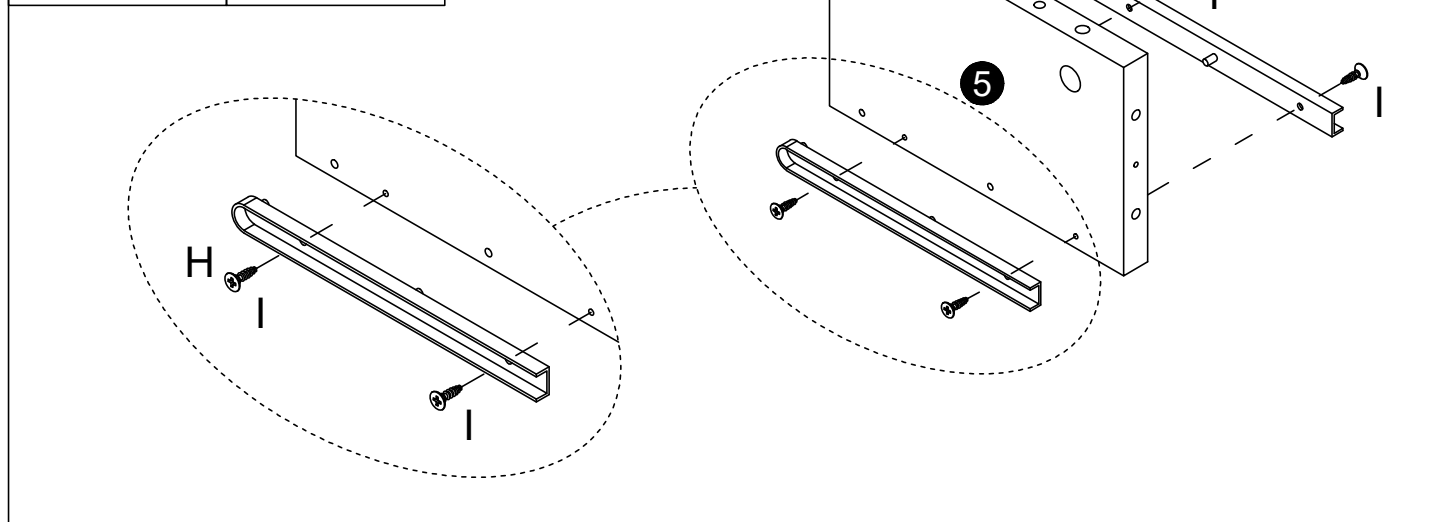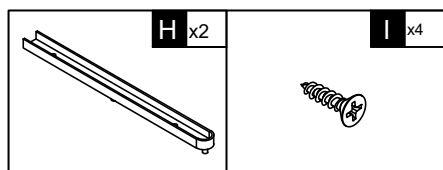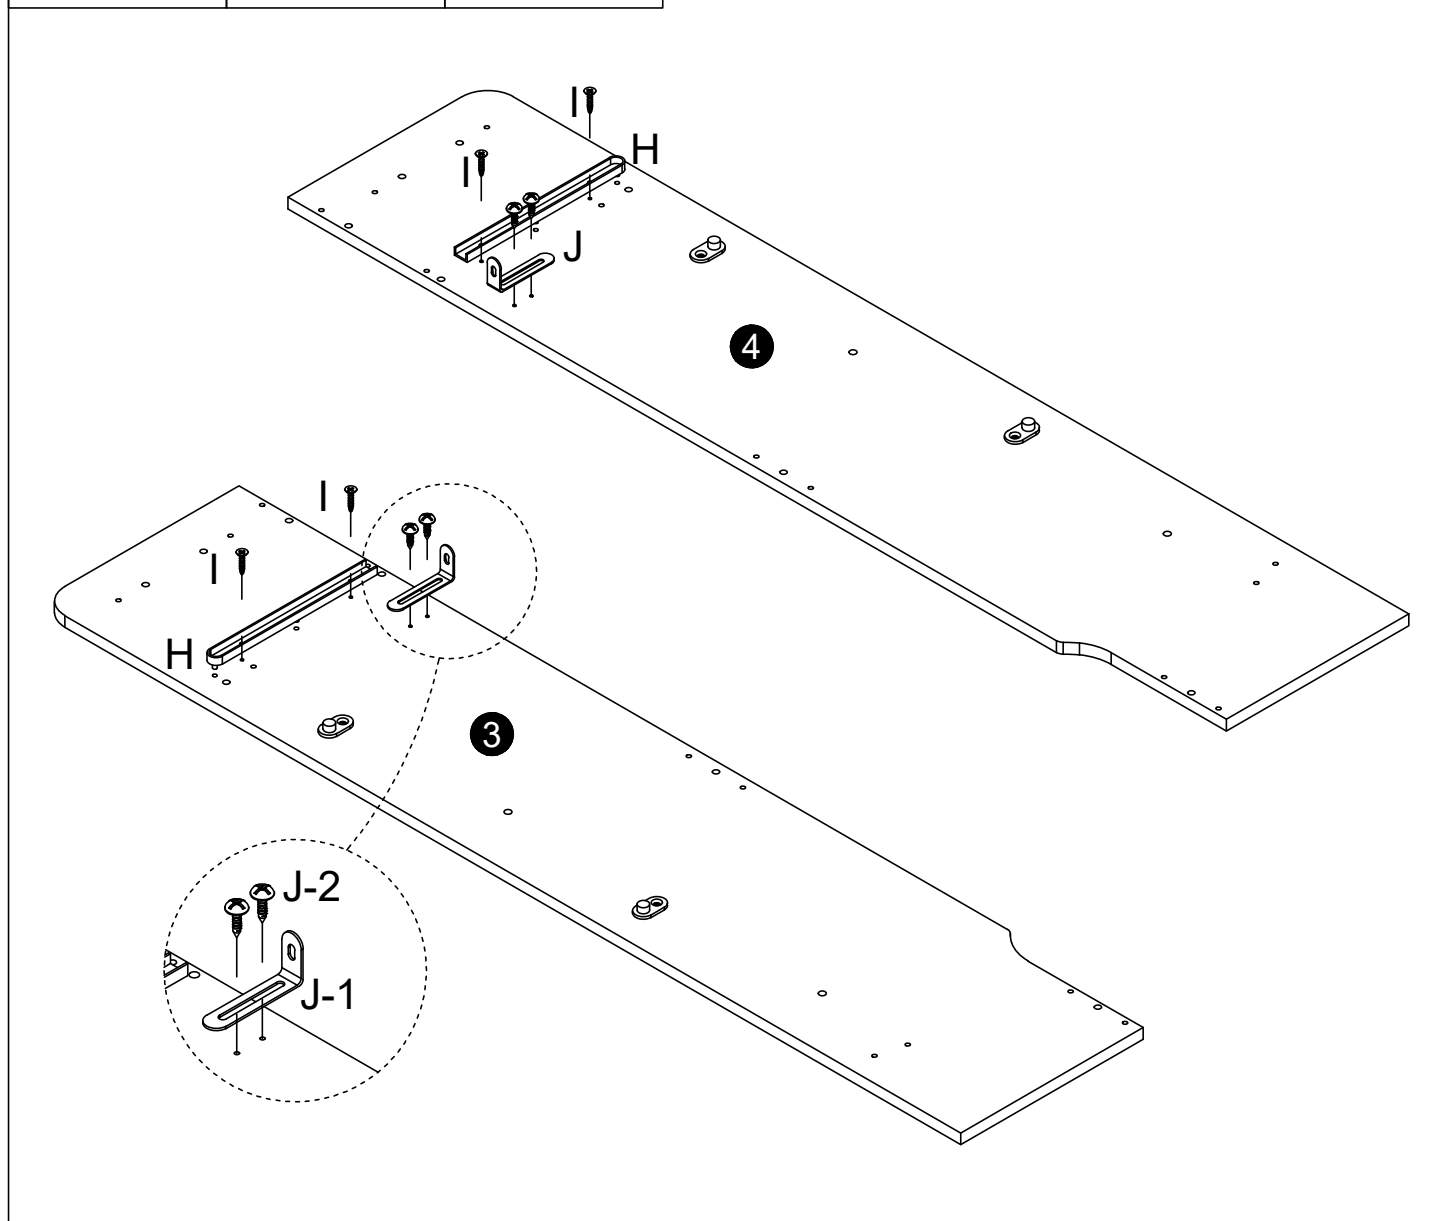
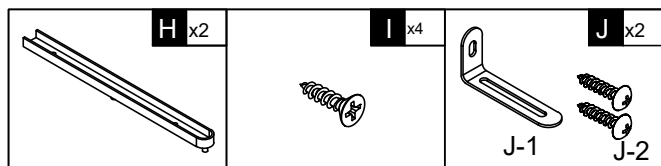


A x7


O x2

E x2

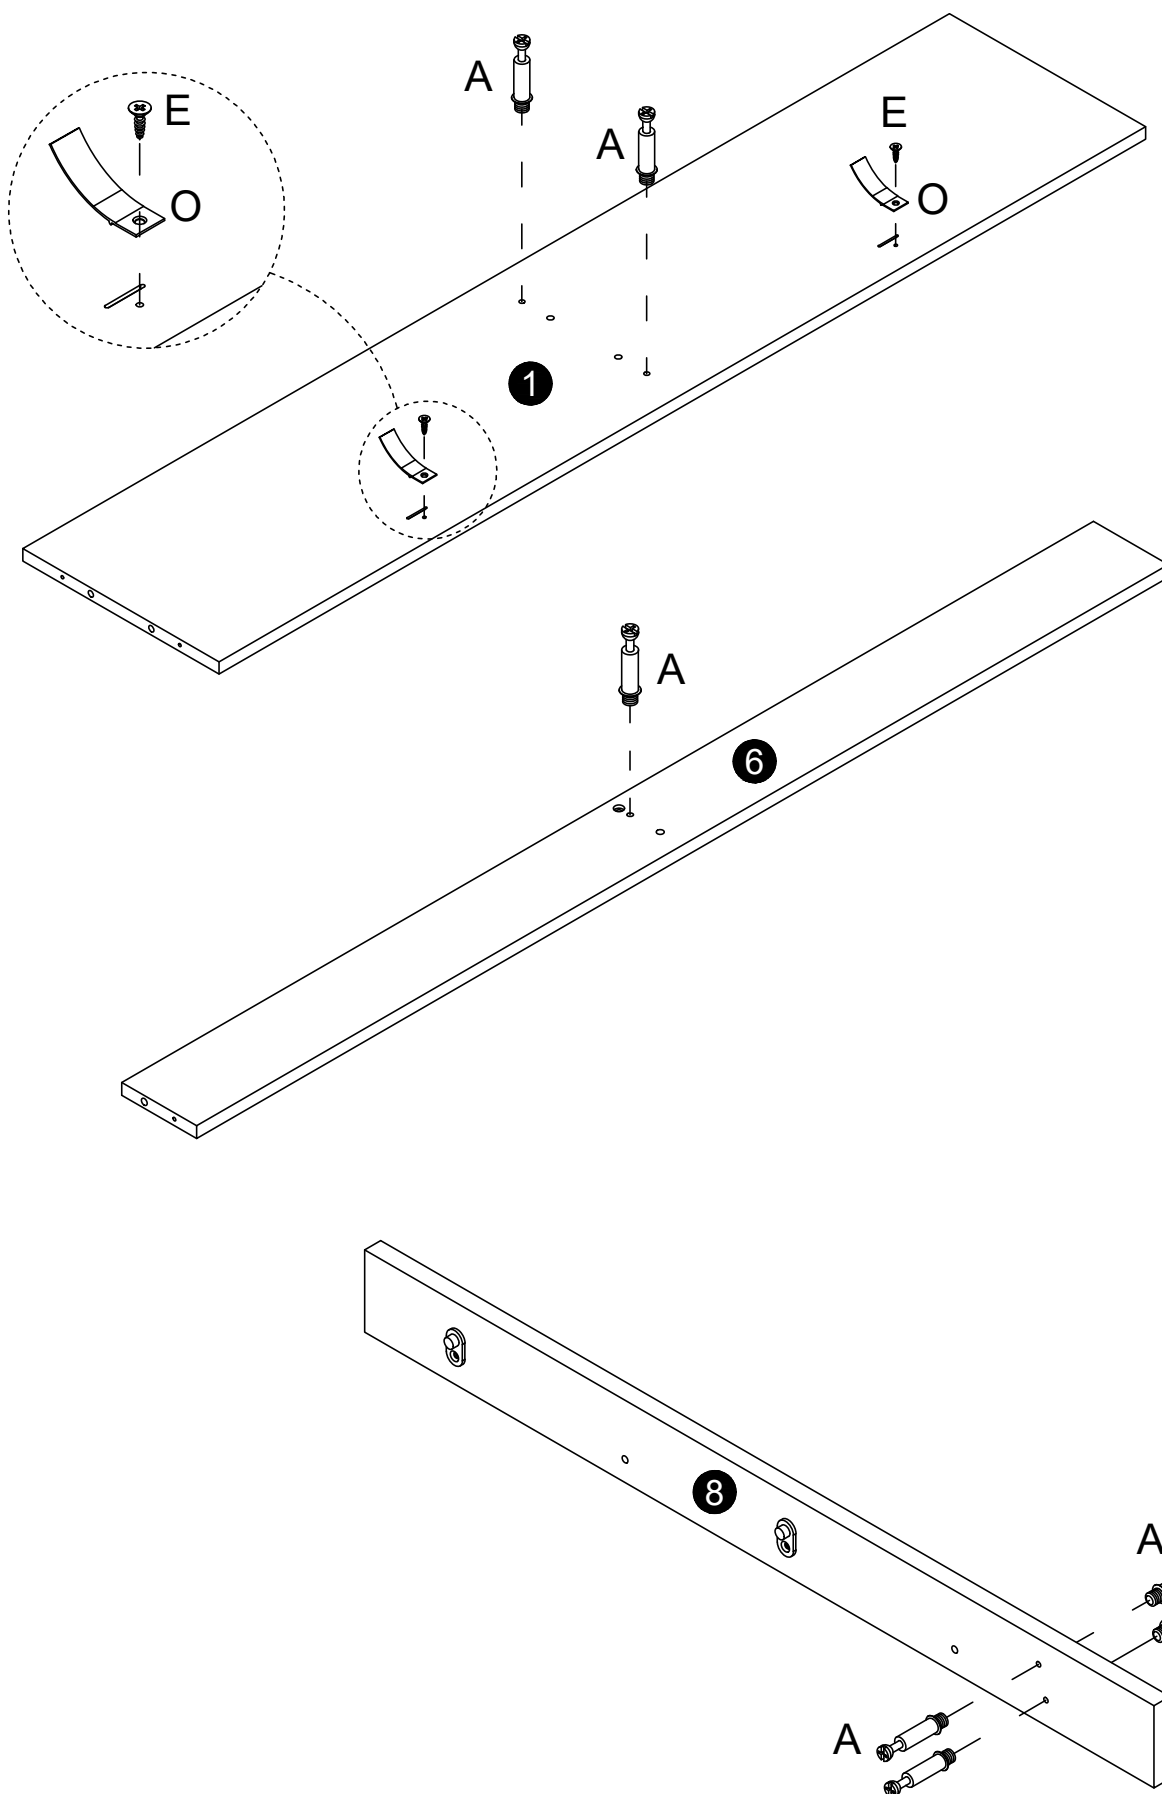


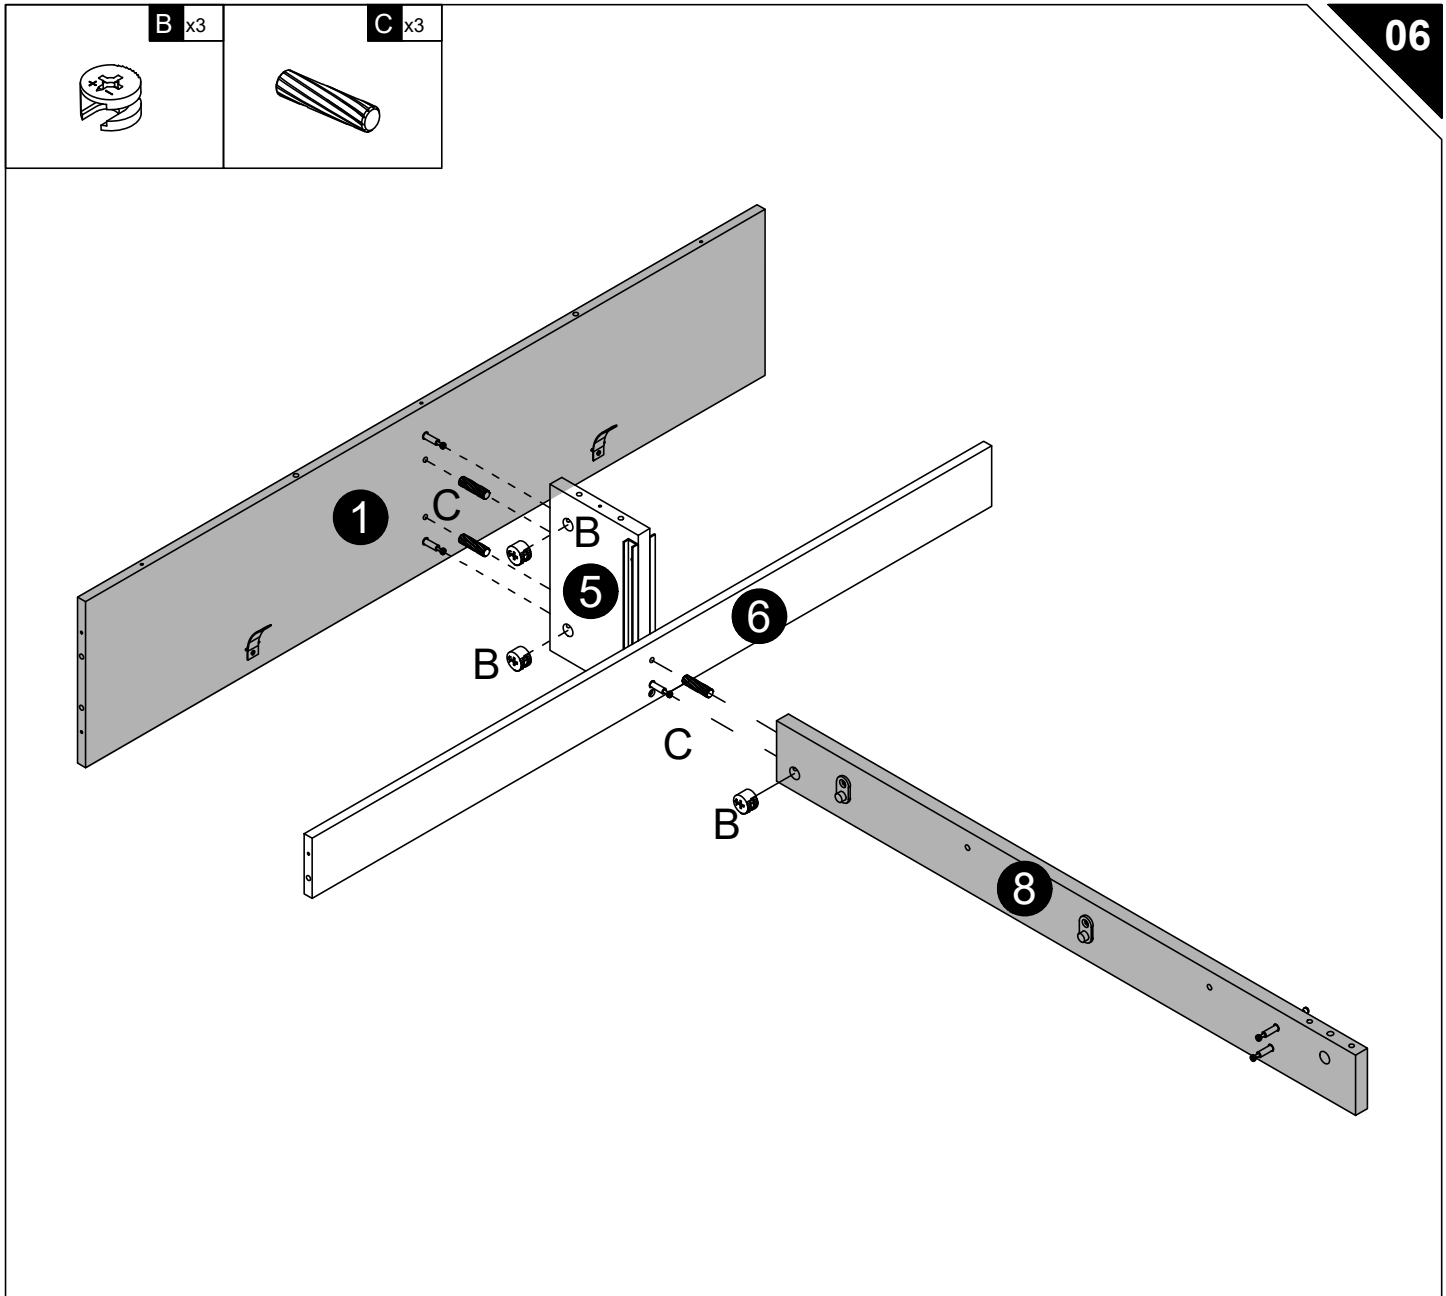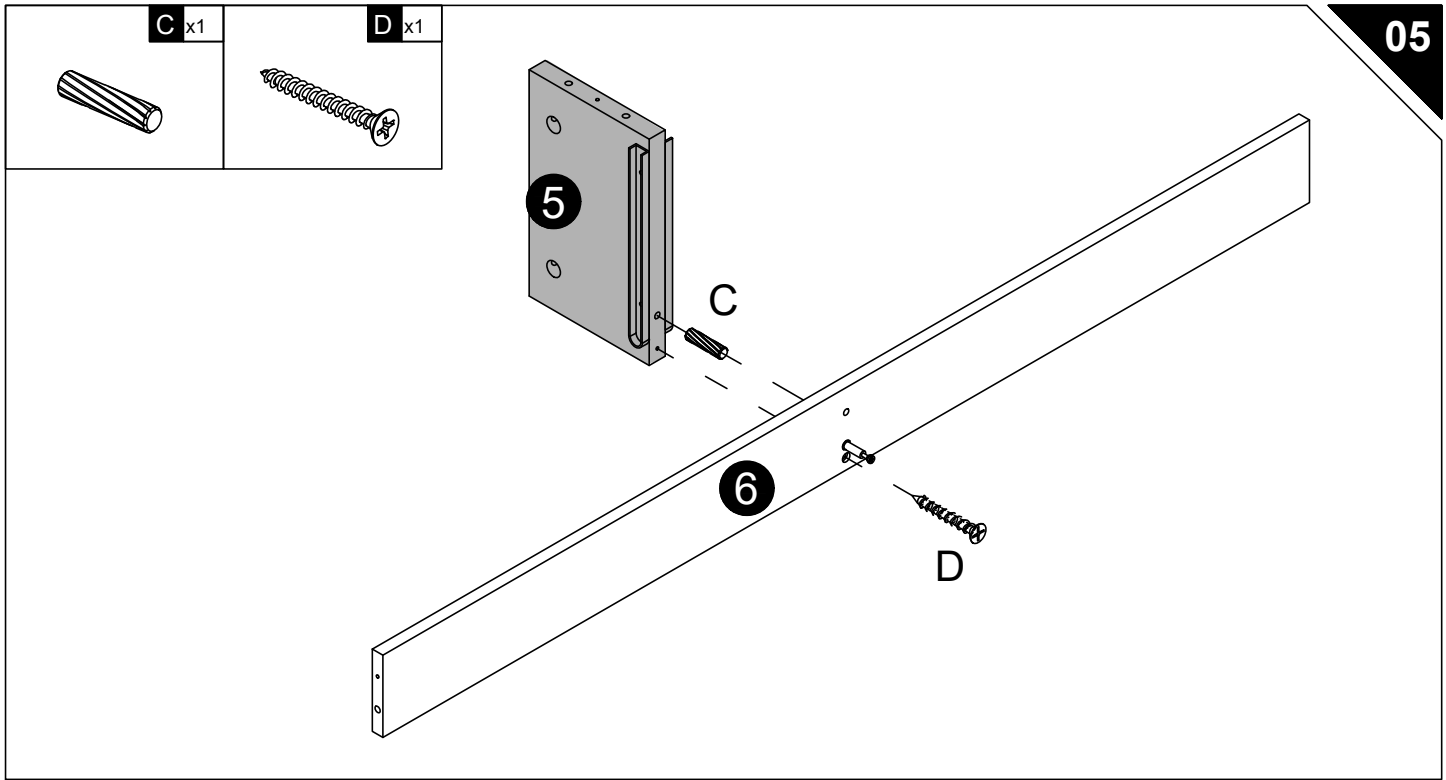

S x1



07

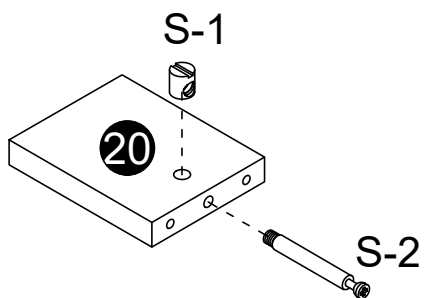


B x5



C x2





08

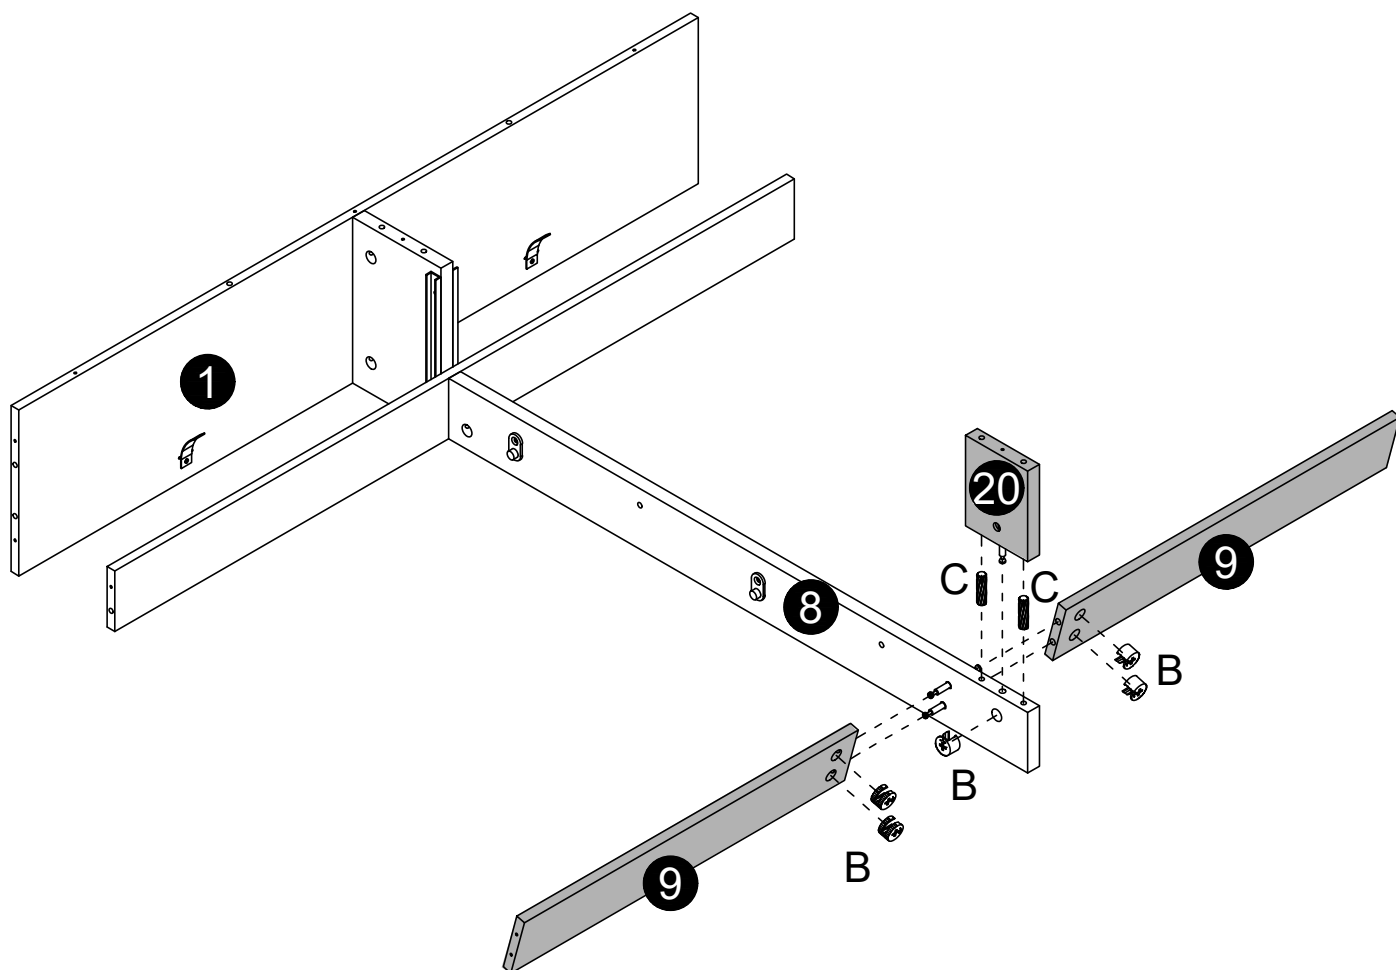


C x6

D x5

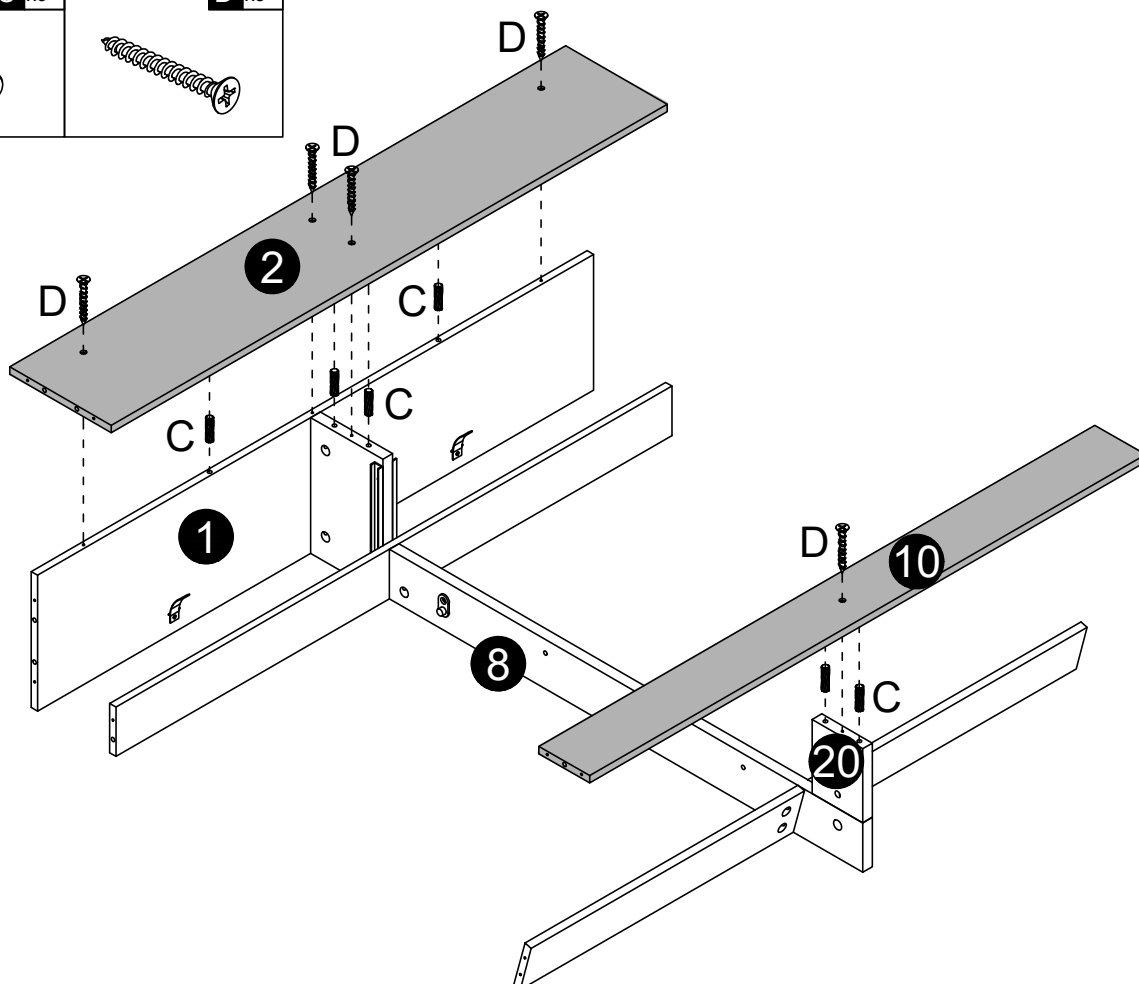




C x7

D x11



During the installation process,
you need to keep your balance
by hand to avoid damage.

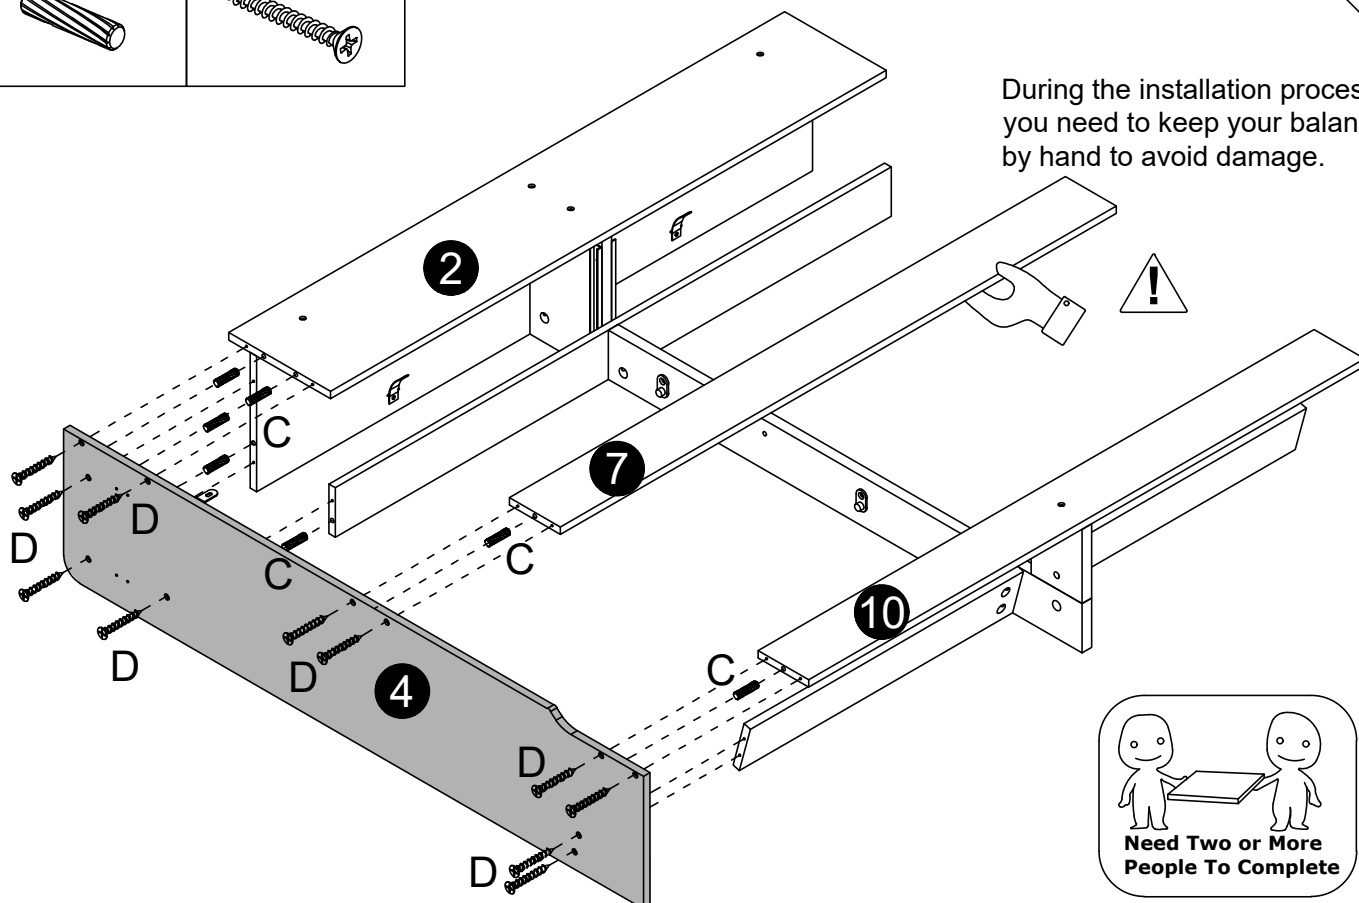

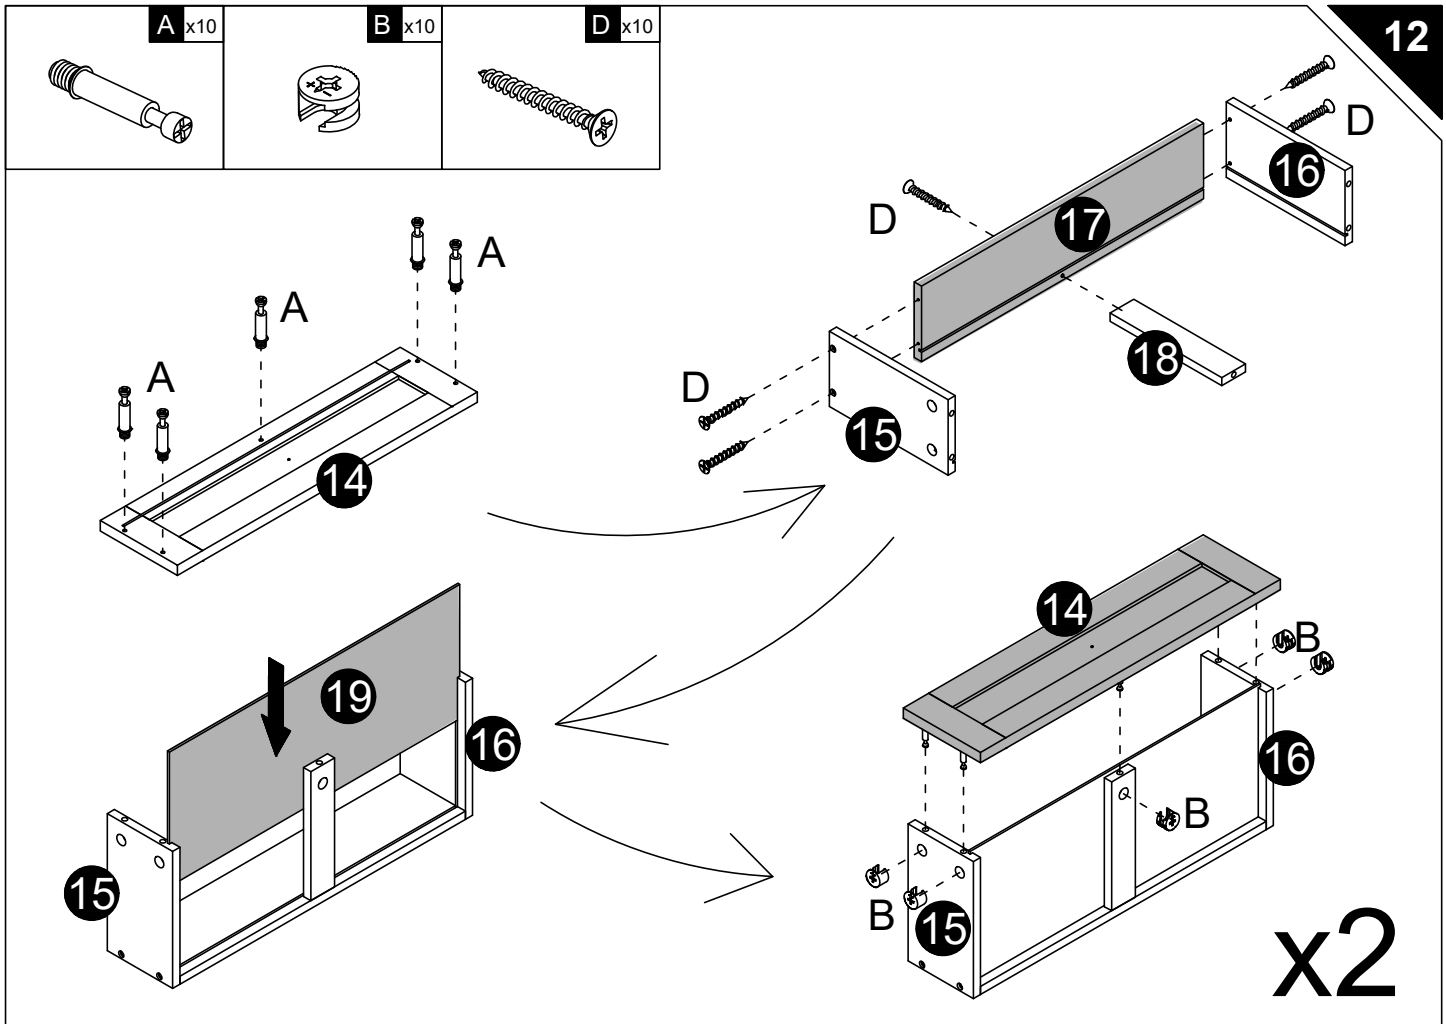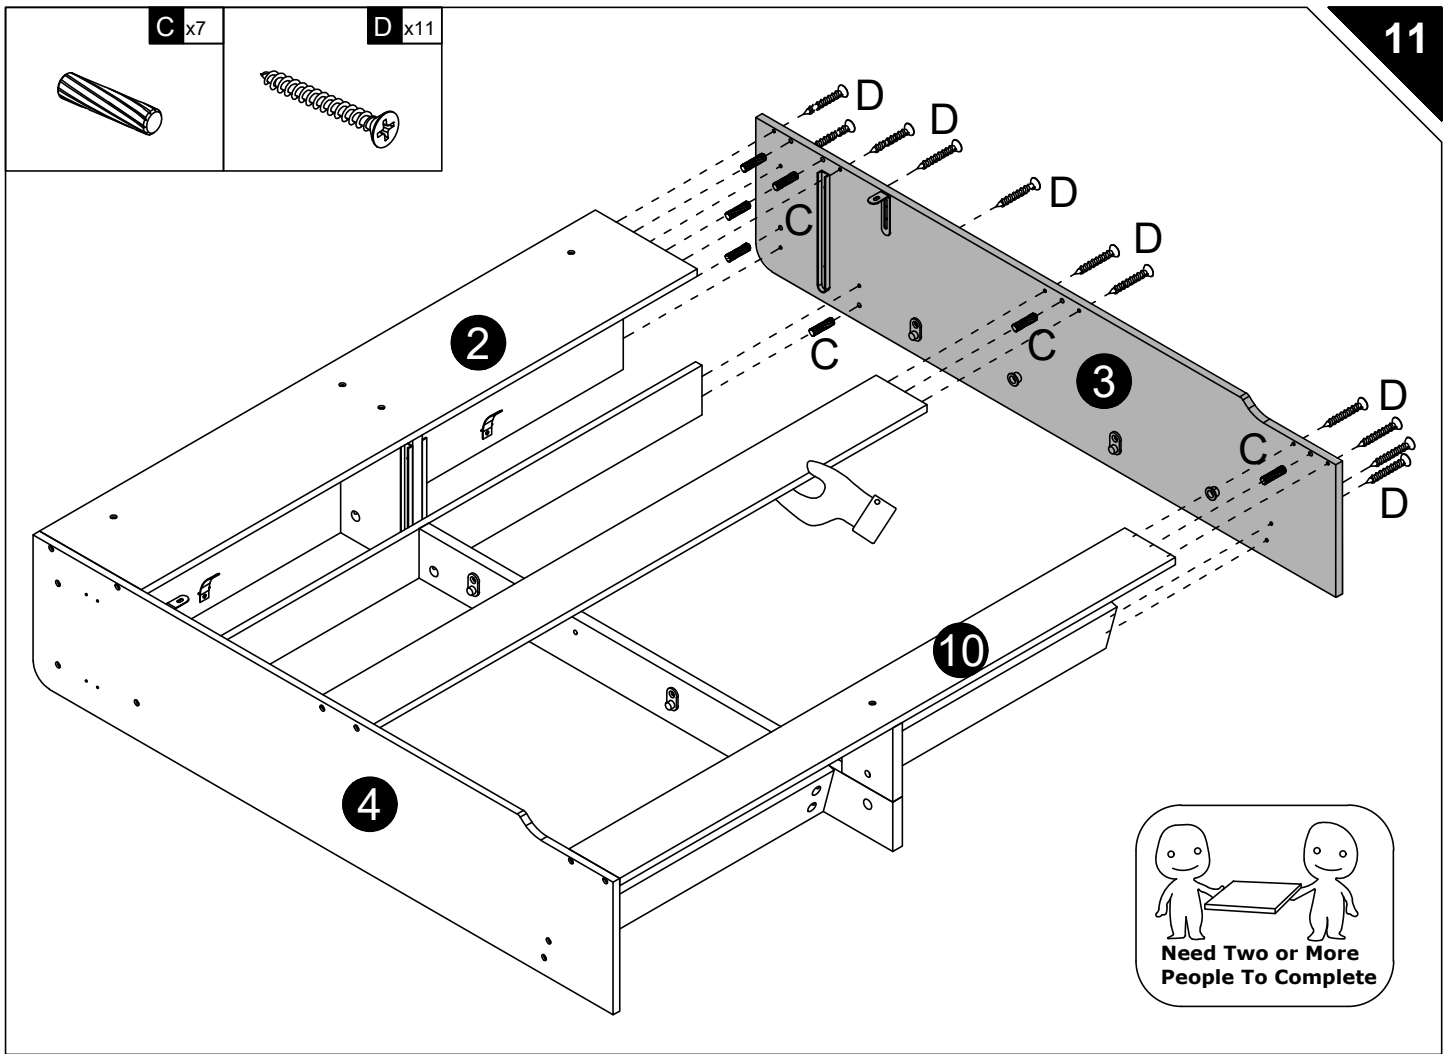

13


F x2



F-1



F-2

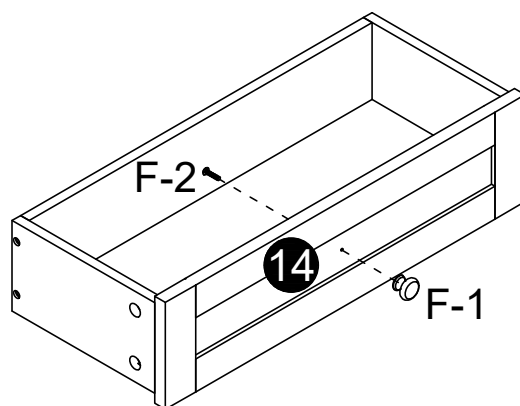


x2

14

E x40



G x4




G-1

G-2




G-2


L x4



R x4



⚠ Caution the direction of 12 !

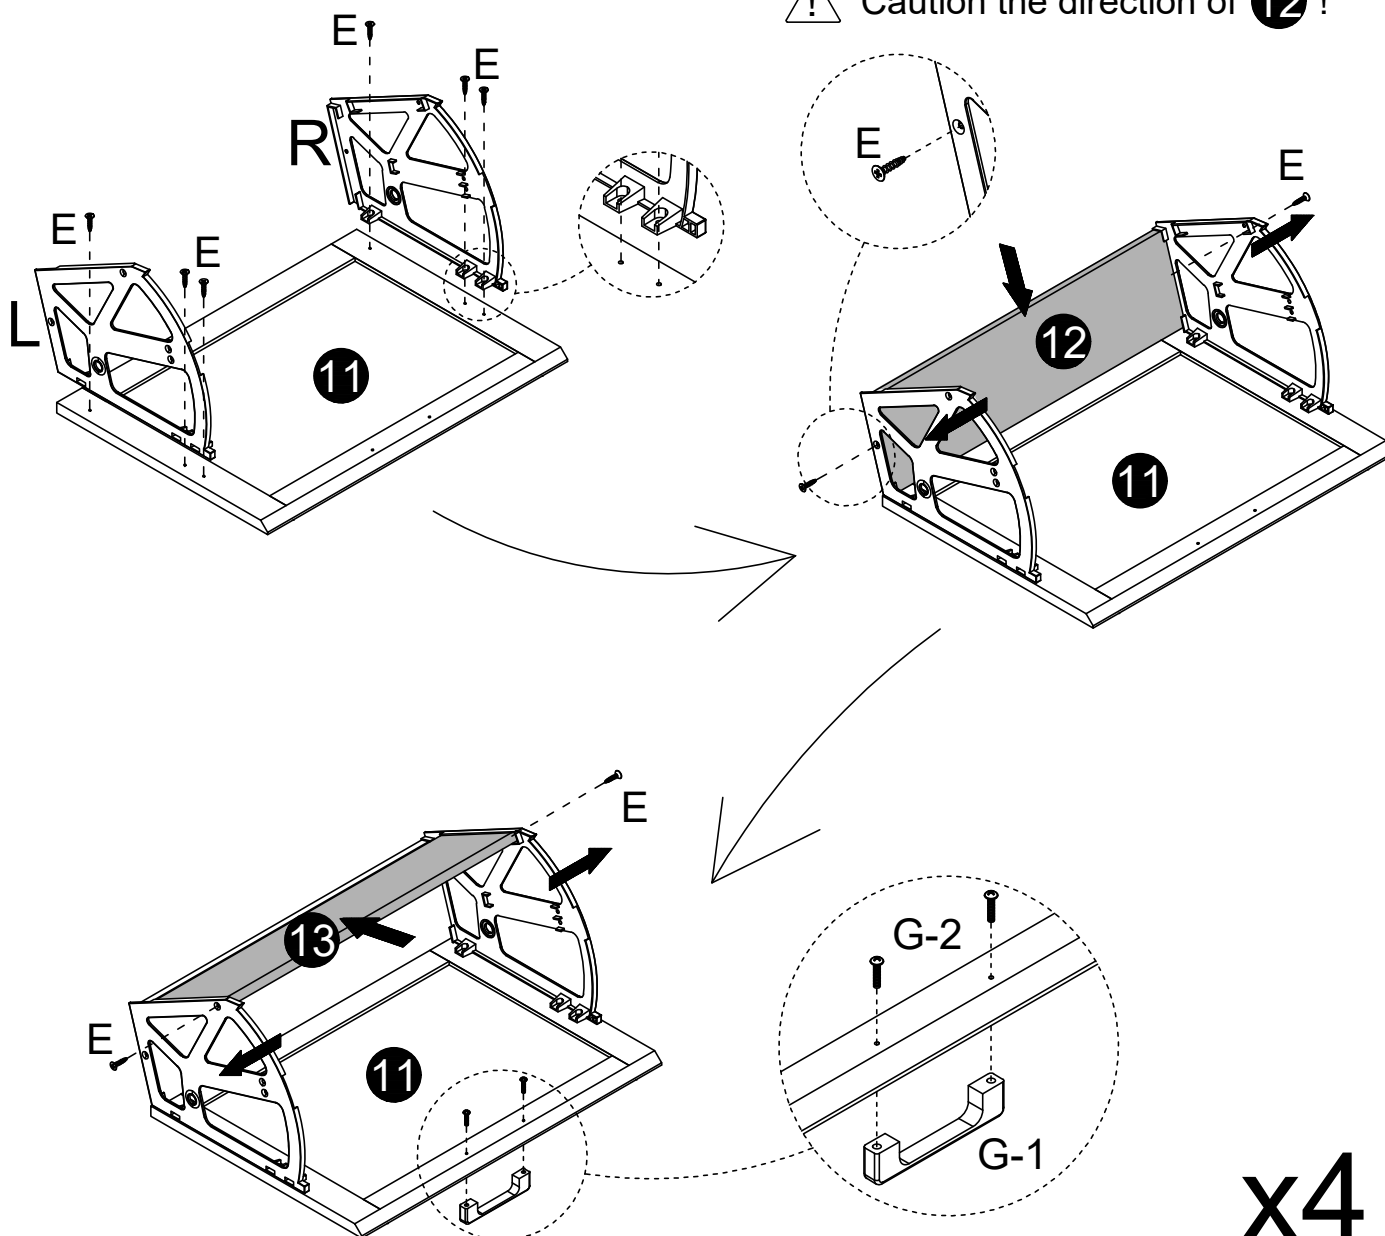


x4

K x2

M x22




K-1




K-2



M x22

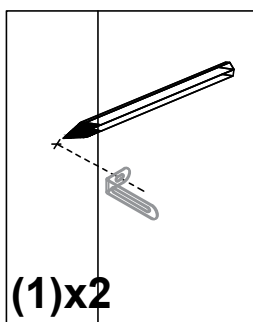


(1)x2

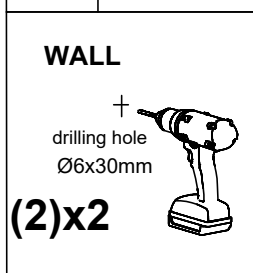


(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

Then use a tape drill to make holes in the wall that are suitable for the product screws.

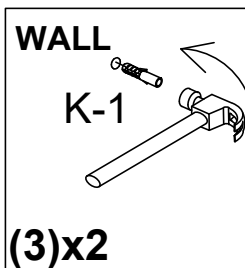


(3)x2

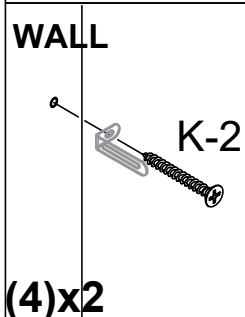

(4)x2

Then, put the expansion bolt into the hole

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

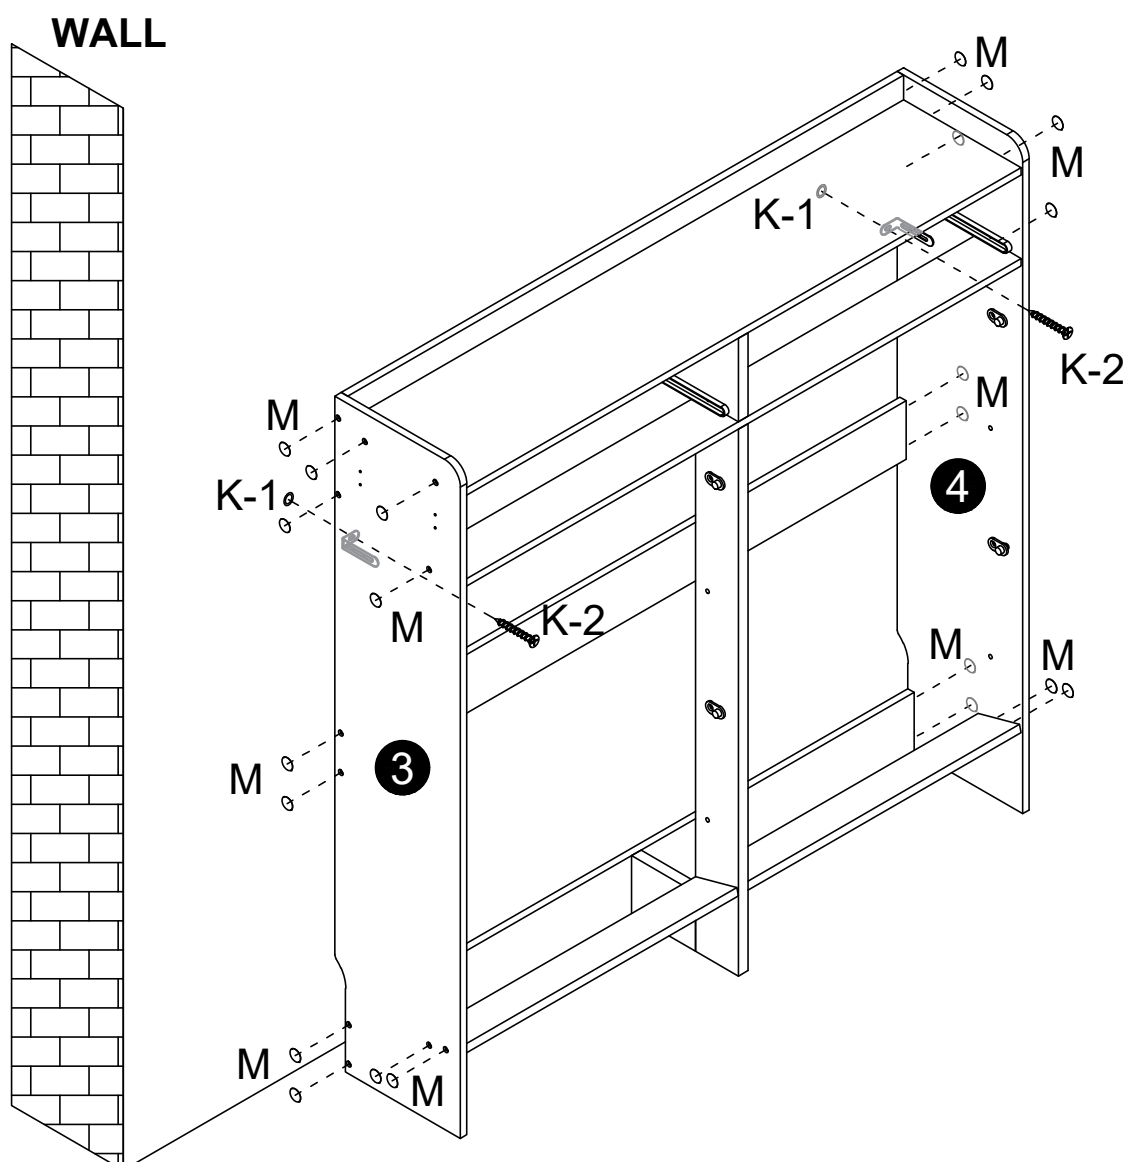




N-2



N-3


N x4



Q x1





If the installation cannot be placed in the correct position, please try operating at other inclined angles.

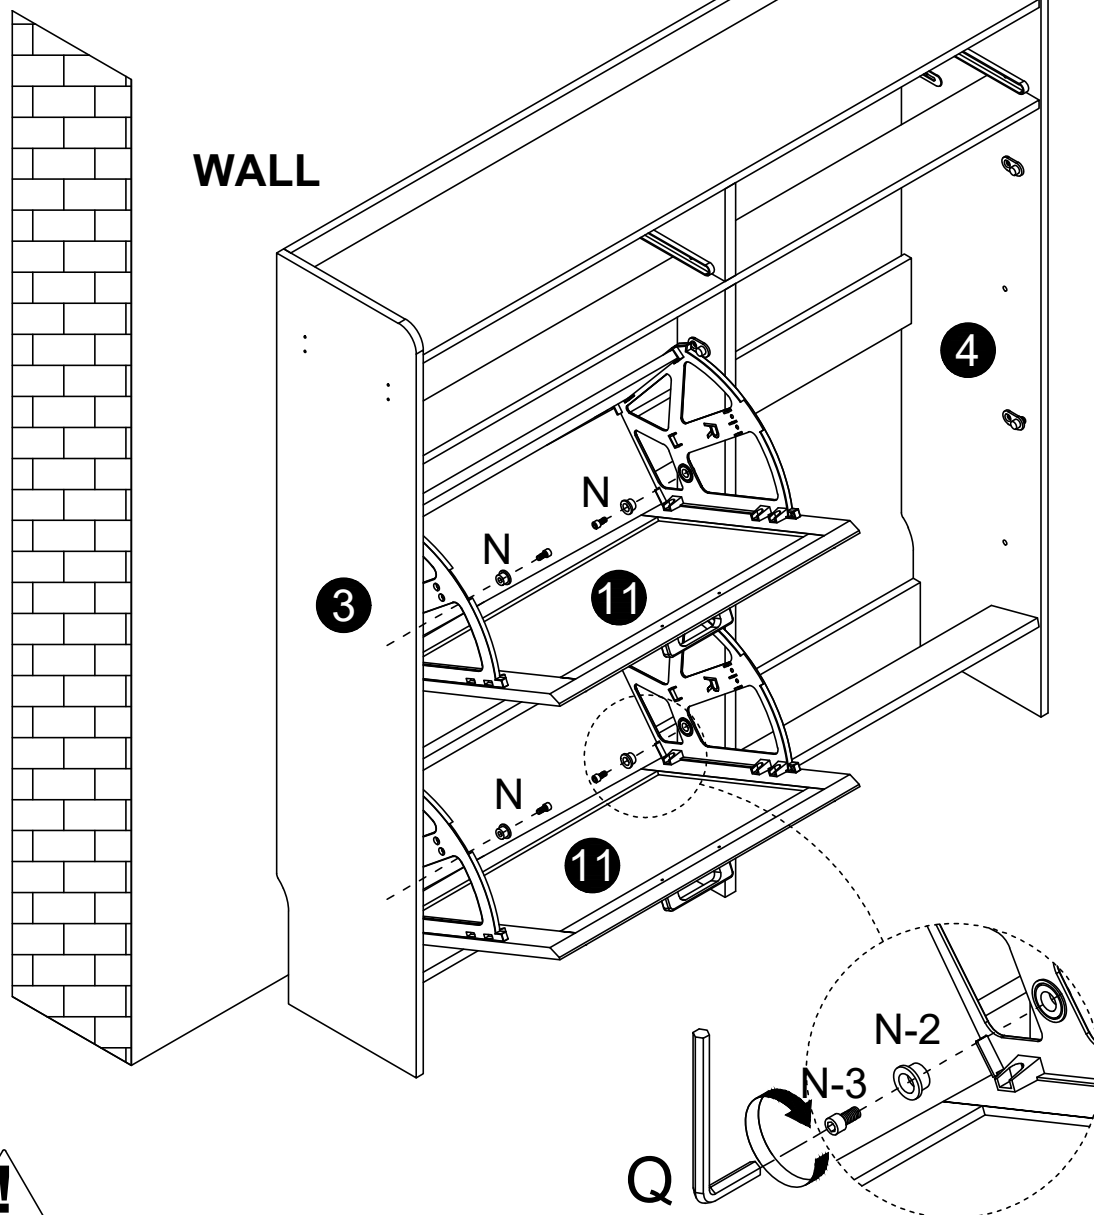


Please do not forcefully lock the installation screws to the maximum limit to avoid damaging the side panel.



WALL

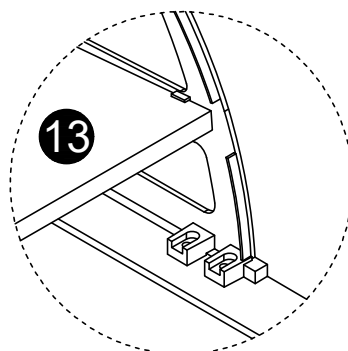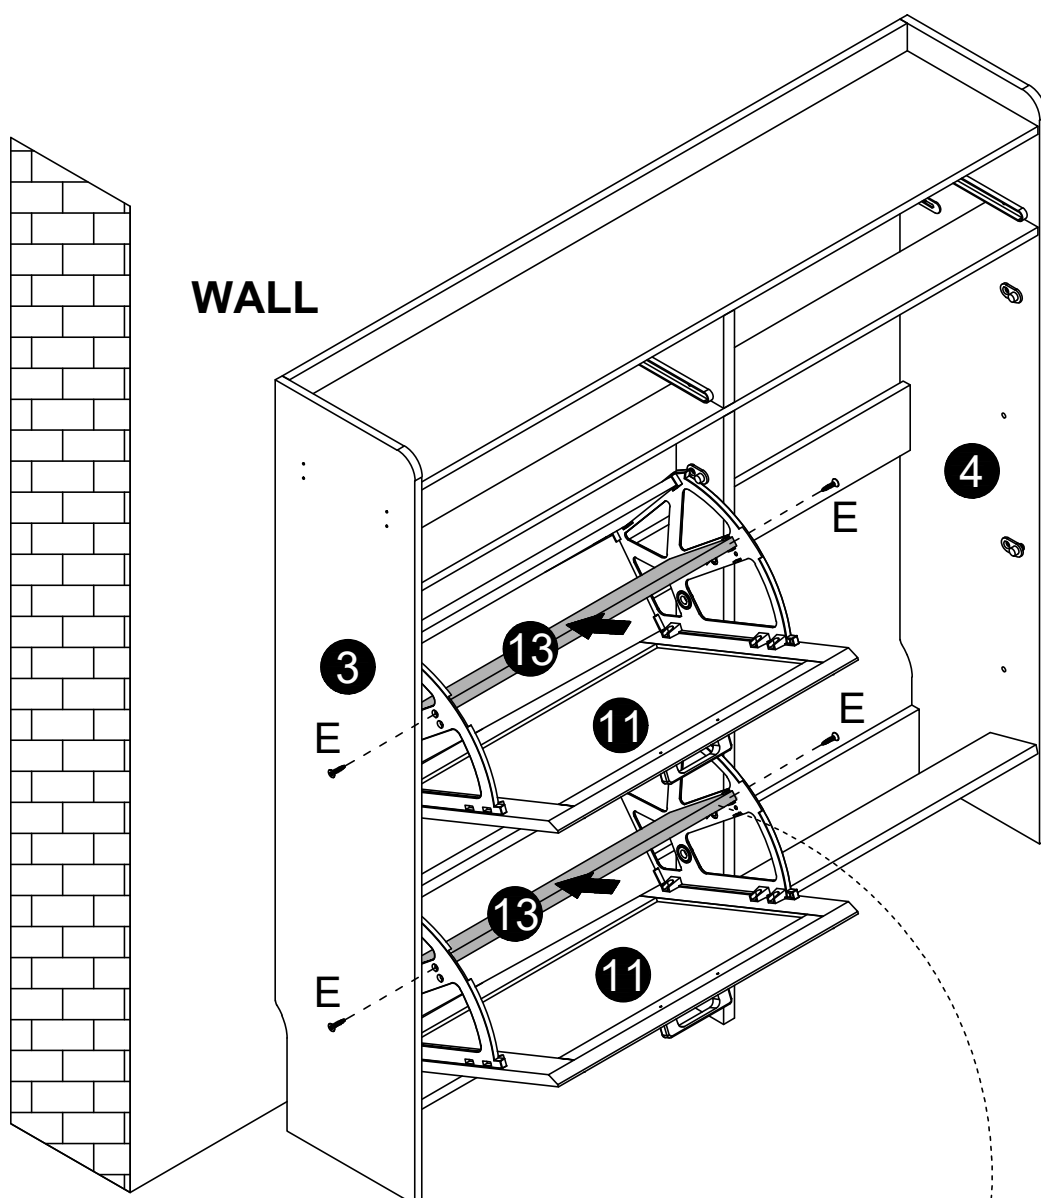

OR

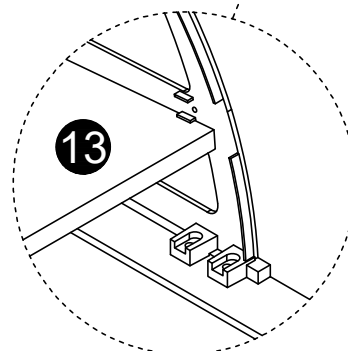




N-2



N-3


N x4



Q x1





If the installation cannot be placed in the correct position, please try operating at other inclined angles.

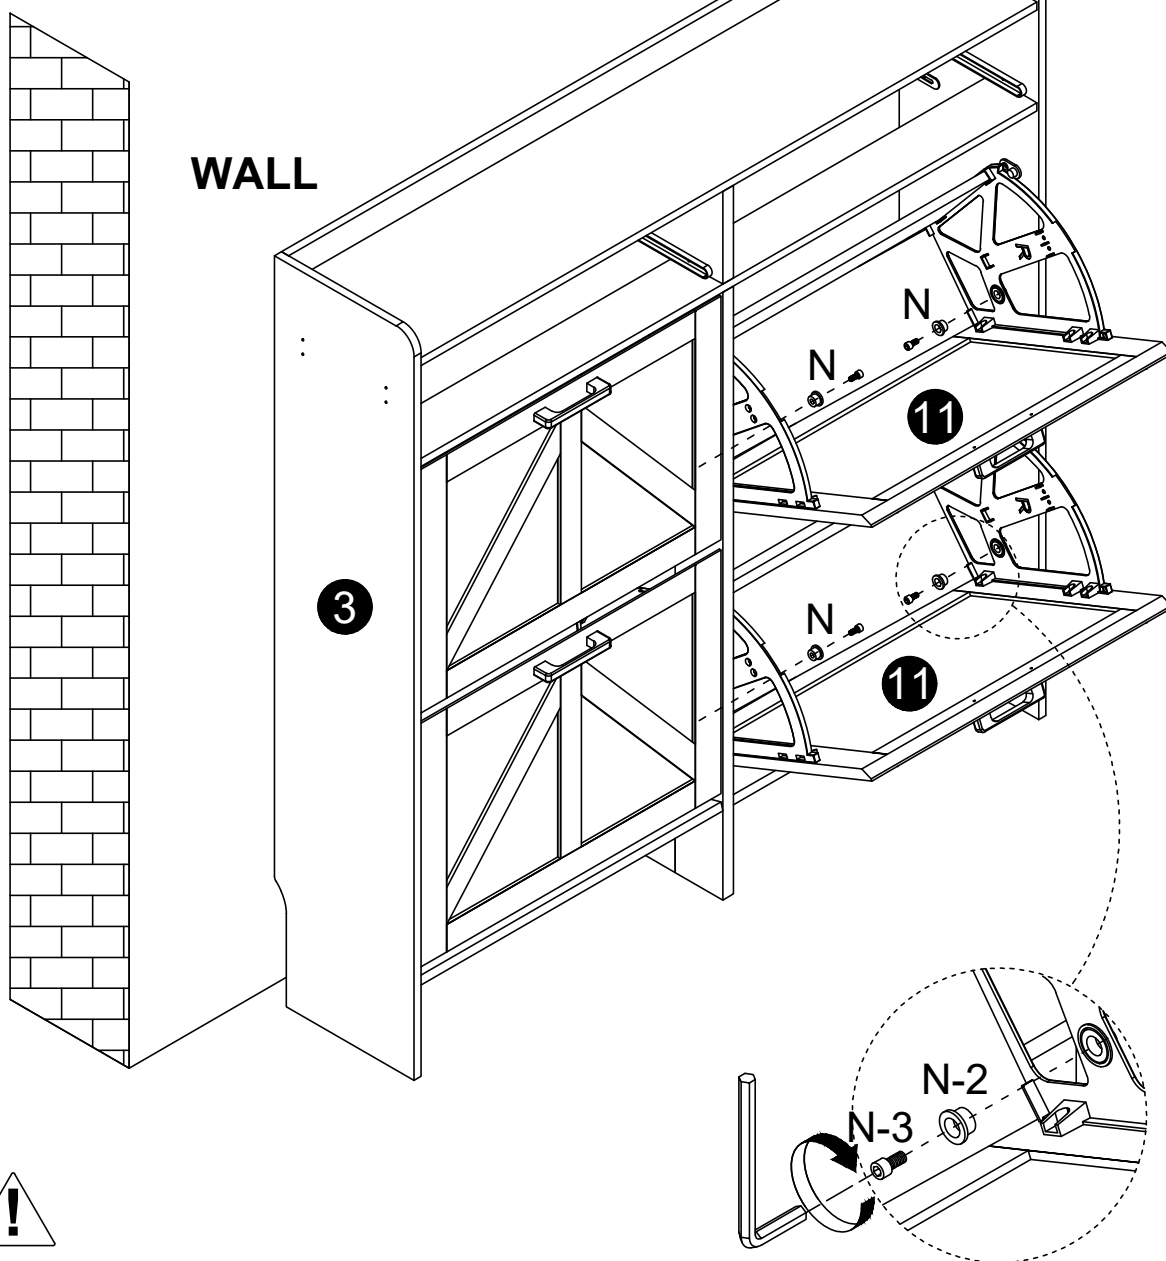


Please do not forcefully lock the installation screws to the maximum limit to avoid damaging the side panel.




WALL

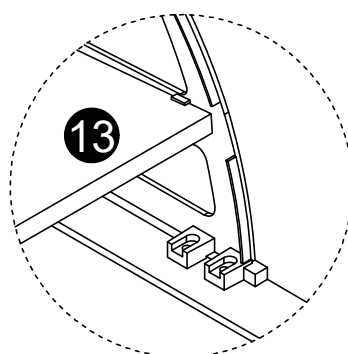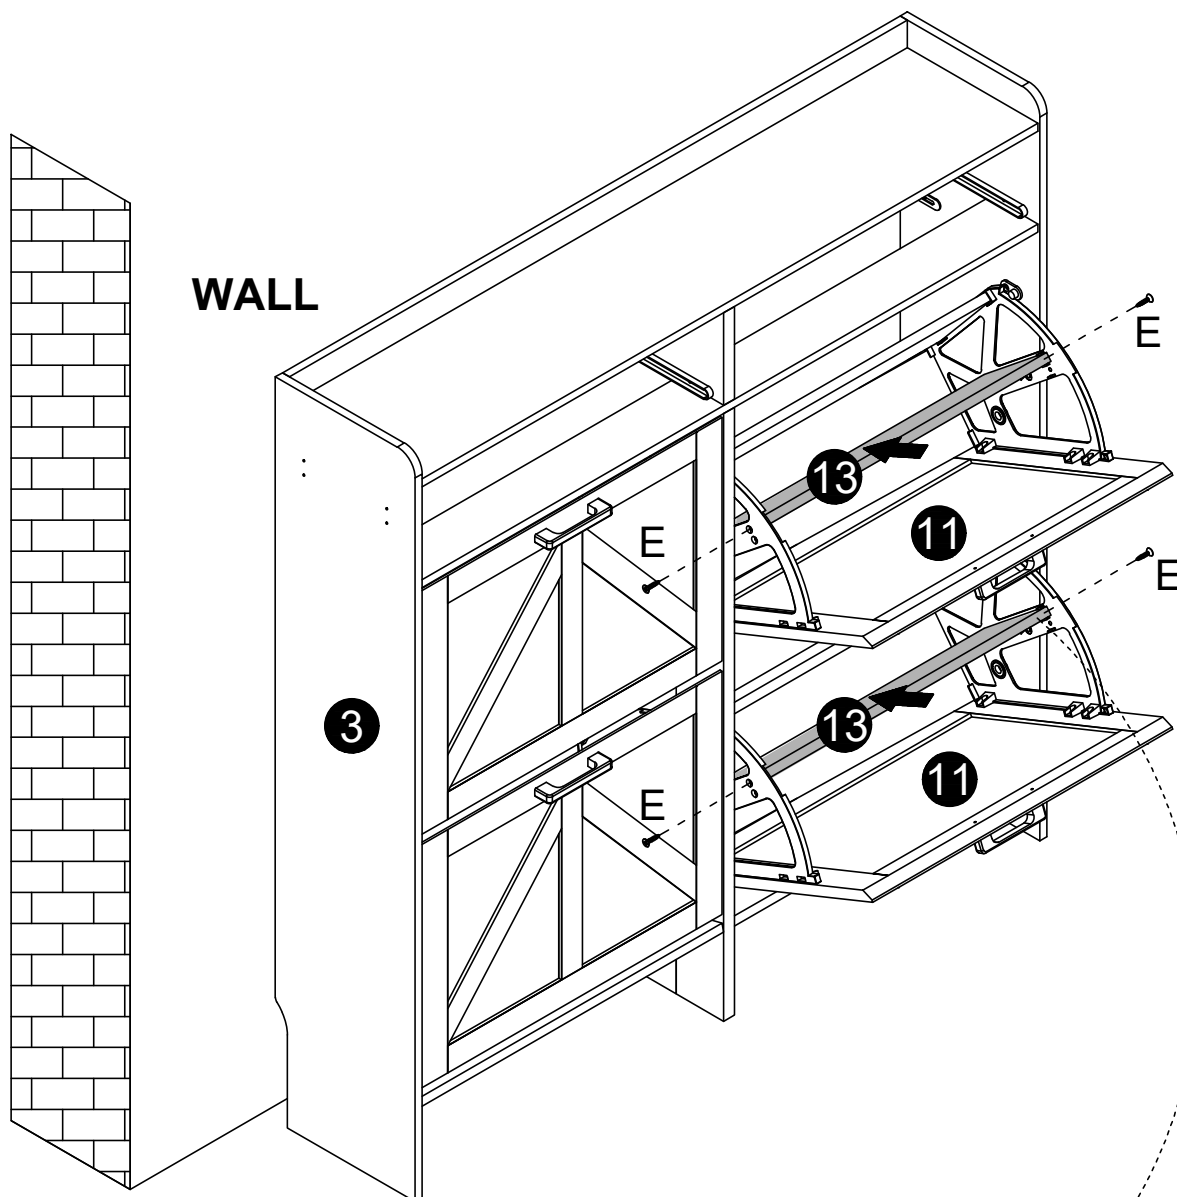



OR

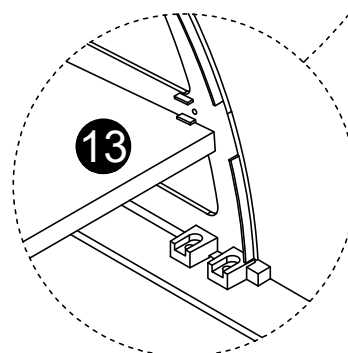

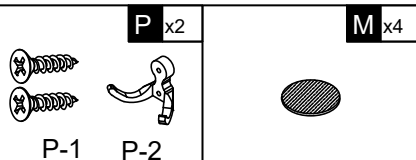

Component P can be freely installed on either panel 3 or panel 4.

The excess holes are allowed to be covered by component M.

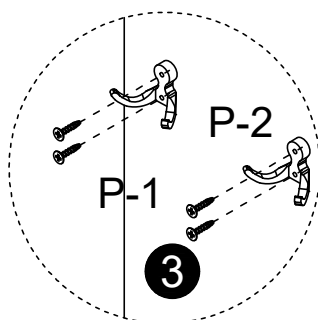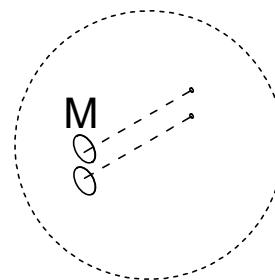

OR

