



ASSEMBLY INSTRUCTIONS













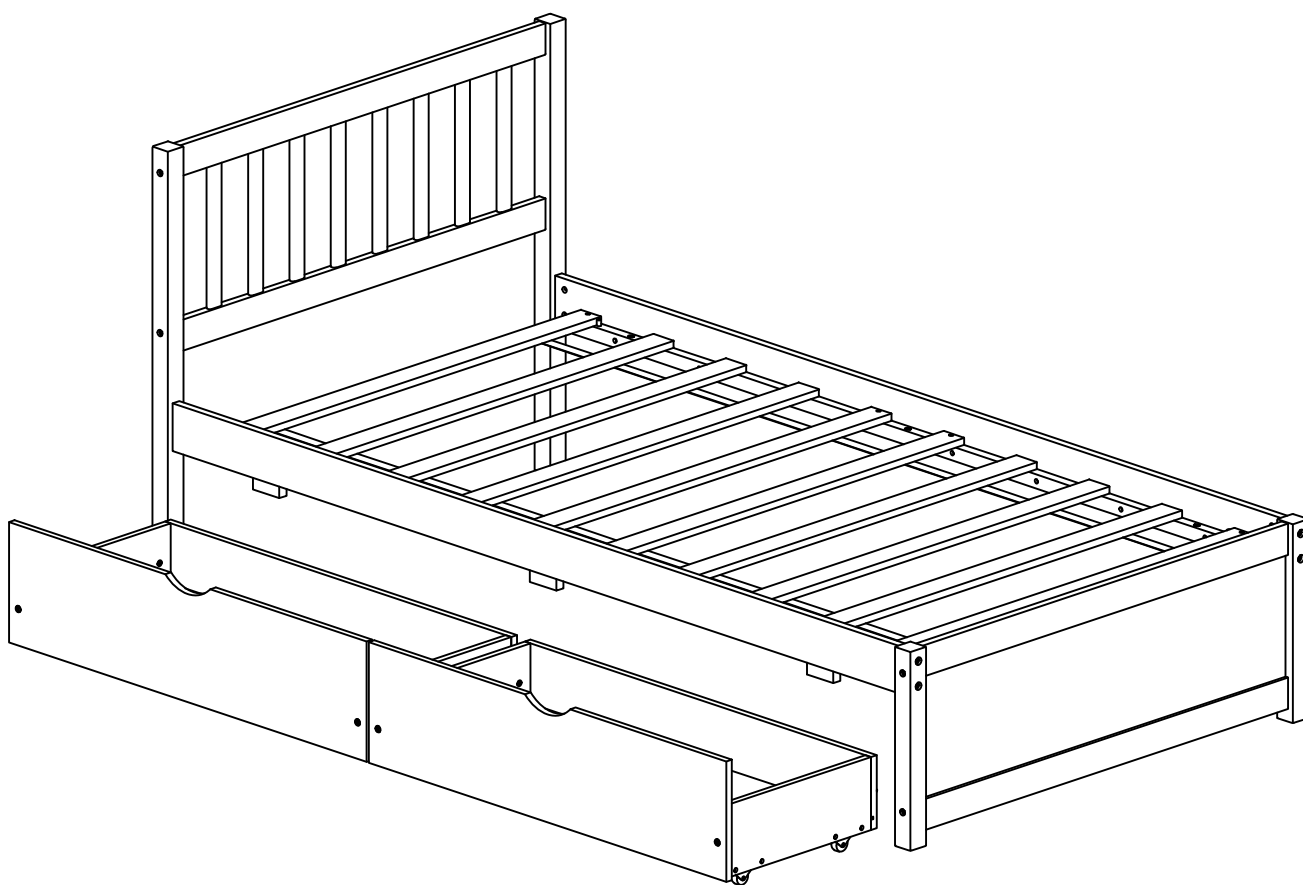


YX7103






Detail View

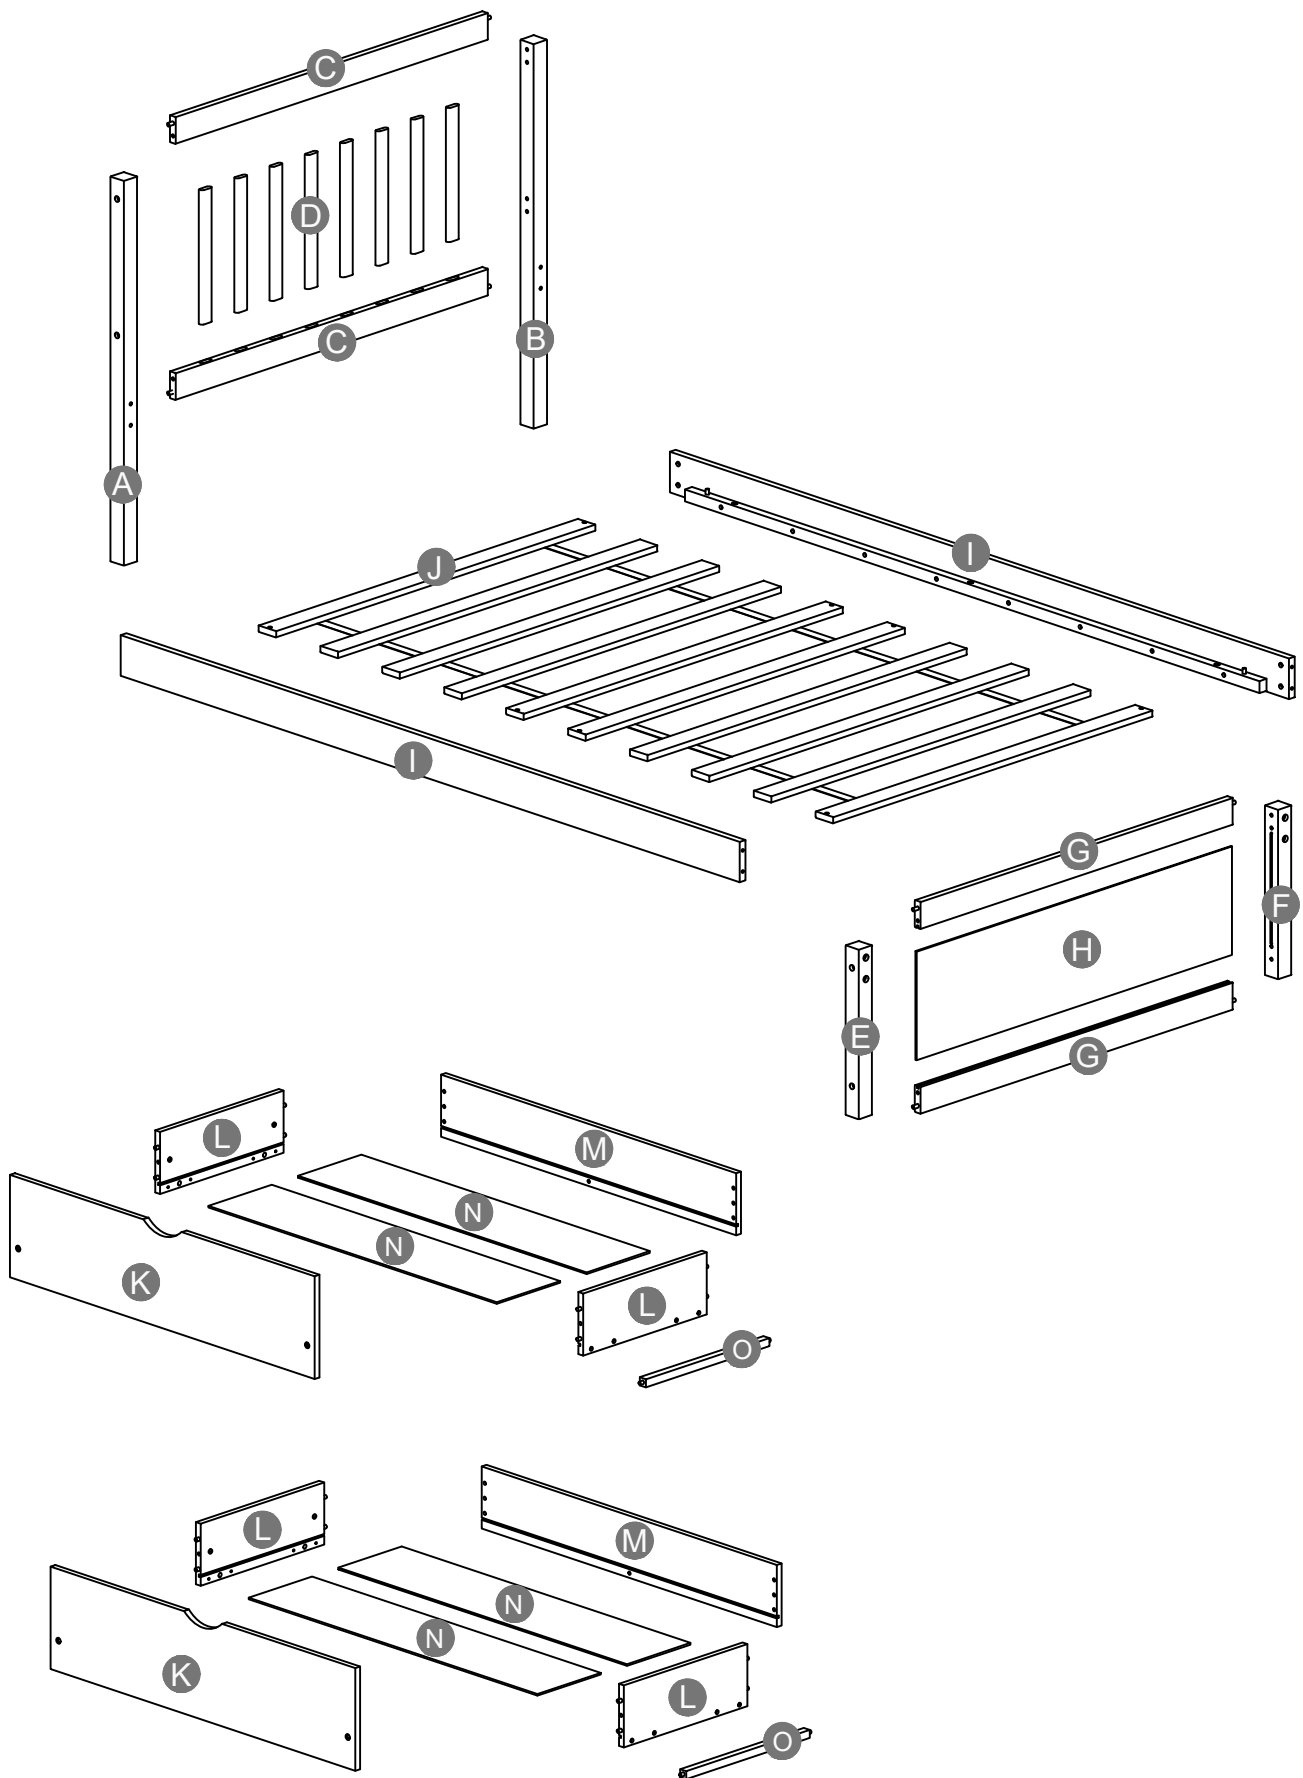


Part List

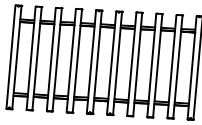A  Headboard leg (Left)-1pc	B  Headboard leg (Right)-1pc	C  Horizontal bar HB-2pcs
D  Vertical bar HB-8pcs	E  Footboard leg (Left)-1pc	F  Footboard leg (Right)-1pc
G  Horizontal bar FB-2pcs	H  Footboard panel-1pc	I  Side rail-2pcs
J  Slat-10pcs	K  Front panel of drawer - 2pcs	L  Side panel of drawer - 4pcs
M  Back panel of drawer - 2pcs	N  Bottom panel of drawer-4pcs	O  Crossprece-2pcs


Hardware List

1	(Spare Hardware-2pcs)  (Ø12)1/4"*70mm Hex-Head bolts (18pcs)	2	(Spare Hardware-2pcs)  1/4"*15mm Horizontal-Hole bolts(18pcs)	3	 Ø8*25mm Wood dowel (7pcs)
4	(Spare Hardware-1pc)  Ø4*32mm Wood screws (9 pcs)	5	 (1/4")4*60mm Allen key (1pc)	6	(Spare Hardware-1pc)  Ø4*25mm Wood screws (18 pcs)
7	(Spare Hardware-1pc)  (Ø12)1/4"*55mm Hex-Head bolts (12pcs)	8	(Spare Hardware-1pc)  1/4"*12mm Horizontal-Hole bolts(9pcs)	9	(Spare Hardware-1pc)  Ø10*20mm Wood dowel (9pcs)
10	 100*53*19mm Wheels (8pcs)	11	 70*38*19mm Stopper (3pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




(Phillip head screwdriver)

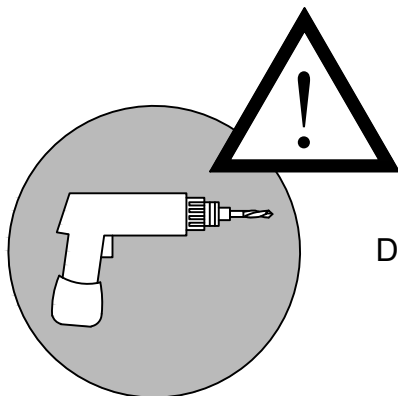

DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !



Remark: We recommend you assemble your bed in the flat ground.

STEP 1:

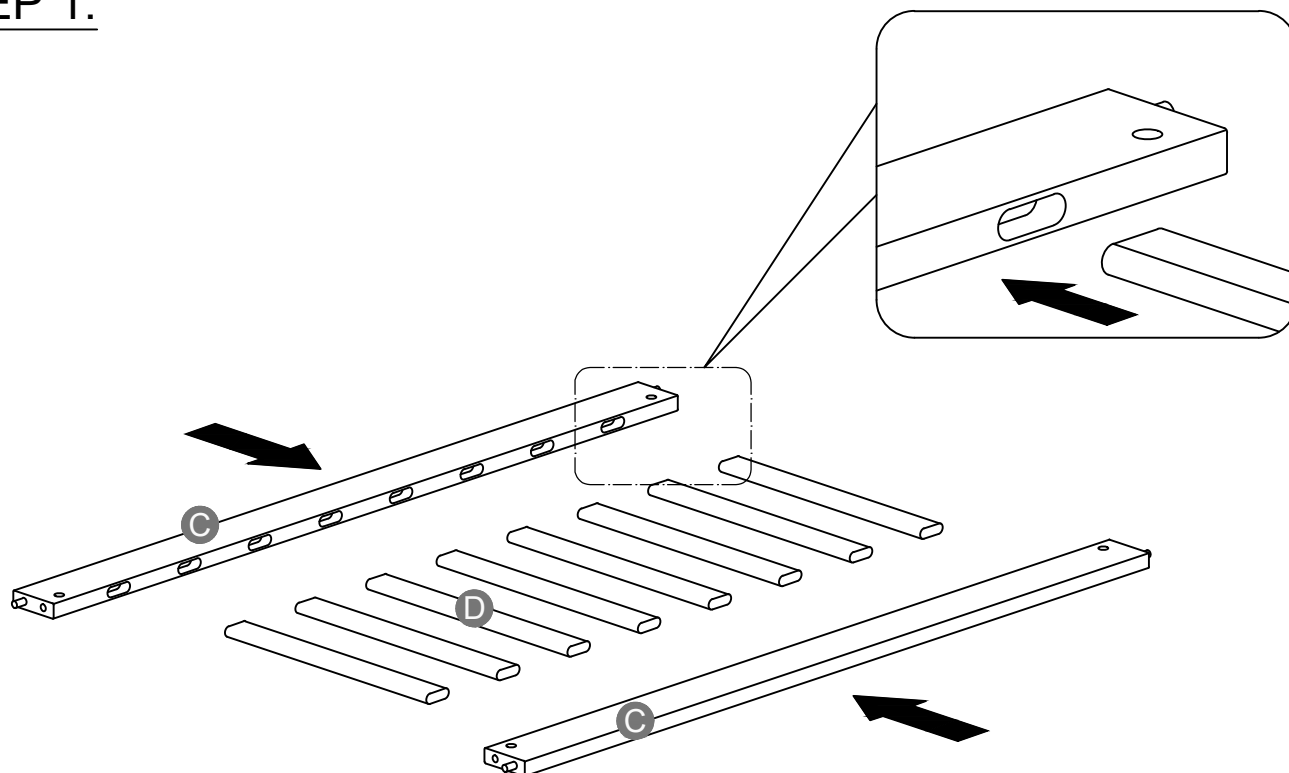


STEP 2:


1	2
	
4pcs	4pcs

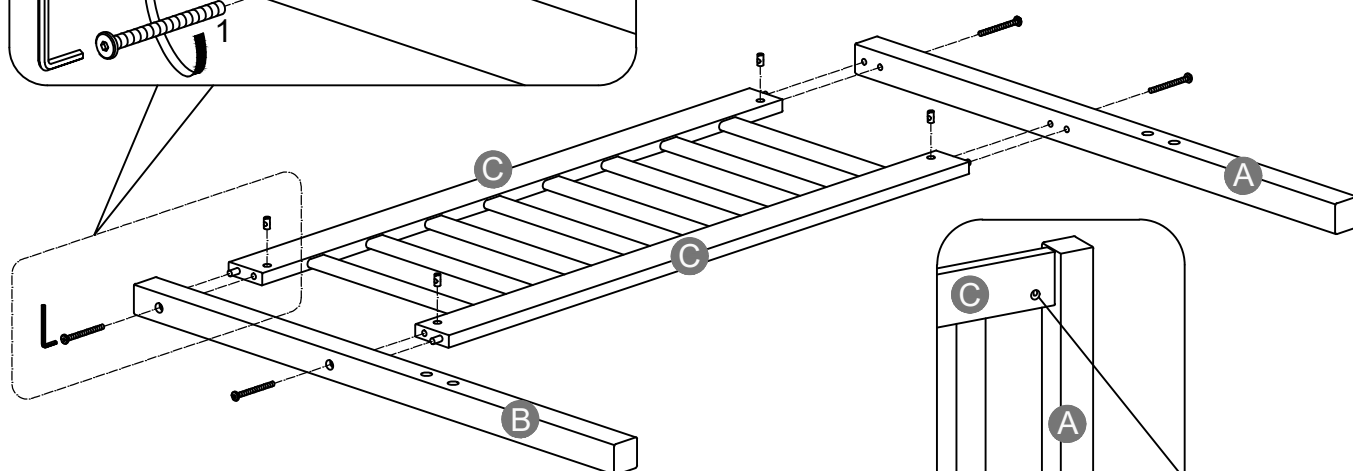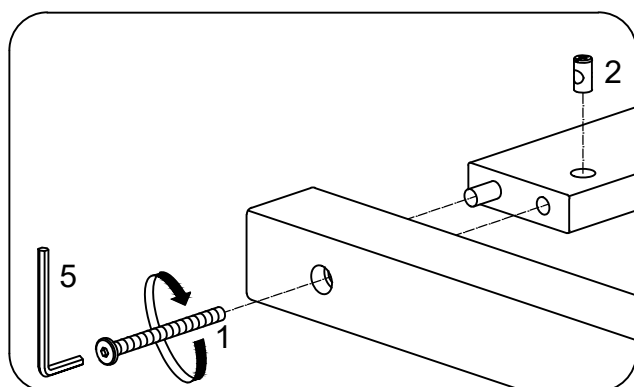


Note: Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened

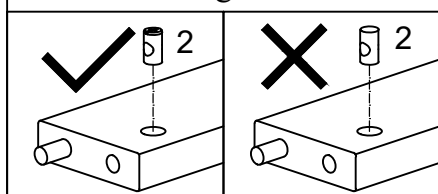


Make sure bars A,B,C are connected together on the same side (front-front, back-back)

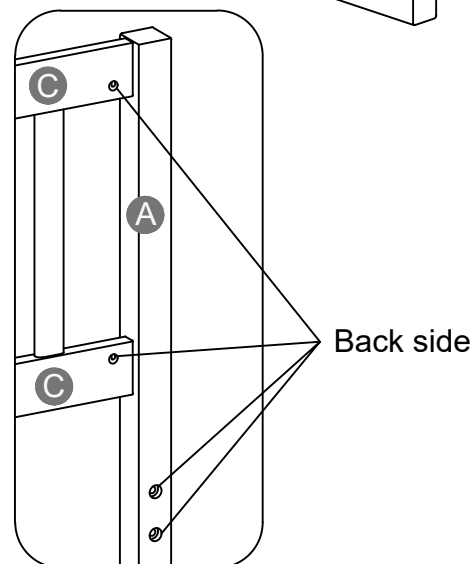

STEP 3:

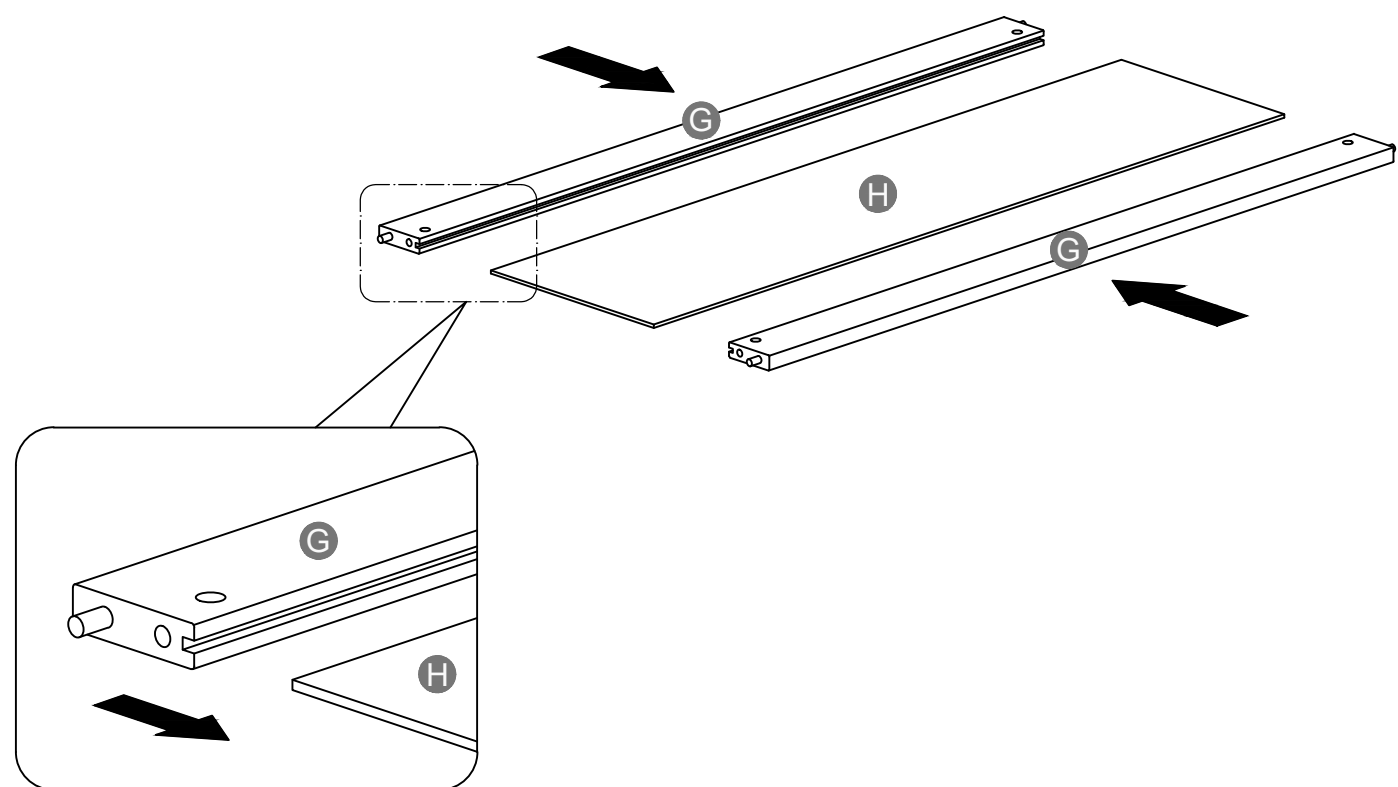


STEP 4:

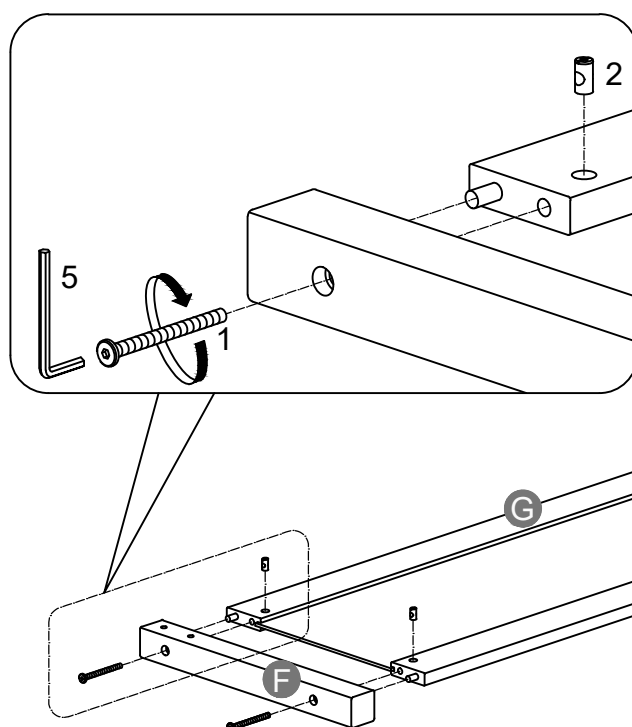


1	2
	
4pcs	4pcs


Note: Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened

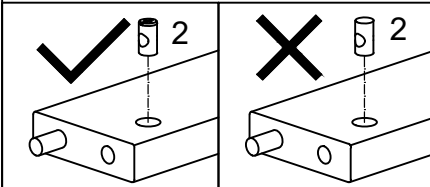

Make sure bars E,F,G are connected together on the same side (front-front, back-back)

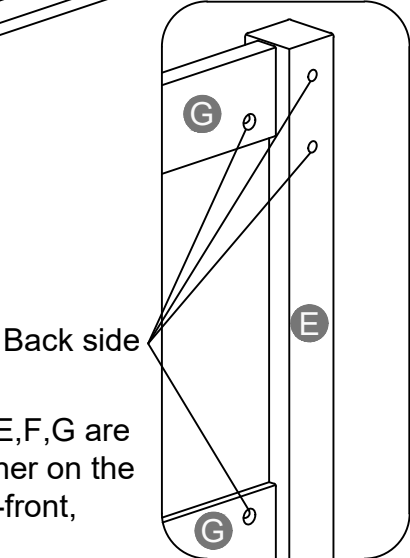

STEP 5:

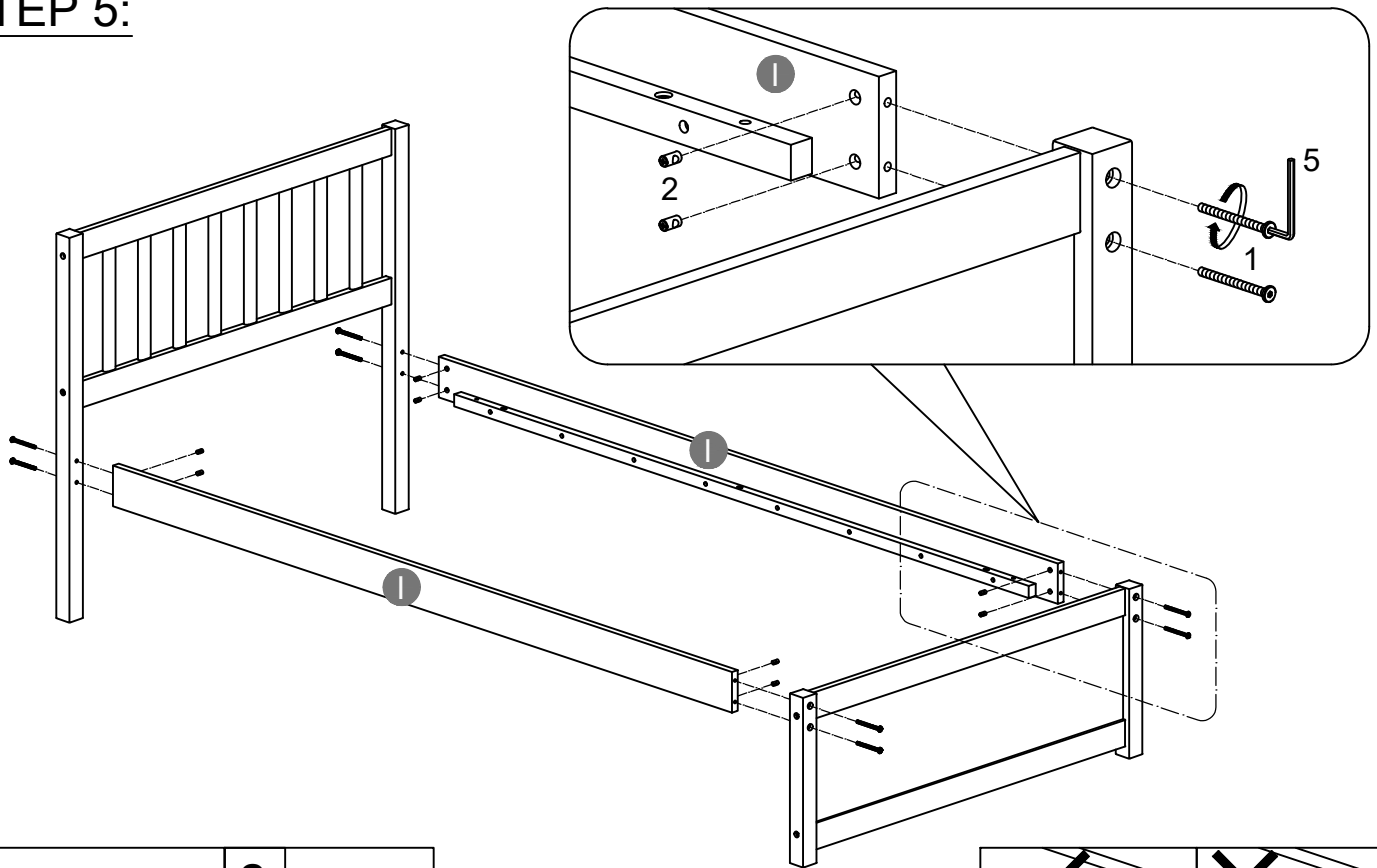

1




8pcs

2




8pcs


Note: Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened

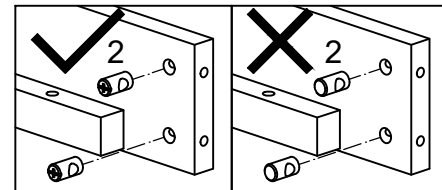

STEP 6:

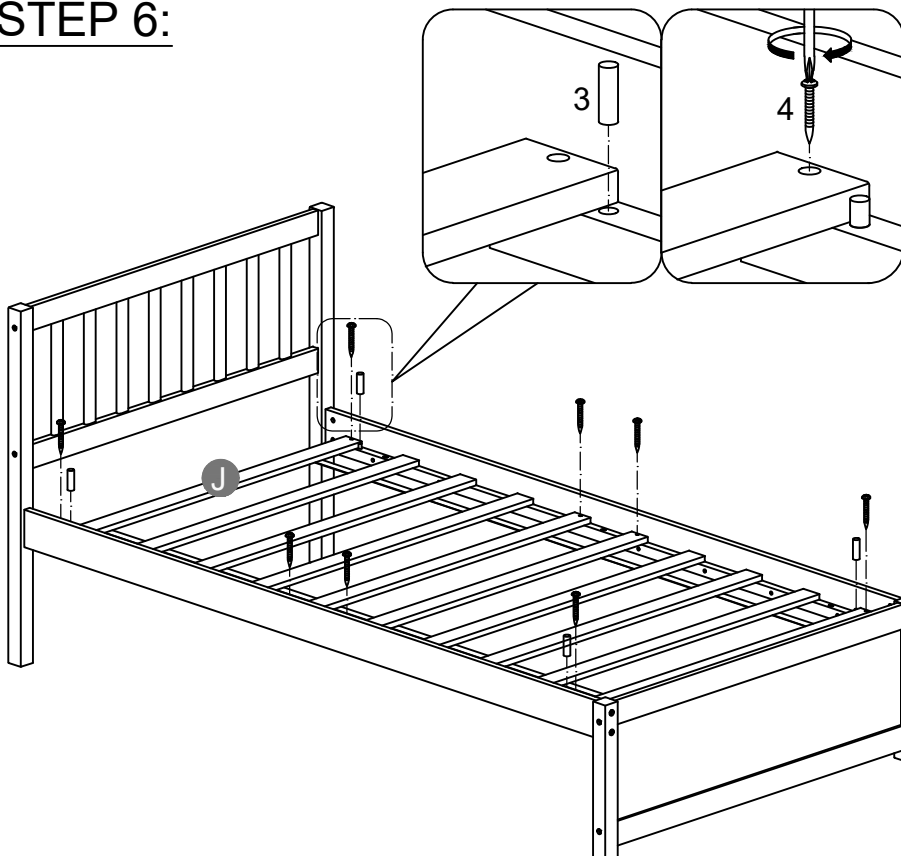

3





4pcs

4




8 pcs

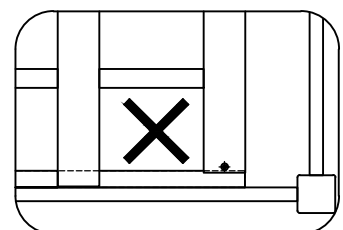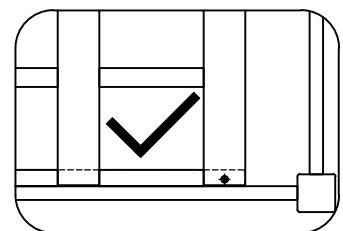

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 7:

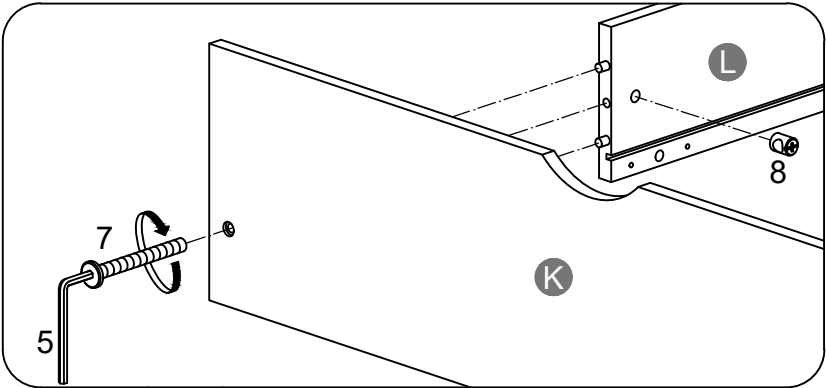

7




4pcs



8






4pcs

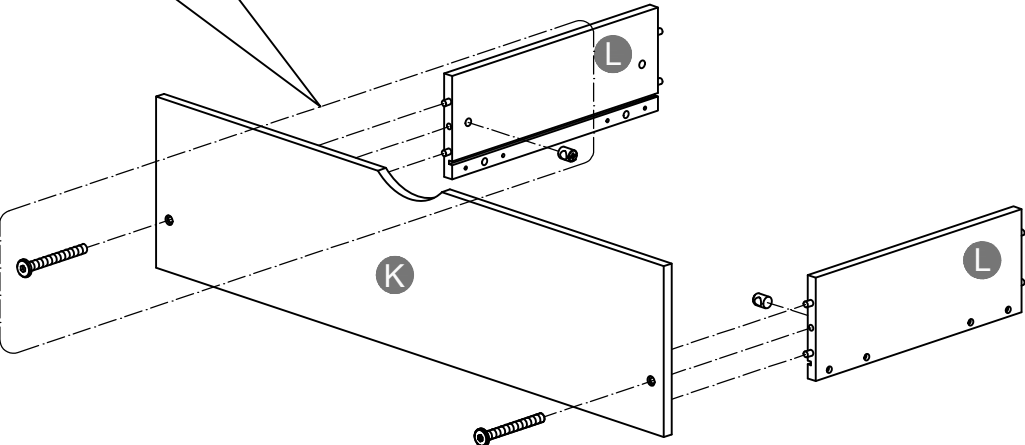

Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

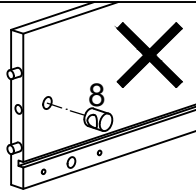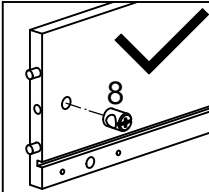


STEP 8:

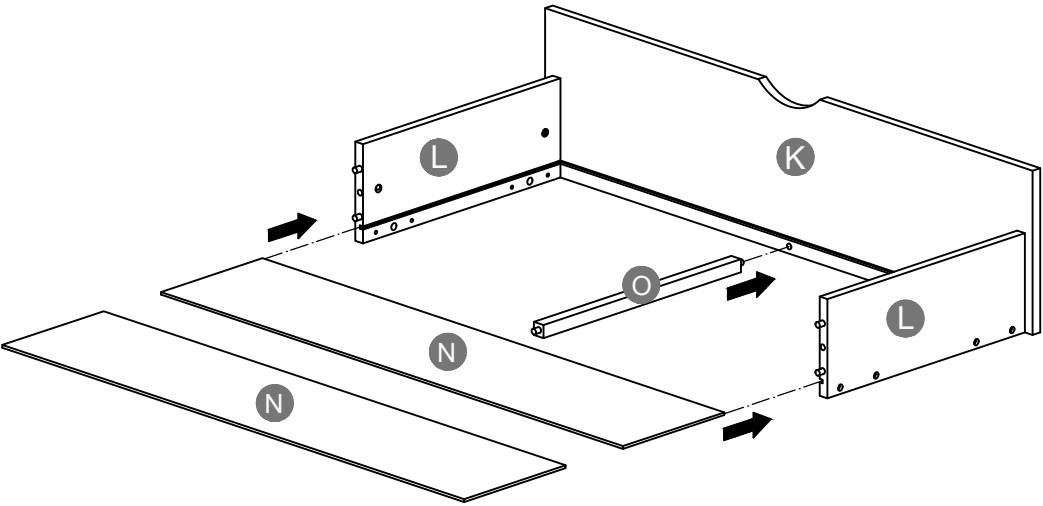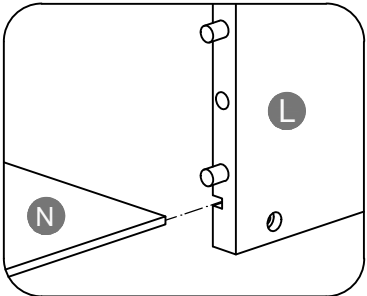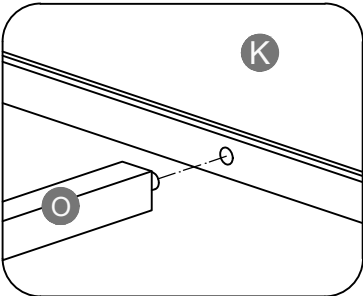


STEP 9:

7	8
	
4pcs	4pcs

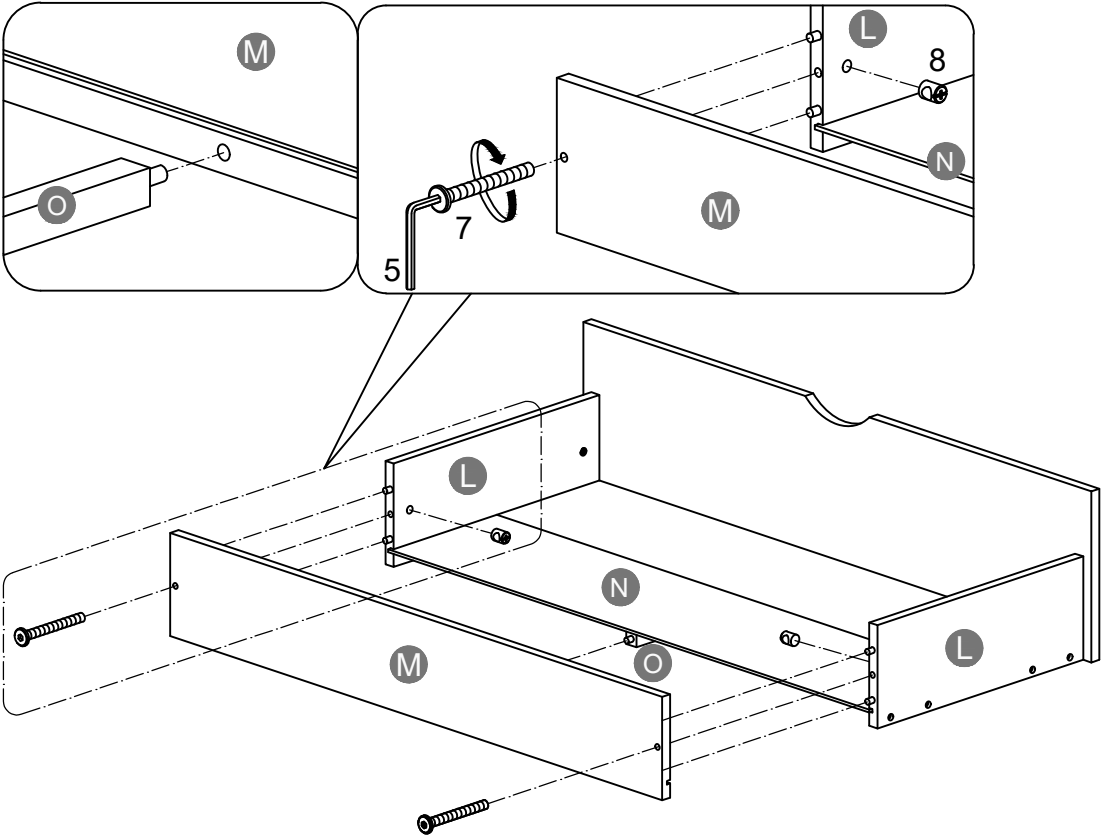

Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

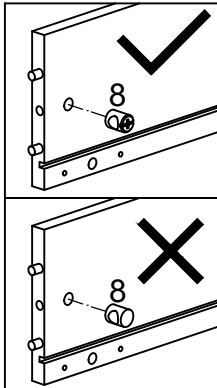


STEP 10:

6


16 pcs
9

8pcs
10


8pcs


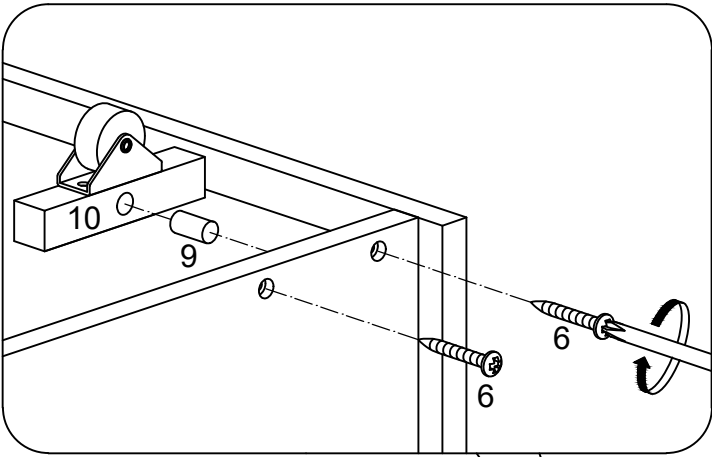



STEP 11:

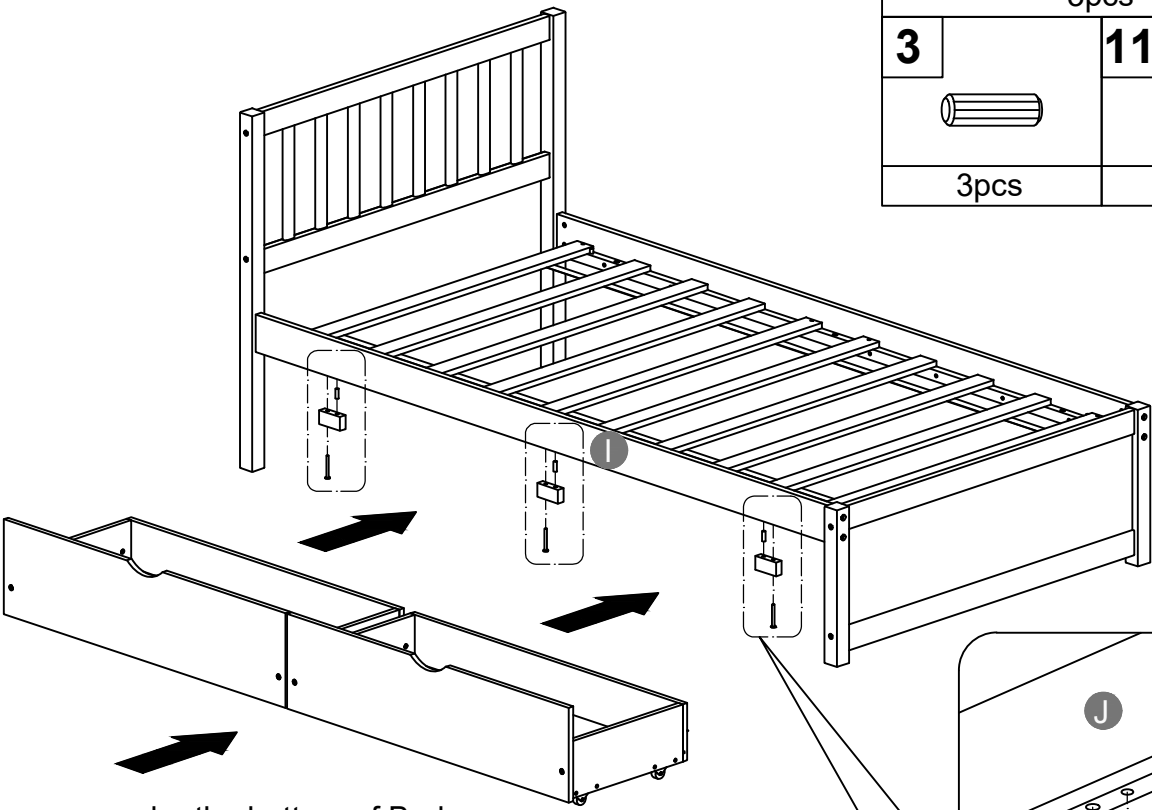

Push Drawers under the bottom of Bed.

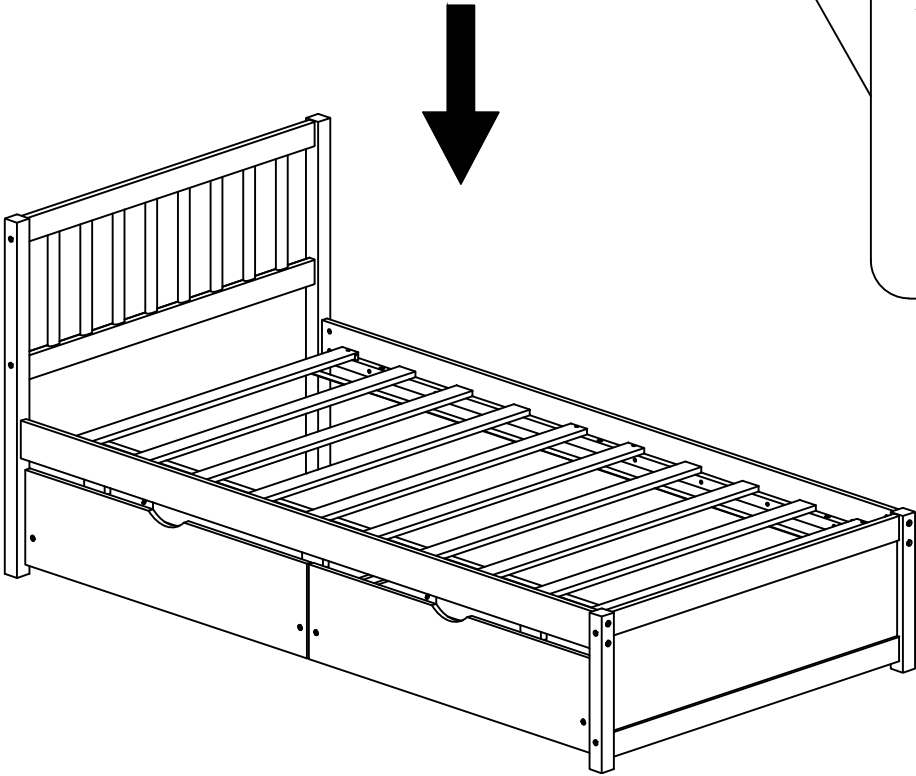

7			
		3pcs	
3		11	
3pcs		3pcs	

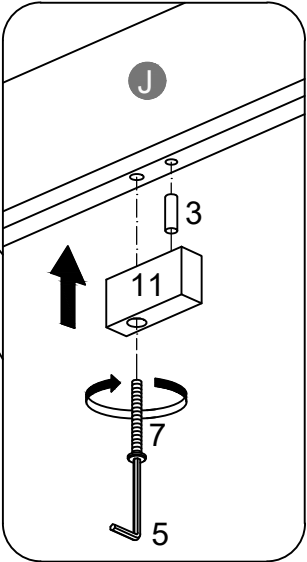

Make sure to tighten all the screws of the bed.