


Installation Instruction

Shower Door

Model: DFNSW23-48/54/60/66IN
DFNSW23-60IN-TUB

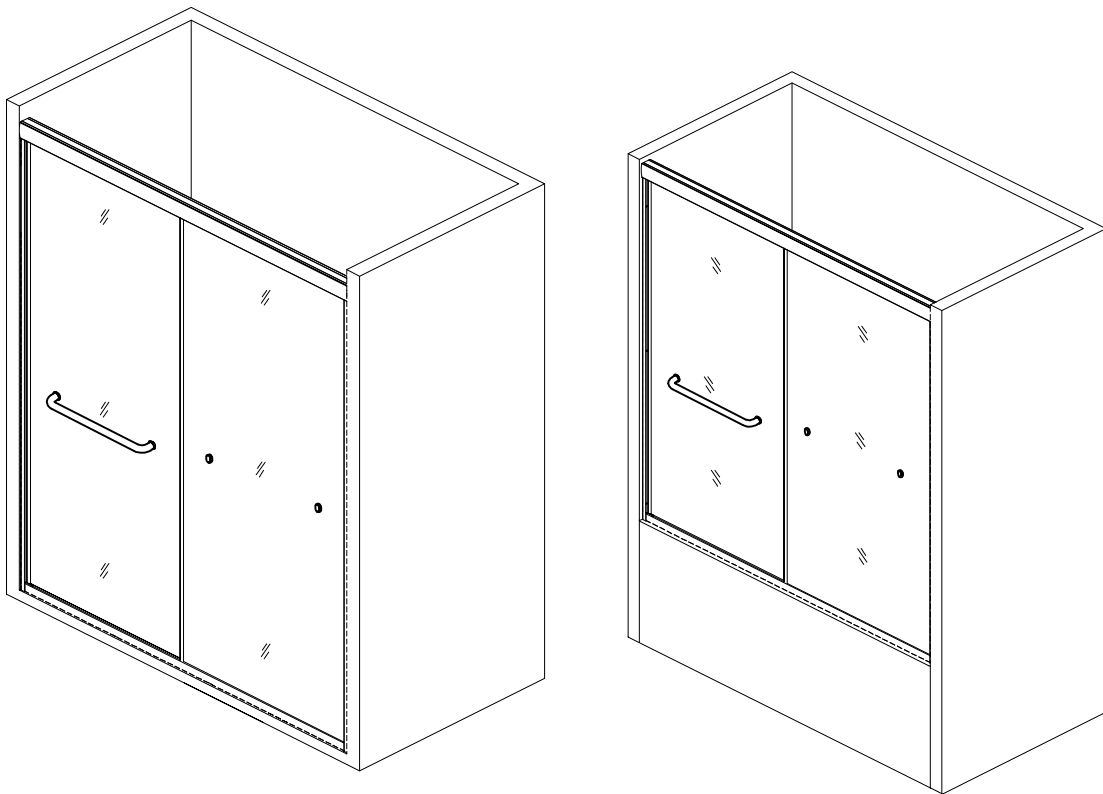

If you have any questions about this shower door,
please contact us at support@aefta.com
Our professional team will respond within 24 hours.

Important

GENERAL INFORMATION & AFTERCARE

1. Inspection Upon Receipt

Inspect the product immediately for any transit damage, missing parts, or manufacturing defects. Claims for damages reported after confirmation of receipt will not be honored. Handle the glass panels and components with care to avoid chips and cracks.

2. Pre-Installation Check


Before installation, ensure the installation surface (e.g. , shower curb, walls) is level, solid, plumb, and can support the door's full weight. Irregular surfaces may cause installation difficulties and operational issues. Some adjustments and drilling may be required.

Note: Protect the product's primary surfaces during installation to prevent scratches.


AFTERCARE INSTRUCTIONS

- Clean the shower door regularly with a soft cloth, warm water, and a mild, non-abrasive soap or glass cleaner.
- Avoid gritty, abrasive, or harsh-chemical cleaners. If strong chemicals must be used, test the cleaner on a small, inconspicuous area first, then rinse the area thoroughly.
- In hard water areas, dry the glass after use to prevent buildup.
- Retain this manual for future reference.

Tools Required

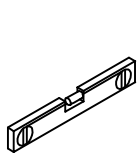


Level

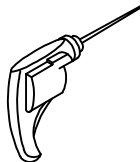

Electric Drill




Ø3(1/8")Drill Bit



Ø6(1/4")Drill Bit




Pencil




Rubber Mallet



Tape Measure





Cross Screwdriver

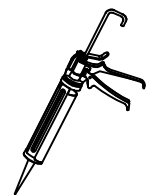


Silicone Gun

Explosion Diagram and Parts list

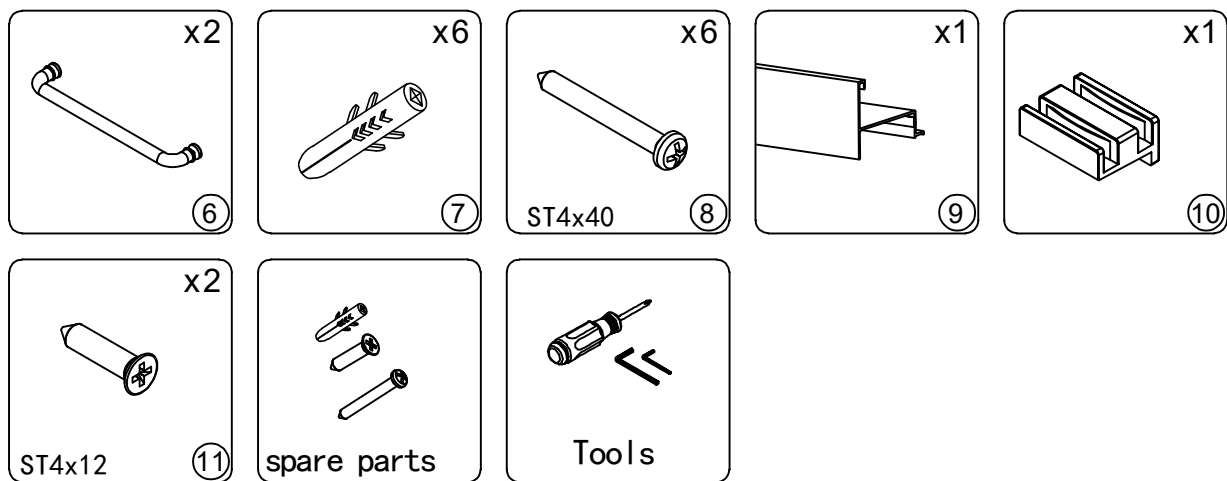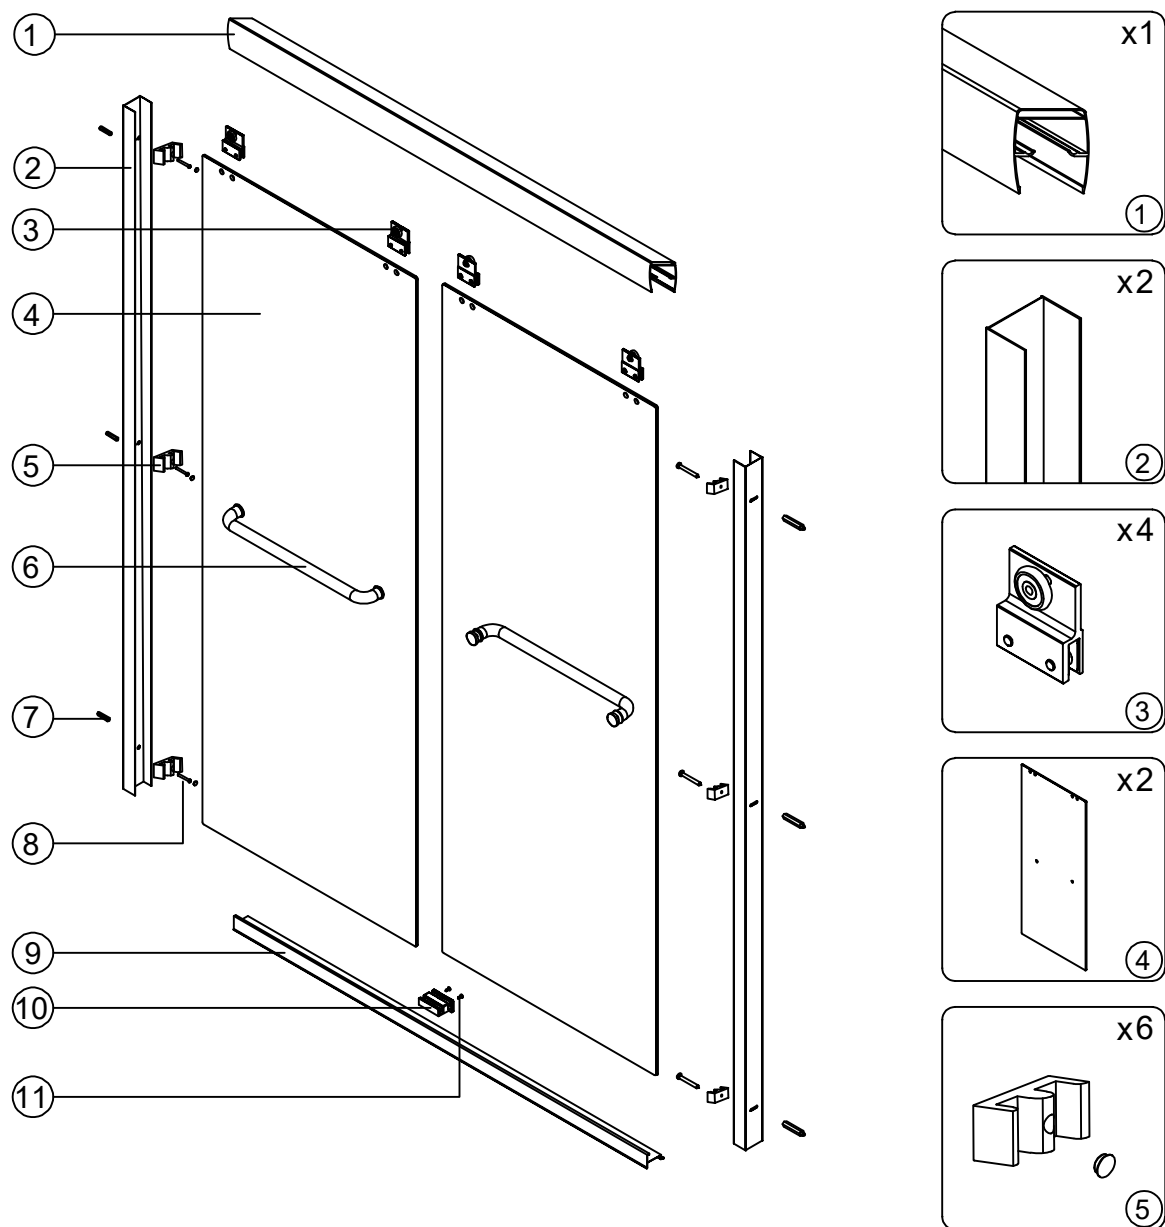

Installation steps

STEP1

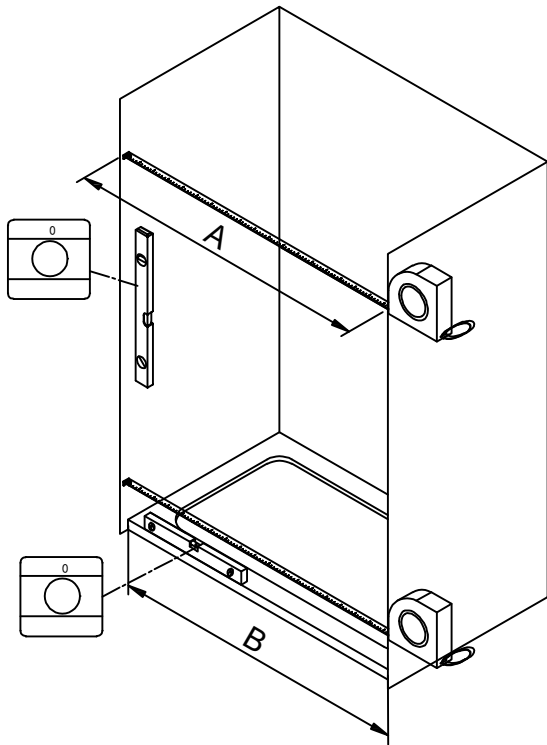


▲ Threshold must be level
Wall must be plumb.


STEP2

Model Length - Finished Opening(Length)
= Cut Off Length


Finished Opening (Length)	57"	58"	59"	60"
Cut Off Length	3"	2"	1"	/

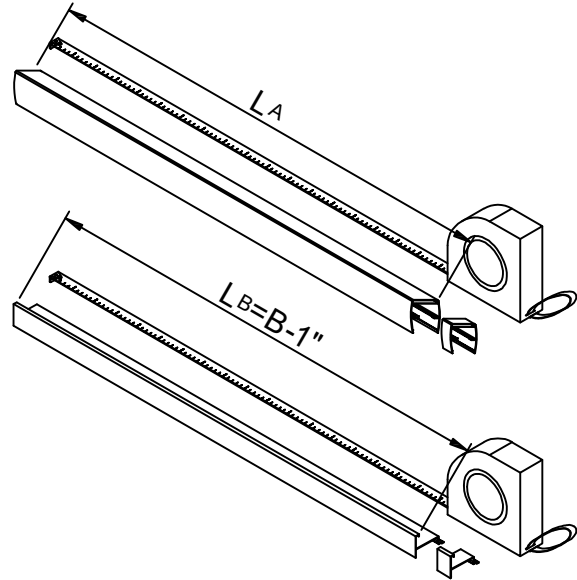

STEP3

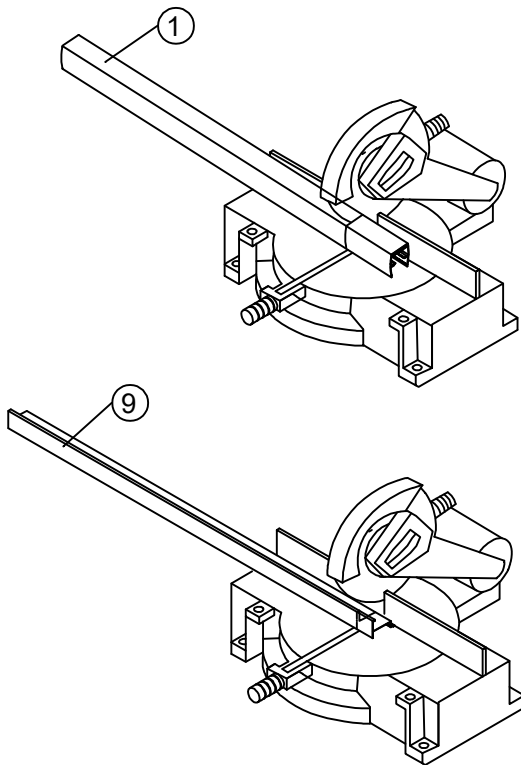


STEP4

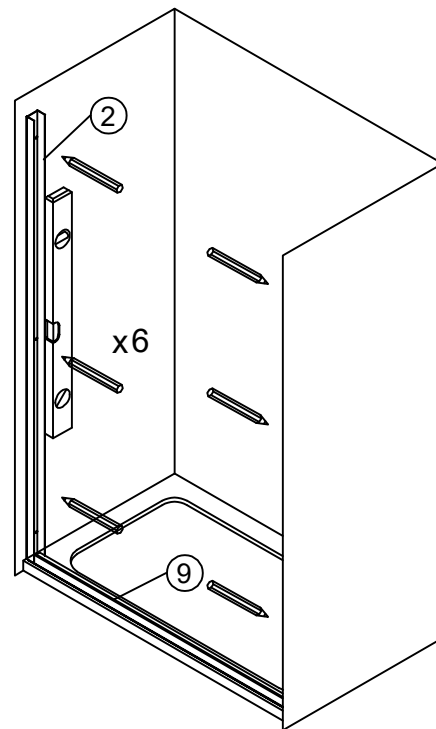


Installation steps

STEP5

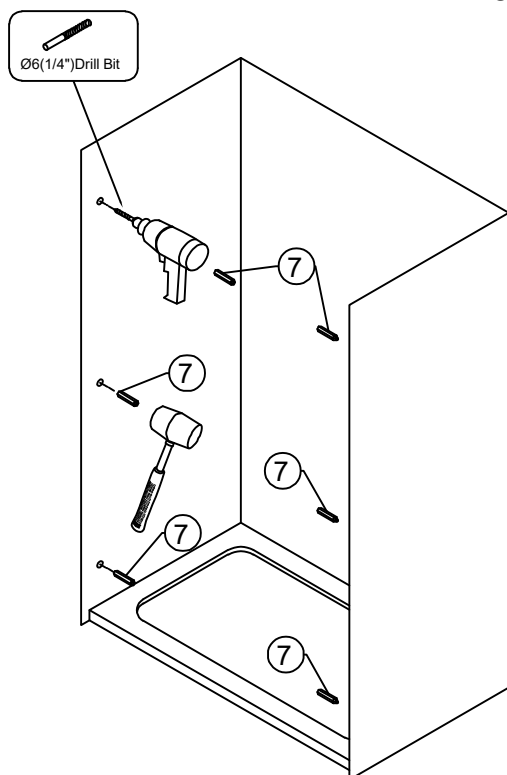


▲ Drill a hole first, then tap the adhesive granules into the wall.


STEP6

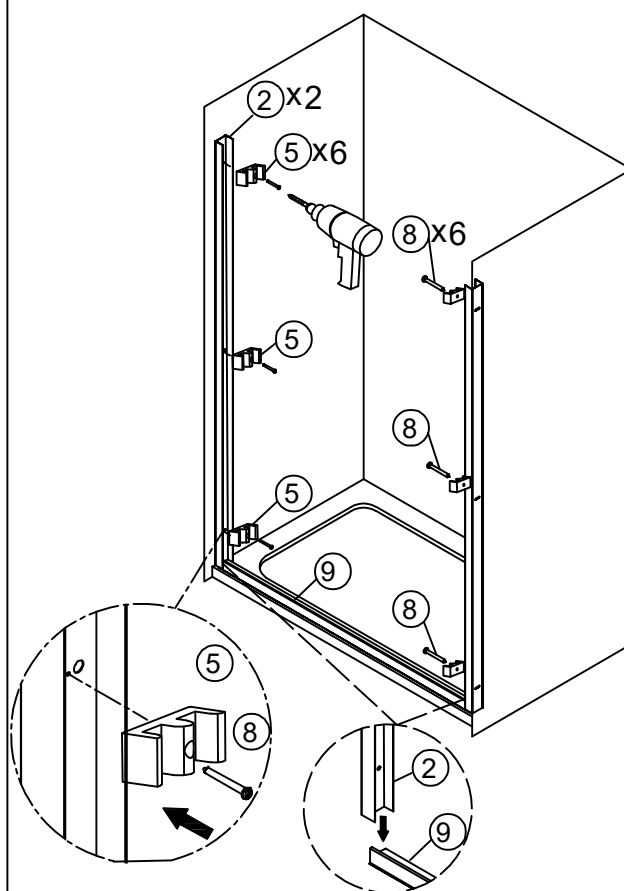

STEP7

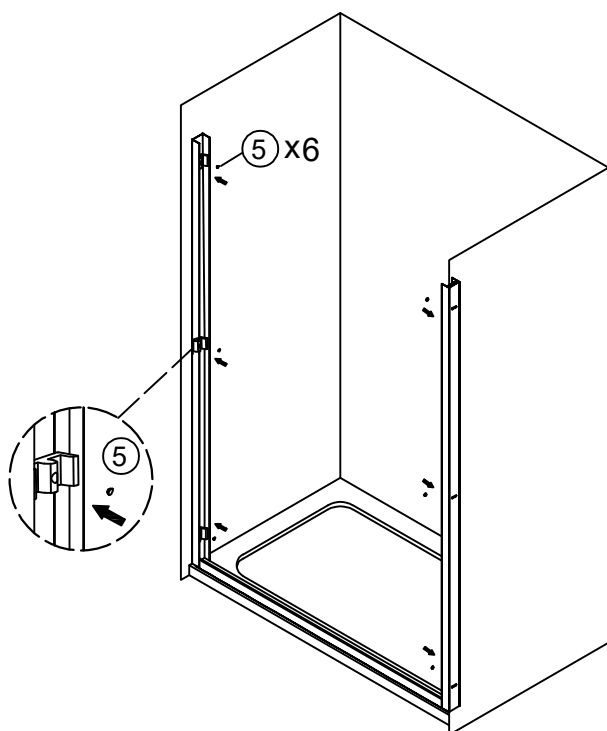


STEP8

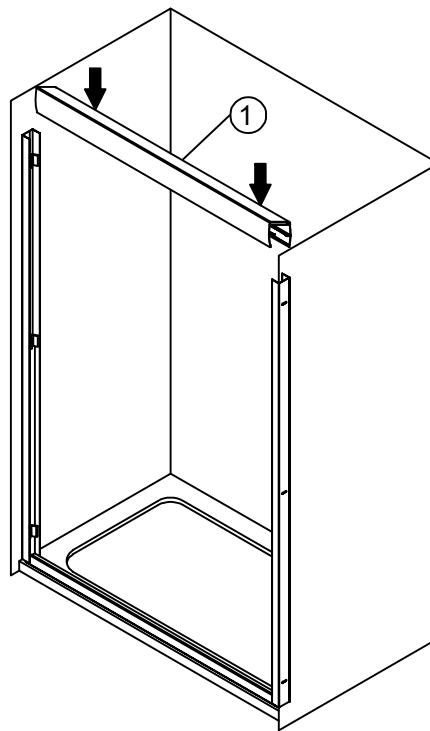


Installation steps

STEP9



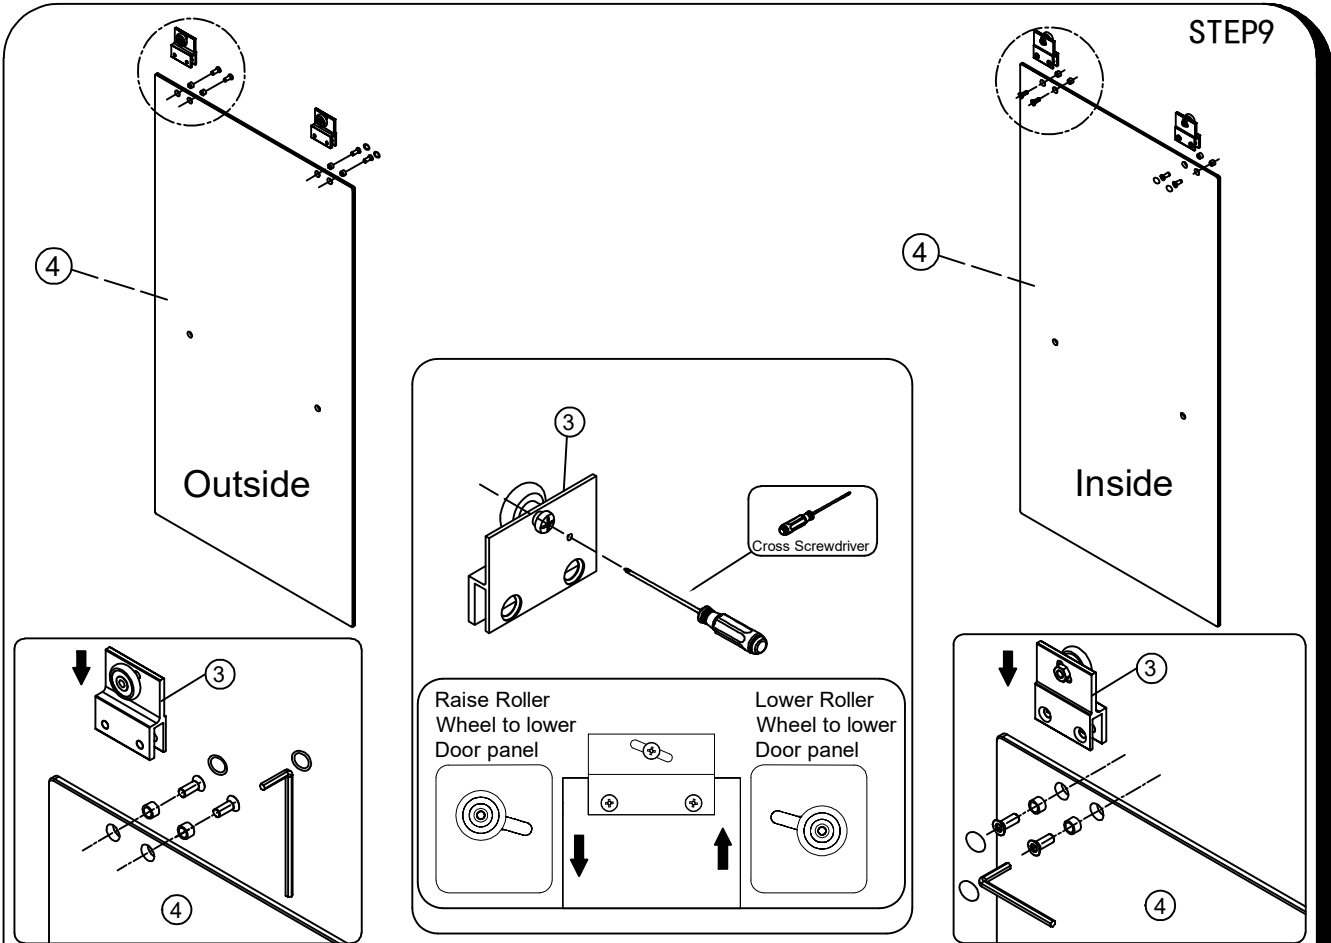


STEP10



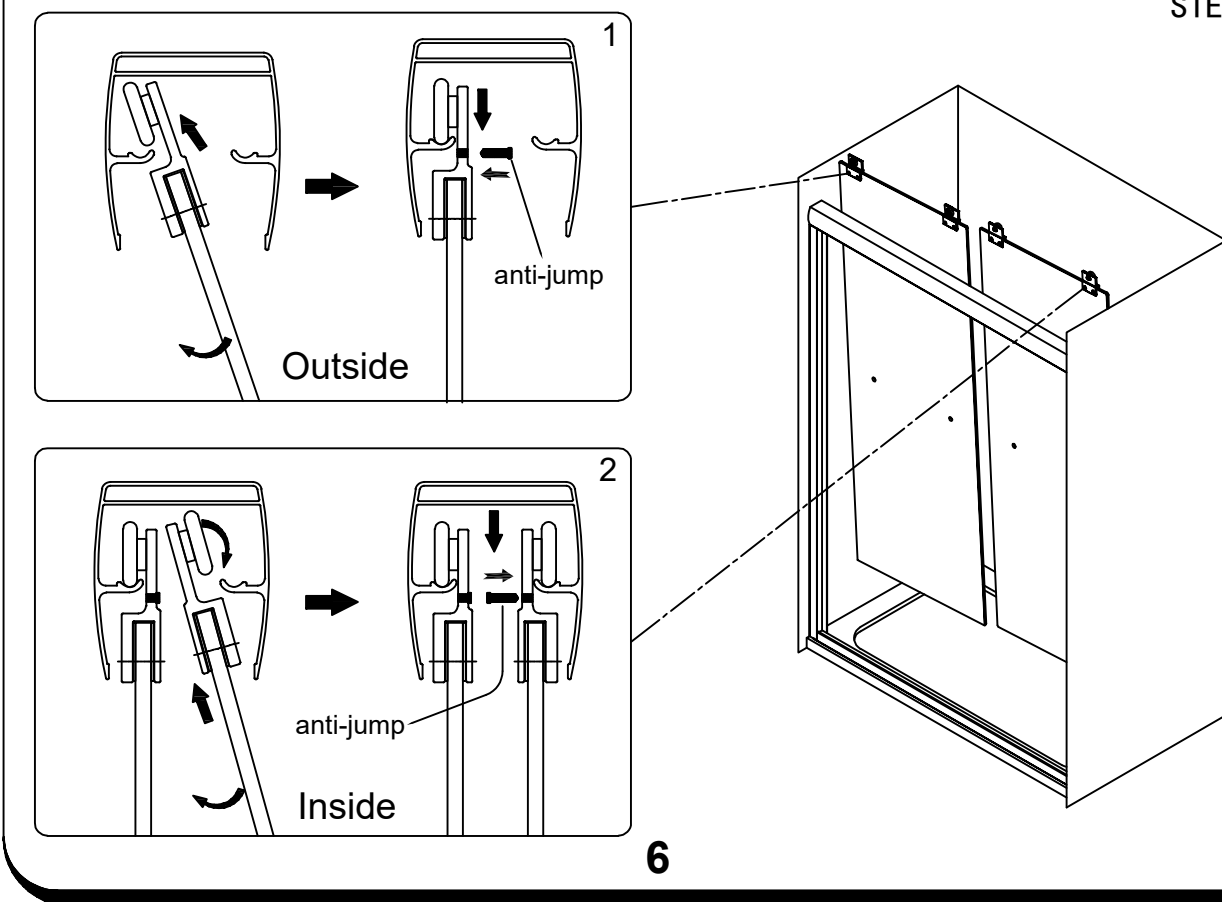


Installation steps


STEP11

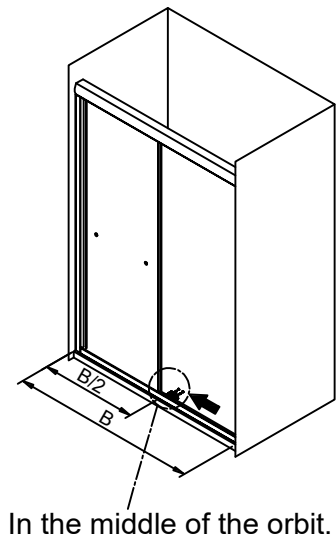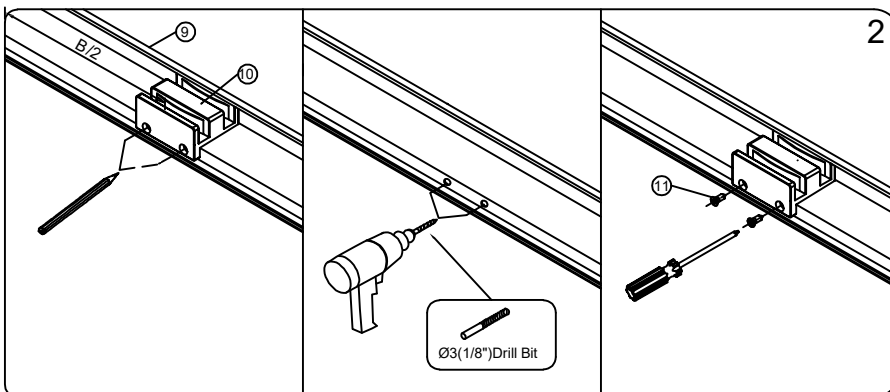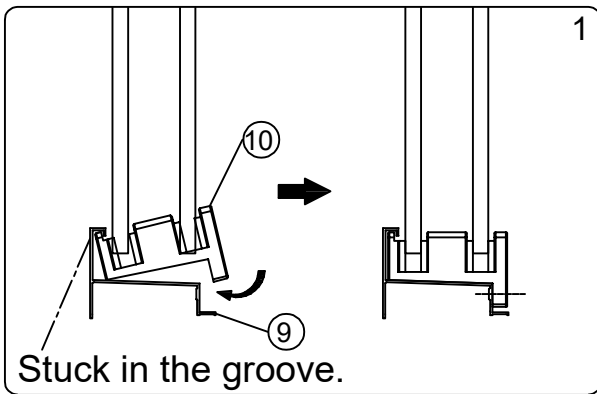

STEP12

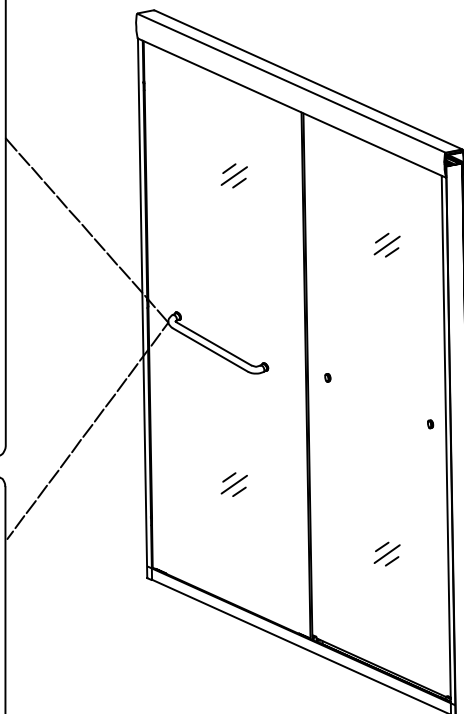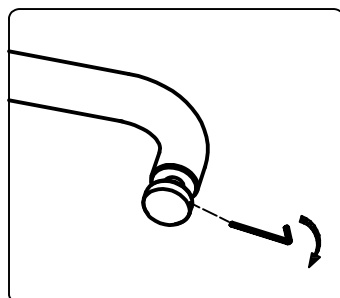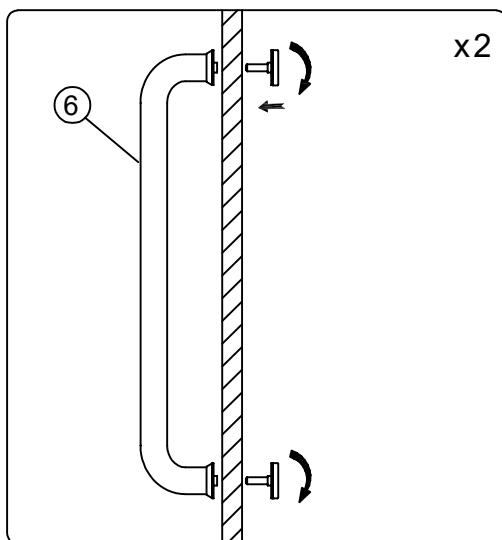

Installation steps

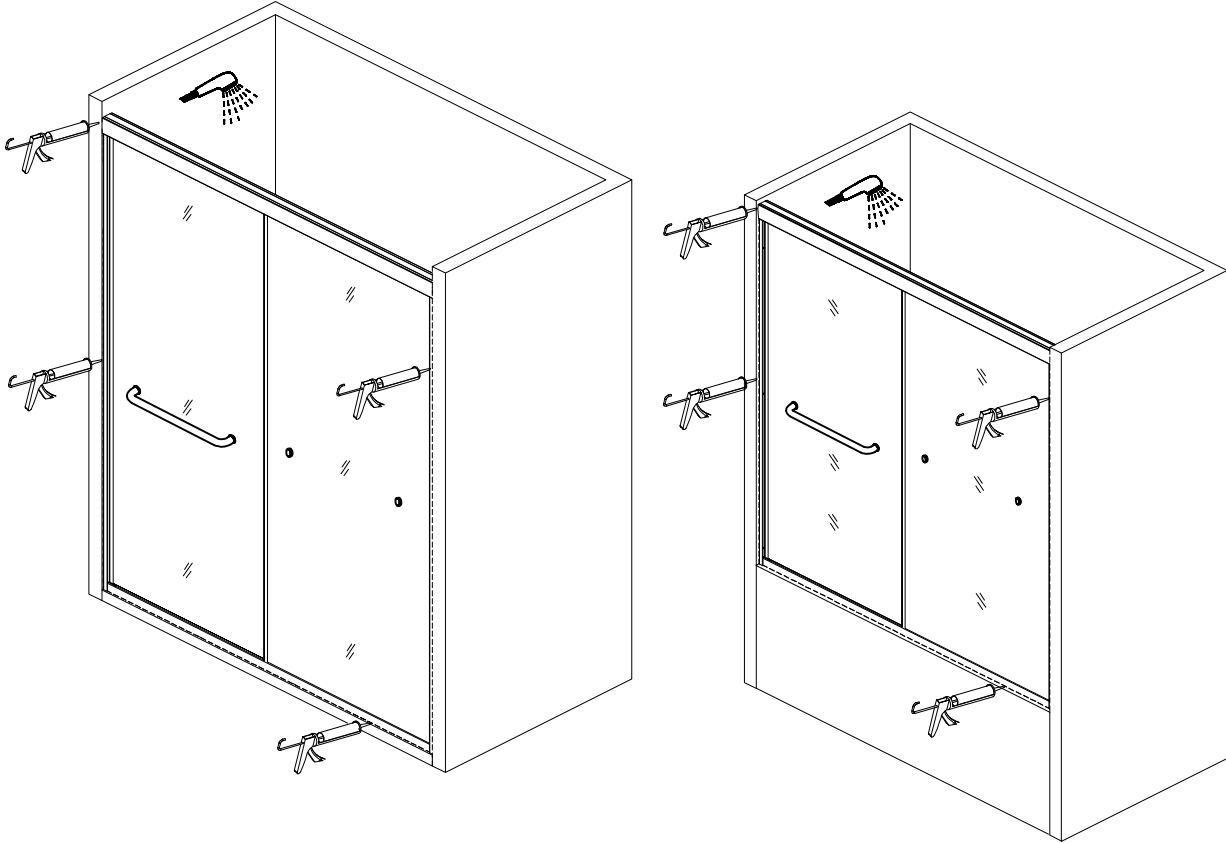

FINAL STEP: SEALING AND CURING

1. Apply a continuous bead of high-quality, clear silicone caulk along the inside and outside junctions where the shower door meets the wall and the shower threshold.
2. Smooth the silicone bead with a wet finger or a smoothing tool for a professional finish.

IMPORTANT:

Allow the silicone caulk to fully cure for at least 24 hours before using the shower enclosure. Do not allow direct water spray onto the door seals during this time.

Installation is now complete.

