
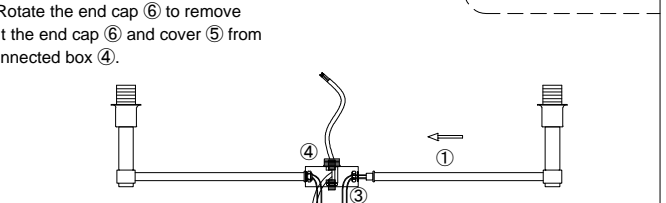
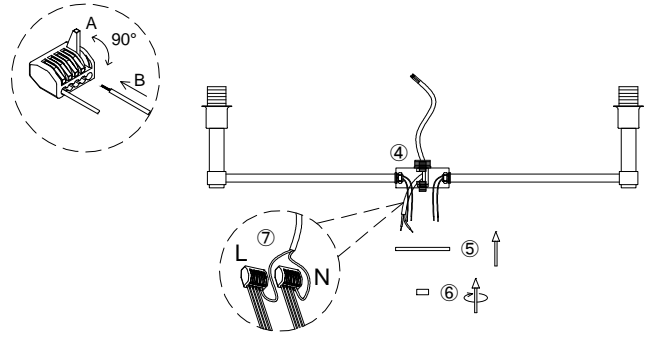


<p>① socket ring 6pcs ②</p> <p>③ lock nut & teeth lock washer</p> <p>① light arm 6pcs</p>	<p>⑧ fabric lampshade 6pcs</p>	<p>⑪ chain 1pcs</p>	 <p>1. Rotate the end cap ⑥ to remove out the end cap ⑥ and cover ⑤ from connected box ④.</p>
<p>④ connected box</p> <p>⑤ cover</p> <p>⑥ end cap</p>	<p>⑨ hanging tube 1pcs</p>	<p>⑫ canopy 1pcs</p> <p>⑬ cap nut 2pcs</p>	 <p>2. Install the light arms ① to the box ④ with lock nut & teeth lock washer ③, adjust the arms to suitable position like picture shown.</p>
<p>⑦ splicing connector 2pcs</p>	<p>⑩ hanging tube with ring 1pcs</p>	<p>⑭ tool 1pcs</p> <p>X 1PCS</p> <p>X 1PCS</p> <p>X 3PCS</p> <p>X 3PCS</p> <p>X 3PCS</p>	


1. Pull the orange operating handle A to open the inlet hole, insert the wire B.

2. Press the operating handle A to finish wiring. (Note: one inlet hole can put 2 or 3 wires inside)




3. Connect all the wires by parallel with connectors ⑦ (all live line-L use one connector, and neutral Line-N use another connector).

4. Close the cover ⑤ to the fixture with end cap ⑥.

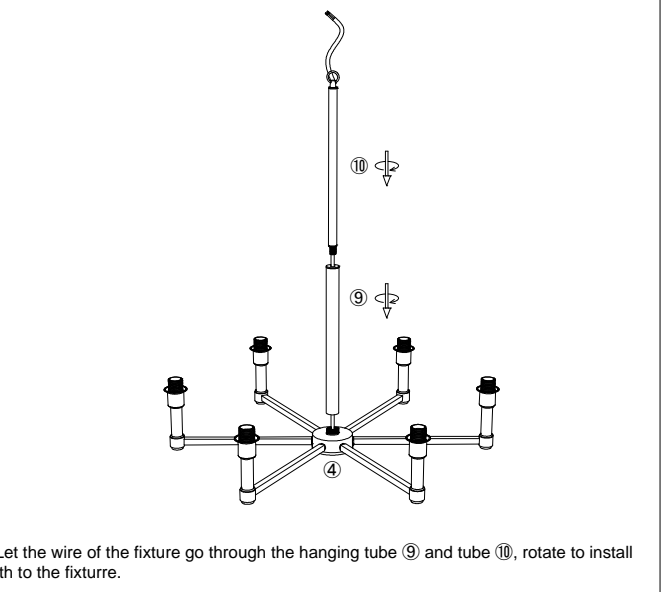

5. Let the wire of the fixture go through the hanging tube ⑨ and tube ⑩, rotate to install both to the fixture.

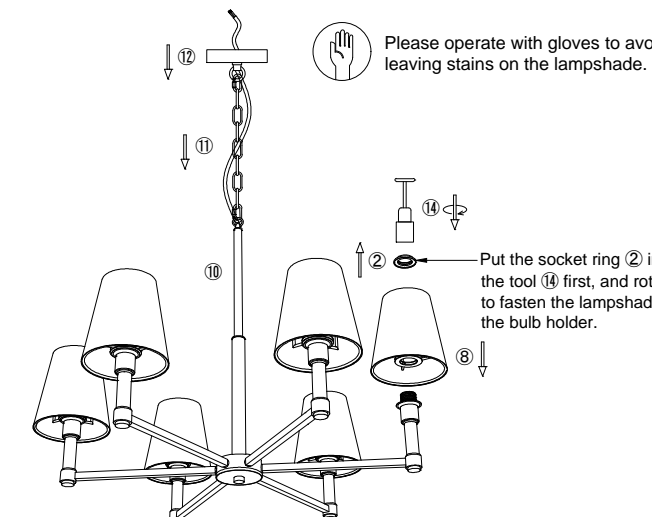


Please operate with gloves to avoid leaving stains on the lampshade.

Put the socket ring ② in the tool ⑭ first, and rotate to fasten the lampshade to the bulb holder.

6. Hang the fixture to the canopy ⑫ with chain ⑪, let the wire go through the chain ⑪ and canopy ⑫.

7. Use the tool ⑭ to install the fabric lampshade to the fixture with socket ring ②. (Put the socket ring ② in the tool ⑭ first, and rotate to fasten the lampshade to the bulb holder)

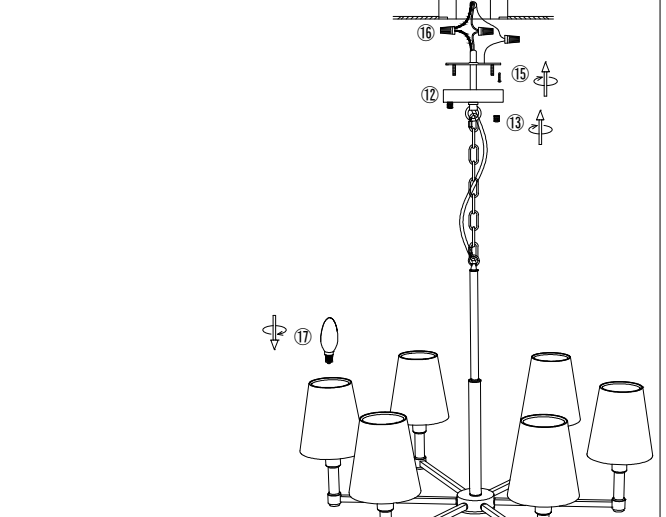

8. Install the bracket to the ceiling junction box with screw ⑮.

9. Connect the wire to the home line with cap connector ⑯.

10. Install the fixture to the bracket with cap nut ⑬.

11. Install the bulb ⑰.

Please read carefully before installation!!!

Note : Please make sure that the electricity is powered off during installation !

Only a professional electrician should install this kind of product !