





LY-67044 MIRROR JEWELLERY CABINET

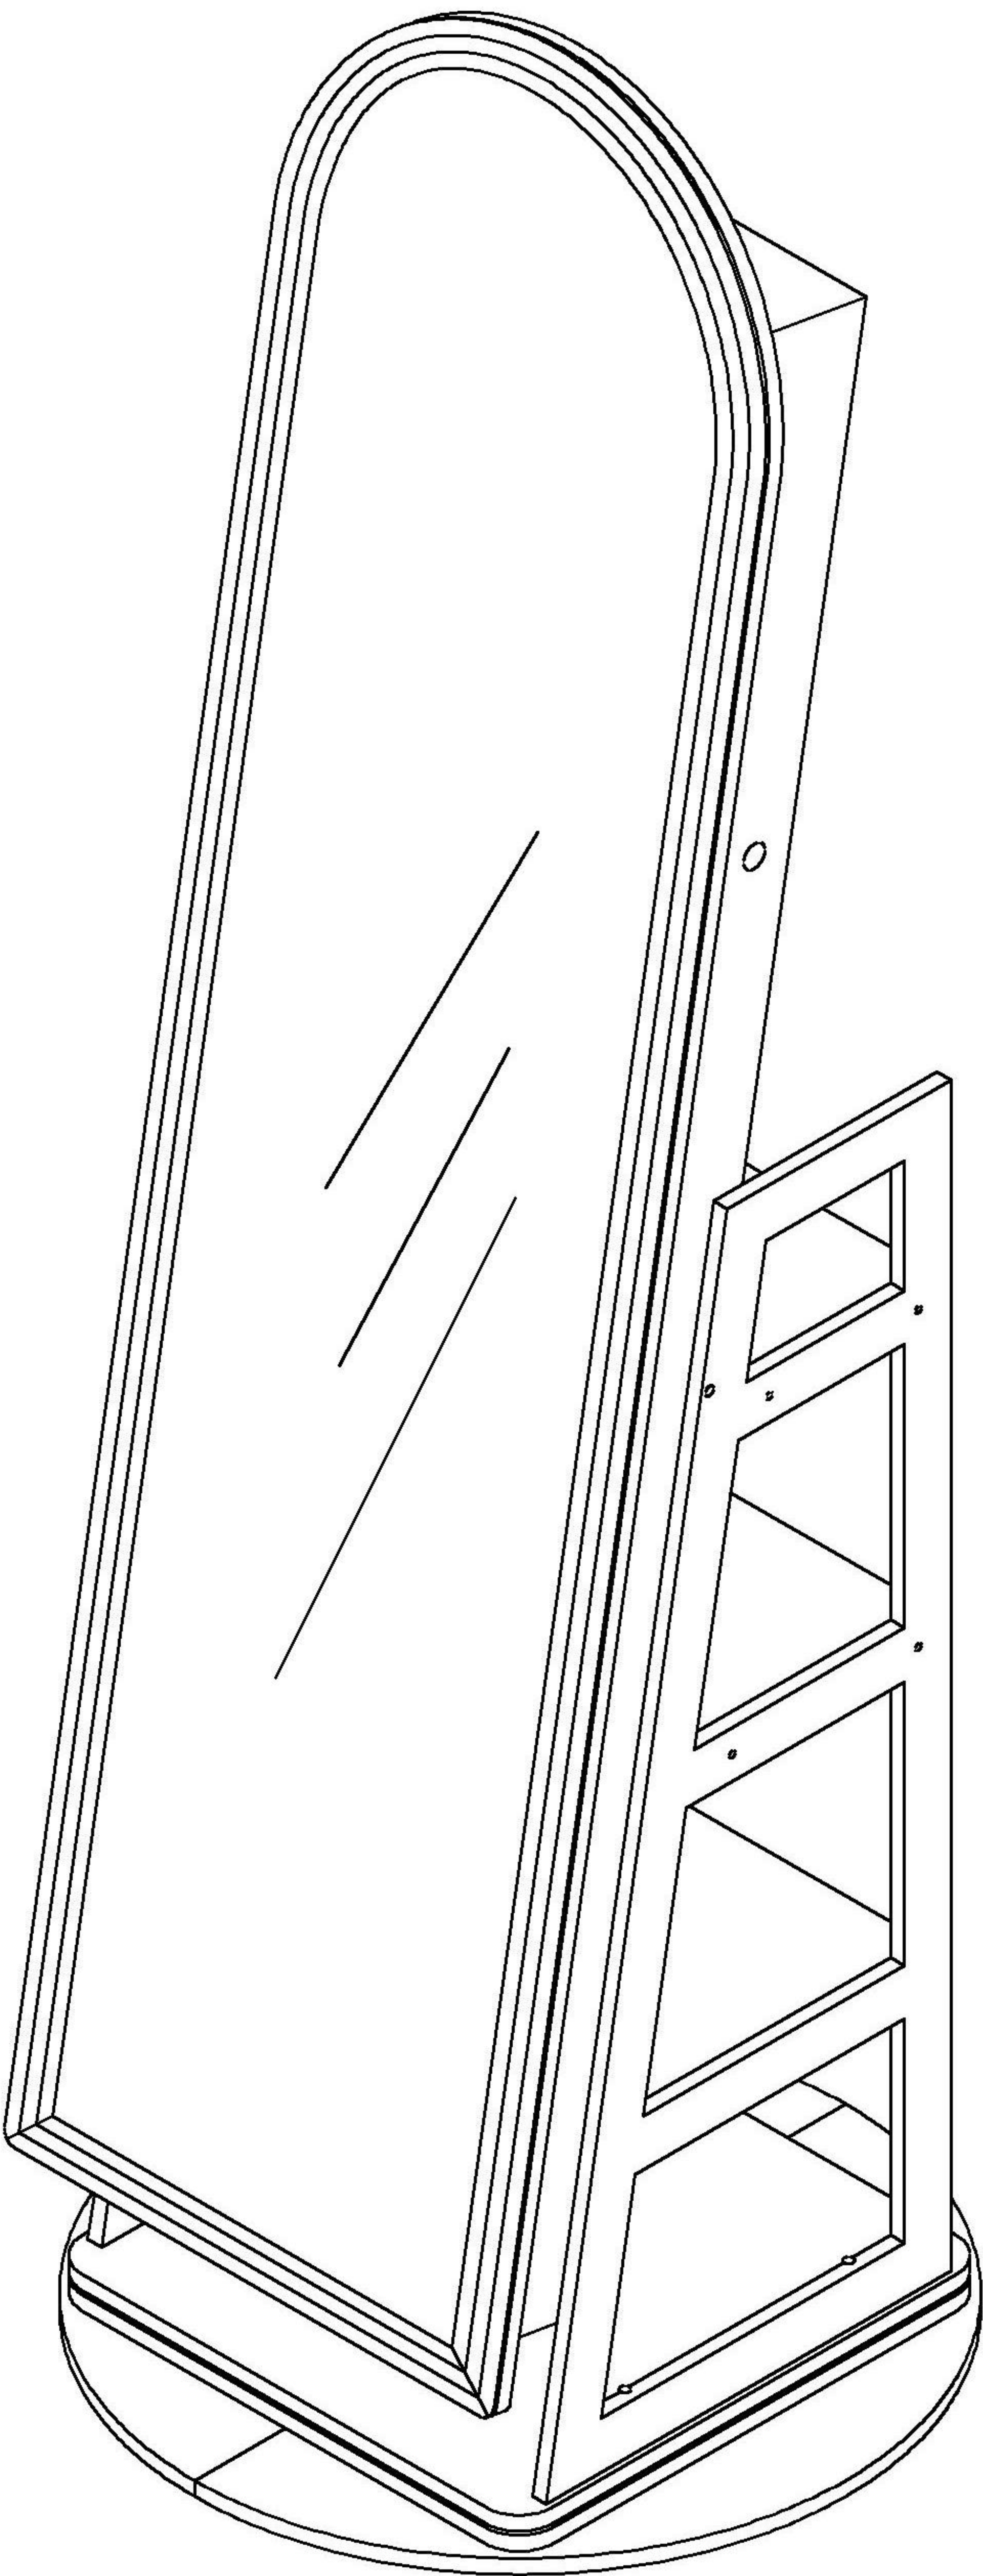

Hardware list

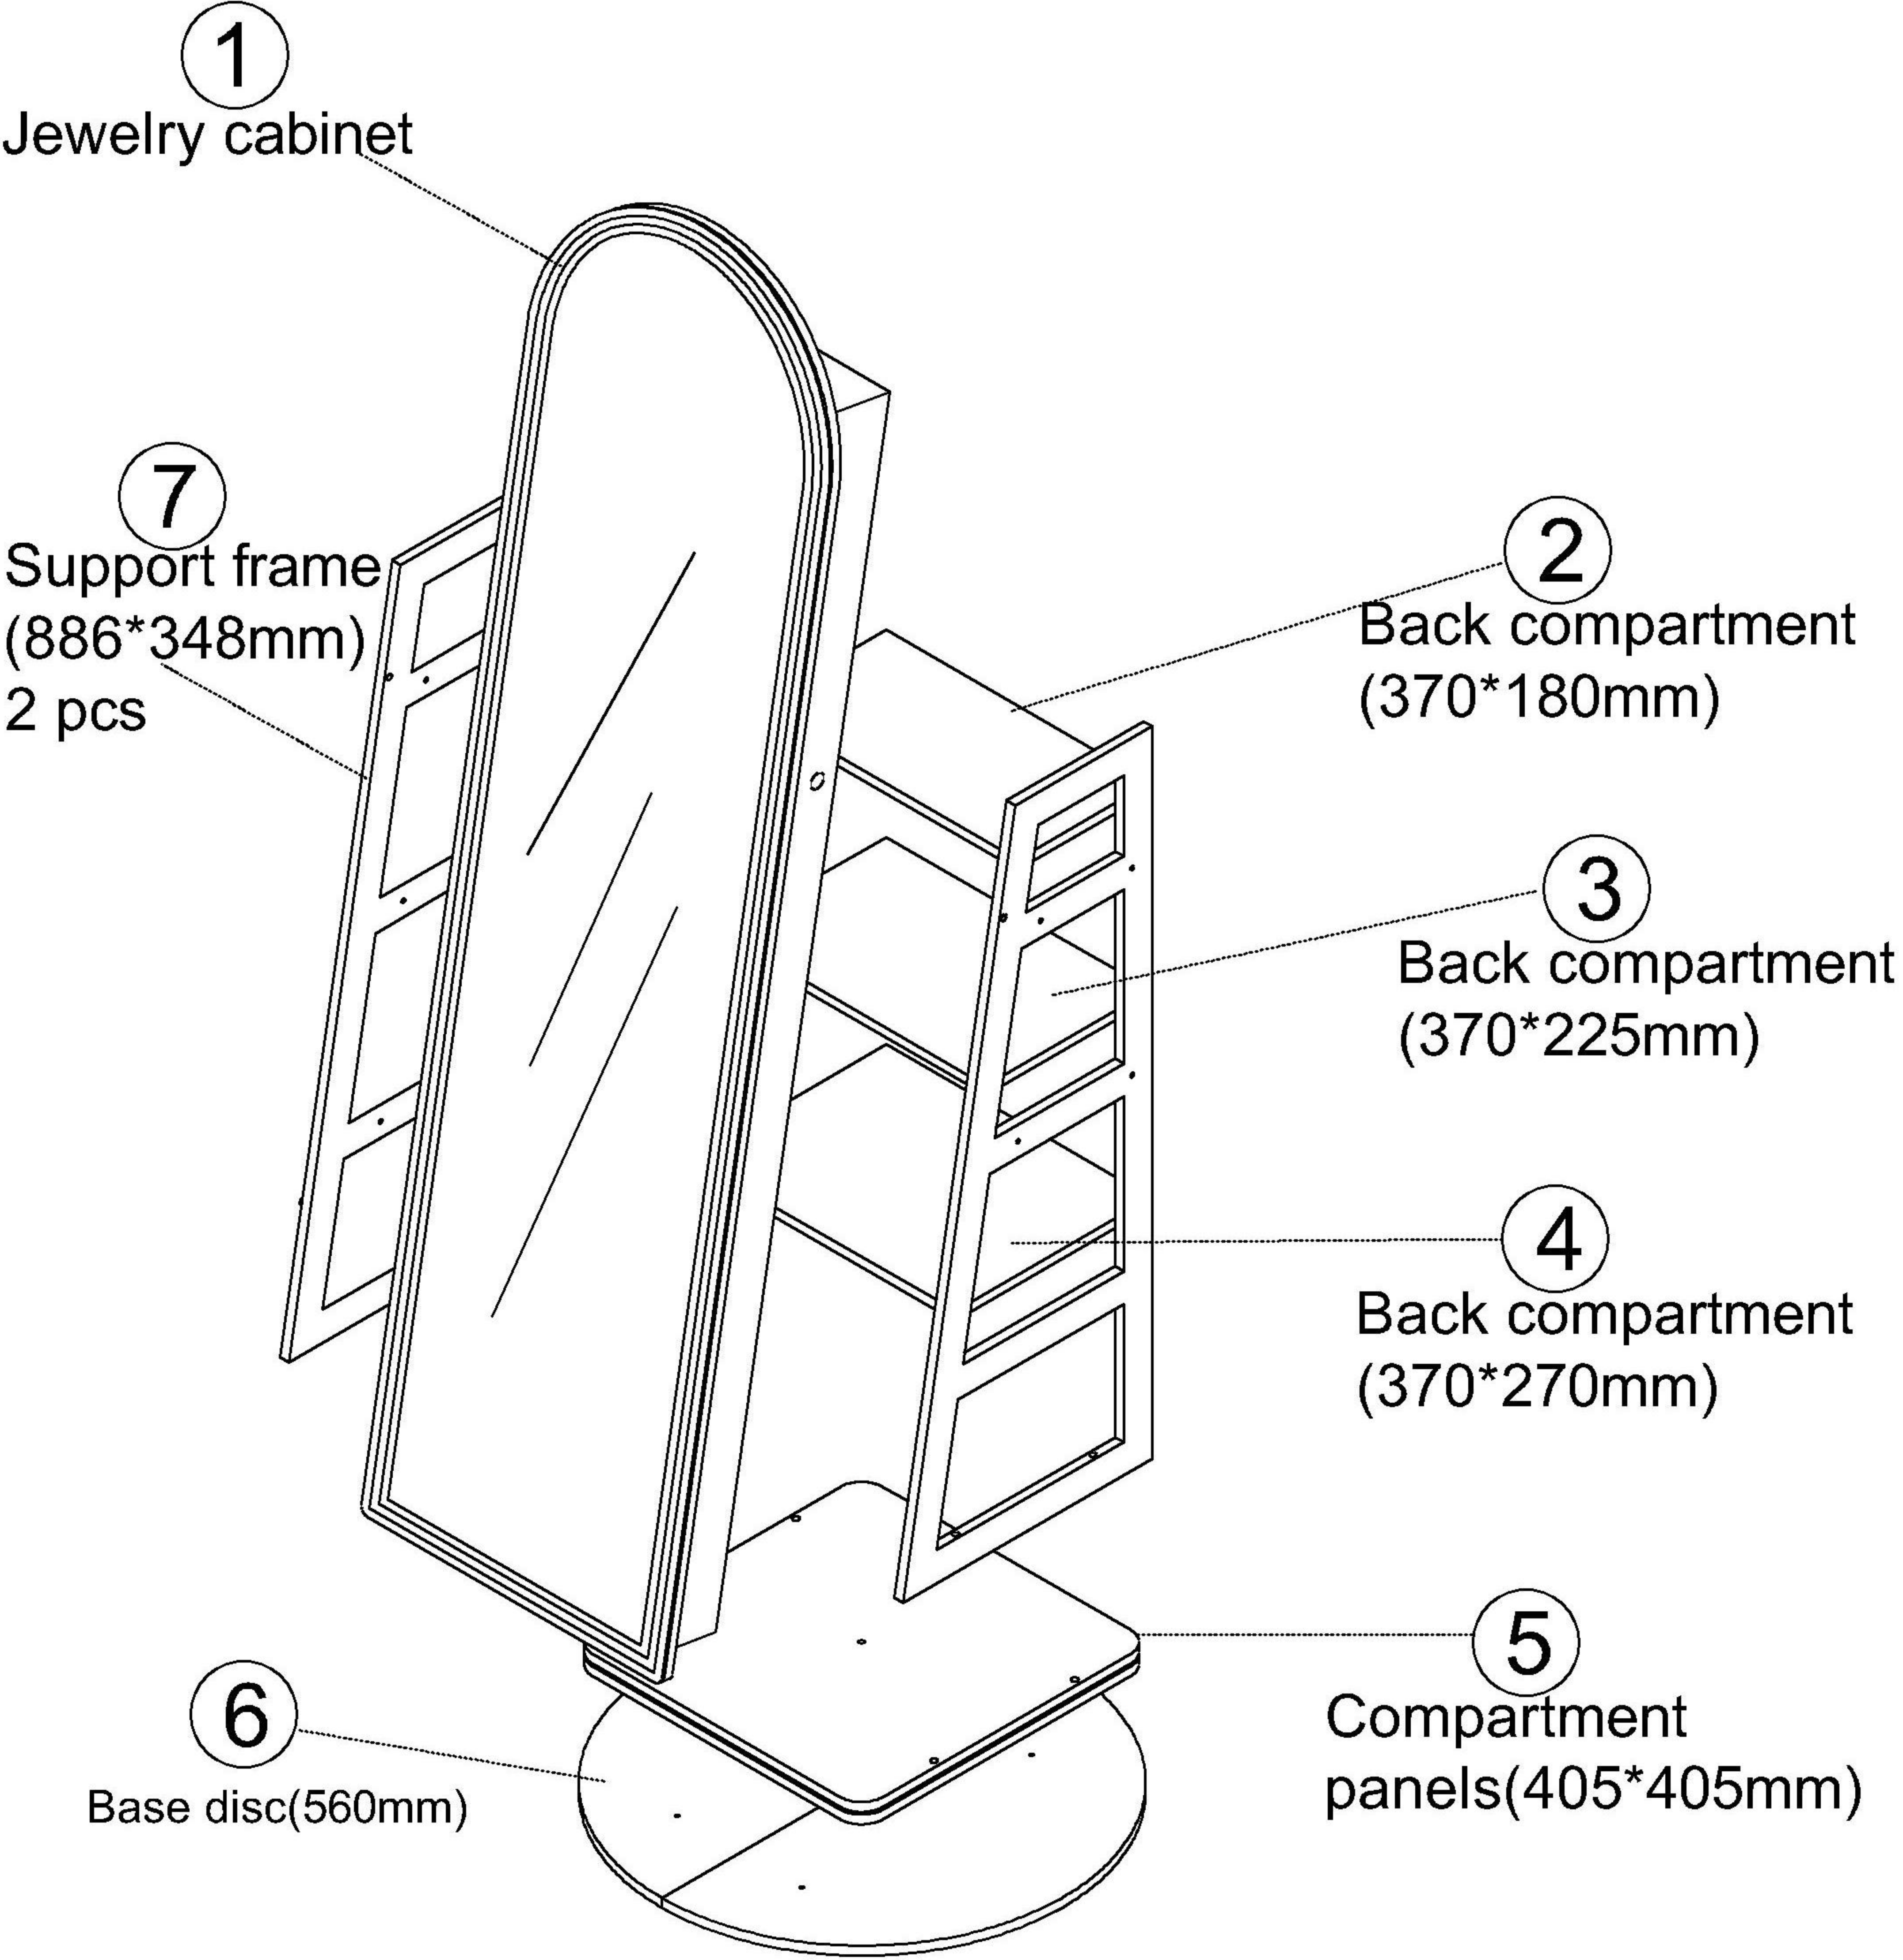

Accessories list

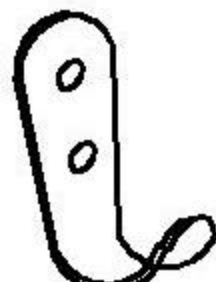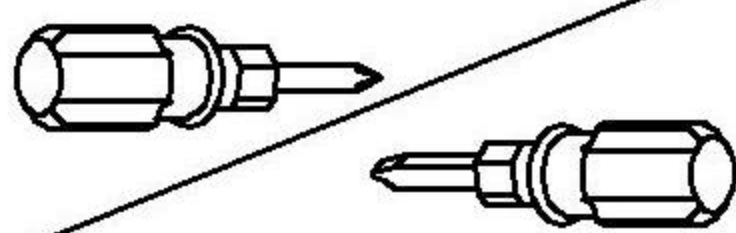
A		Cross nut (4x25mm)	12 Pcs
B		Key	1 Pcs
C		Cross machine wire (6x30mm)	4 Pcs
D		Self tapping screw(3x10mm)	6 Pcs
E		iron hook	3 Pcs
F		Cross nut (6x22mm)	4 Pcs
G		Cross machine wire (6x50mm)	4 Pcs
H		Screwdriver	1 Pcs
I		Anti-rewind (290mm)	1 Pcs
J		Self tapping wire(3x10mm)	1 Pcs
K		Colloidal granules/Self tapping wire(4x45mm)	1 Pcs

Step 1

A



(4*25mm) X 6

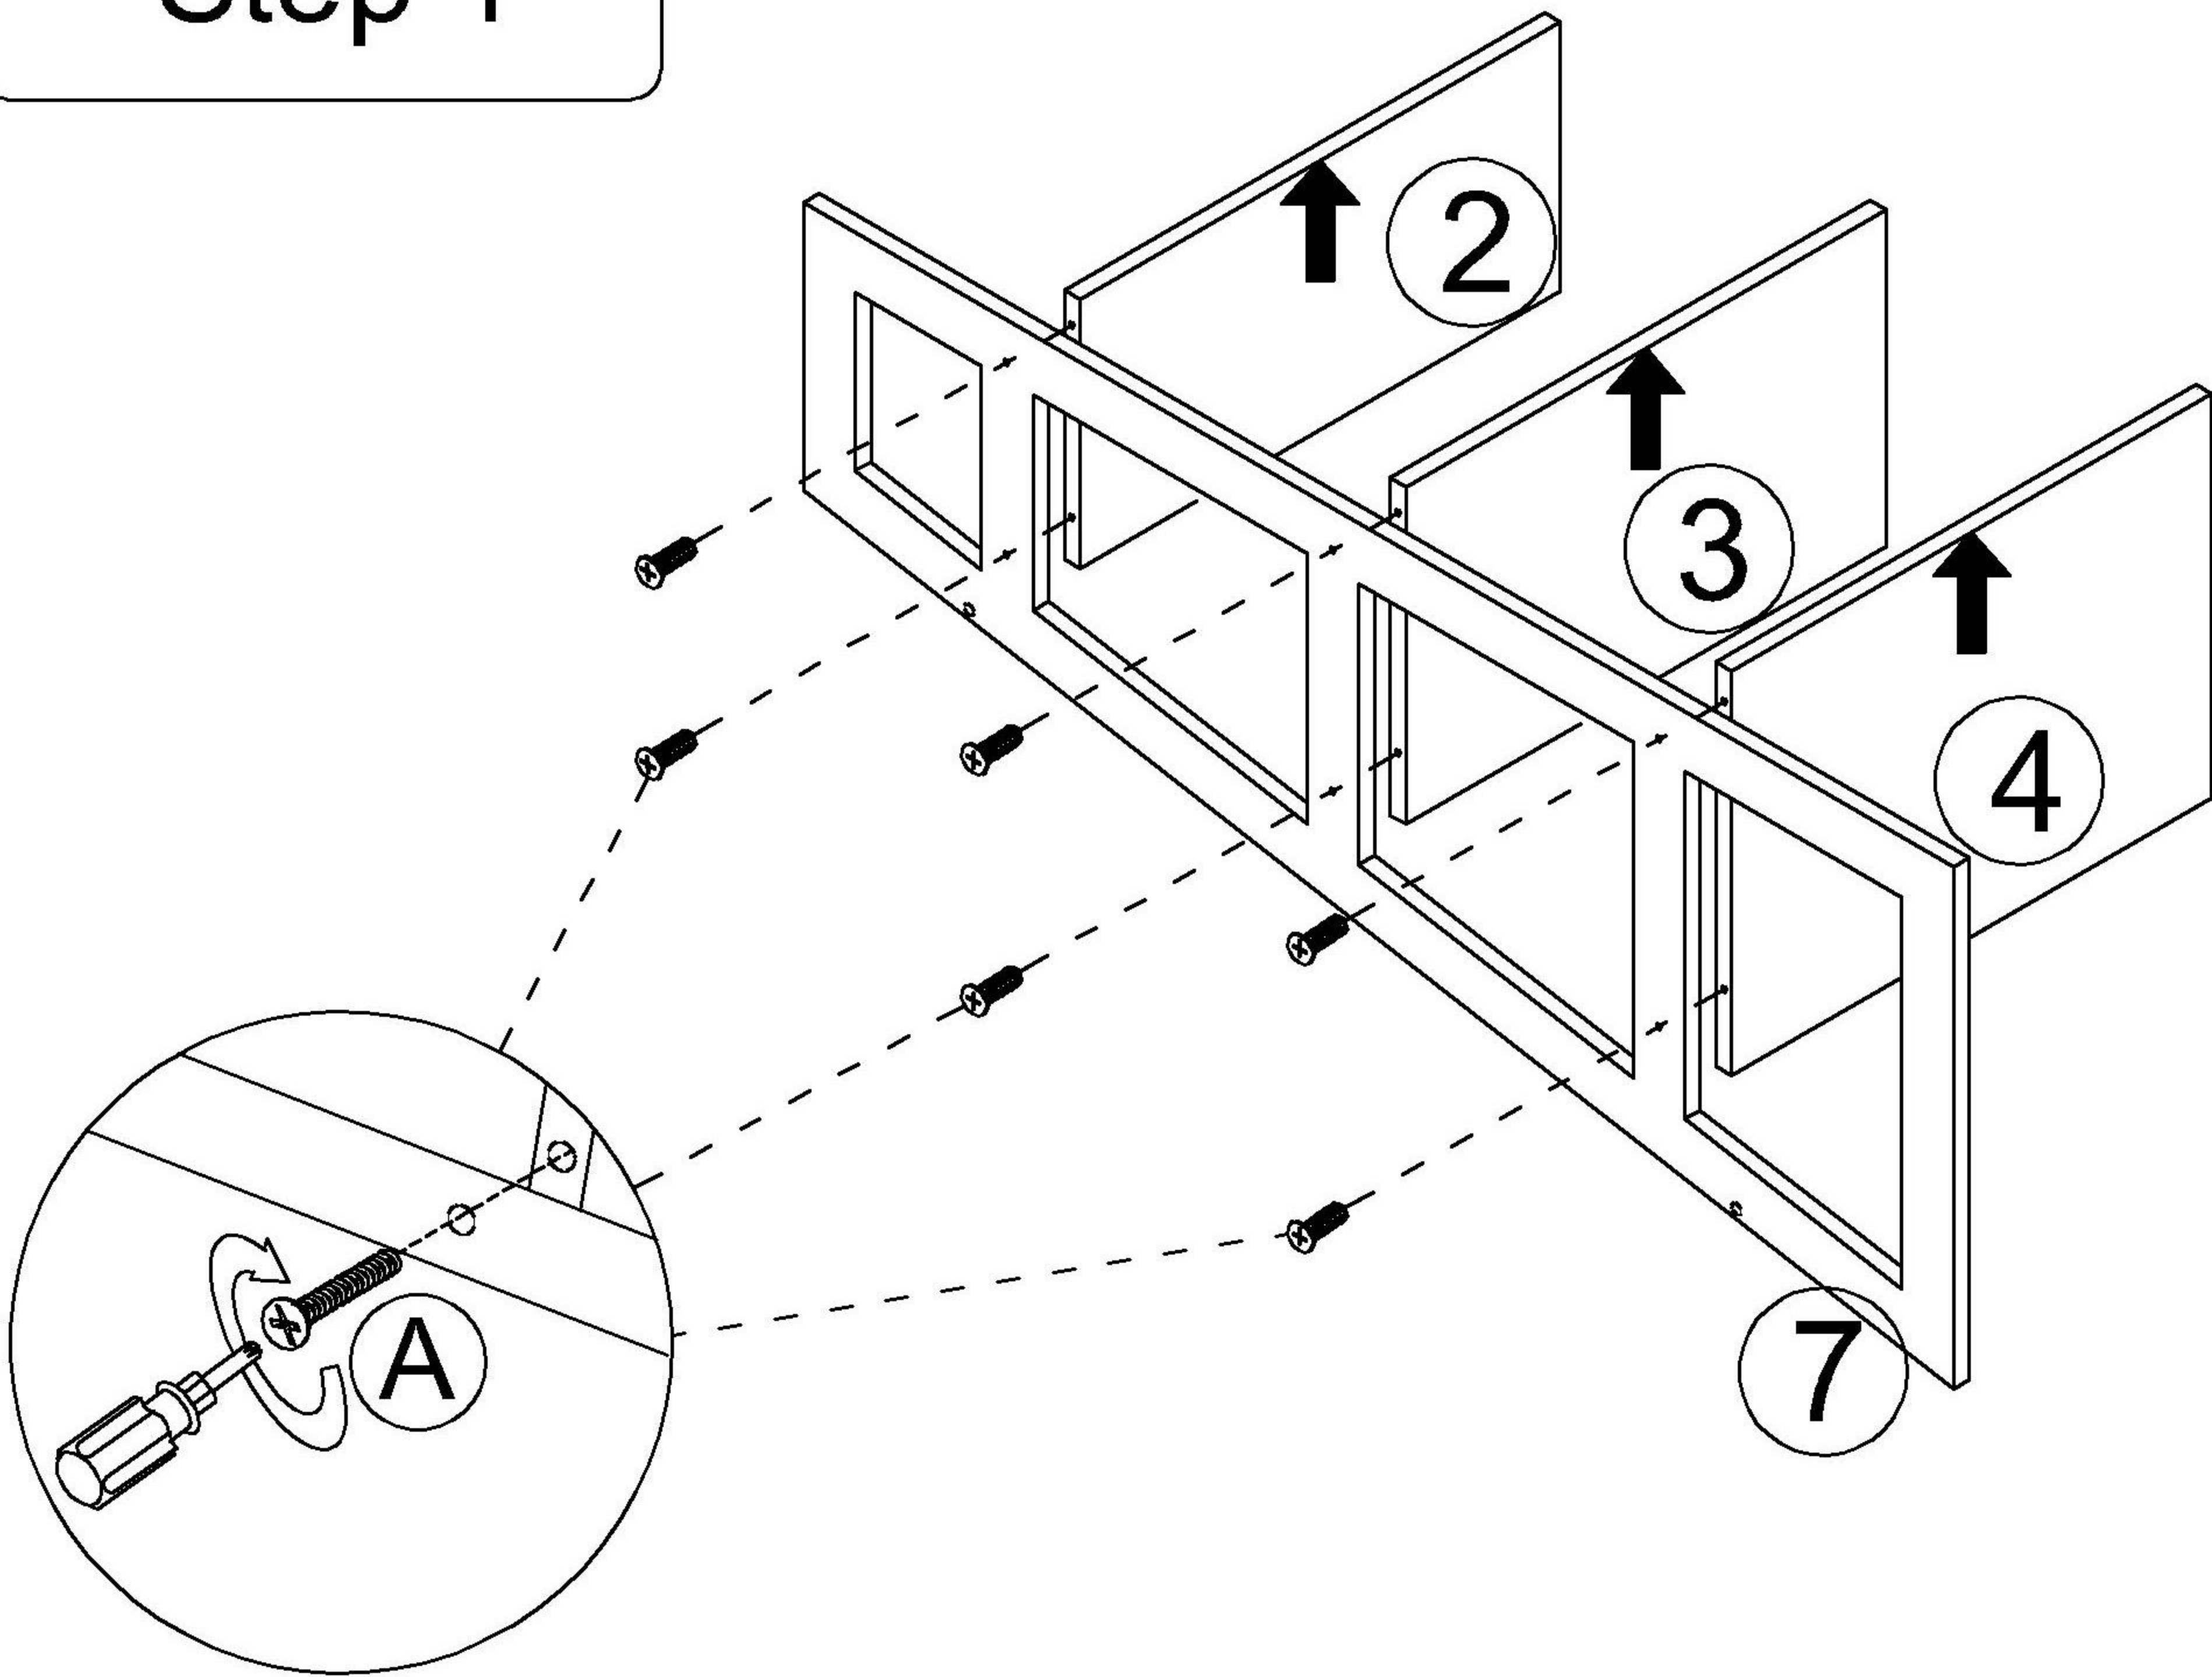


Step 2

A



(4*25mm) X 6

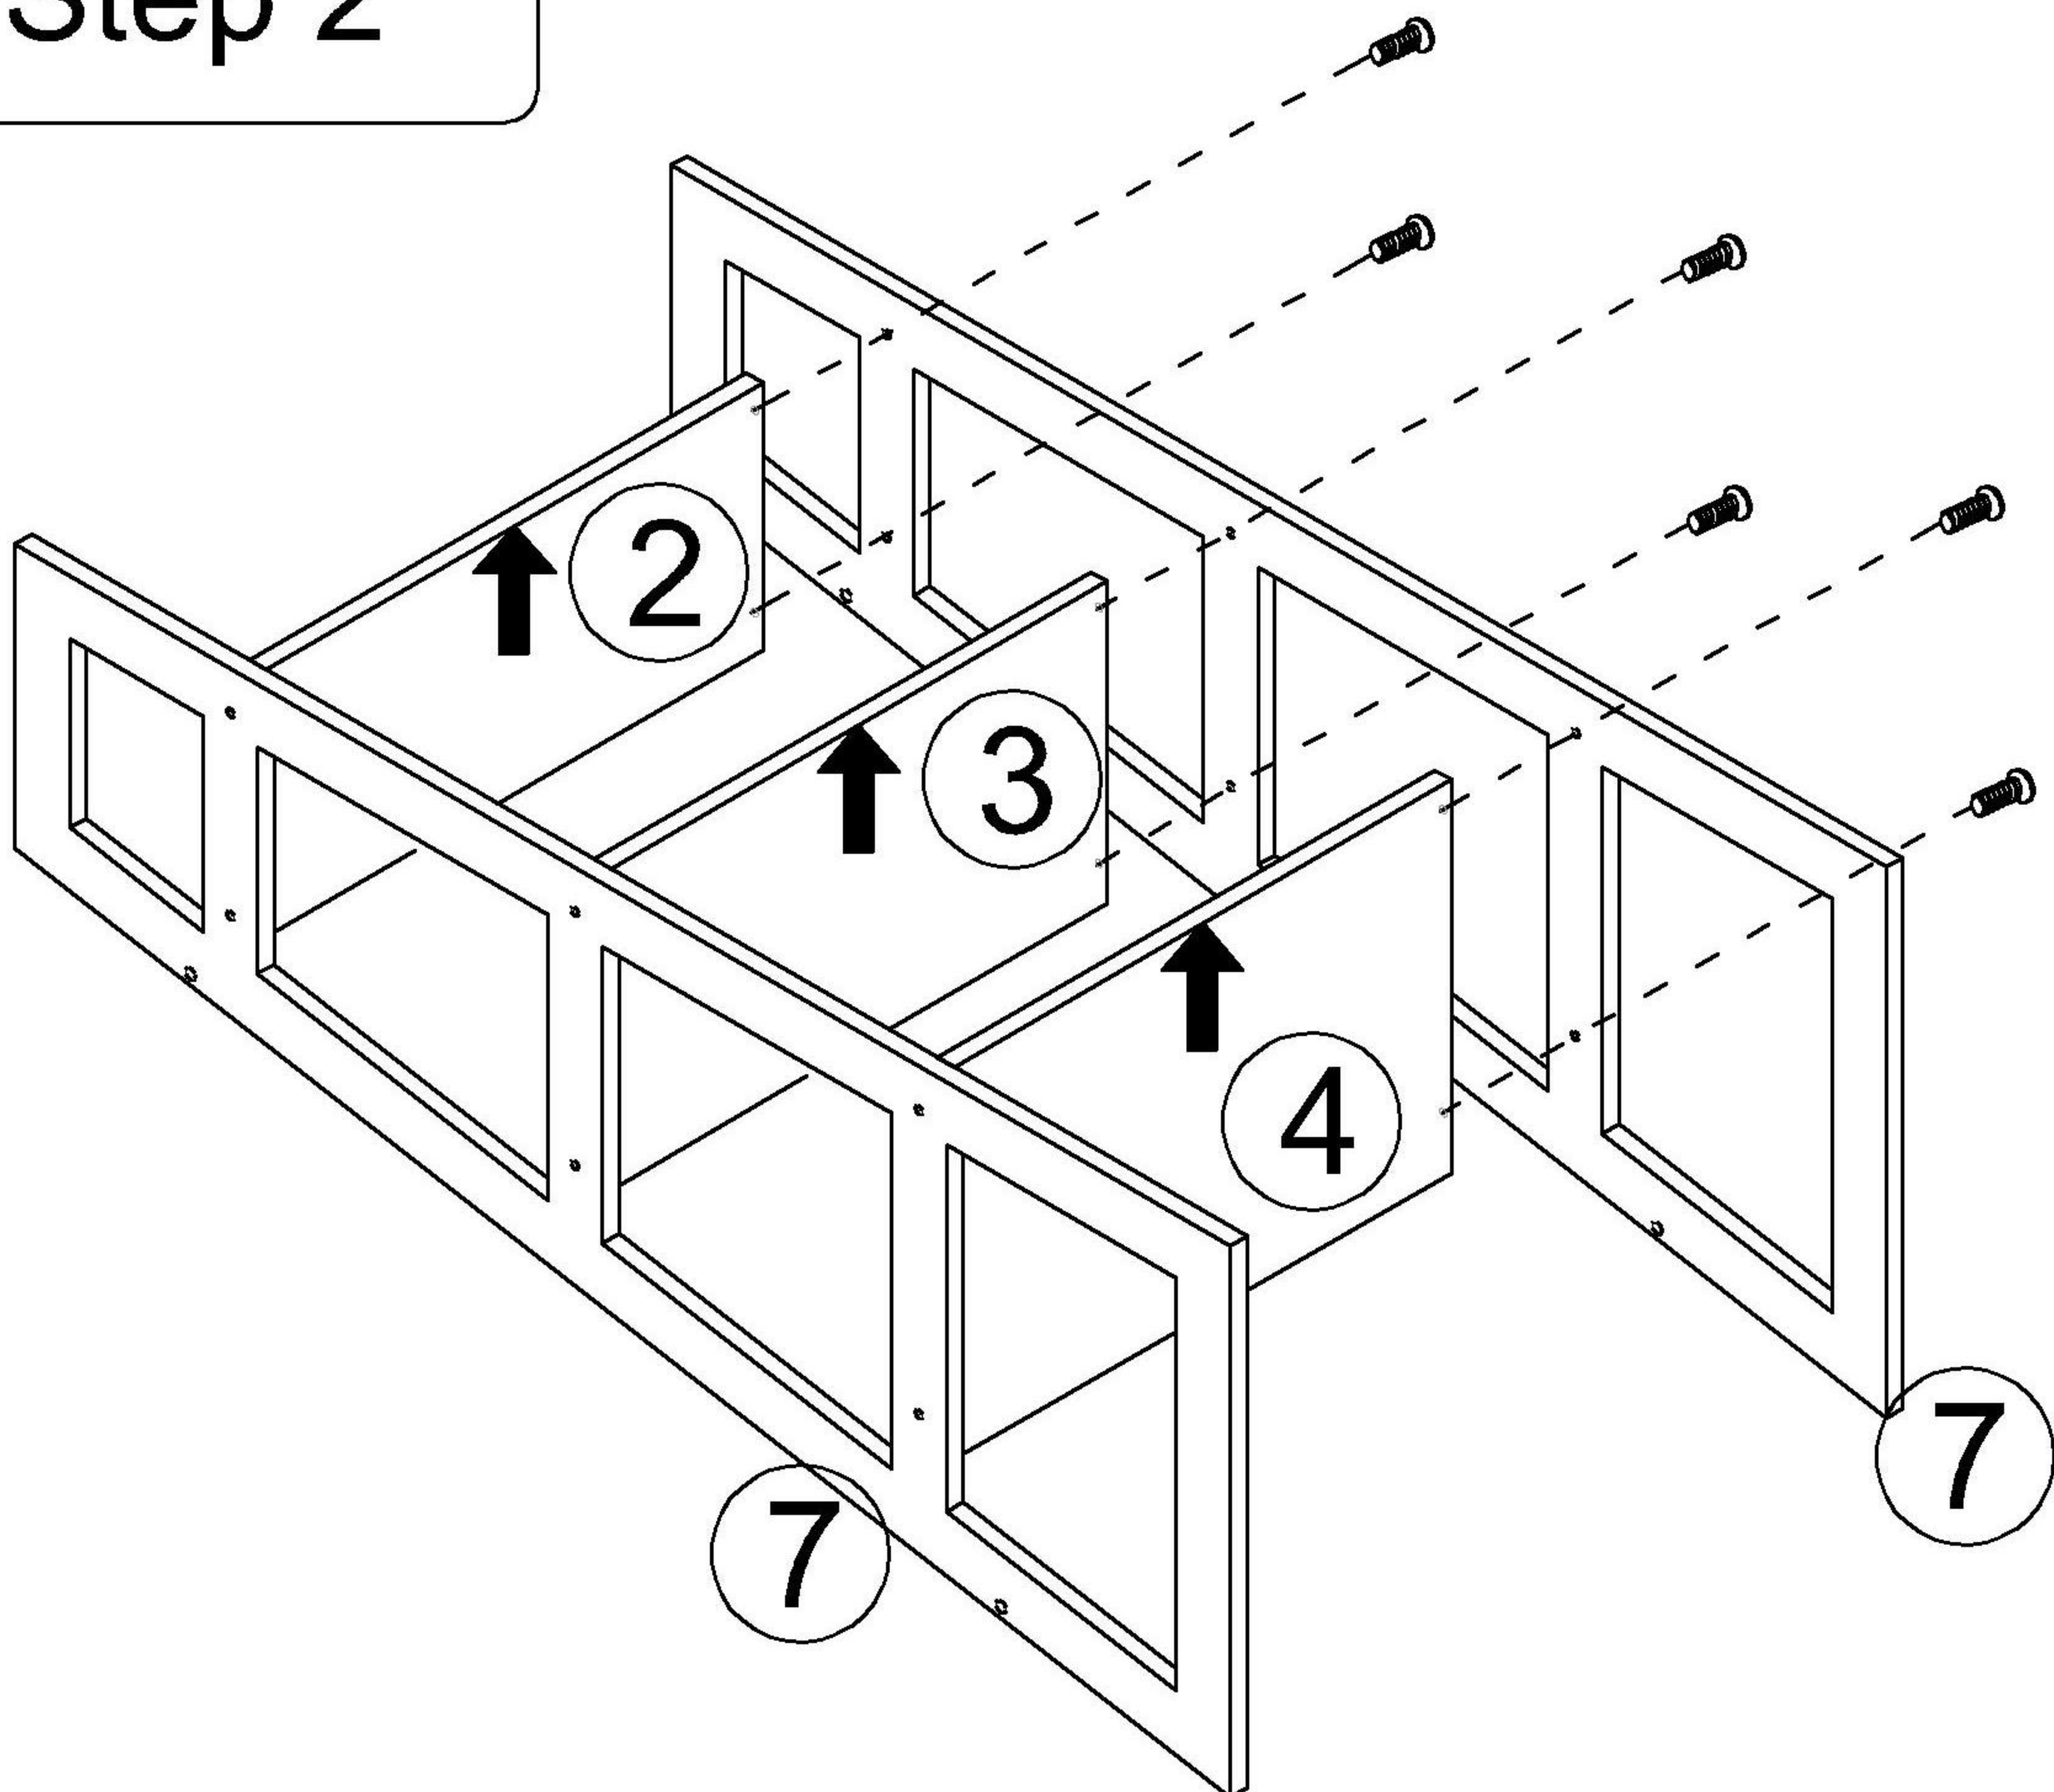


Step 3

(F)



(6*22mm) x 4

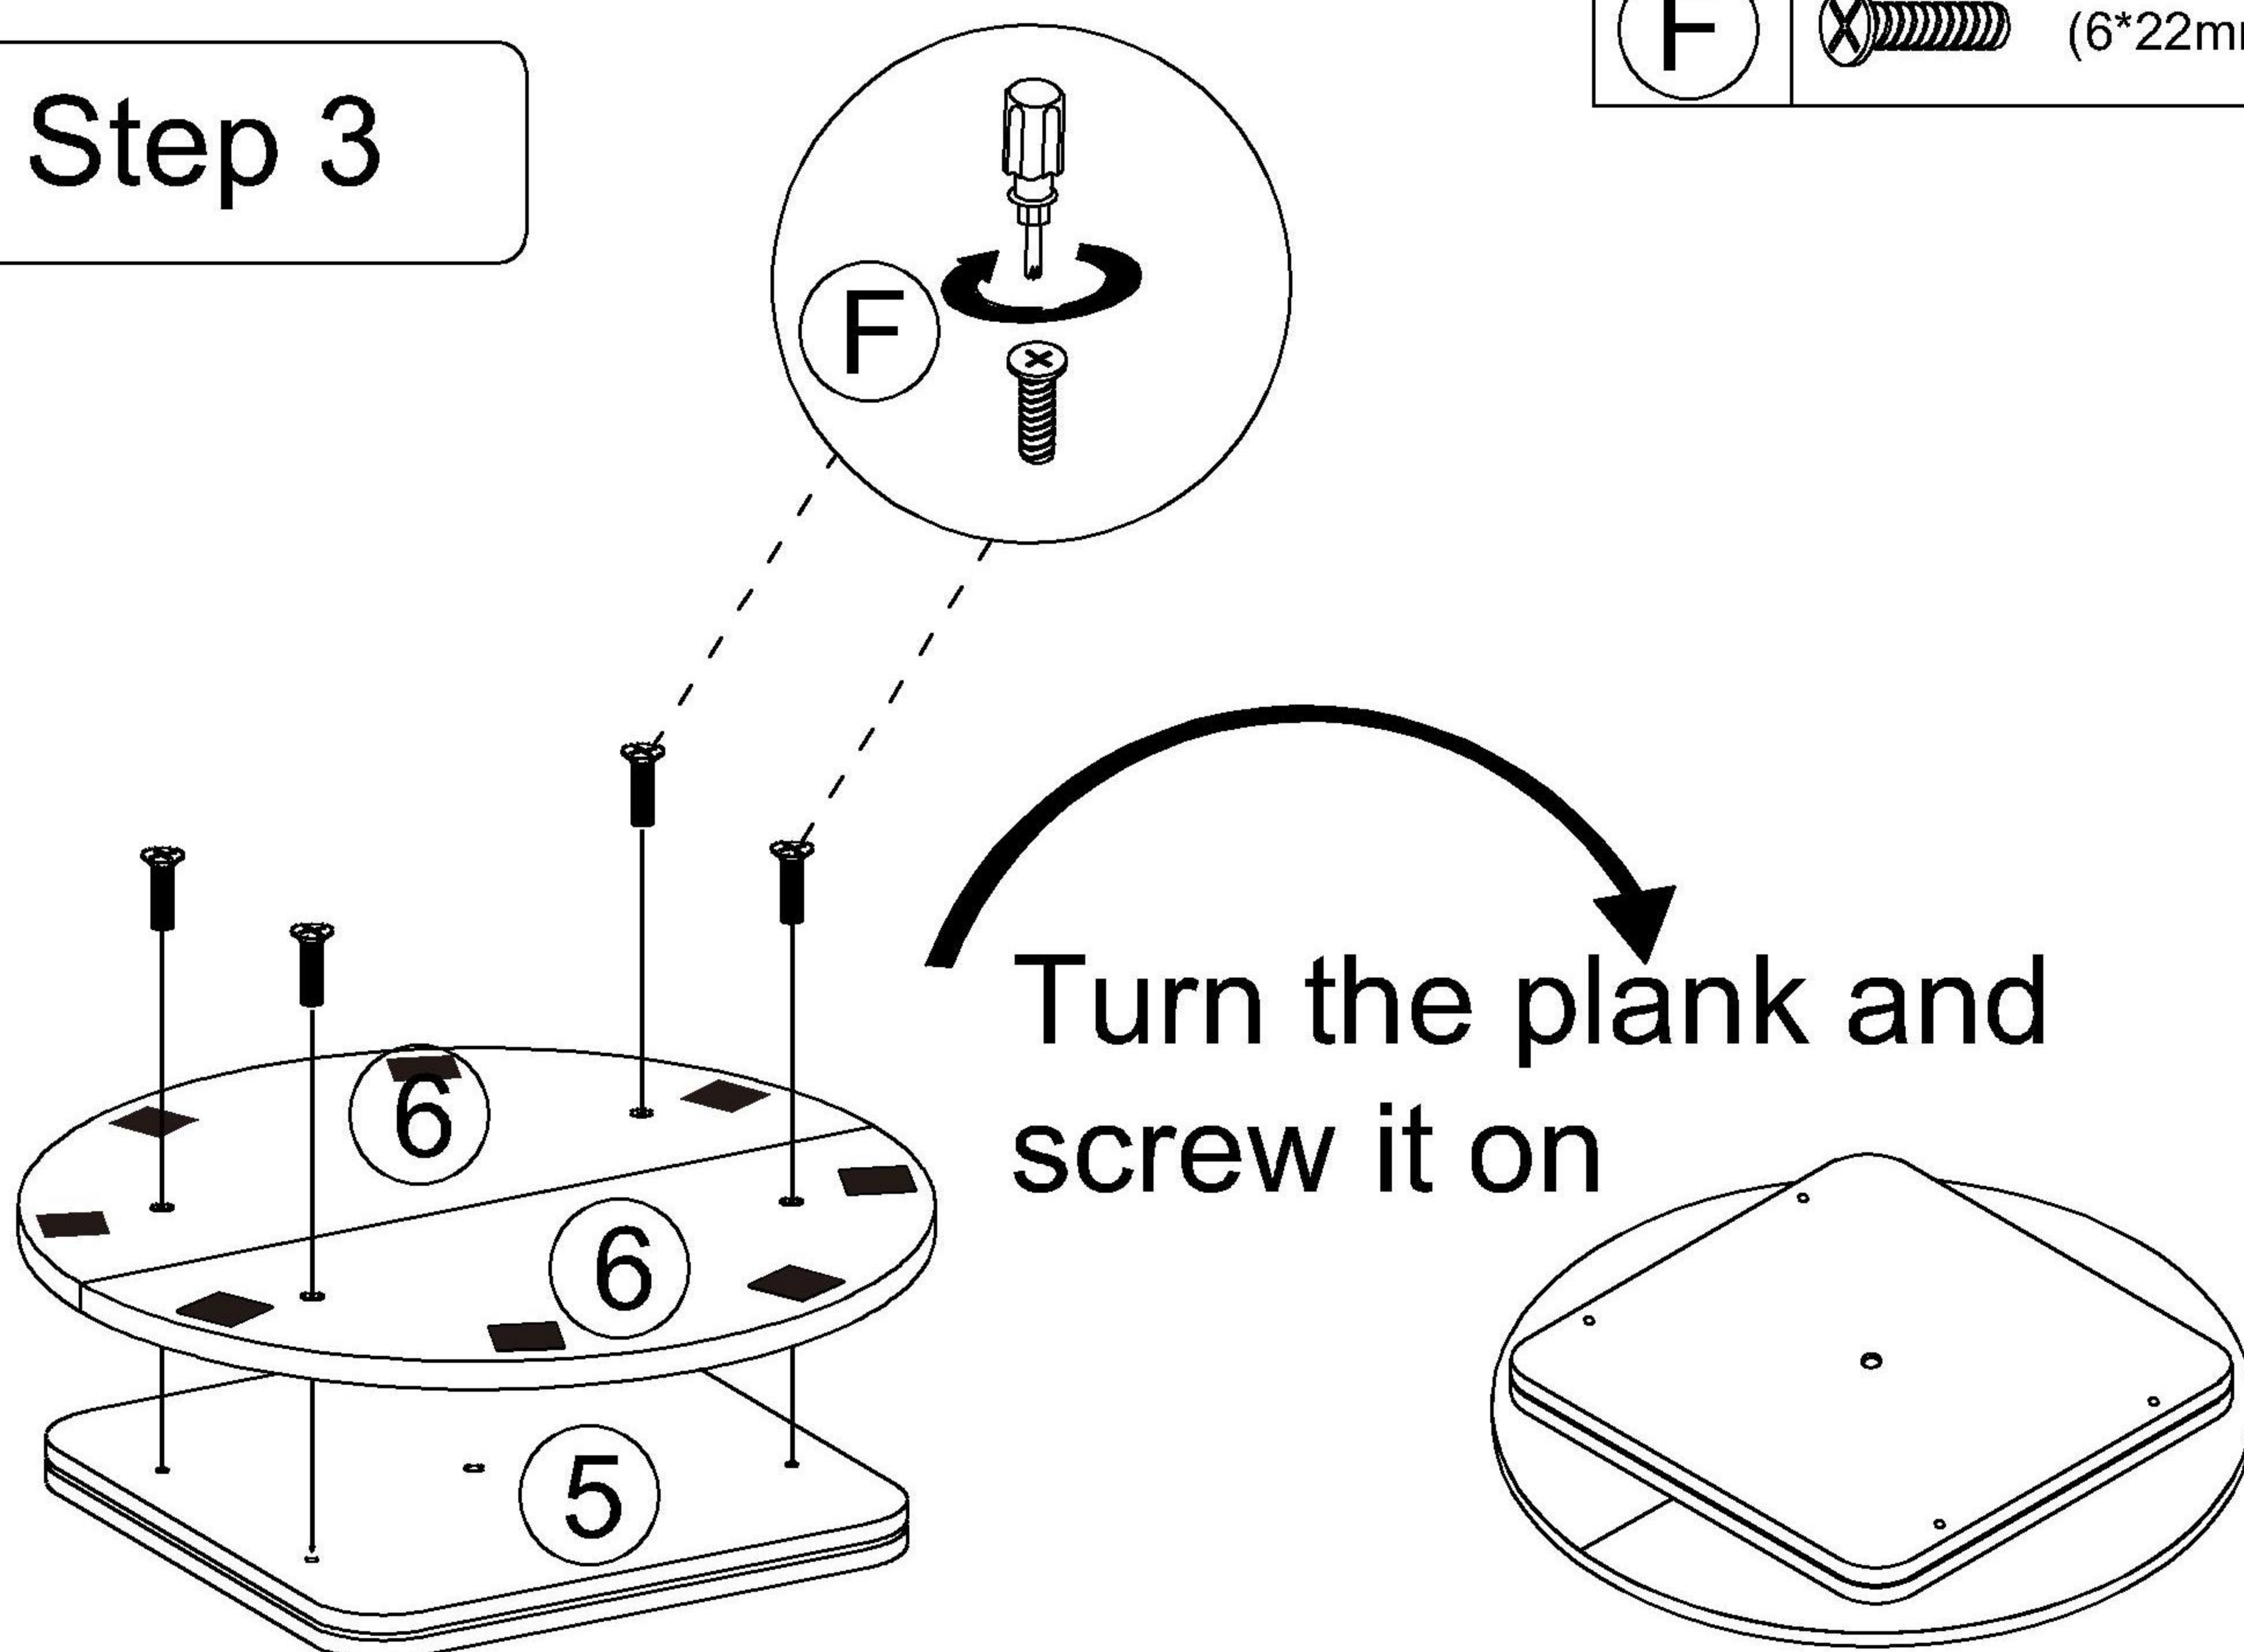


Turn the plank and
screw it on

Step 4

(C)




(6*30mm) x 4

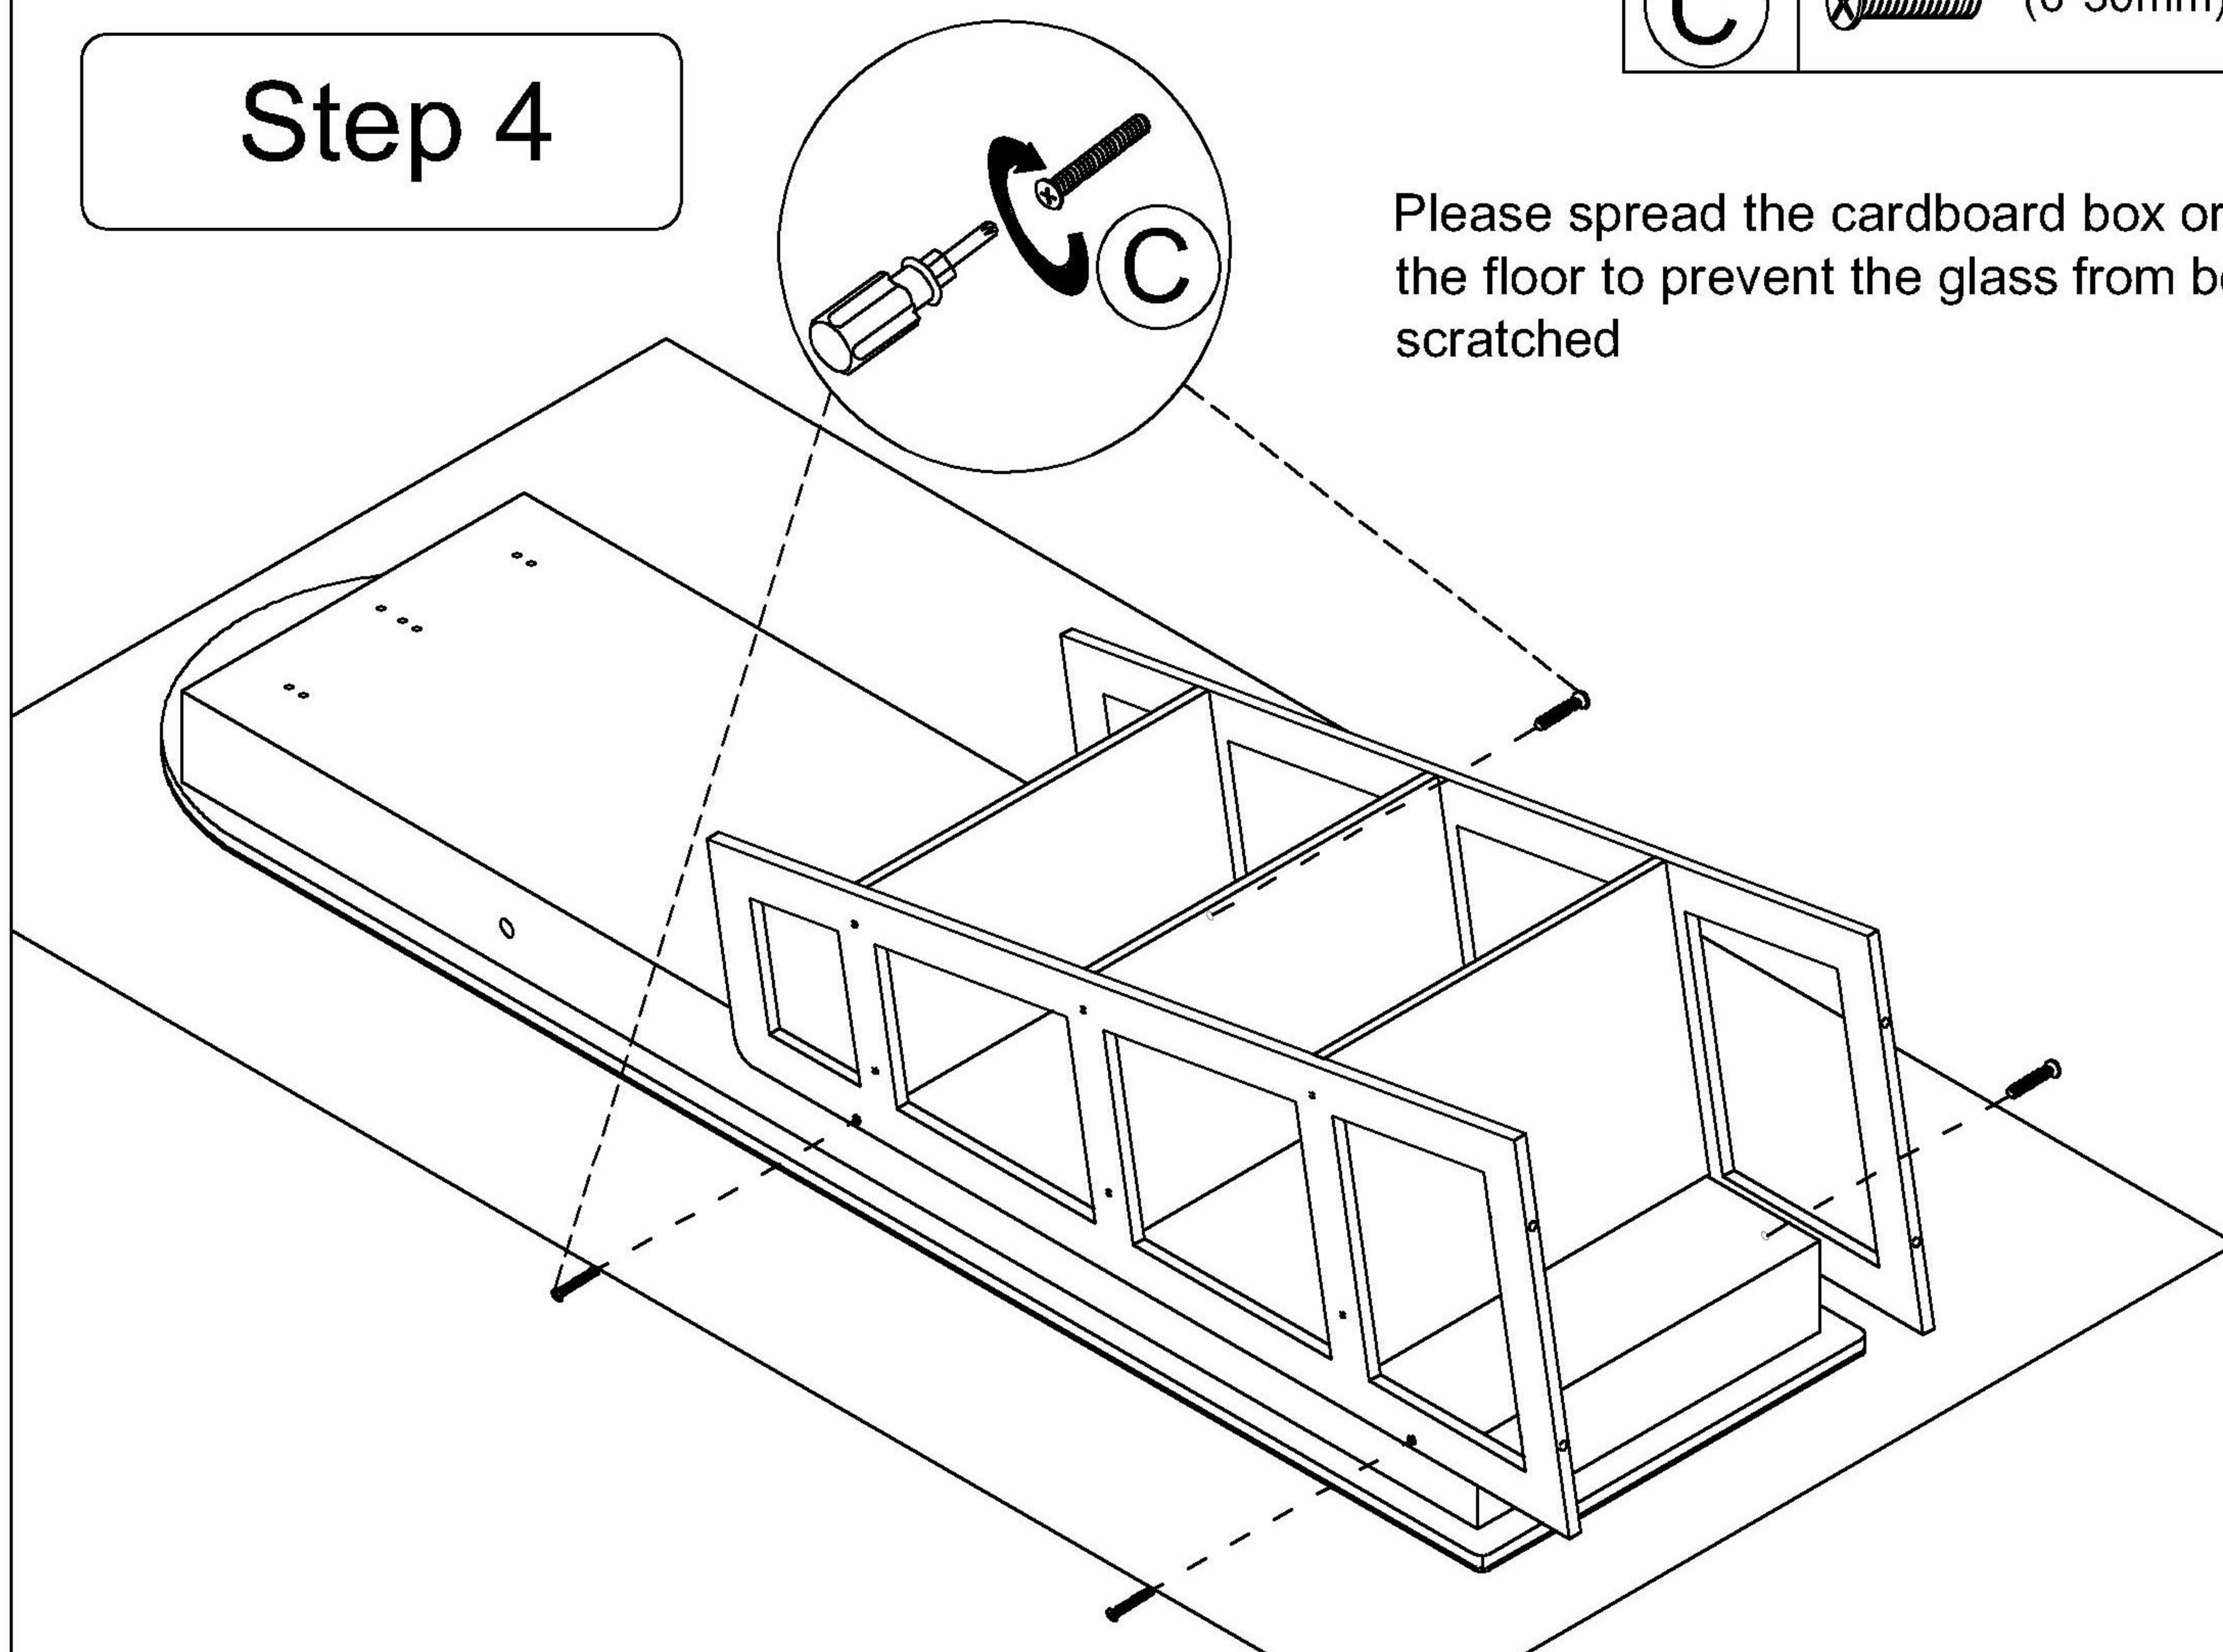

Please spread the cardboard box or foam on
the floor to prevent the glass from being
scratched


Step 5

G	 (6*50mm)	x 4
---	---	-----


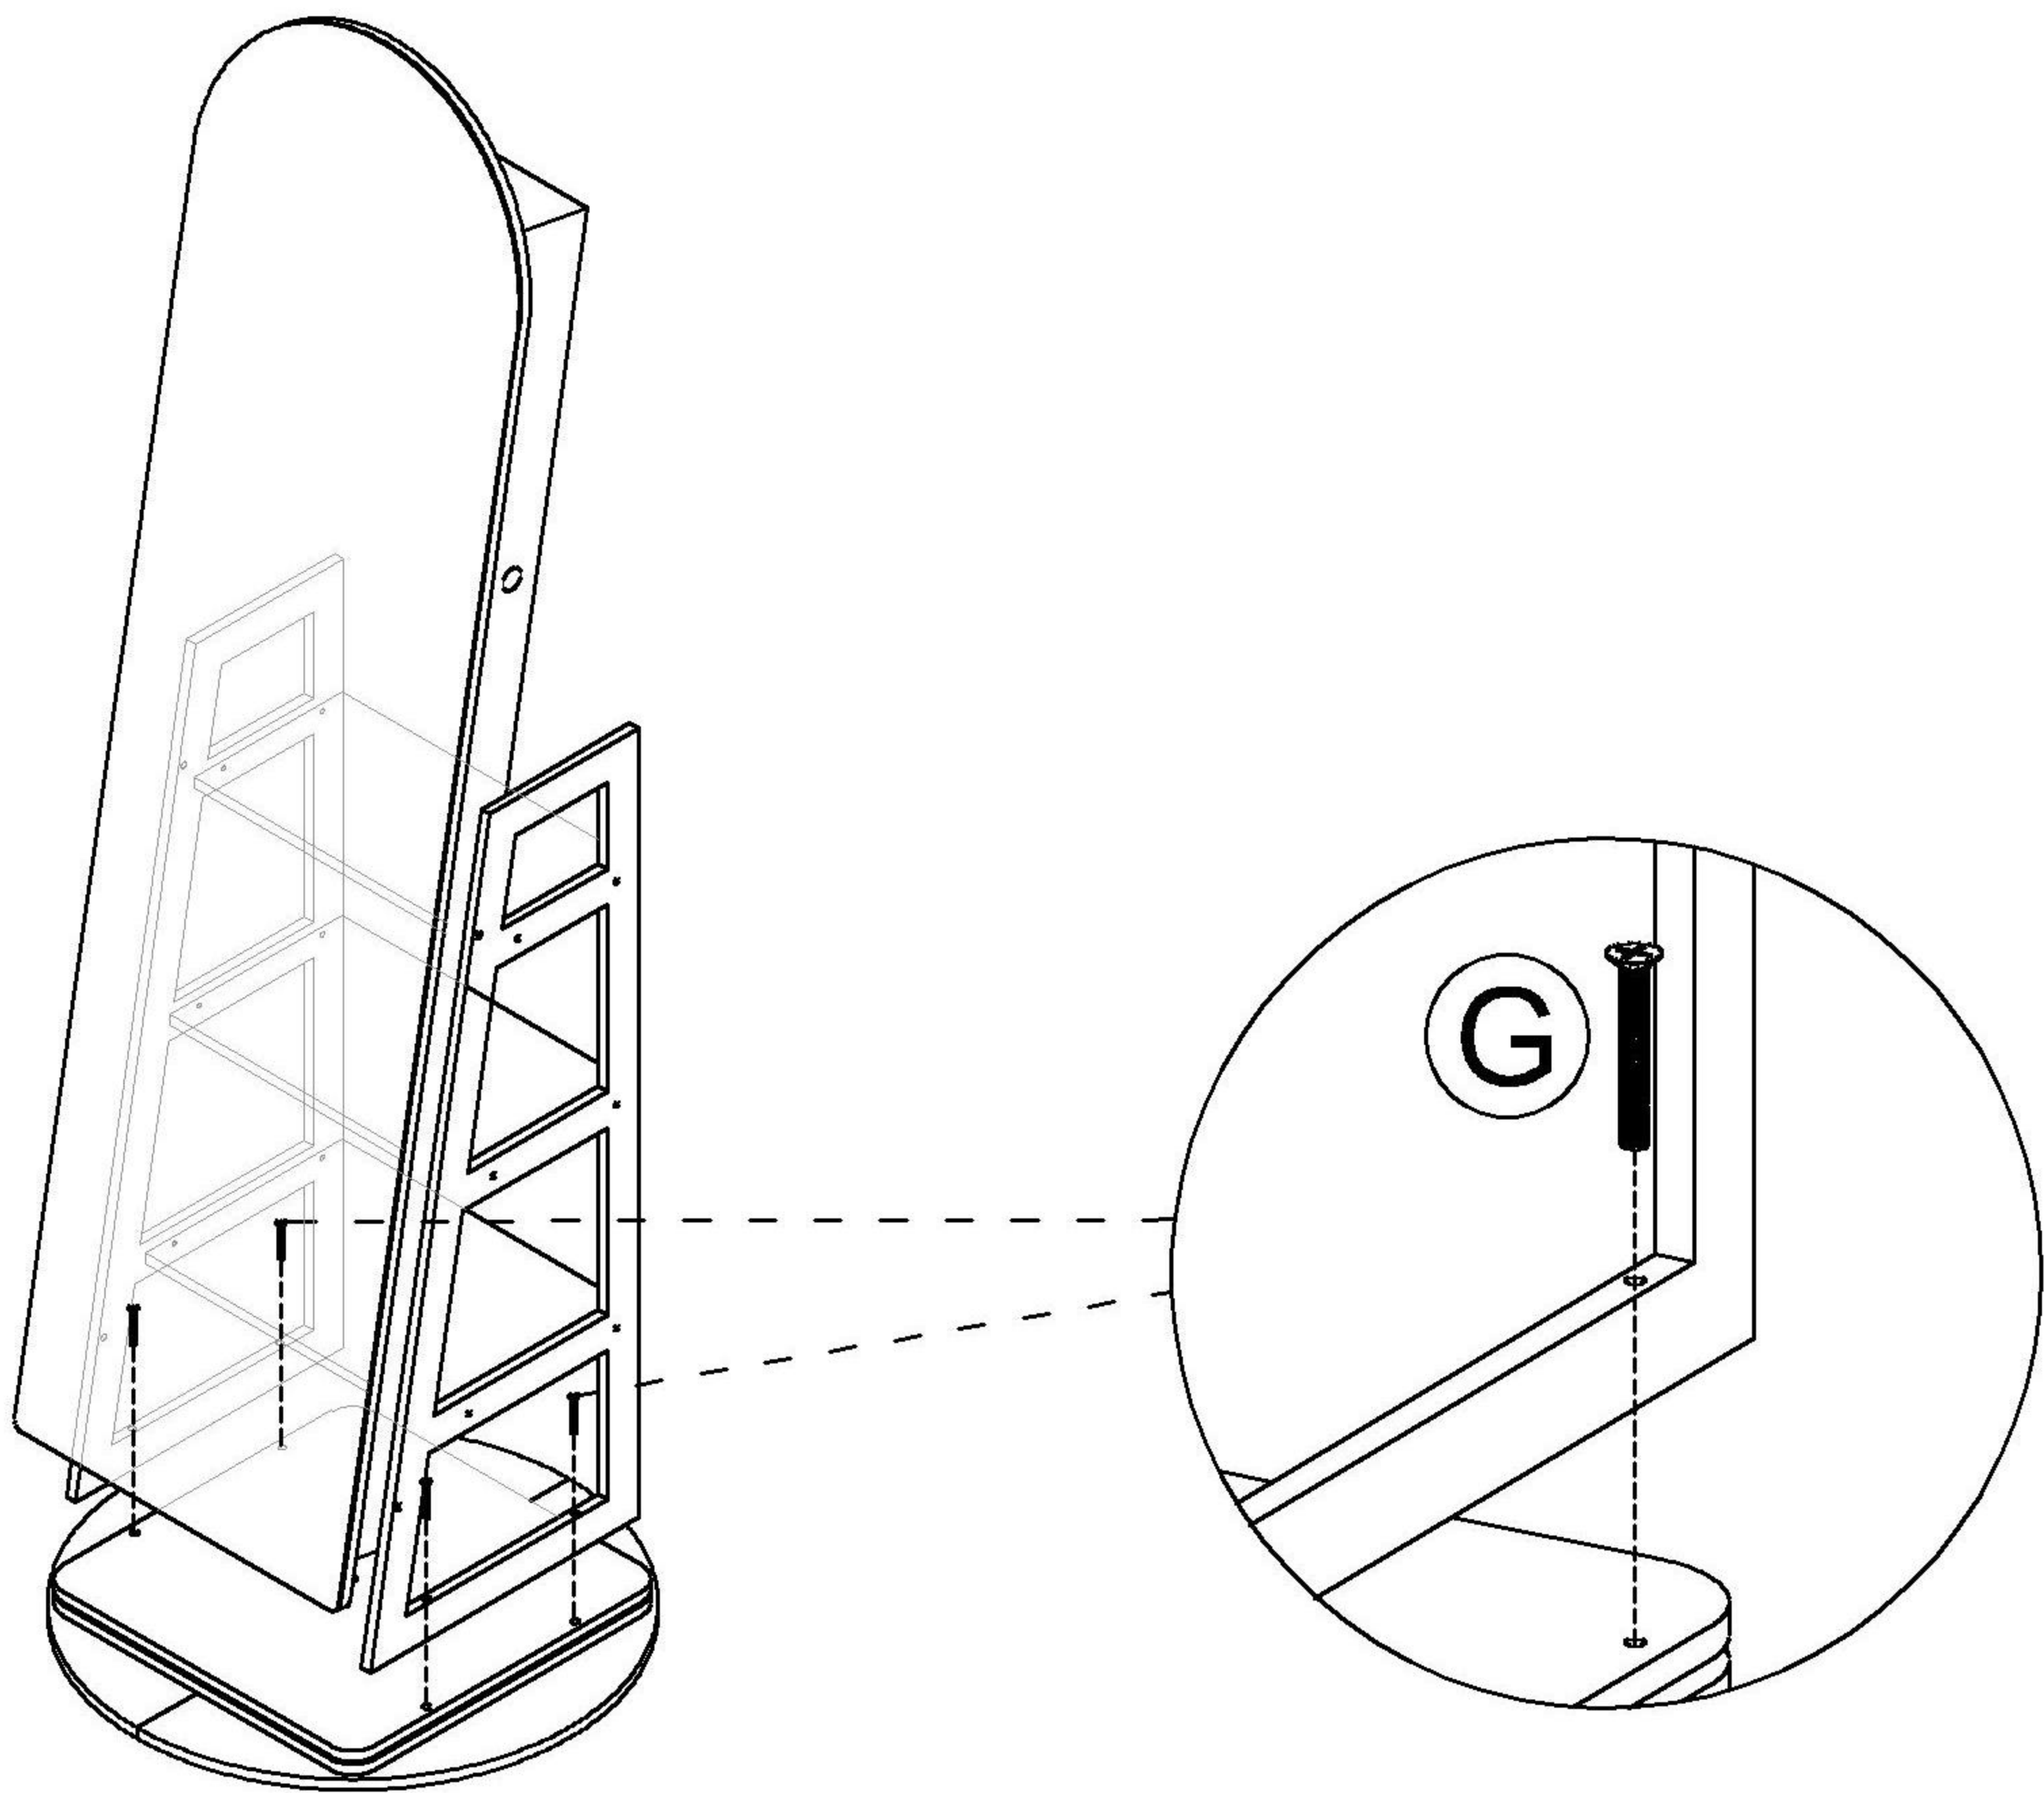



Step 6

E		x 3
D	 (3*10mm)	x 6
J	 	x 1
I		x 1

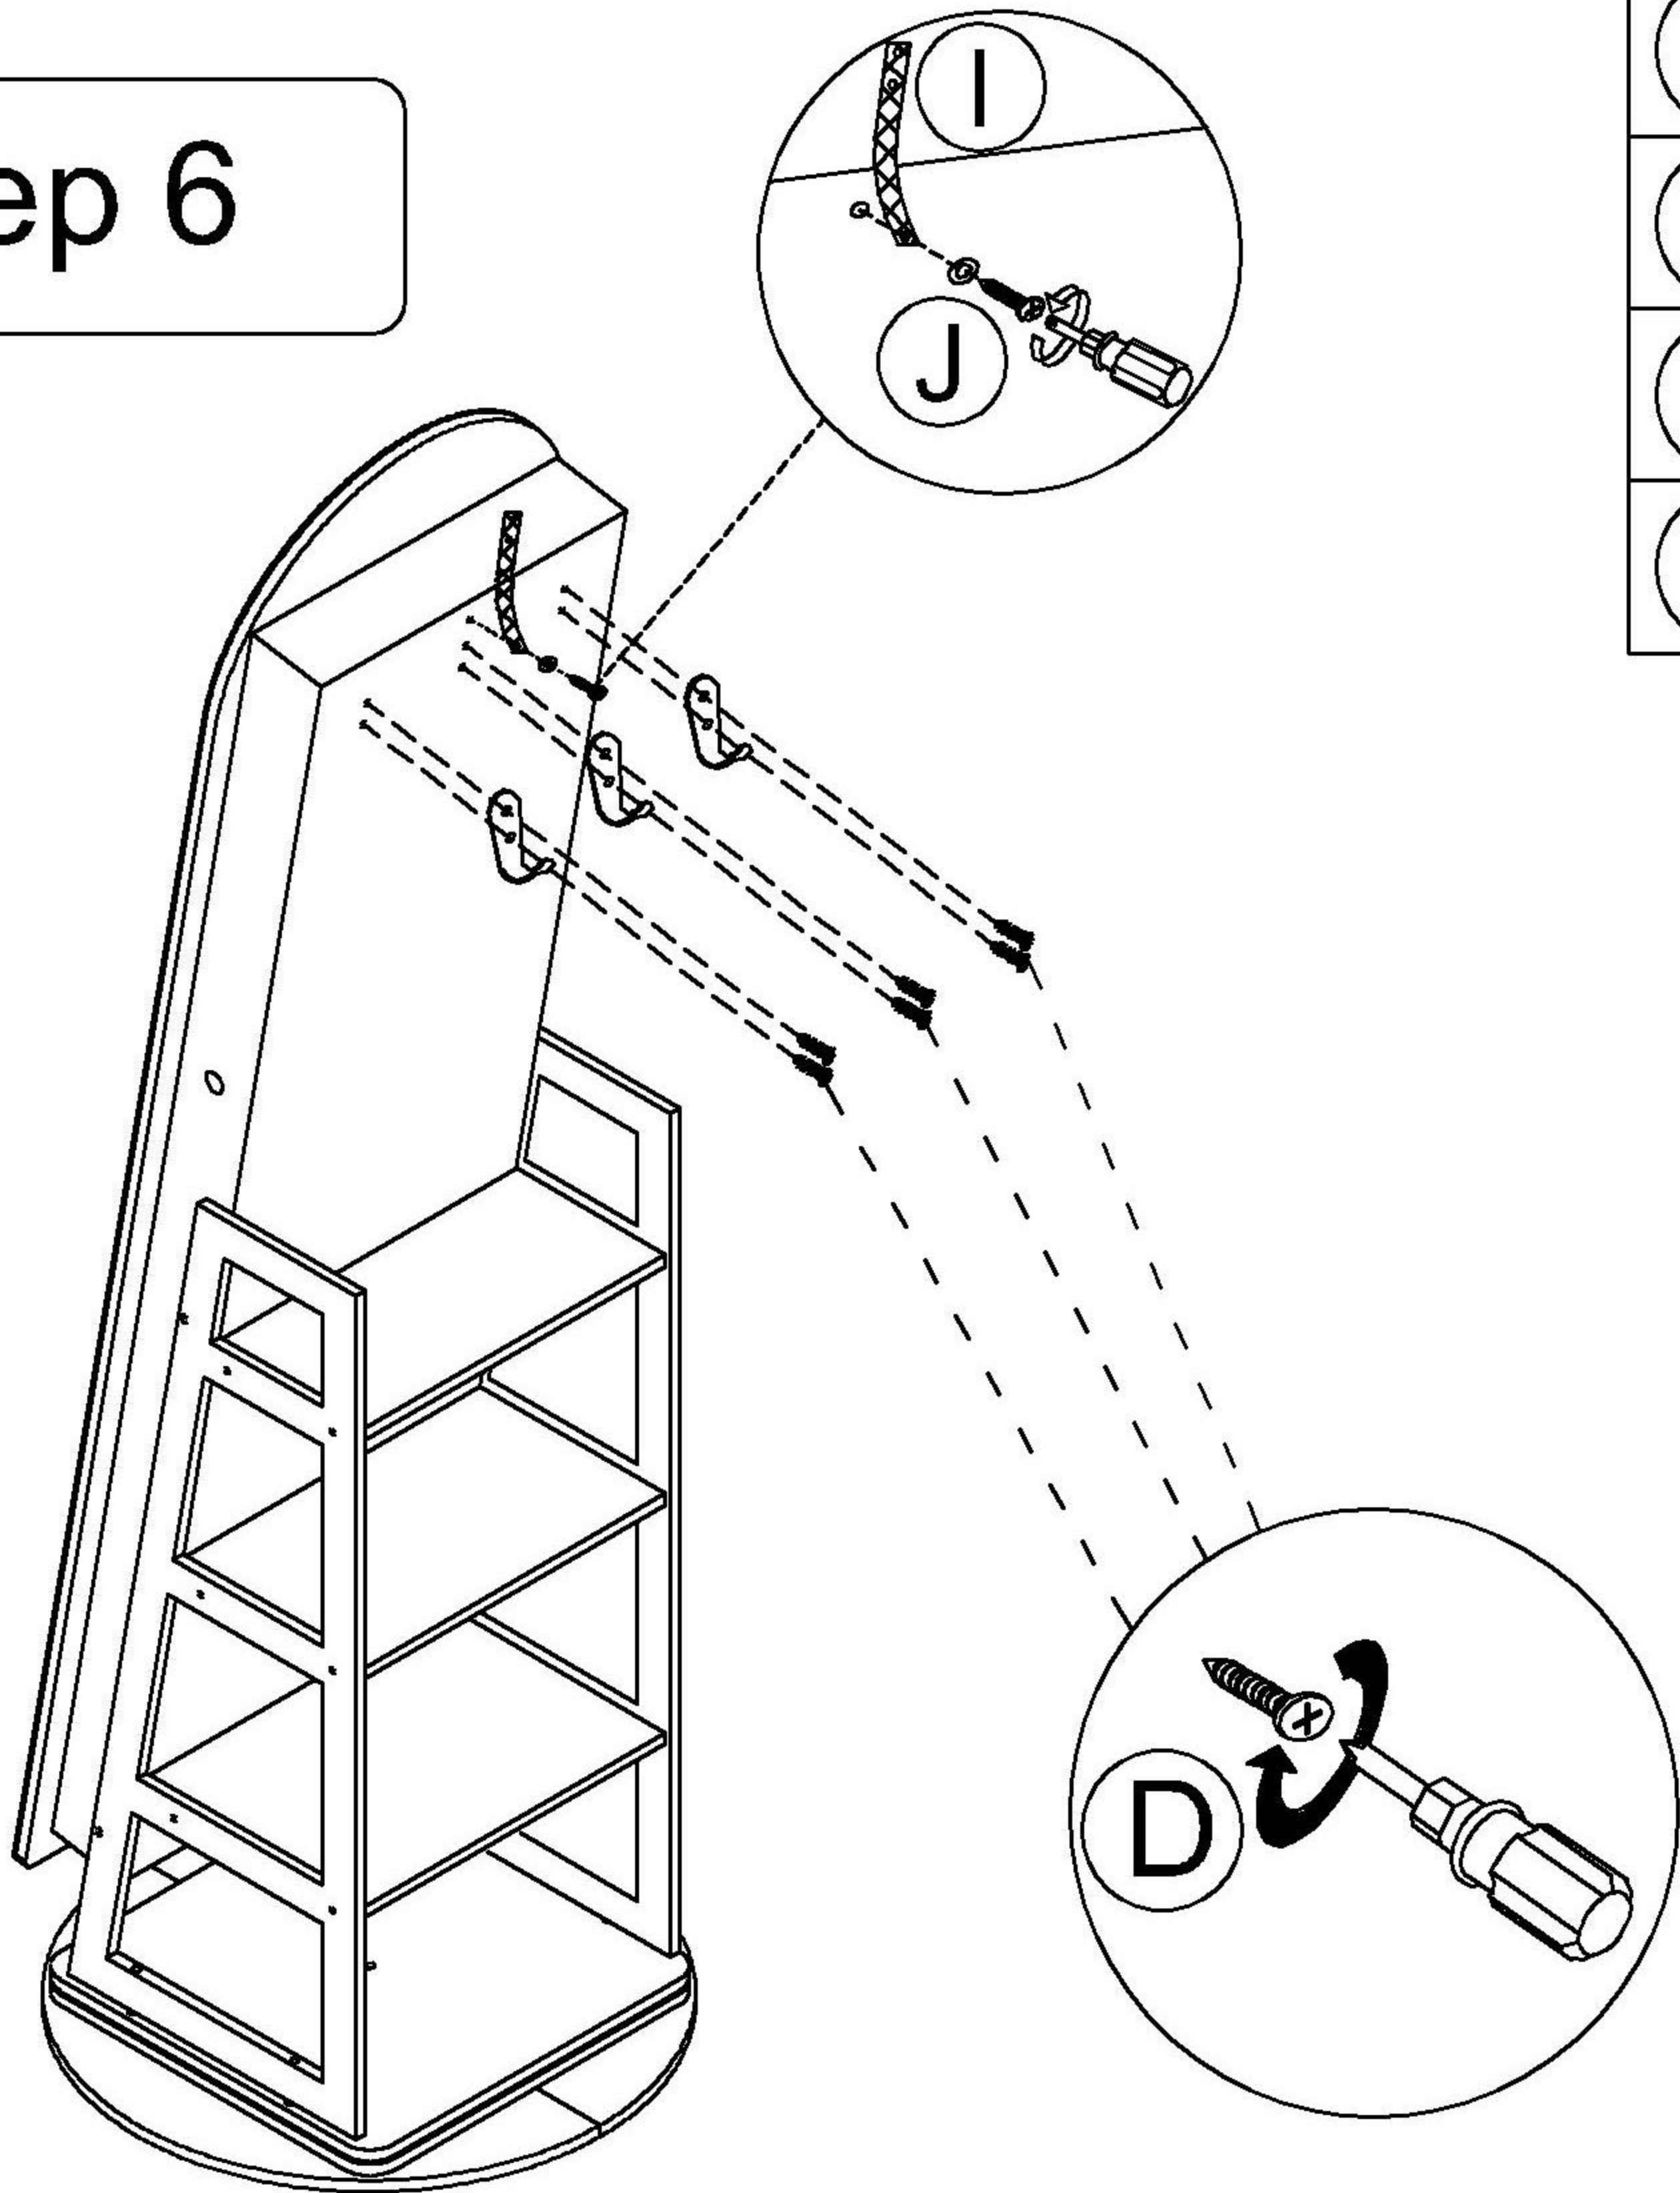

Step 7

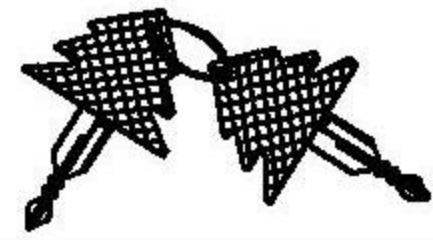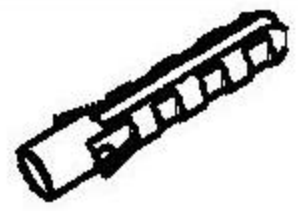(B)		x 1
(K)	 	x 1

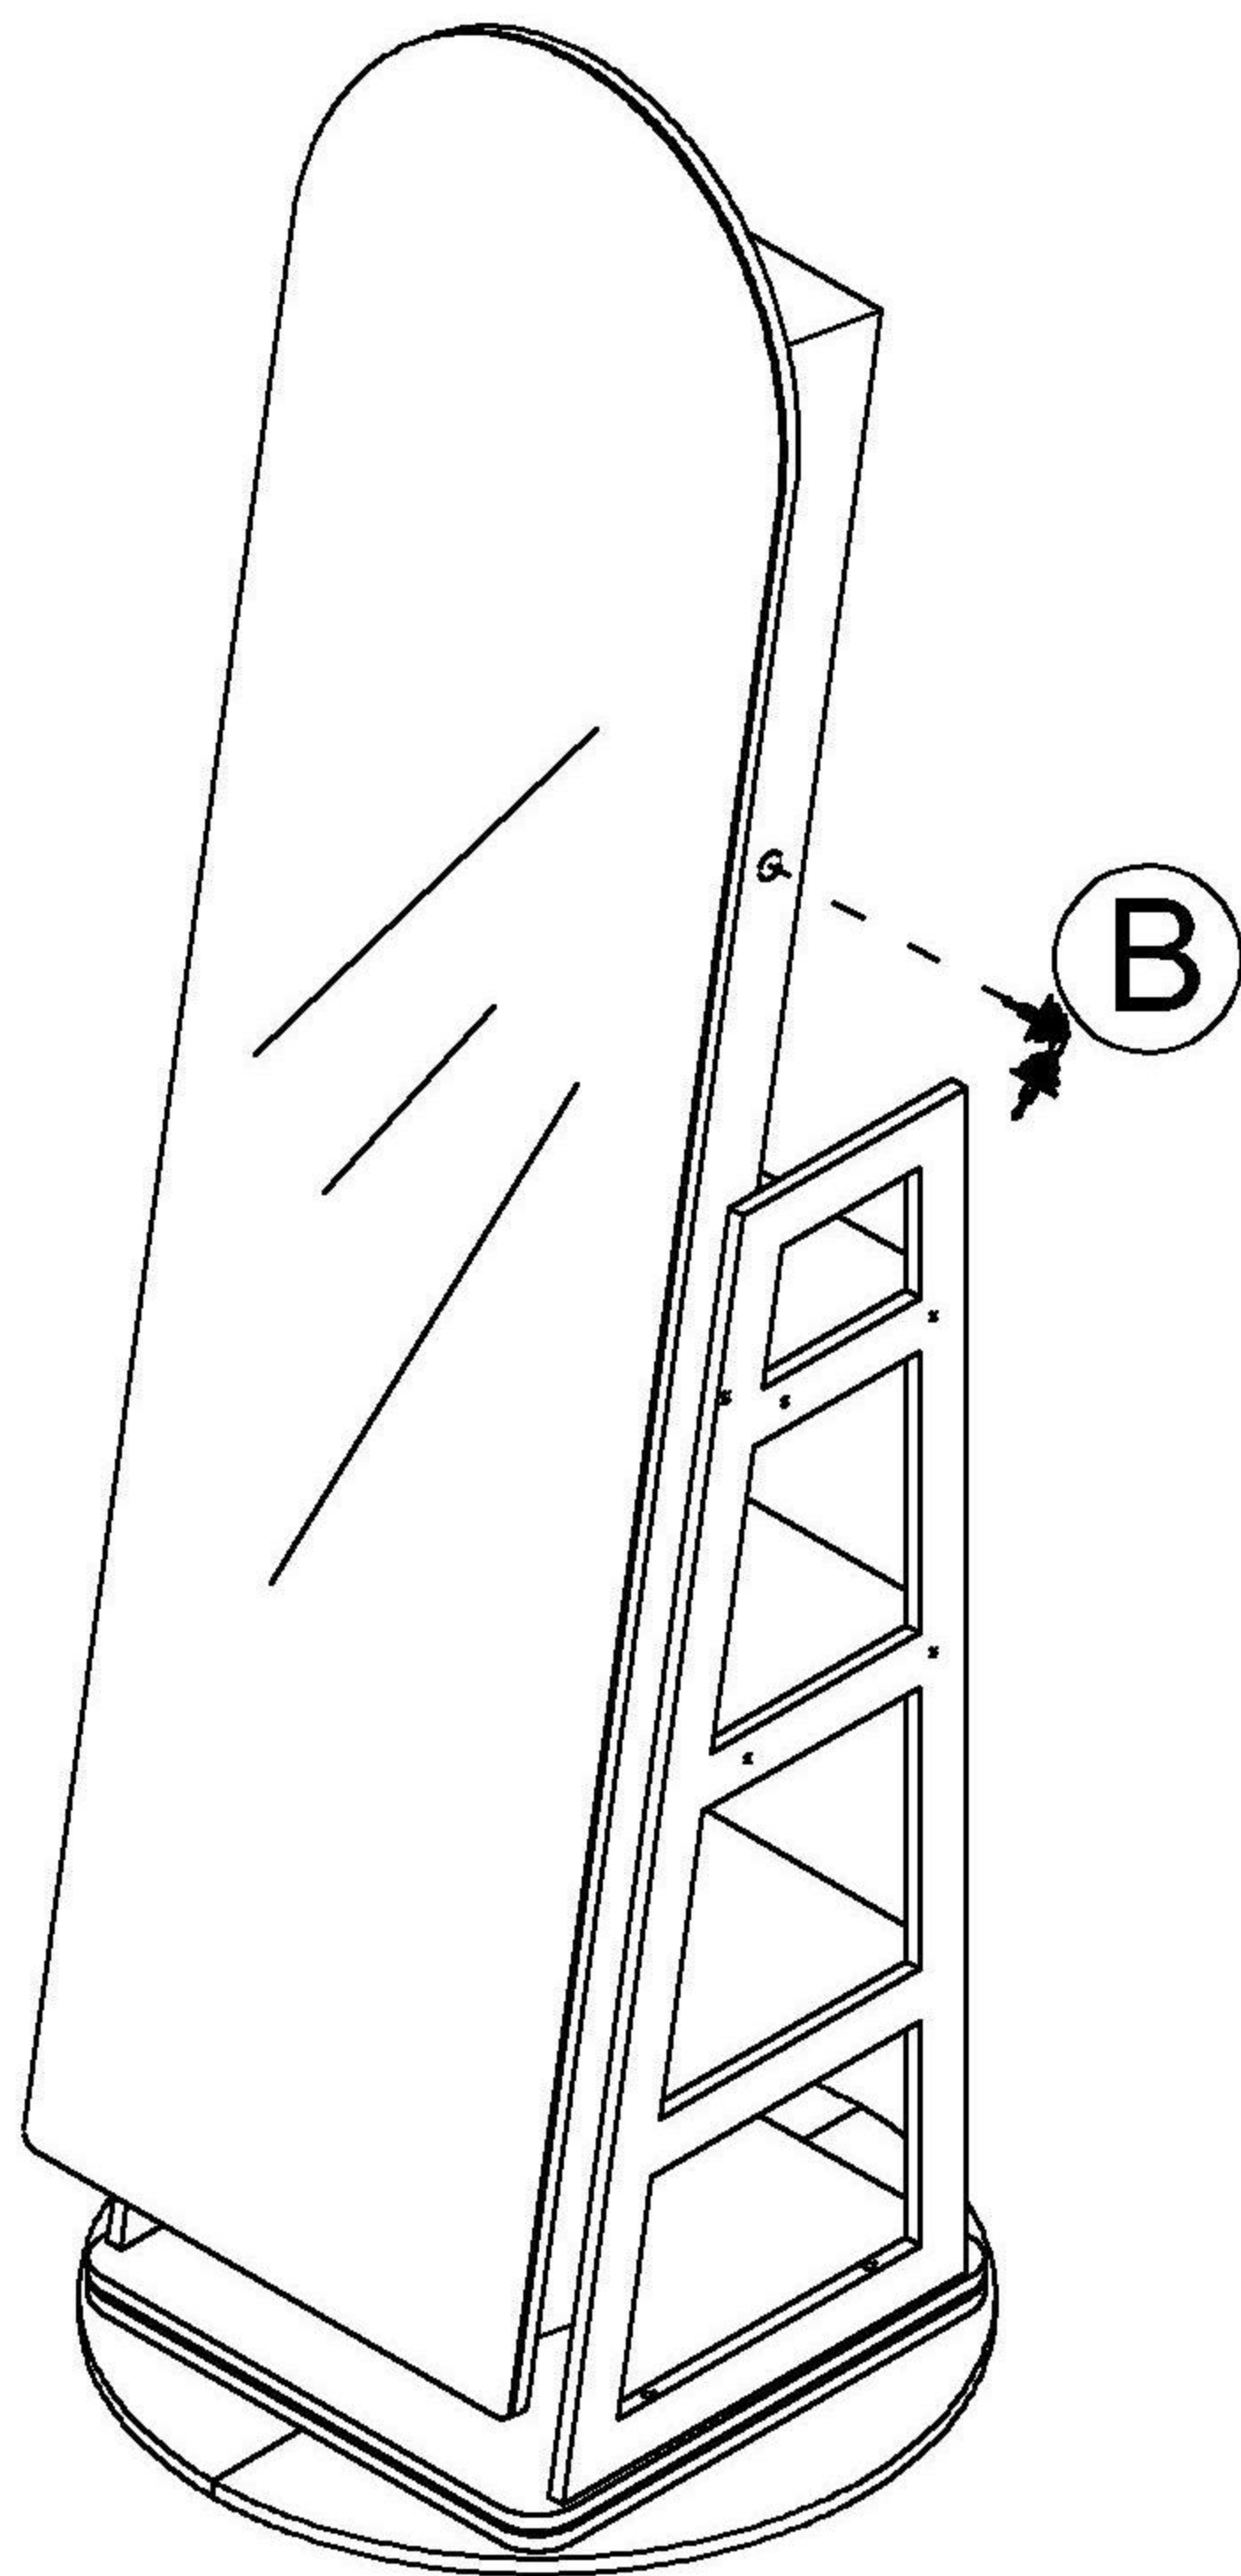

Battery installation (Tip: use 3 AA Batteries)

