


ASSEMBLY INSTRUCTION


COUNTER HEIGHT CHAIR

DO NOT FULLY TIGHTEN BOLTS UNTIL THE ENTIRE ITEM IS COMPLETELY ASSEMBLED


A=1 PC

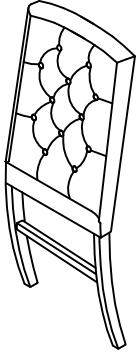


B=1 PC

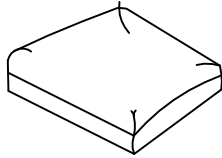


C=1 PC D=1 PC

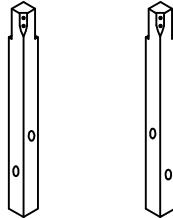


E=1 PC

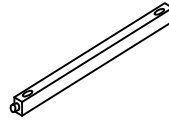

F=1 PC

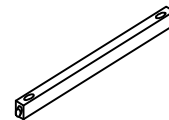


G=1 PC




No.	Description		Q.TY
1	BOLT Ø 5/16" X75mm		4 PCS
2	BOLT Ø 5/16" X60 mm		4 PCS
3	BOLT Ø 5/16" X38 mm		2 PCS
4	FLAT WASHER		10 PCS
5	SPRING WASHER		10 PCS
6	ALLEN KEY		1 PC
7	SCREW Ø4 x 40mm		6 PCS

STEP 1

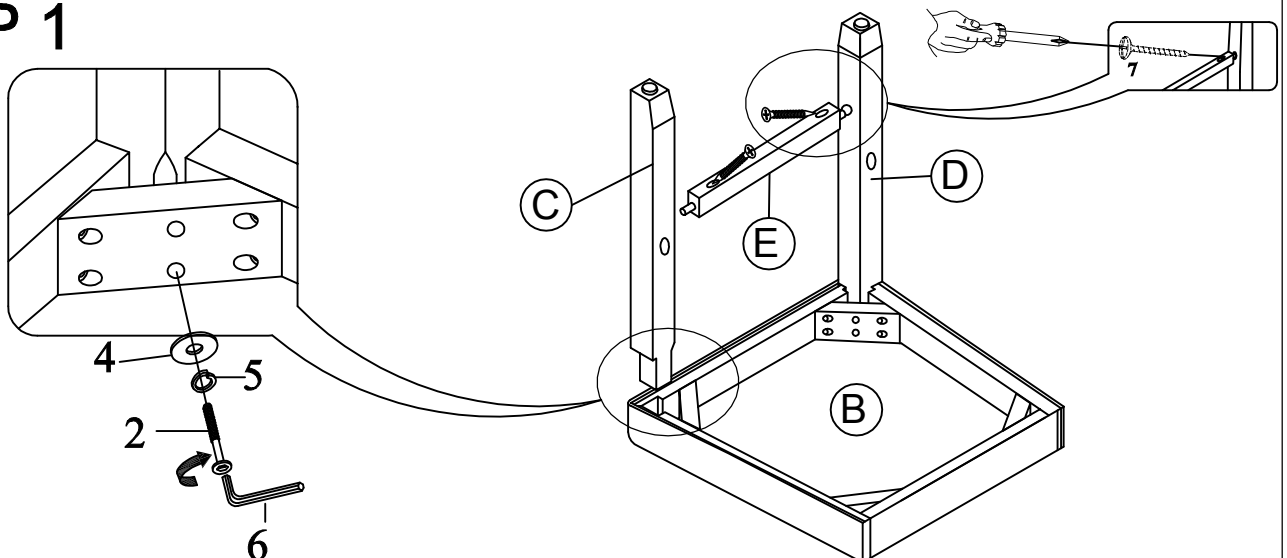

STEP 2

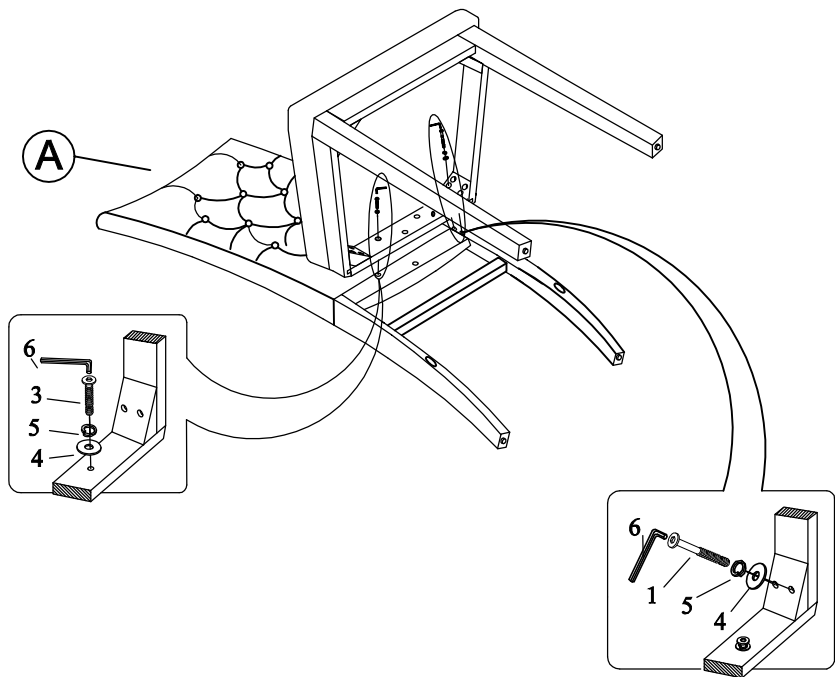

STEP 3

