

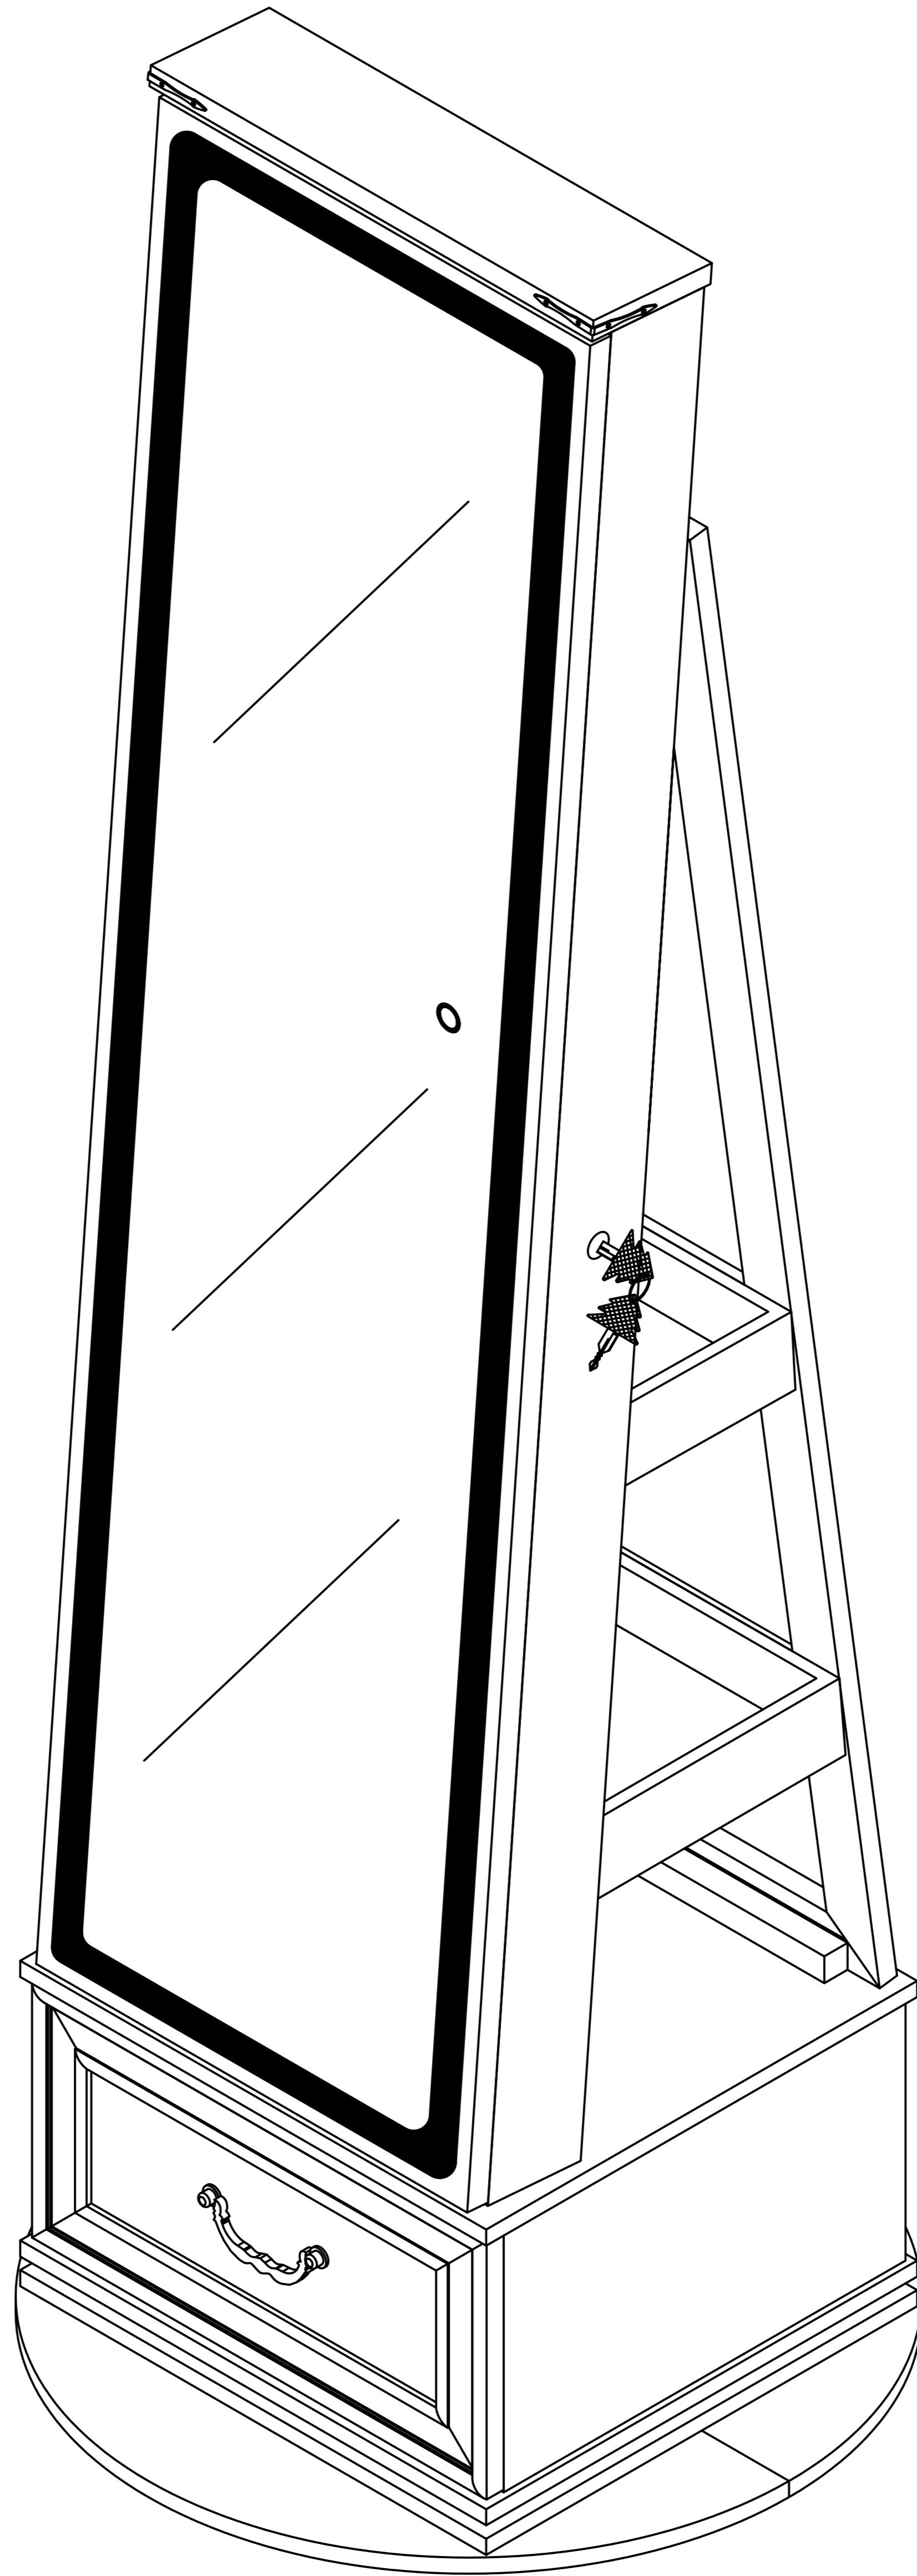
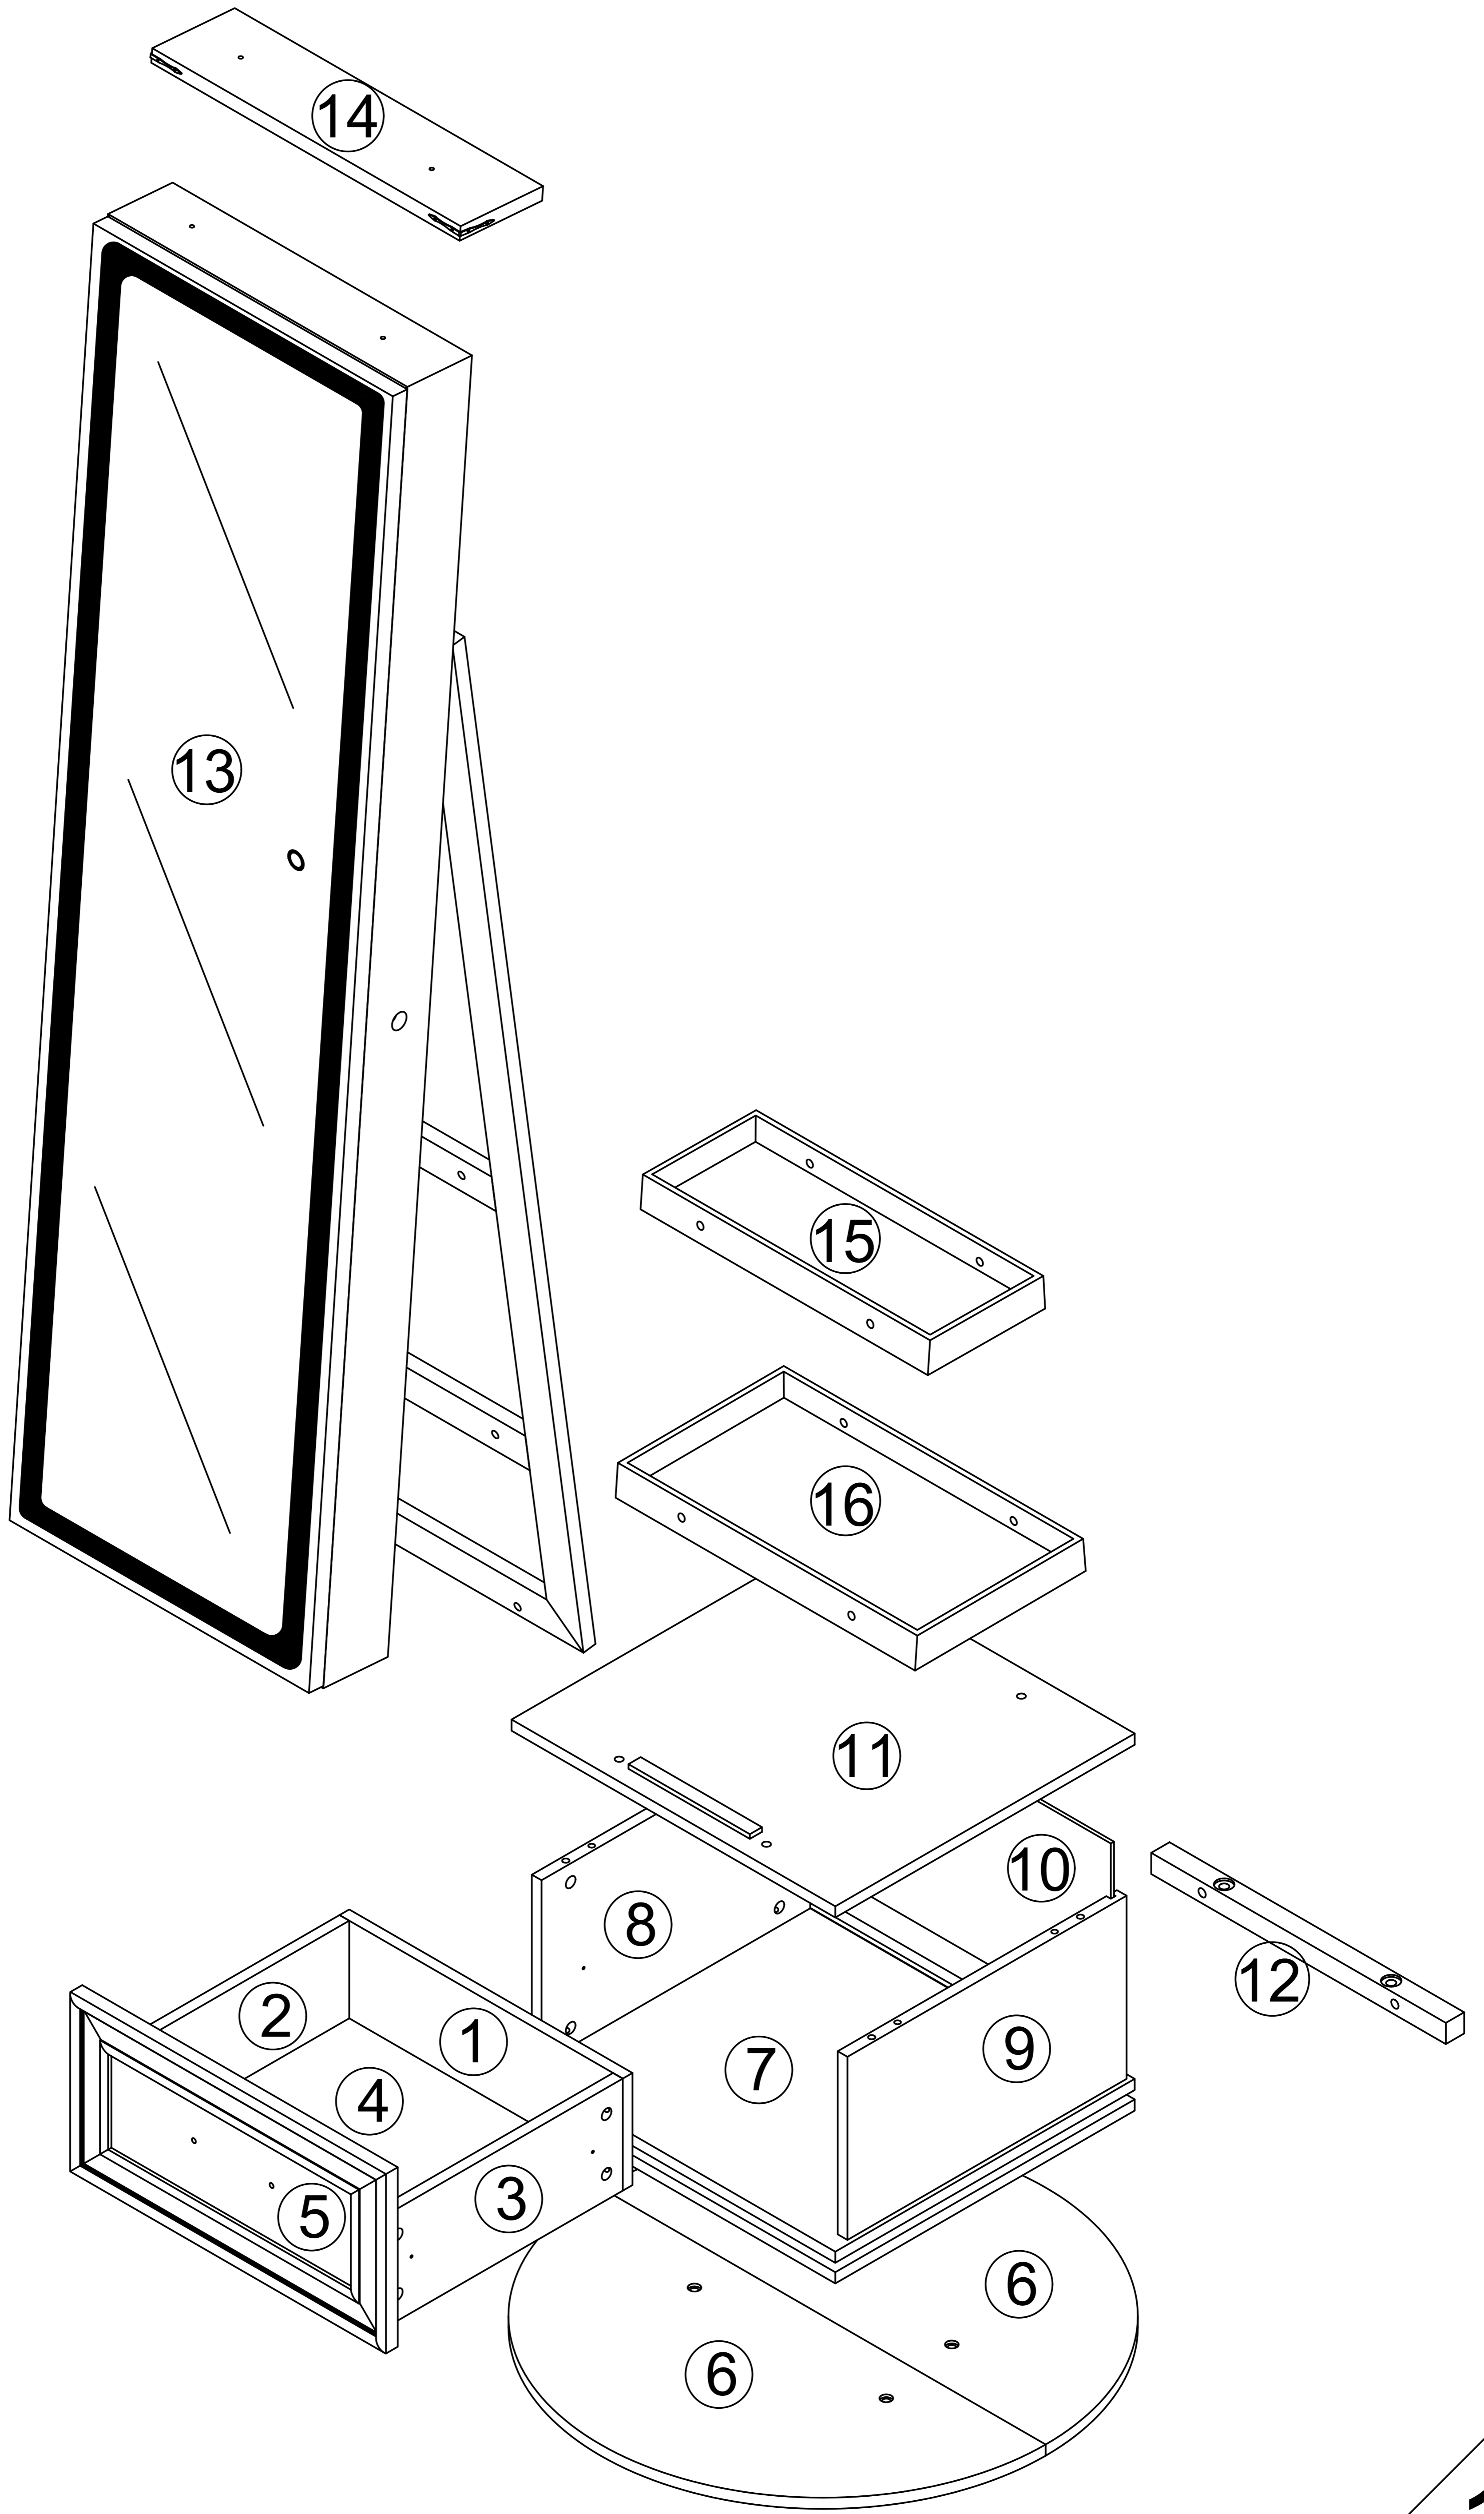
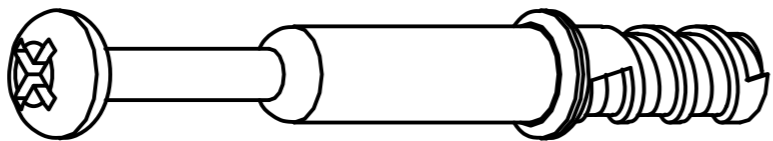
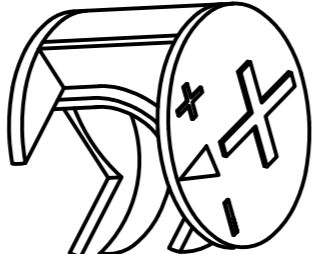
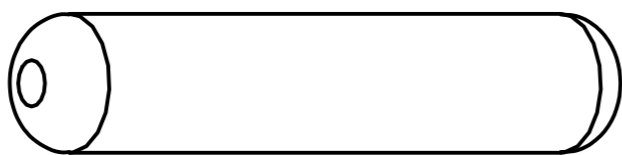
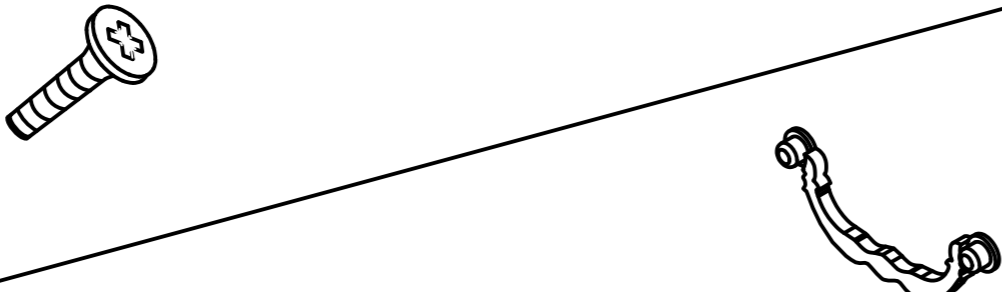





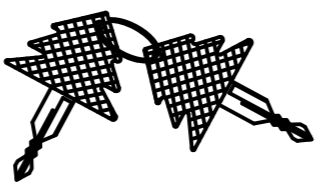
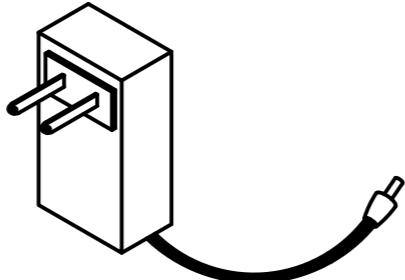



# 67029 MIRROR JEWELLERY CABINET

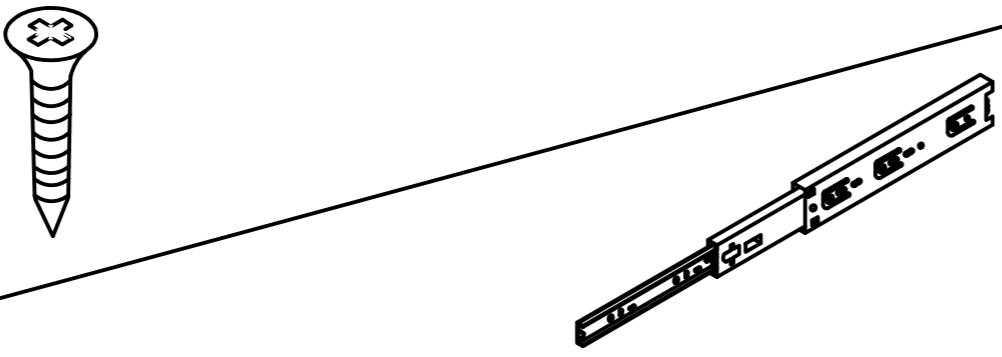

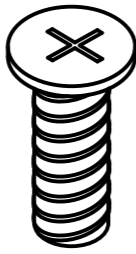


# Accessories list

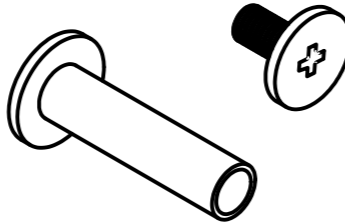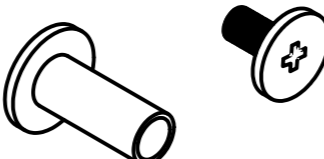A		Two In One Screw (6x28mm)	16pcs +2pcs
B		Two In One Nut (10x12mm)	16pcs +2pcs
C		Wood Chipping (6x30mm)	8pcs +2pcs
D		Screw & Handle (4x16mm)	2pcs  1pcs
E		Screw & Guide (3x12mm)	10pcs +2pcs  2pcs
F		Screw (6x22mm)	4pcs +1pcs
G		Screw (6x30mm)	6pcs +1pcs
H		Screw (3.5x20mm)	2pcs
I		Pair the lock screws (5x20mm)	4pcs +1pcs
J		Pair the lock screws (5x10mm)	4pcs +1pcs
K	<p style="text-align: center;">Anti tipping hardware</p>  <p style="text-align: center;"> <span>x1</span>      <span>x1</span> (3.5x12mm)      <span>x2</span>      <span>x1</span> (4x45mm)      <span>x1</span> </p>		
L		The key	1pcs
M		The power adapter (12V 3A)	1pcs

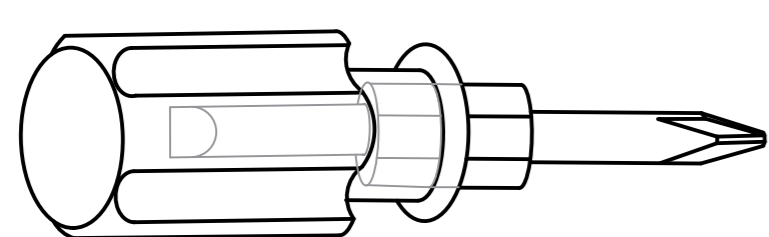

1pcs

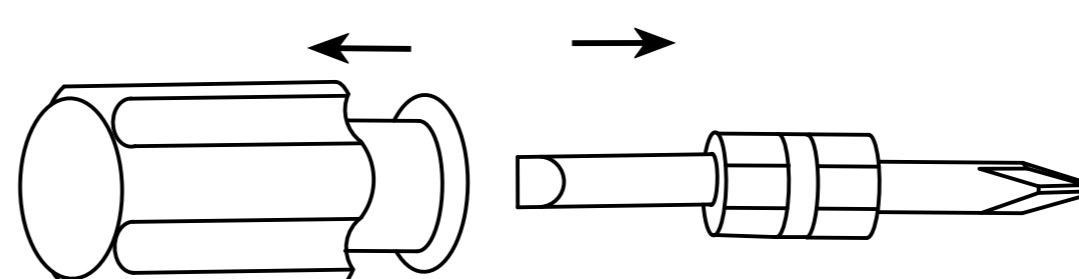


Double-head screwdriver, use as required


2

# Use parts A and B




Step 1

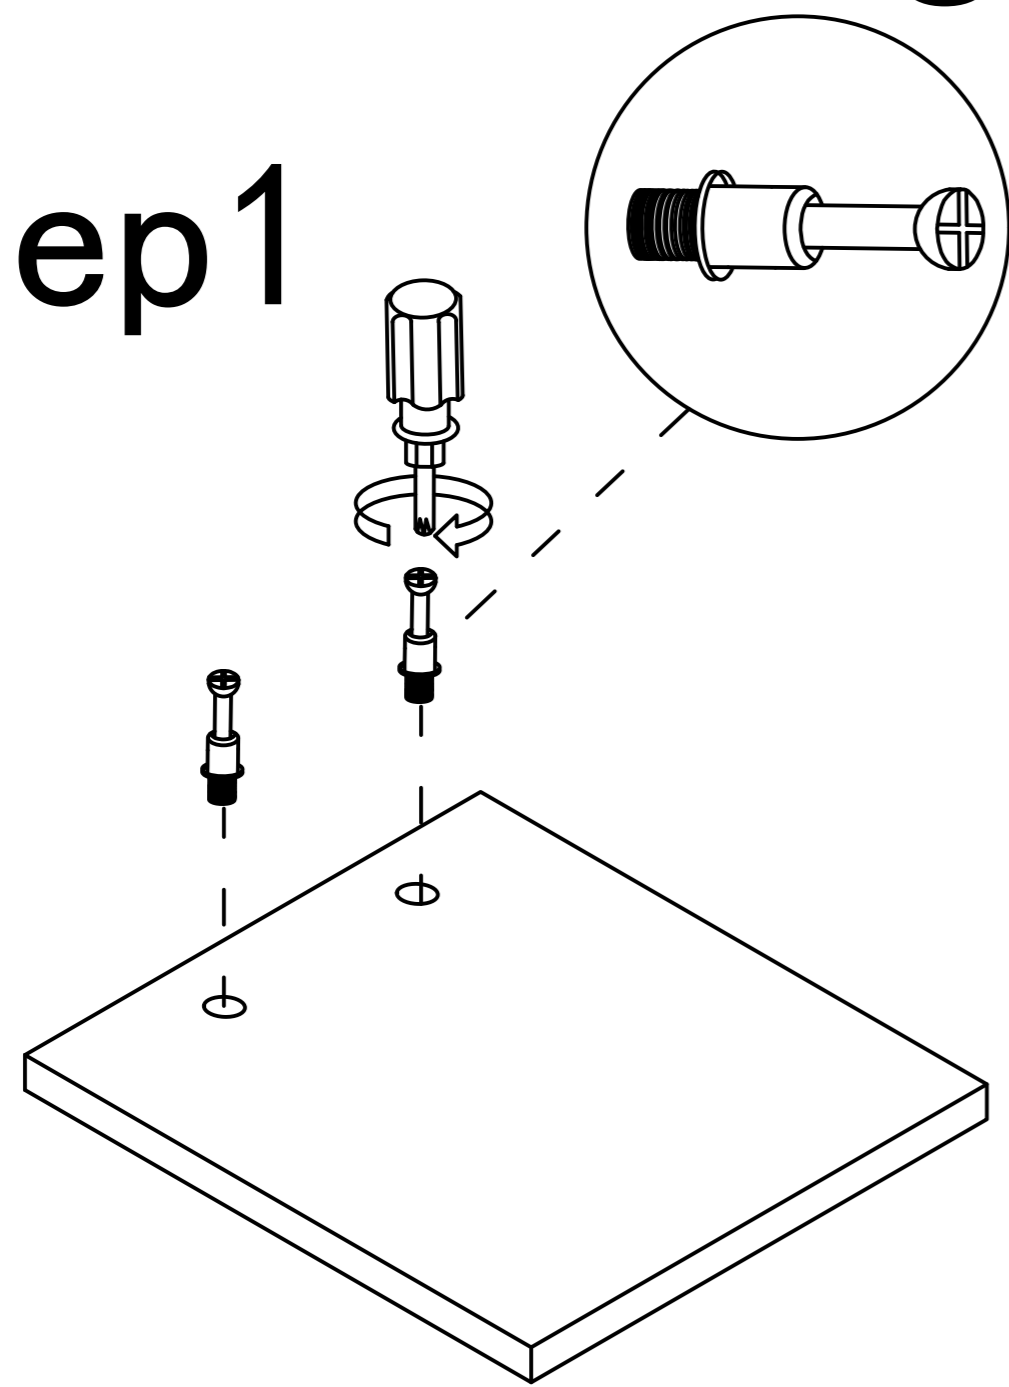

Step 2

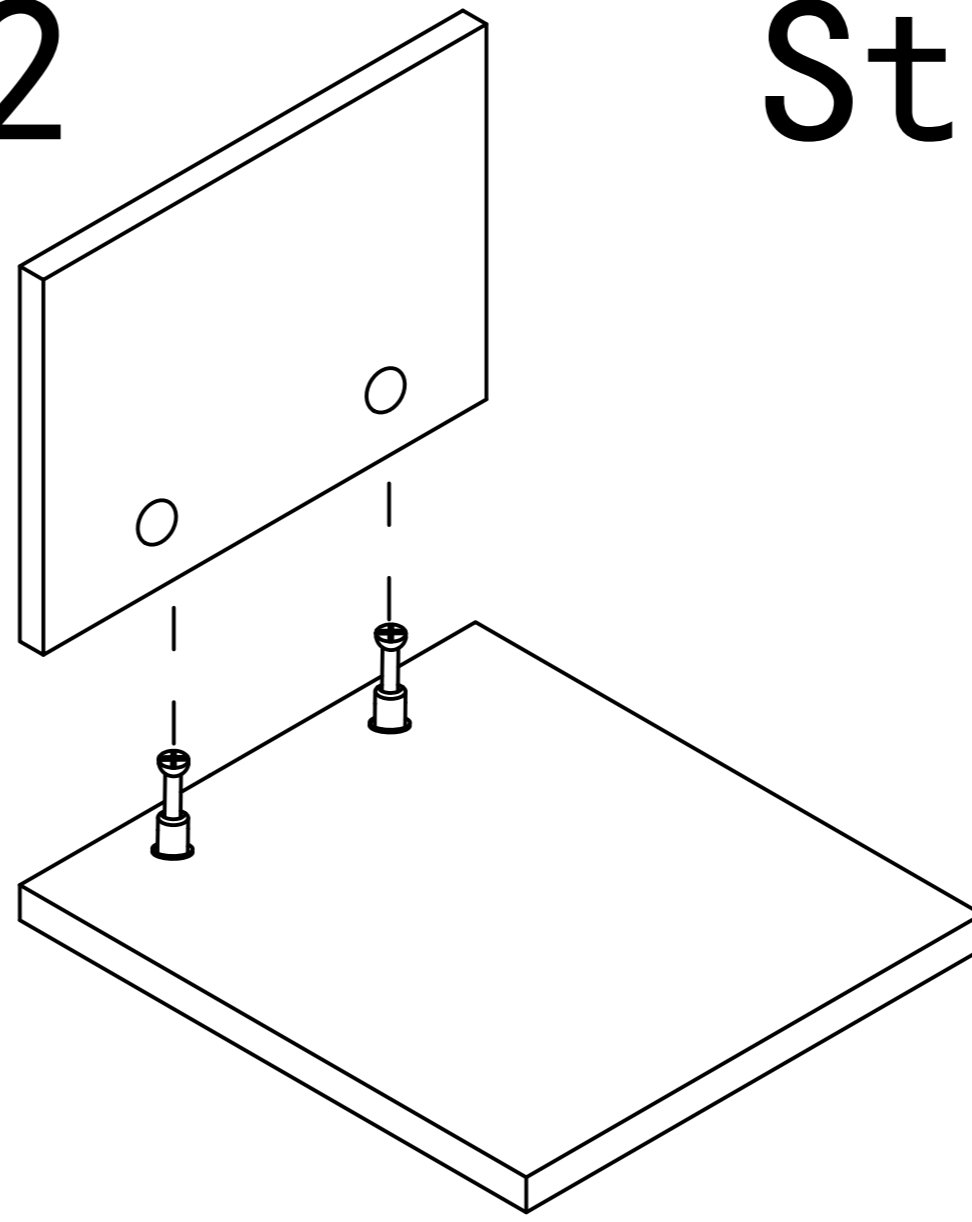



Step 3

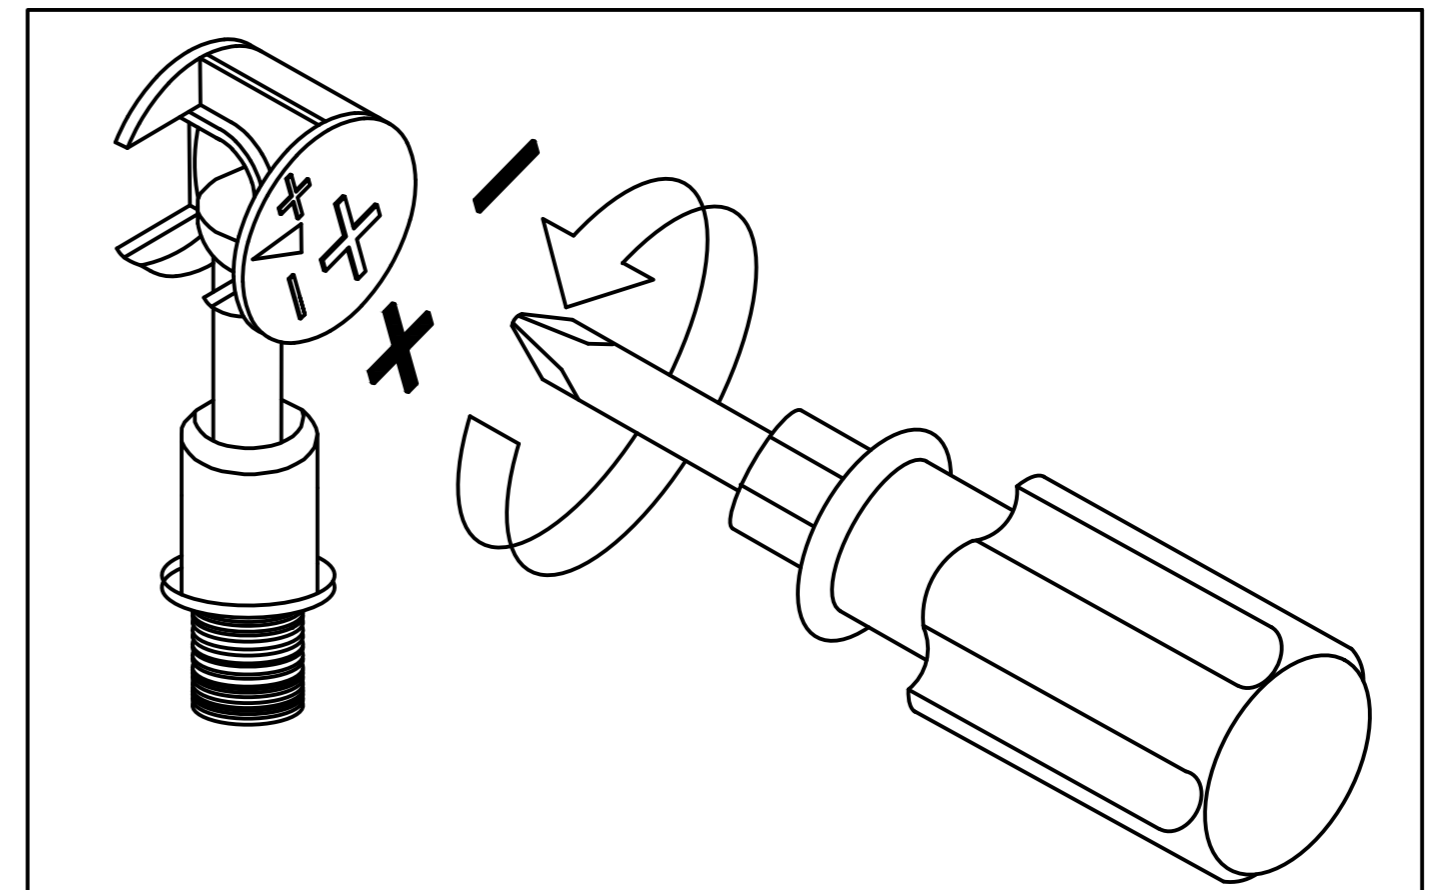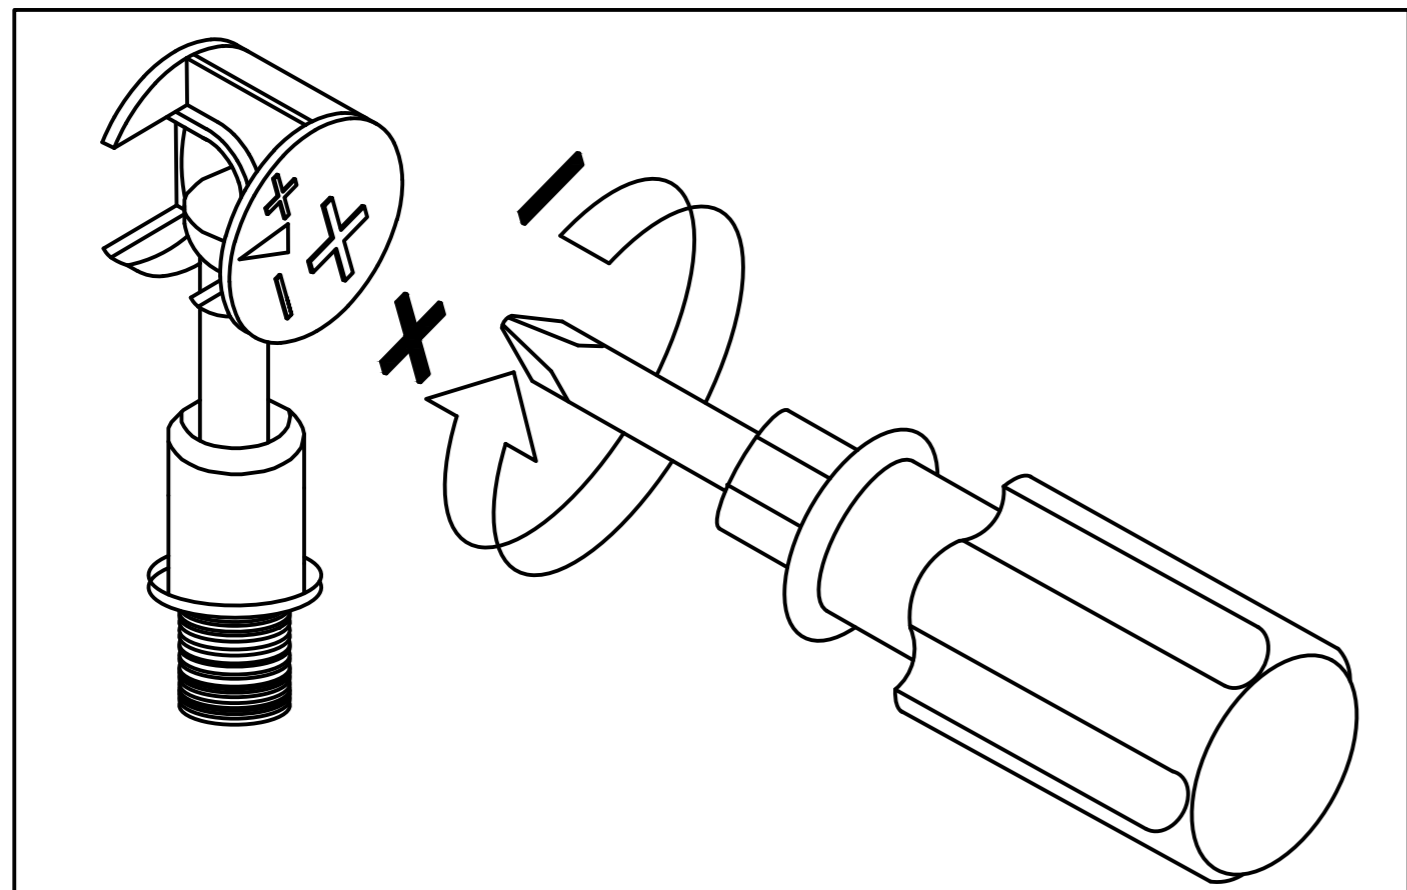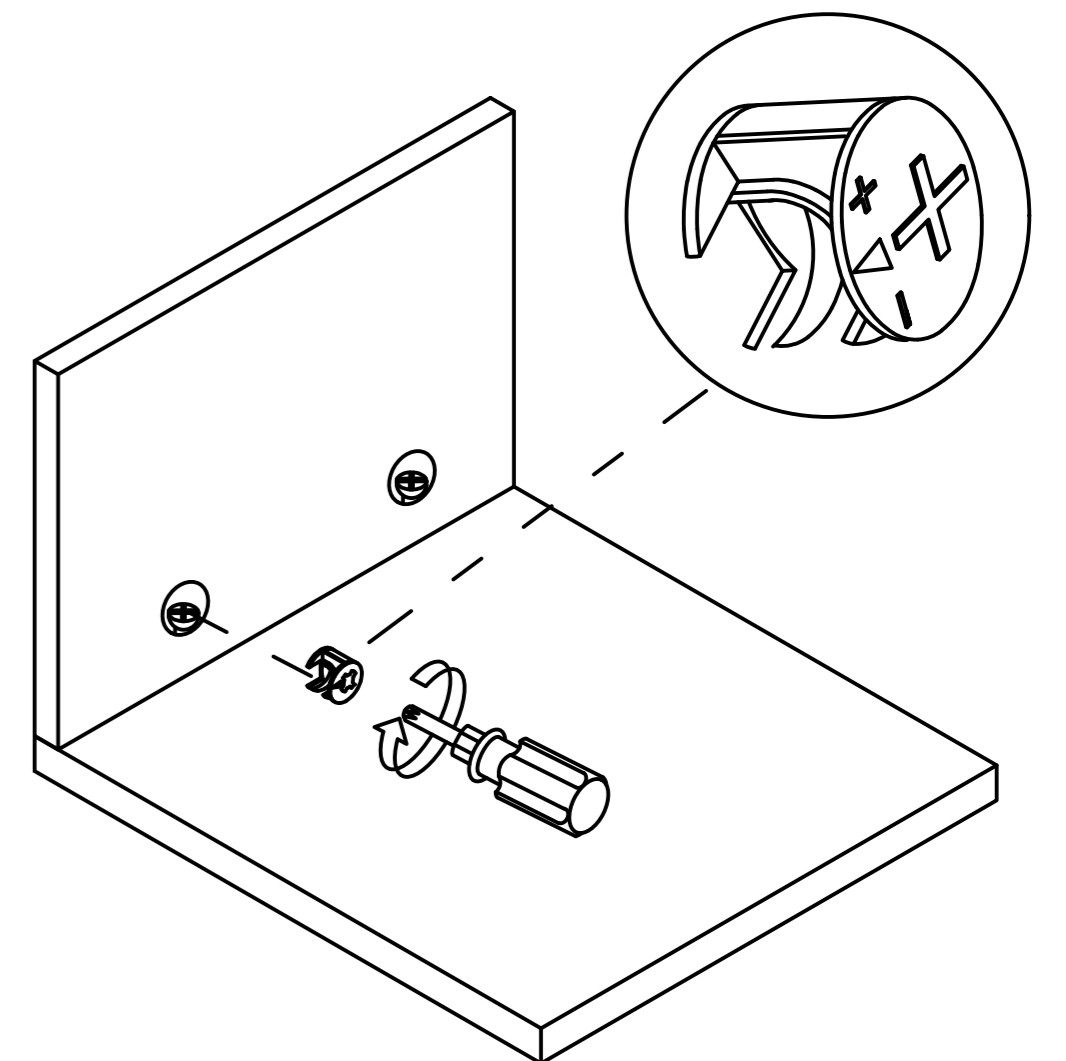

Use a screwdriver to lock in the direction of the "+" sign




Disassemble along the direction of "-" sign

Step 1




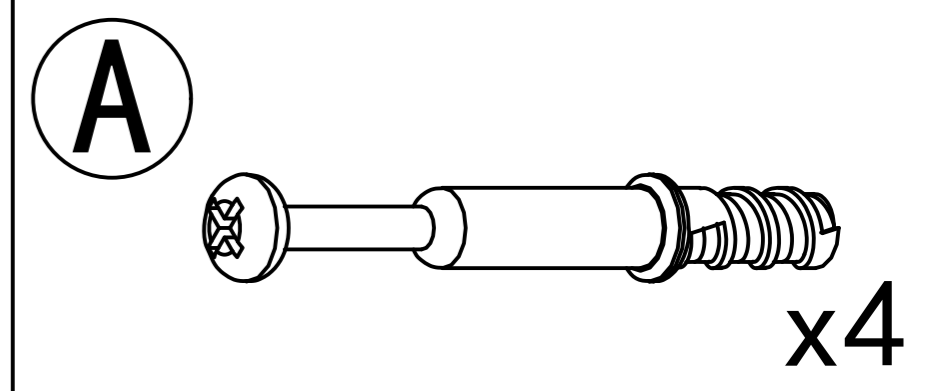
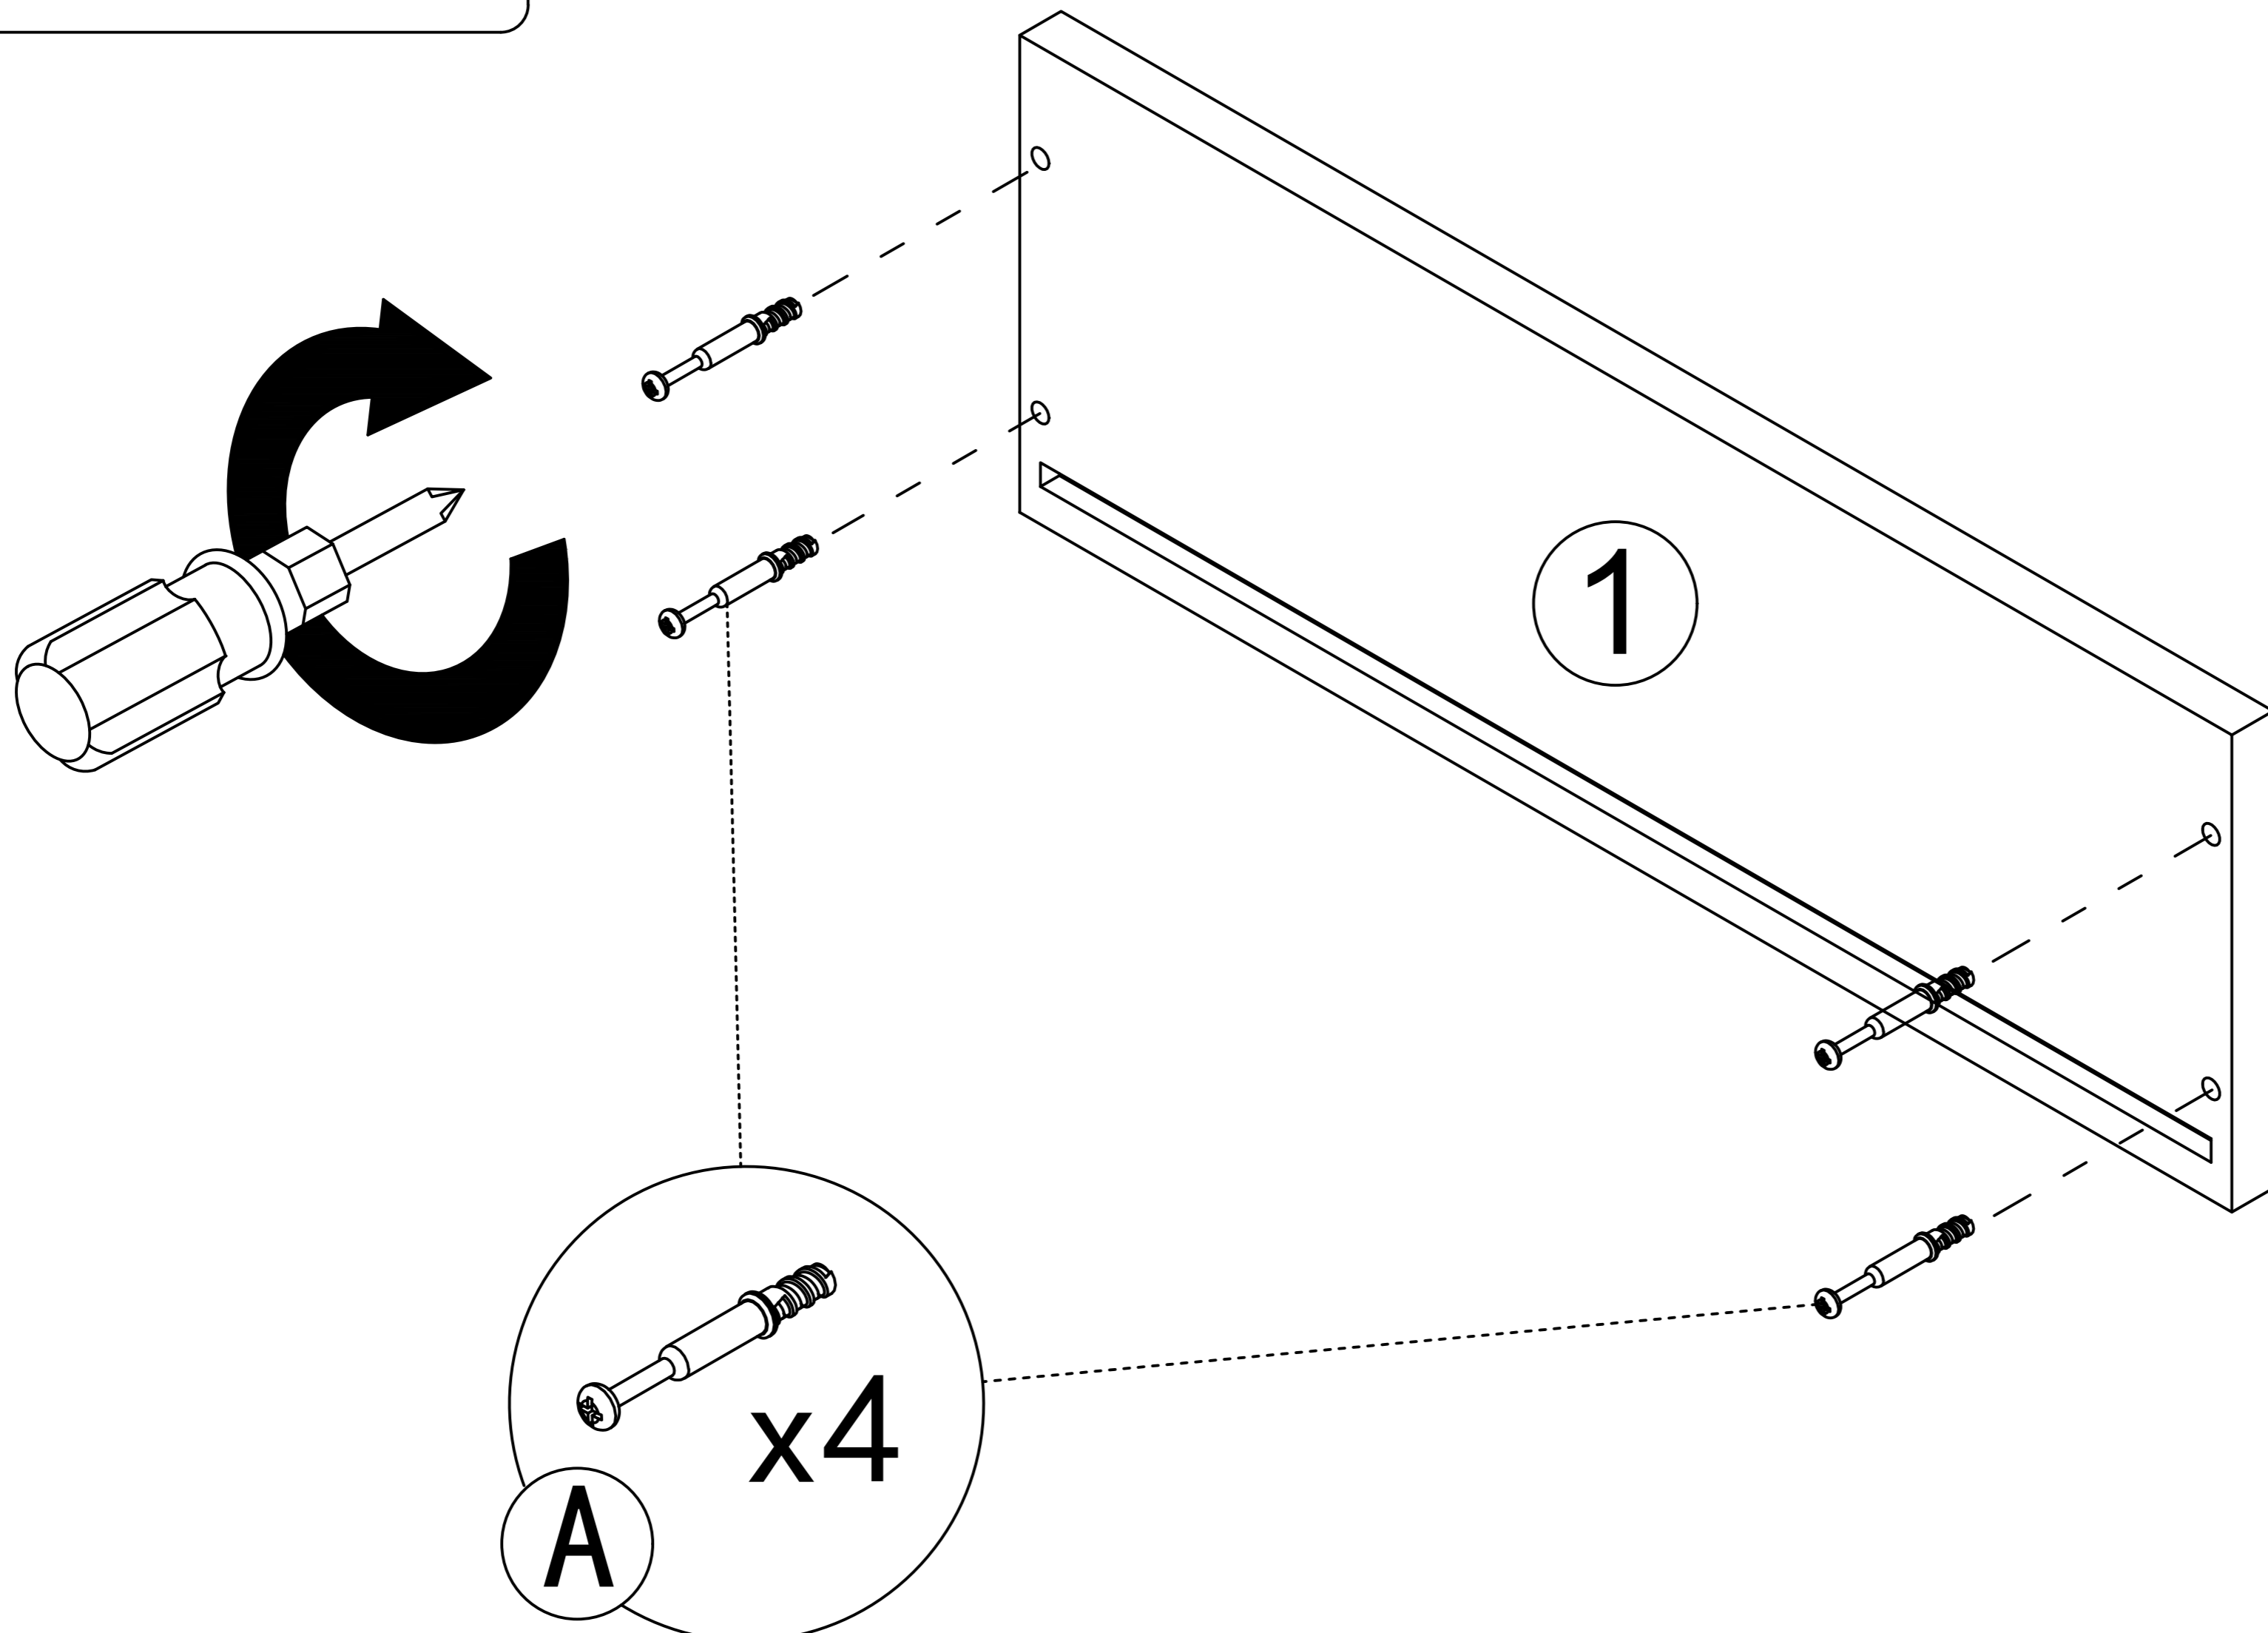


3



# Step 2

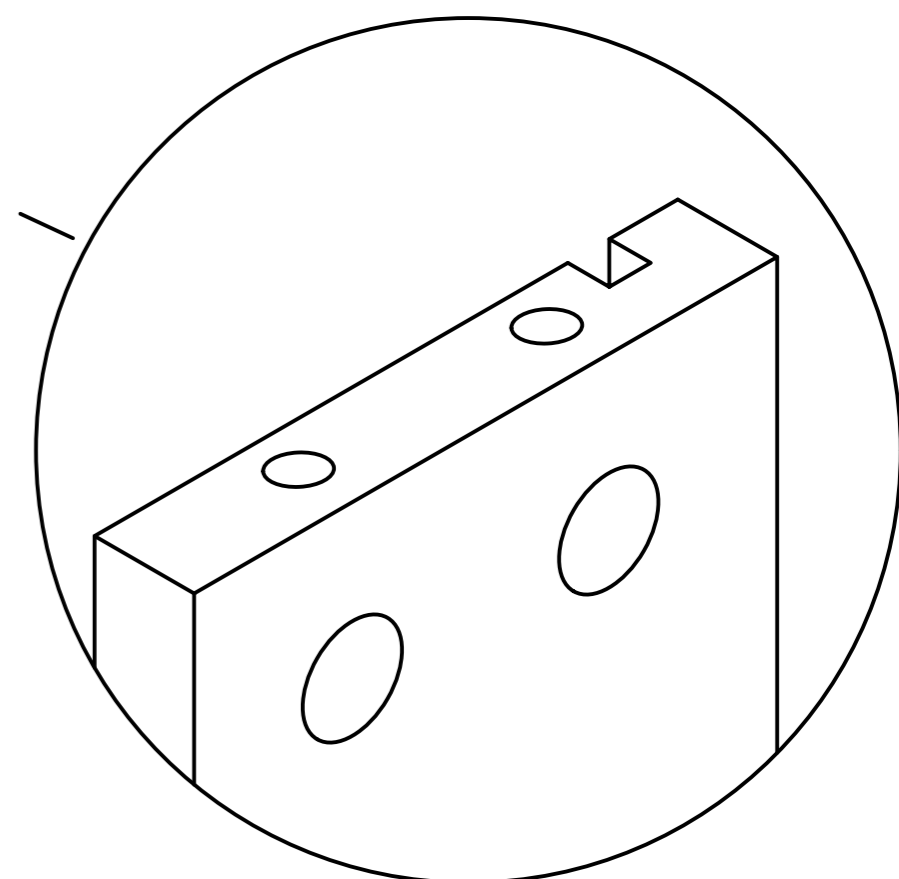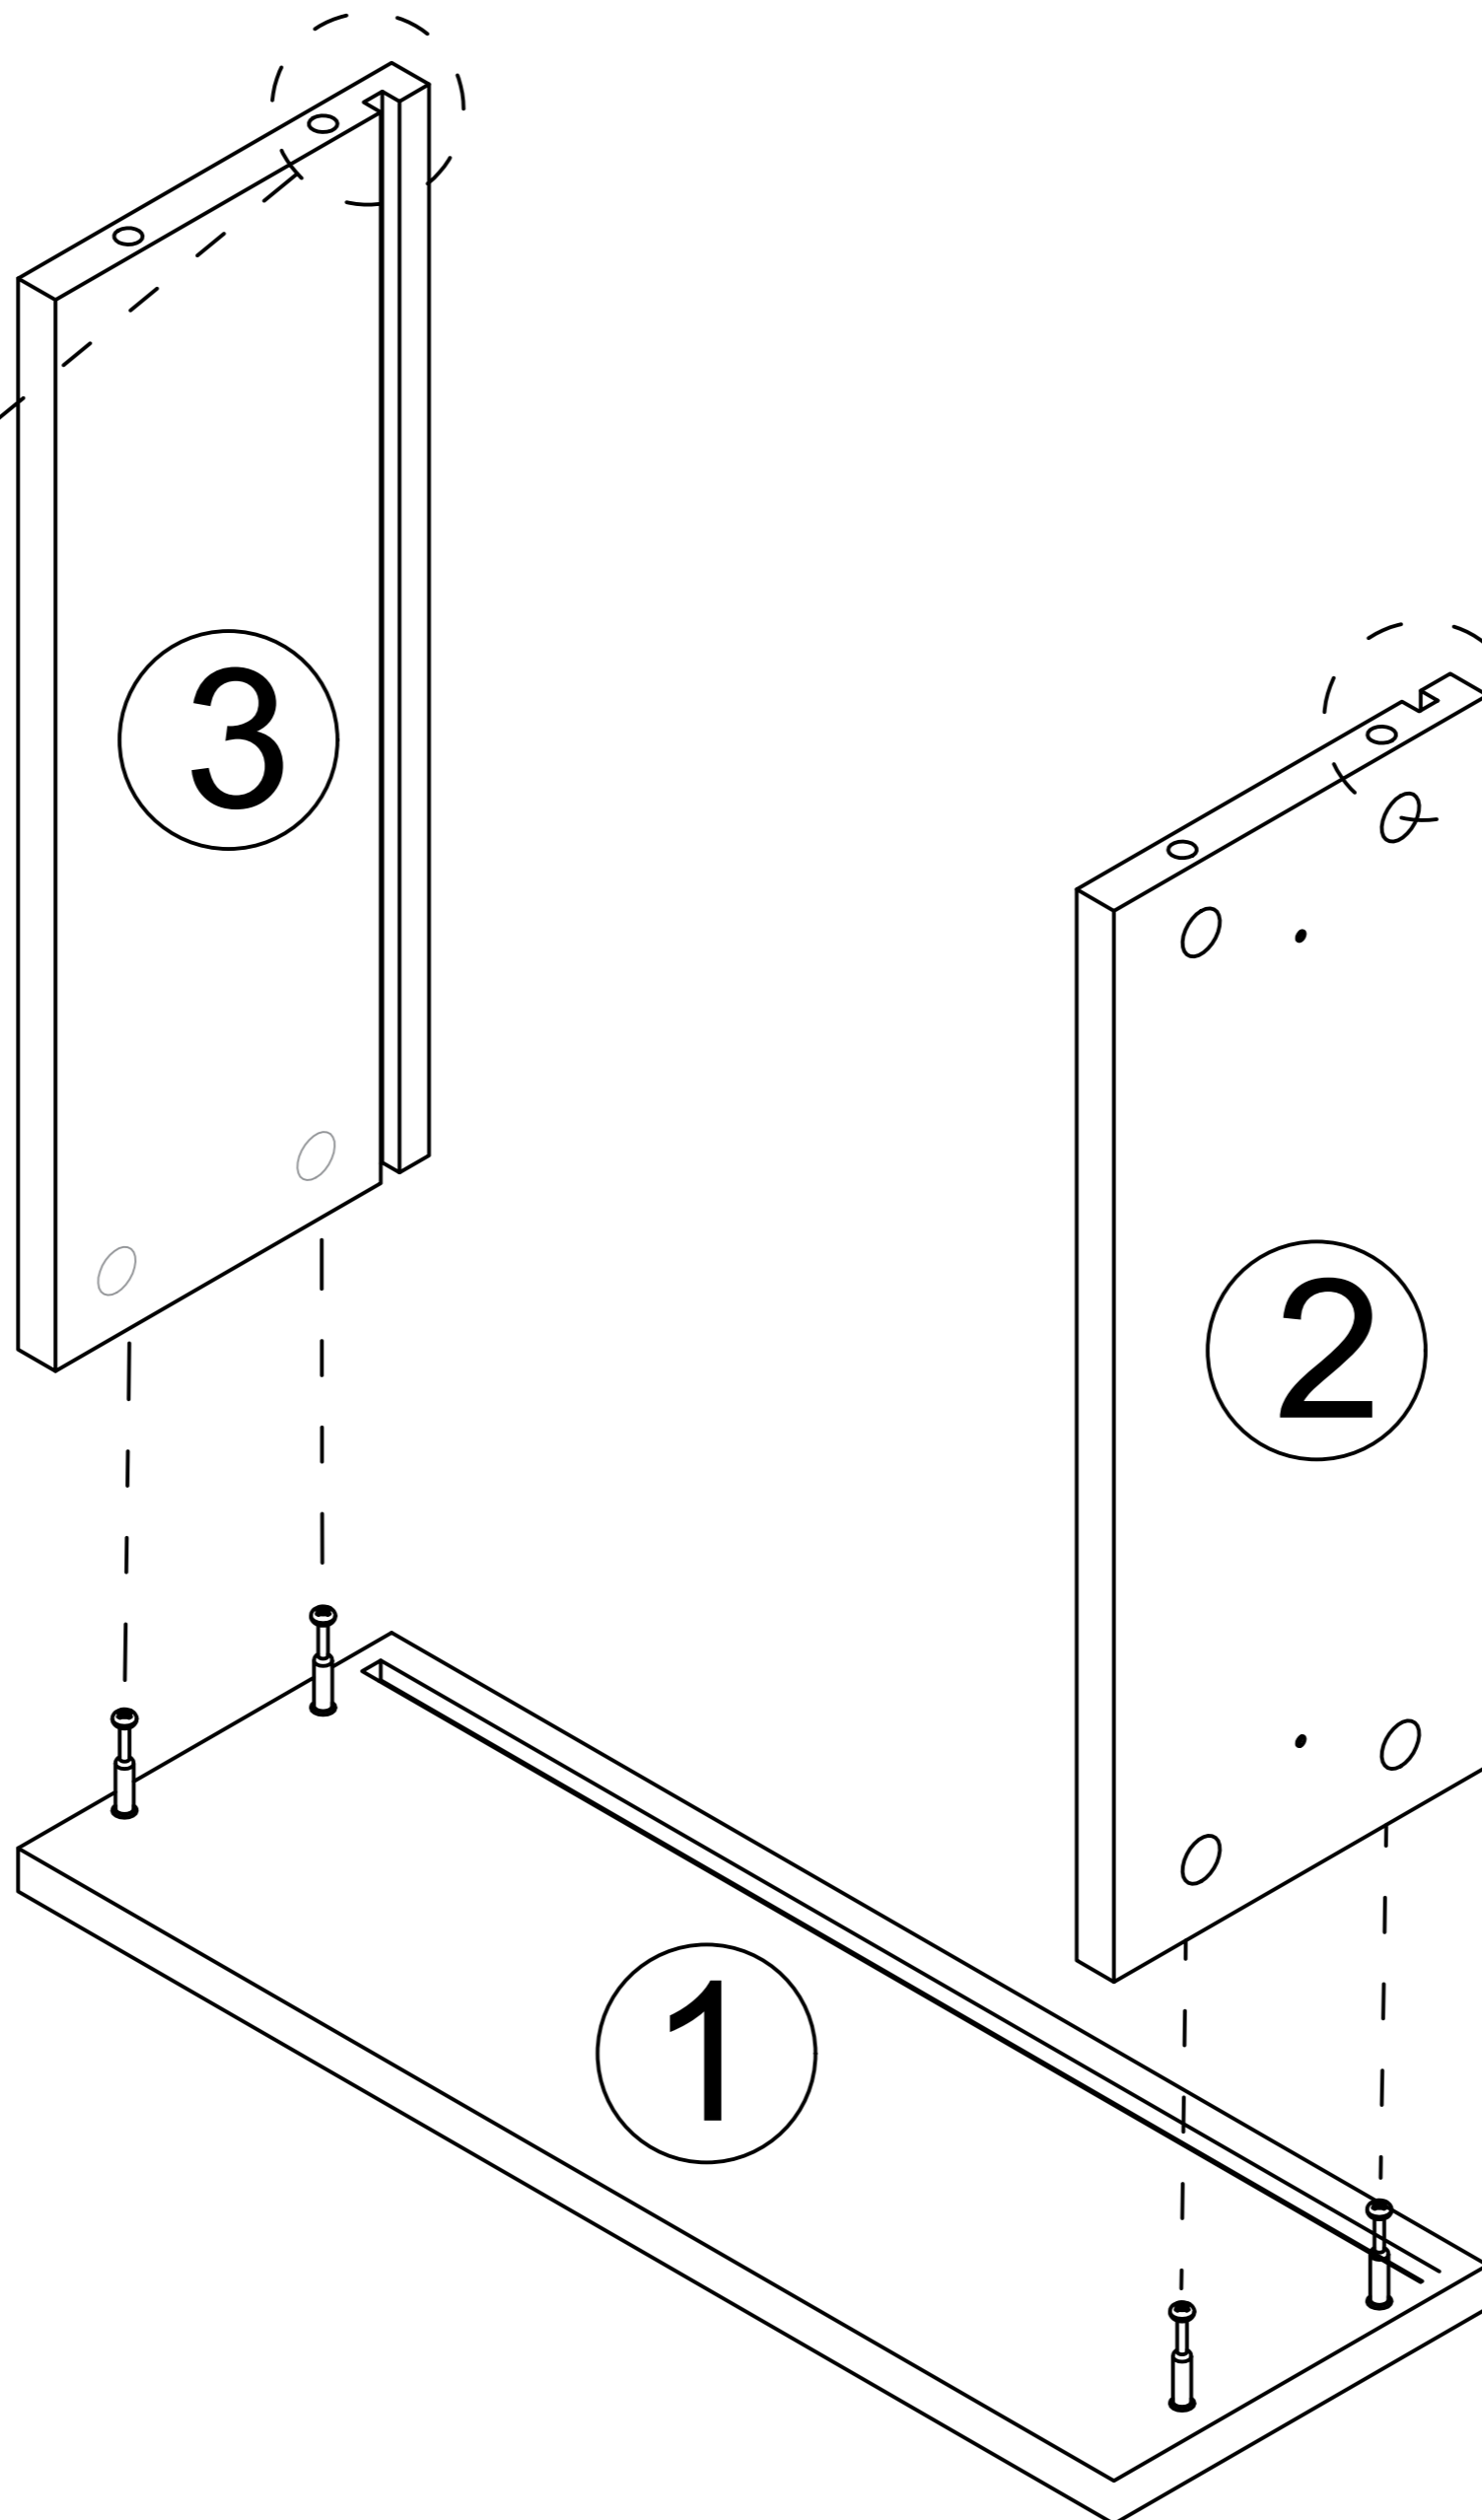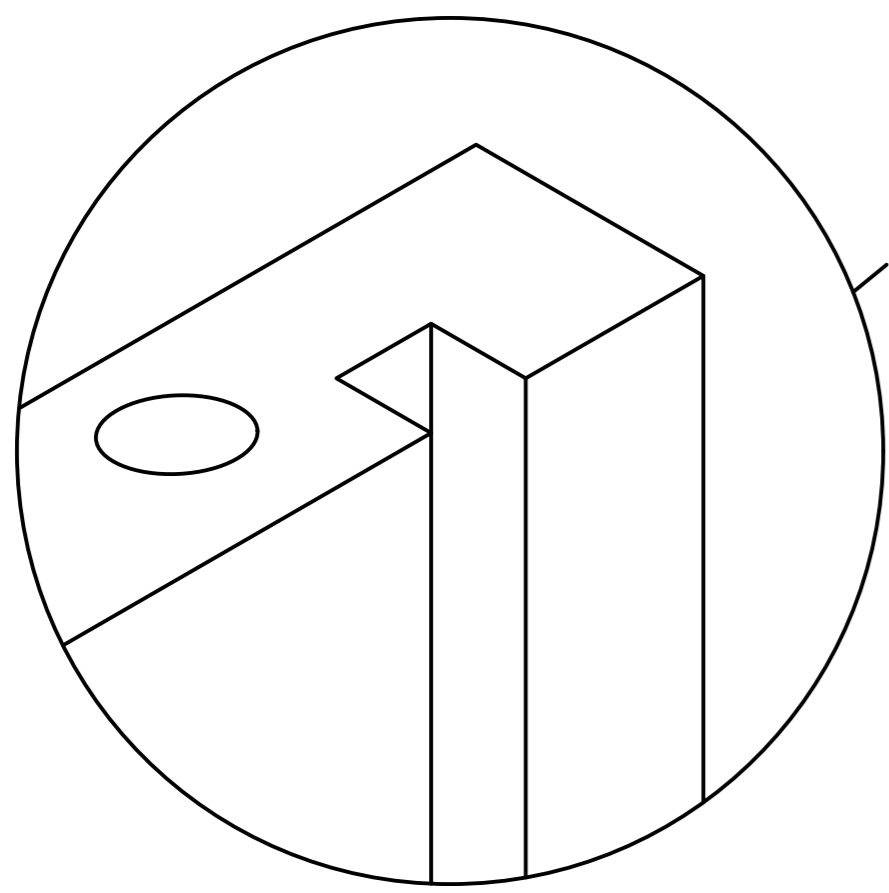



# Step 3

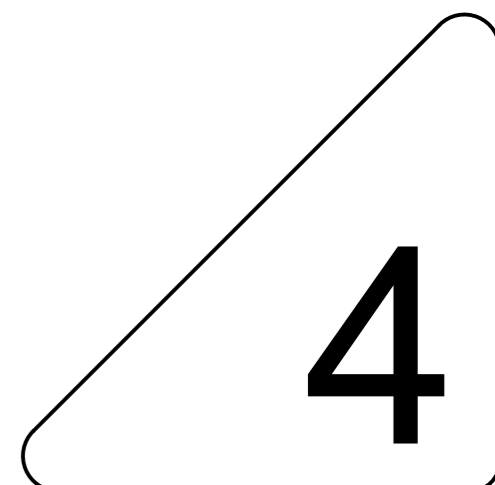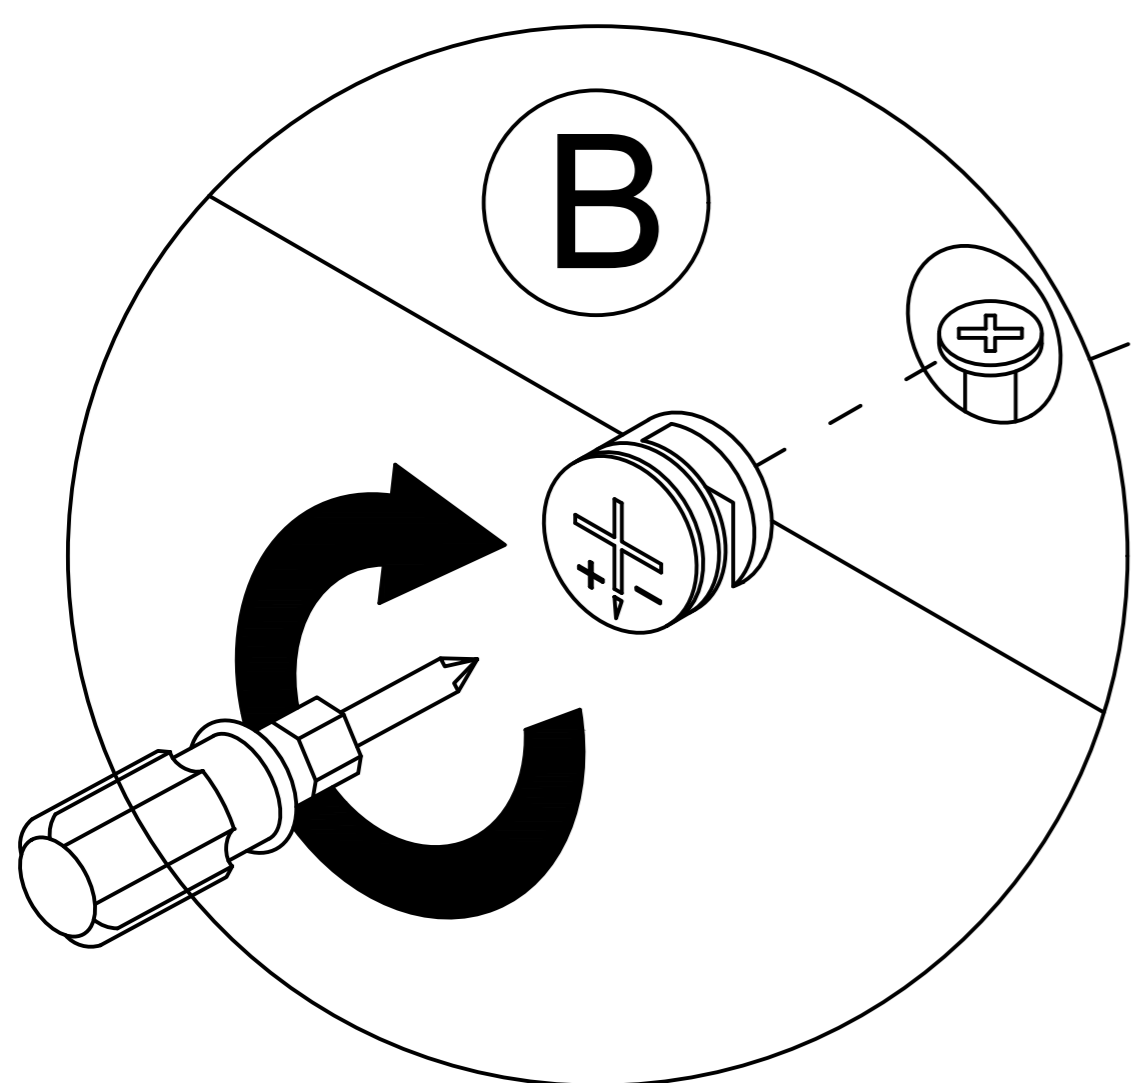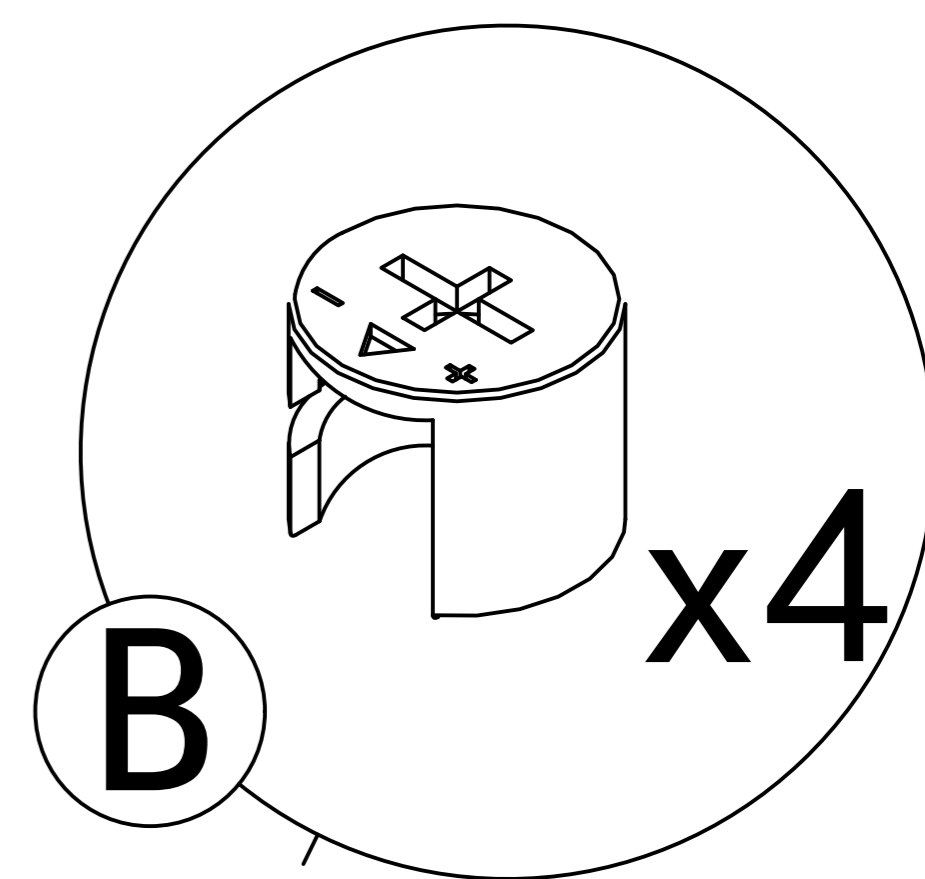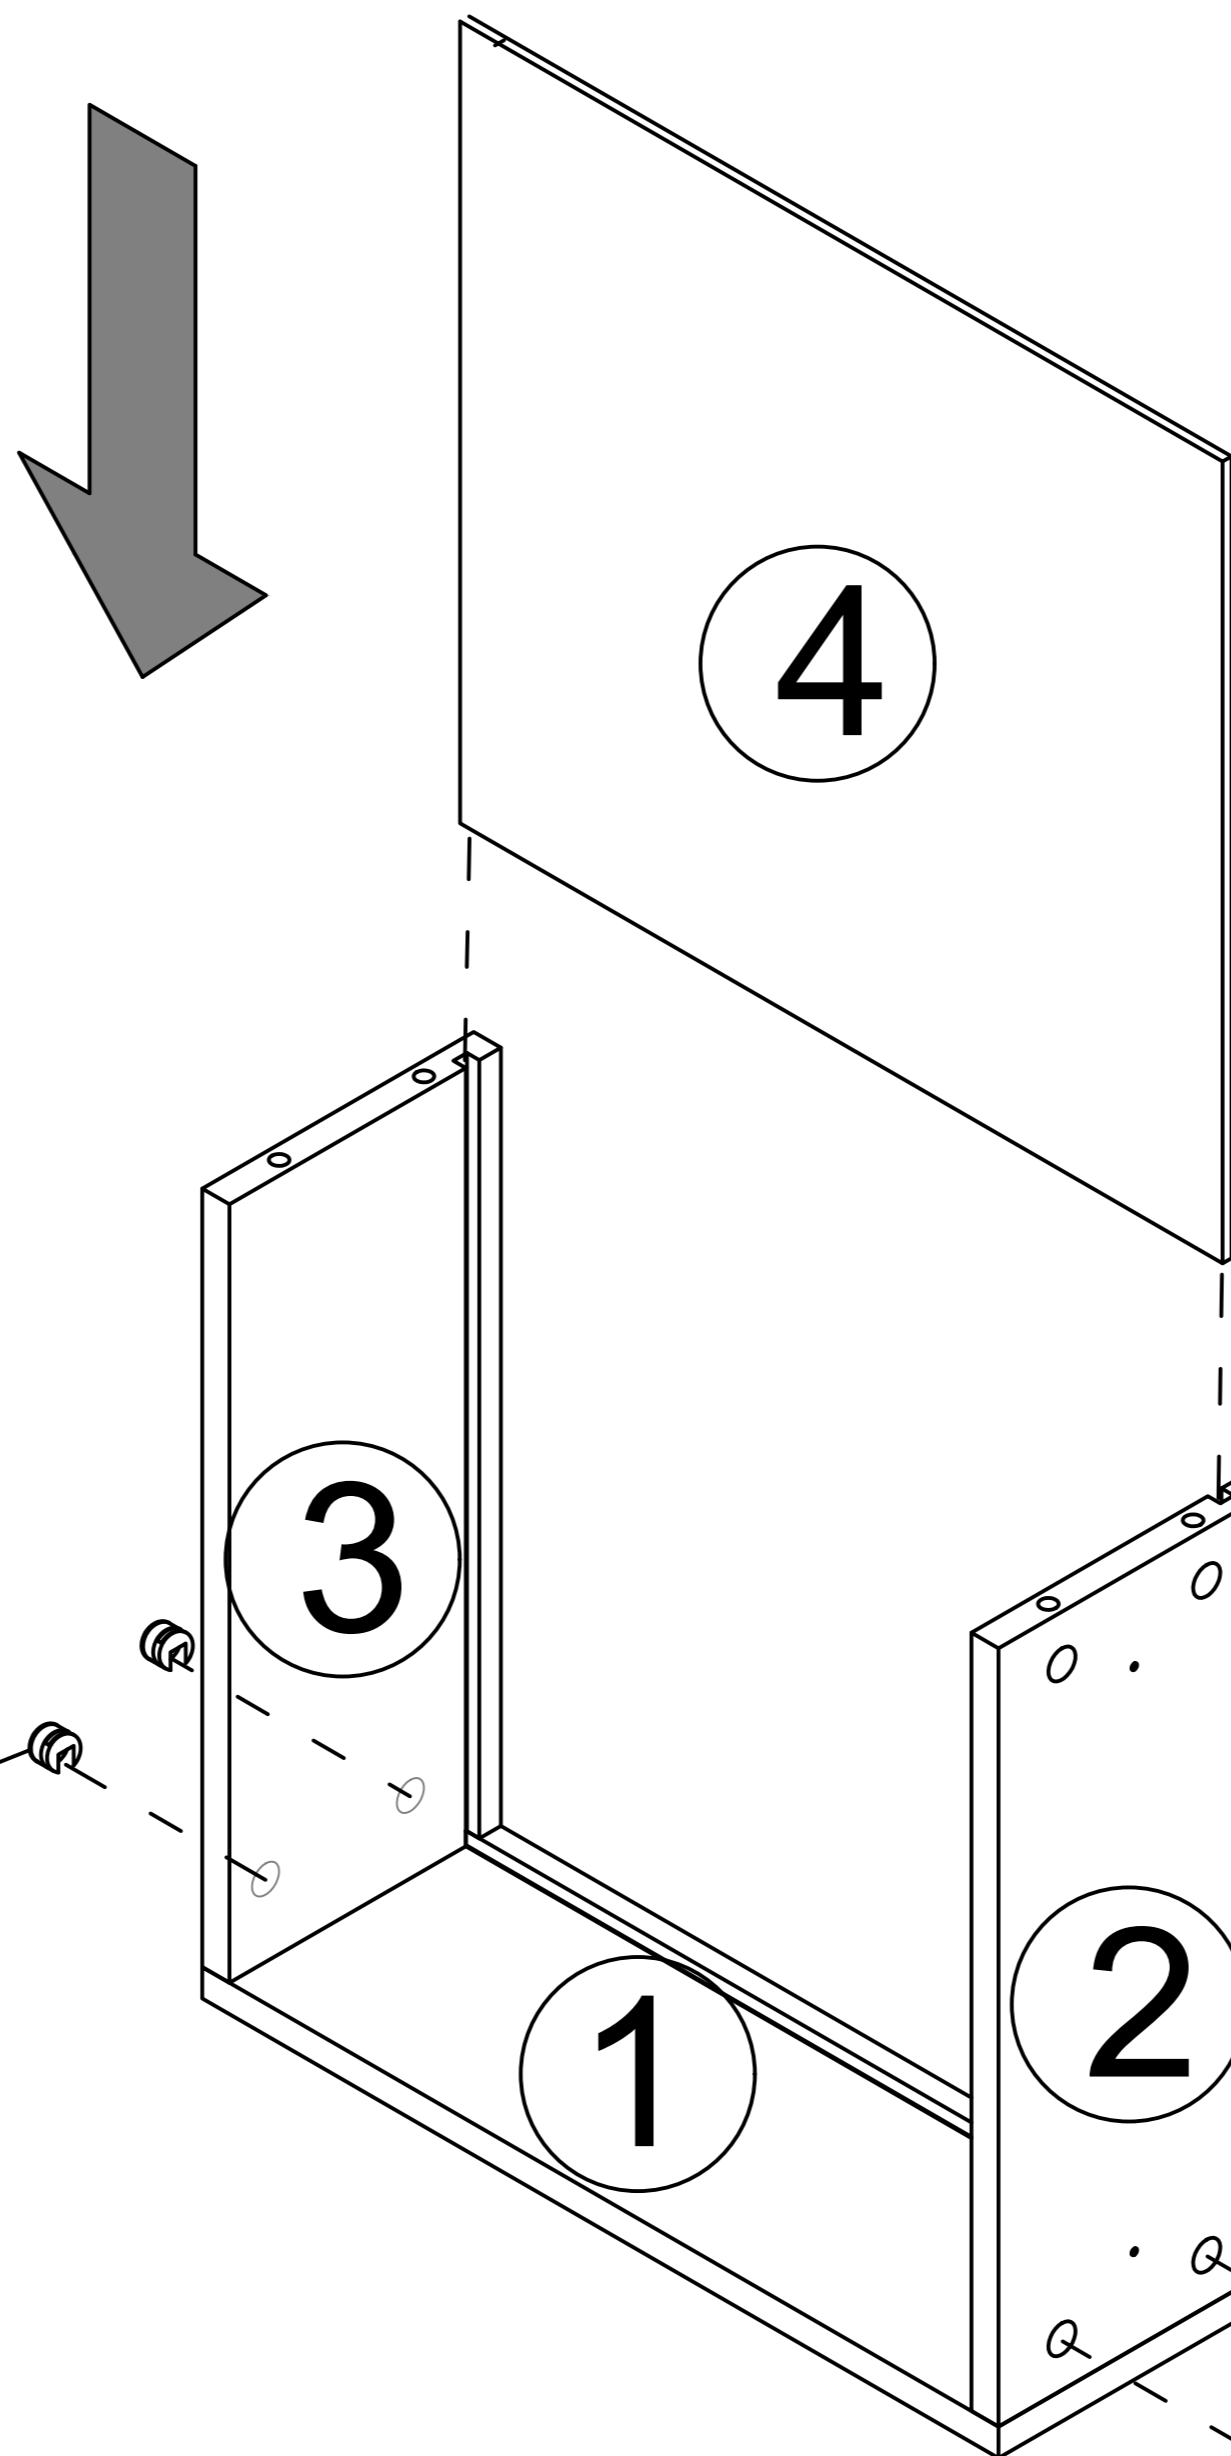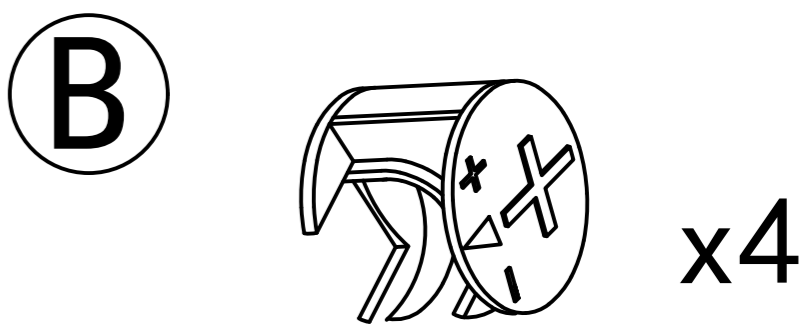

Step 4

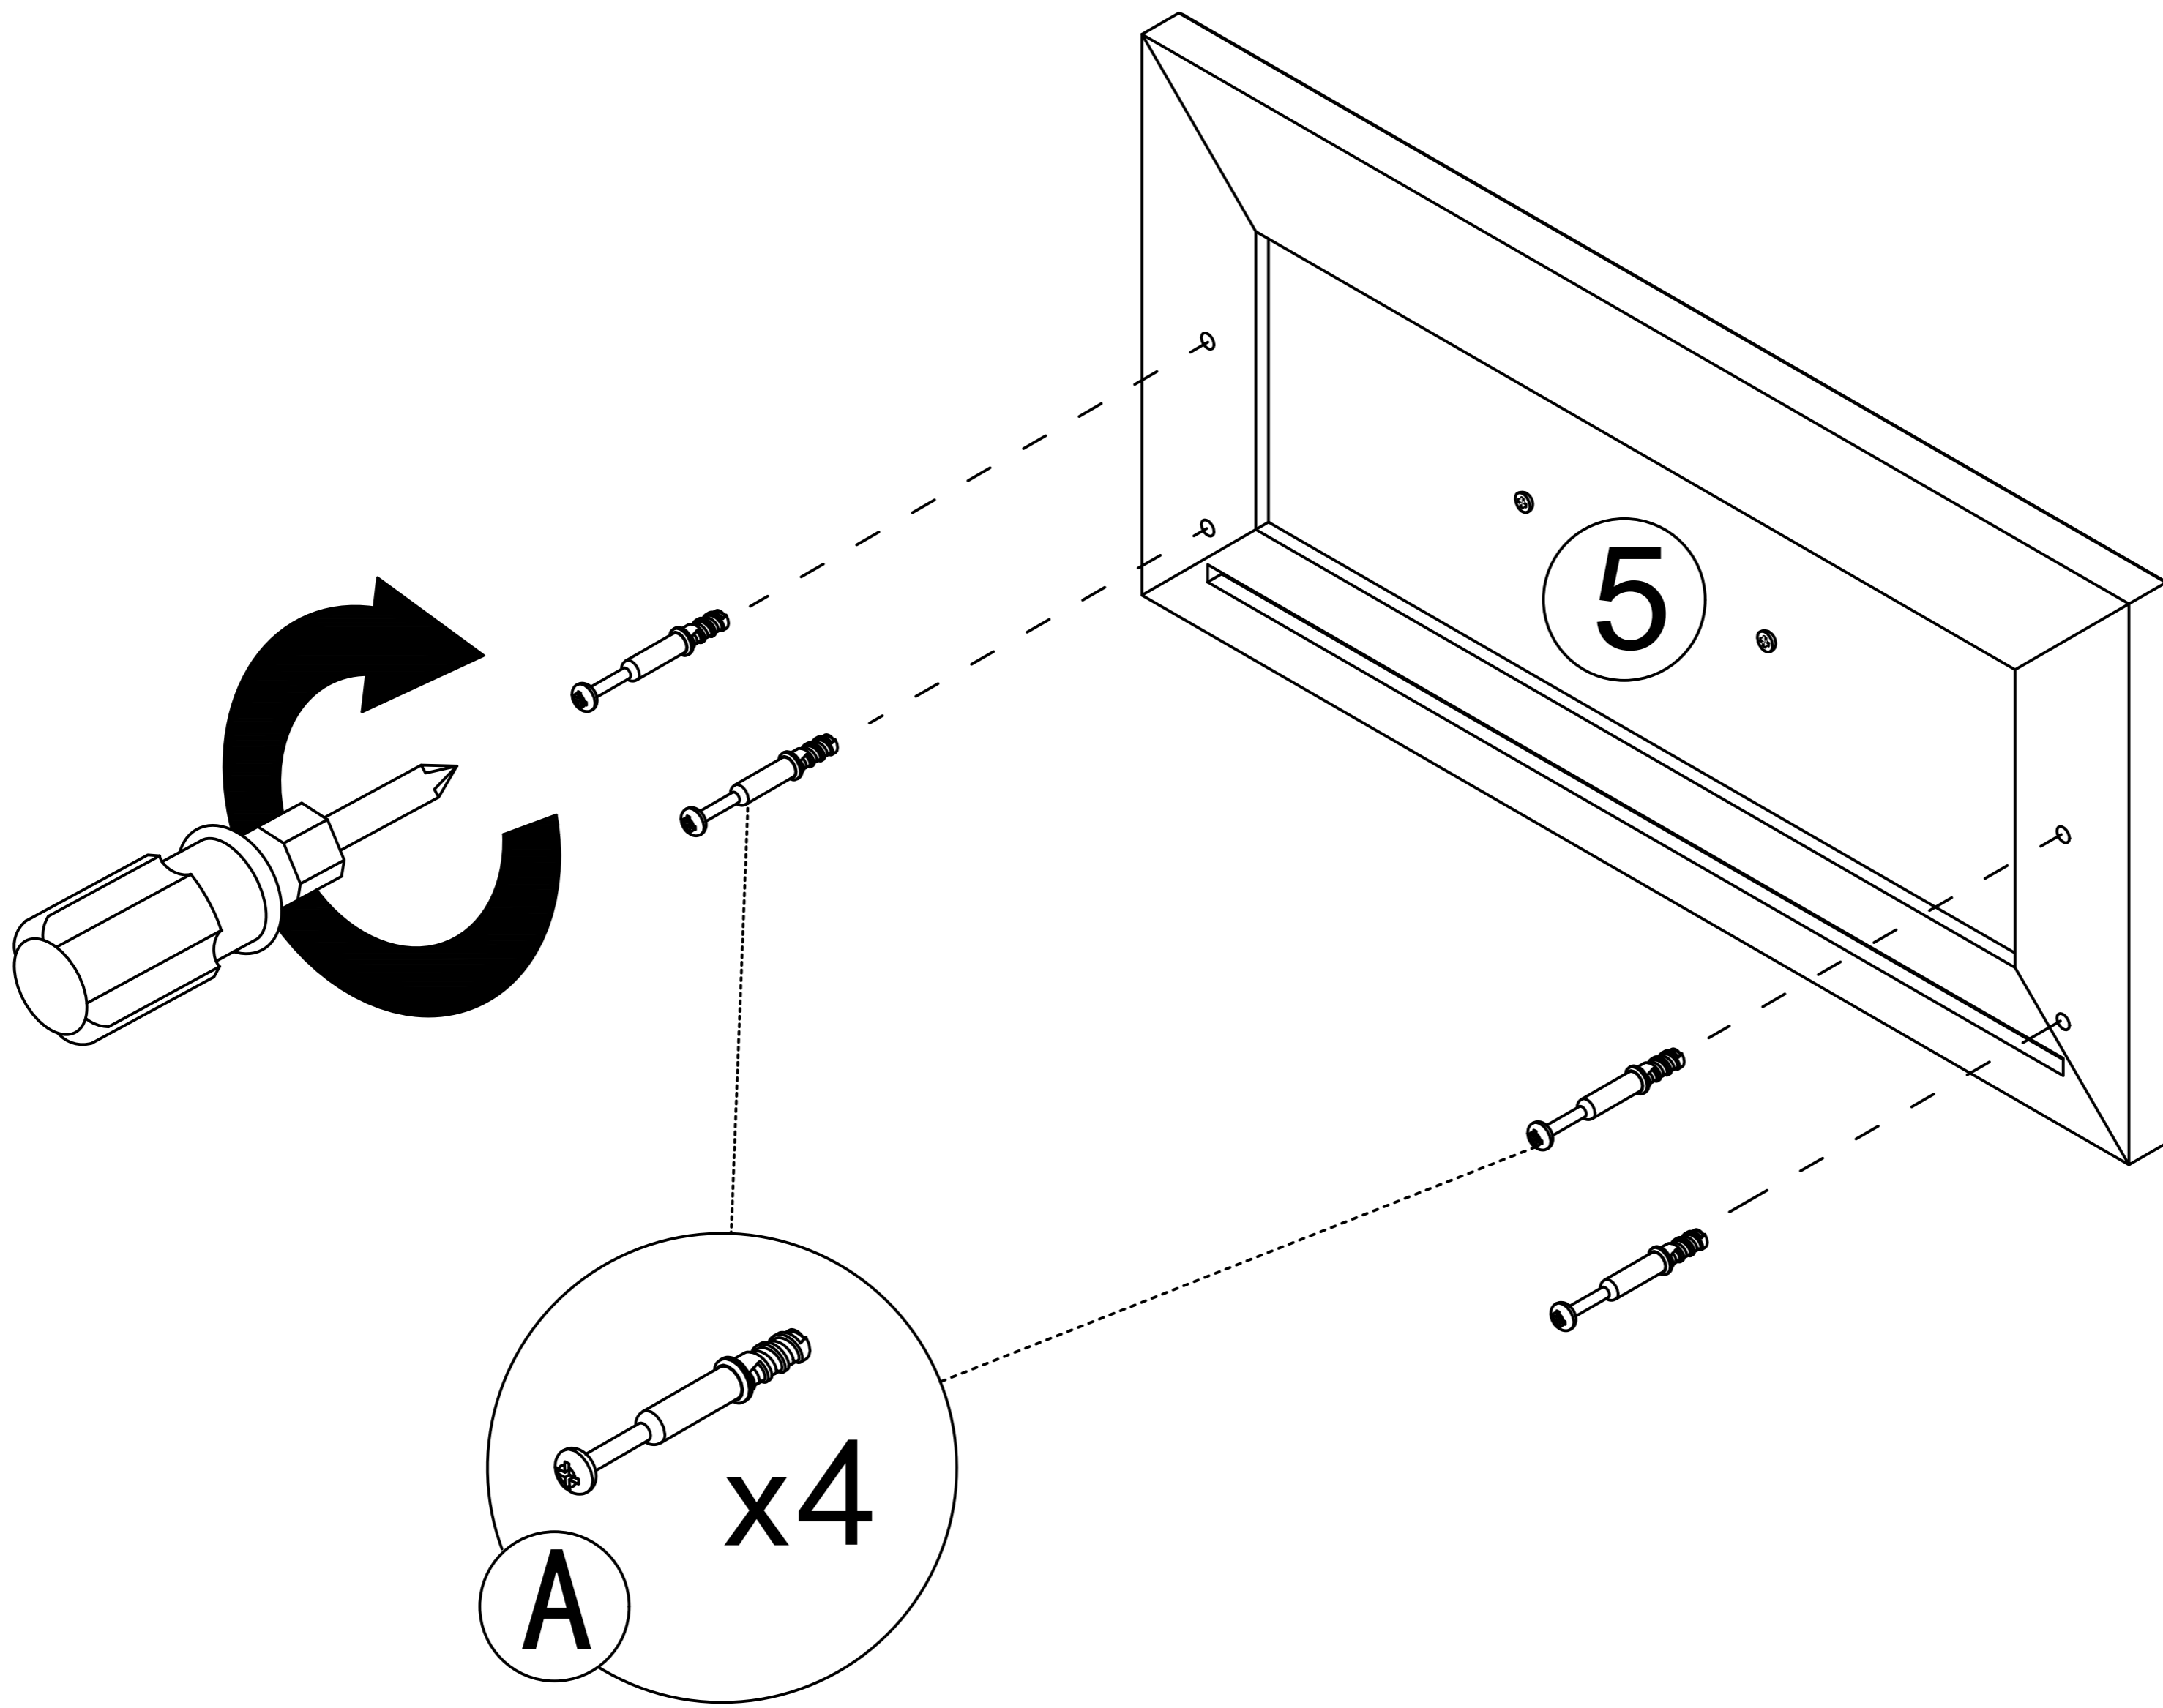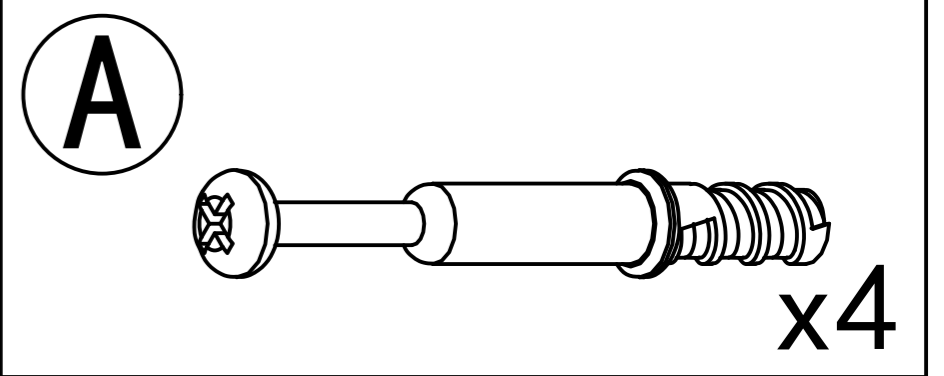


Step 5

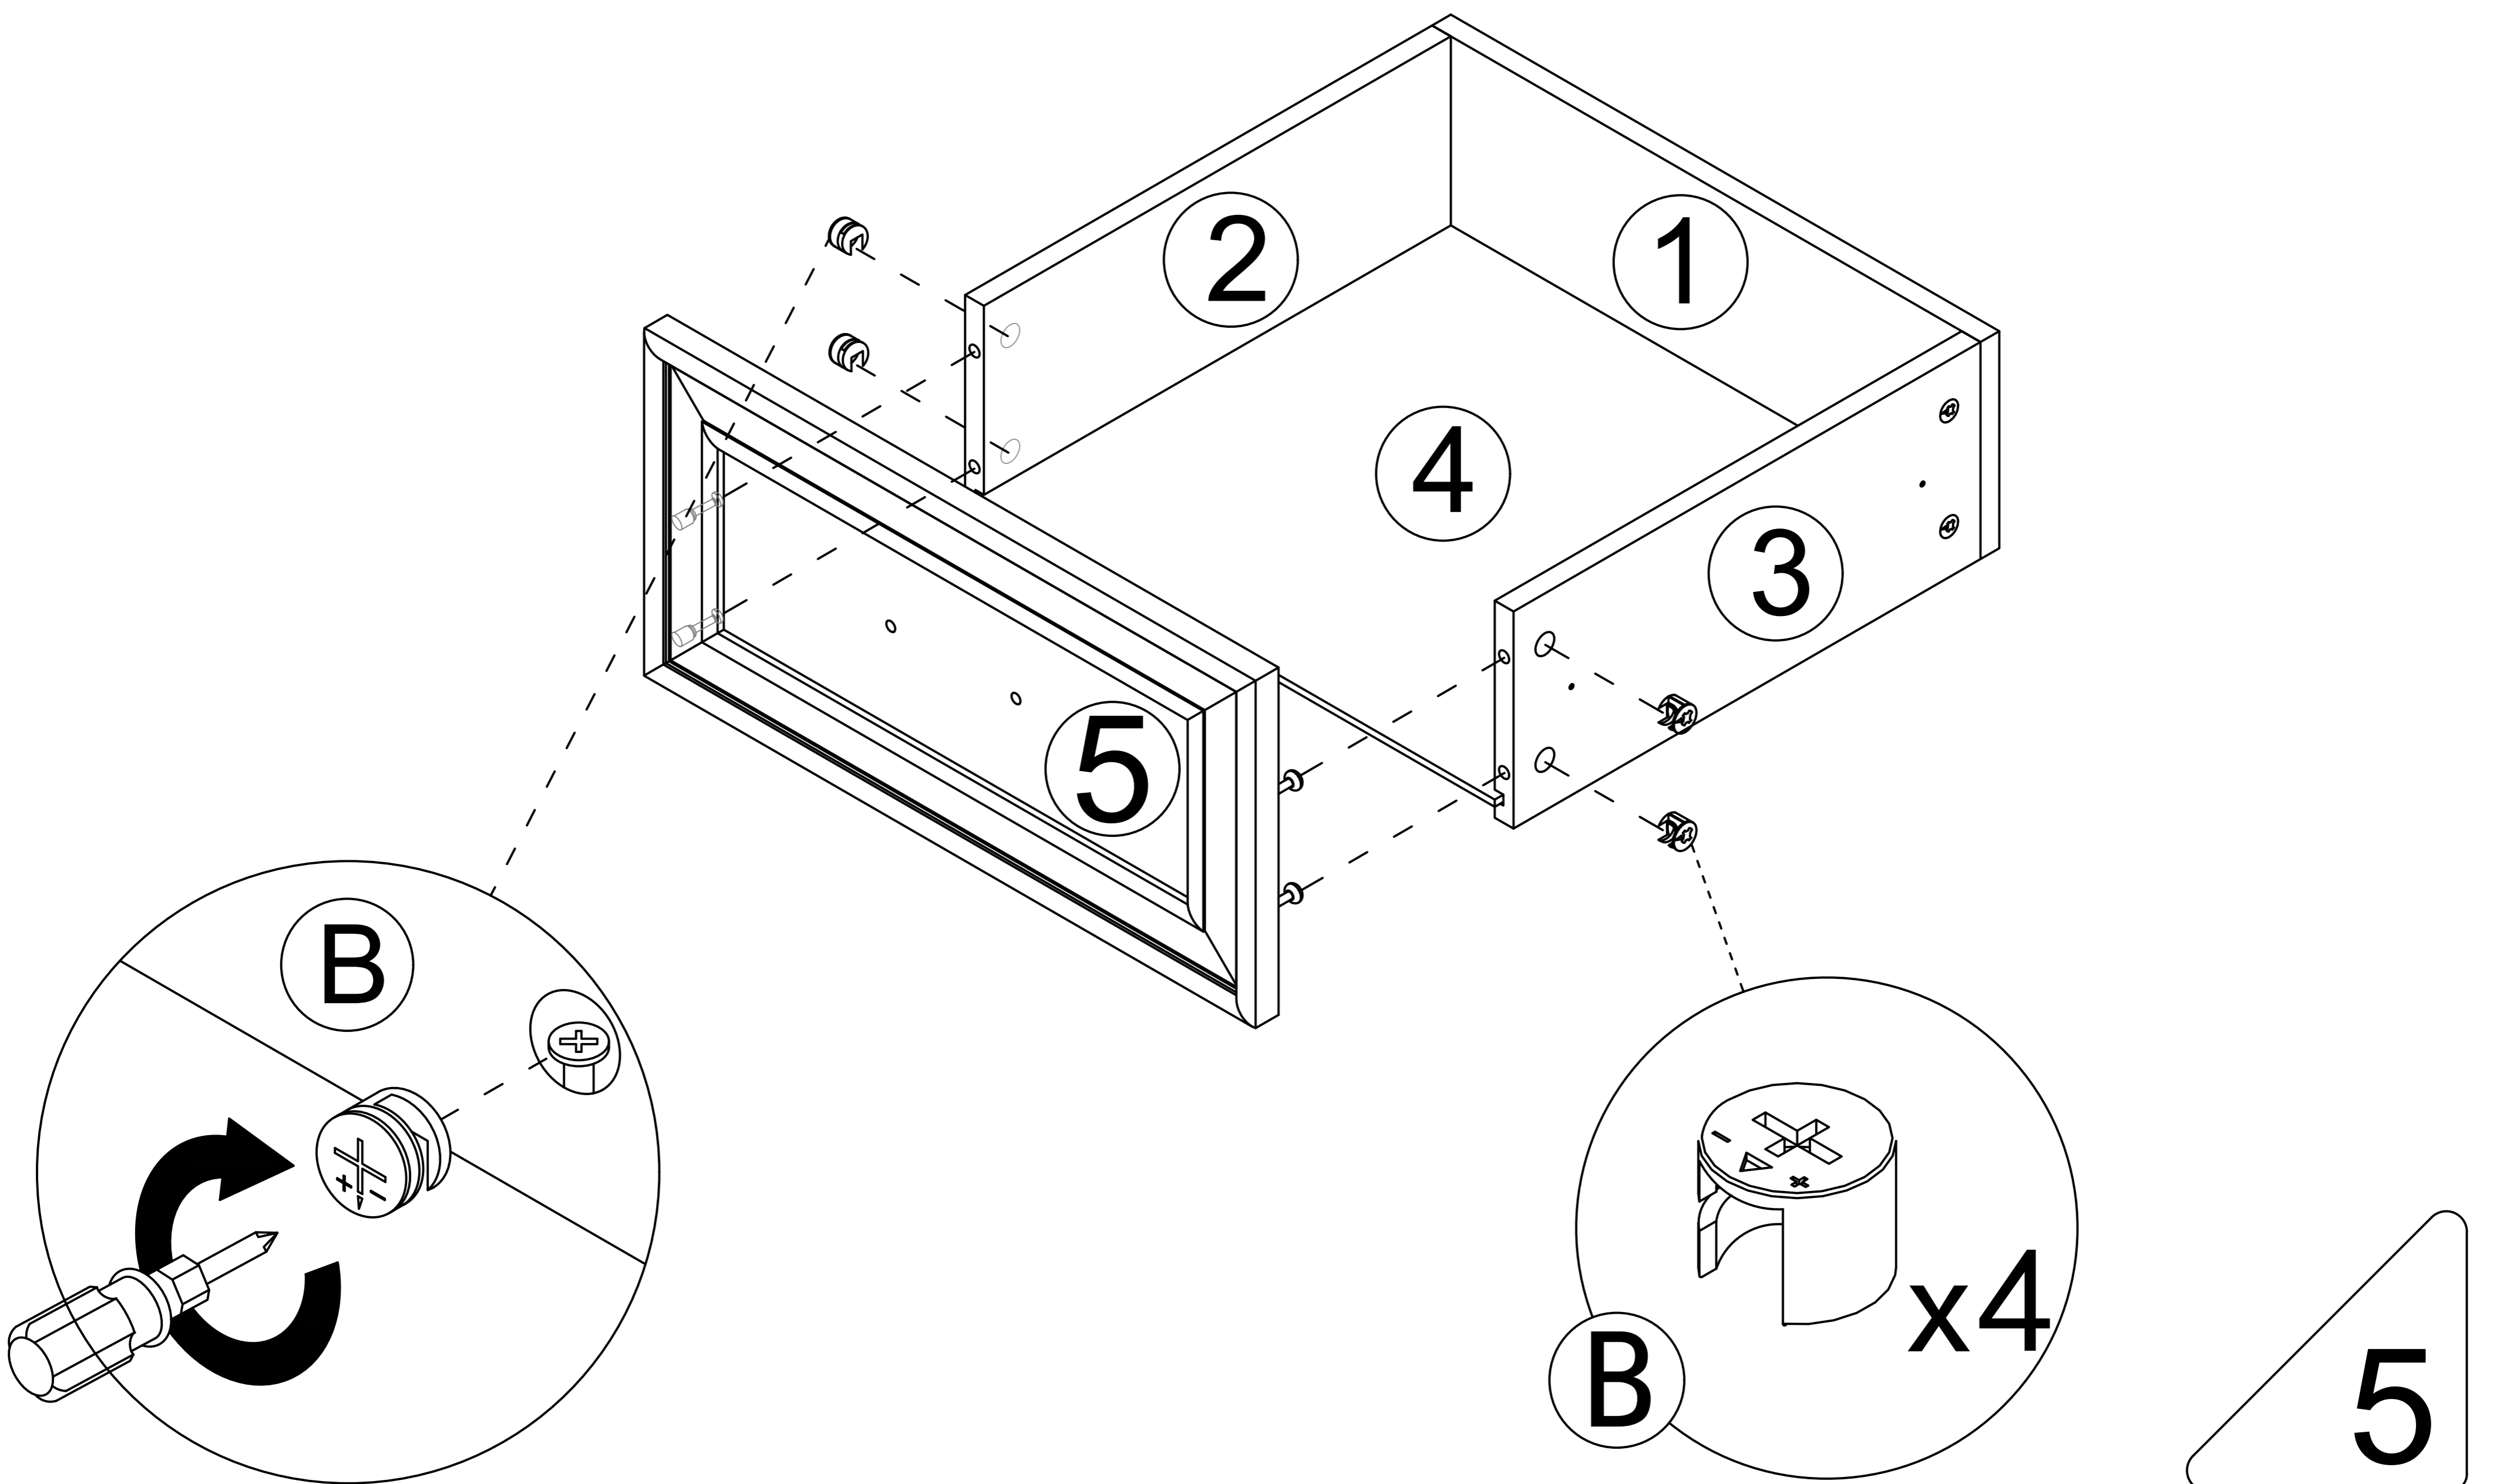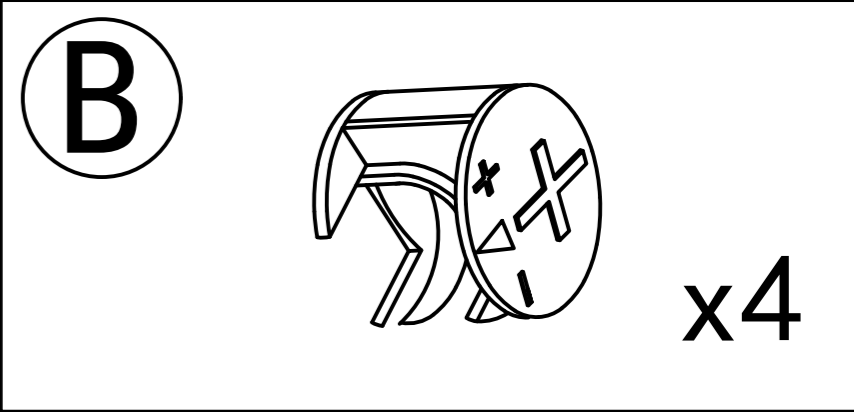



# Use parts (E)

Drawer rail breakdown diagram



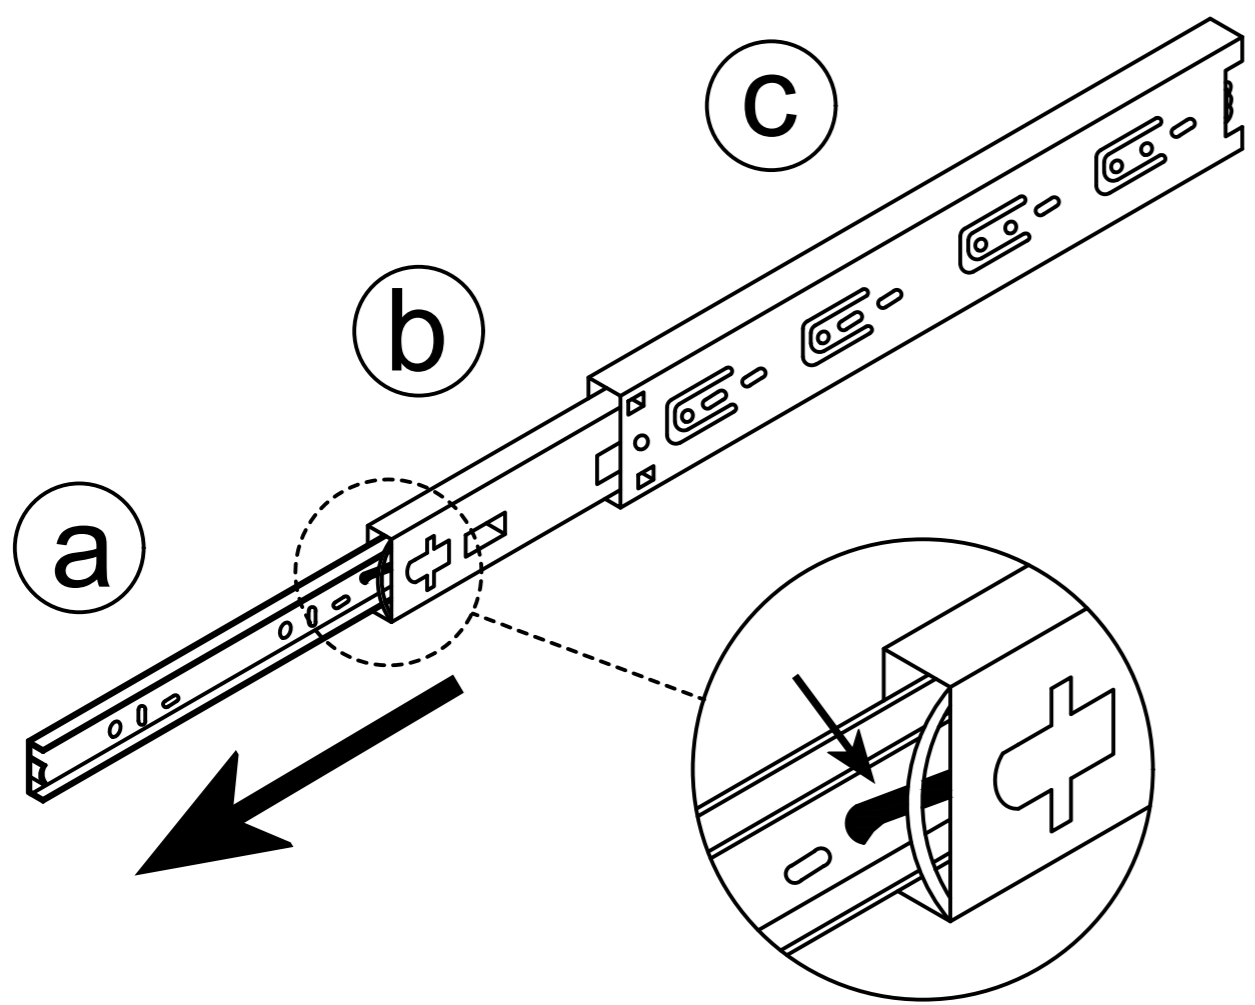


Step 1 : Pull the rails apart





Step 2 : Push the nylon buckle outward (a)

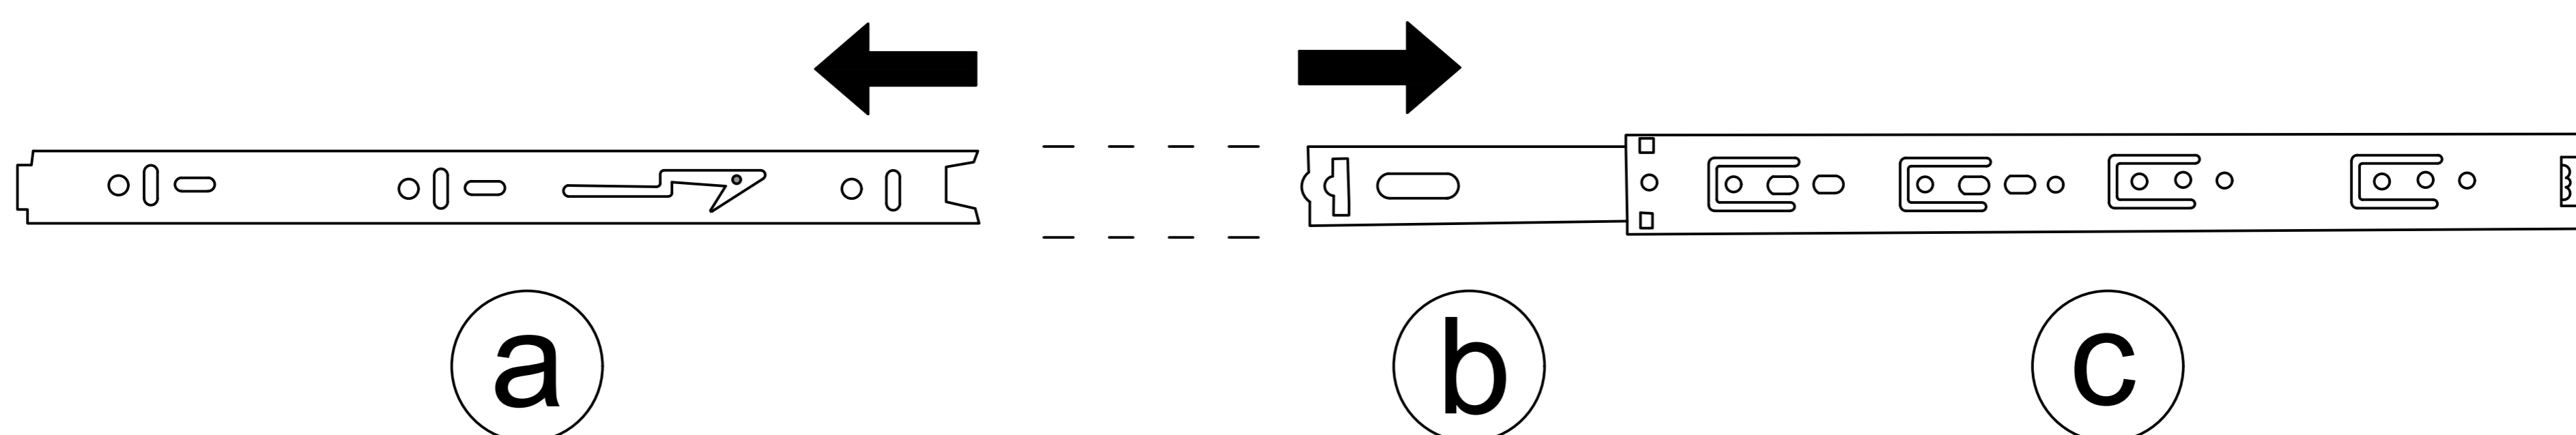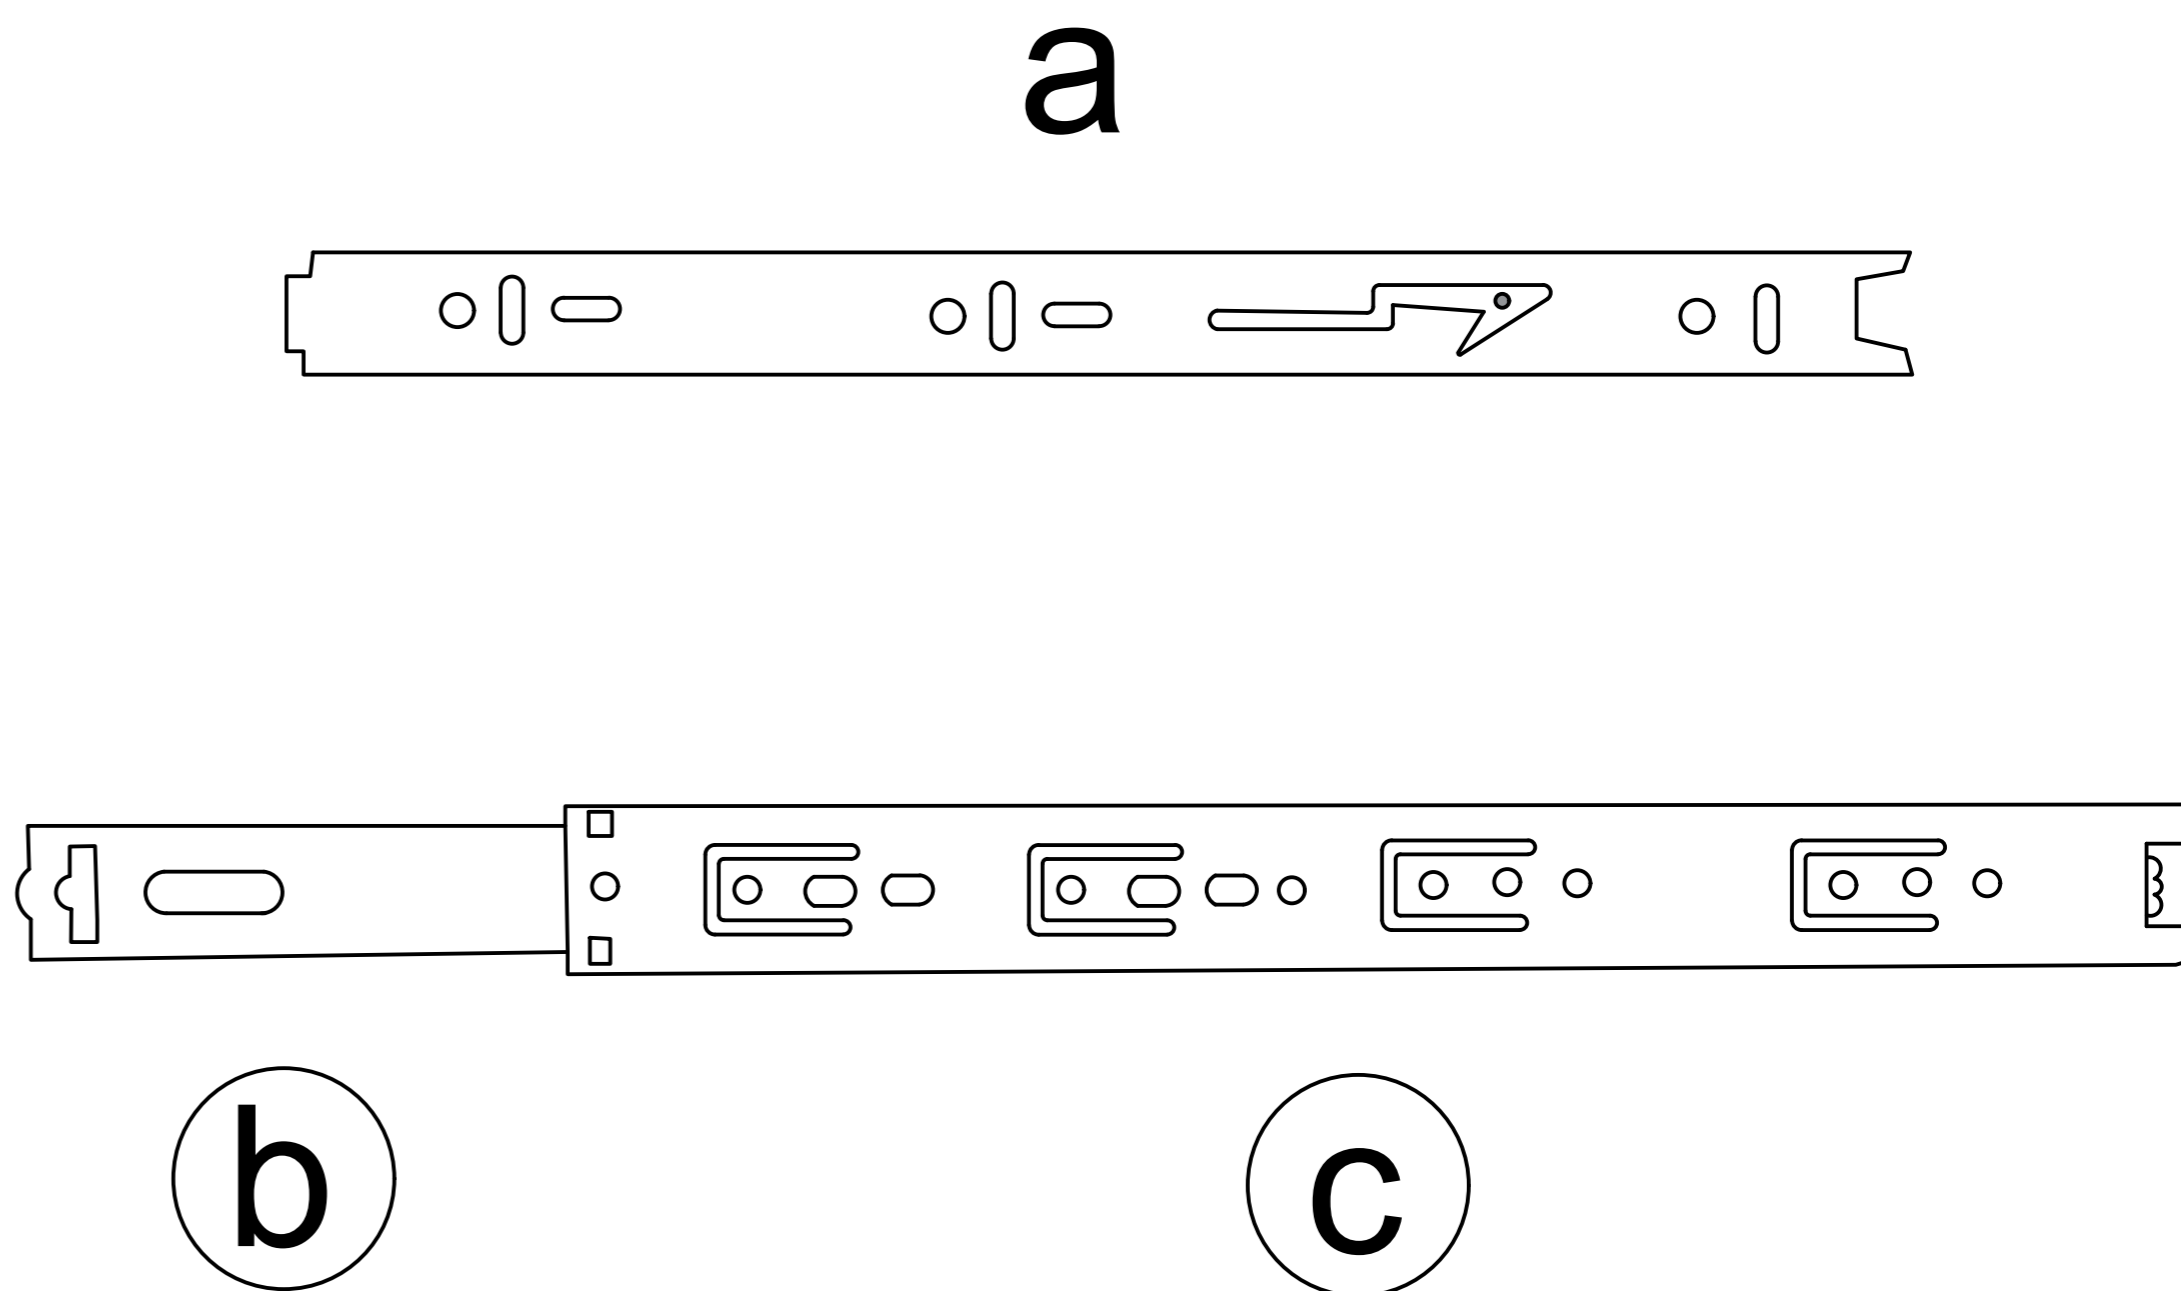


## Step 6

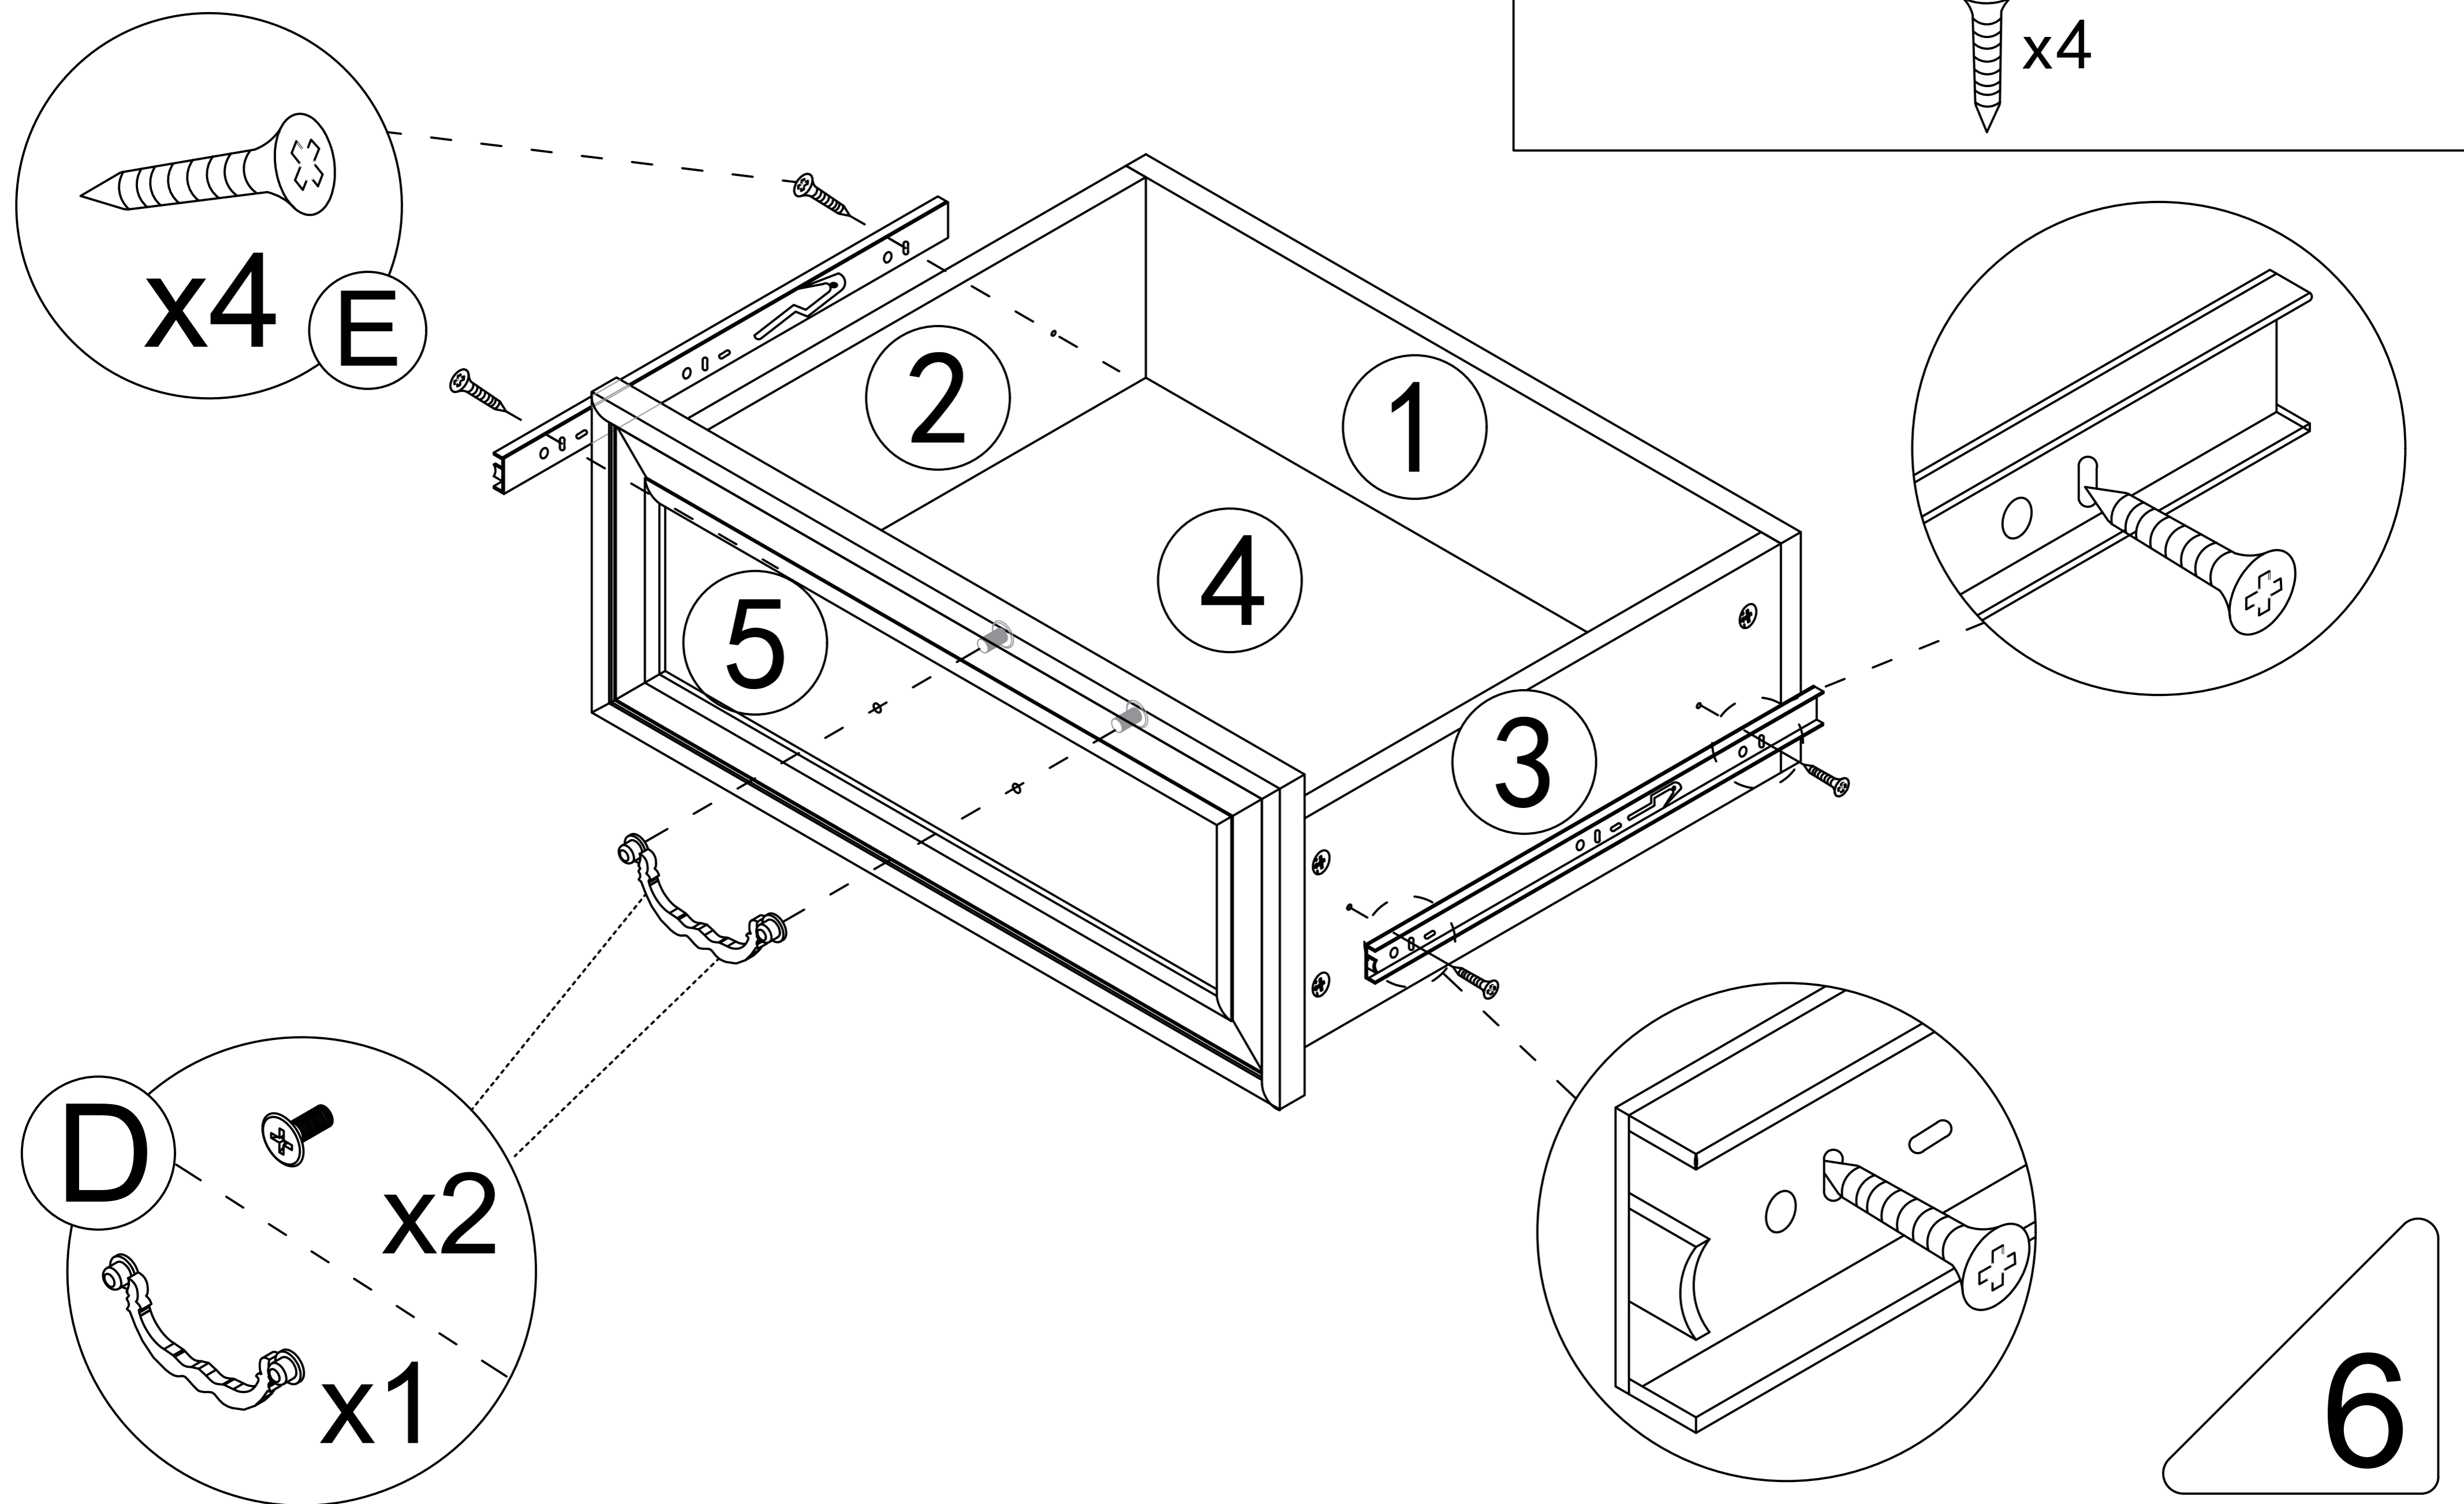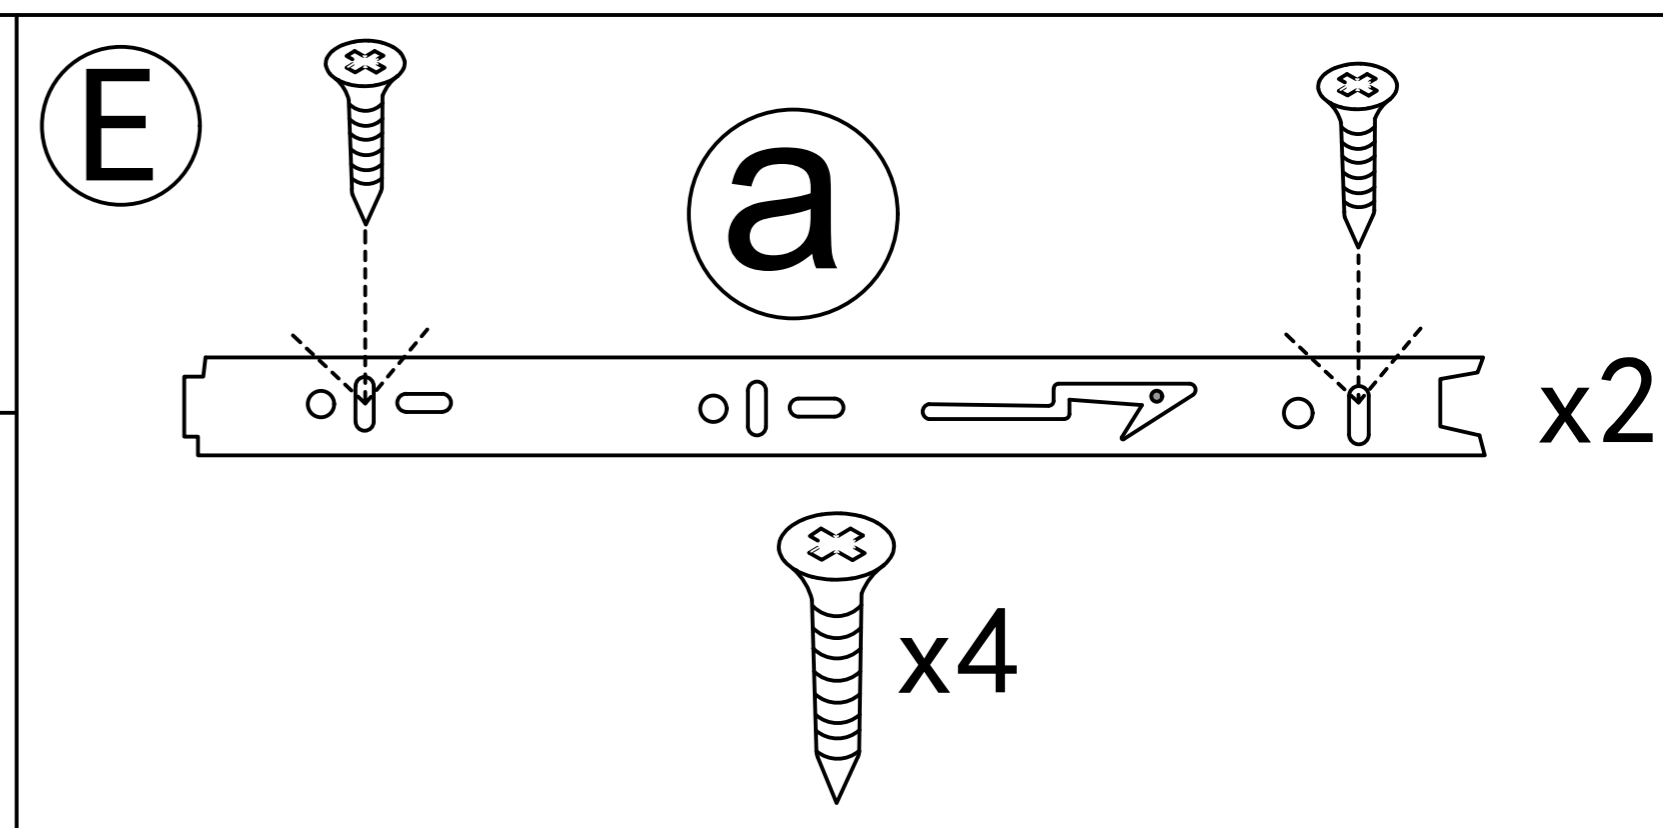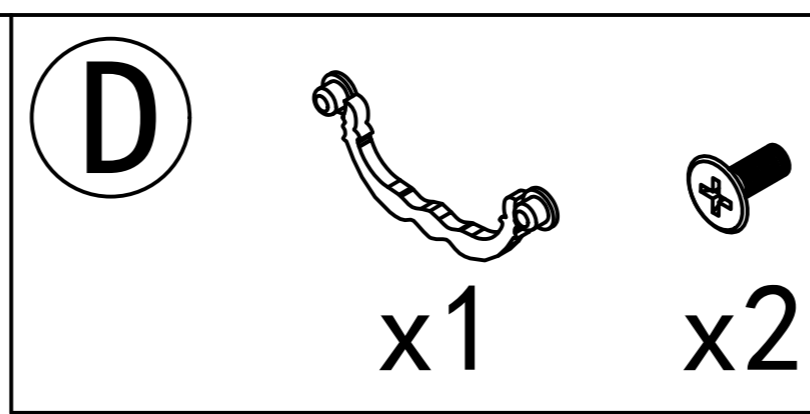





Step 7

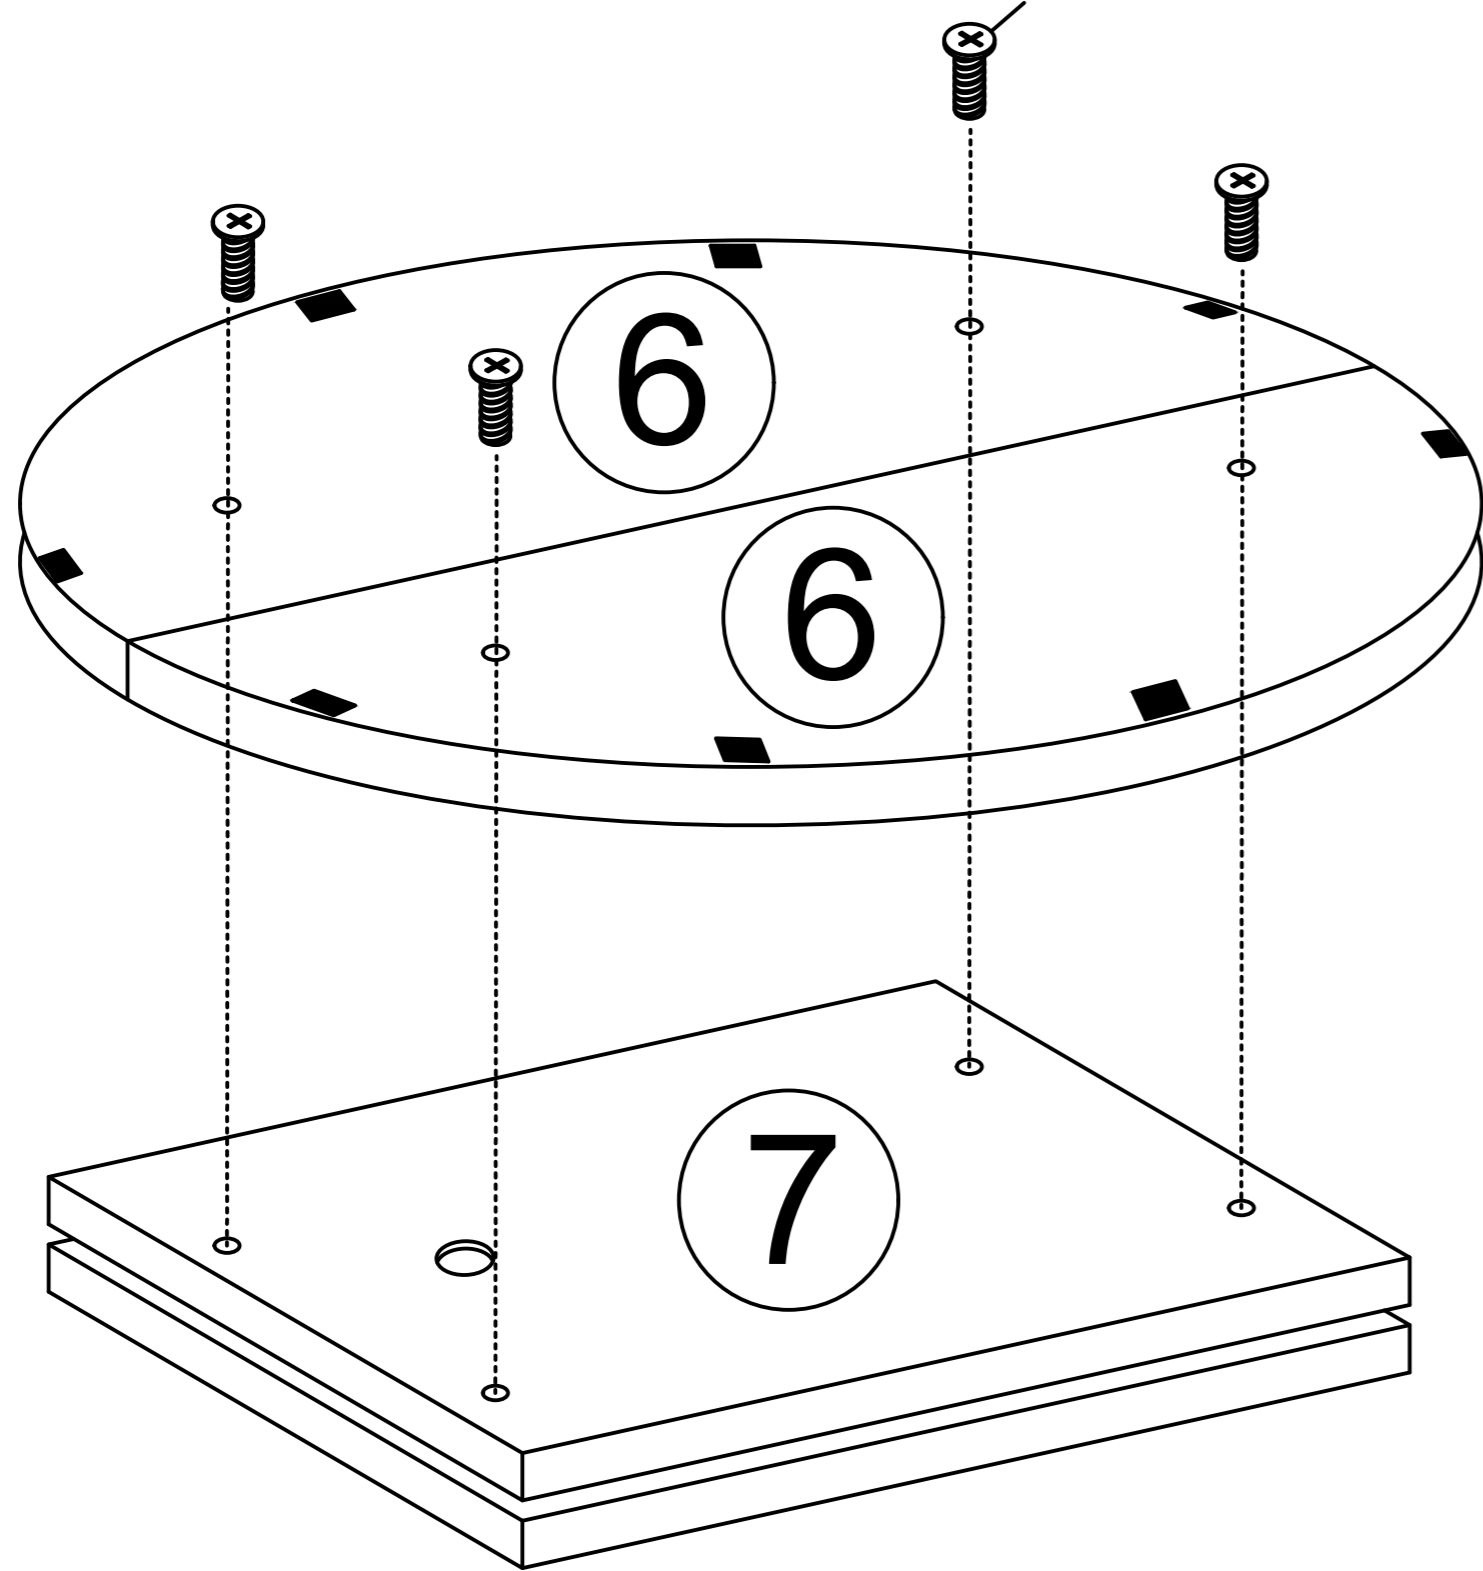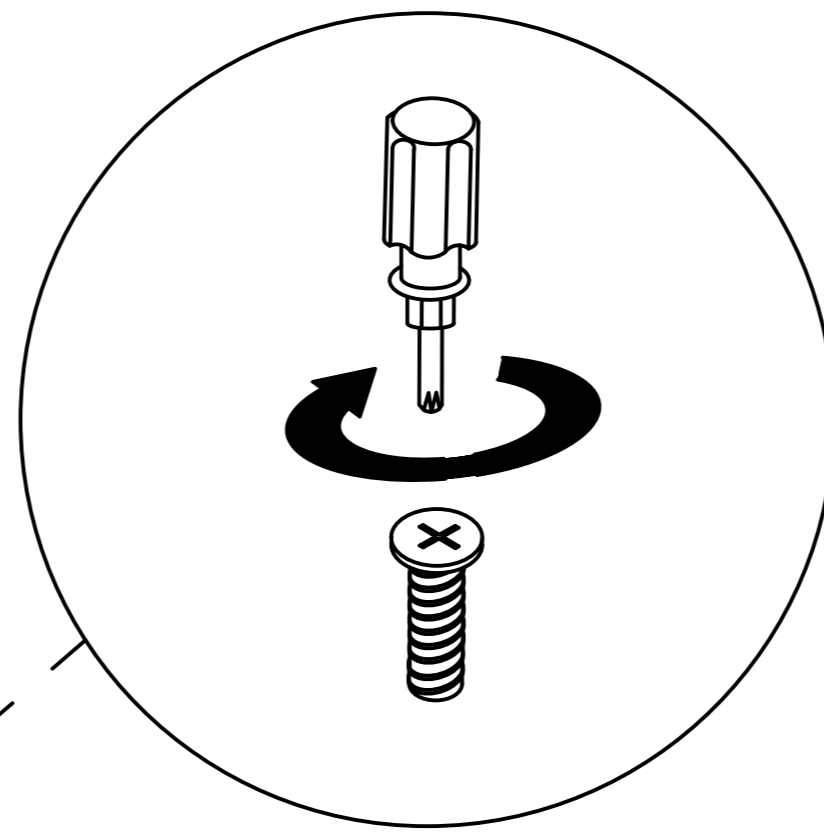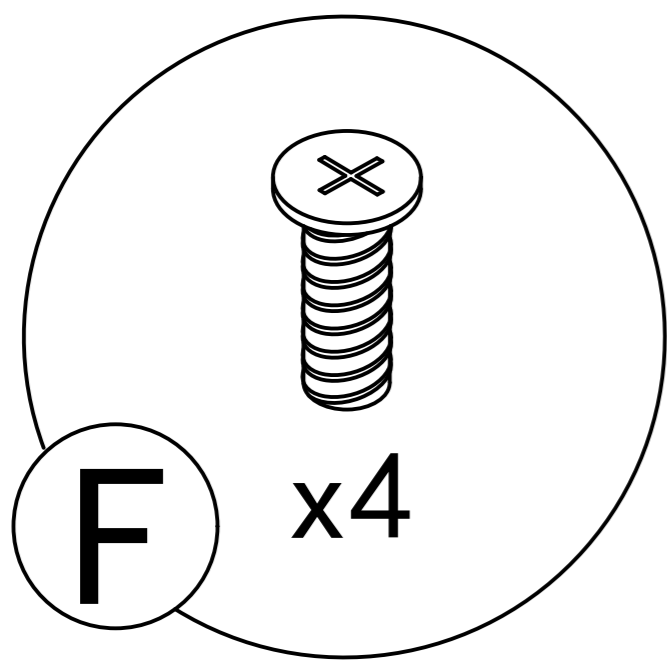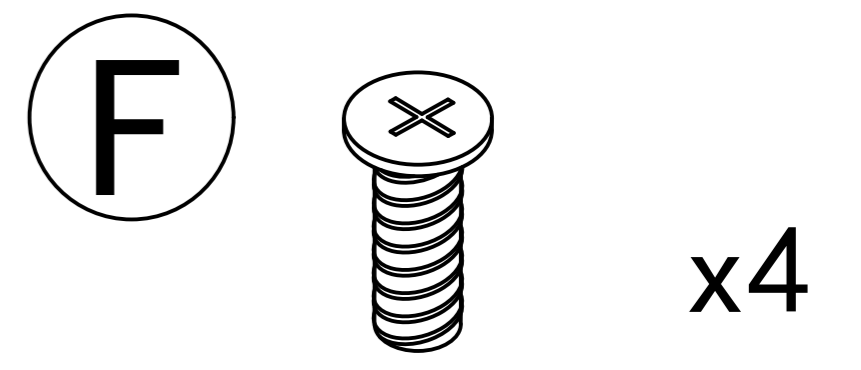


Turn the plank and  
screw it on

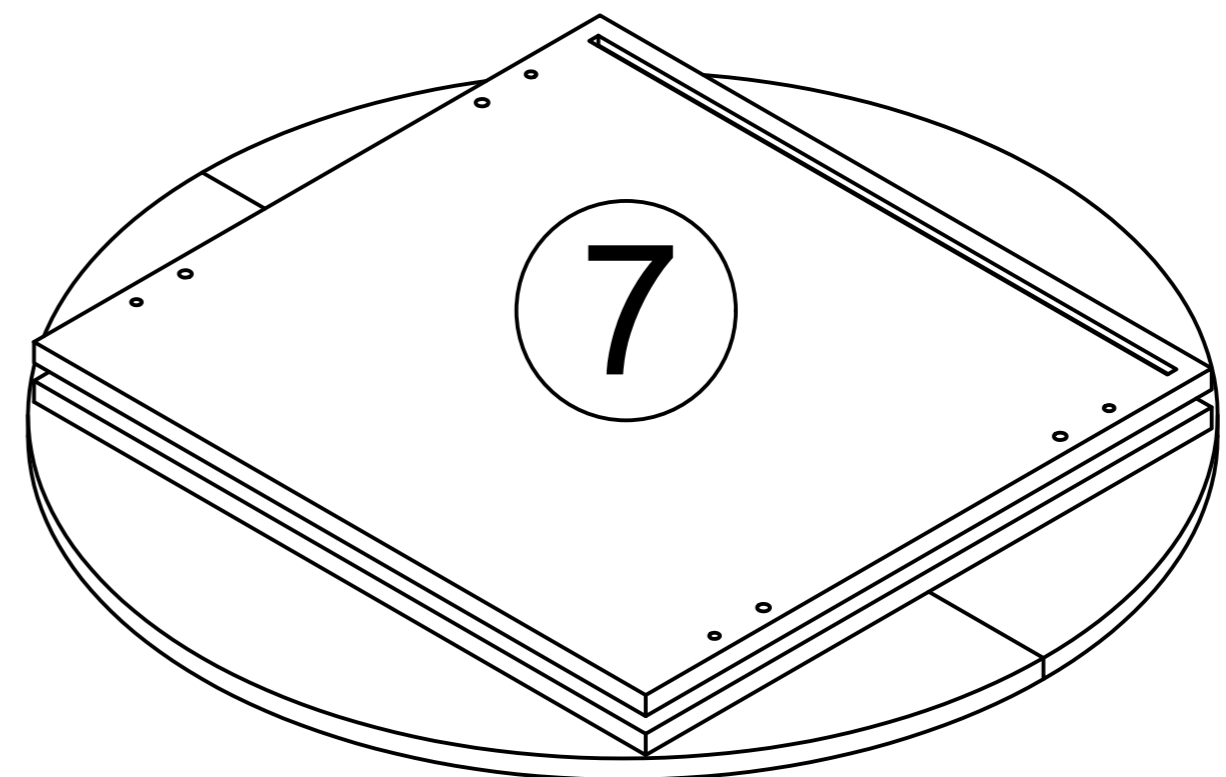


Step 8

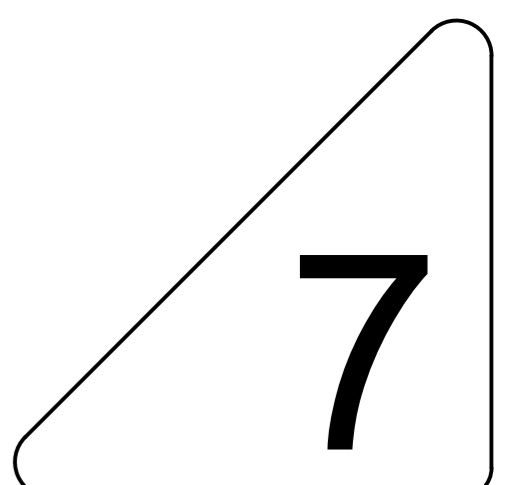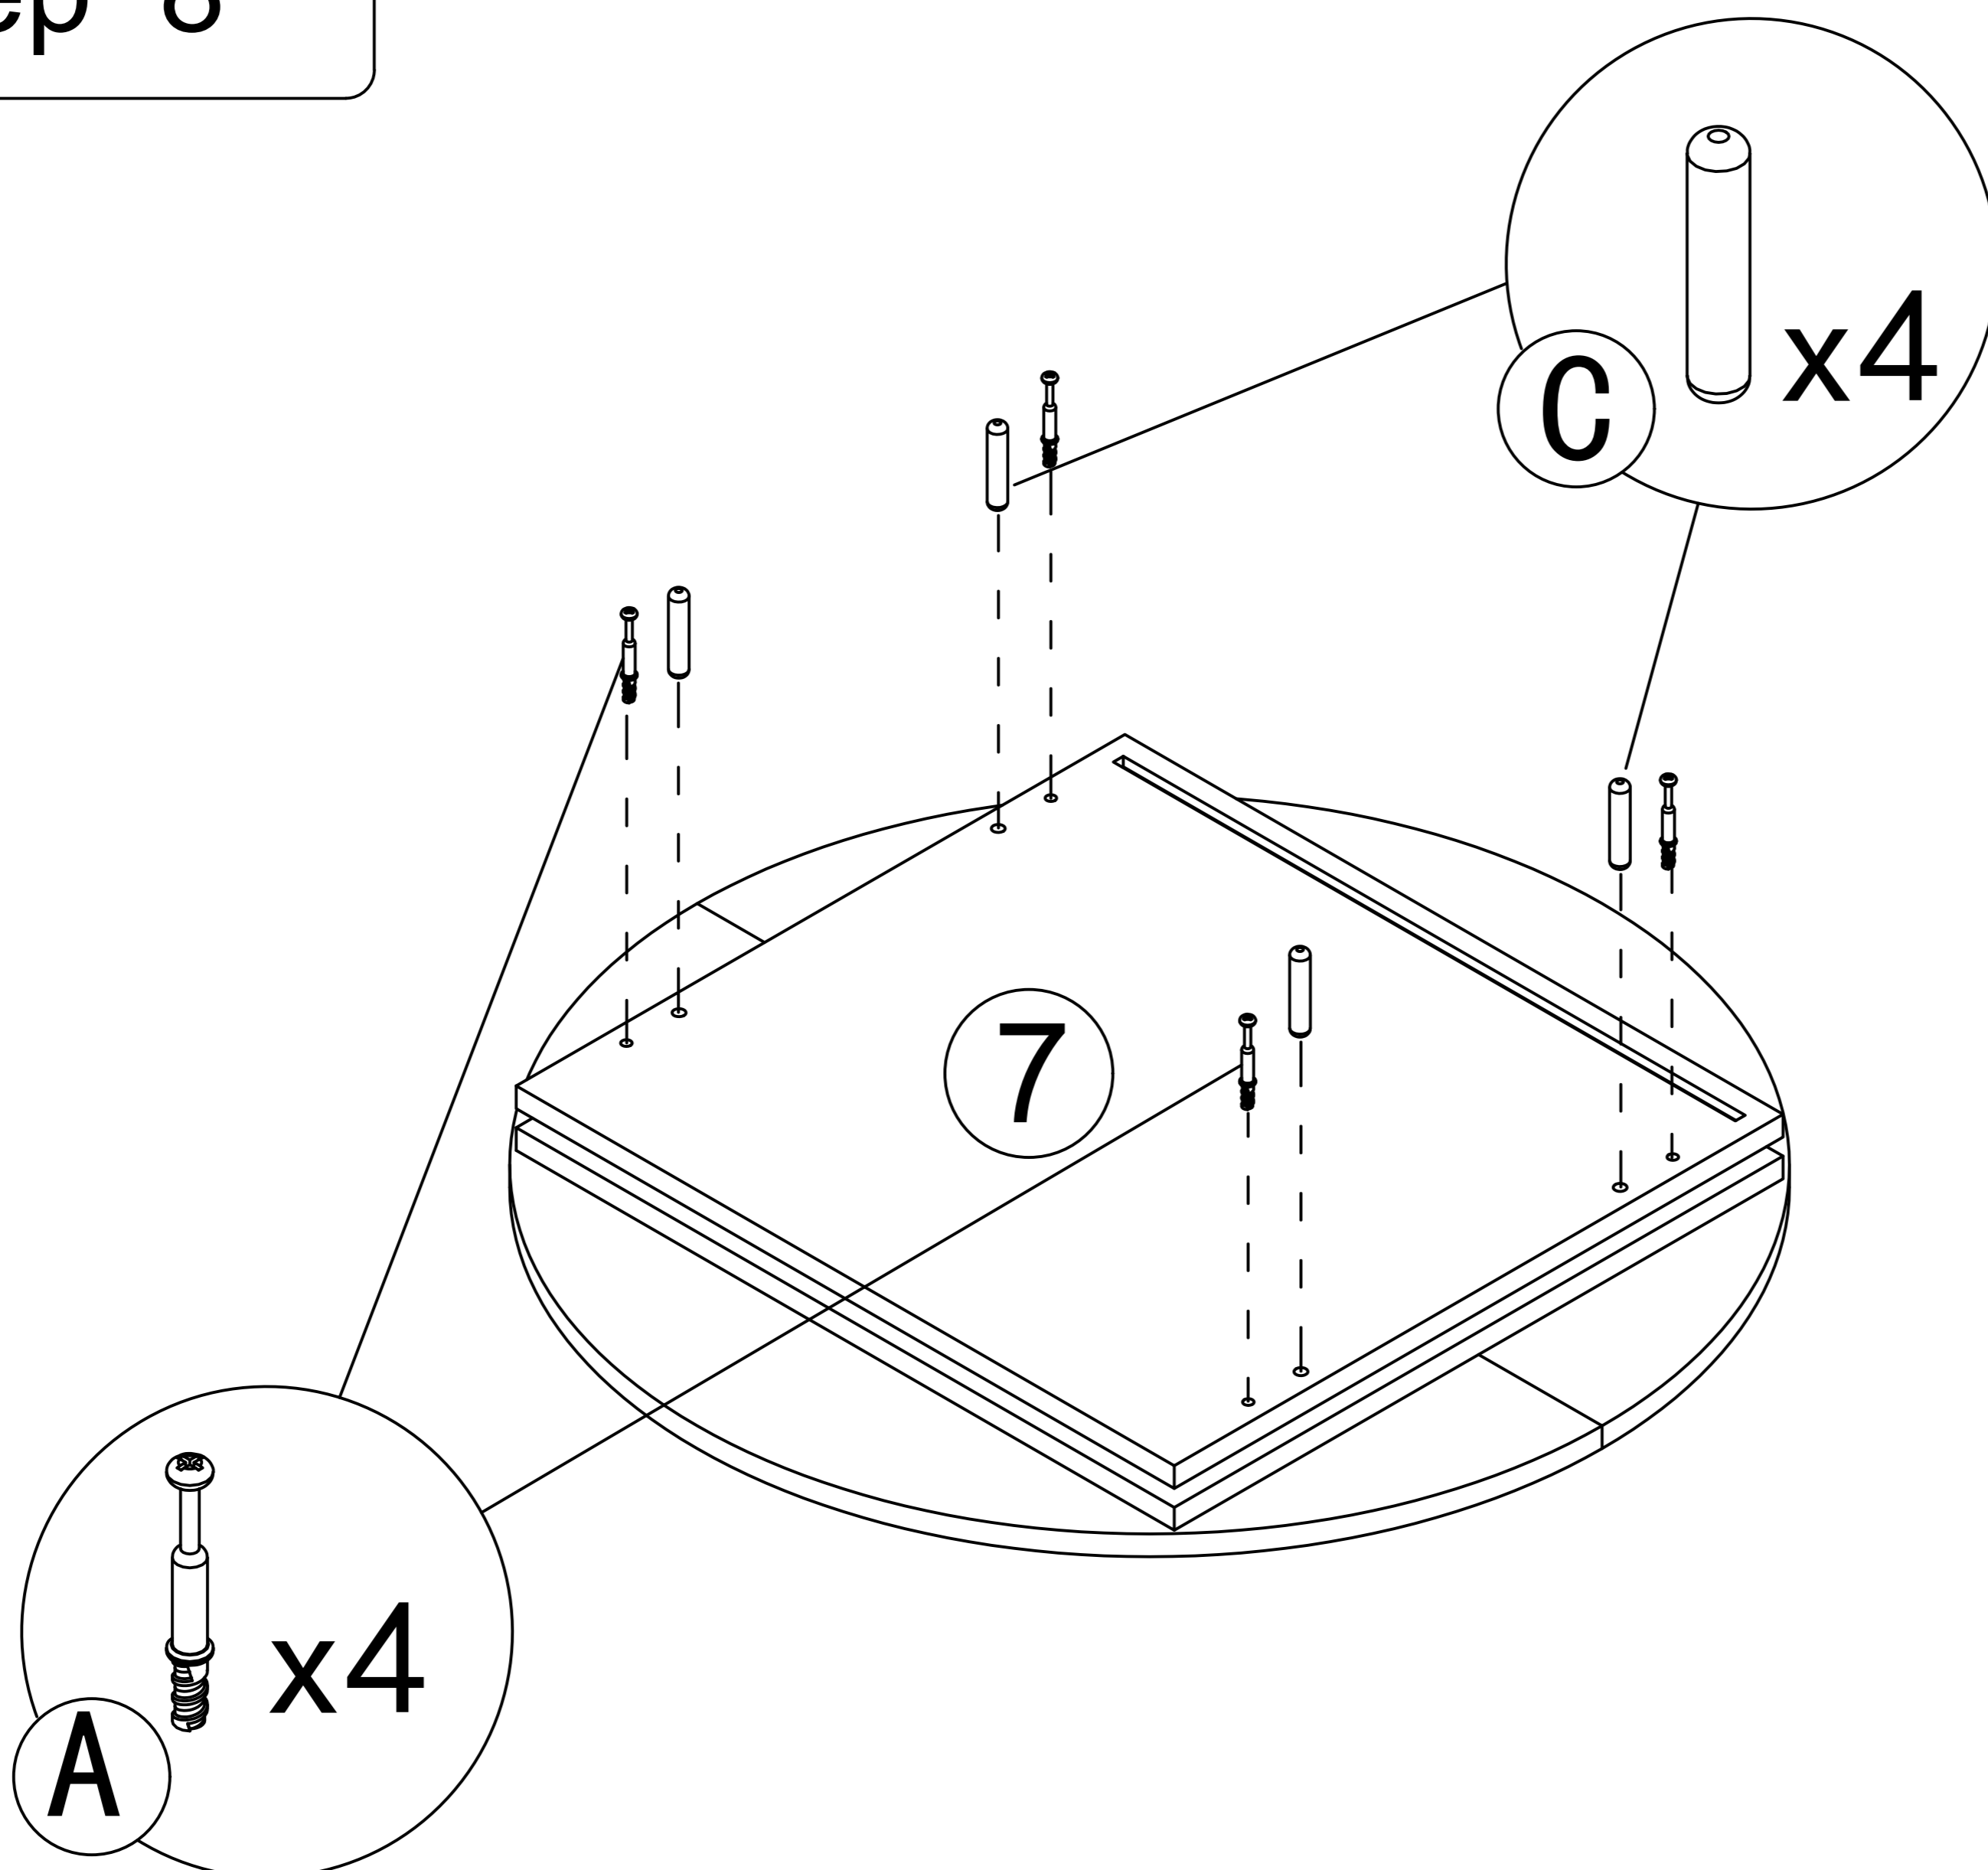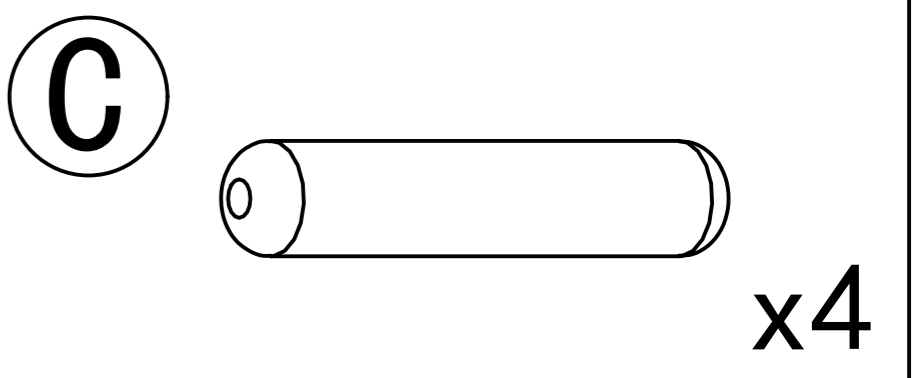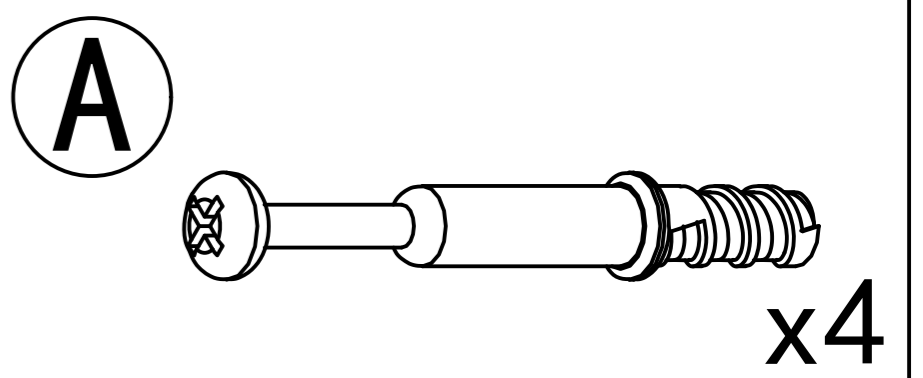




# Step 9

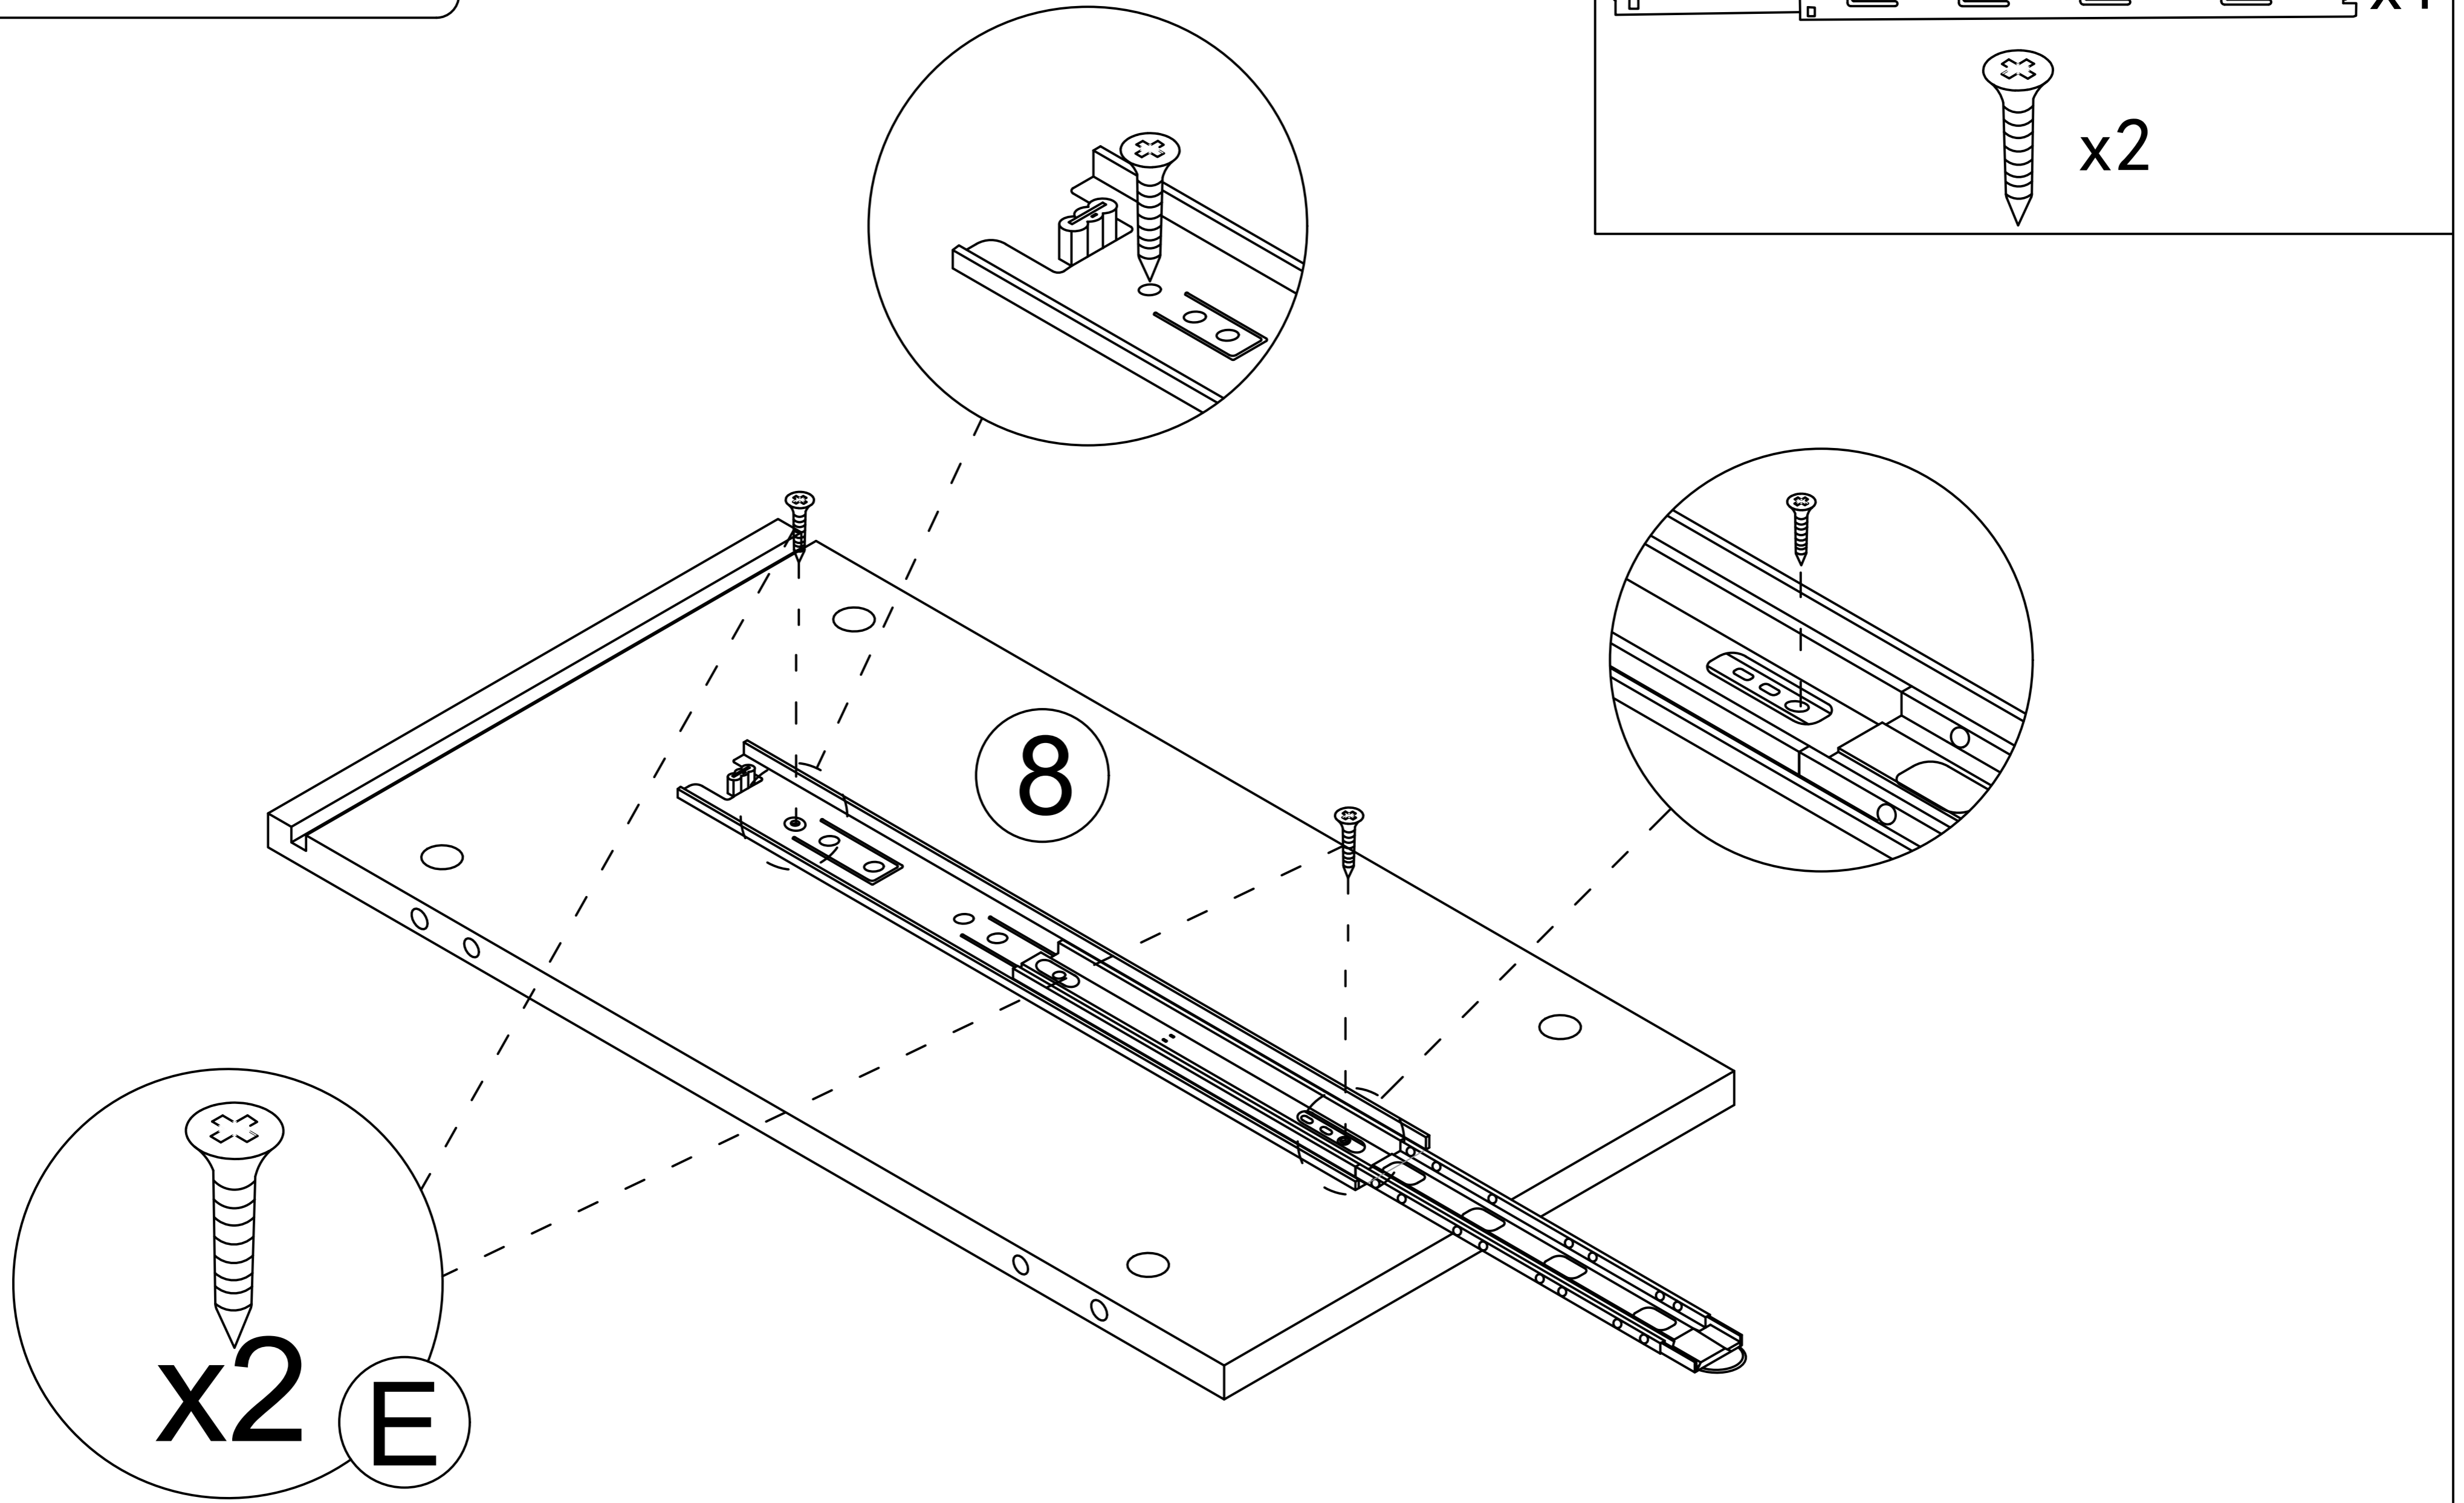







# Step 10

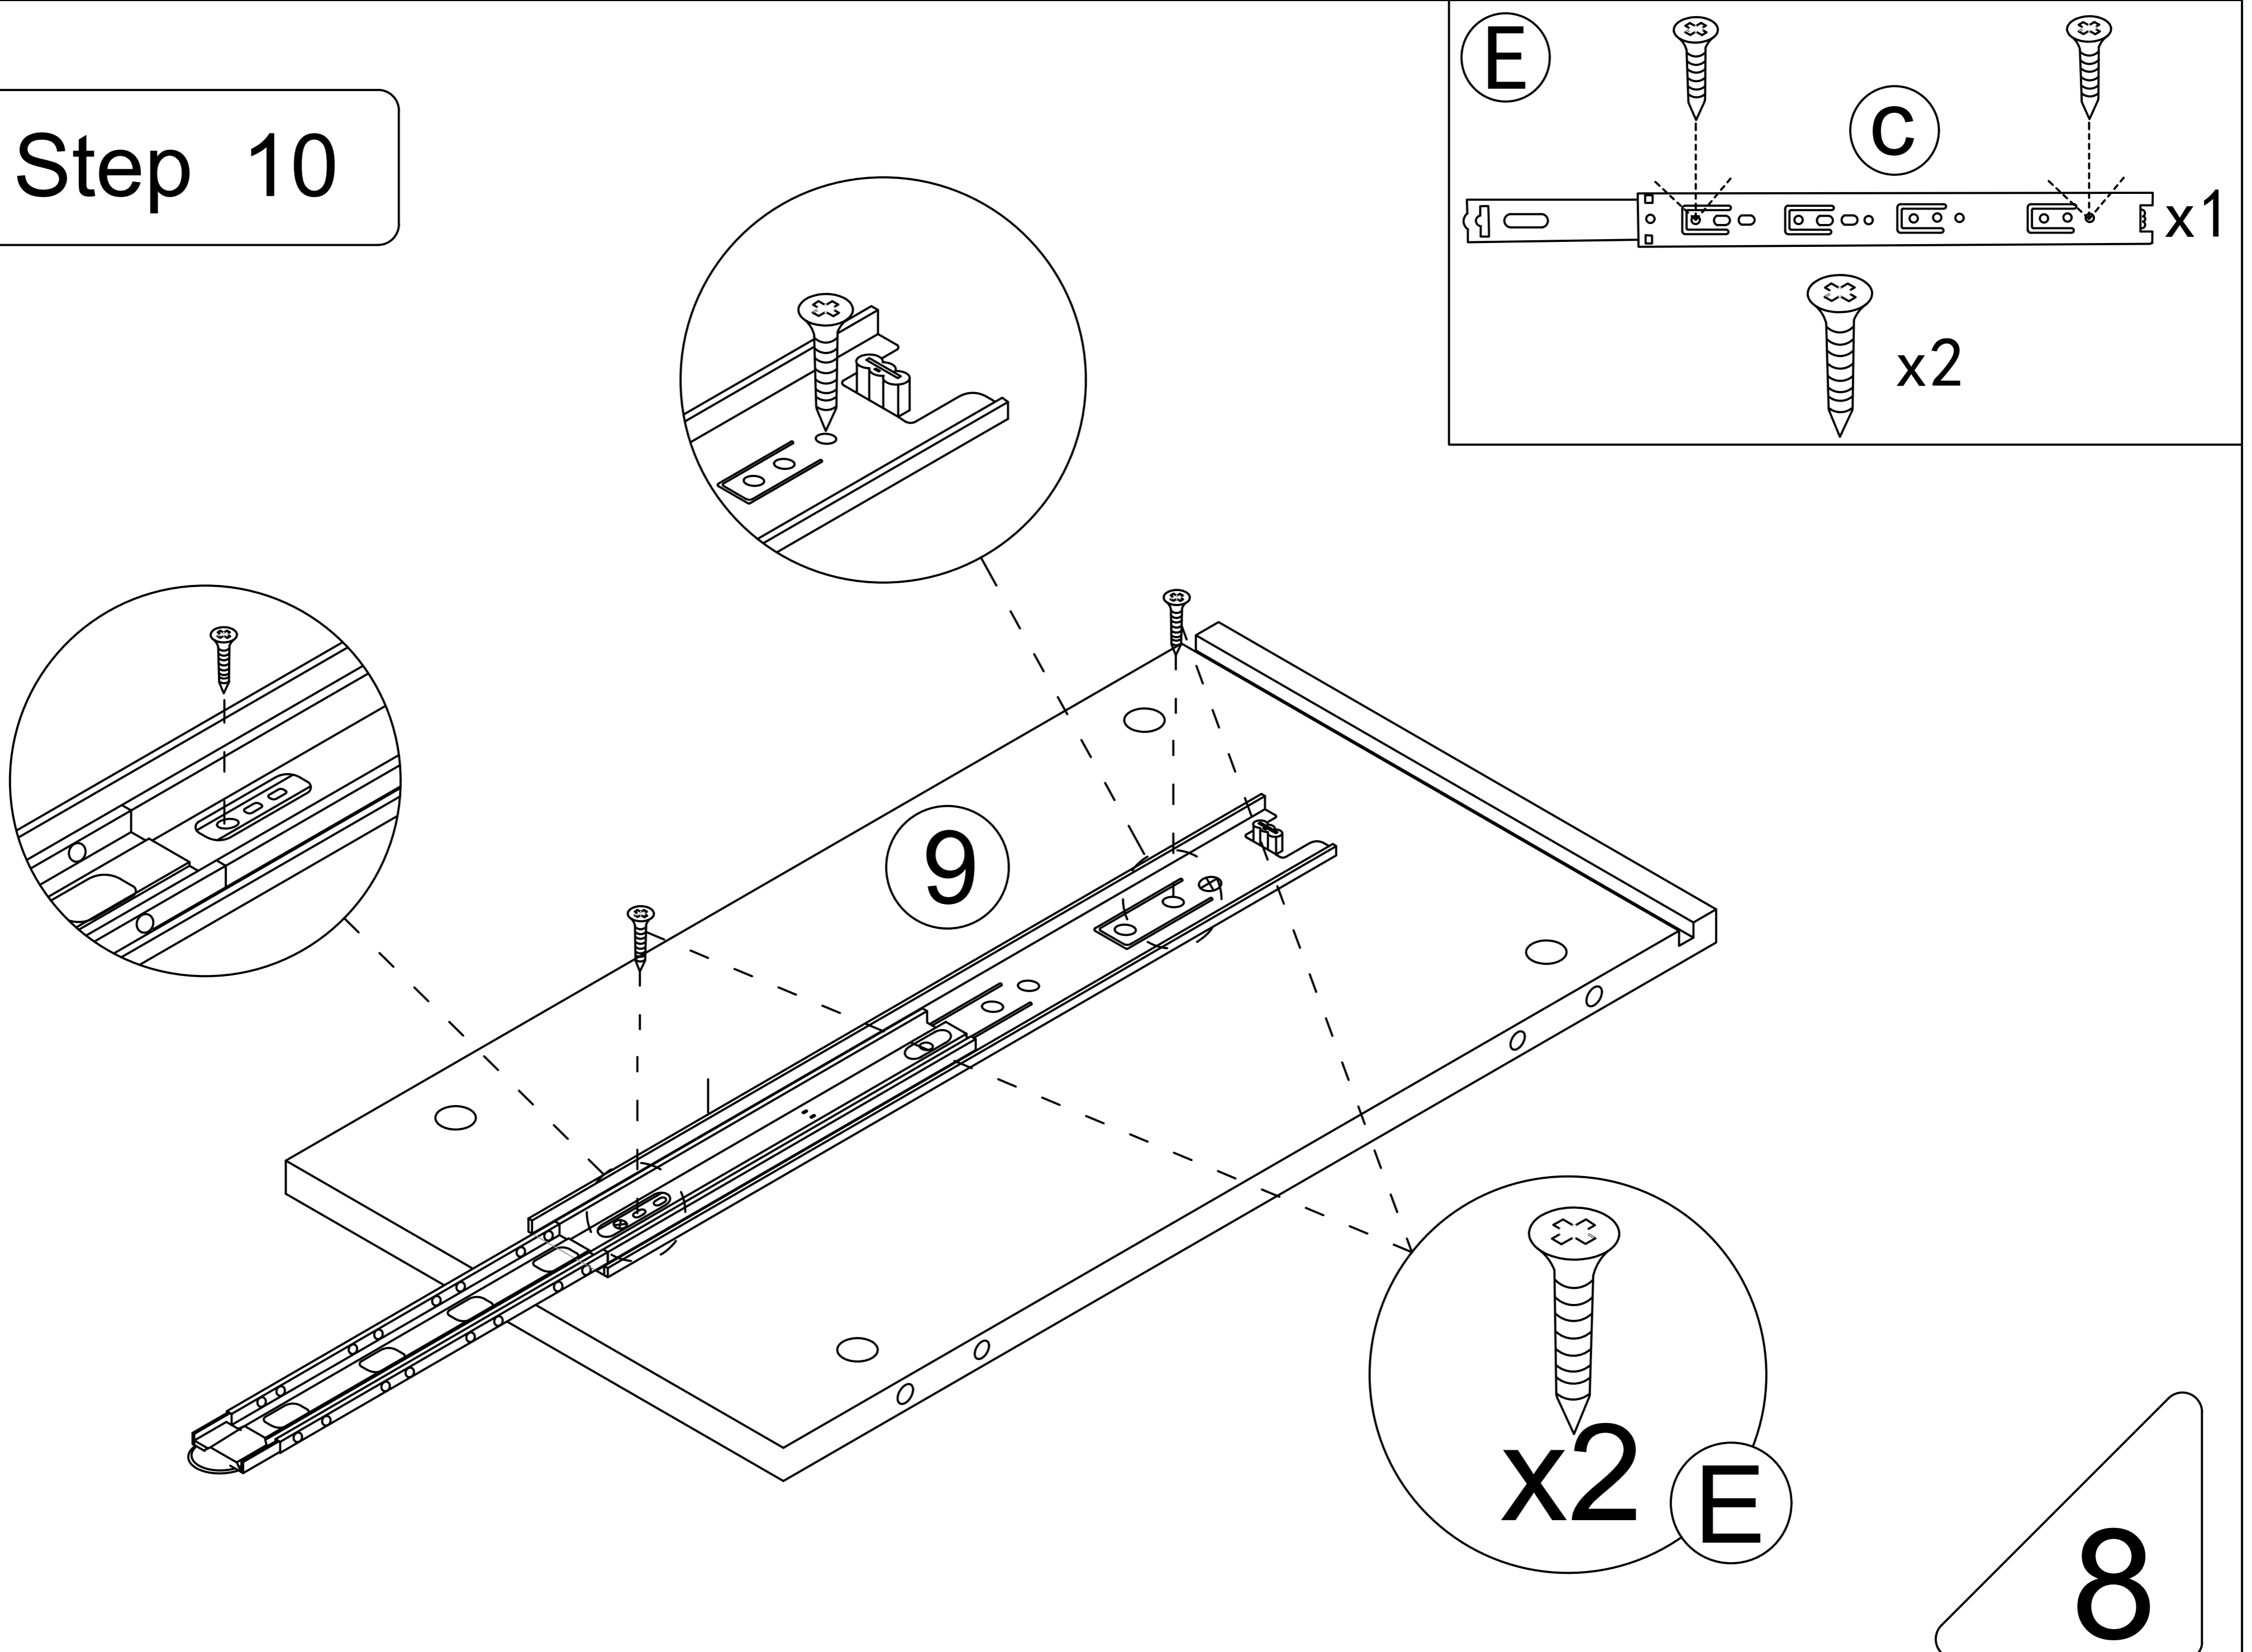



# Step 11

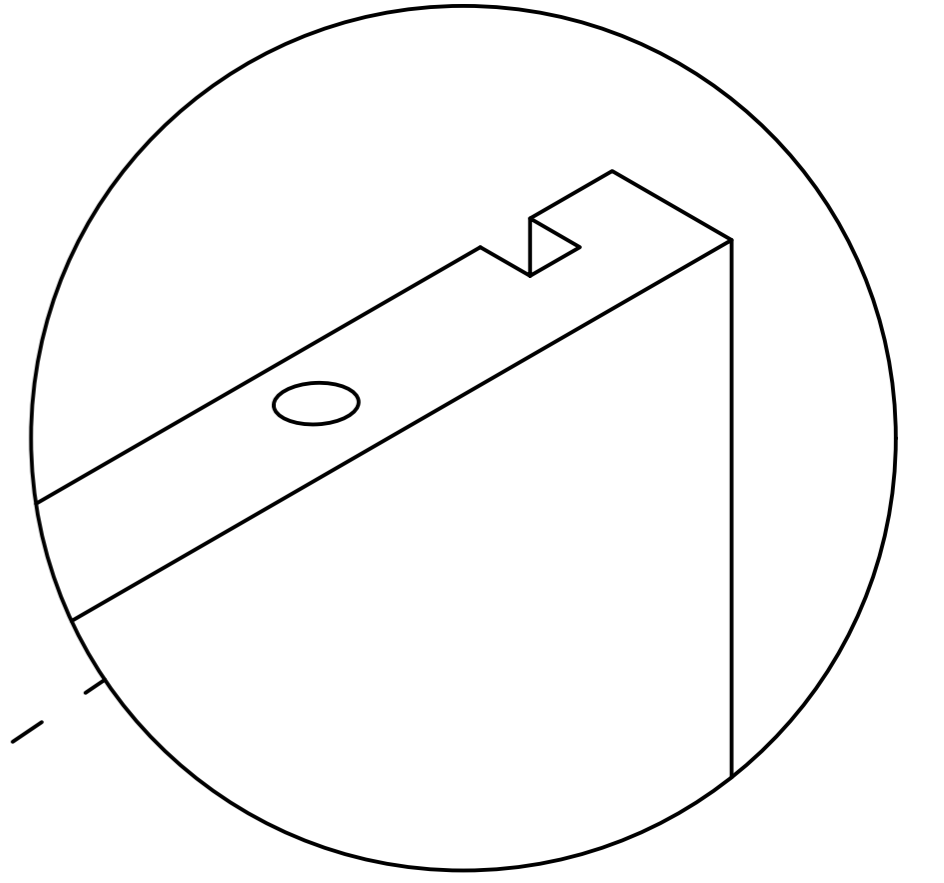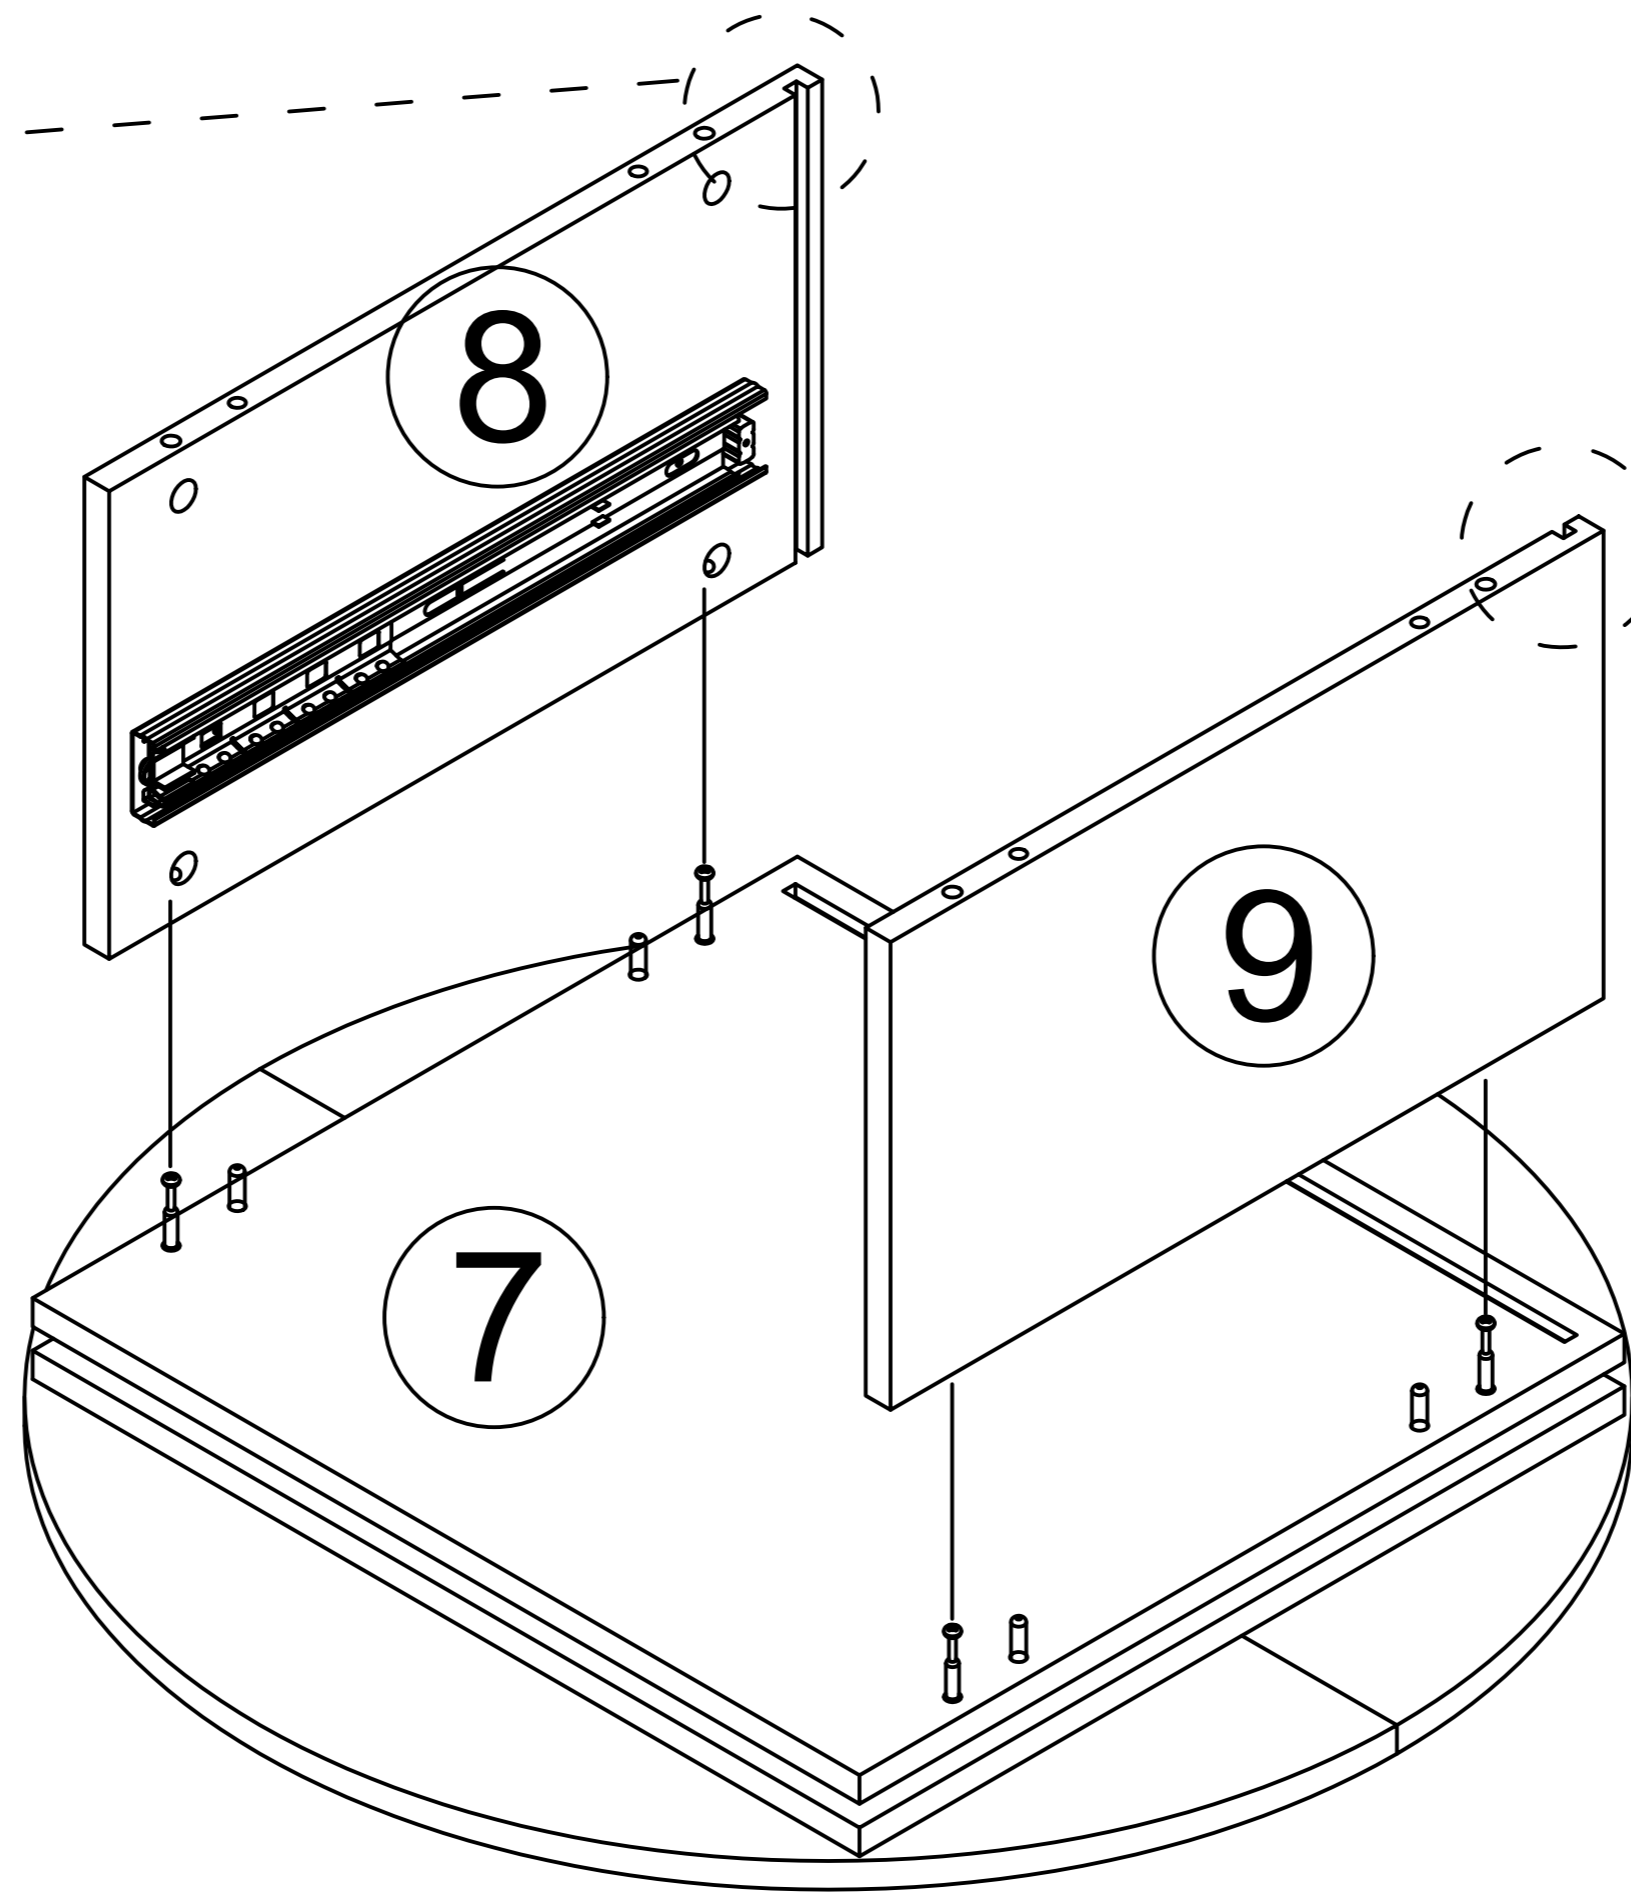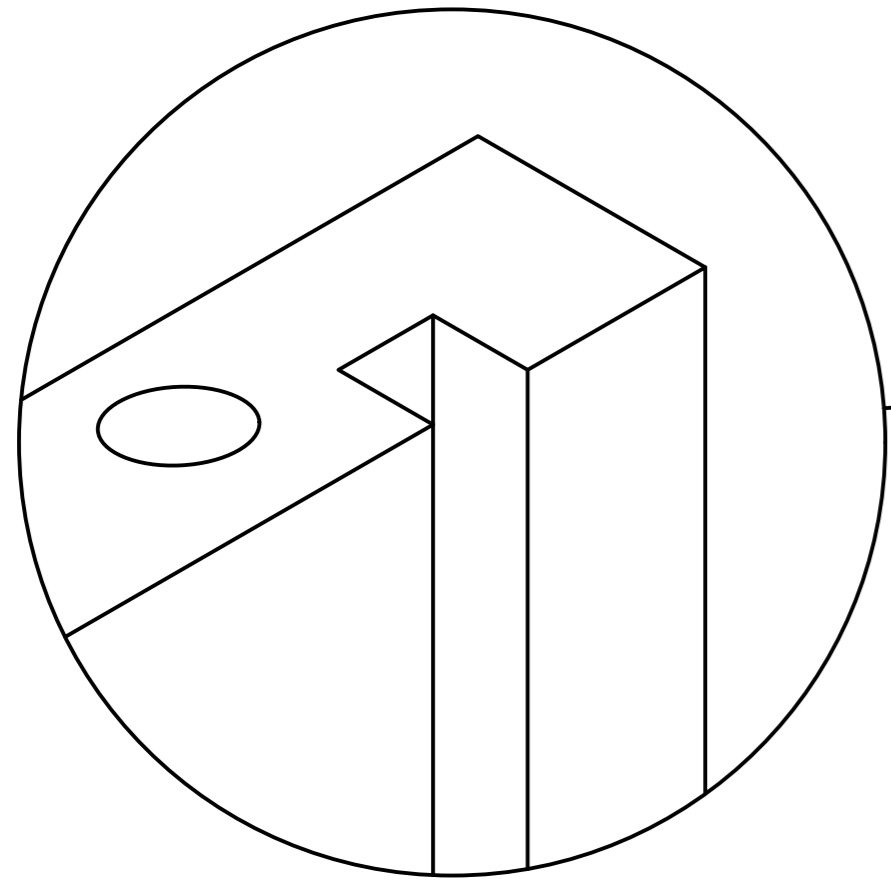




# Step 12

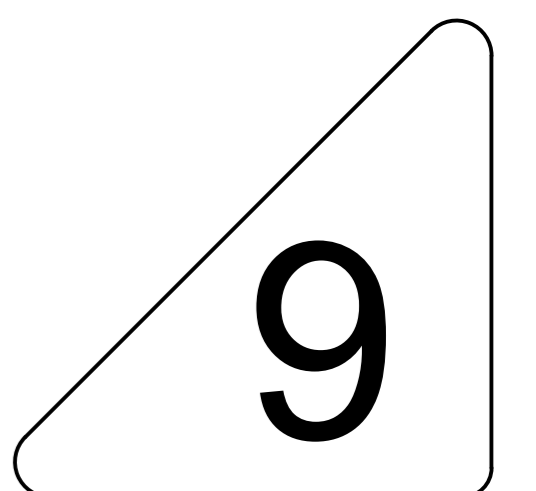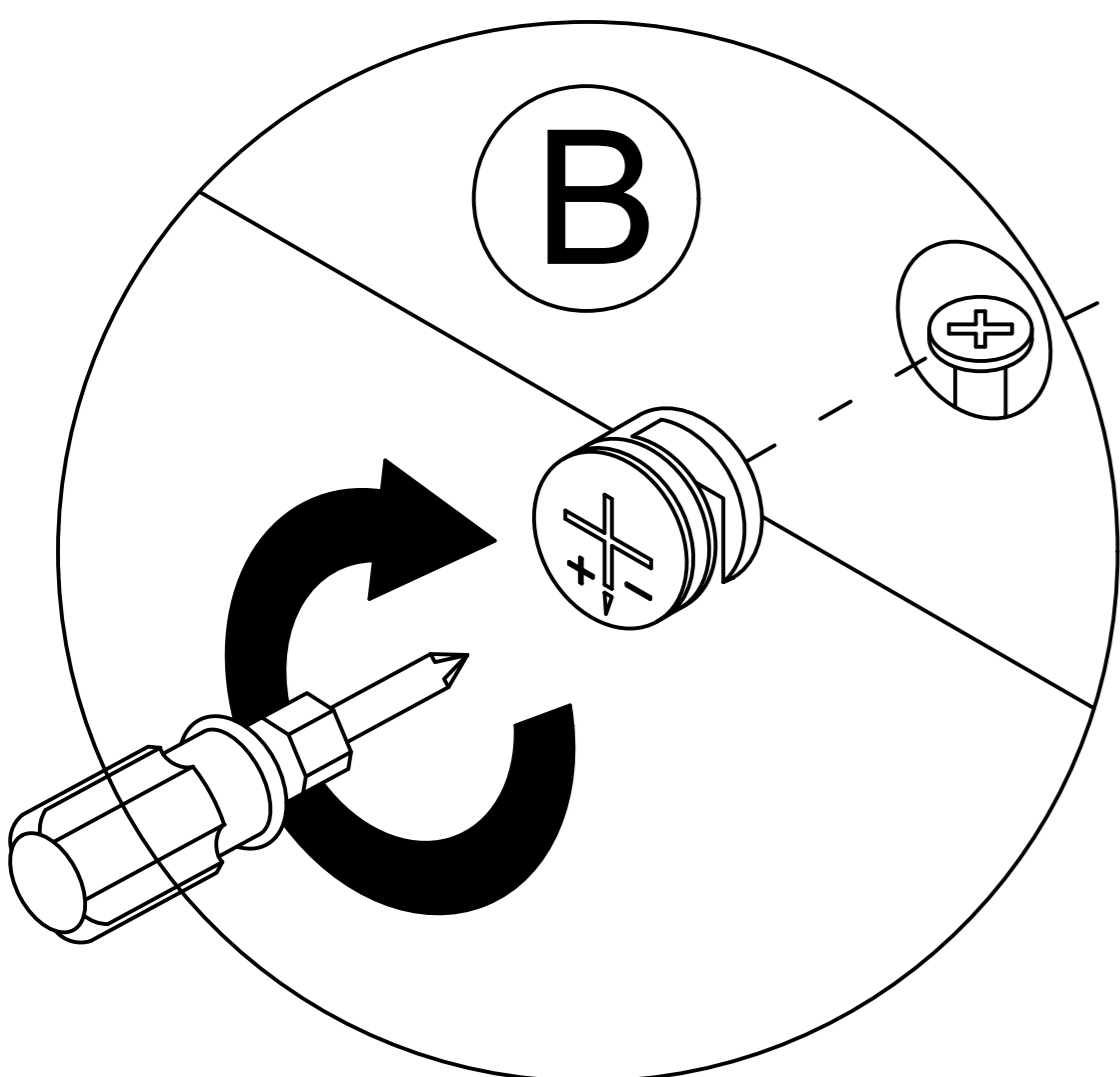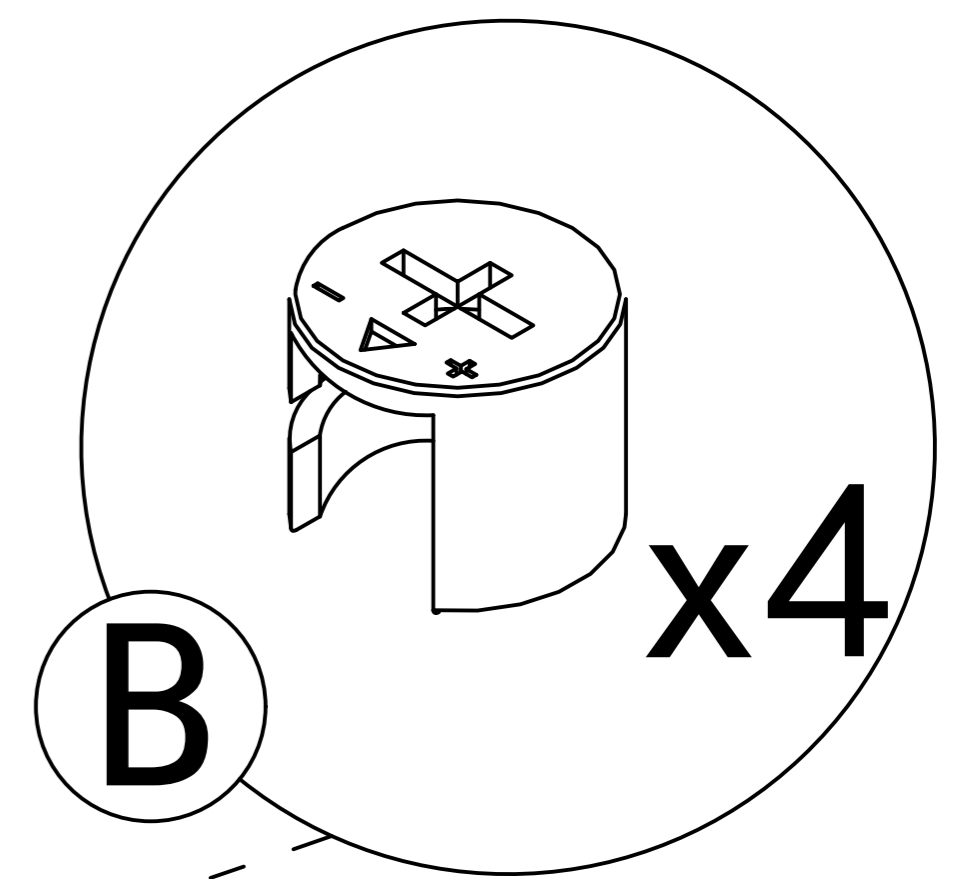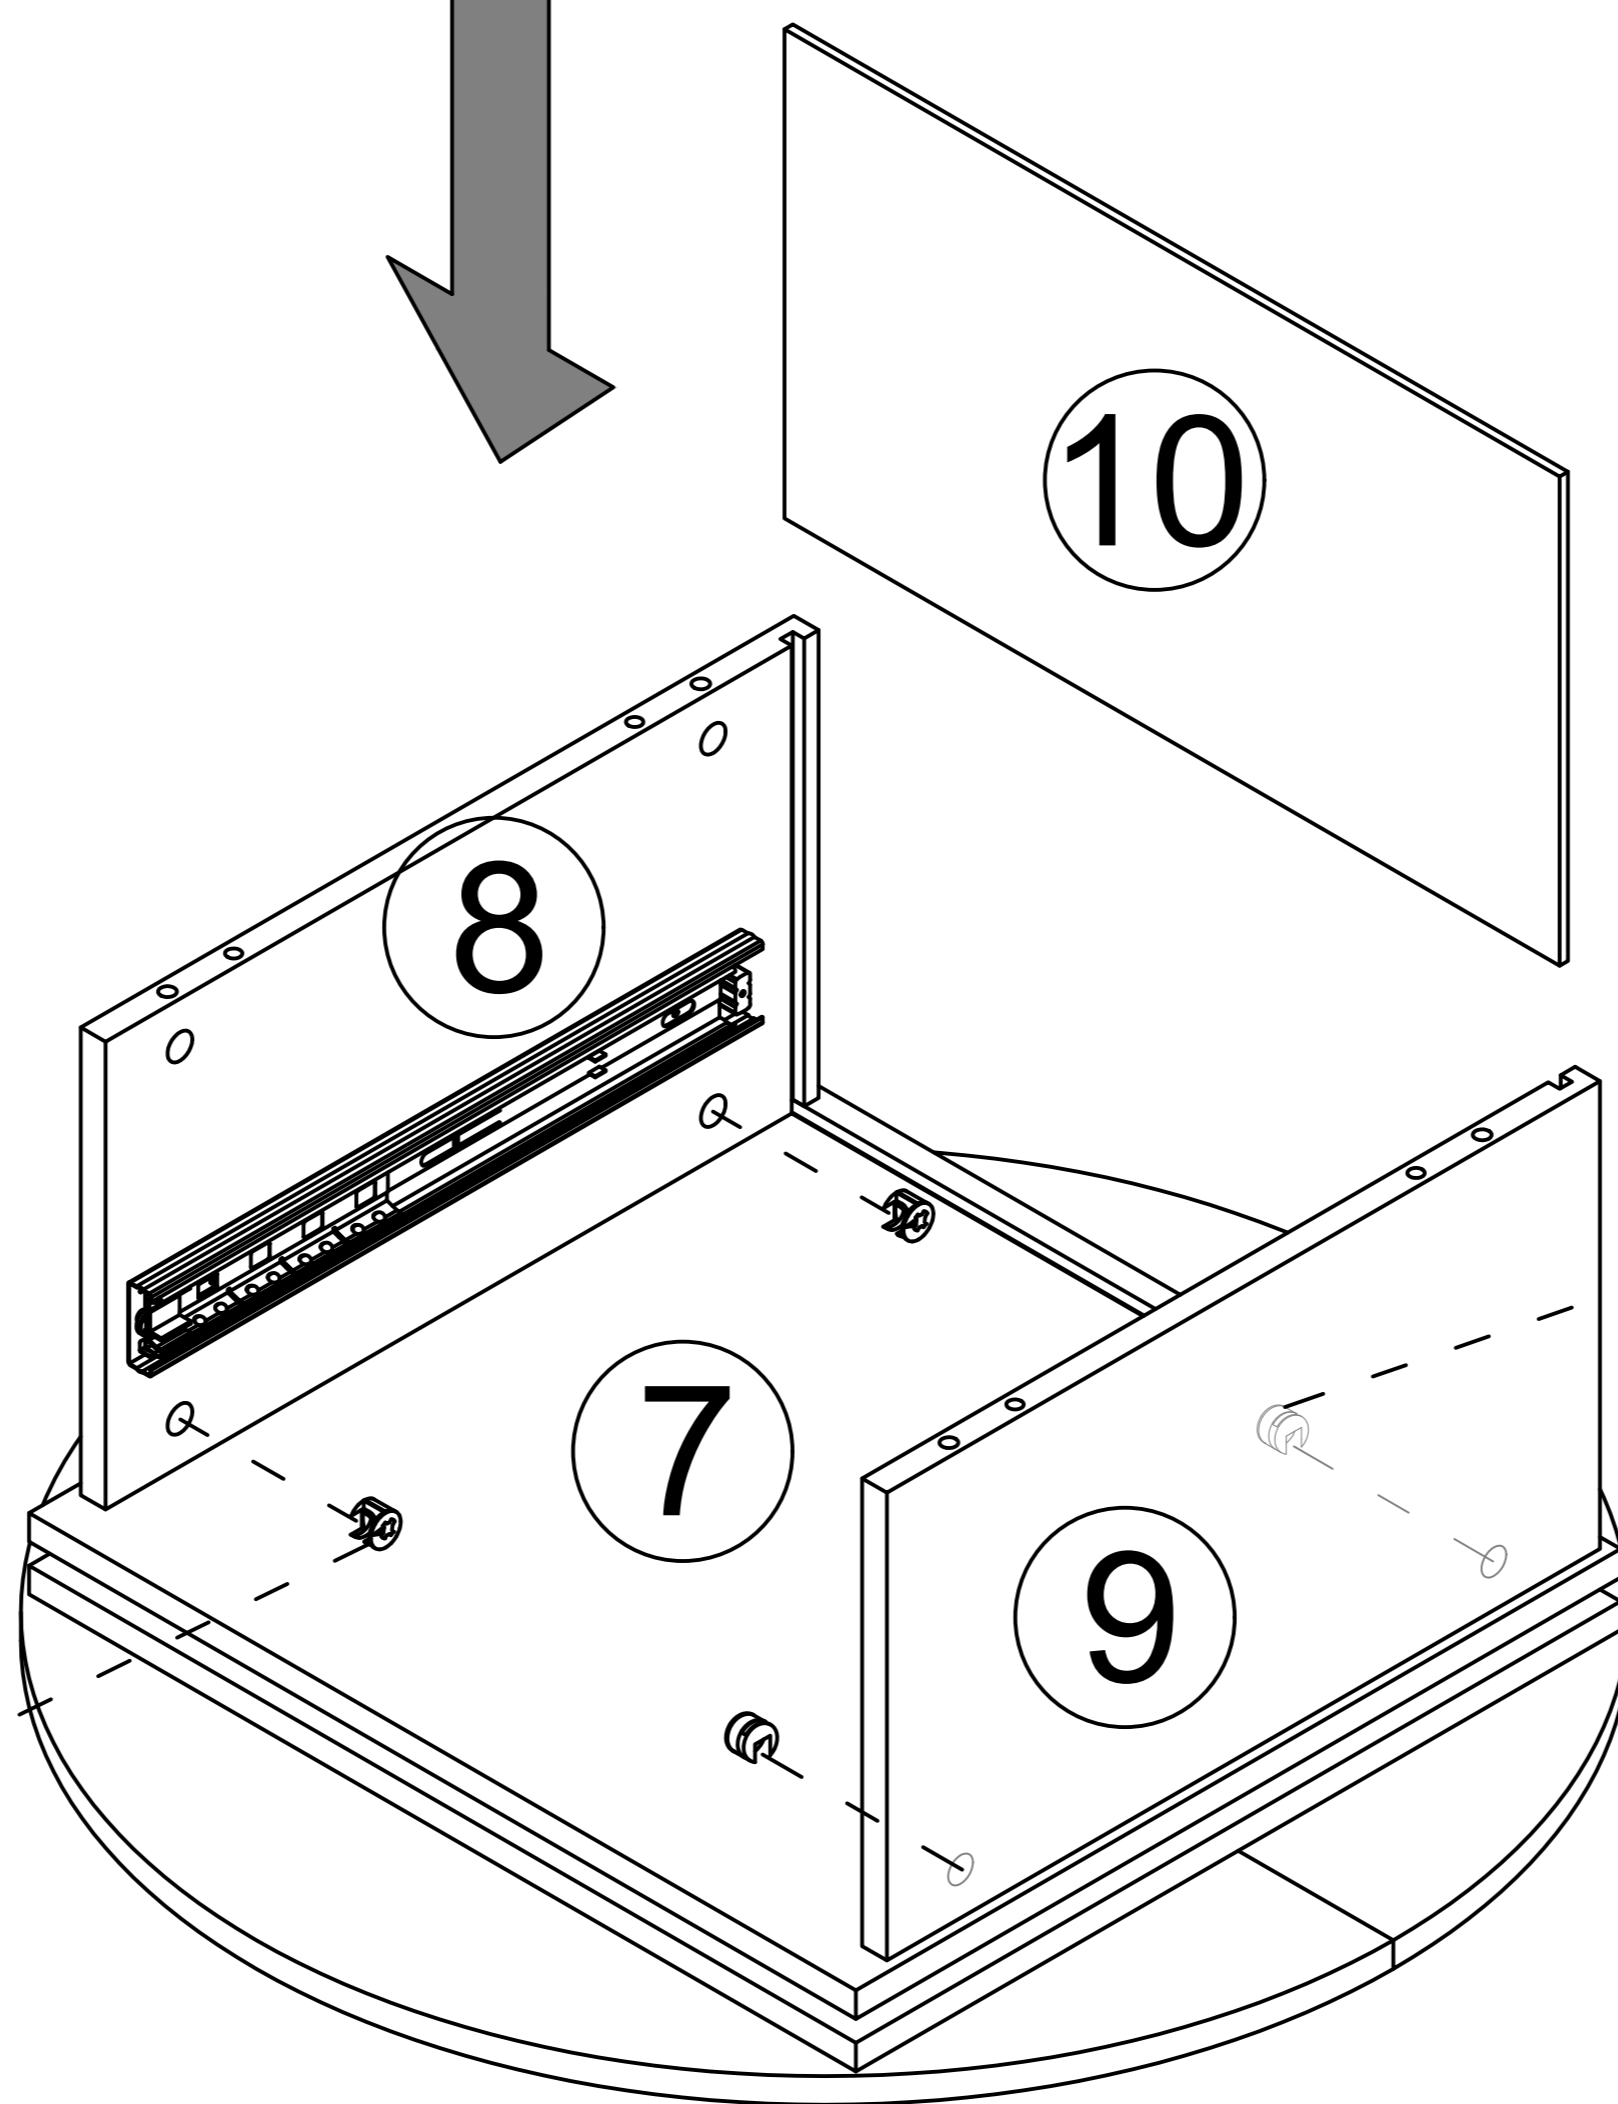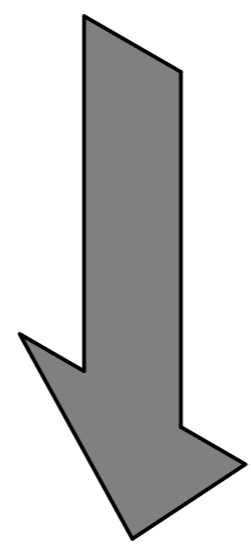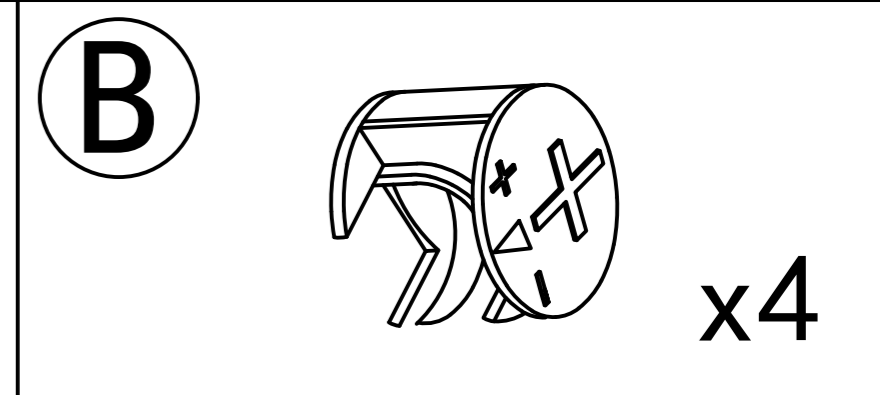





Step 13

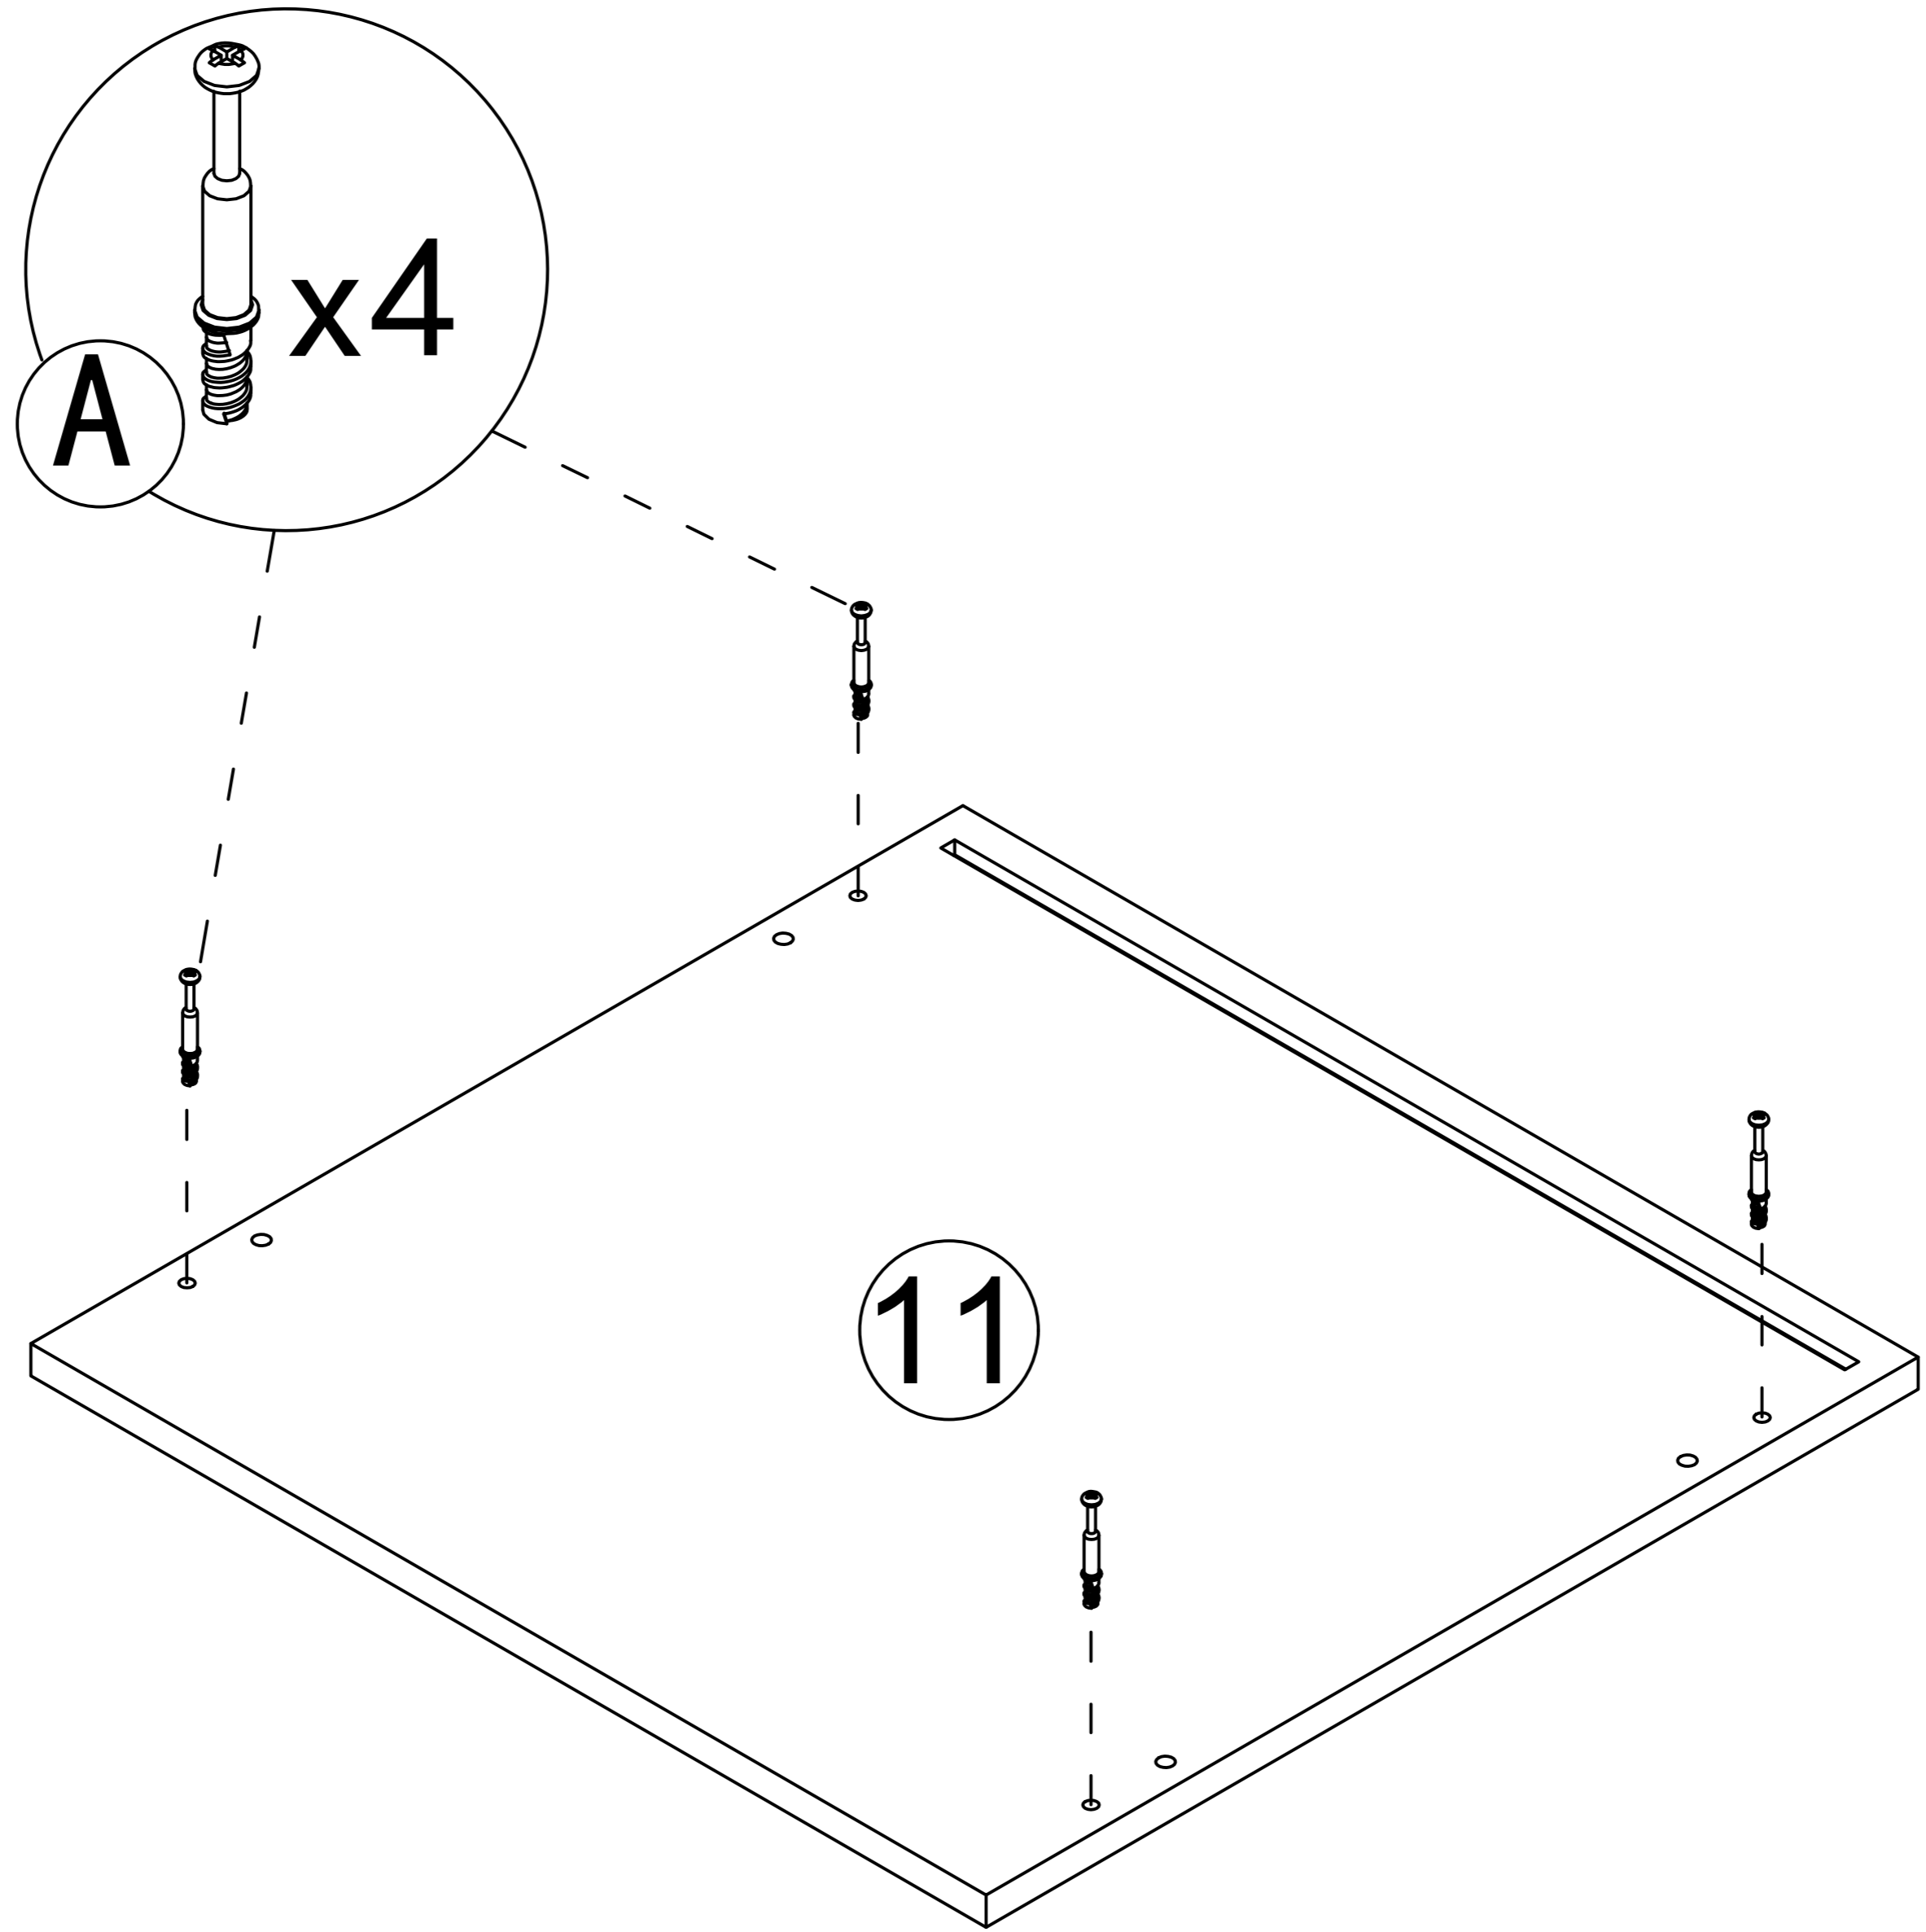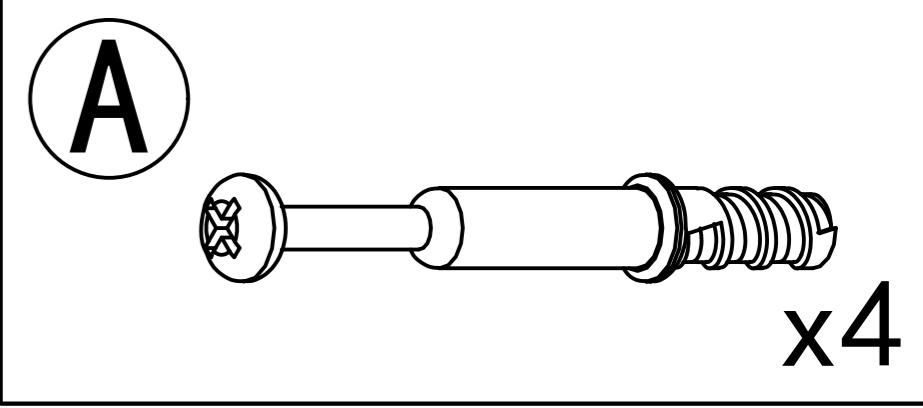



Step 14

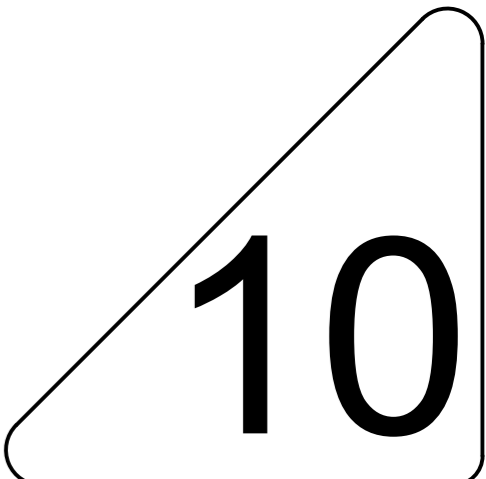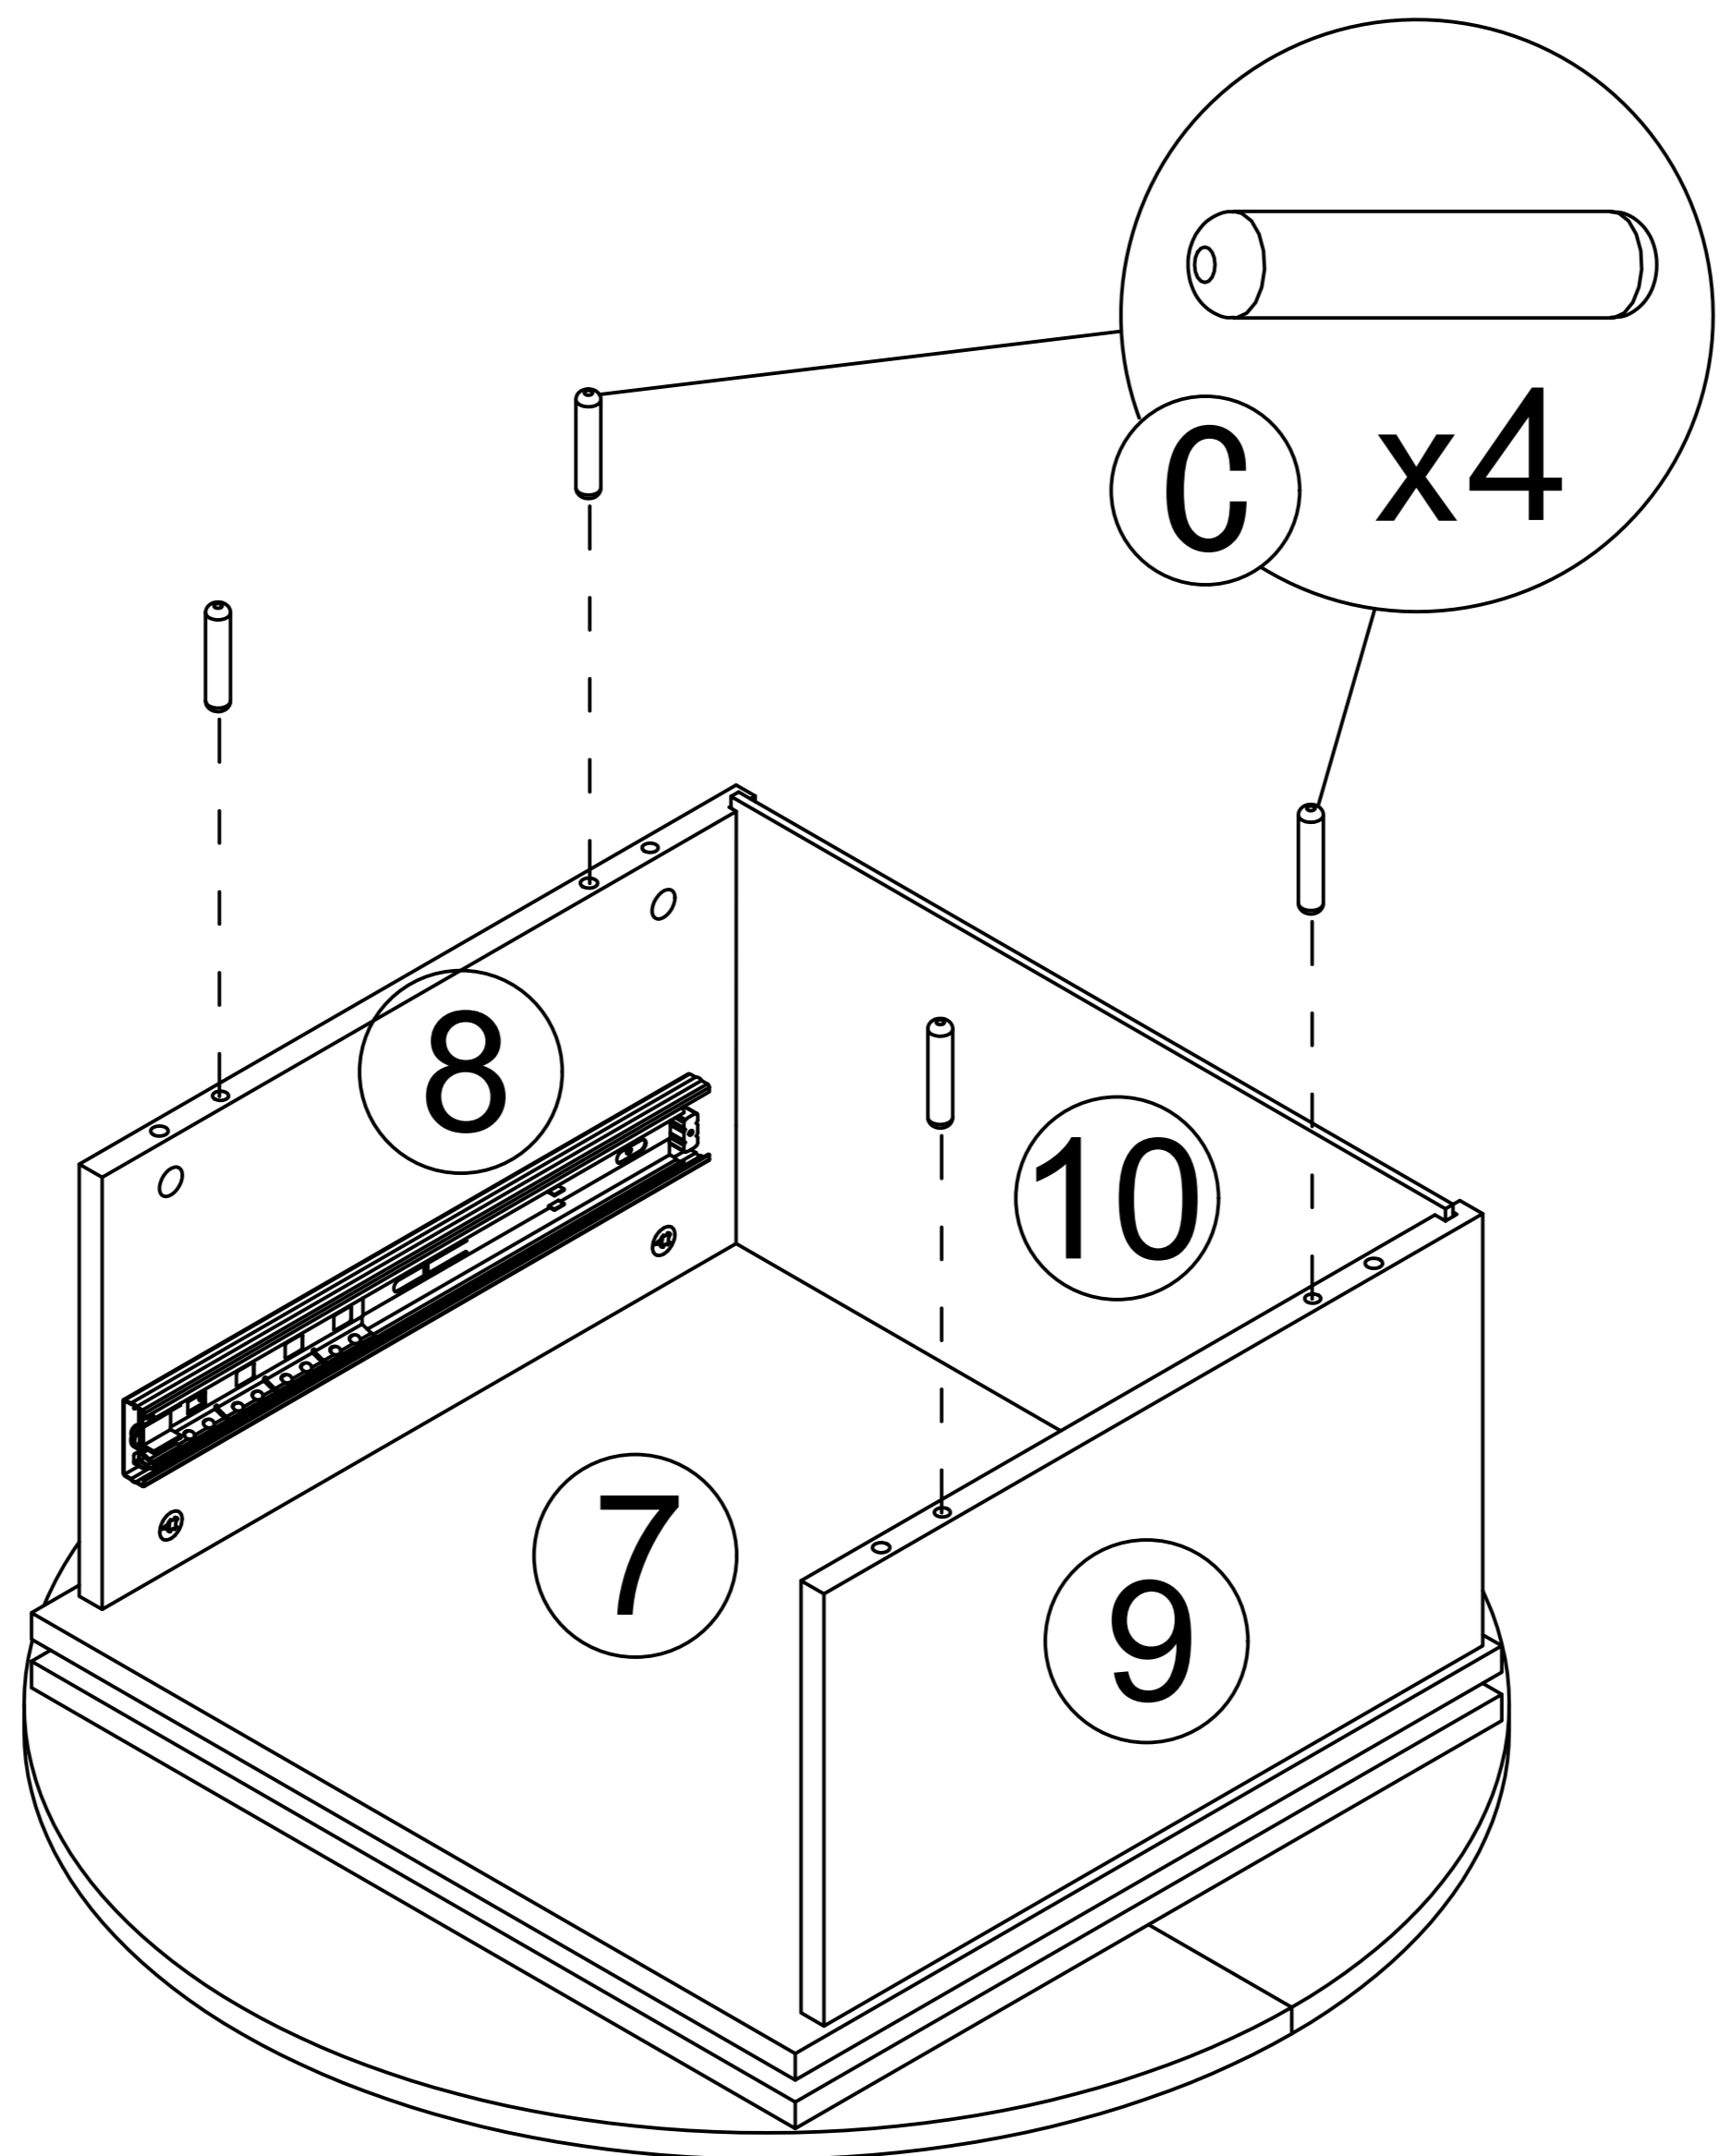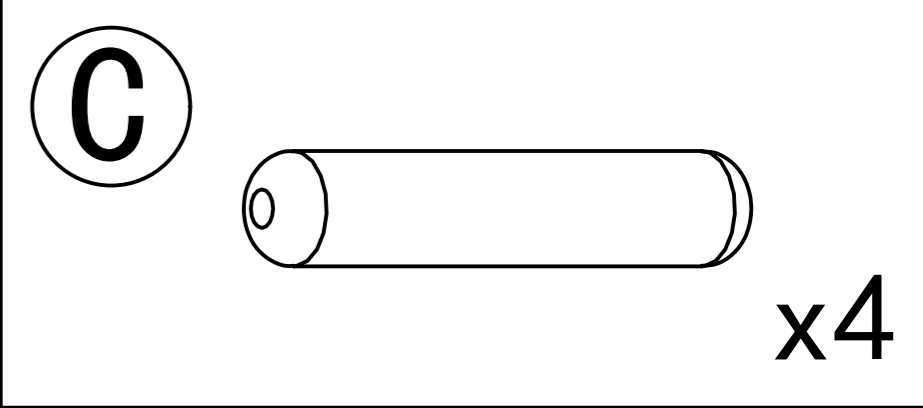

# Step 15

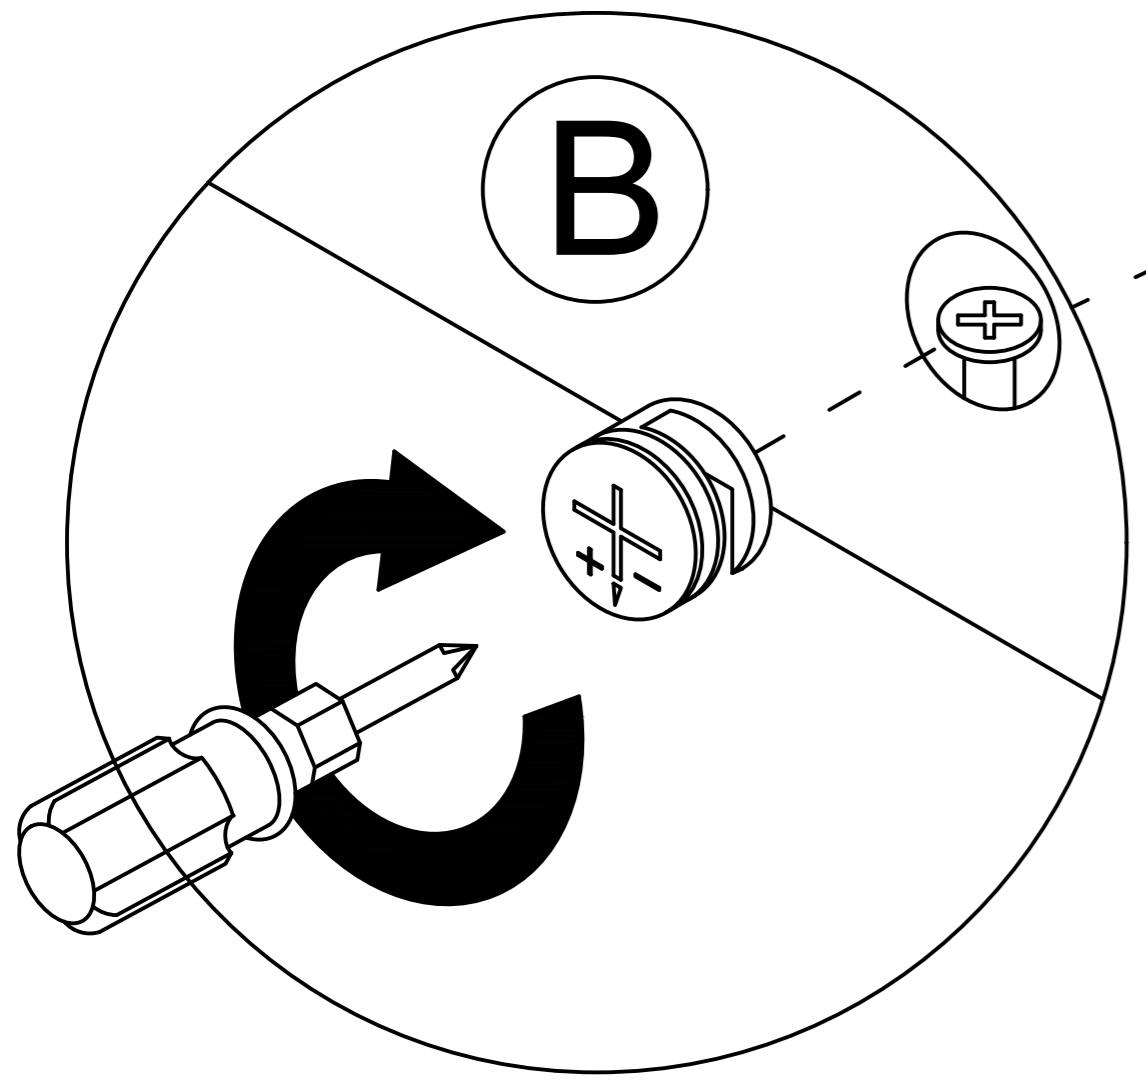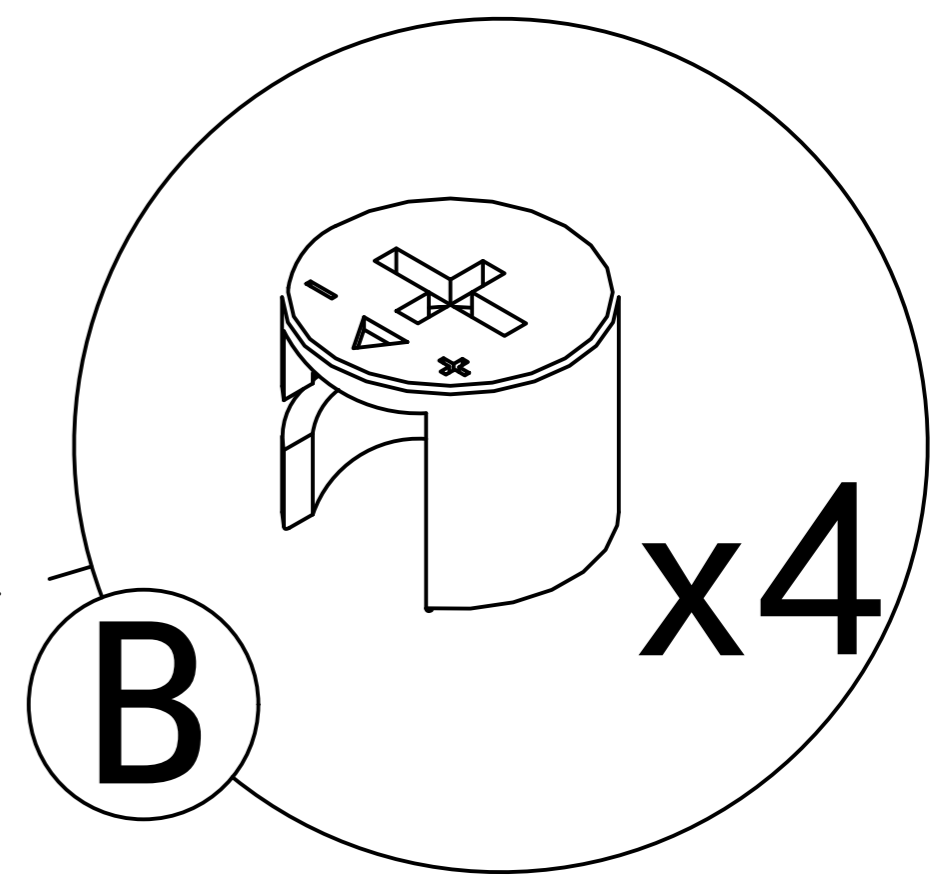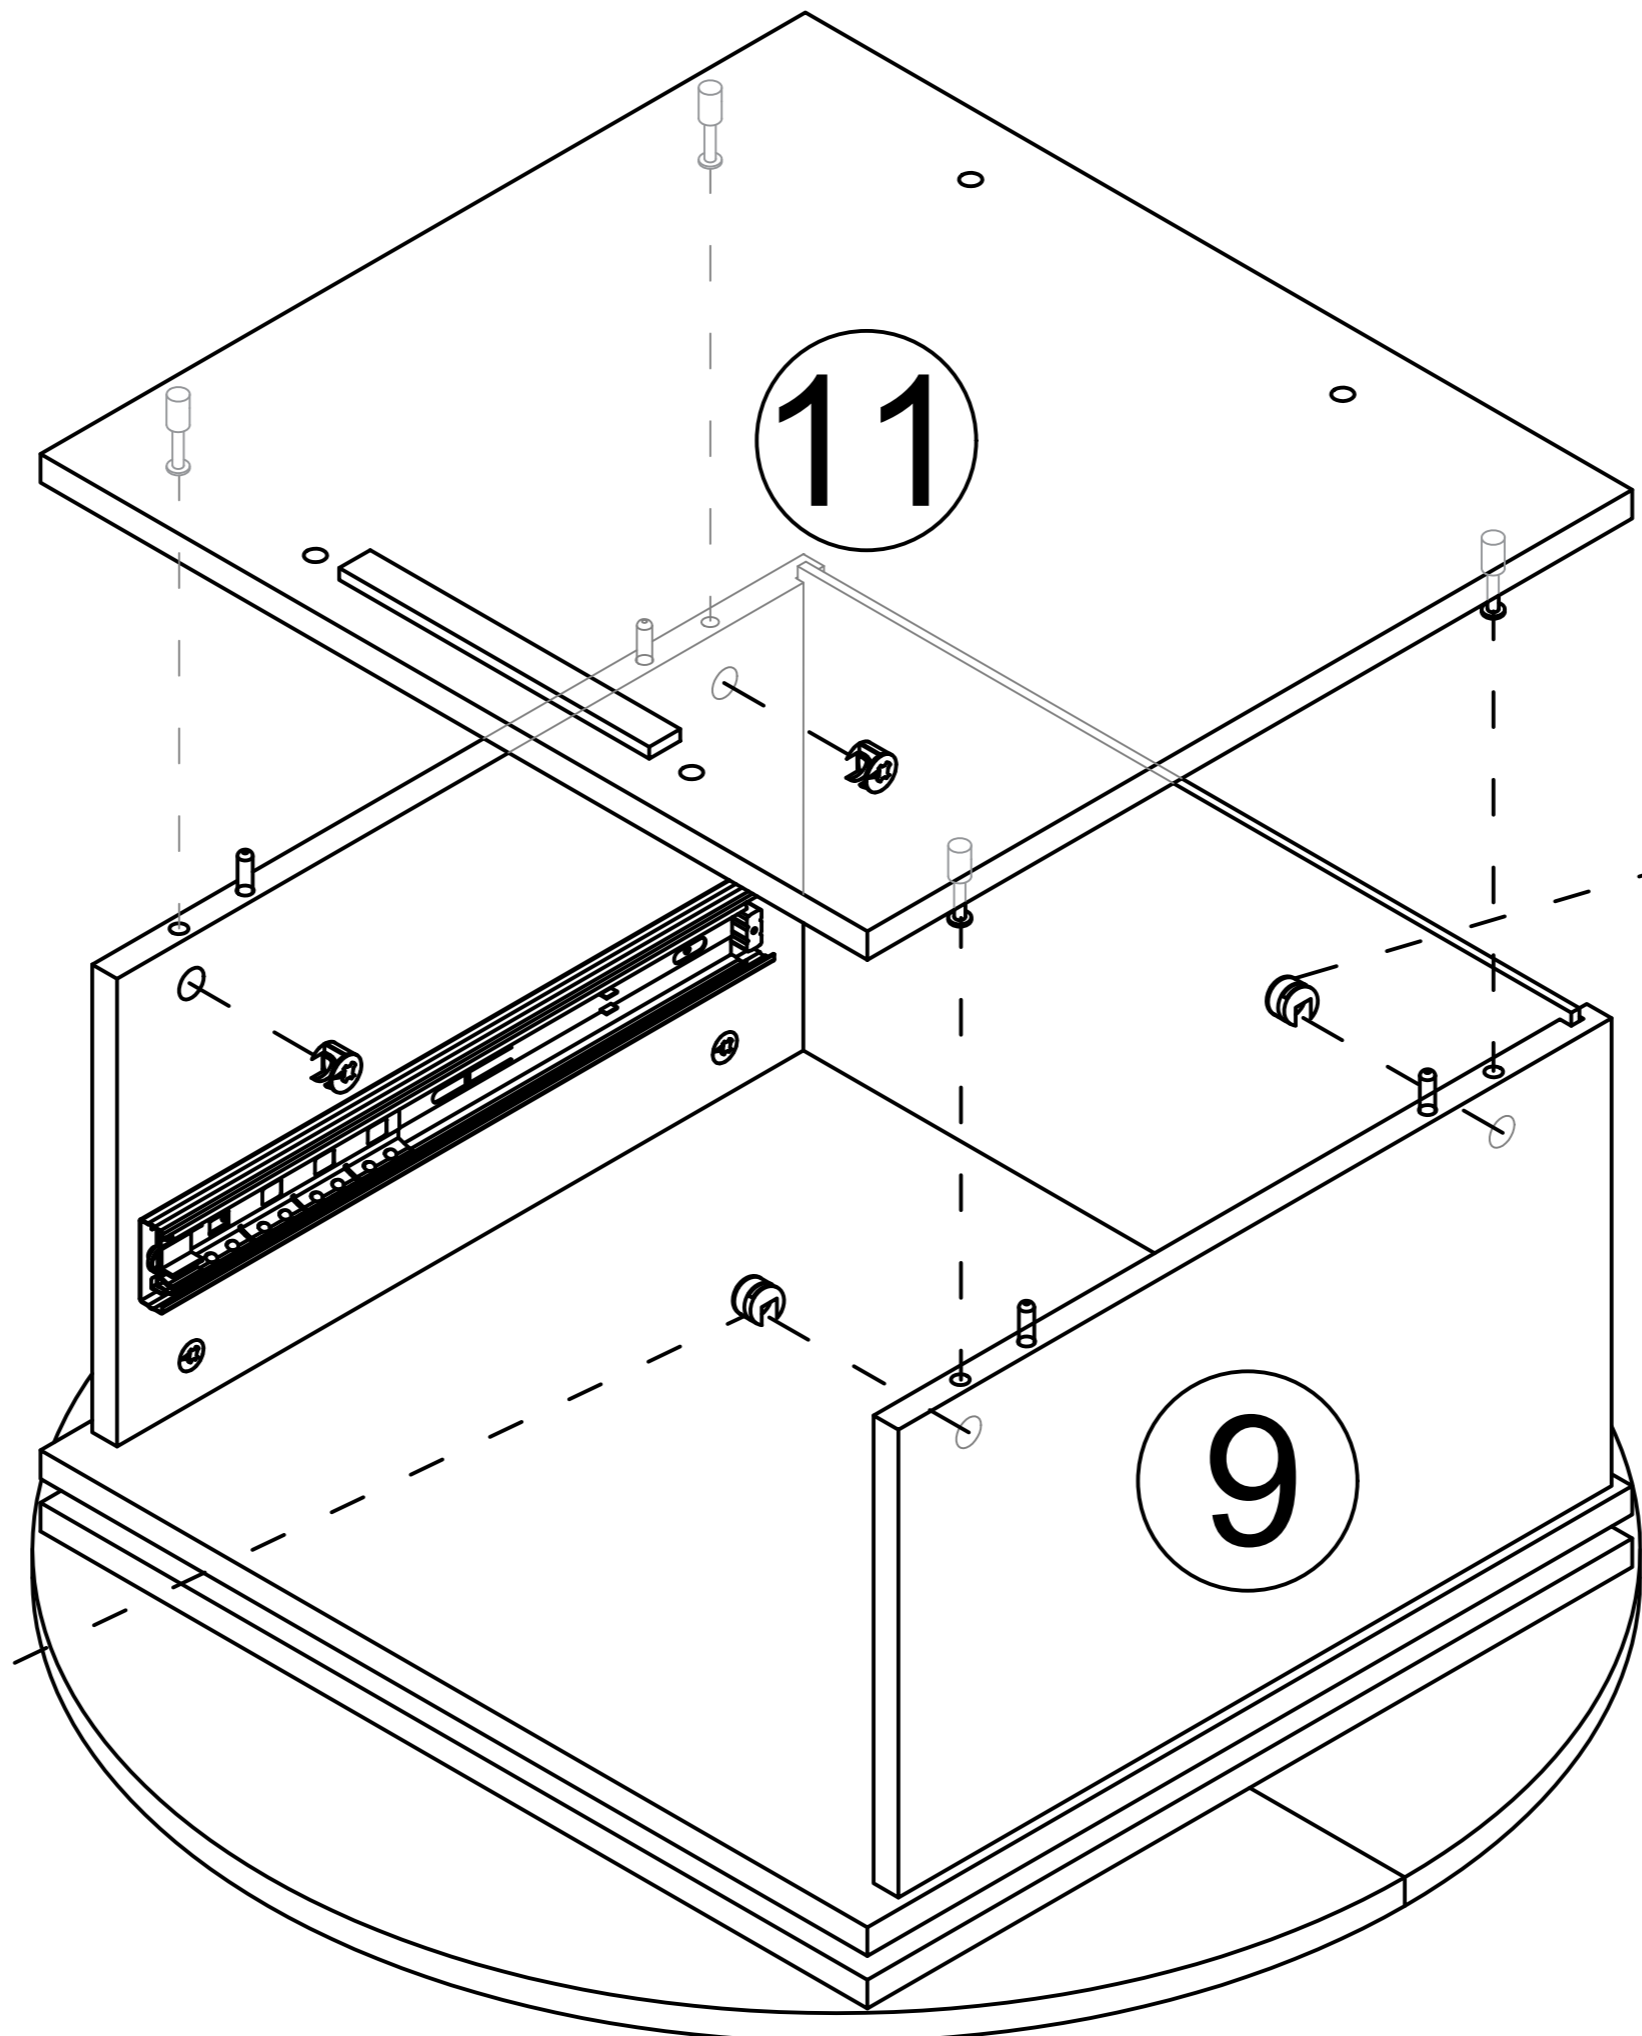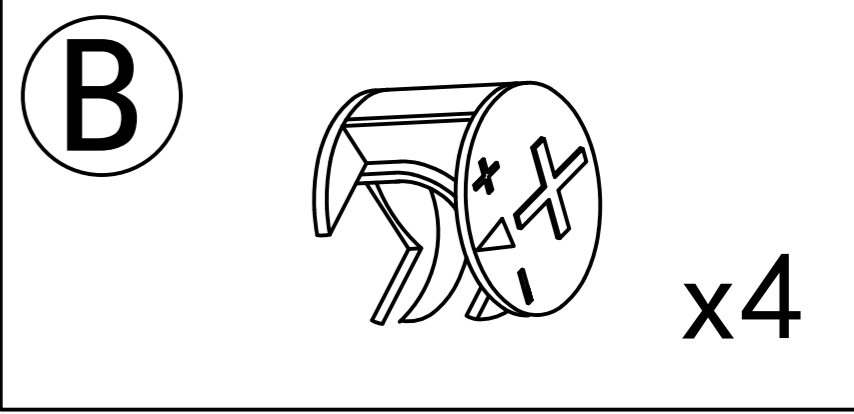


# Step 16

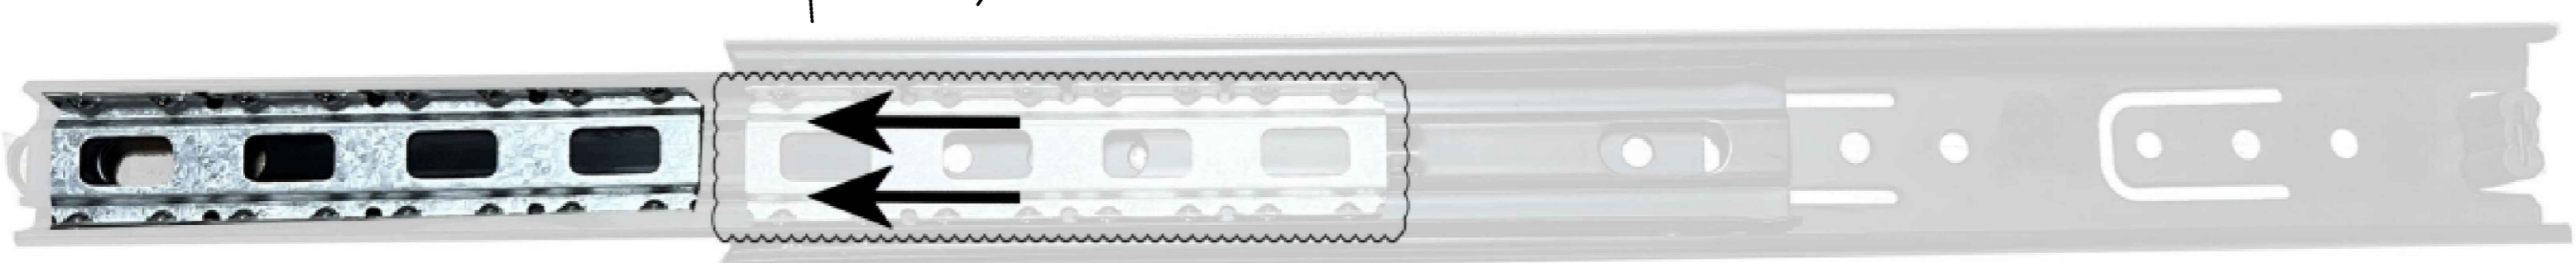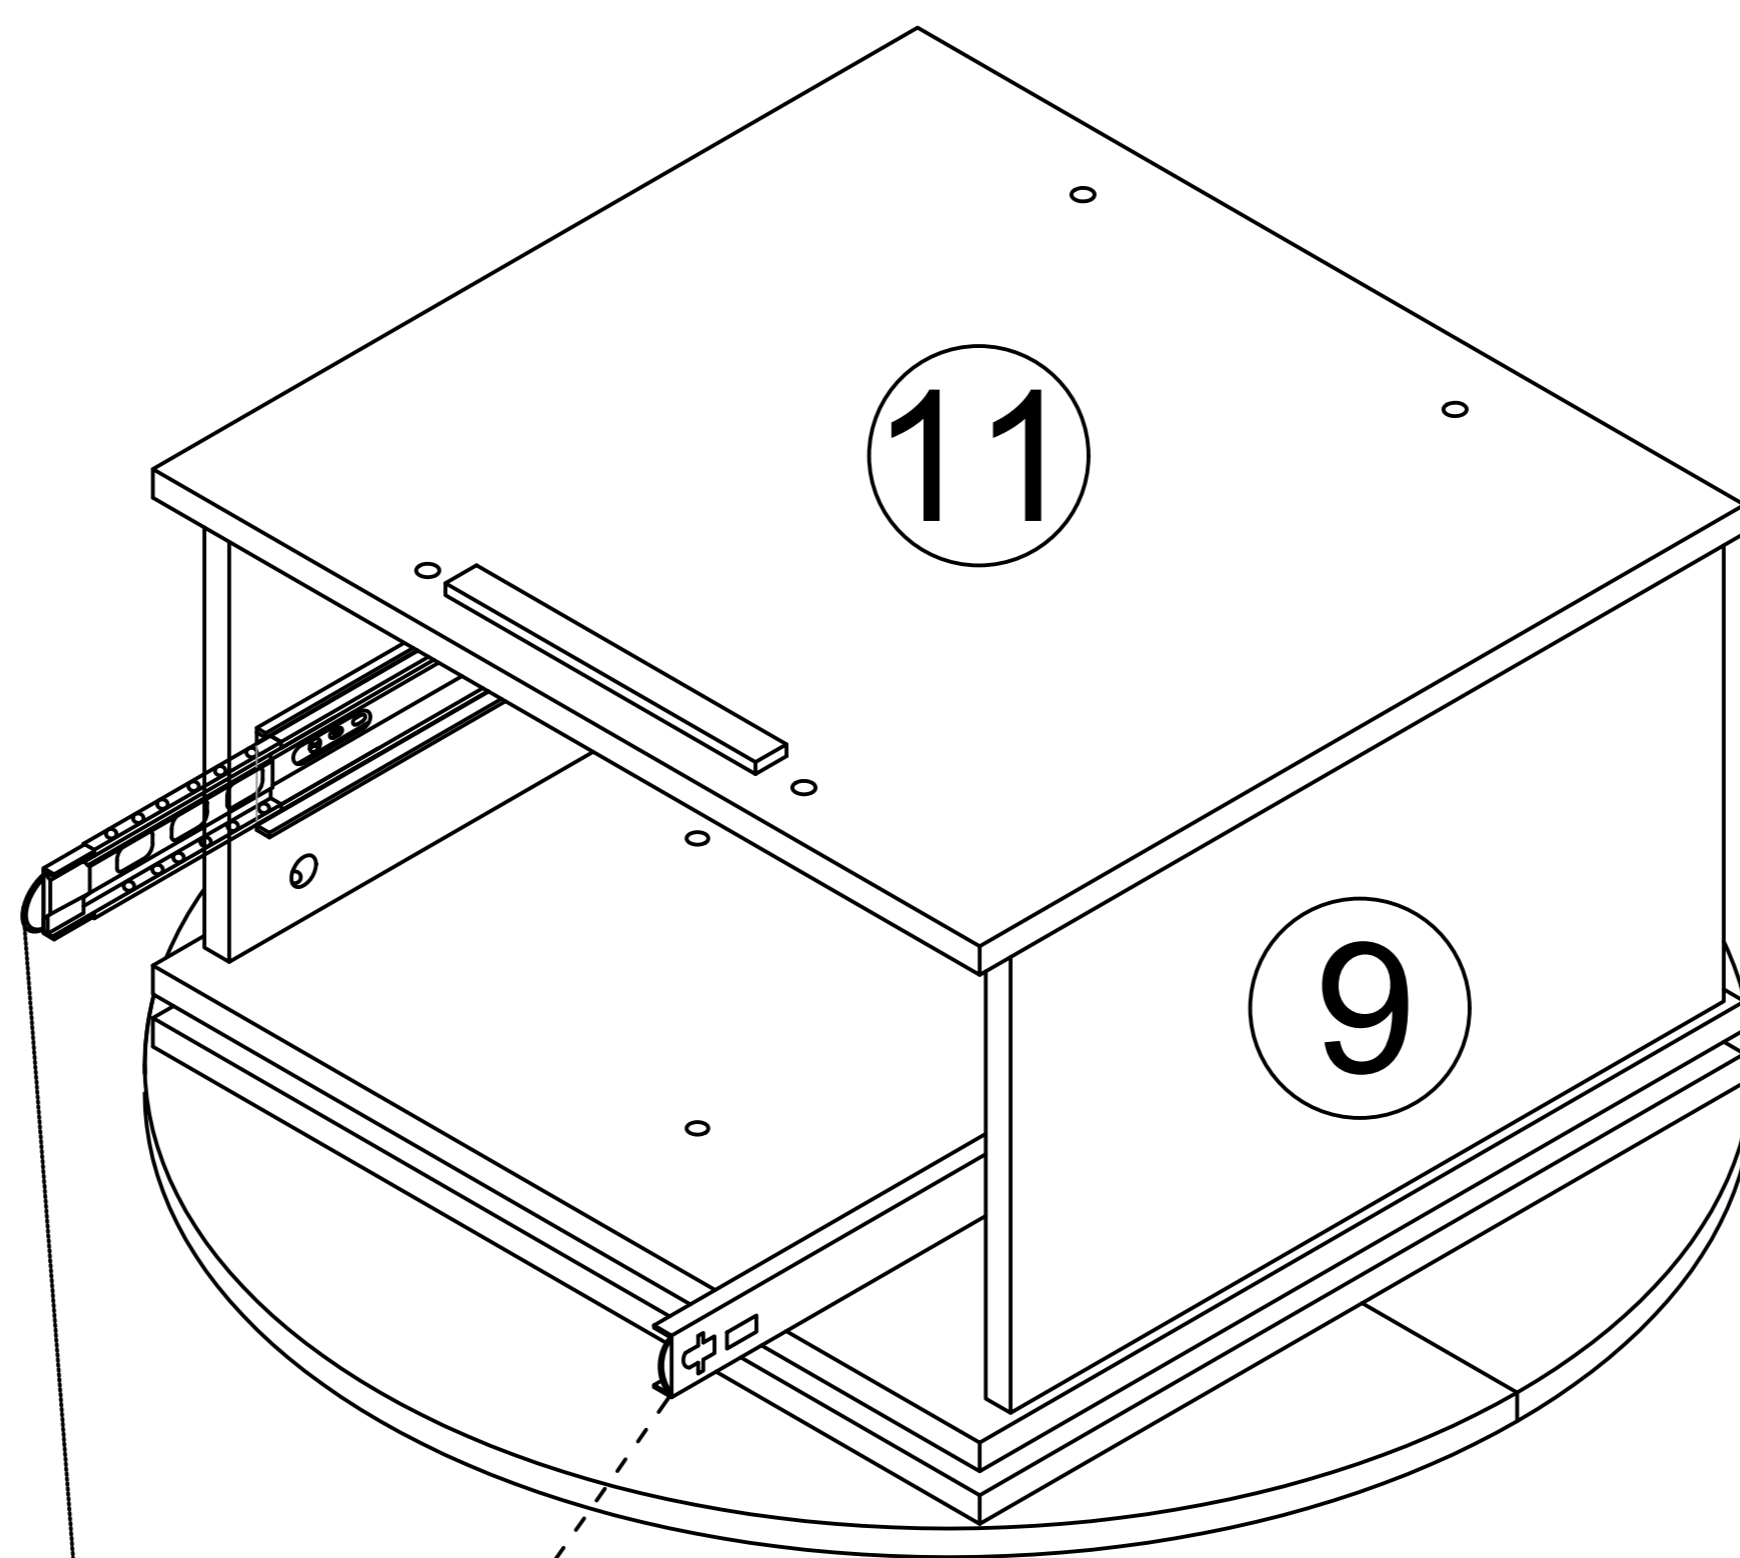

As shown, When installing the drawer, pull the guide rail out first, Slide beads are also pulled out.


# Step 17

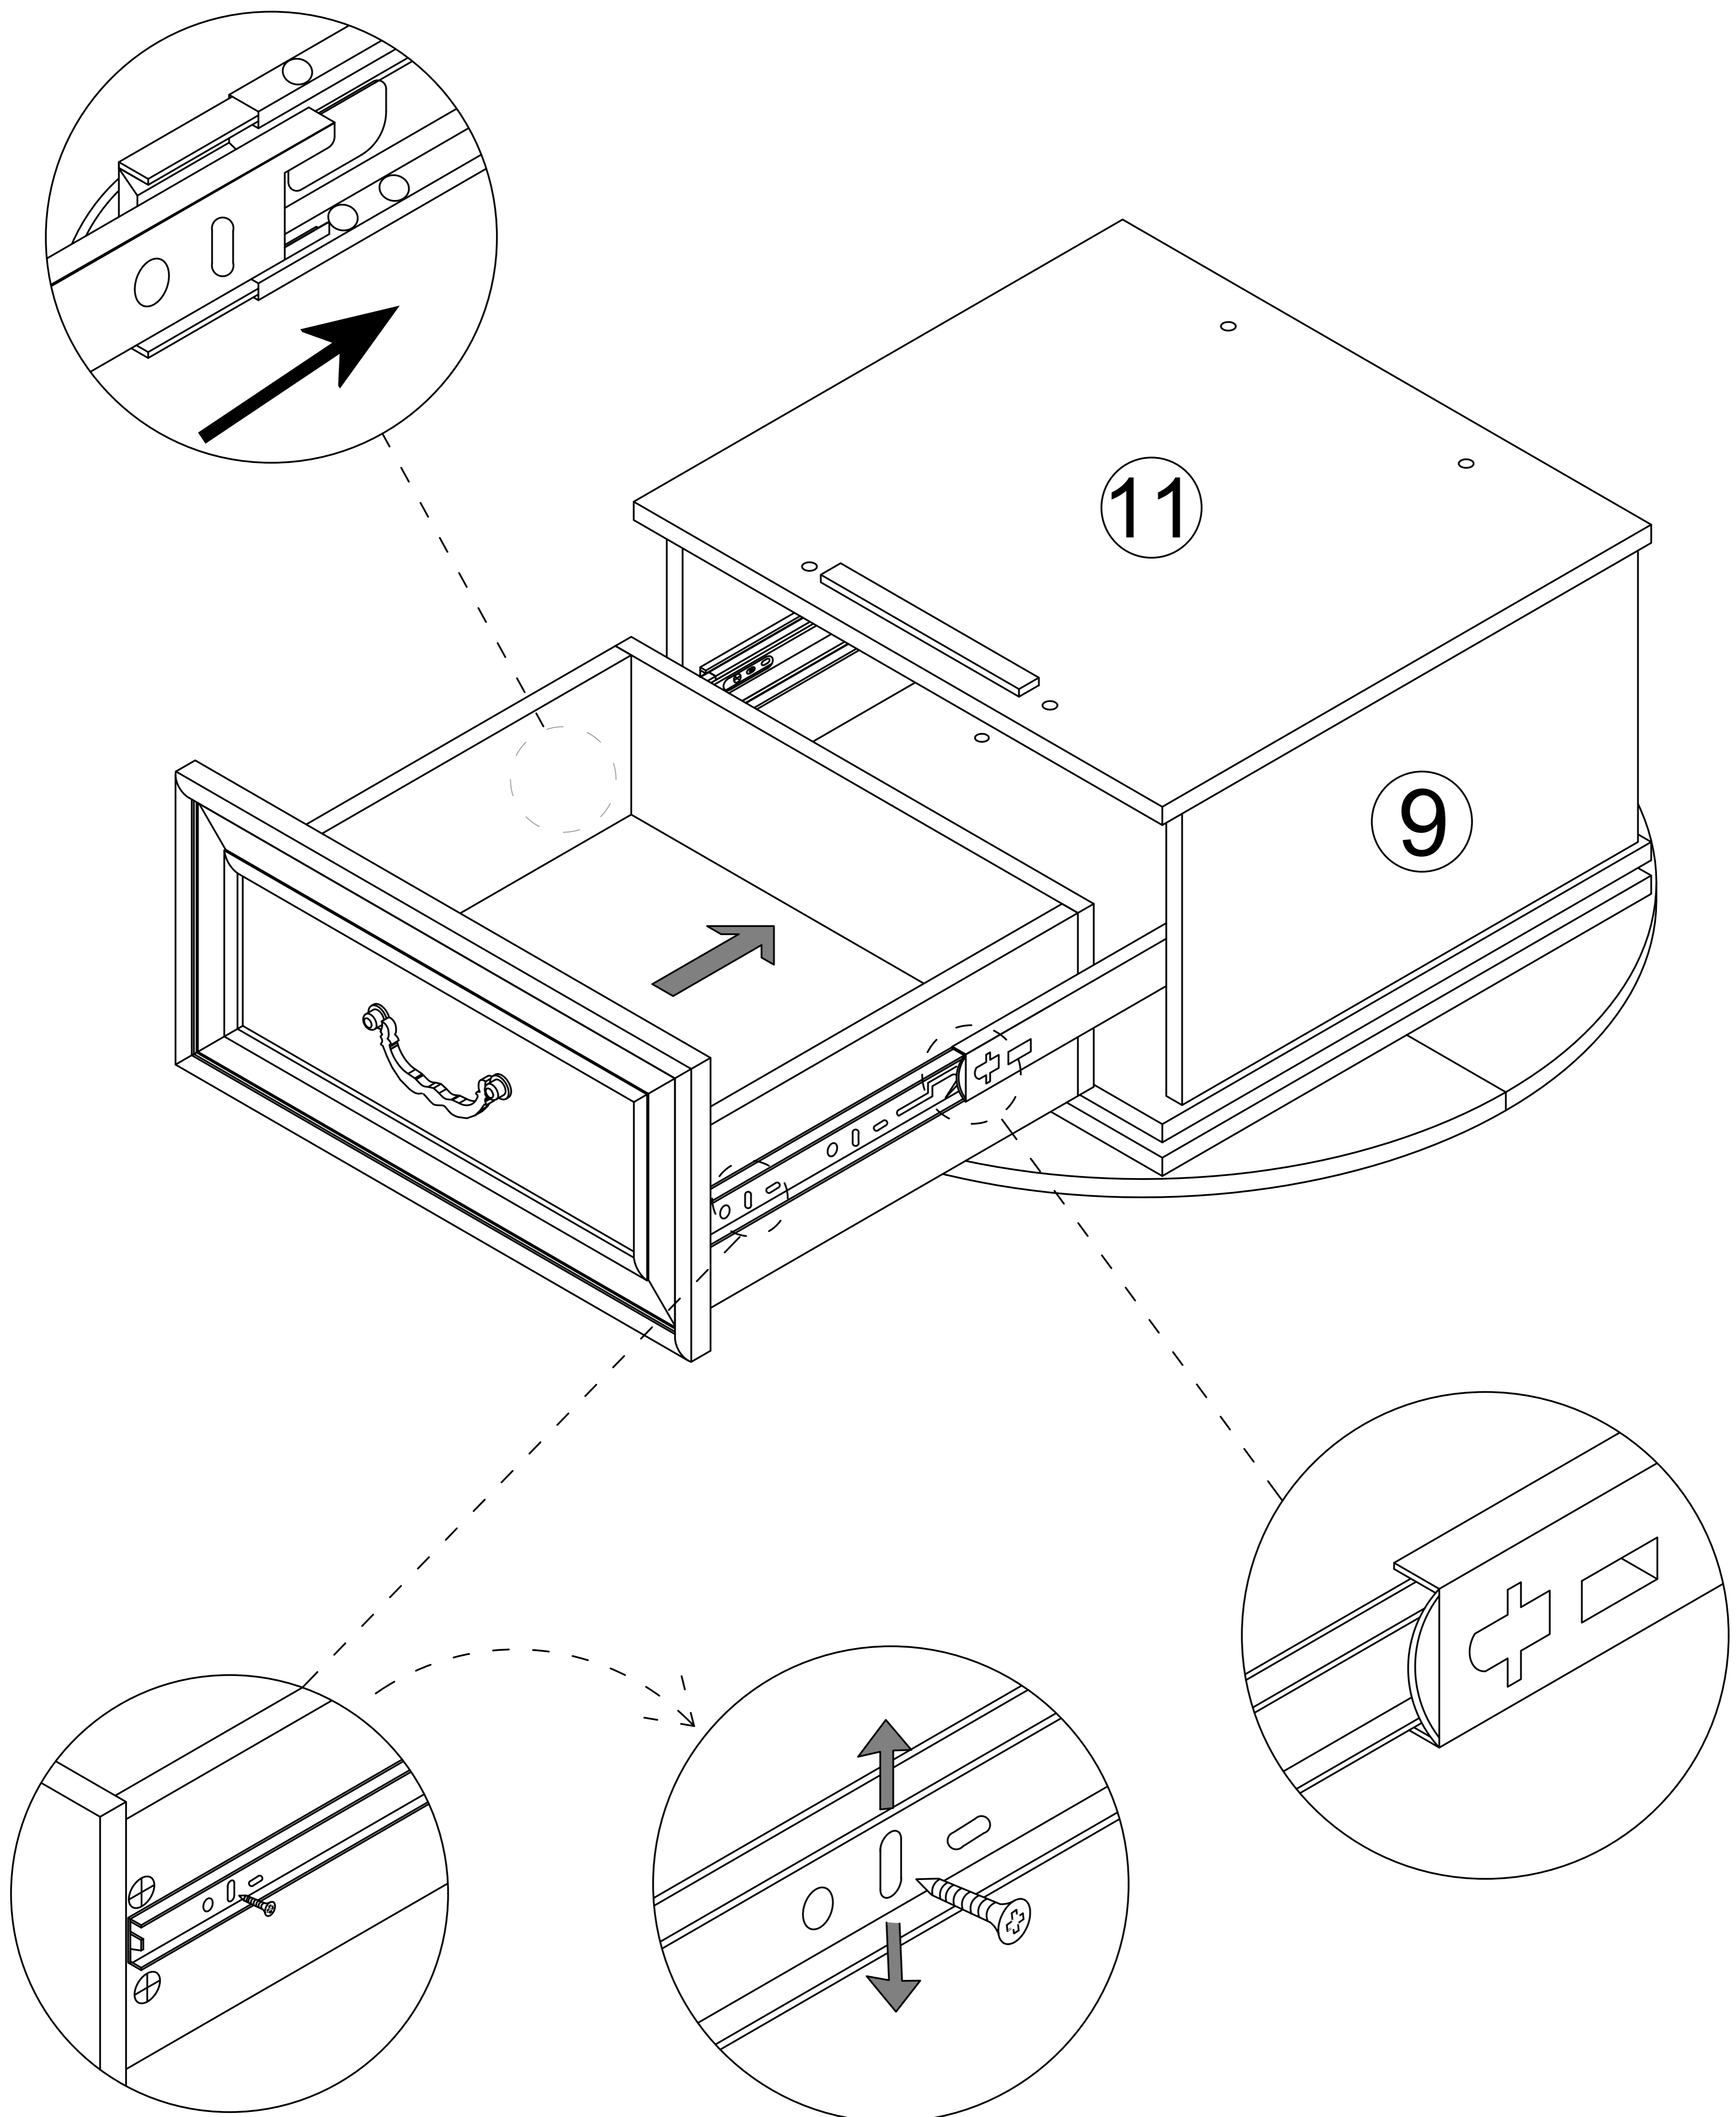



If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 18

G




x2

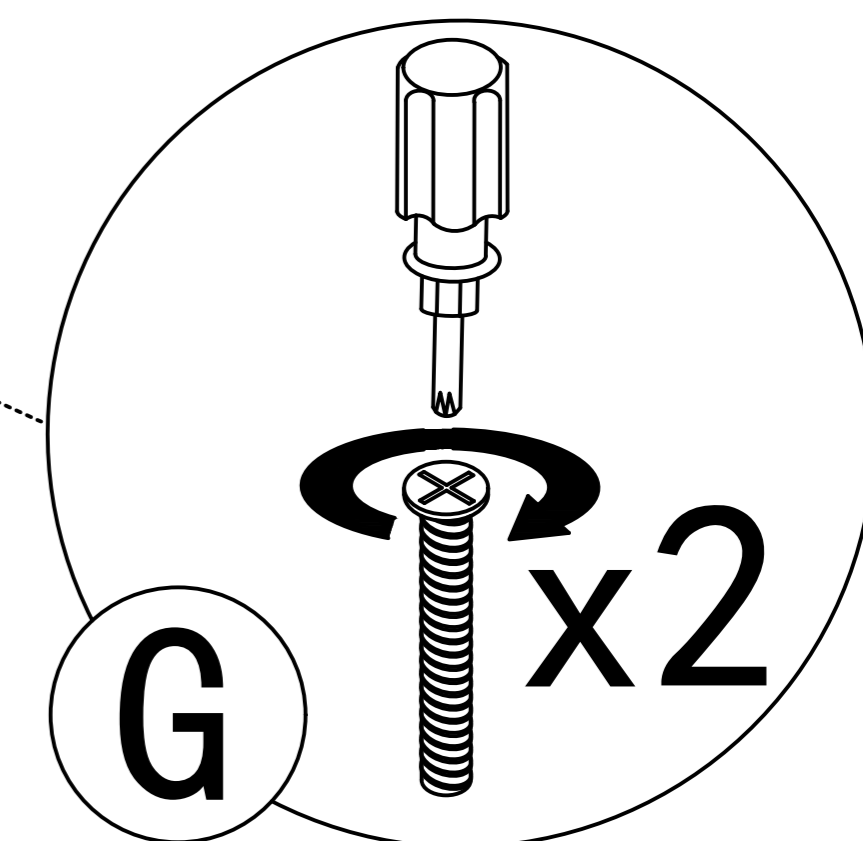
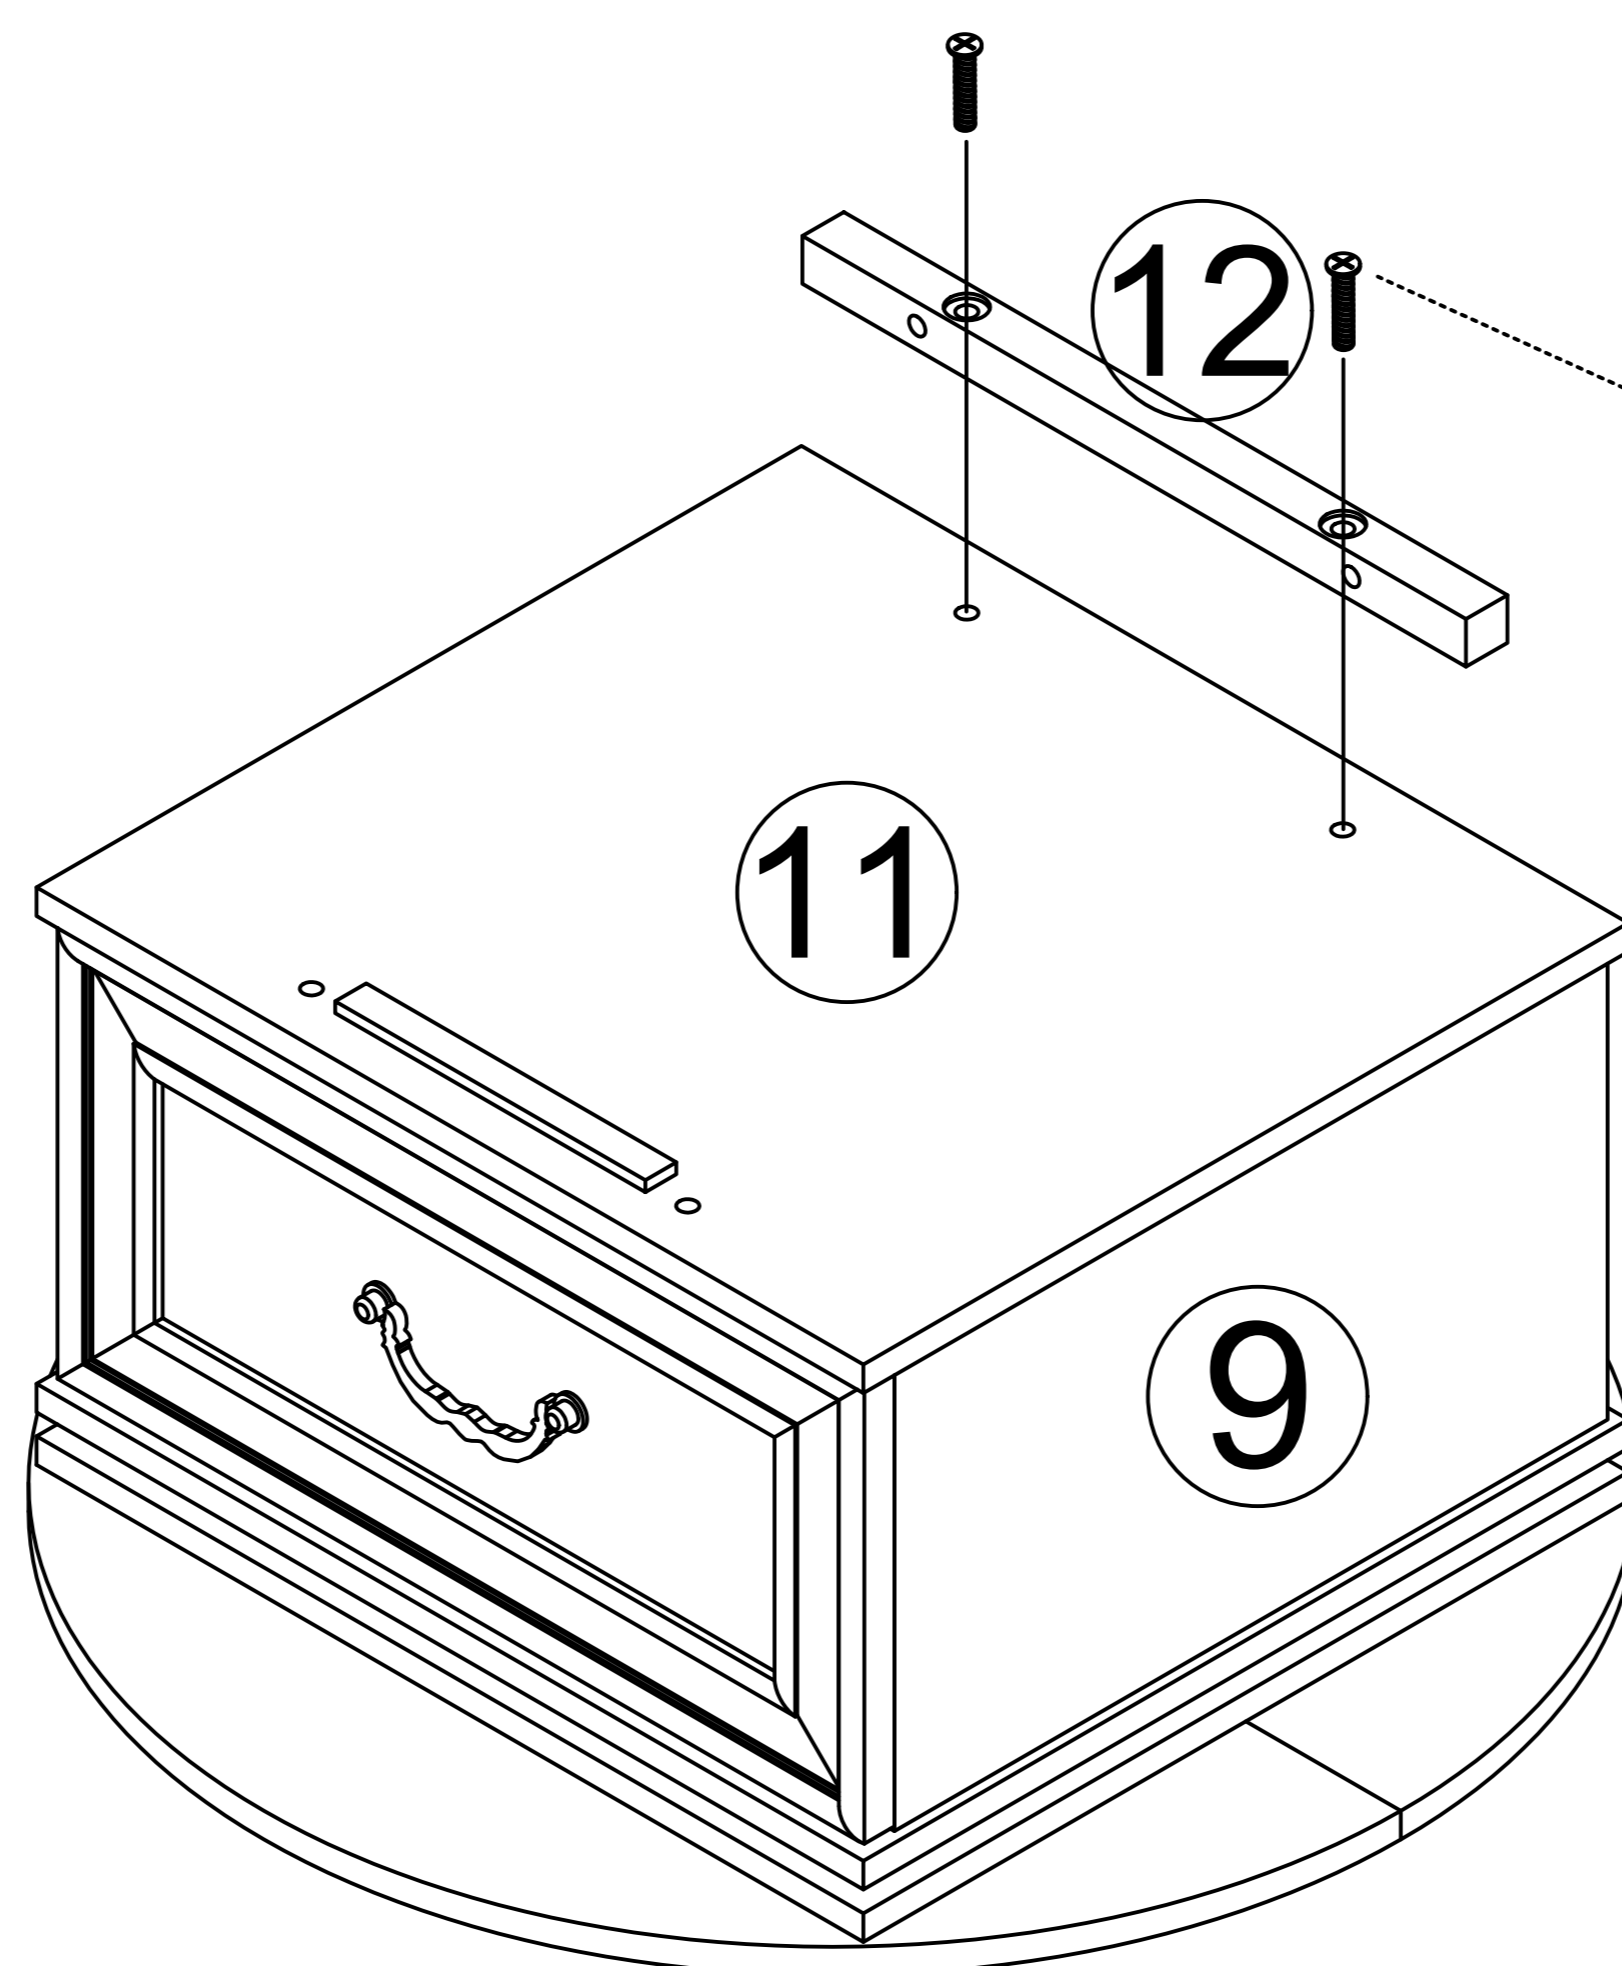


Step 19


H

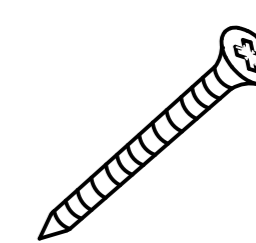

x2

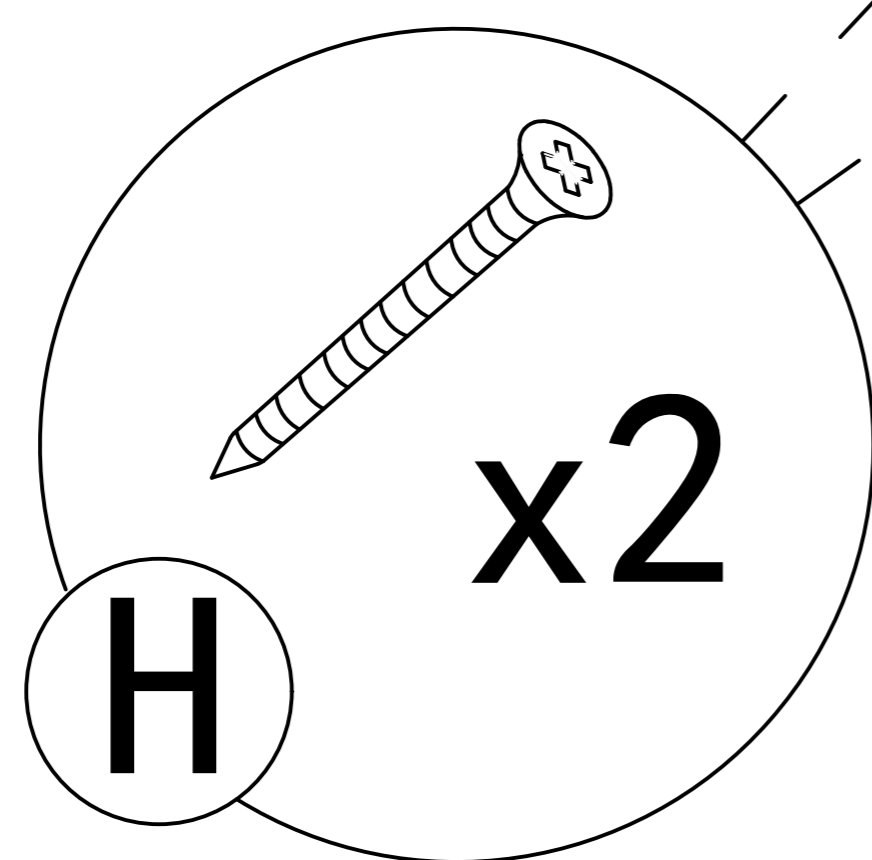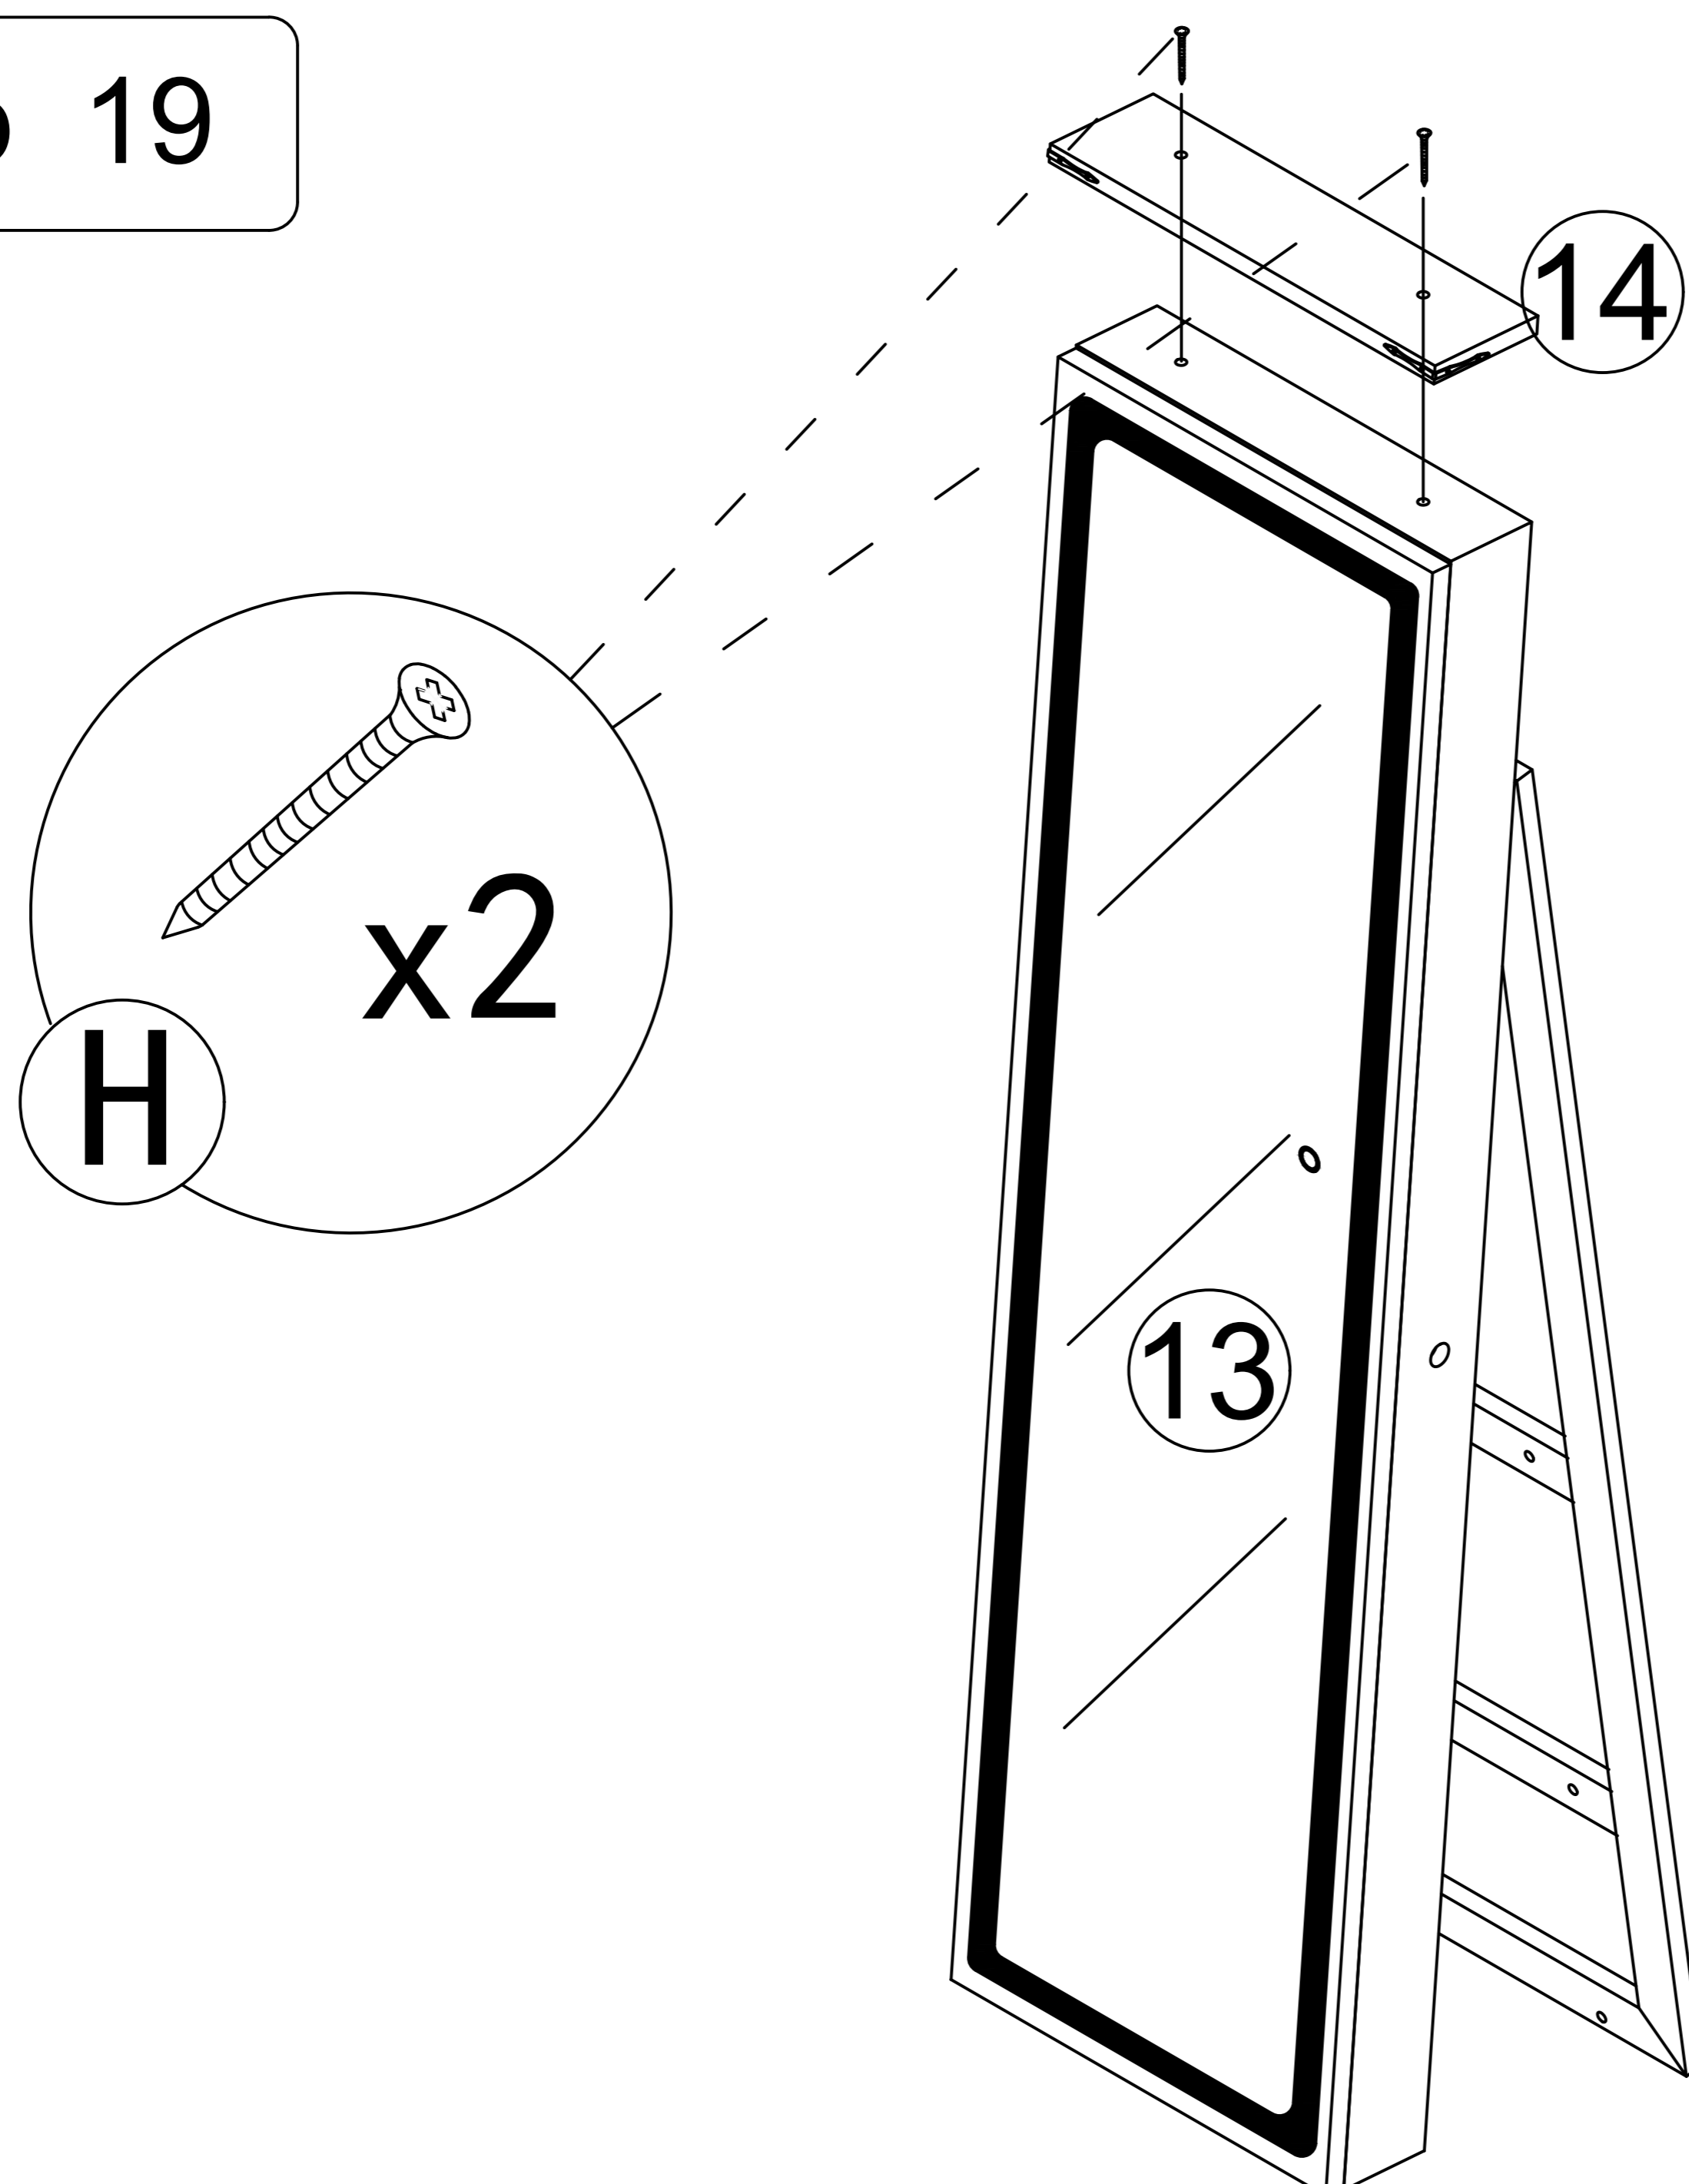


# Step 20

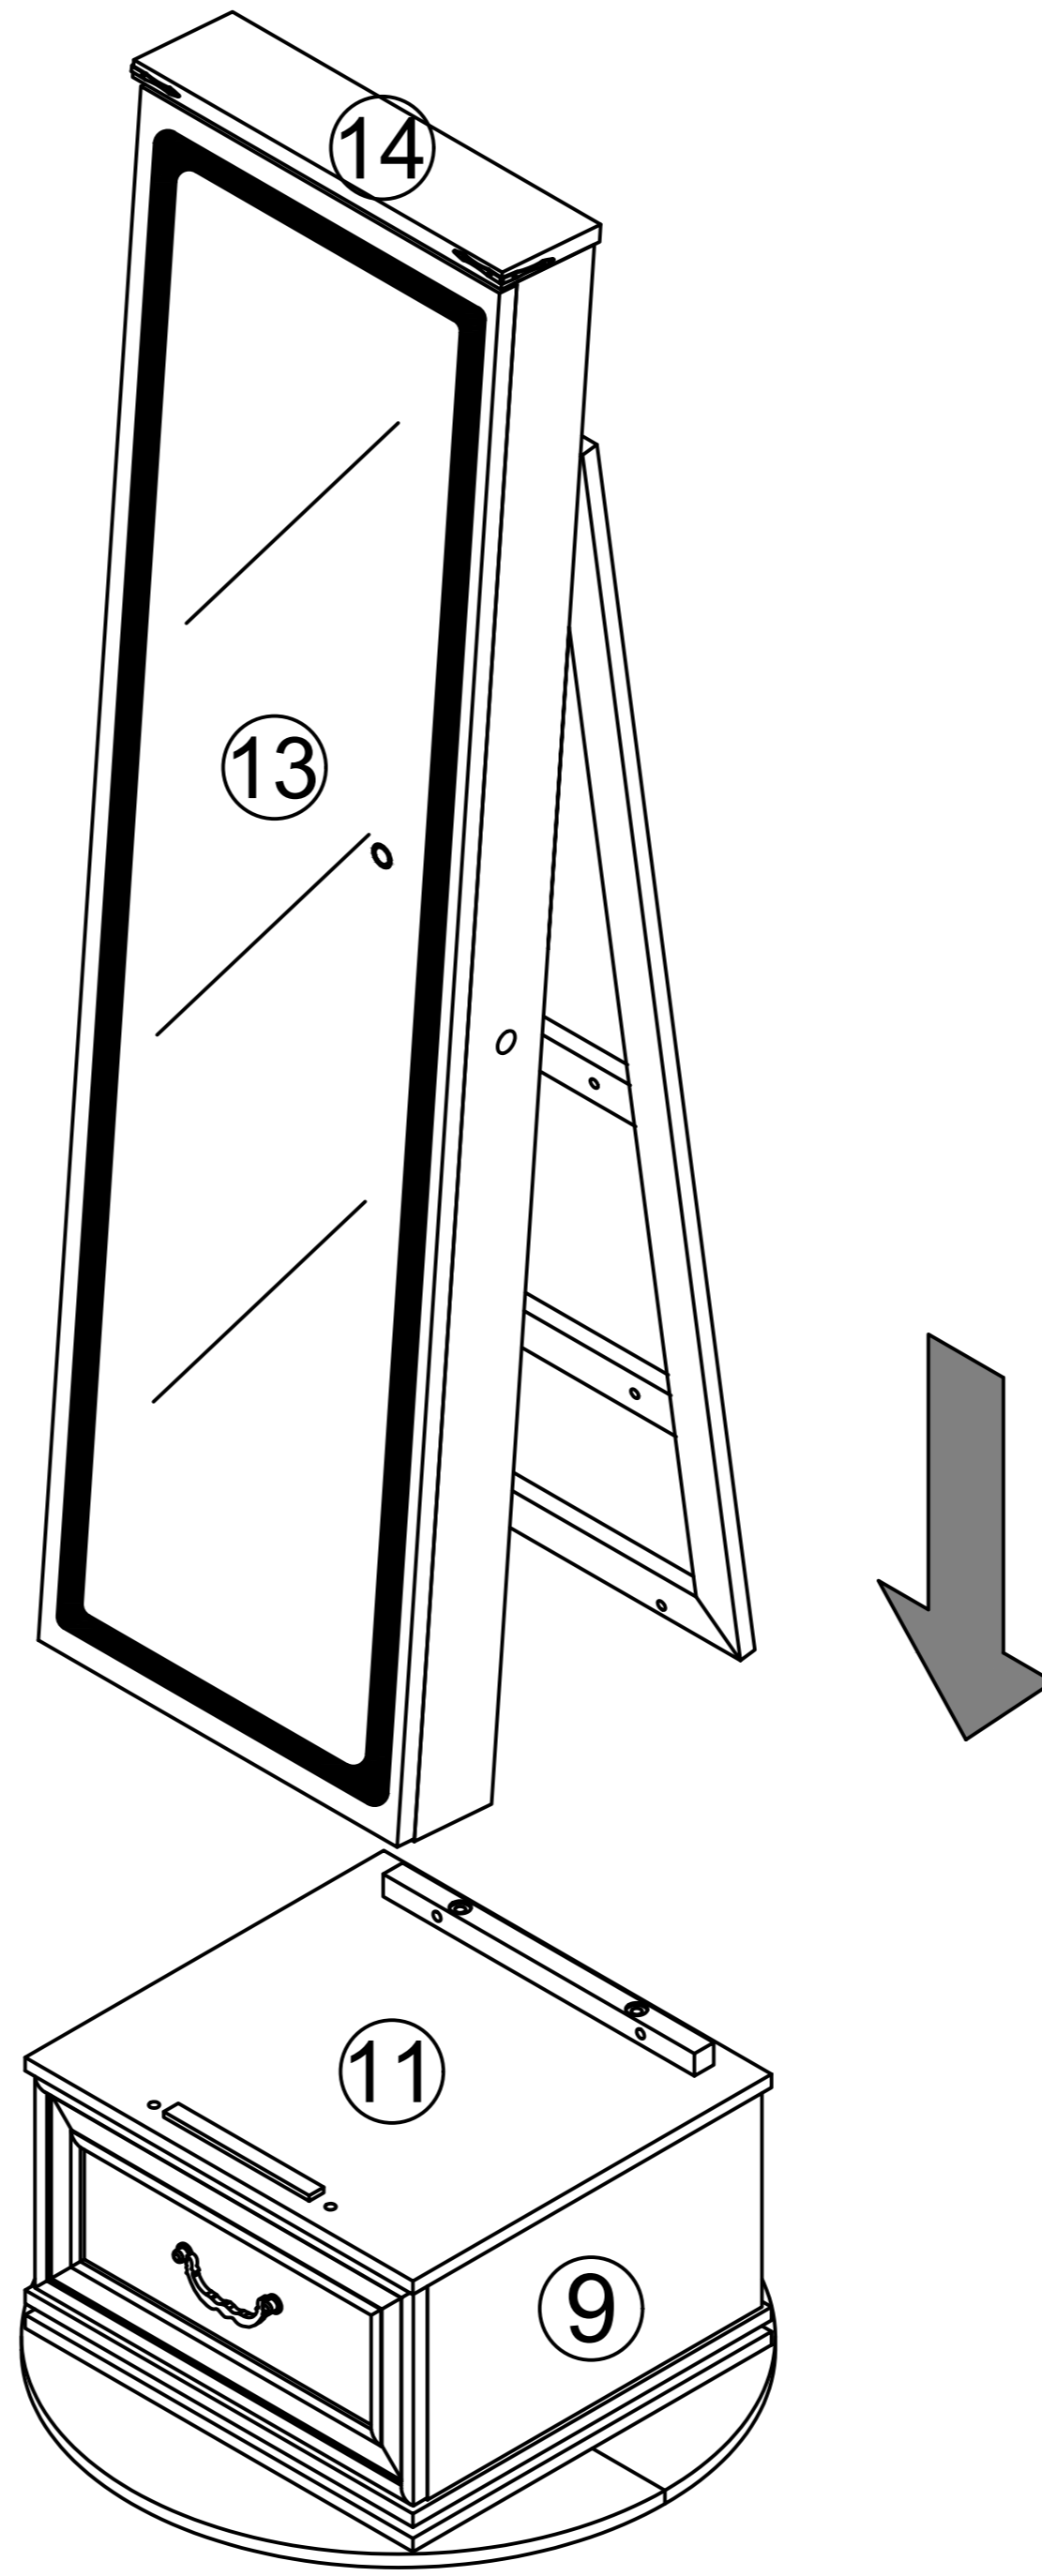




# Step 21

**Battery installation**  
(Tip: use 3 AA Batteries)

G






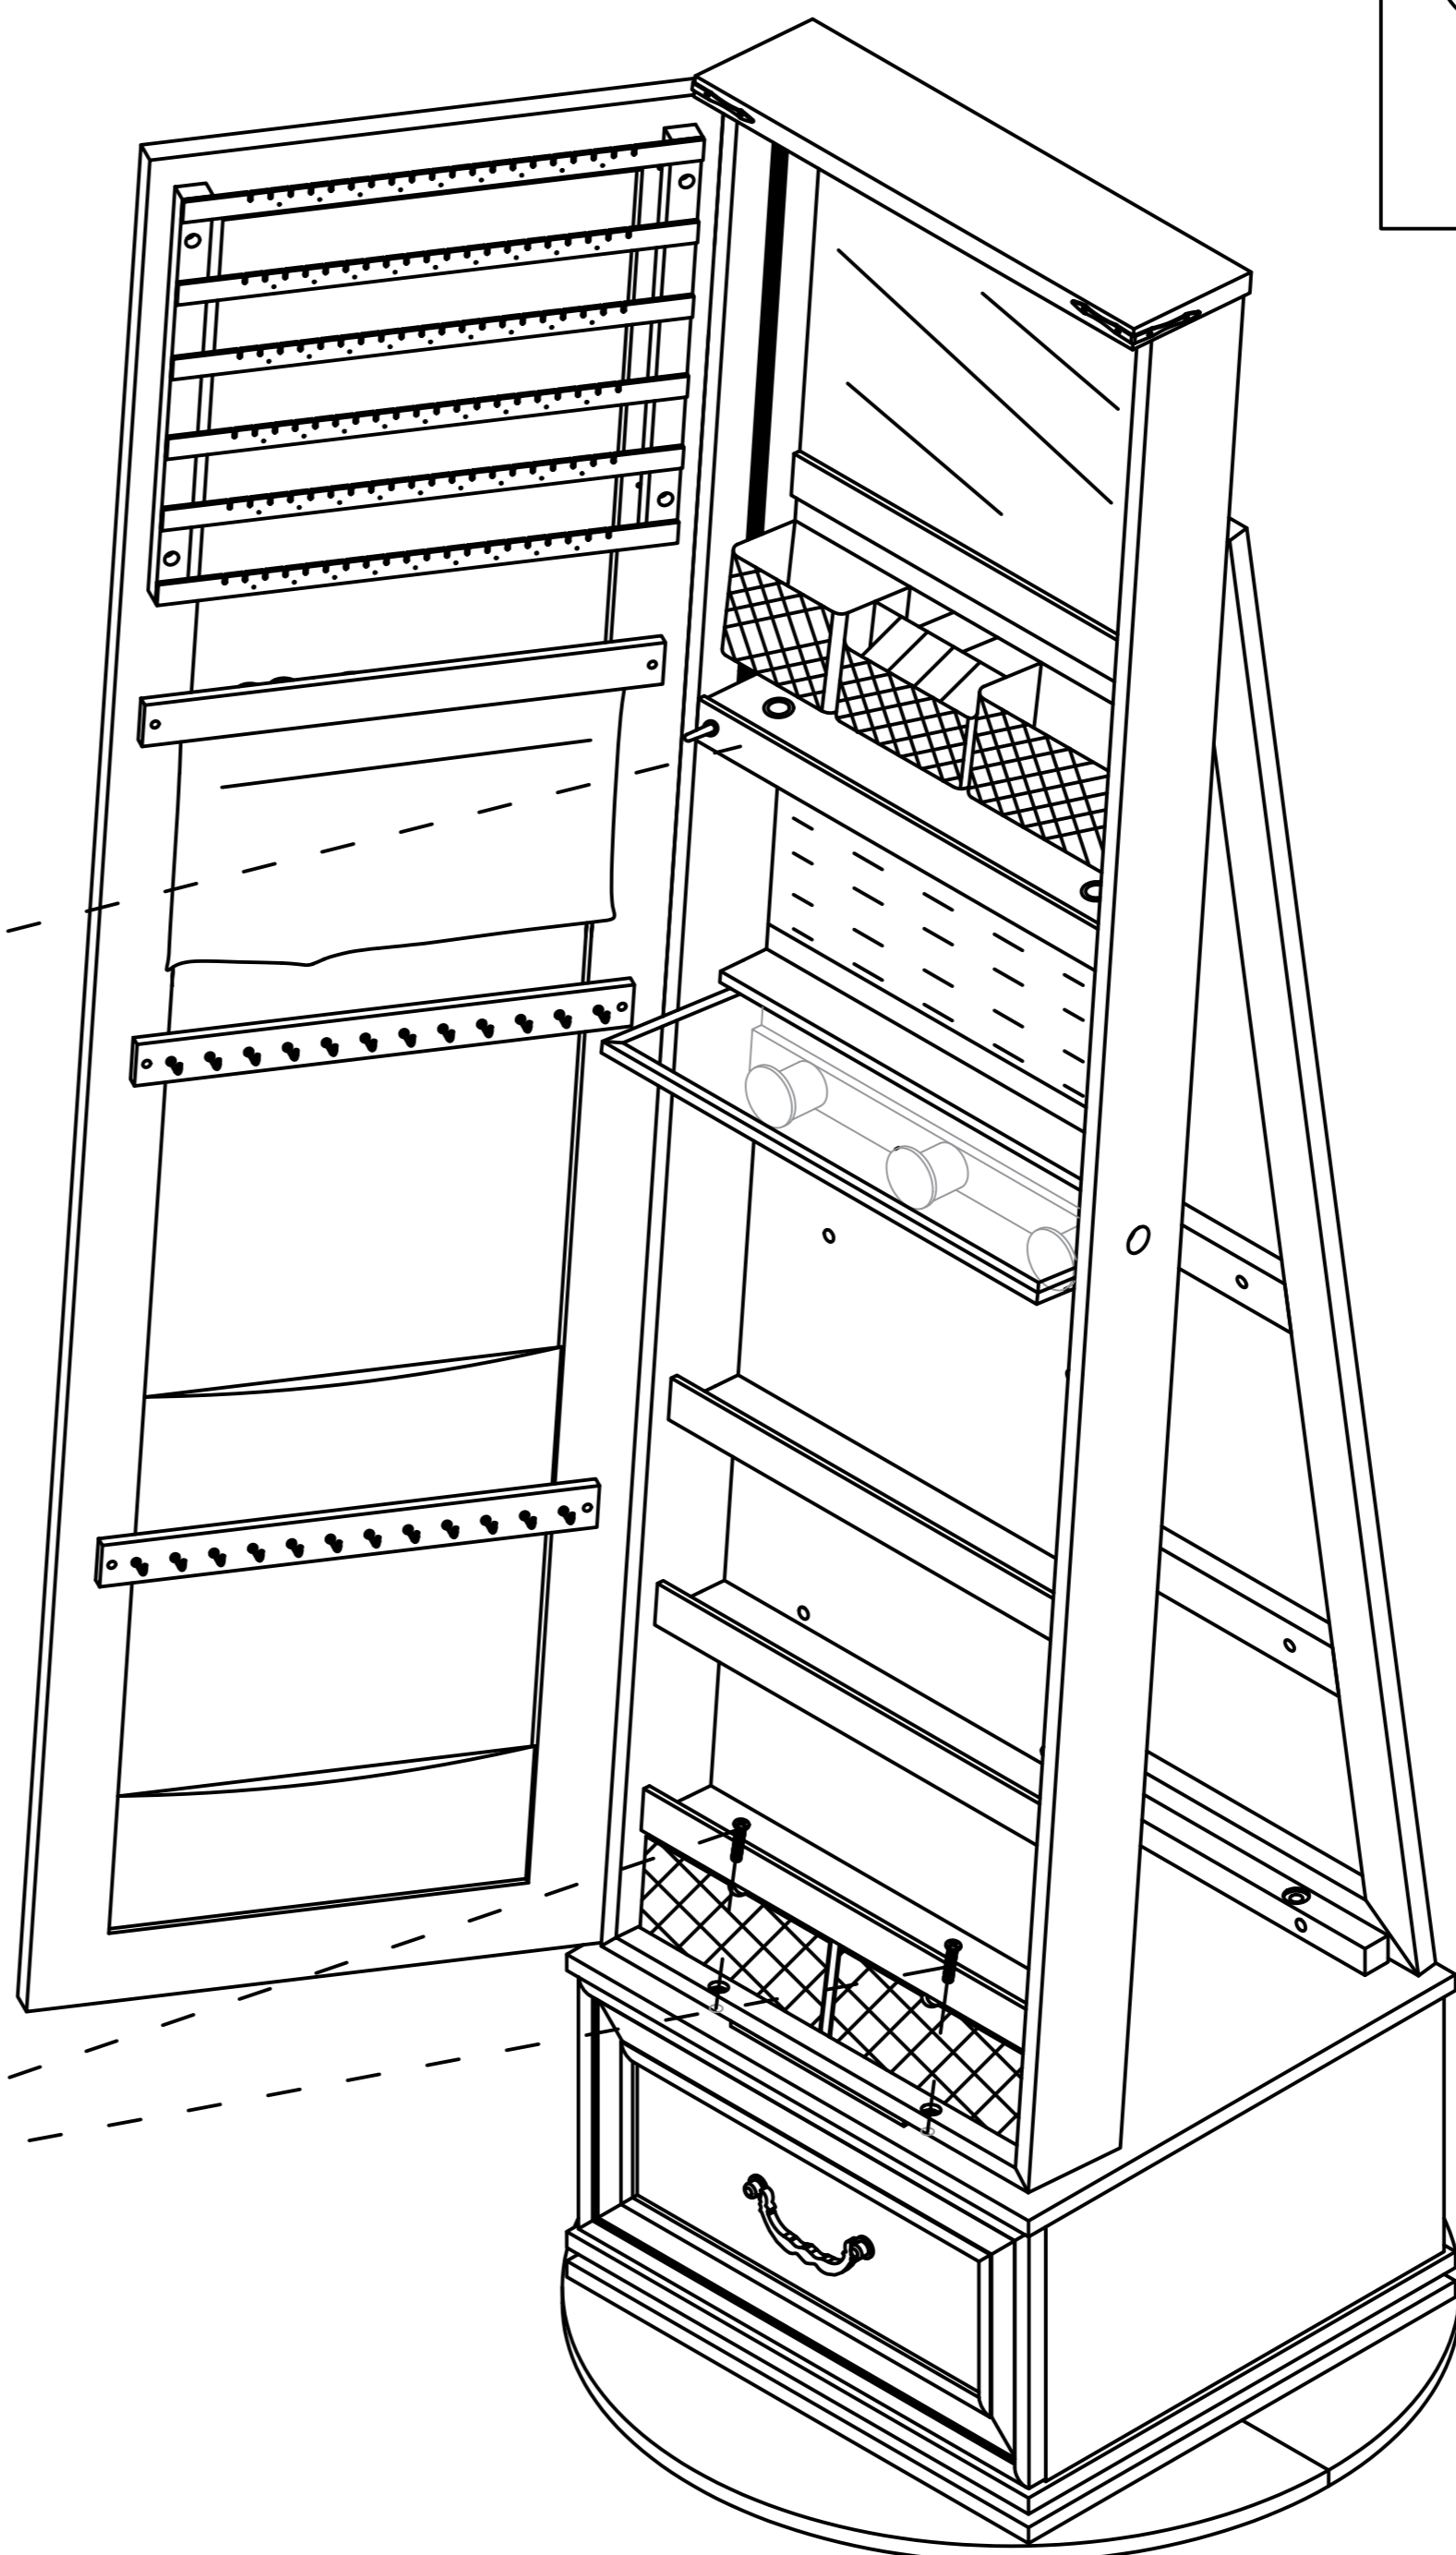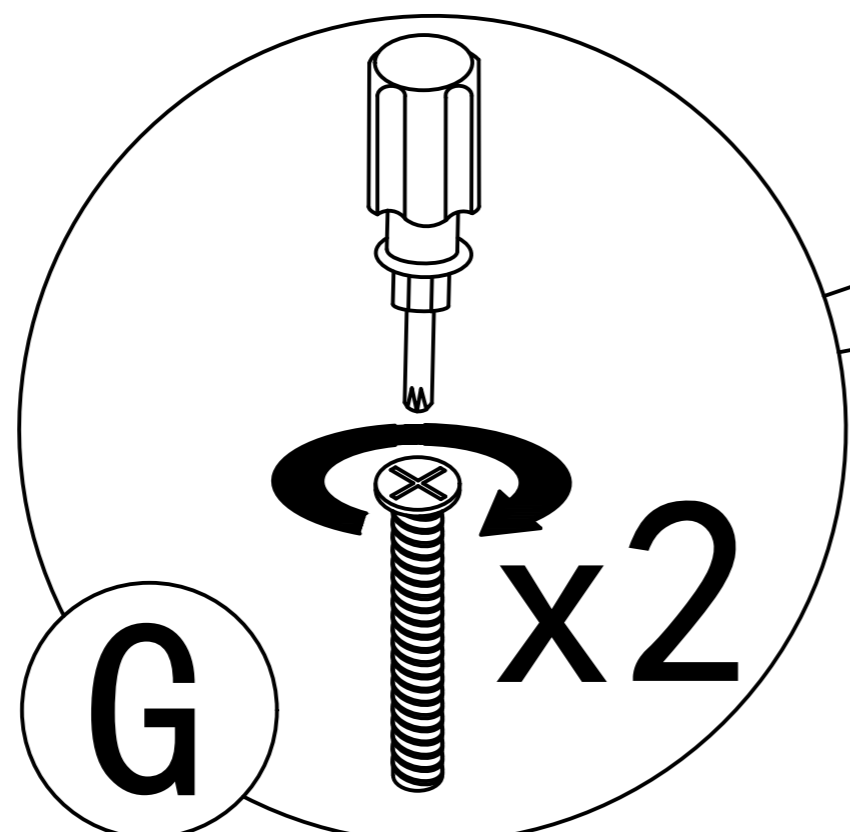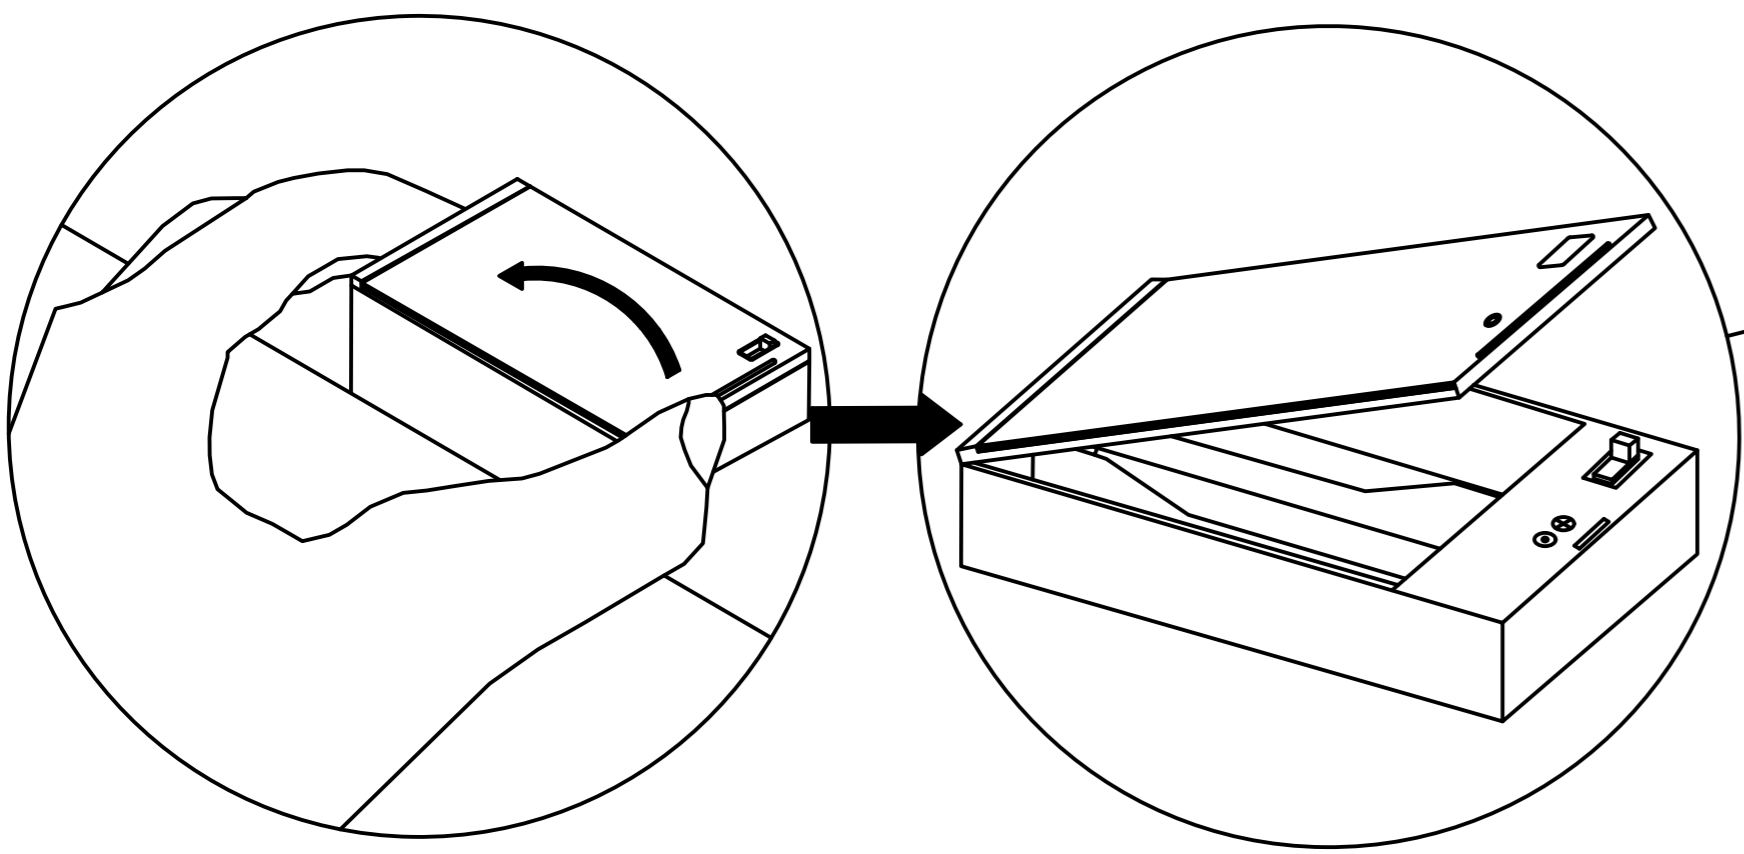


x2

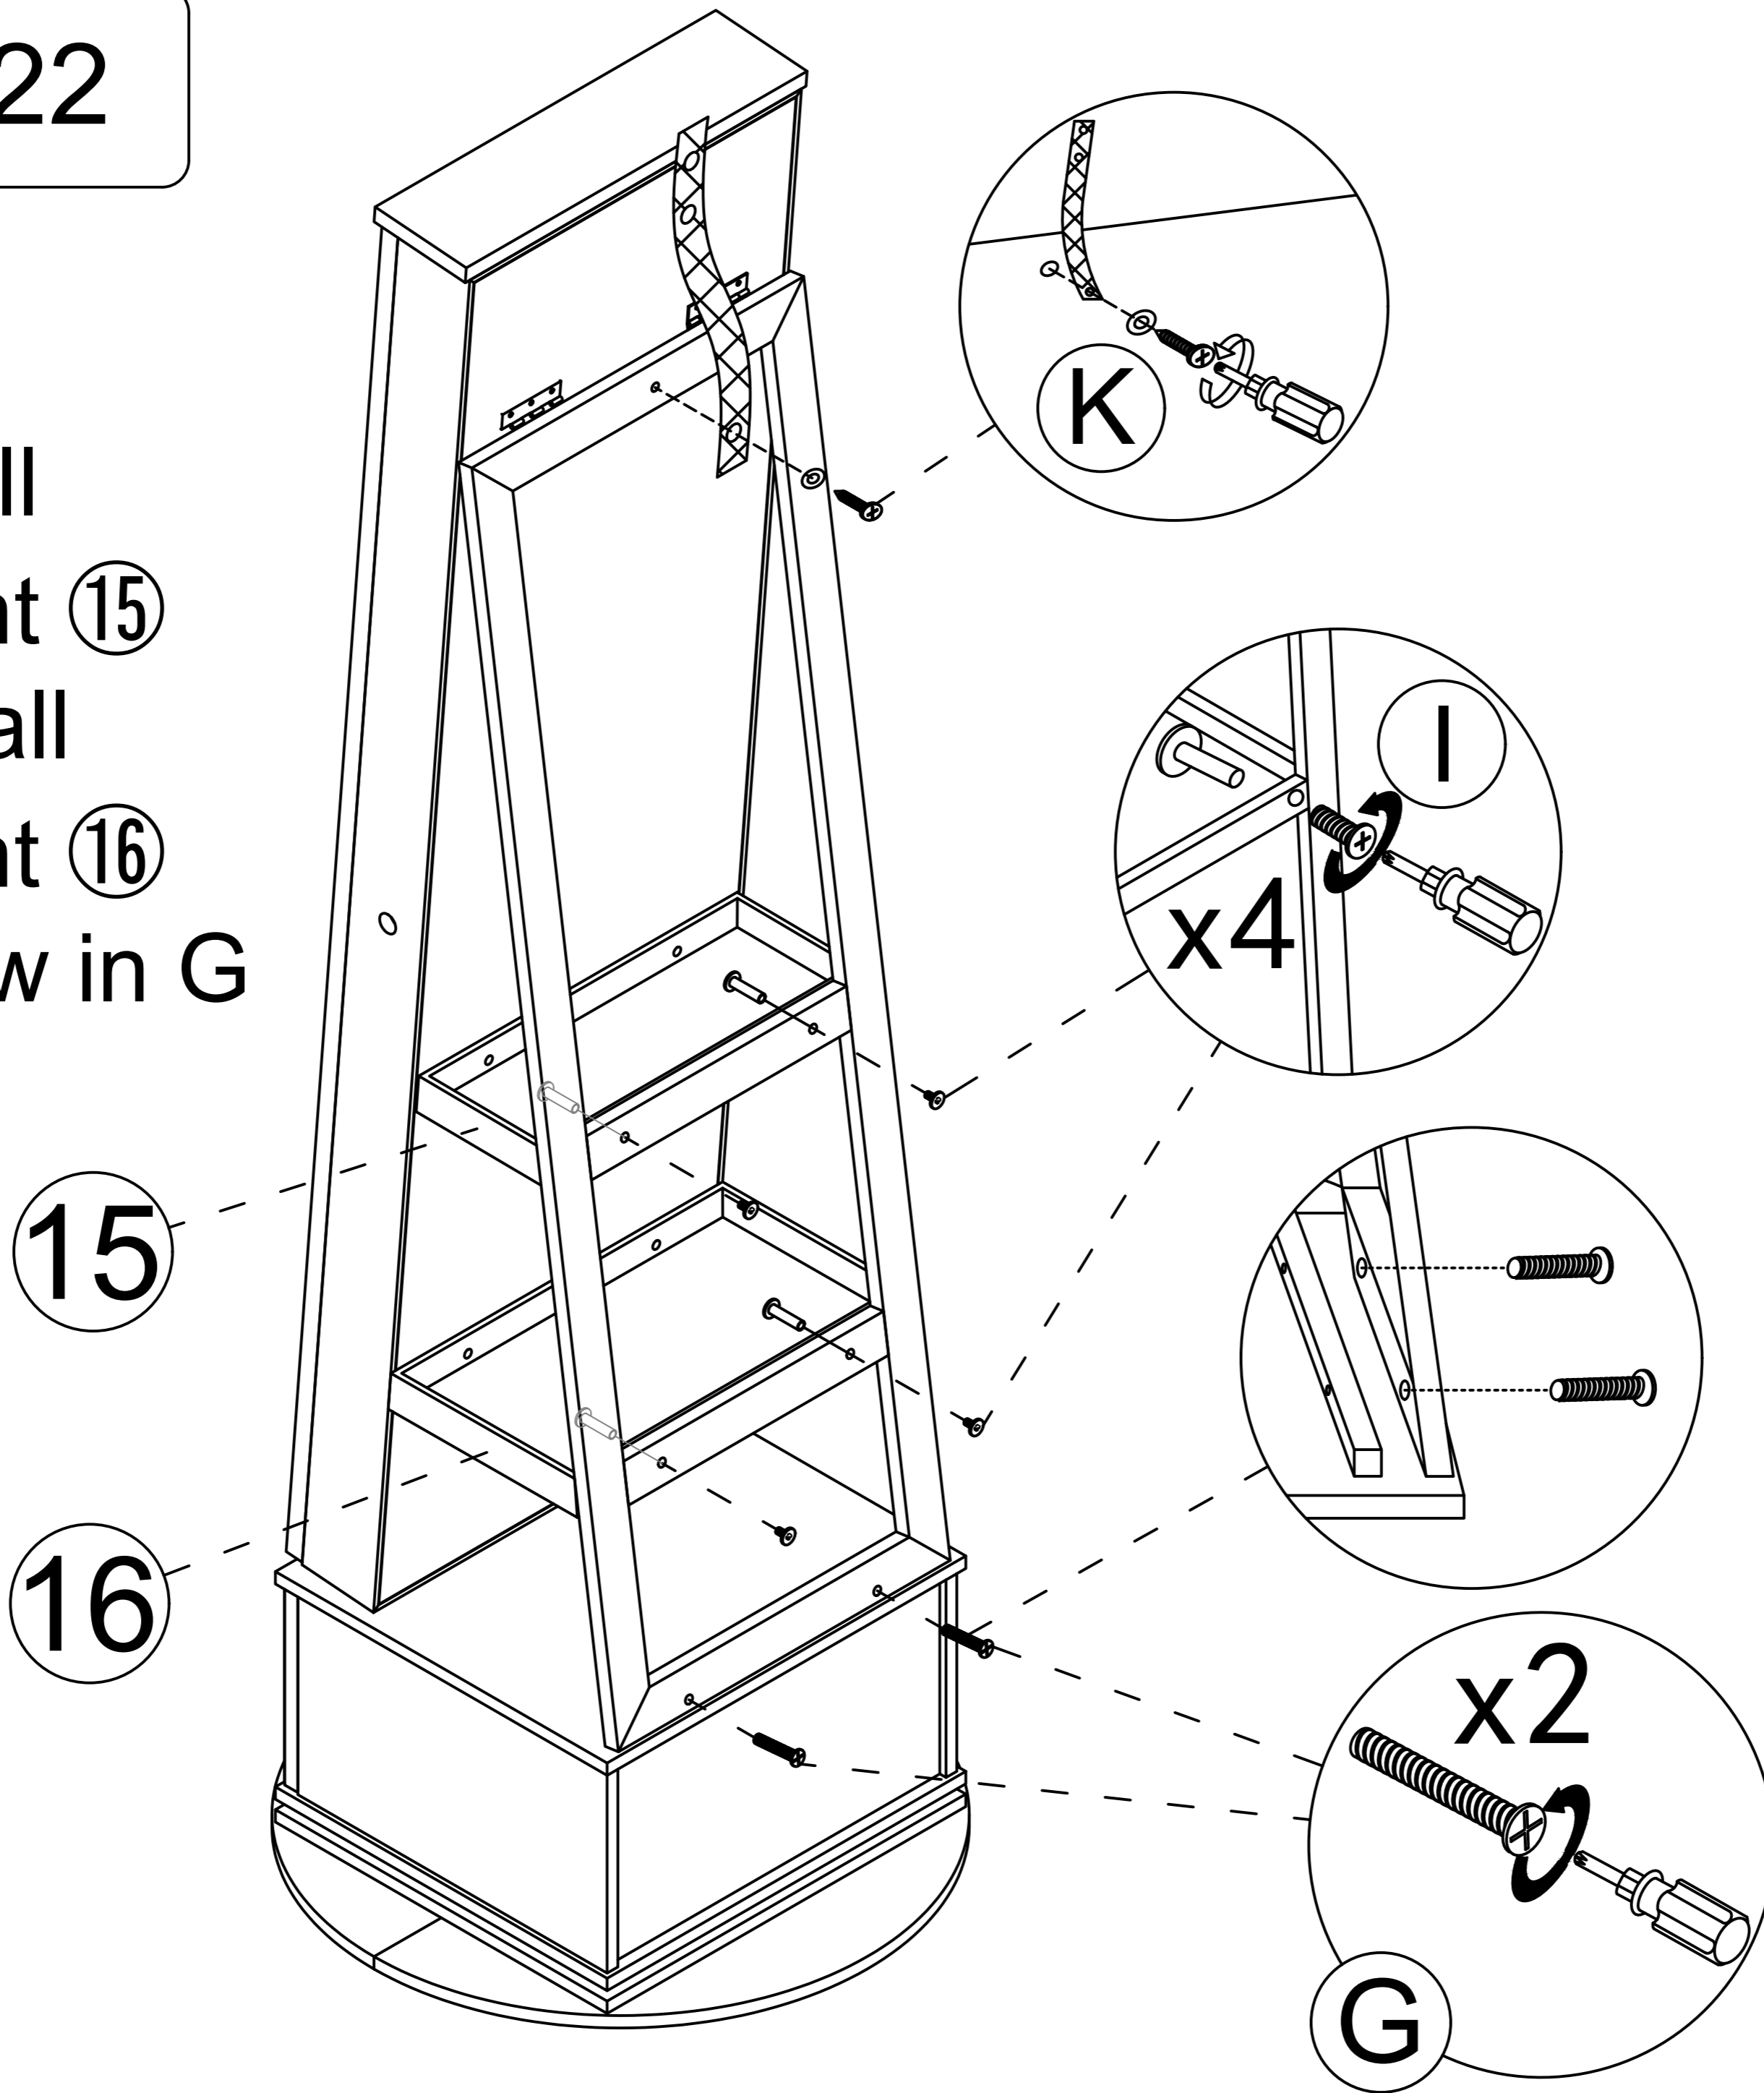


# Step 22


Order:  
 (1) First Install  
 Compartment ⑮  
 (2) Then Install  
 Compartment ⑯  
 (3) Last Screw in G



- ① G  x2
- ① I  (5\*20mm) x4
- ① K  x1  x1  
 x1

# Step 23

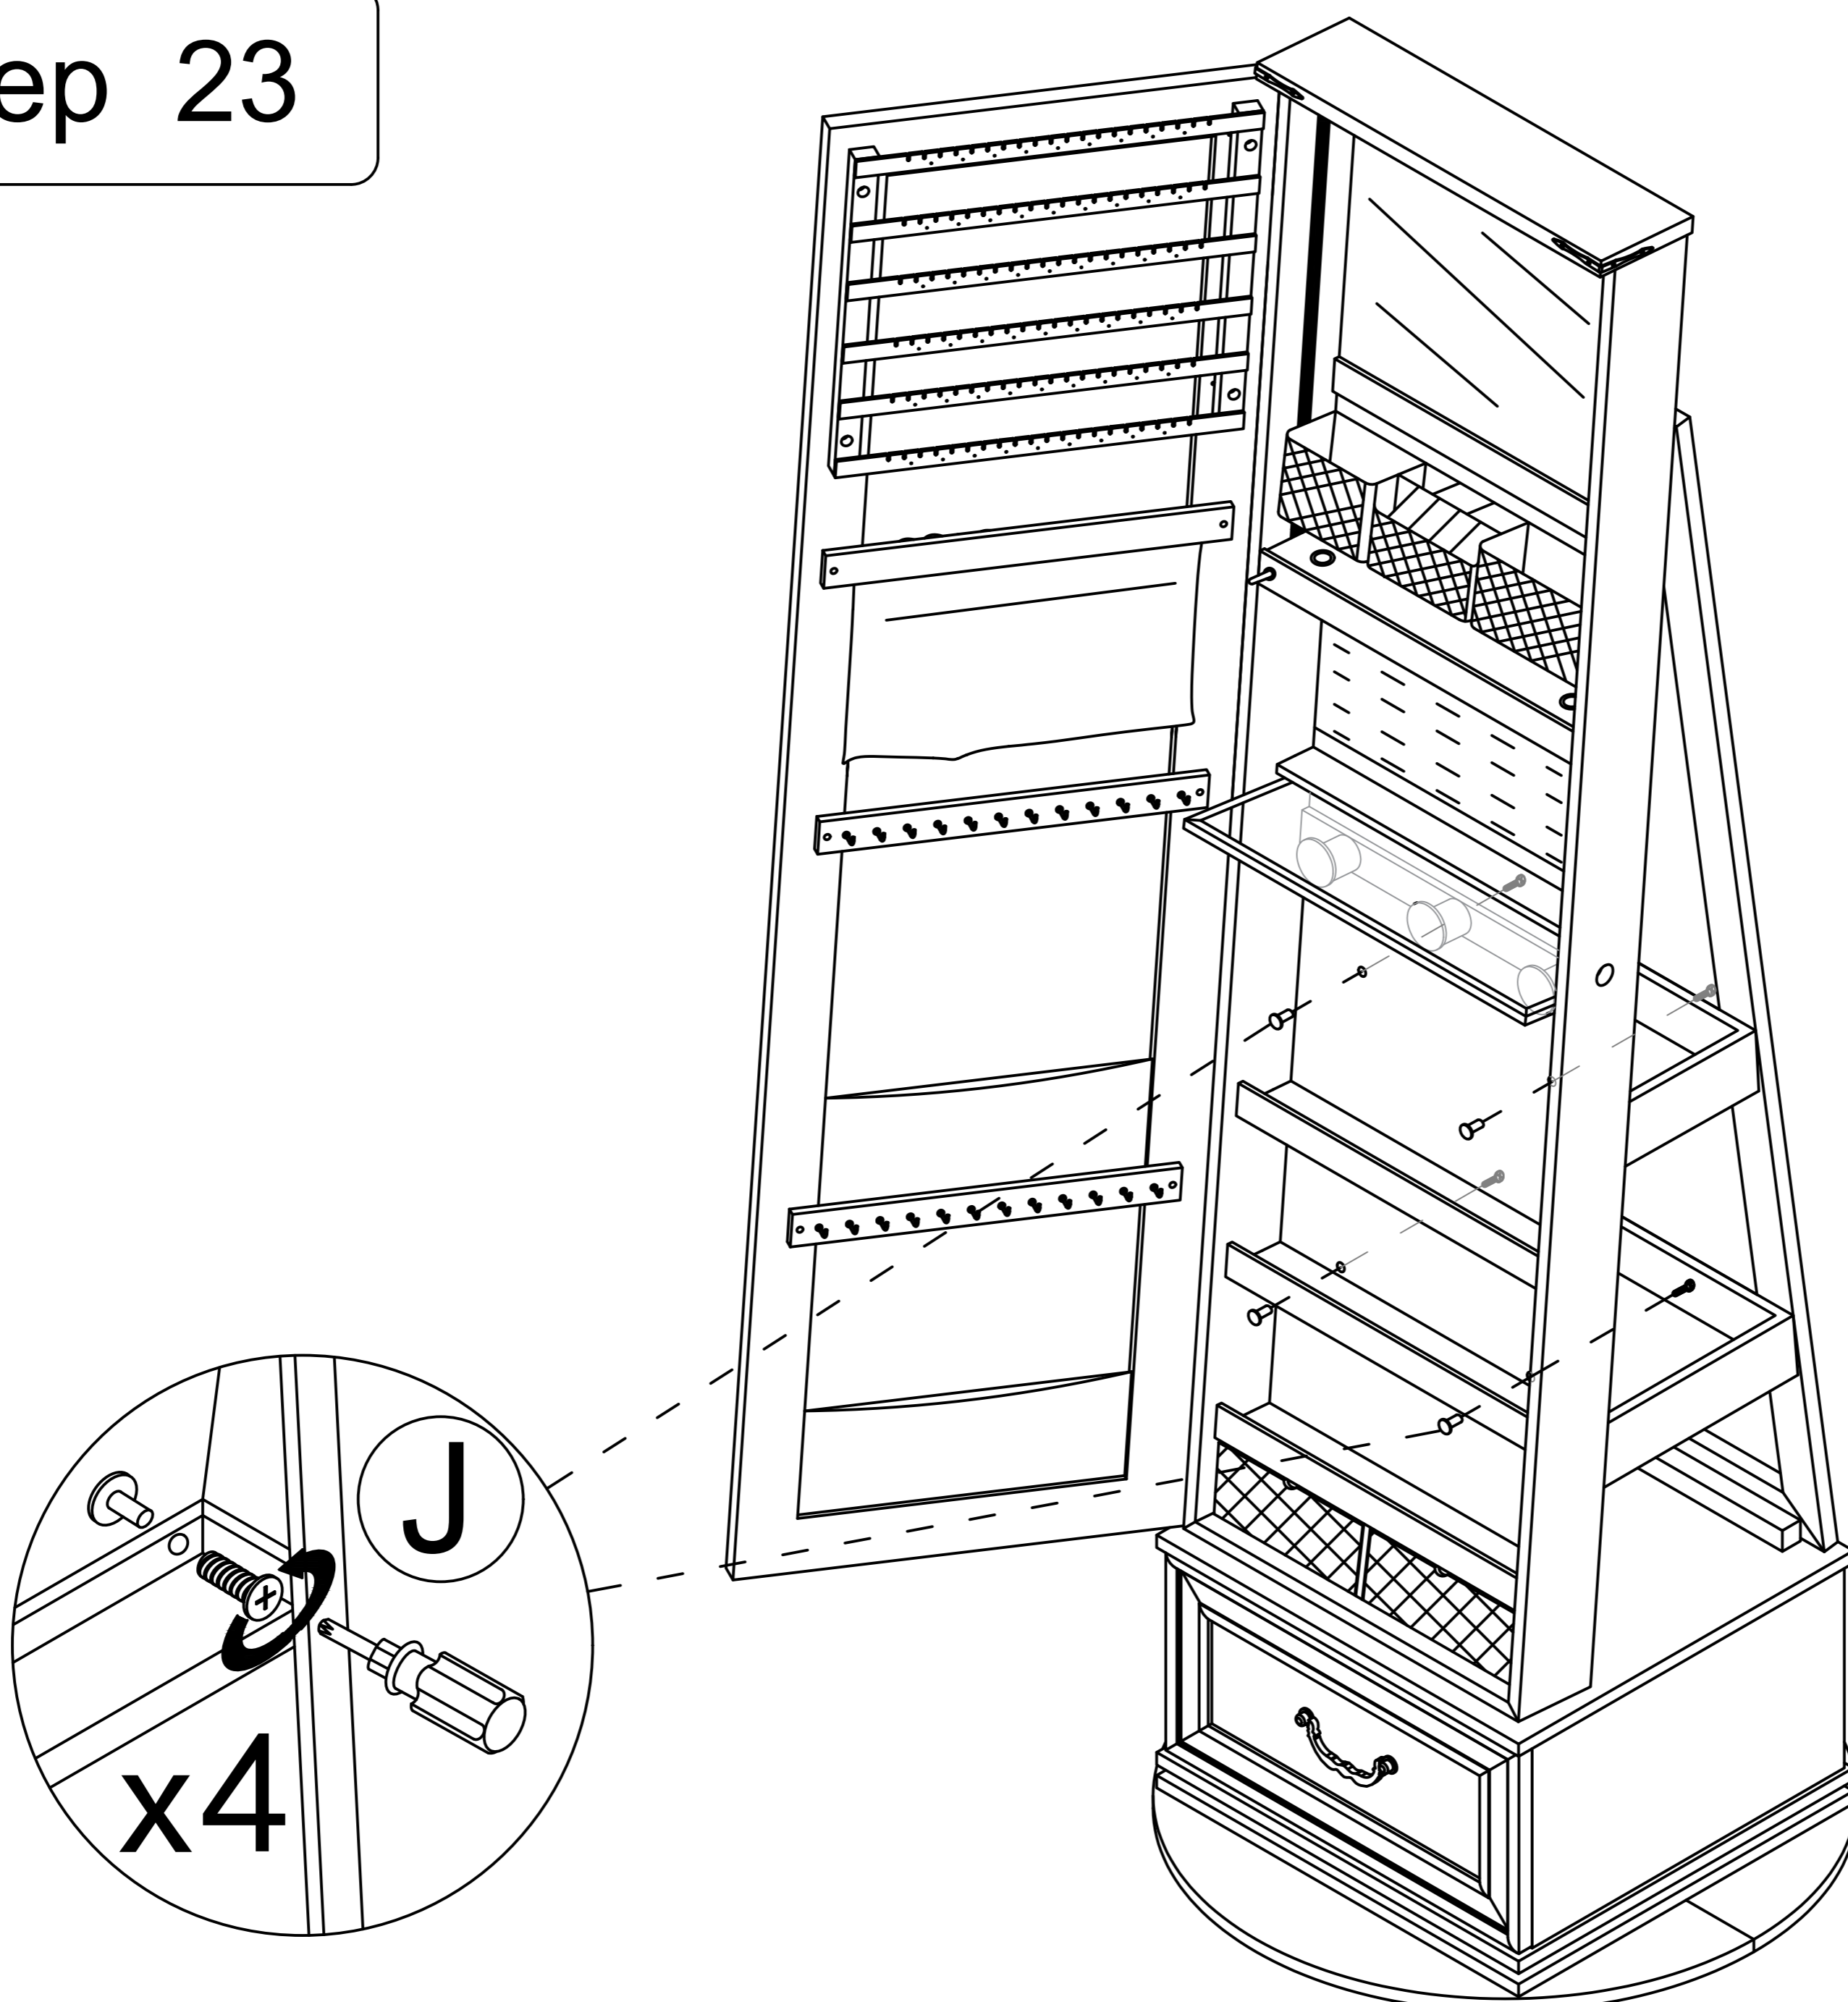

- ① J  (5\*10mm) x4

# Step 24

