


Closet System with Shoe Storage Shelving and Cube Storage

Assembly Instructions

BO-YCG-ZXJ2C-8FT_V1.0

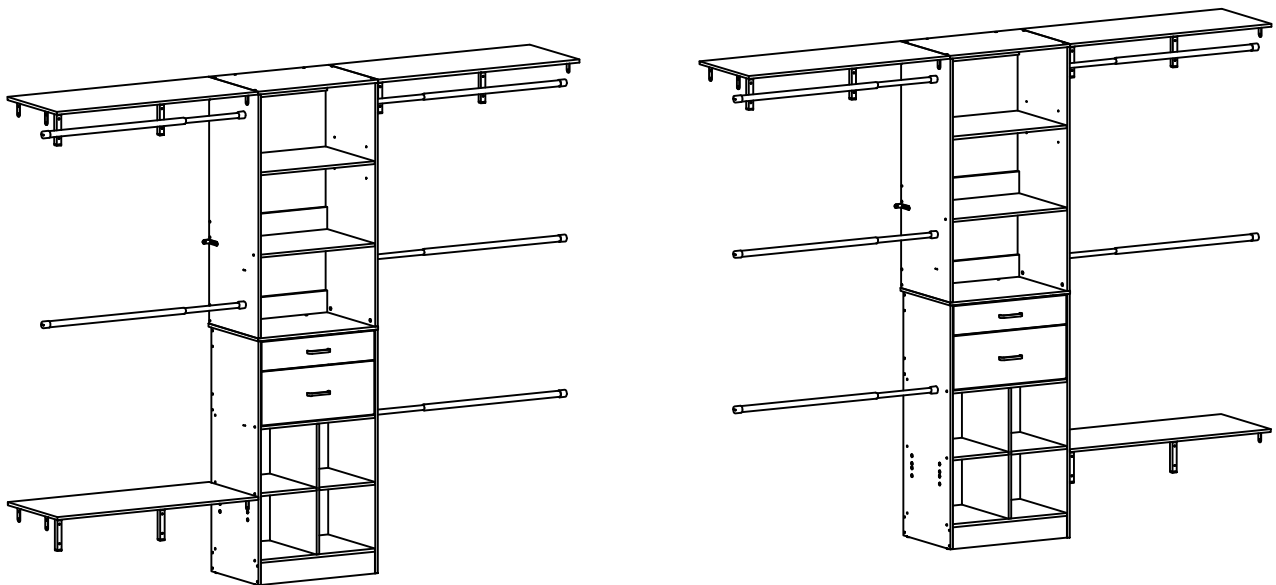

Attention: Please ensure you have all parts before commencing assembly.
Please read all the instructions before commencing.


Have problems when installing or missing parts?

How to find us?
























bettersp@hotmail.com

















PART LIST

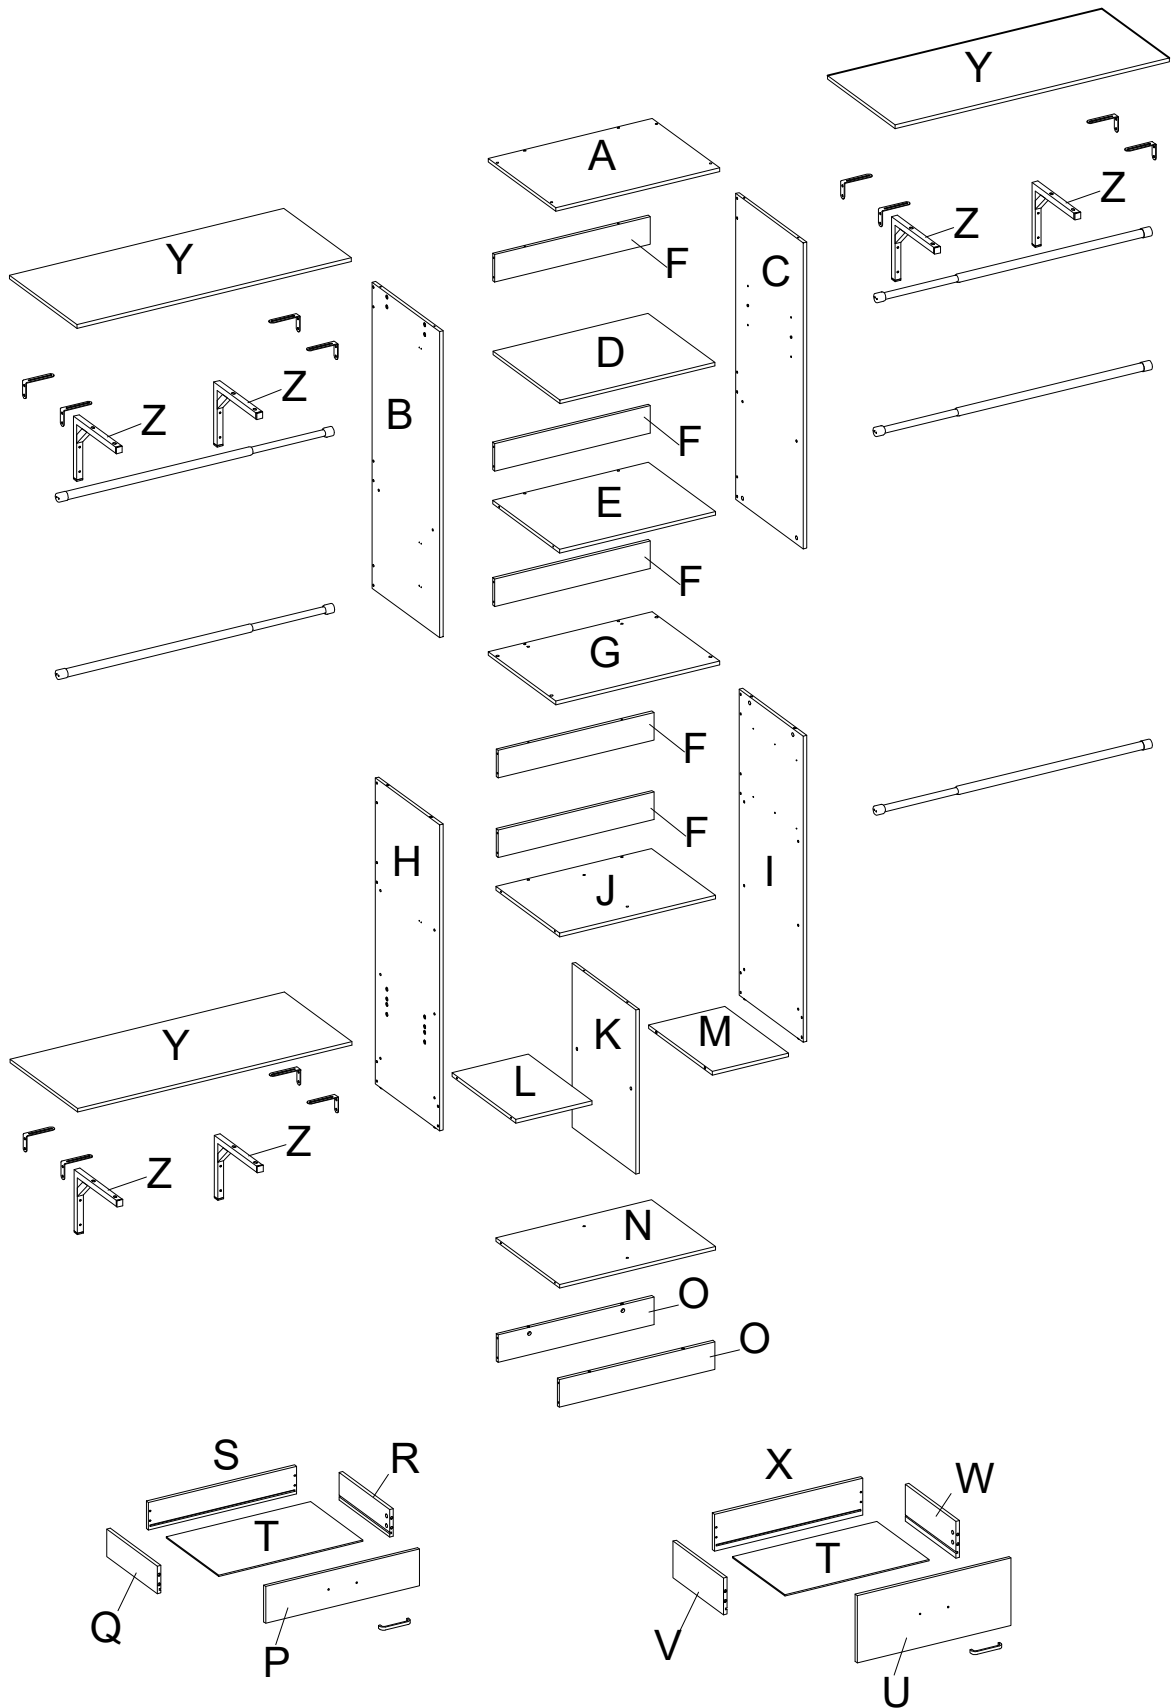

PART LIST

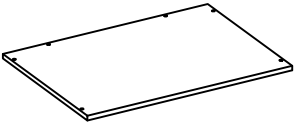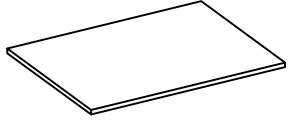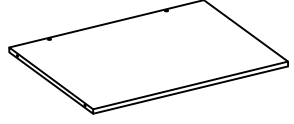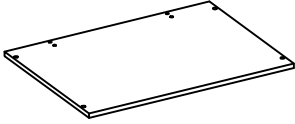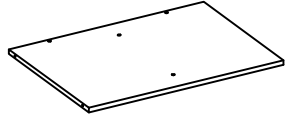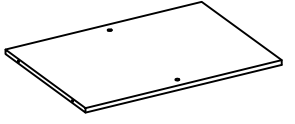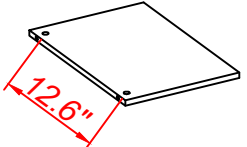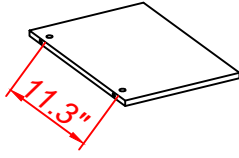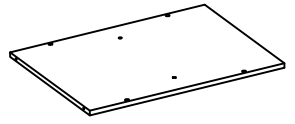A x 1pc 	B x 1pc 	C x 1pc 	D x 1pc 
E x 1pc 	F x 5pcs 	G x 1pc 	H x 1pc 
I x 1pc 	J x 1pc 	K x 1pc 	L x 1pc 
M x 1pc 	N x 1pc 	O x 2pcs 	P x 1pc 
Q x 1pc 	R x 1pc 	S x 1pc 	T x 2pcs 
U x 1pc 	V x 1pc 	W x 1pc 	X x 1pc 
Y x 3pcs 	Z x 6pcs 		

HARDWARE LIST

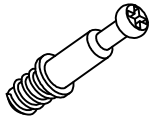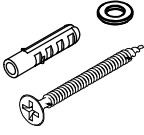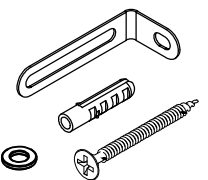
①  M6x28 24 pcs	②  Ø12 24 pcs	③  M6x40 62 pcs	④  M4x30 8 pcs
⑤  M4 1 pc	⑥  M3x12 24 pcs	⑦  M6x19 4 pcs	⑧  M4x15 4 pcs
⑨  2 pcs	⑩  M6x27 12 pcs	⑪  1 pc	⑫  M6x10 12 pcs
⑬  100x55 12 pcs	⑭  M4x12 24 pcs	⑮  56-100cm 5 pcs	⑯  5 pcs
⑰  5 pcs	⑱  M4x40 12 pcs	⑲  M4x60 12 pcs	⑳  M4x40 2 pcs
㉑  300L 2 pcs	㉒  300L 2 pcs	㉓  300L 2 pcs	㉔  300L 2 pcs
㉕  M4x40 10 pcs	㉖  M4x12 10 pcs		

Please count and verify all parts before assembly .

How to install Camlocks


Connect the male camlock as directed in the assembly instructions with a screwdriver.

1 DO NOT OVER TIGHTEN

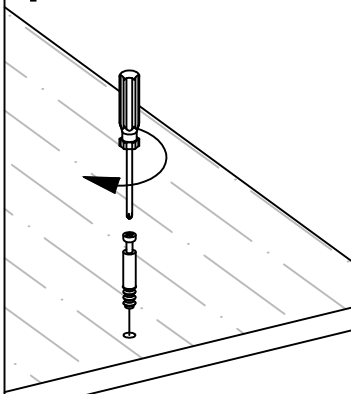

Put the male camlock into the entry hole.


2

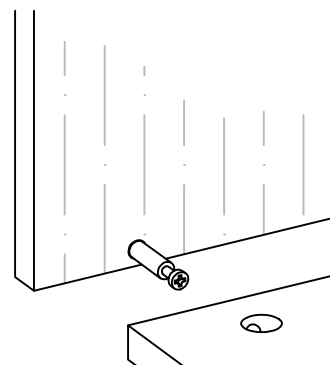

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

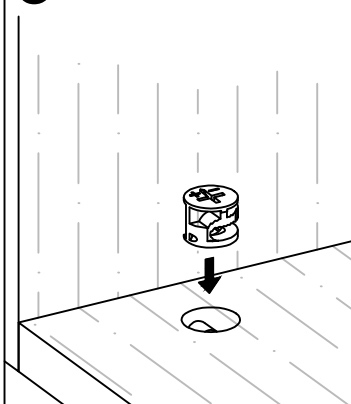


Screw the female camlock clockwise with a screwdriver.


You will feel a click when the camlock is locked in place.

The camlock is now completed.


4

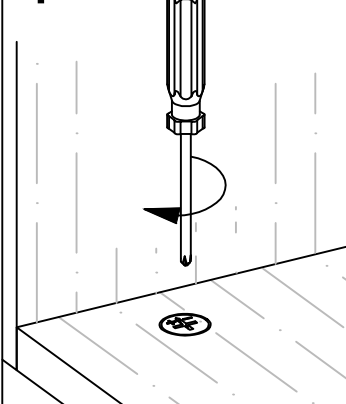


STEP 1

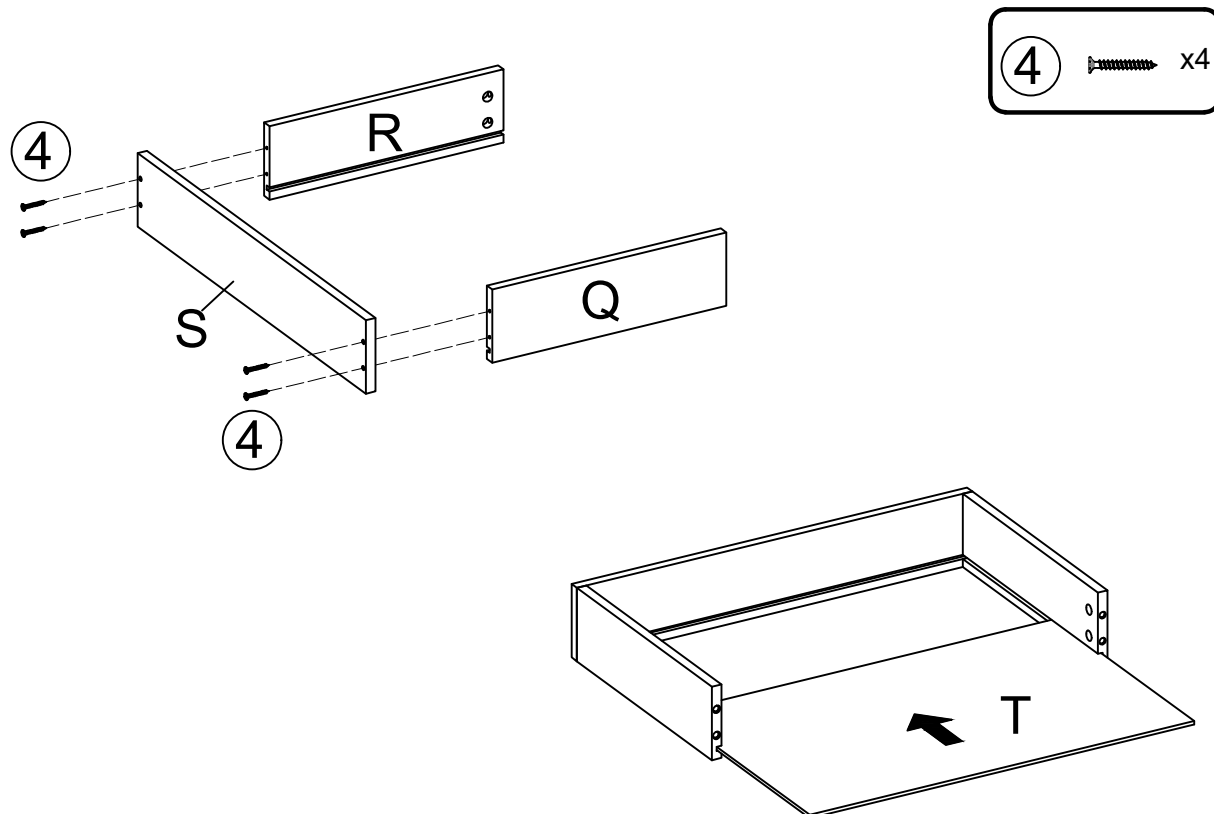


STEP 2

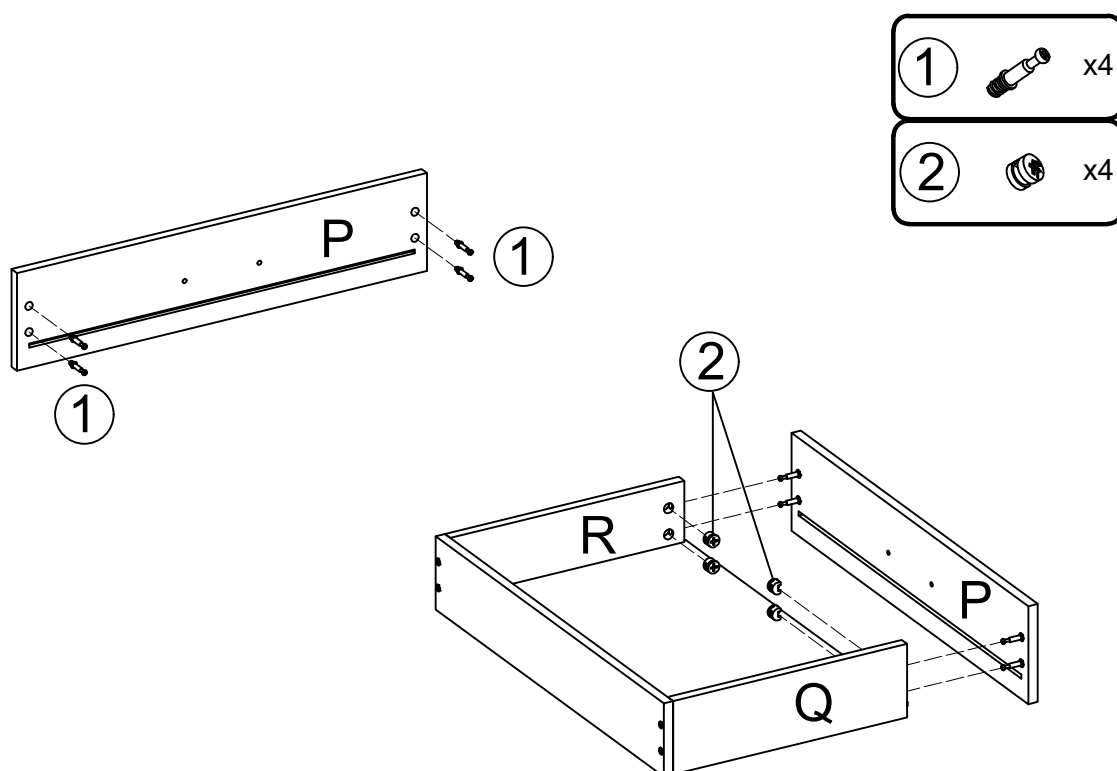


STEP 3

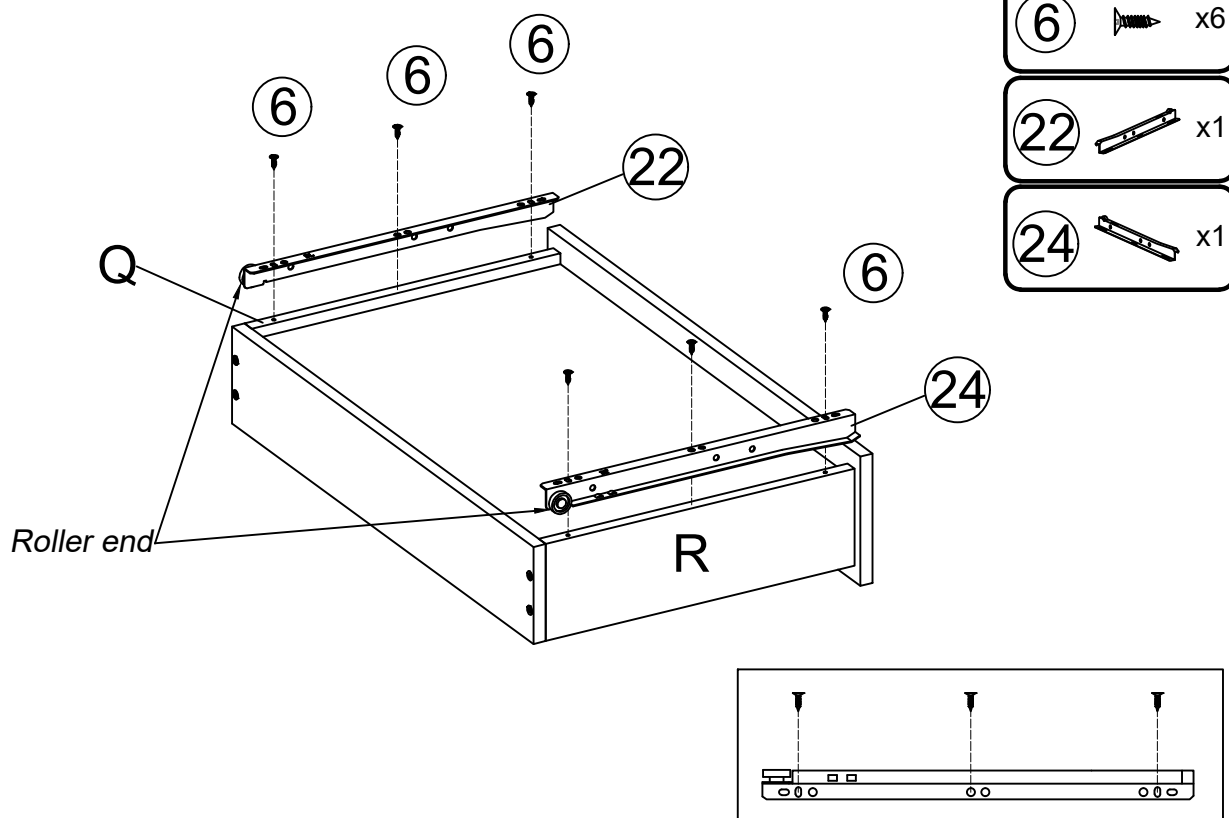


STEP 4

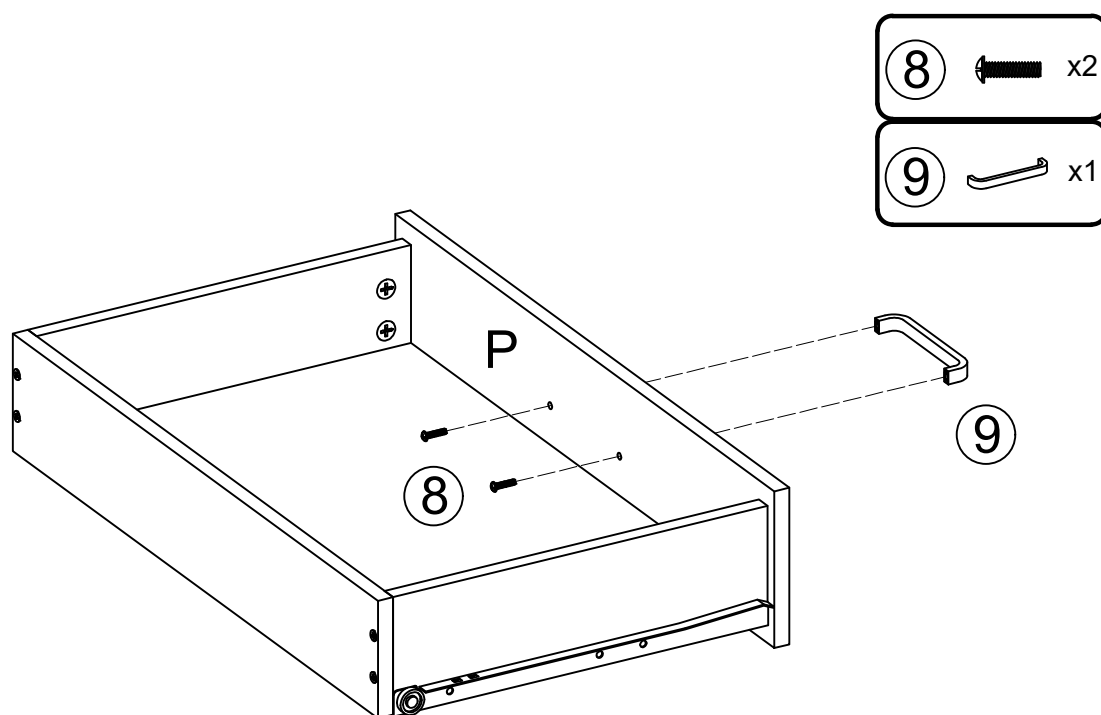


STEP 5

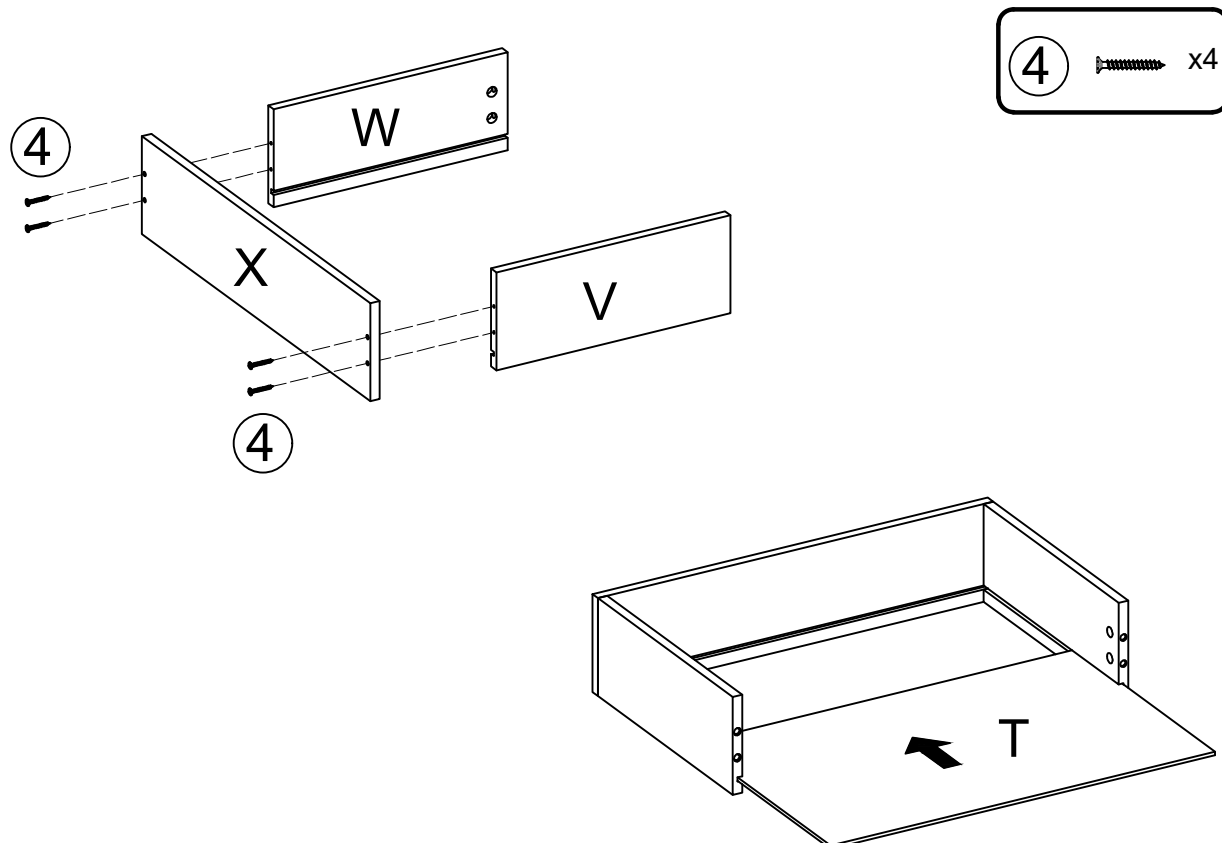


STEP 6

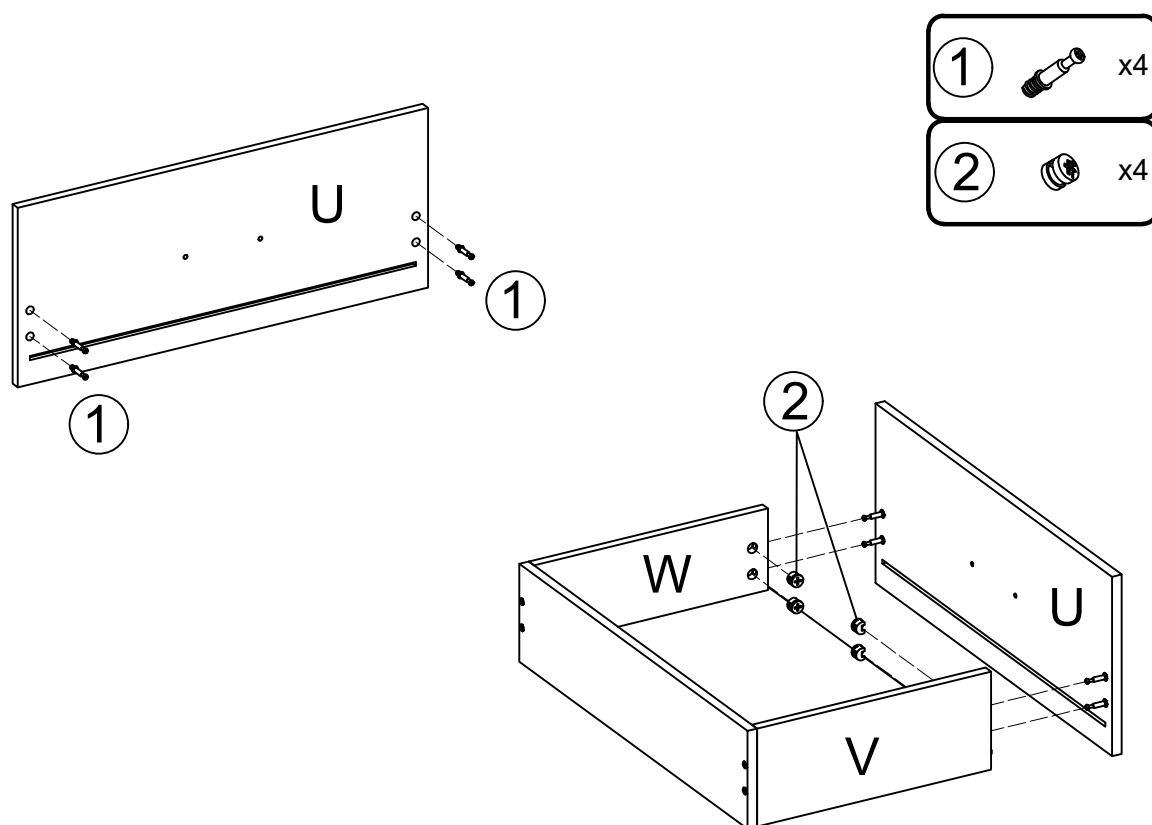


STEP 7

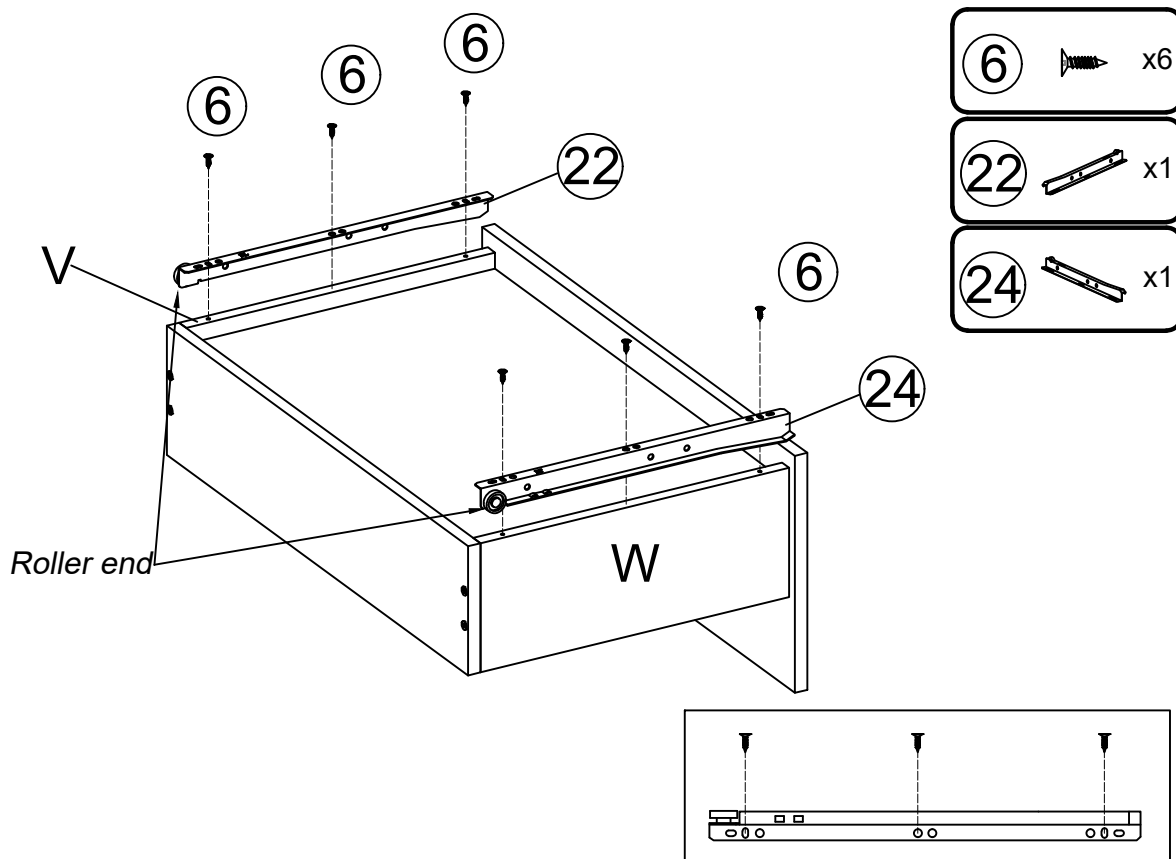


STEP 8

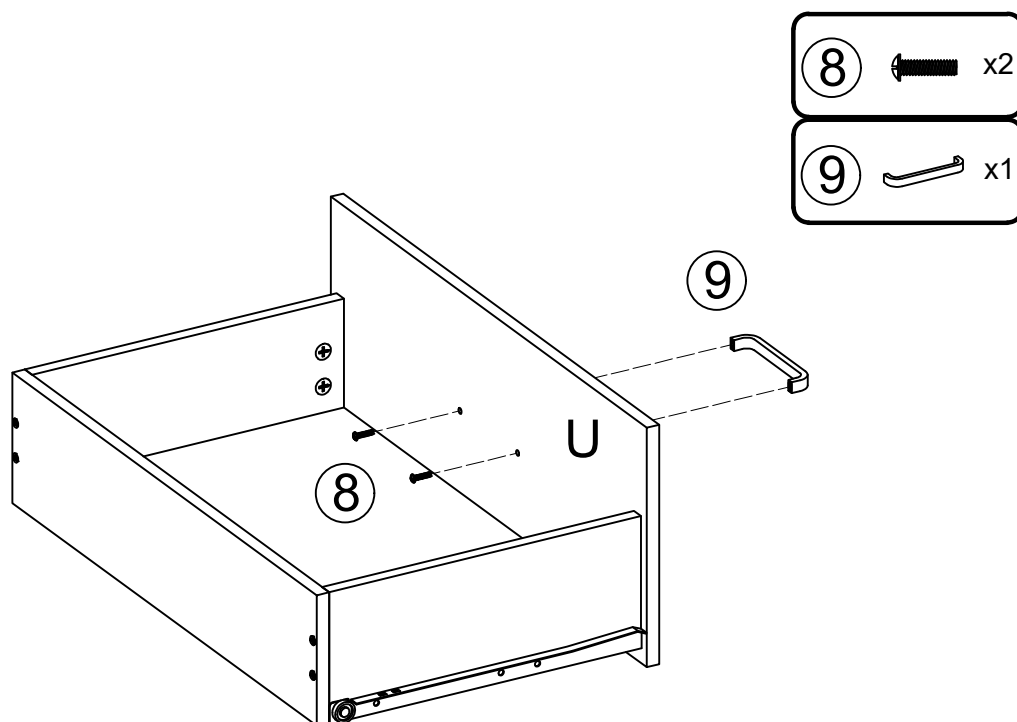




STEP 9

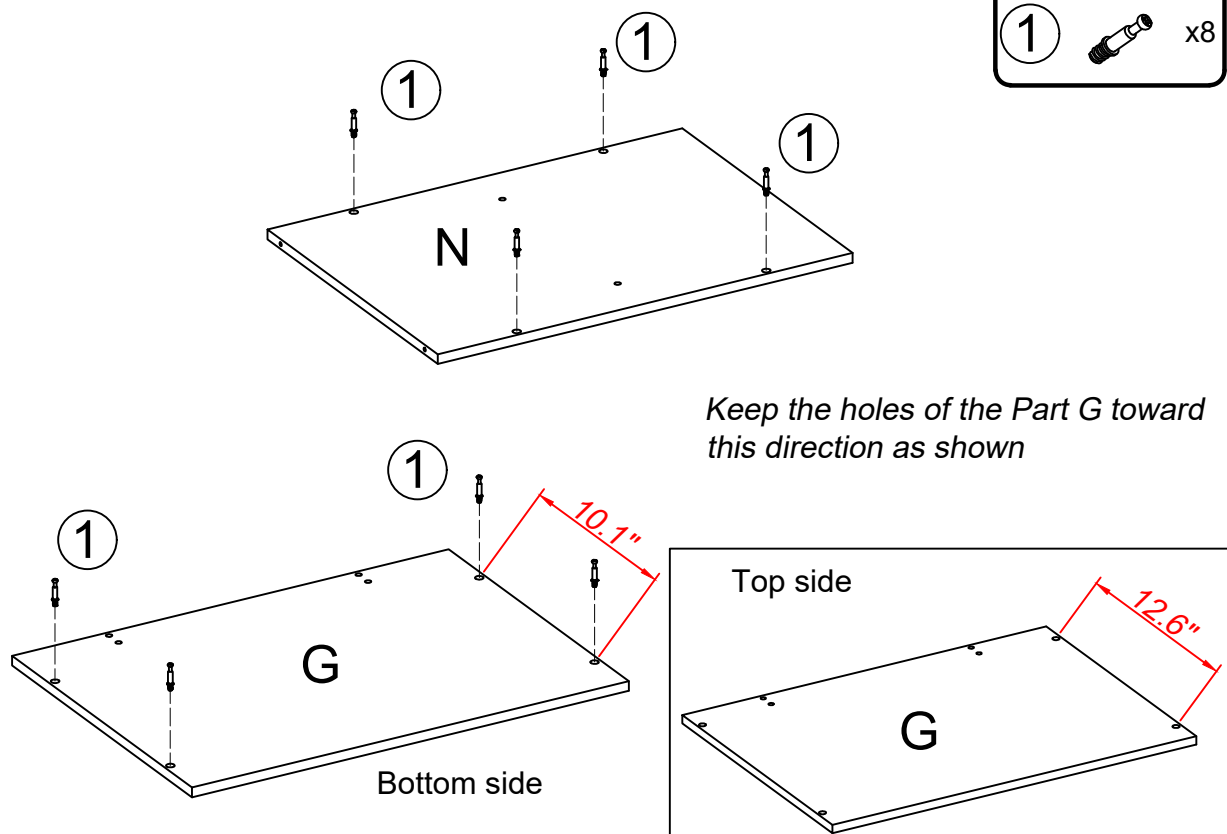



STEP 10

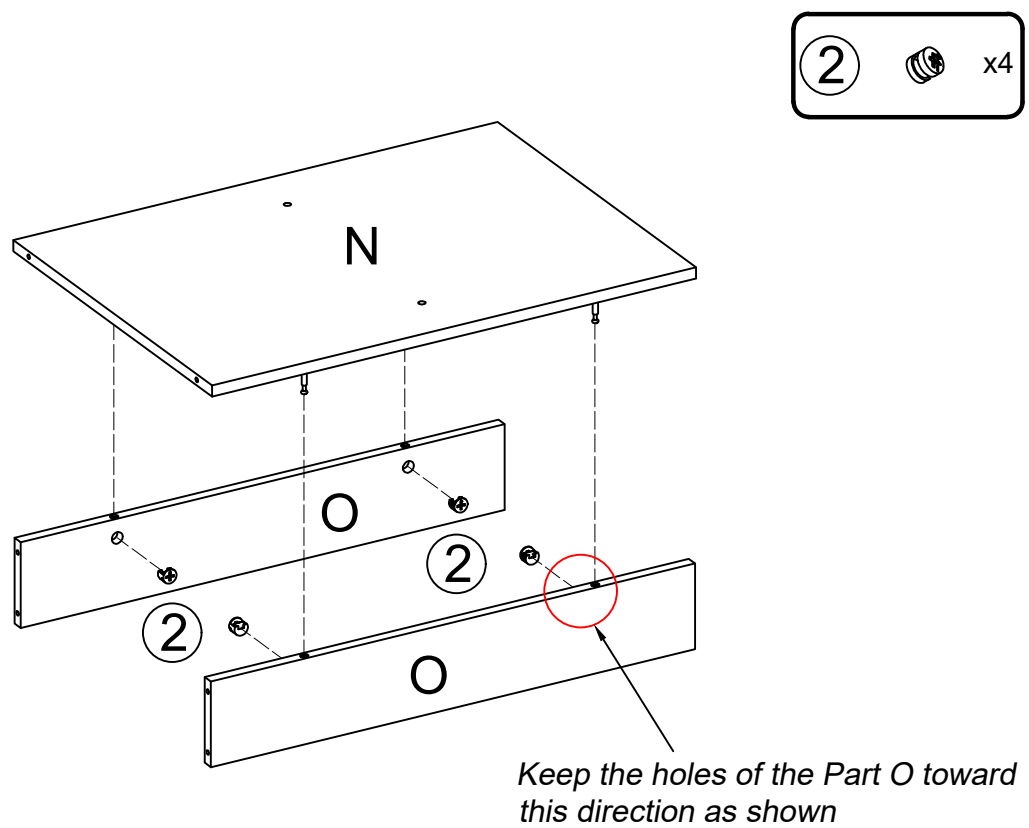


STEP 11

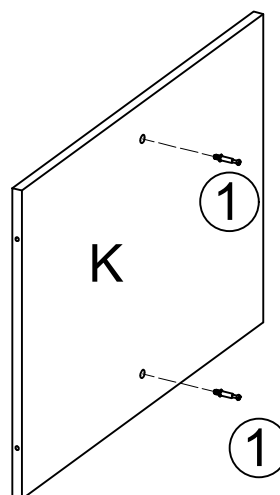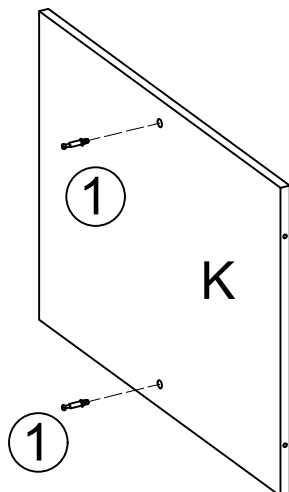


STEP 12

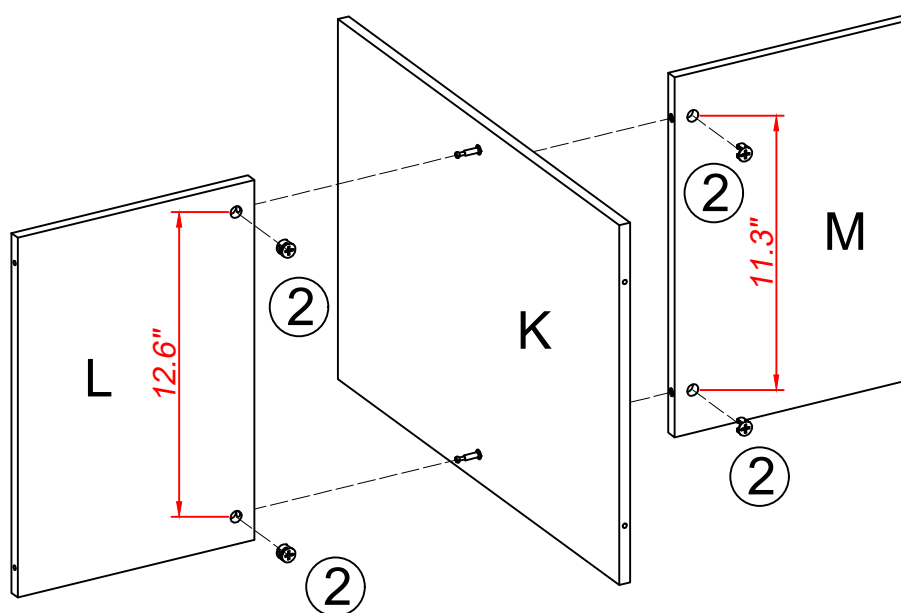


STEP 13

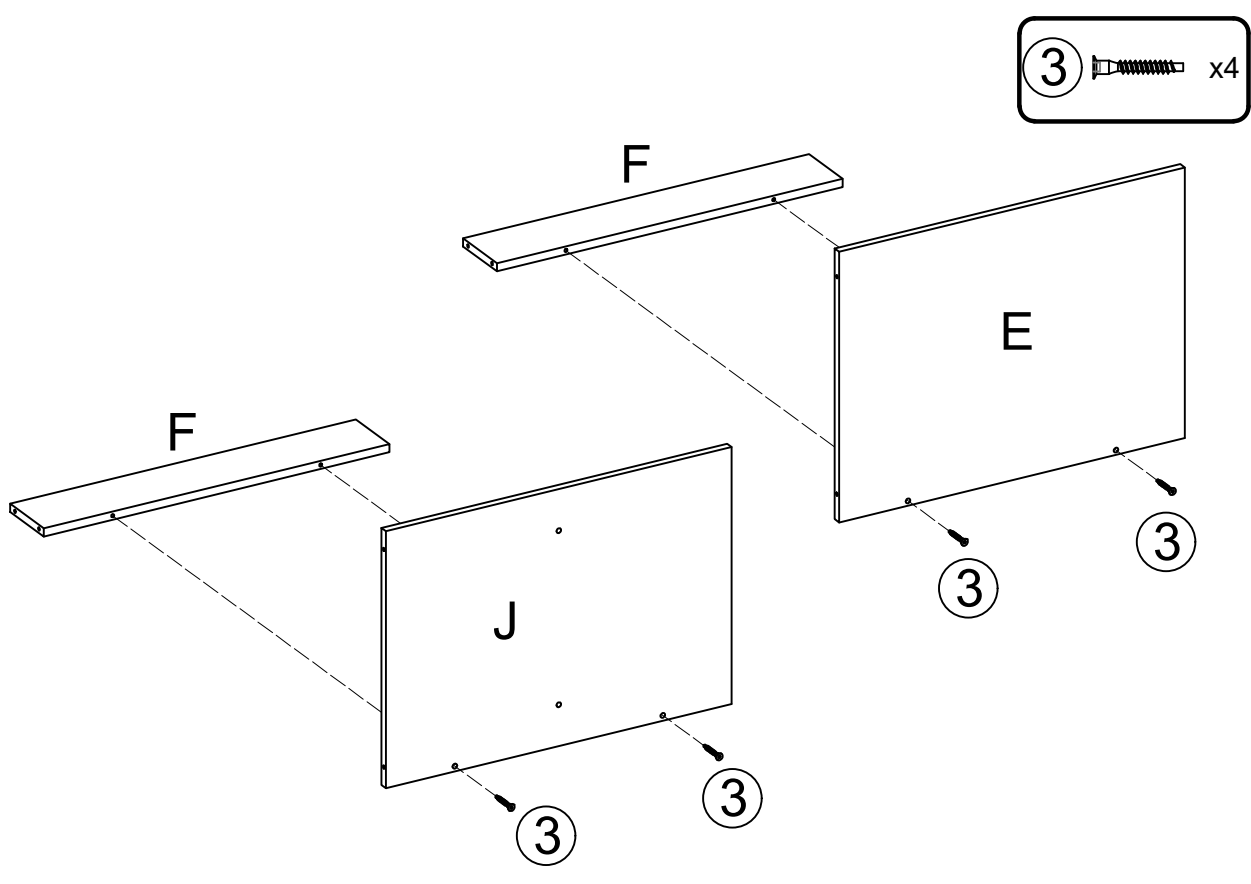


STEP 14

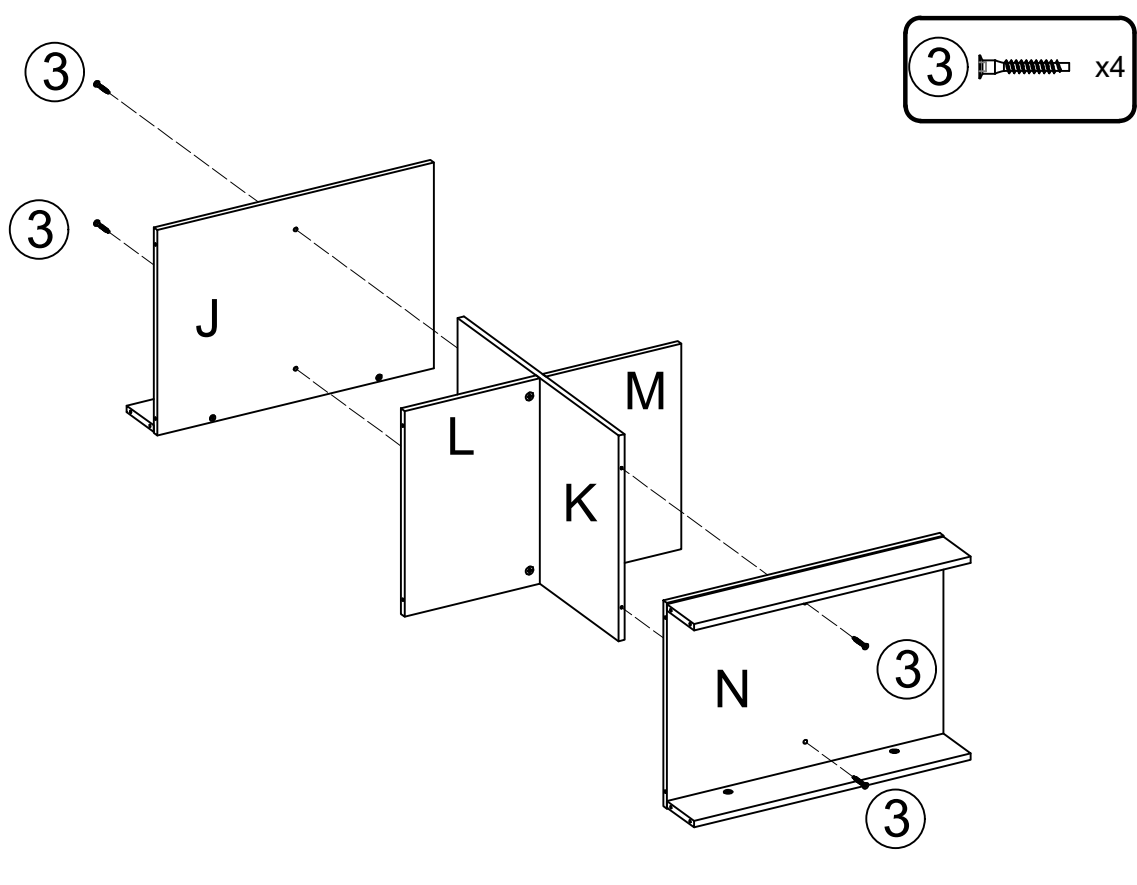

STEP 15

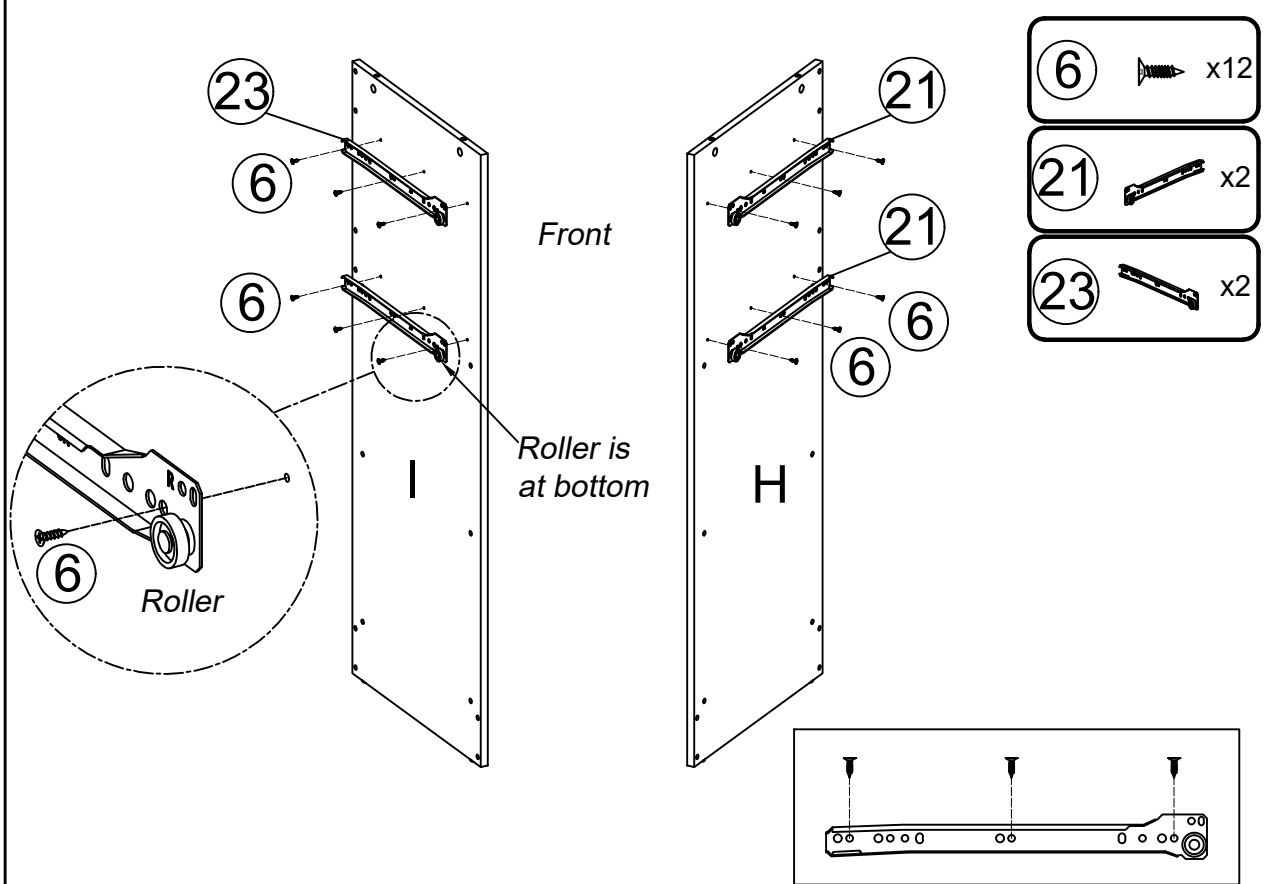


STEP 16

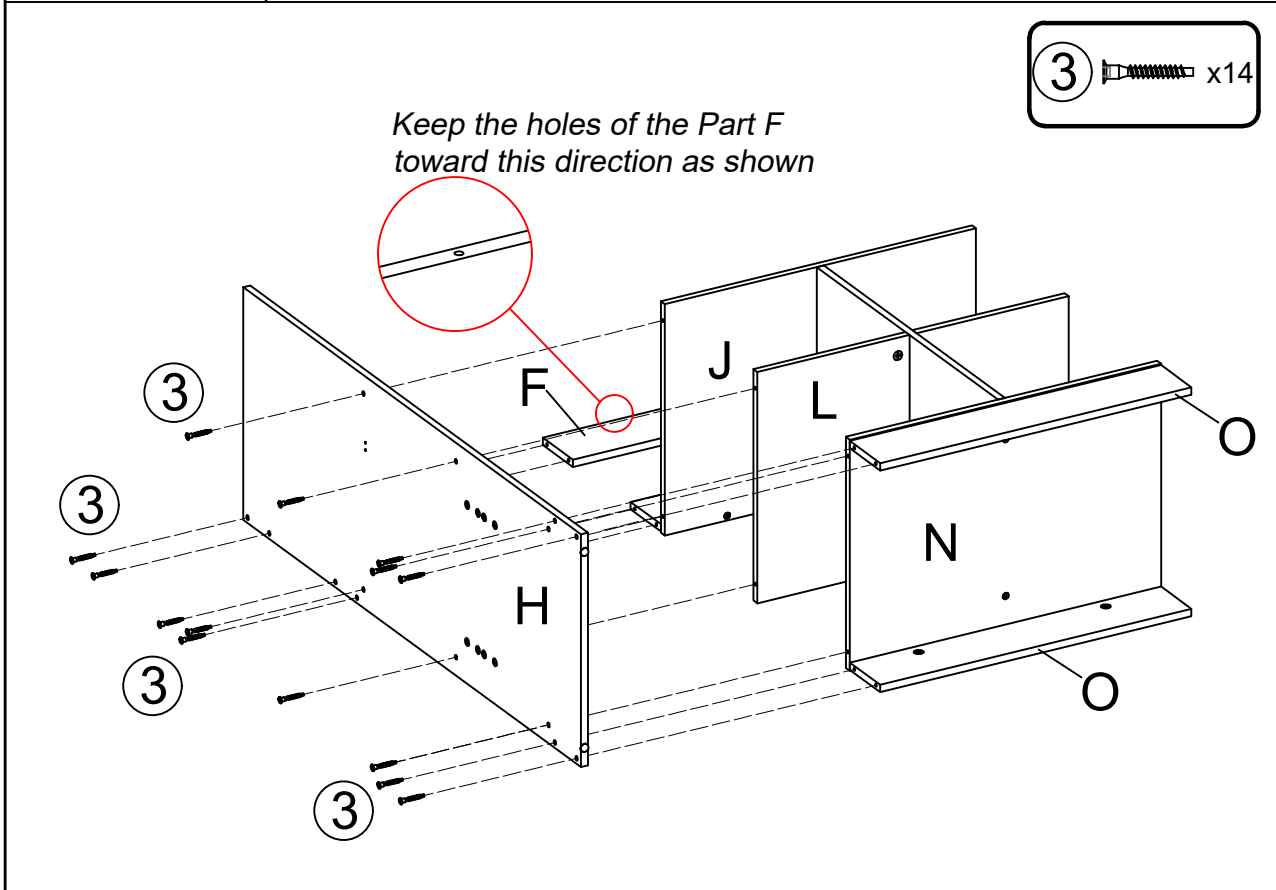

STEP 17


③  x14

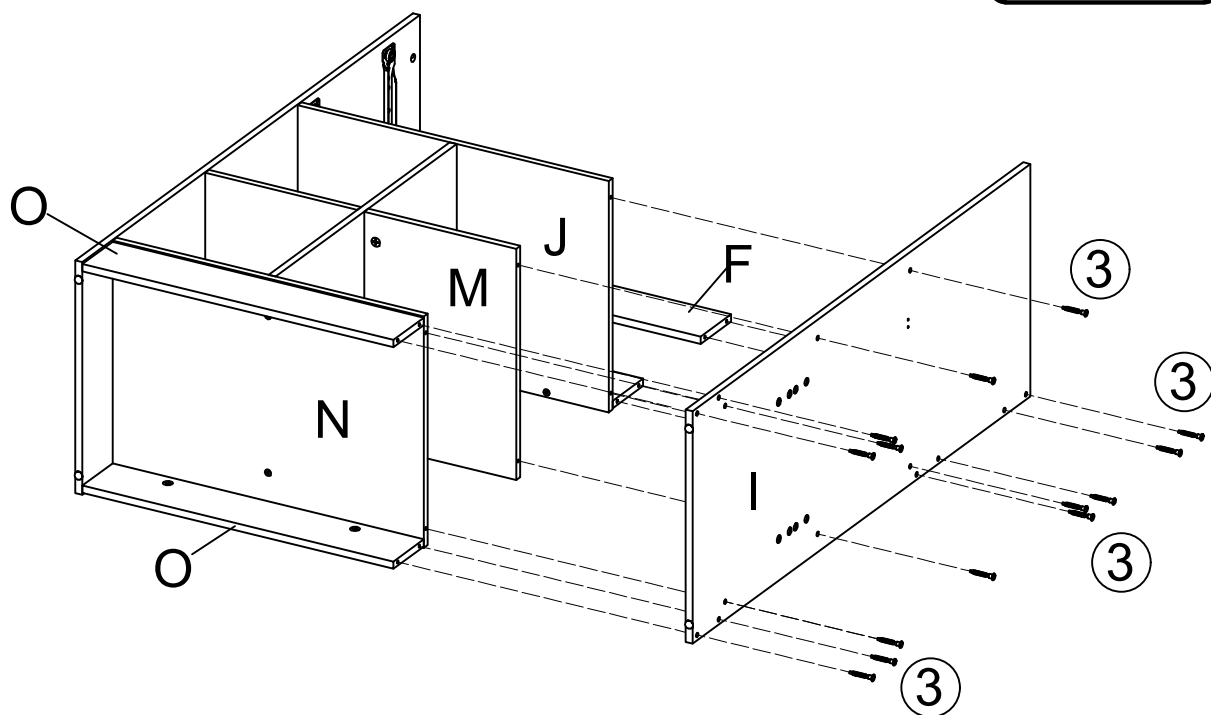


STEP 18

②  x4


③  x2

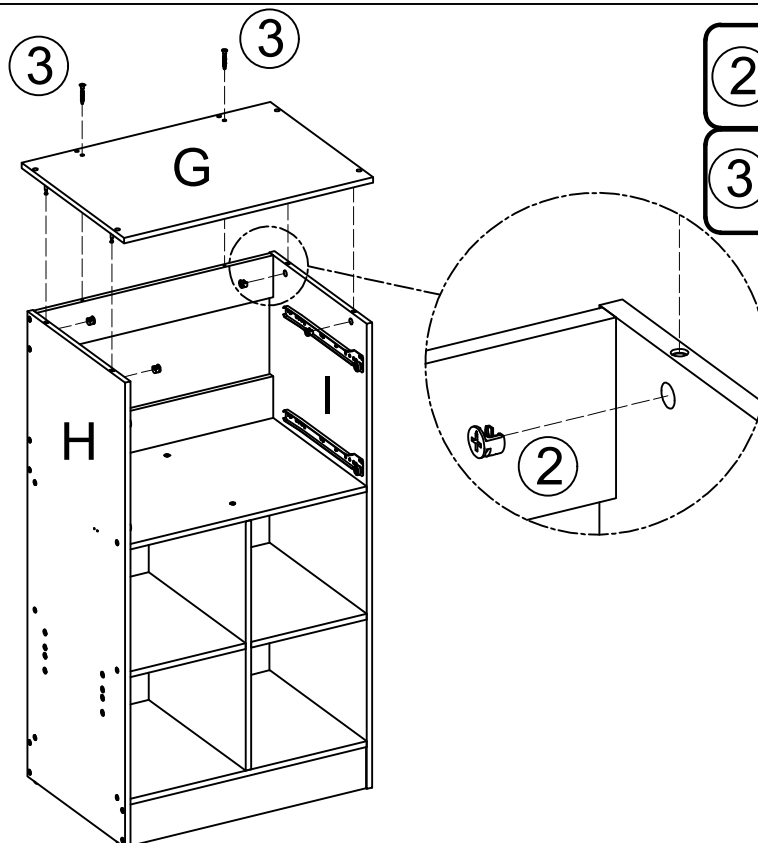


STEP 19

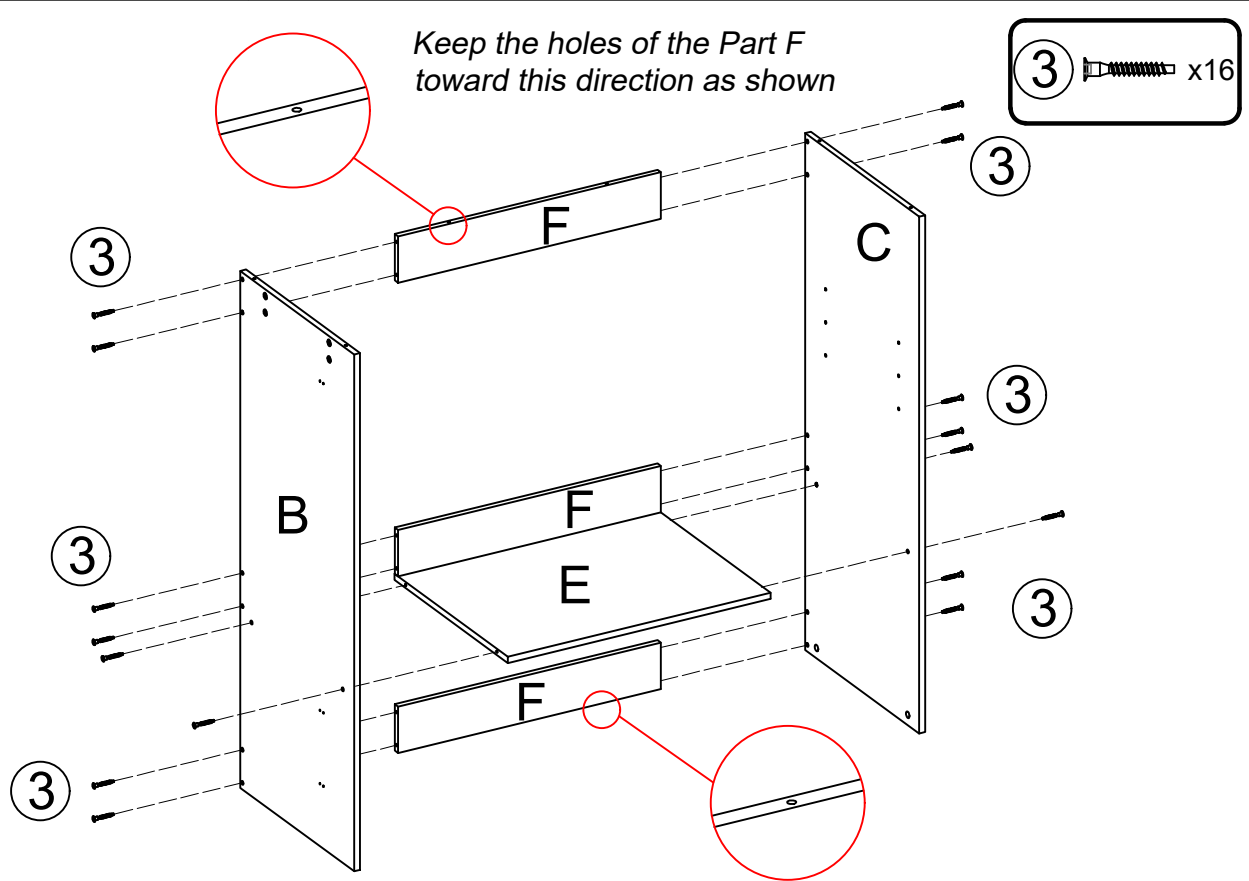


STEP 20

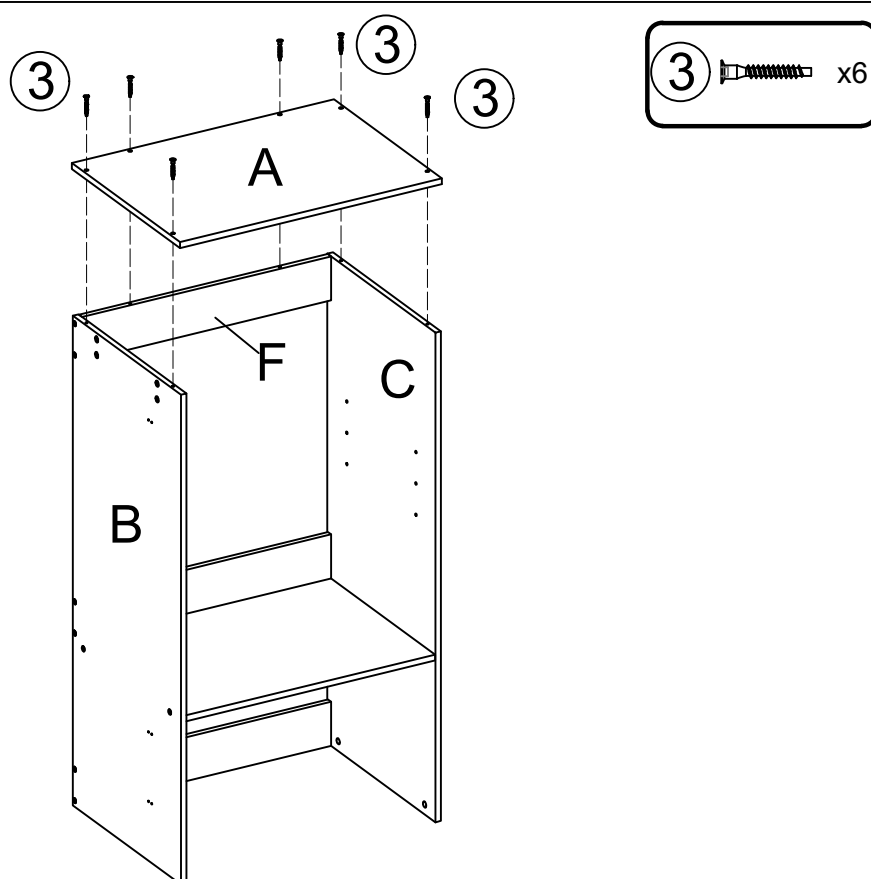


STEP 21

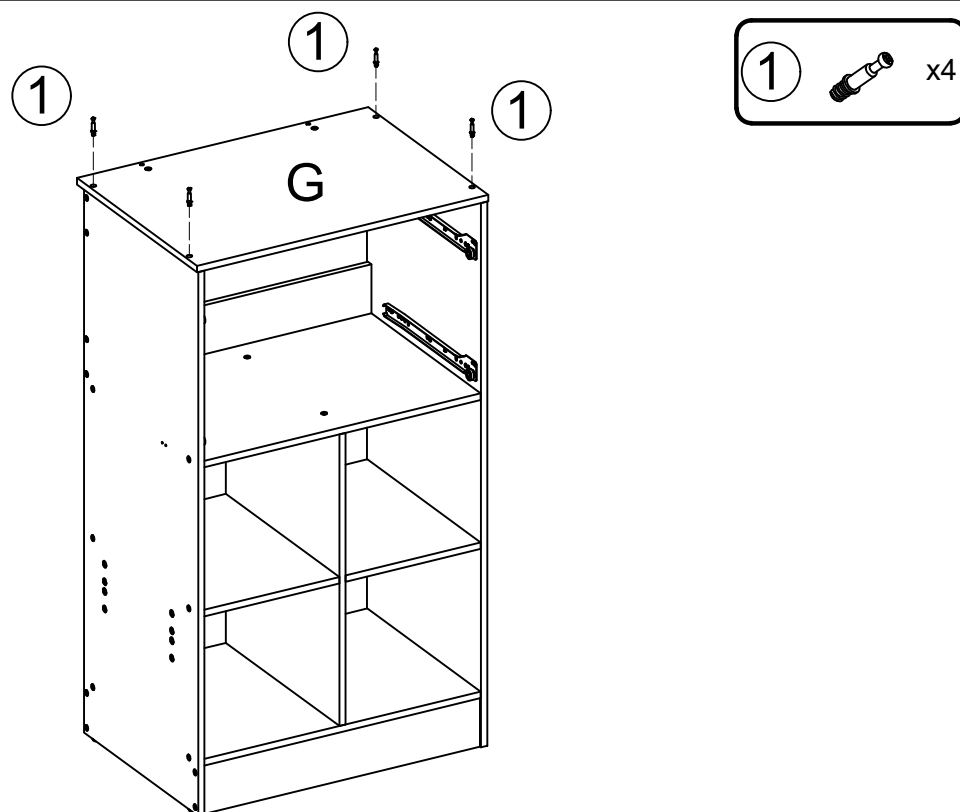


STEP 22

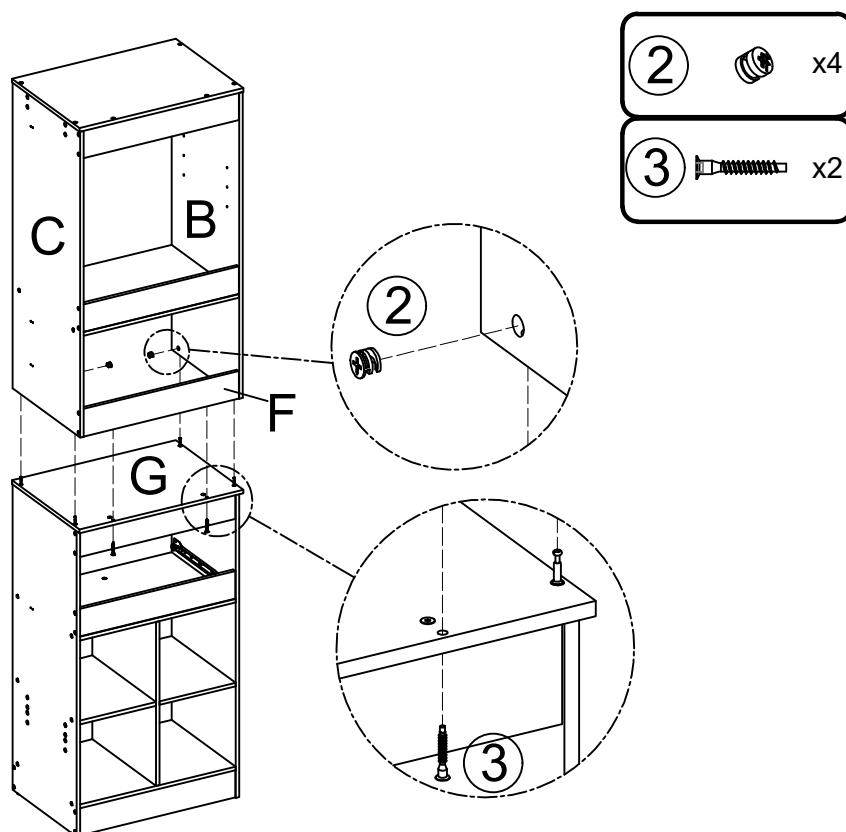

STEP 23




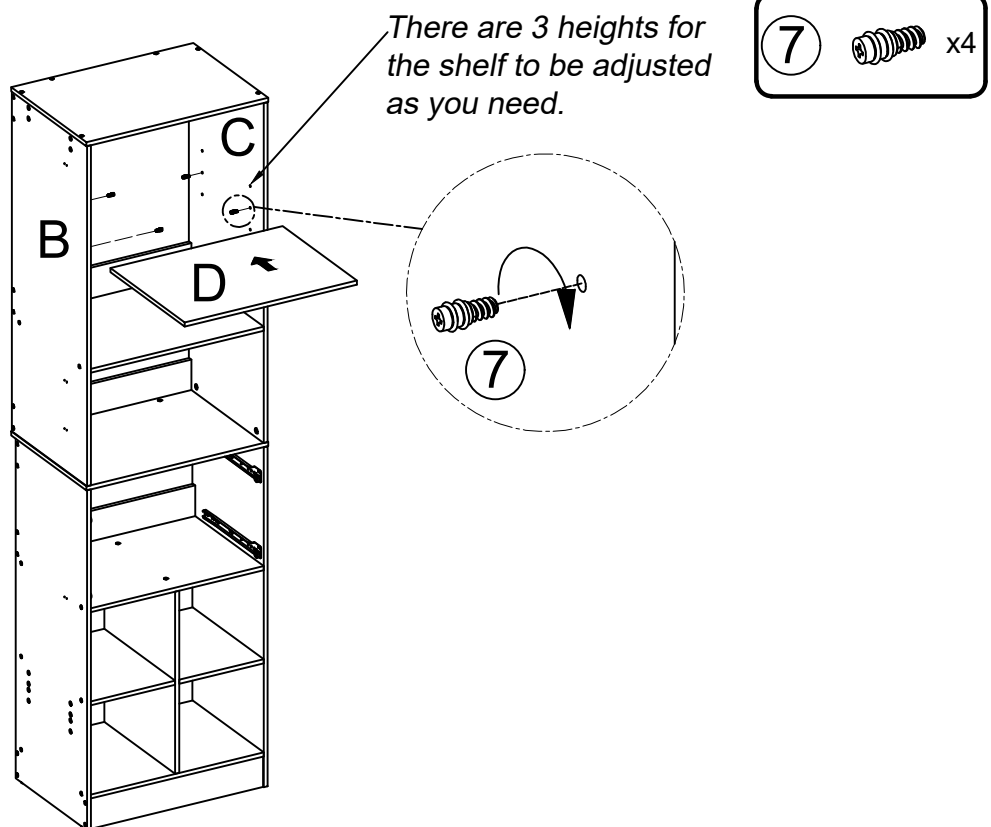


STEP 24

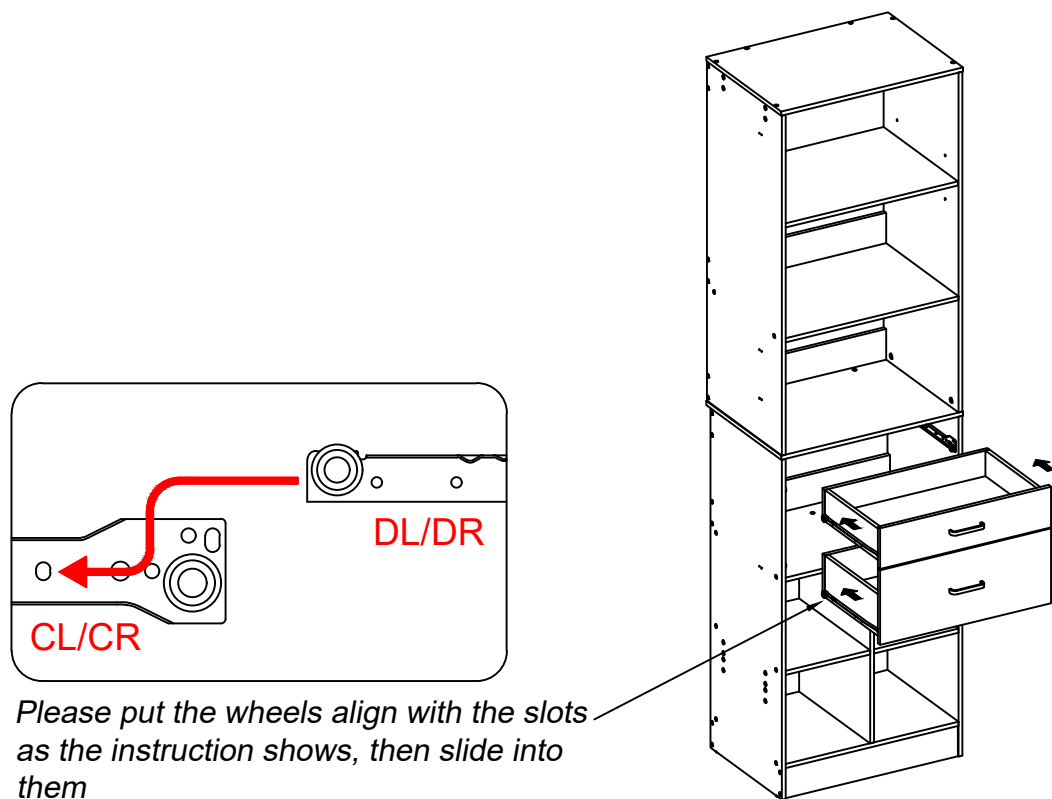


STEP 25

Long Shelf Installation

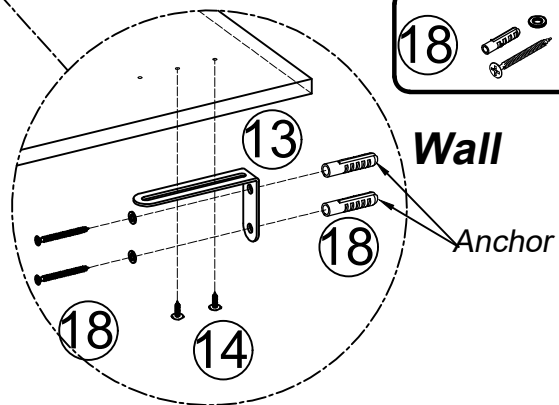
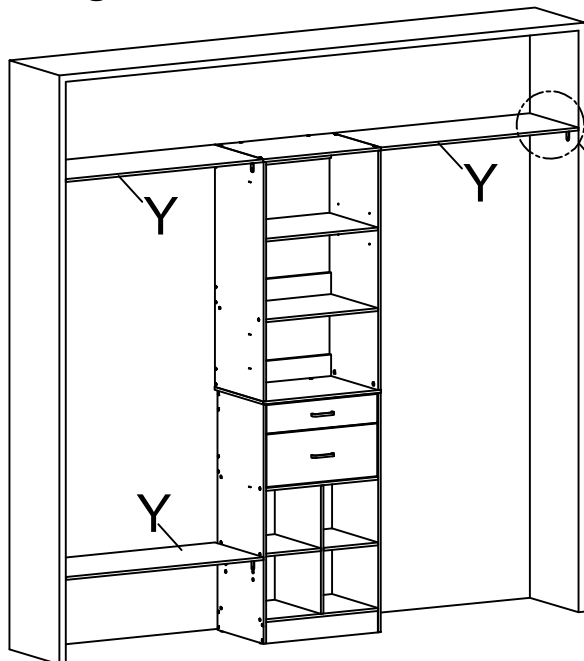


Note: If long shelf (Y) needs cut to fit inside your closet space, cut only one side of the shelf and do not use a hacksaw. It is recommended you hire an insured remodeler for this type of installation.

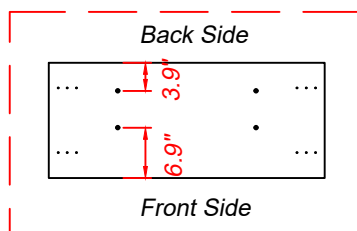


OR

Keep the holes of the Part Y toward this direction as shown

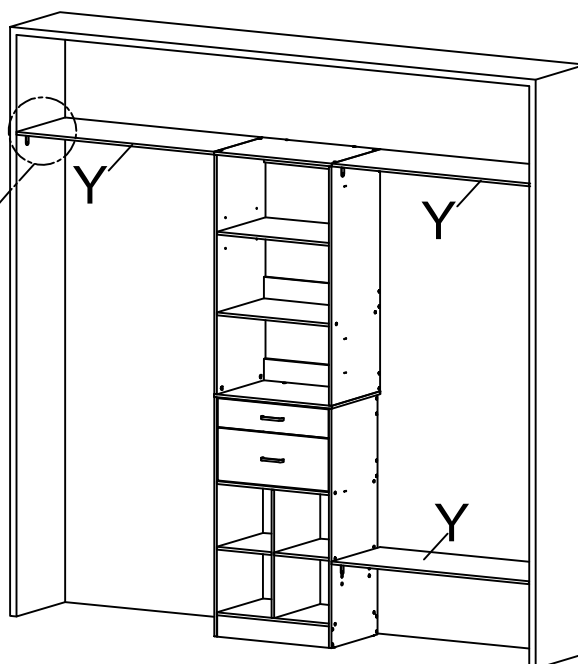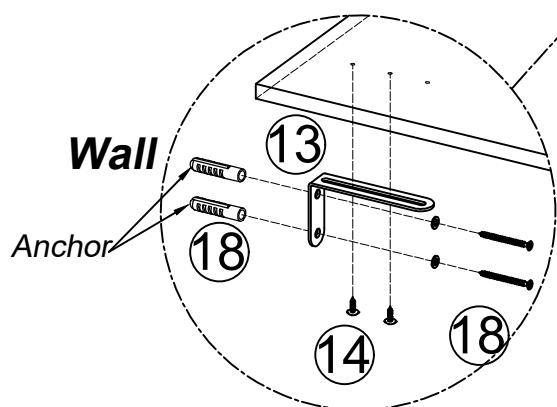

STEP 26

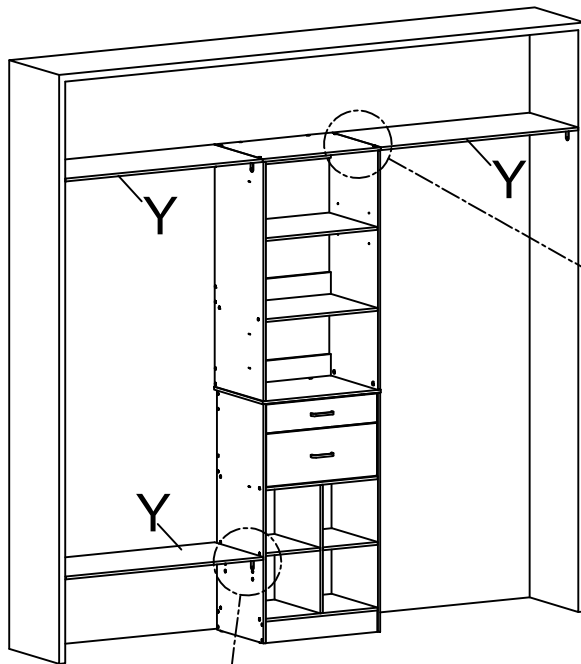


12  x12

13  x6

14  x12


CABINET

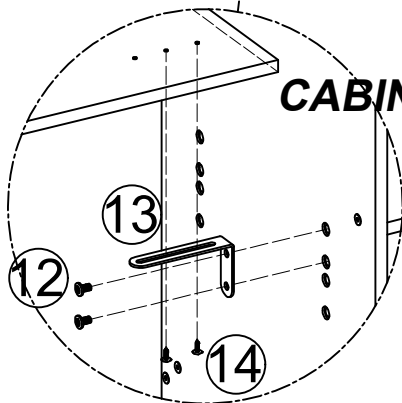


CABINET

OR

There are 2 heights for the long shelf (as shoe shelf) to be adjusted as you need.



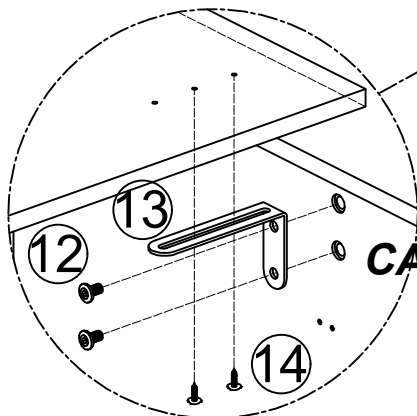


CABINET


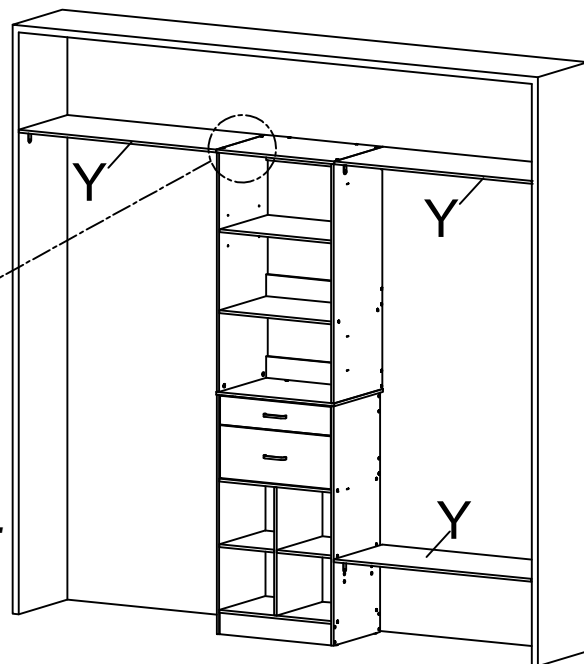


STEP 27

Shelf Support Installation

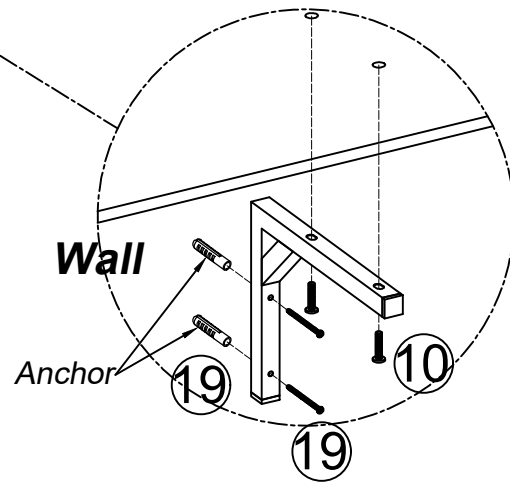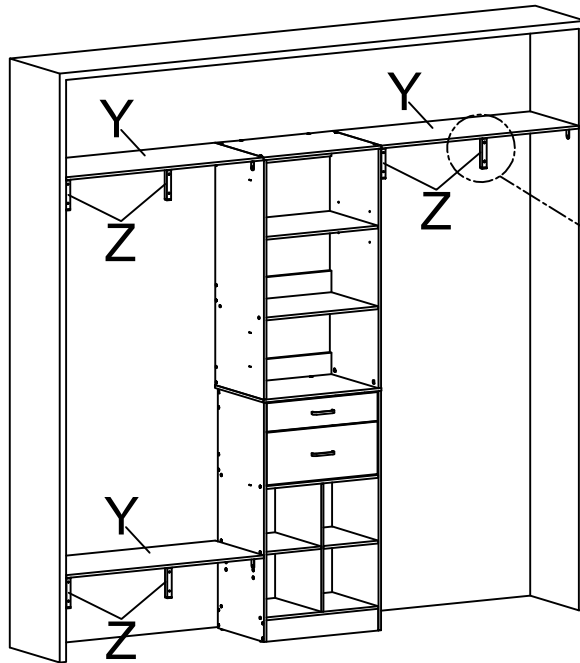


OR

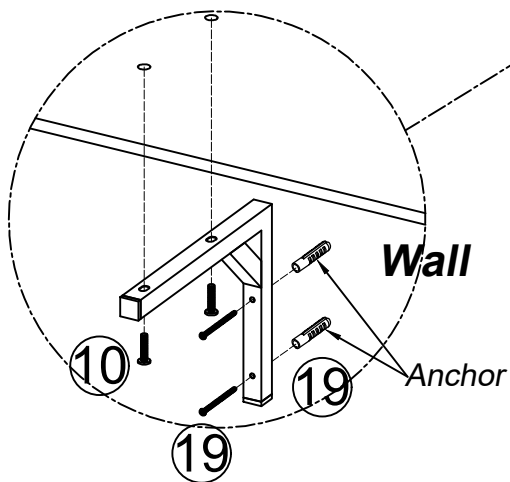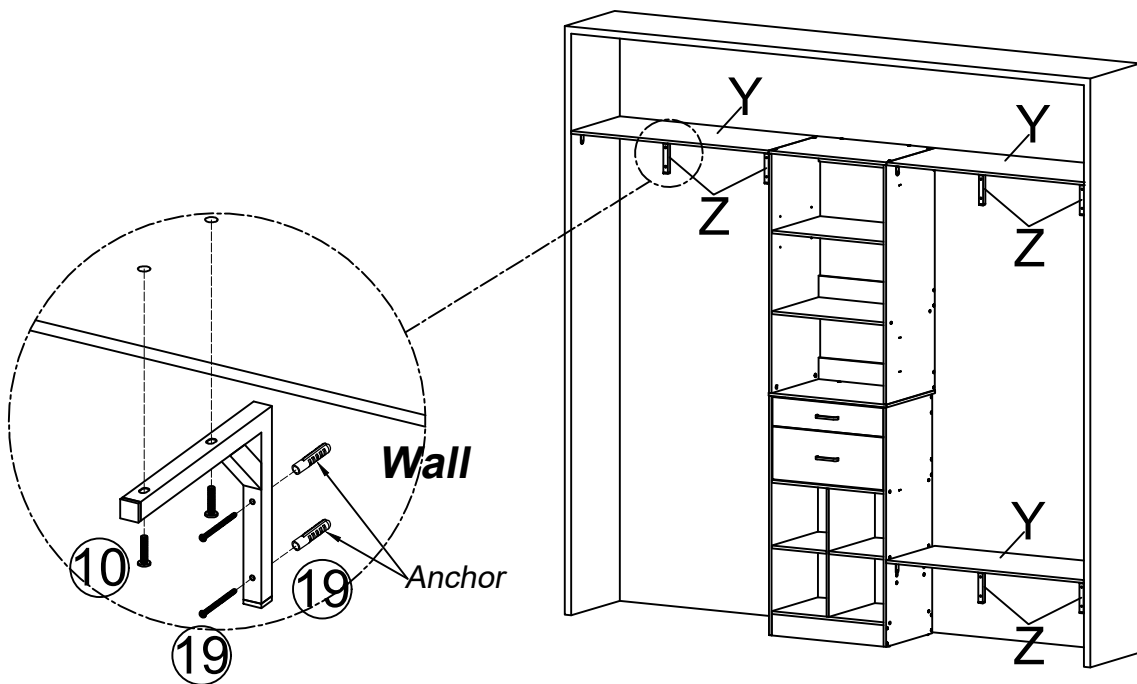


STEP 28

Pole Installation

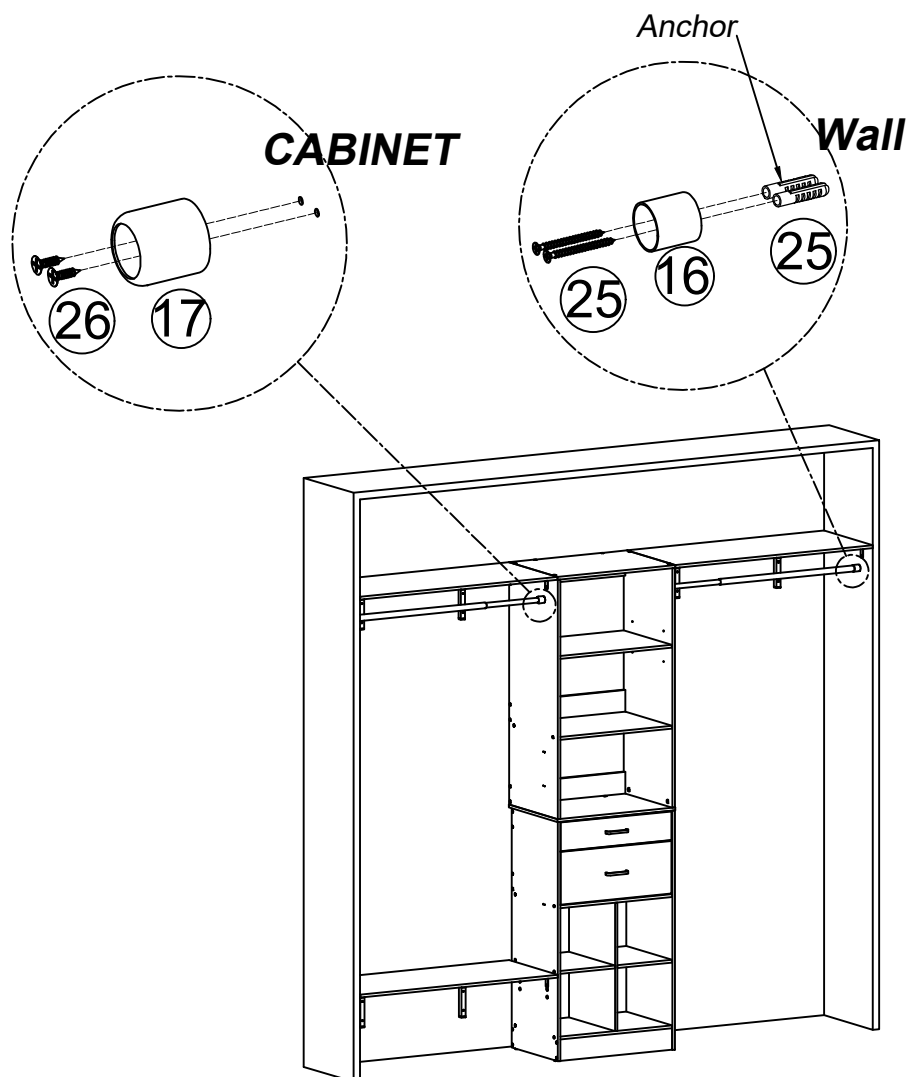


- (15) — x2
- (16) — x2
- (17) — x2
- (25) — x4
- (26) — x4

Note: Twist the expandable pole clockwise to tighten. anticlockwise to loosen.

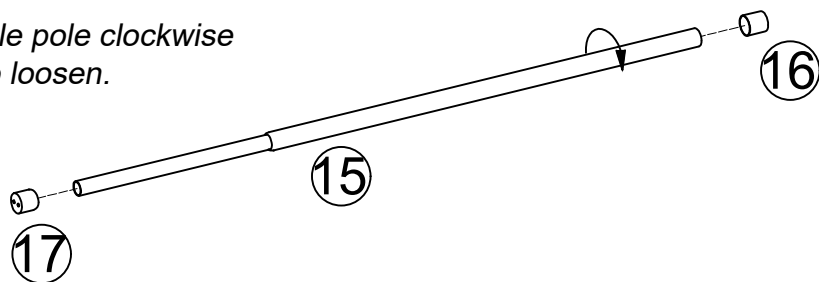


STEP 29

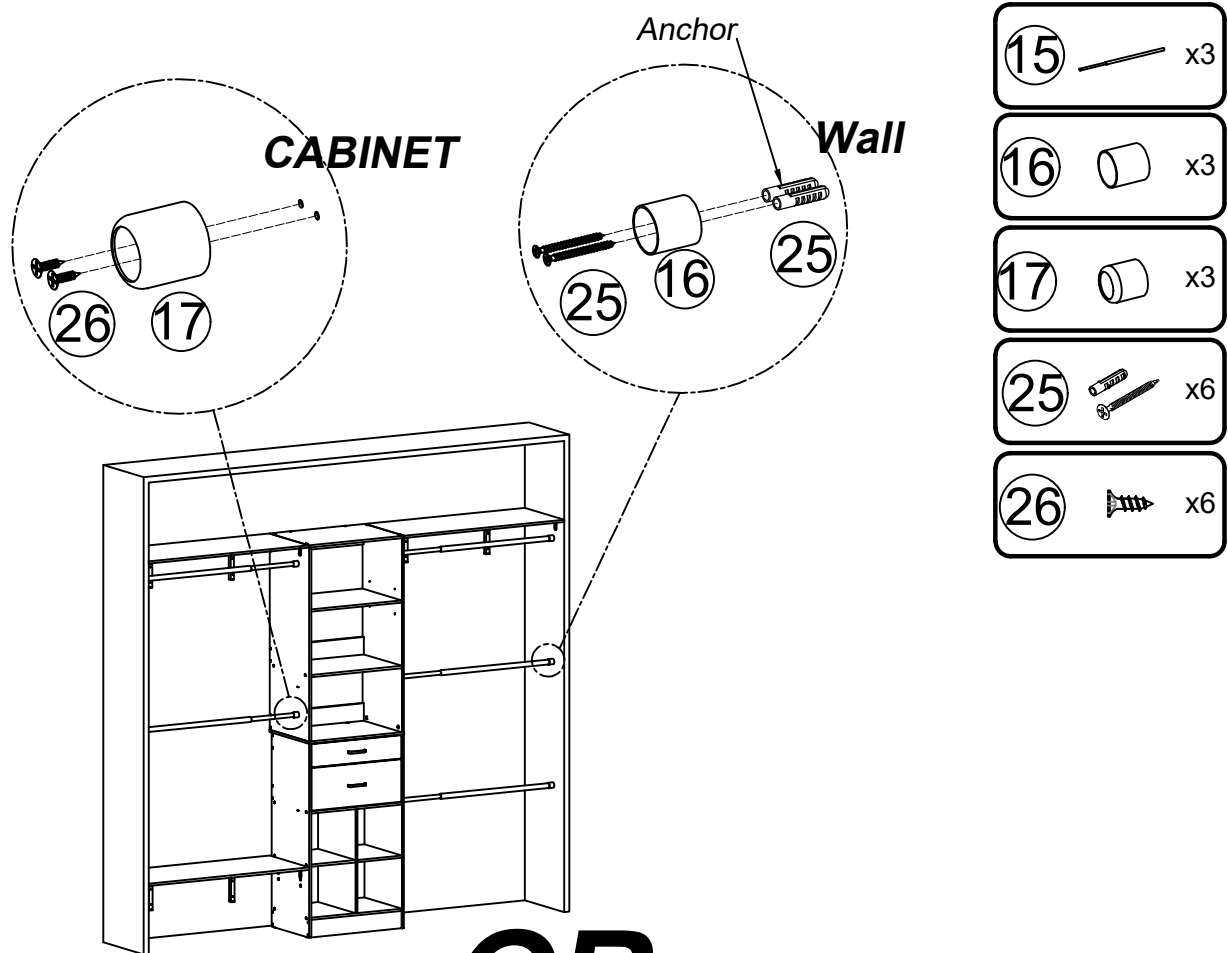


OR

There are 3 heights for the standalone pole to be adjusted in both sides of closet as you need.

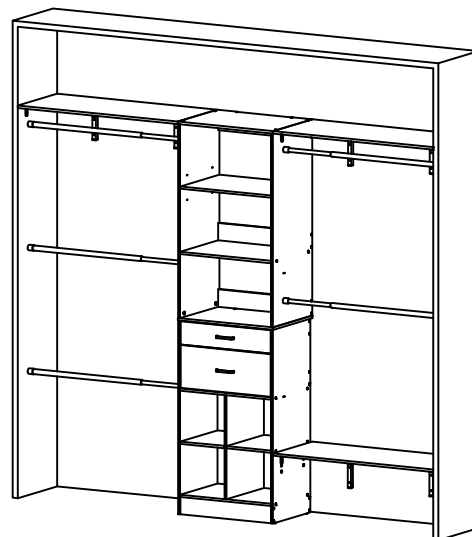


Note: Twist the expandable pole clockwise to tighten. anticlockwise to loosen.

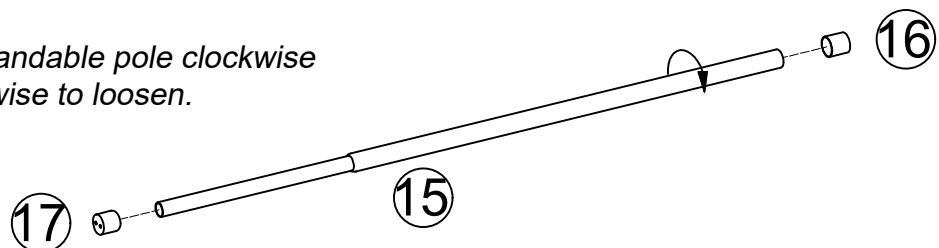


STEP 30

TIPPING RESTRAINT HARDWARE




Note: We have included two Tipping Restraint Hardware sets for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.


Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

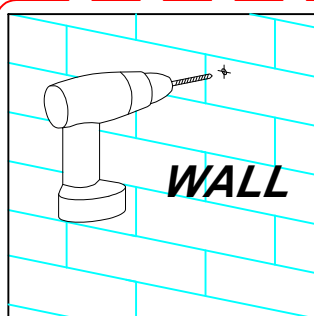

Step 1

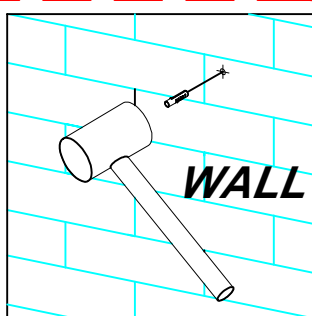

Step 2

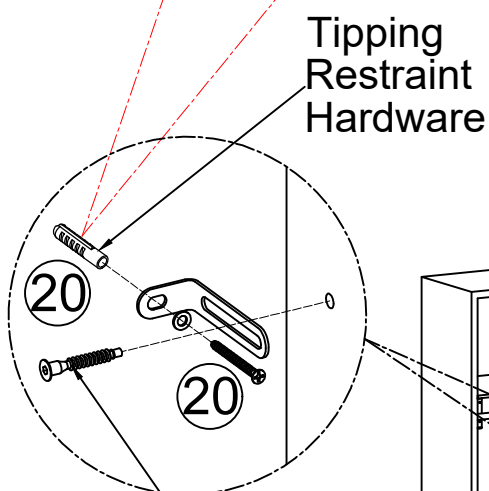

Please unscrew one Part ③ screw first, then install Part ②.

