

After-sales Service

Dear customer,

We're excited that you've chosen our product to be a part of your home. We care deeply about your experience and want to make sure you have all the help you need.


If you have any questions while assembling your new product, don't hesitate to contact our dedicated customer support team through the original purchase platform.

Creating your ideal space is important, and we're committed to helping you every step of the way.

Thank you for choosing us, where comfort and style meet practicality.

Sincerely,
Customer Service Manager

ASSEMBLY INSTRUCTION

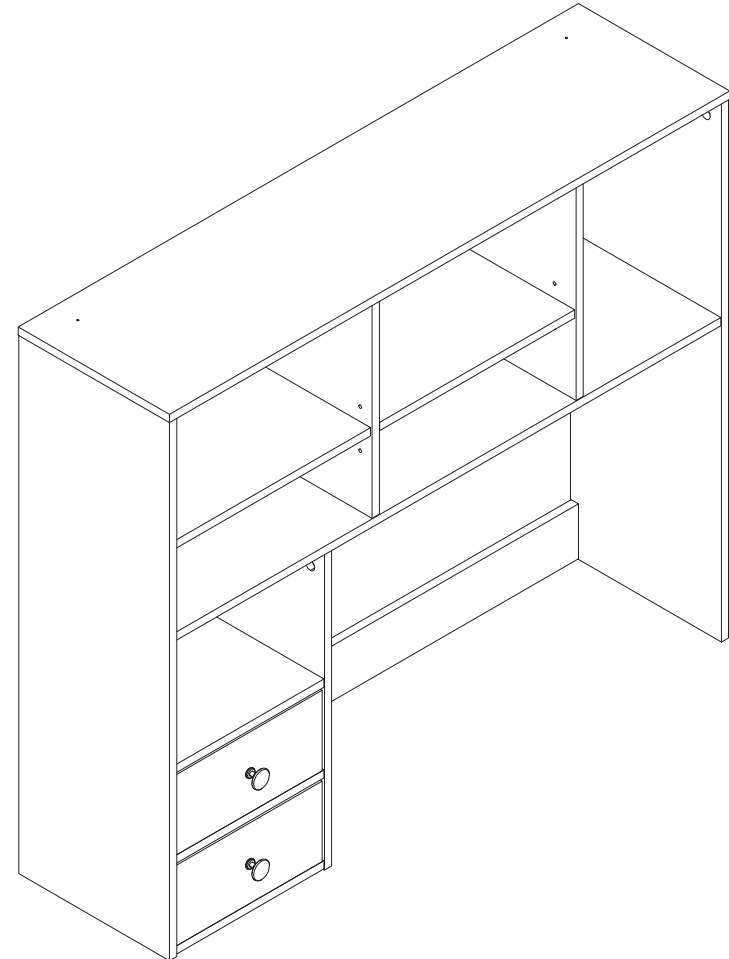




Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:



- Install Anti-tip device.
- Place heavier items in the lower drawer.
- Never let children climb or hang on drawers or shelves.
- Do NOT set heavy objects on top of this product.

EXPLODED DRAWING:

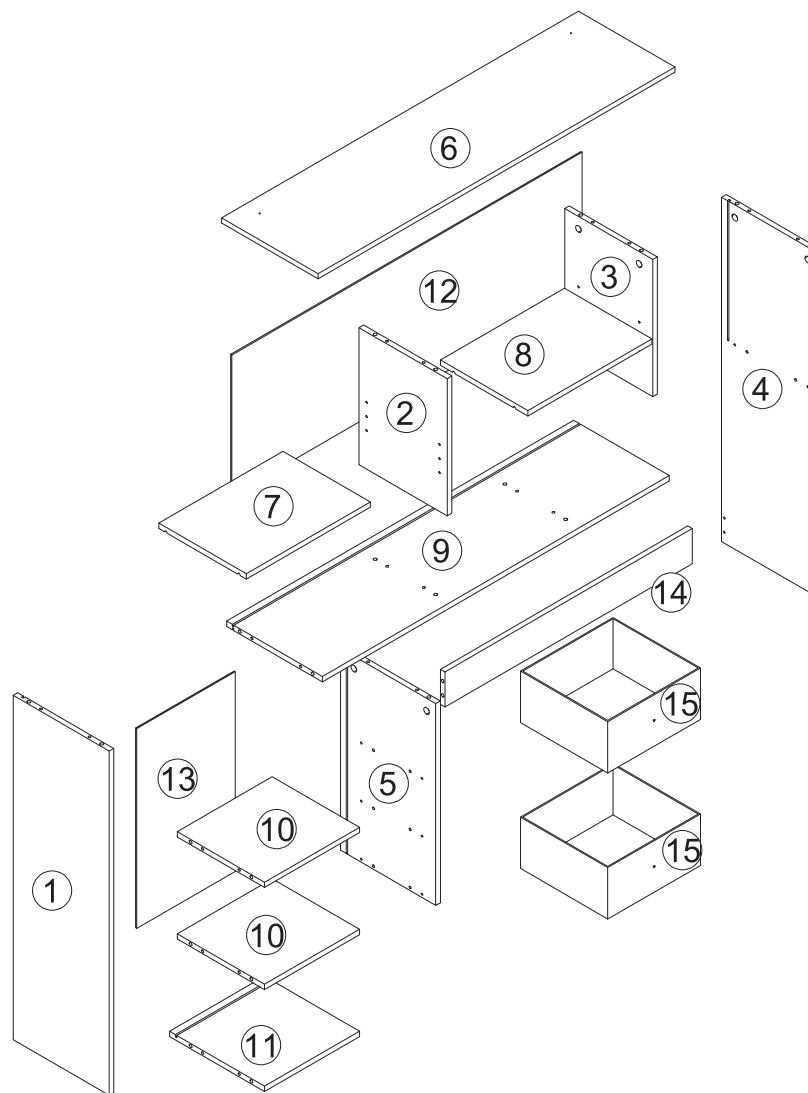

Please check all parts and accessories according to the parts list before assembling, make sure all contents are sufficient and in good condition. If there is any parts missing or defective, please contact us immediately with purchase platform message to get replacement parts.

PARTS:

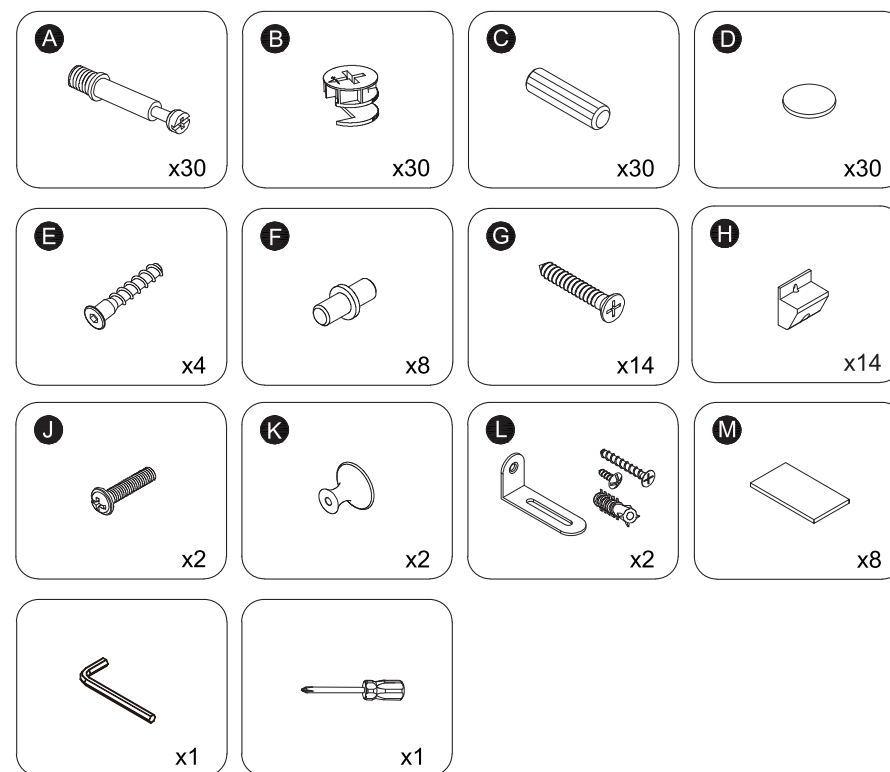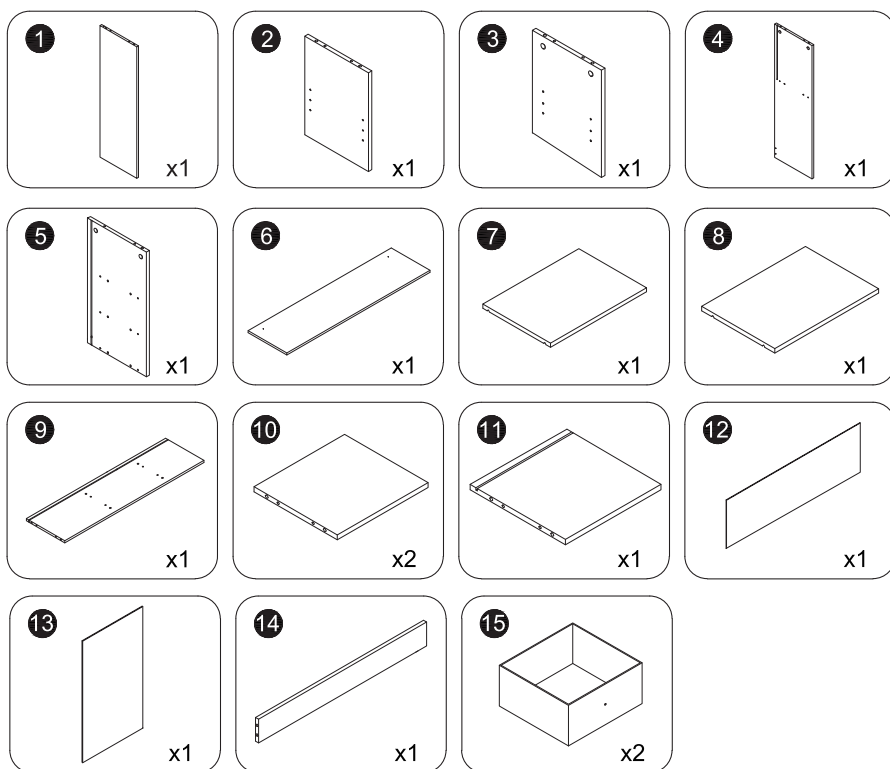


HOW TO INSTALL


NOTICE:

1. Use electric drill for easier installation experience.
2. Please drive the screws in pre-drilled holes.
3. Please strictly follow the instruction and diagram in every step.
4. Make sure every part is on the right position, otherwise it may cause unnecessary problem.
5. Select the proper component via the label on every part while assembling.

REMARK:


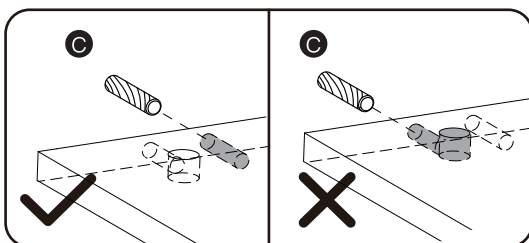


Avoid inserting part C into wrong holes.


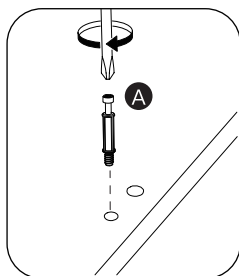


Part A must be installed strictly into the correct hole as shown in the diagram.



When locking part B, please make sure part A is fully inserted.

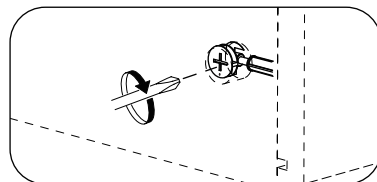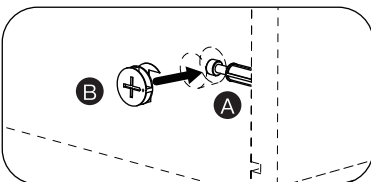



Step 1 Install part A on part 1 & 4 & 9.

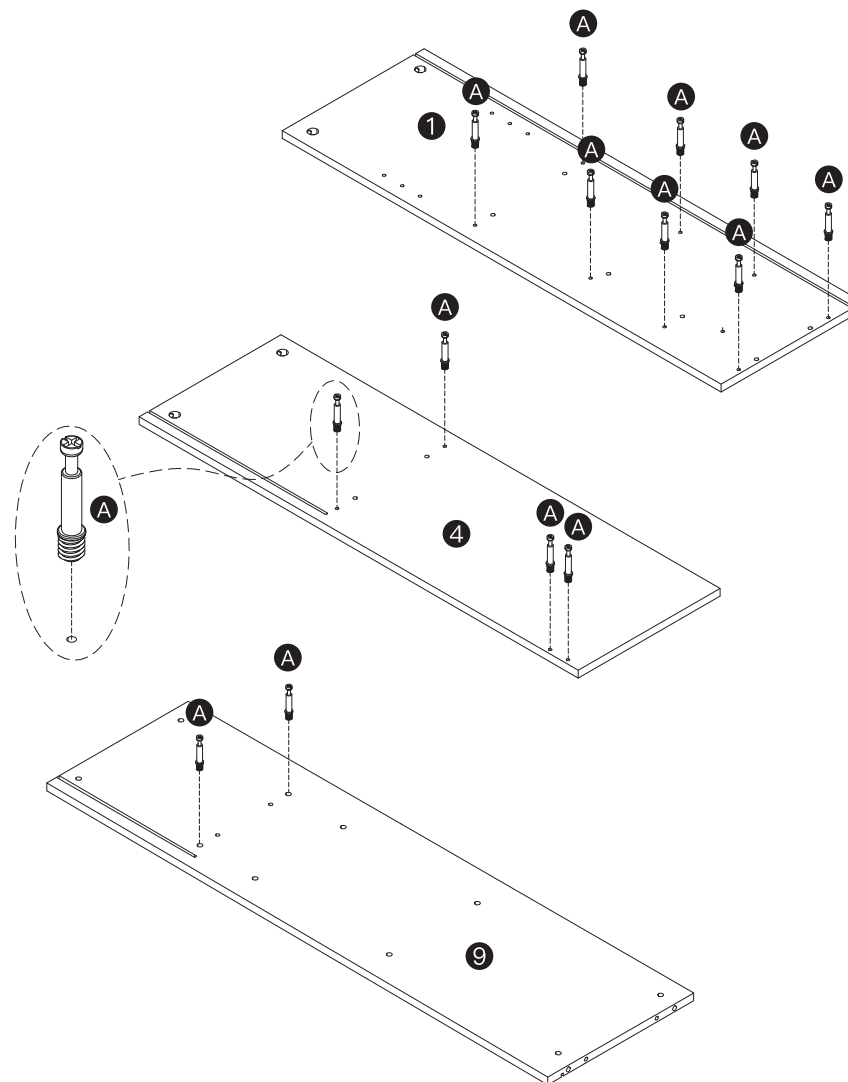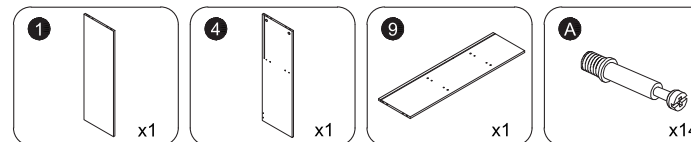

Step 2 Install part **A** on part **5** & **6**.


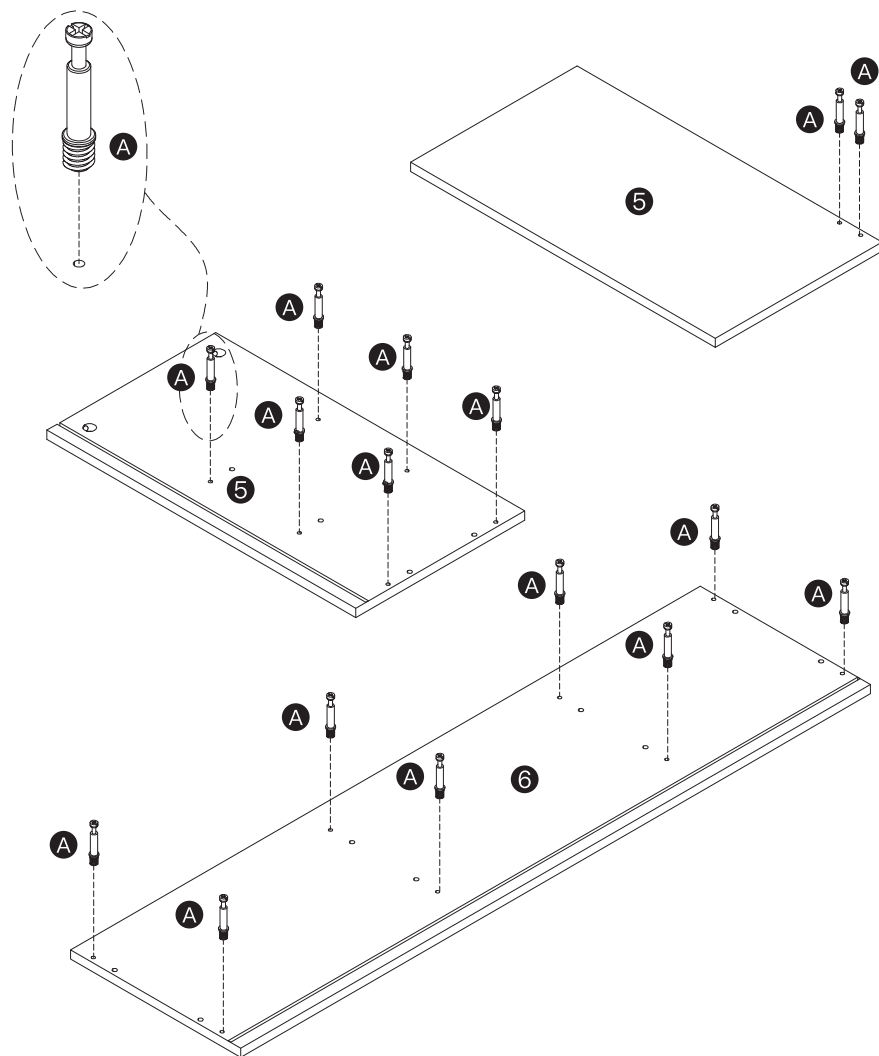
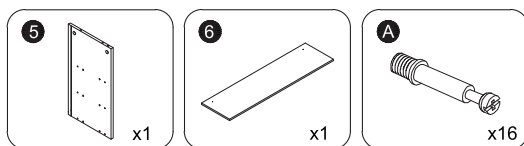


Step 3 Install part **2** & **3** on part **9**, use part **C** & **E** to lock them.

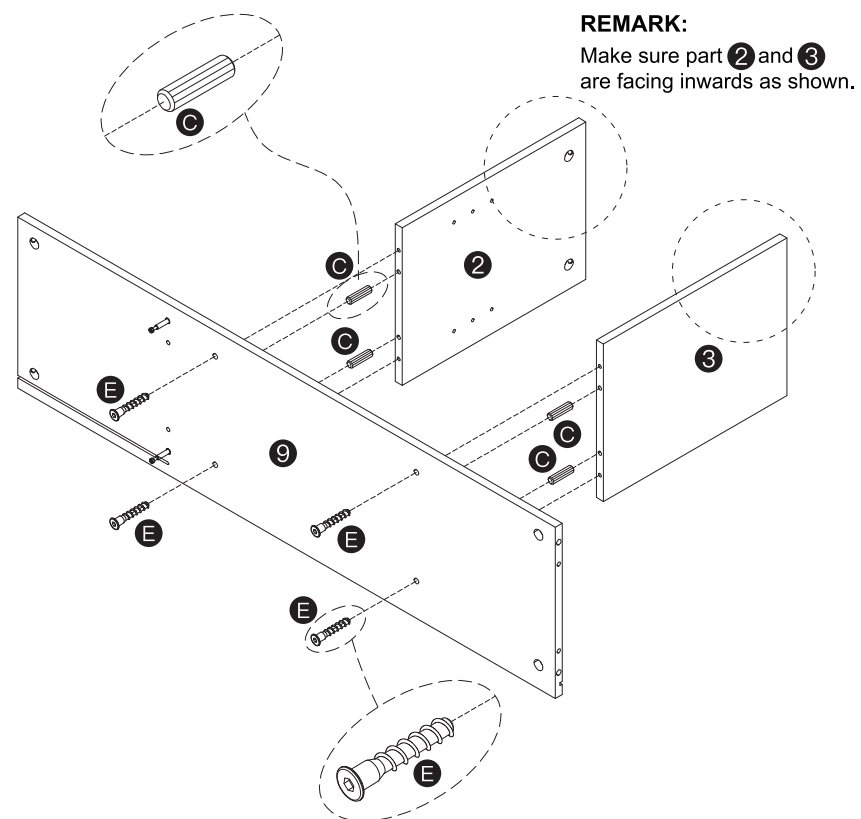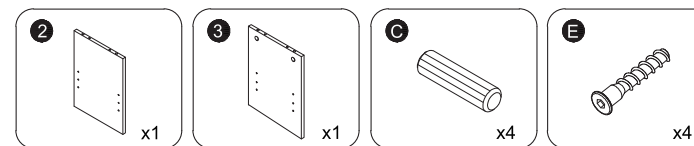

Step 4



Install part 10 & 11 on part 5, use part B & C to lock them.

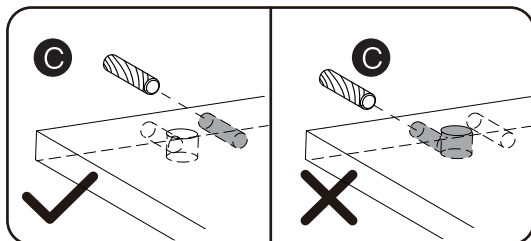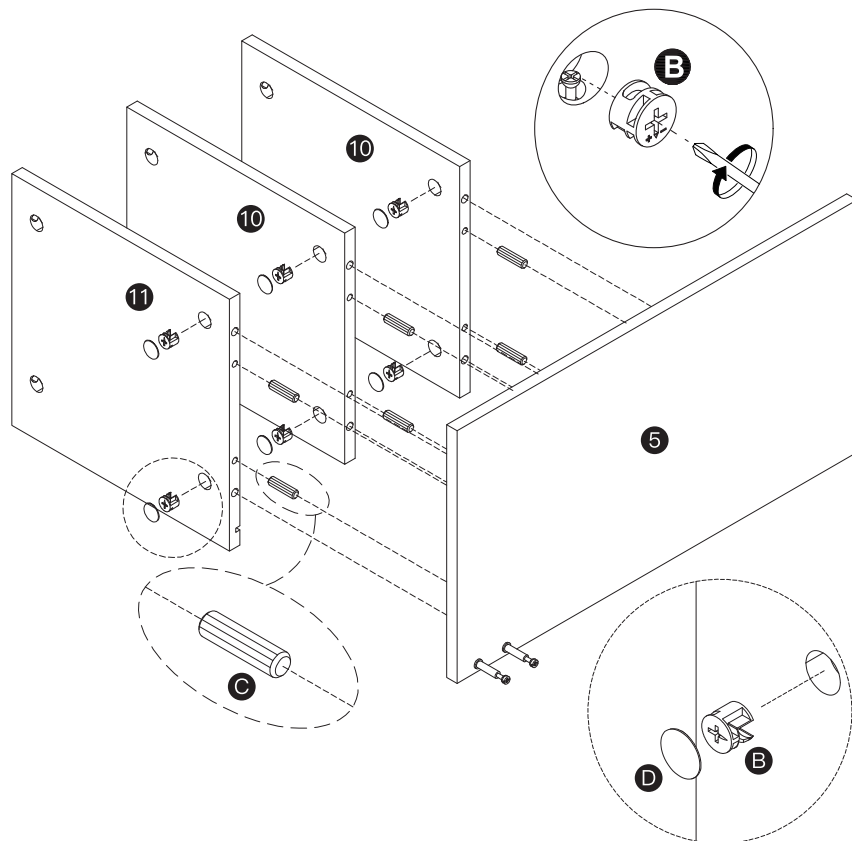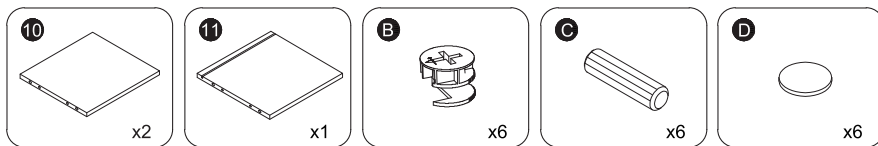


REMARK:
Use part D to cover part B.

Step 5




Install part 5 on part 9, use part B & C to lock them.

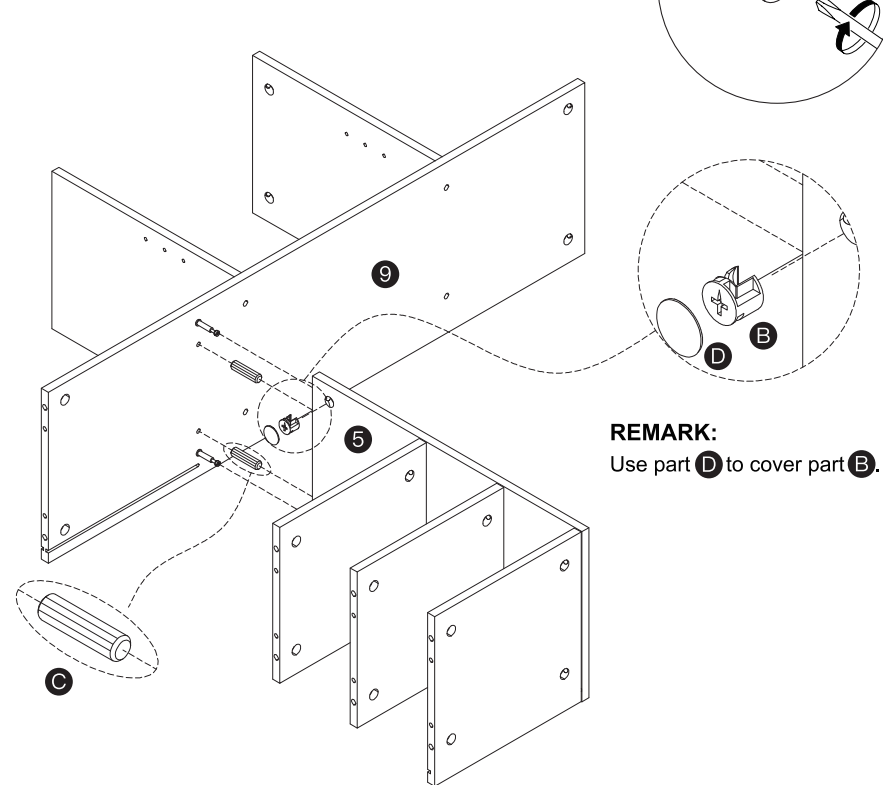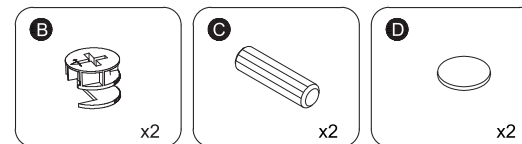

REMARK:
Use part D to cover part B.


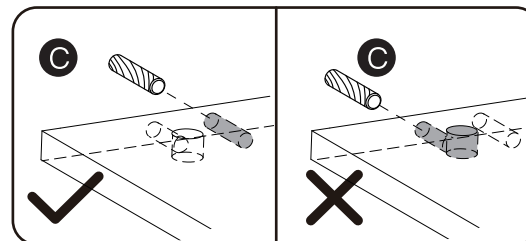


Step 6 Install part 14 on part 5, use part B to lock them.

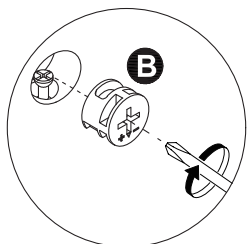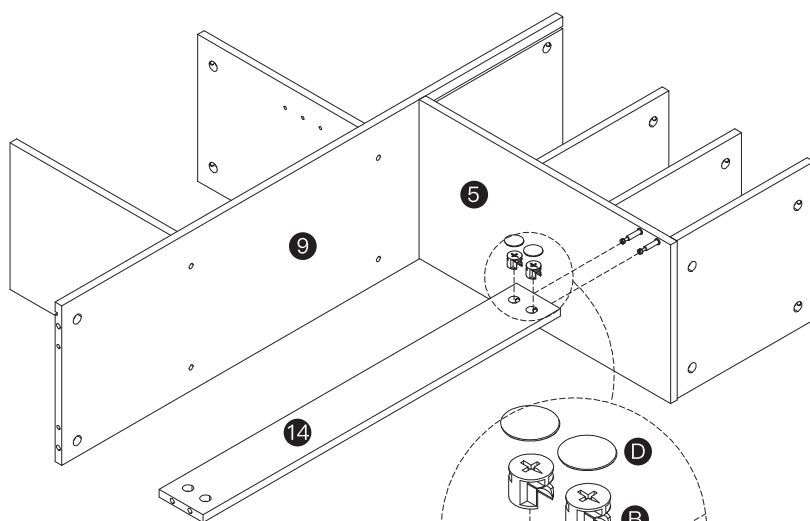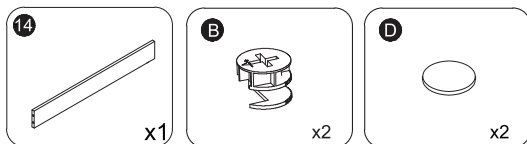


REMARK:
Use part D to cover part B.



Step 7 Install part 4 on part 9 & 14, use part B & C to lock them.

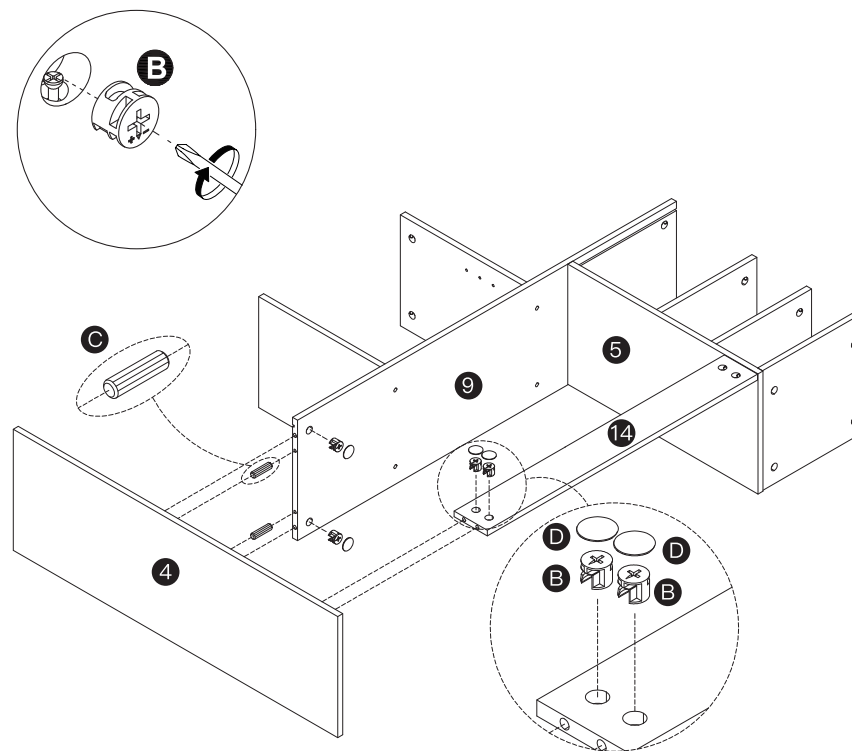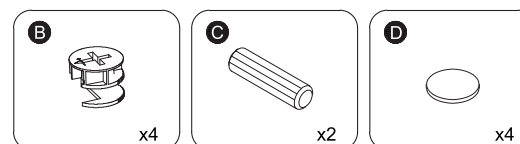




REMARK:
Use part D to cover part B.

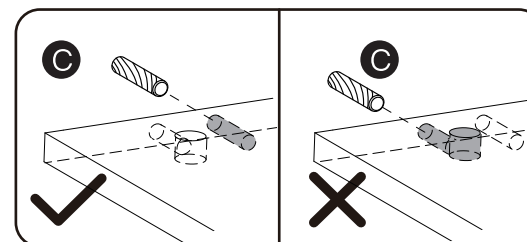




Step 8 Insert part 13 along the rabbets of part 9 & 11.

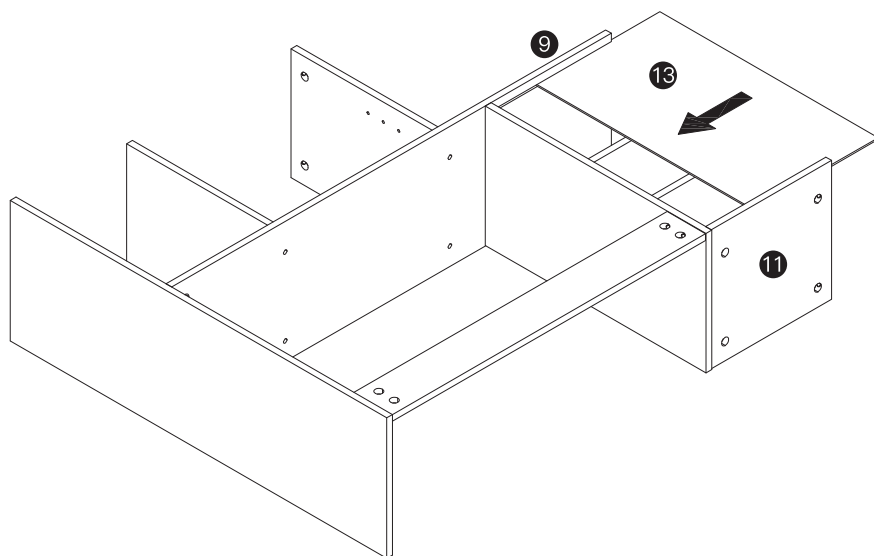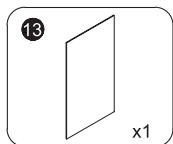



Step 9 Install part 1 on part 9 & 11, use part B & C to lock them.

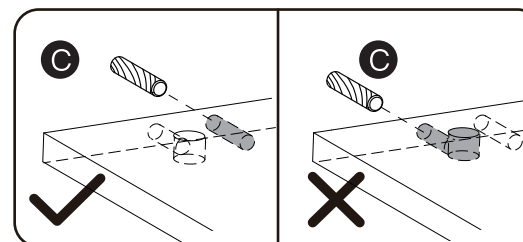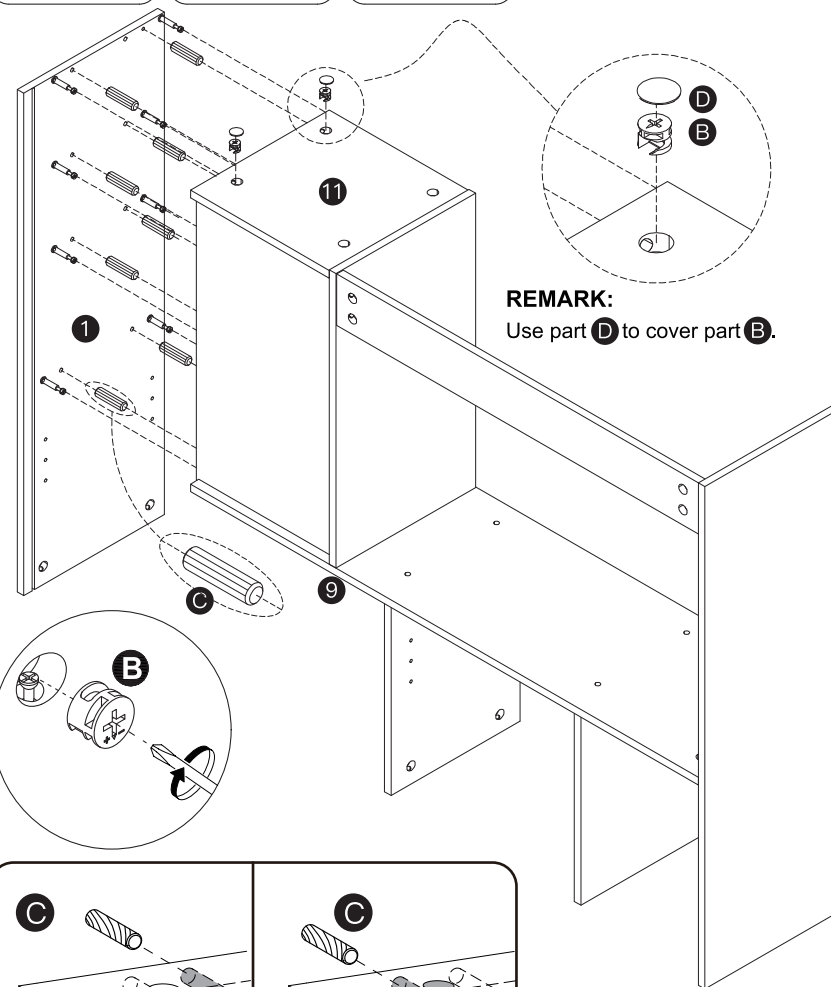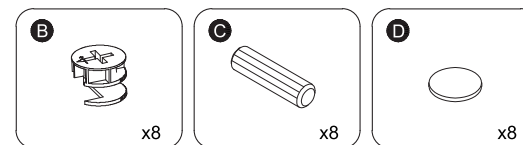

Step 10 Stick part **M** on part **1** & **4** & **5** & **14**.

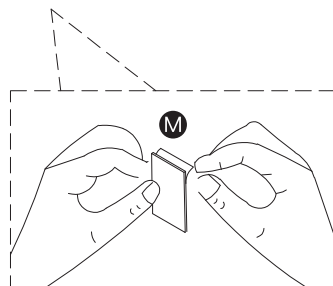
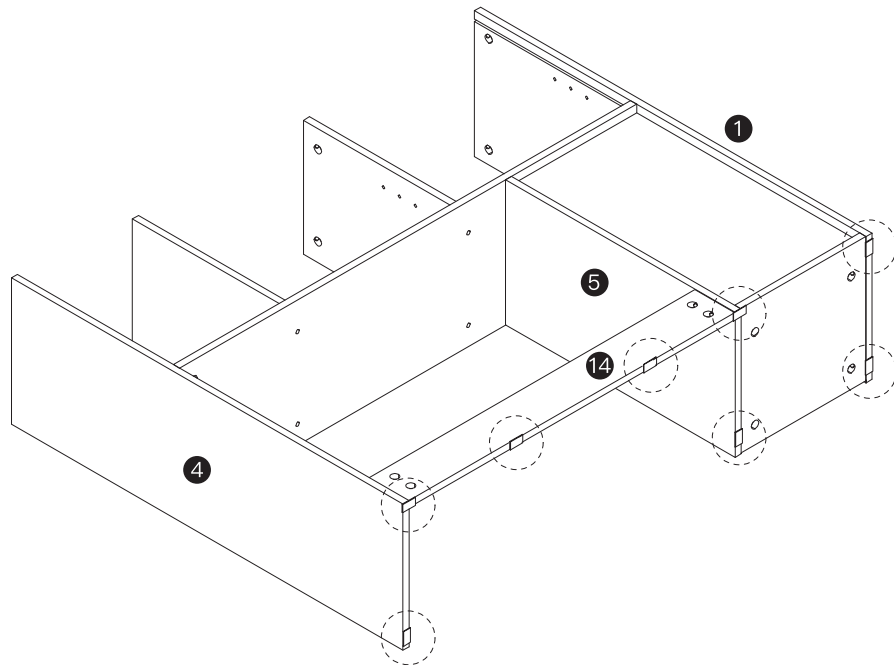
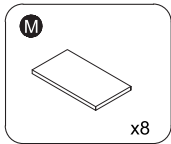


Step 11 Insert part **12** along the rabbets of part **1** & **4**.

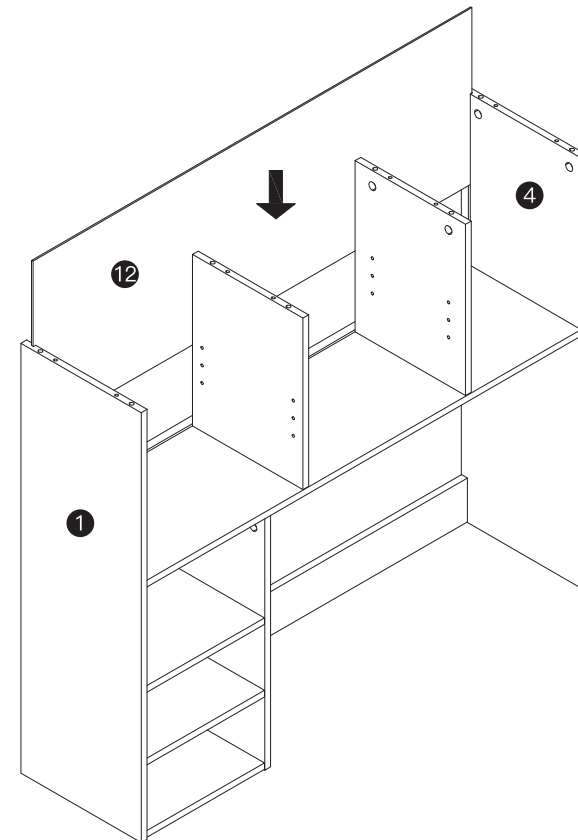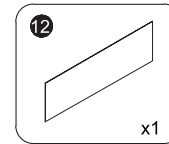



Step 12

Install part 6 on part 1 & 2 & 3 & 4, use part B & C to lock them.

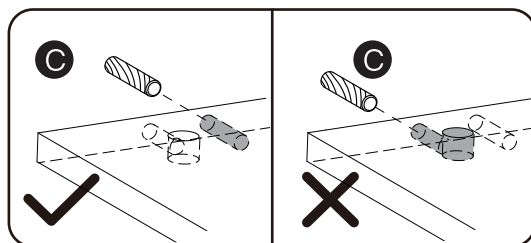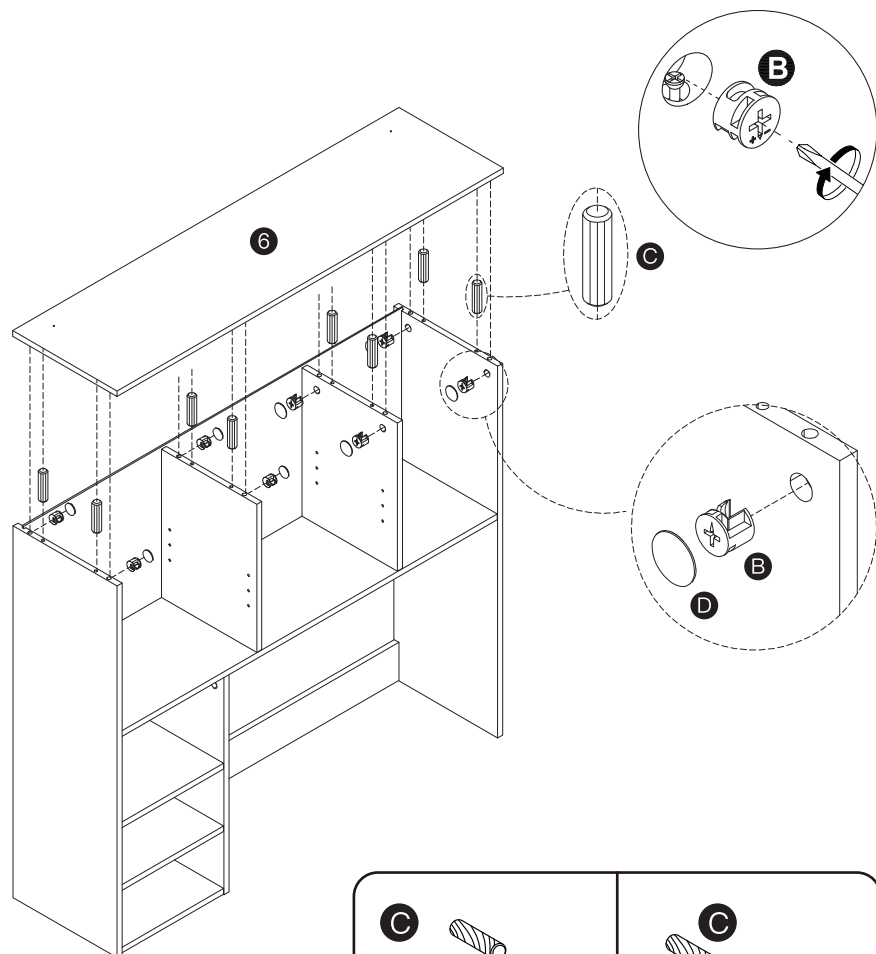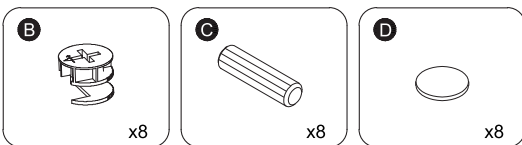

Step 13

Install part F on part 1 & 2 & 3.

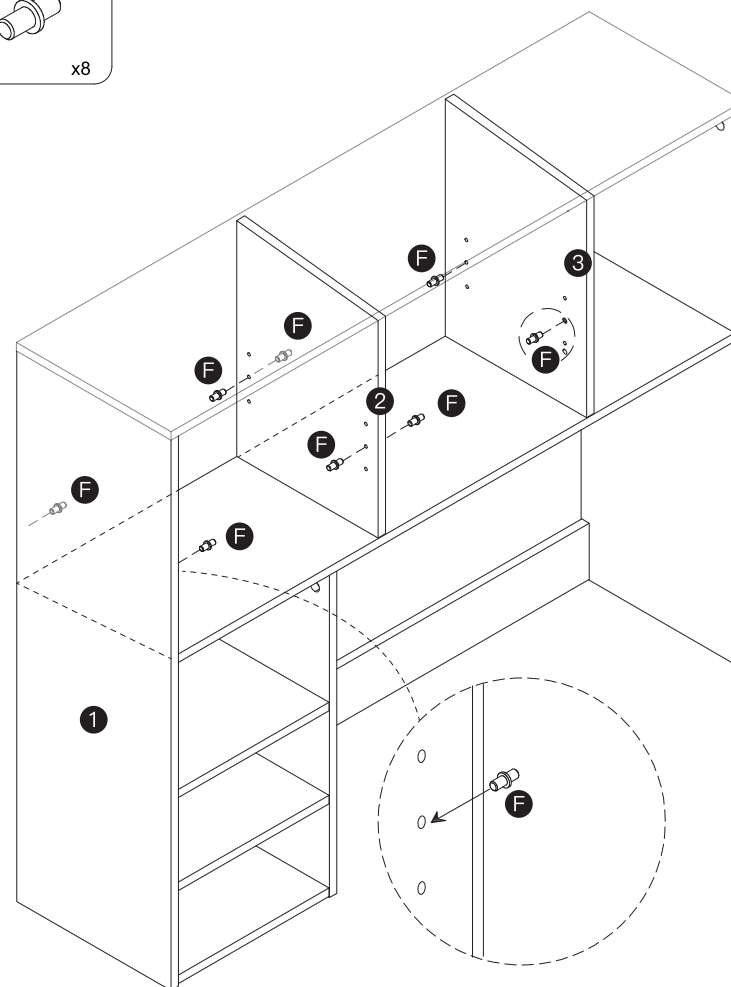
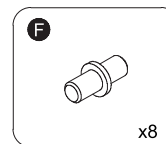


NOTICE:



(1) The height of the laminated board can be adjusted through the holes installed in part F.

(2) Please ensure that part F are installed at the same height.

Step 14 Slide to install part ⑦ & ⑧.




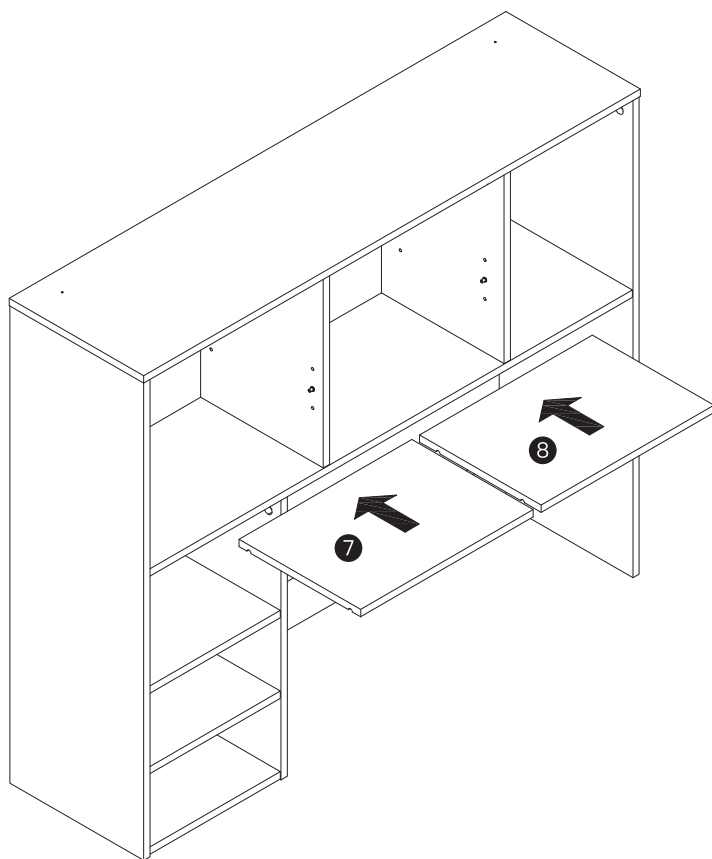
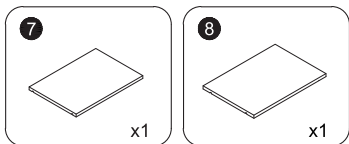


Step 15 Insert part ④ along the grooves of backboard, screw them with part ⑤ for better stability.

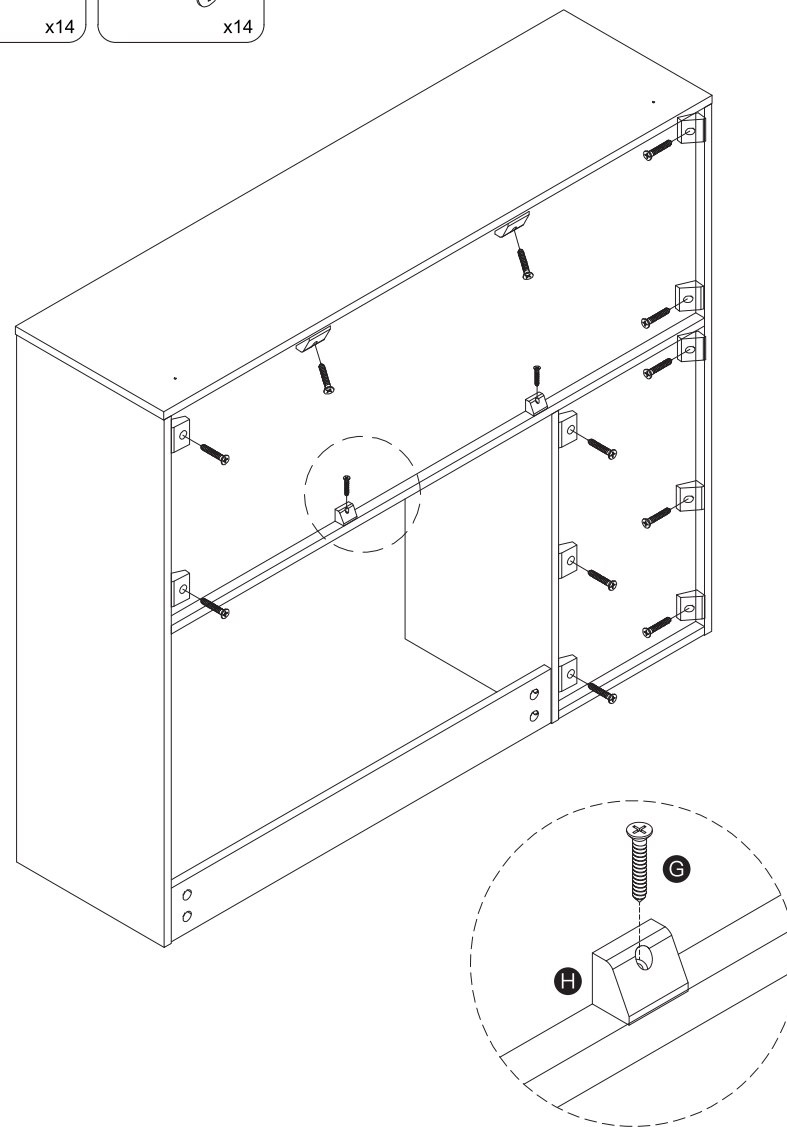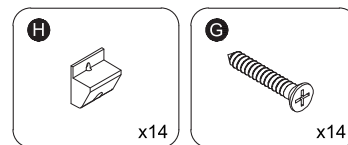

Step 16

Open the drawers and put support board inside, then install part **K** on the drawer with part **J**.

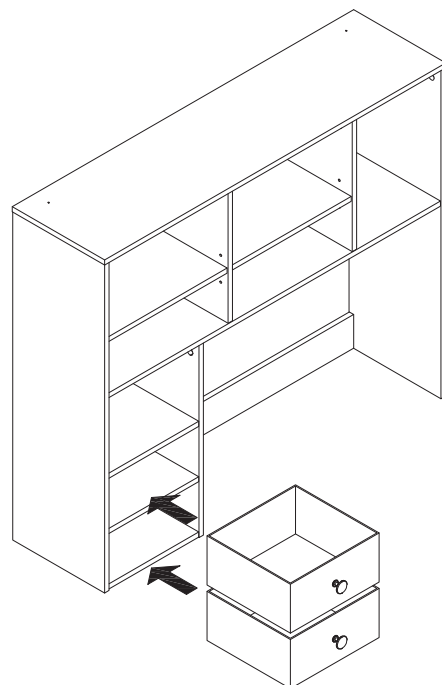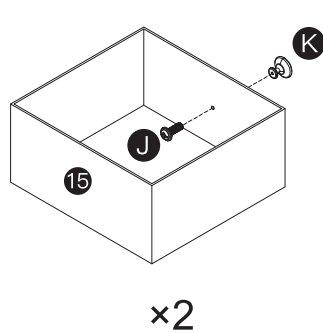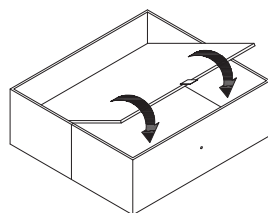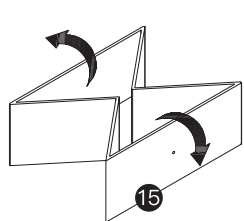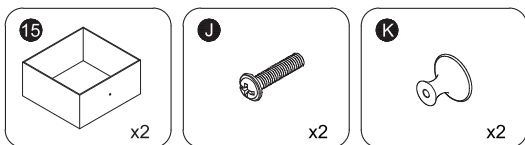

Step 17

(Optional) Install Anti-Tip Device as shown below.

