

WORKBENCH

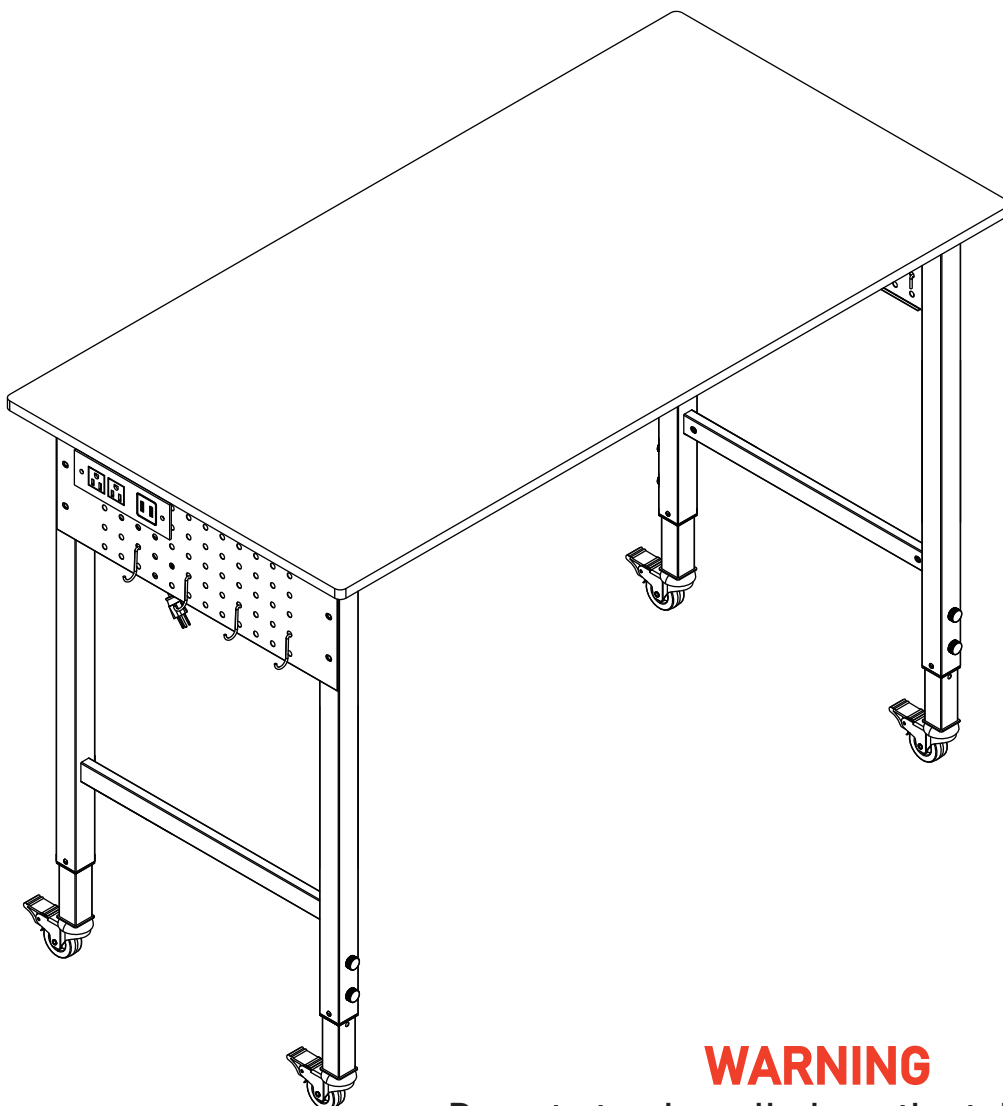
Assembly Instructions



SKU:DSN111KW301A








Follow our assembly video




Pre-tighten all screws first, then fully lock them tight.



WARNING

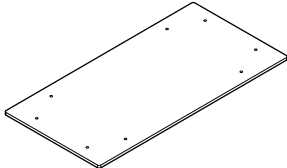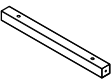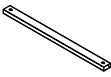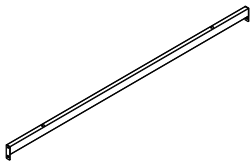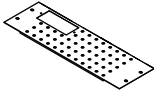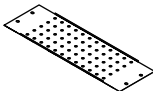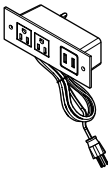
- Do not stand or climb on the tabletop
- Maximum Rated Load: 500 lbs (227 kg). Do not exceed the rated load capacity.
- Distribute loads evenly on the tabletop; avoid concentrated heavy objects.
- Keep children away from the workbench.

 ① x1	 ② x2	 ③ x 2
 ④ x4	 ⑤ x2	 ⑥ x2
 ⑦ x2	 ⑧ x1	 ⑨ x1
 ⑩ x1	 ⑪ x8	

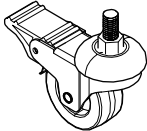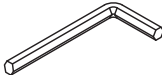 A x16 M6x10mm	 B x6 M6x50mm	 Cx8 M6x60mm
 D x4 M6x70mm	 E x2 M4x6	 Fx8 M6
 G x4 2.5"	 H x1 M4	

 CAUTION

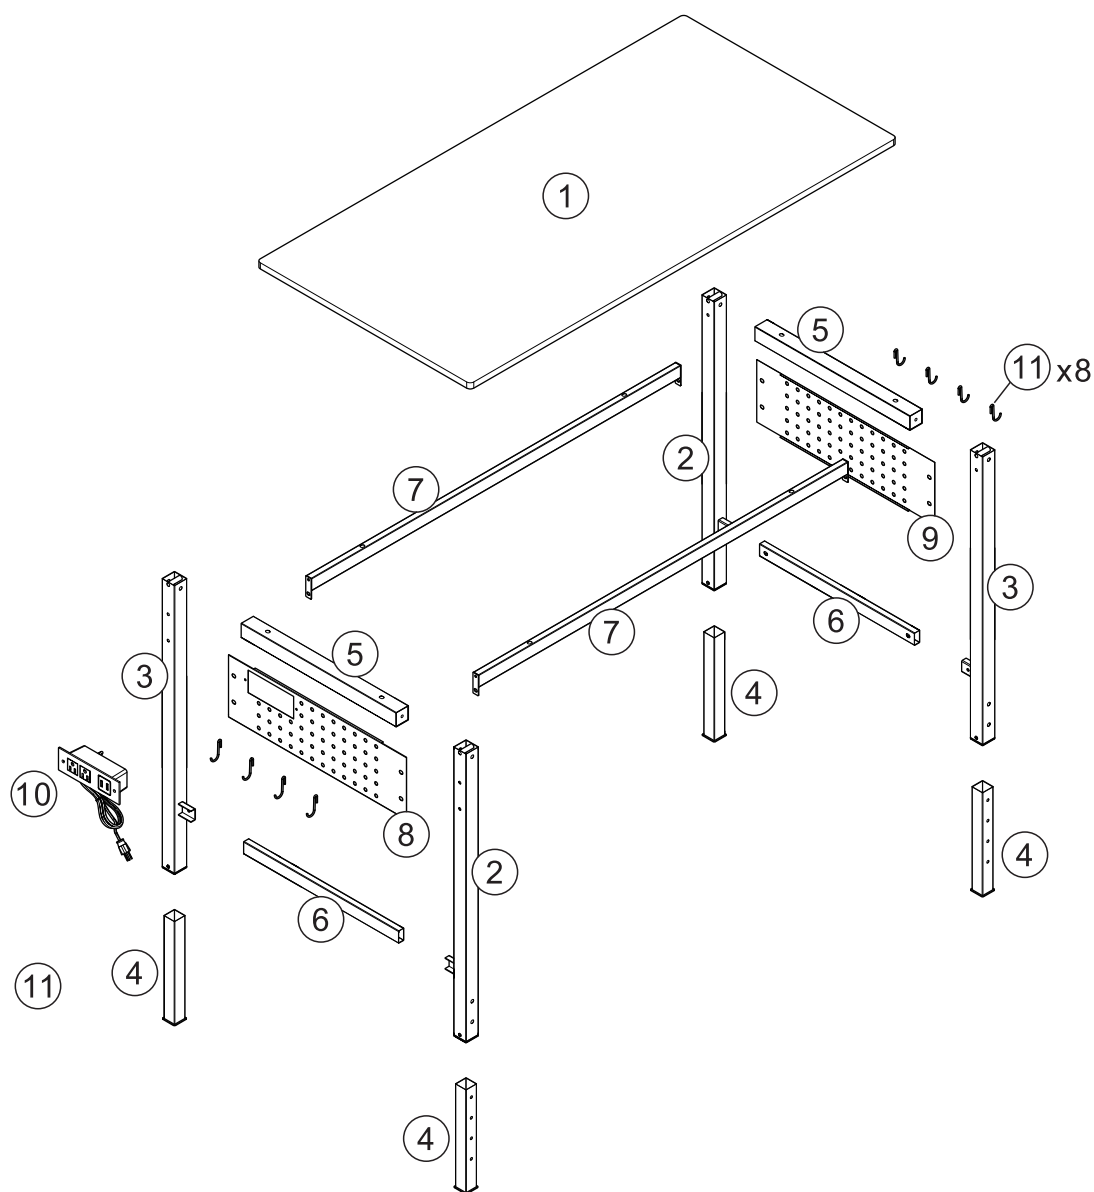Two people are
recommended for installation.




CAUTION

Please confirm the orientation and hole position of each component to prevent misassembly.

Step 1

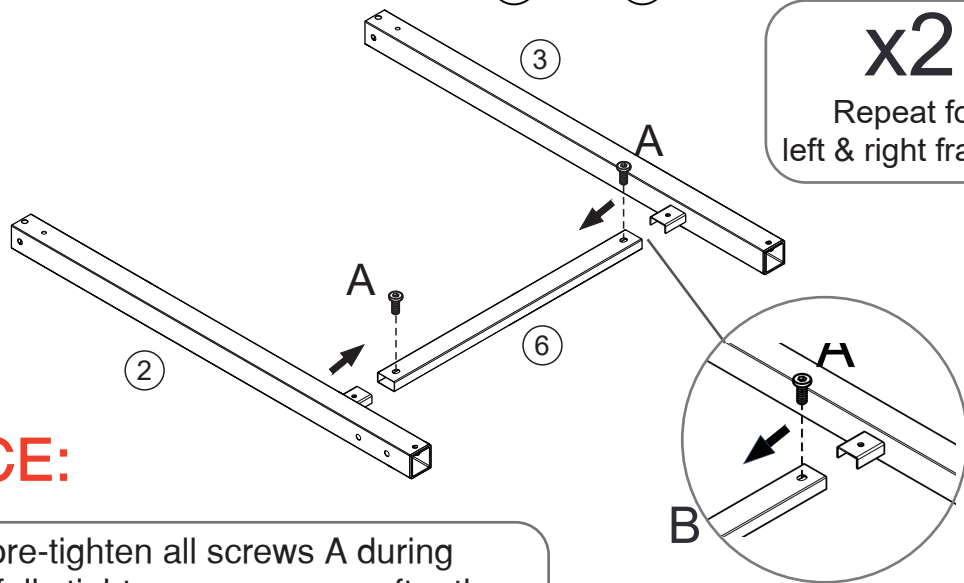Use screws A to connect the lower horizontal tube ⑥ of the side frame to columns ② and ③.



x2

Repeat for
left & right frames.

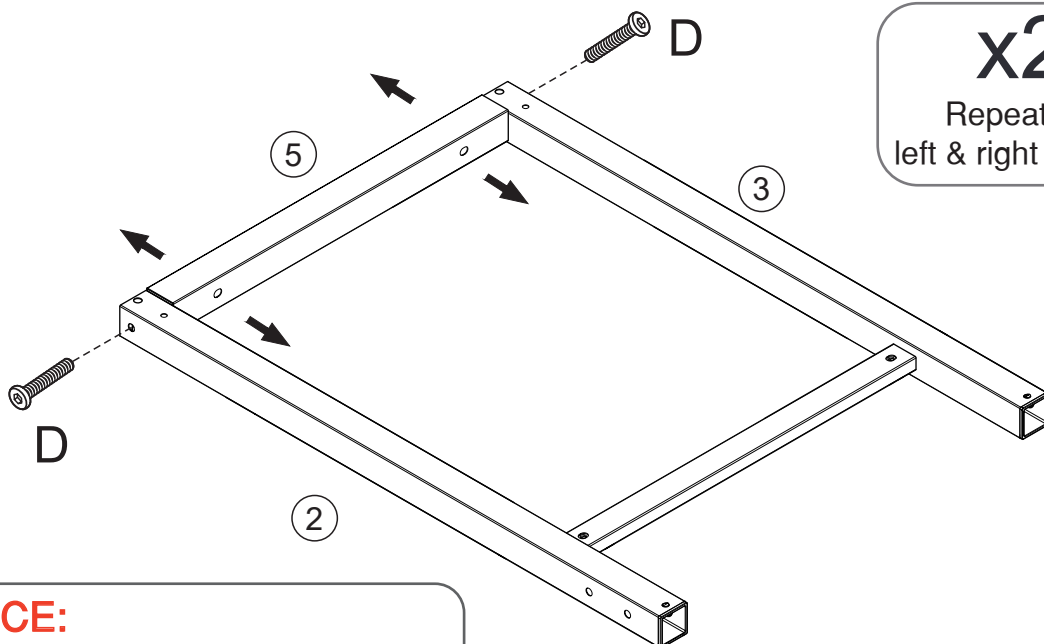
NOTICE:

1. Loosely pre-tighten all screws A during assembly; fully tighten every screw after the entire workbench is assembled.
2. Confirm the hole orientation of square tubes before installation to avoid misassembly.
3. This assembly step needs to be repeated for both left and right side frames (x2).

 A--M6x10--4 pcs

Step 2

Use screws D to connect the horizontal tube ⑤ on the side frame to columns ② and ③.



x2

Repeat for
left & right frames.

NOTICE:

Please check the mounting direction of the holes on the square tubes during assembly.

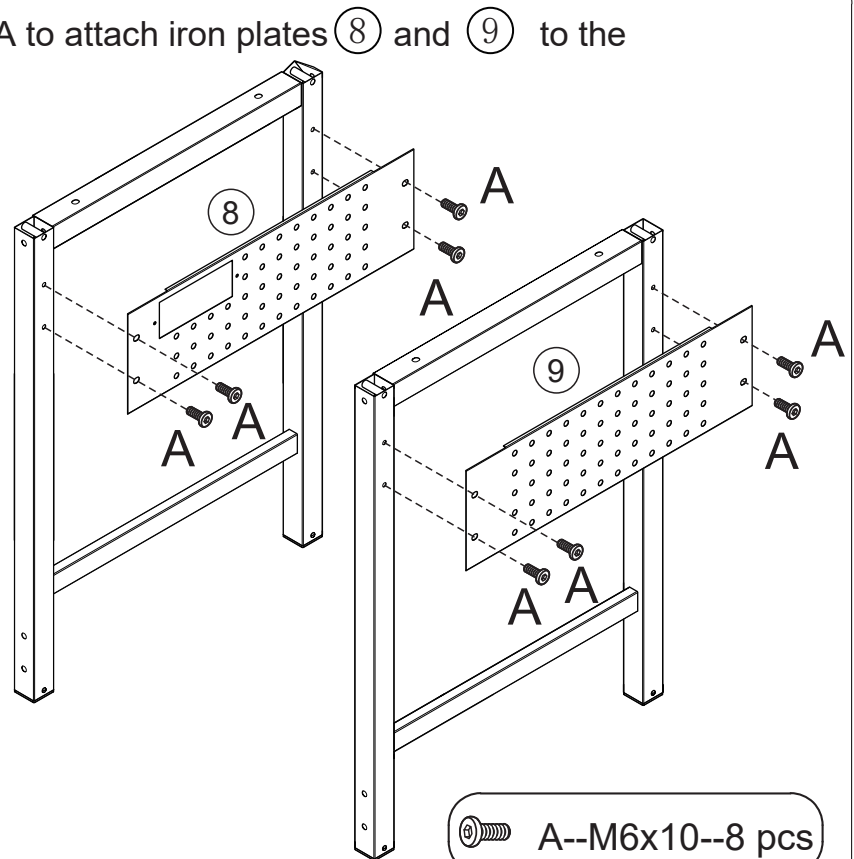
 D--M6x70--4 pcs

Step 3

Use screws A to attach iron plates ⑧ and ⑨ to the side frame.

NOTICE:

1. Only loosely pre-tighten screws A during this step; fully tighten all screws after completing the whole assembly.
2. Confirm the plate orientation: the socket reserved slot on plate ⑧ faces outward, and plate ⑨ is the plain hole panel on the opposite side.
3. Total 8 pcs of screw A are used for fixing both iron plates.




Step 4

Use adjustment knobs F to attach adjustment feet ④ to the side frame columns.

NOTICE:

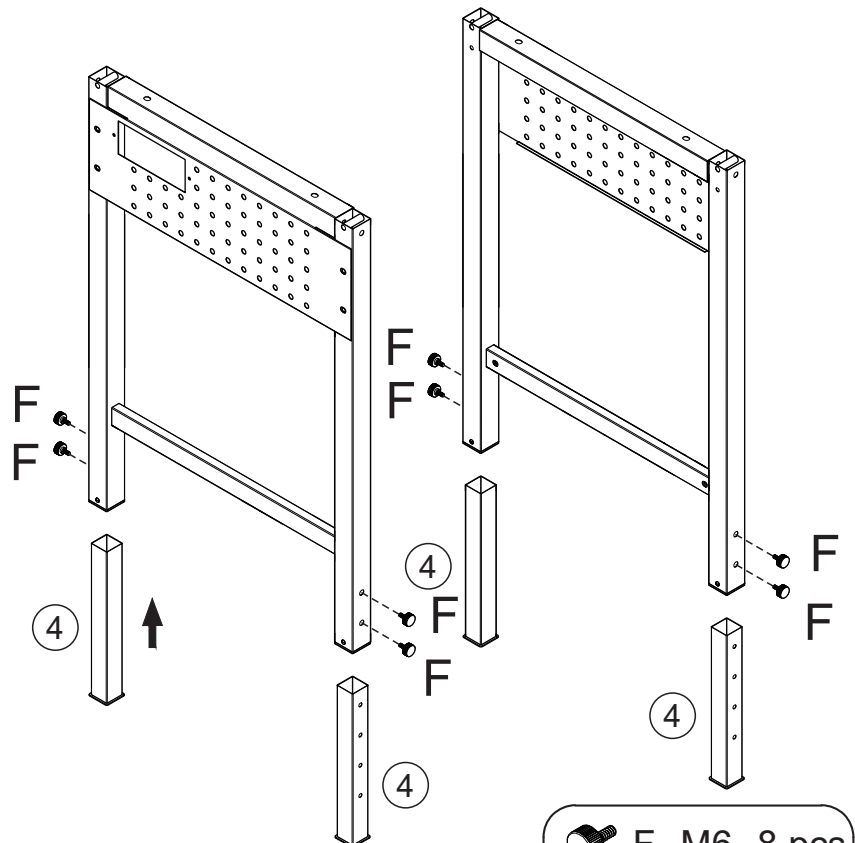
1. Turn knobs F clockwise to lock the height position after adjusting the workbench height.
2. Keep the 4 adjustment feet ④ at the same height to prevent the table from wobbling.
3. Do not over-tighten knobs F to avoid damaging the threaded columns.



Adjust them freely according to your required height.

Step 5

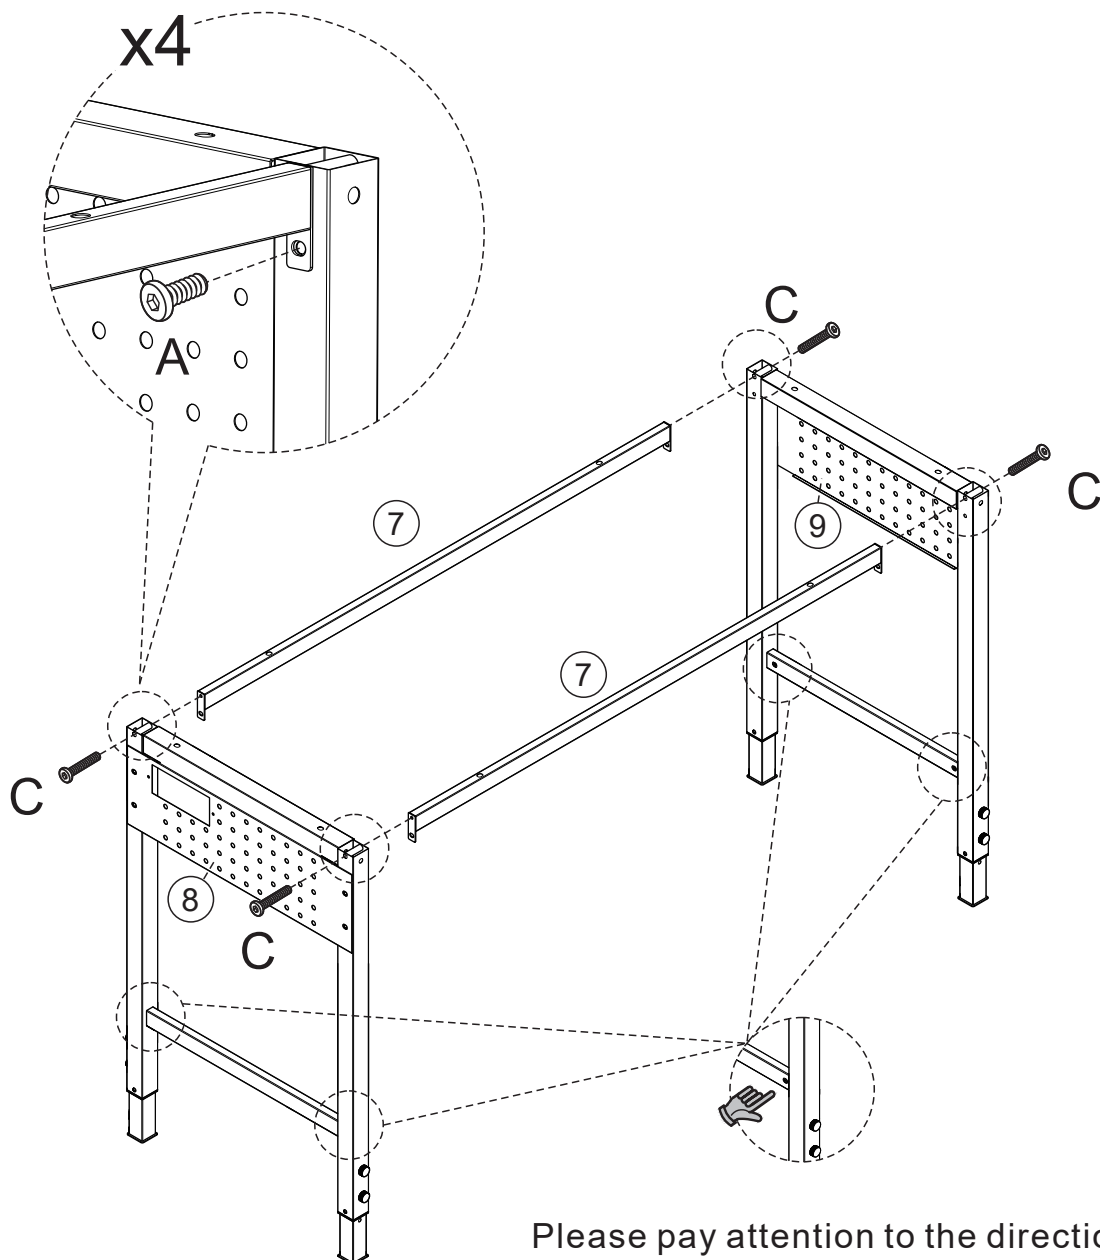Use screws A and C to connect connecting tubes ⑦ to the side frame.



Please pay attention to the direction of the side frame.

NOTICE:

1. Confirm the front/rear orientation of left & right side frames before assembly to avoid reverse installation.
2. Loosely pre-tighten screws A and C only at this stage; fully tighten all fasteners after finishing all assembly steps.
3. The assembly method shown in the enlarged circle needs to be applied to 4 mounting positions (marked ×4).
4. Align all tube holes accurately before inserting screws to prevent thread damage.

⑨ A--M6x10--4 pcs

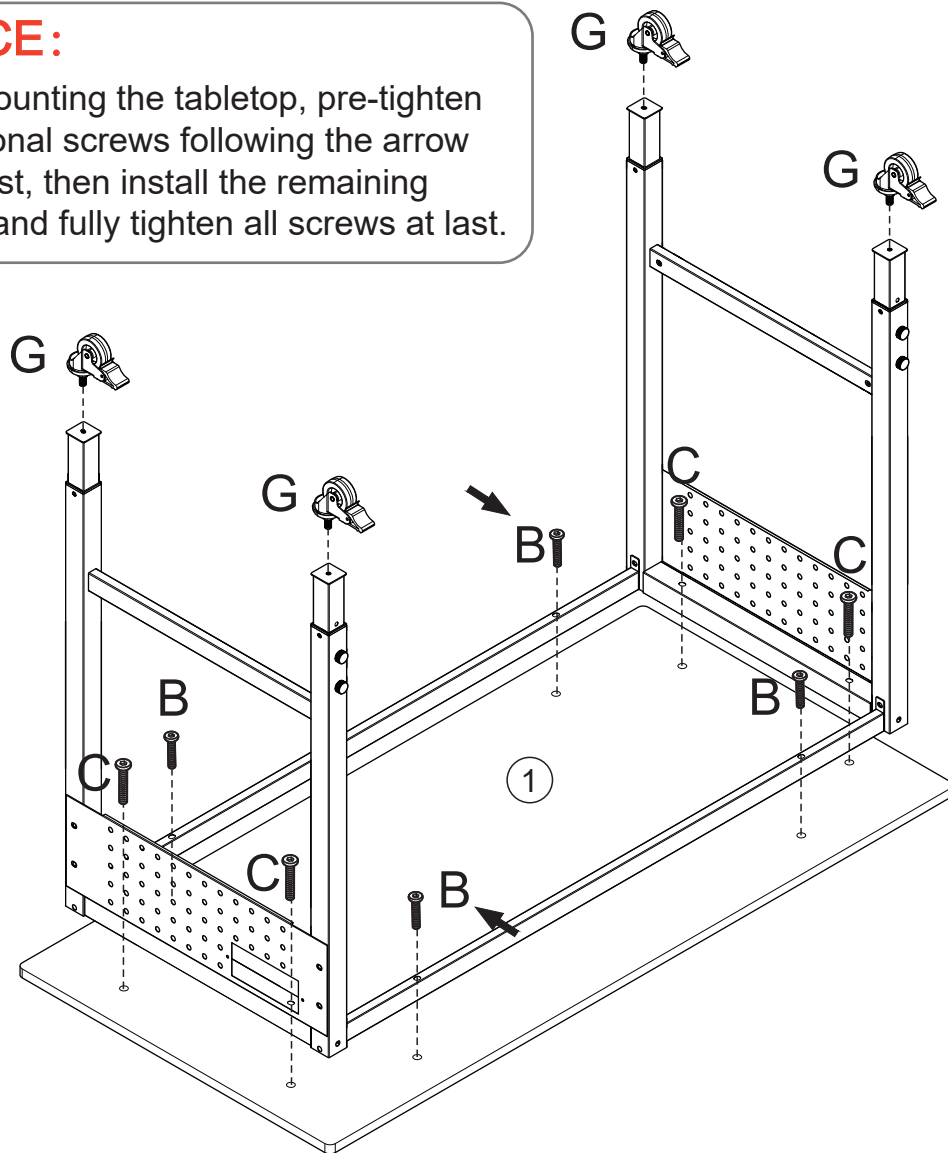
⑨ C--M6x60--4 pcs

Step 6

1. Use screws B and C to attach wooden board ① to the horizontal tubes ⑤ and connecting tubes ⑦ on the side frame.
2. Connect the casters G to the adjustment feet ④.

NOTICE:

When mounting the tabletop, pre-tighten the diagonal screws following the arrow marks first, then install the remaining screws, and fully tighten all screws at last.



NOTICE:

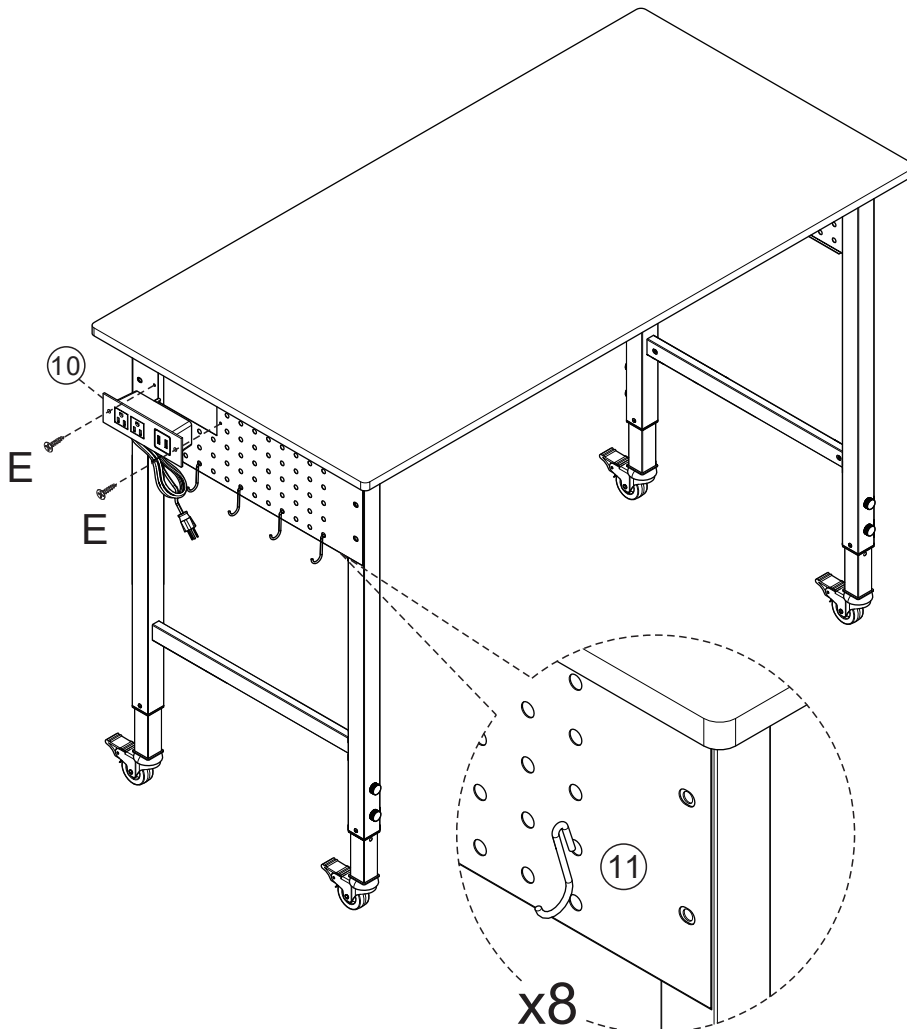
After assembling the casters and table legs, double-check that the threaded parts of the casters are all fully screwed in and tightened.

 B--M6x50--4 pcs

 C--M6x60--4 pcs

 G--2.5"--4 pcs

- ## Step 7
1. Connect the socket ⑩ to the iron plate ⑧ using screws E.
 2. Hang the hooks ⑪ on the iron plates ⑧ and ⑨ .



CAUTION

1. Fully tighten screws E to fix the power socket firmly to prevent it from falling loose during use.
2. The hooks (total 8 pcs) can be freely arranged on the hole panel as your storage needs.
3. Electrical safety warning: Unplug the socket when cleaning or moving the workbench; do not overload the power outlet.
4. All screws installed in previous steps should be double-checked and fully tightened at this final assembly step.

 E--ST4x6--2 pcs