


## Detail View - TWIN BED WITH TWO DRAWERS **(5) §5** ®

Identifying the Hardware - Indentify the hardware using the illustrations below.

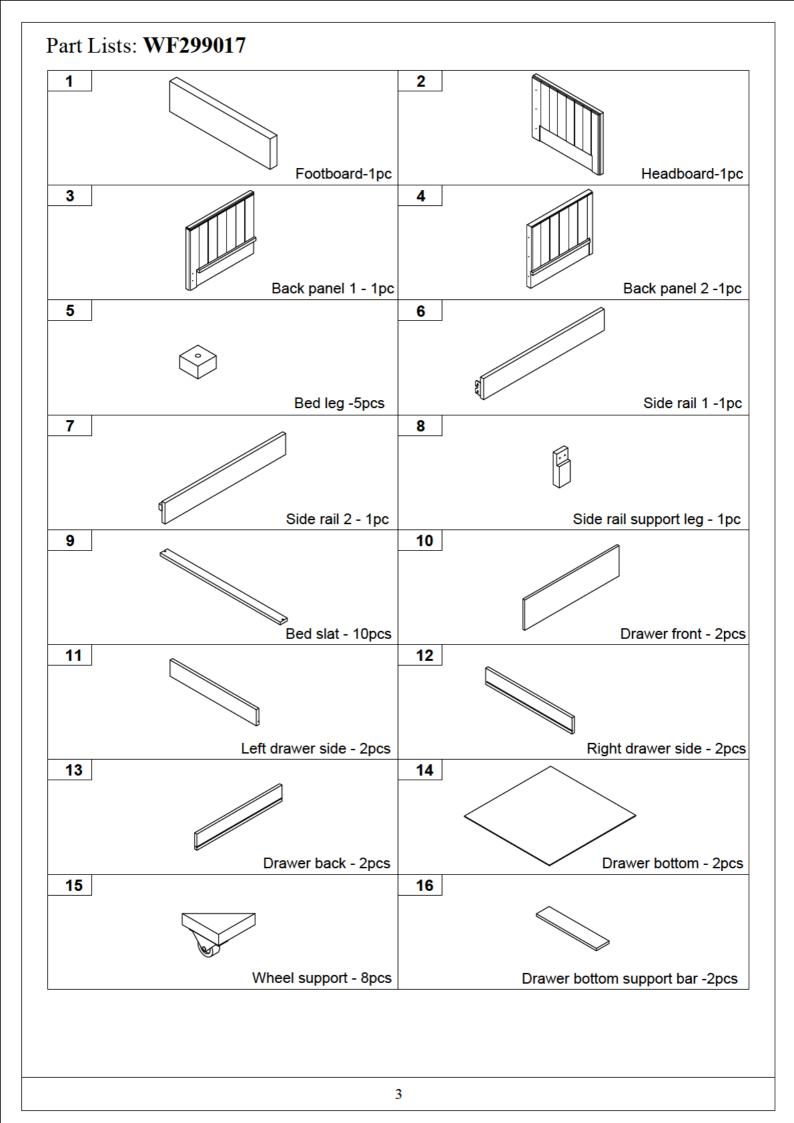

## HARDWARE LISTS: WF299017


Α		В	
	4		Ø5/16" x 20mm
	4mm Allen key (1pc)		Hex-head bolt (4pcs)
С	/ then key (150)	D	Post Hoad Boil (1903)
	Ø5/16" x 30mm		Ø5/16" x 40mm
	Hex-head bolt (6pcs)		Hex-head bolt (5pcs)
E		F	(o)
	Ø5/16"		Ø5/16"
	Spring washer (15pcs)		Flat washer(15pcs)
G		Н	
	Ø5/16" x 70mm		
	Hanger bolt (2pcs)		Half moon (2pcs)
1	Ø5/16"	J	2
	Nut (2pcs)		Wrench (1pc)
K	Ø1/4" x 30mm	L	Ø1/4" x 50mm
	Hex-head bolt (2pcs)		Hex-head bolt (8pcs)
M	Ø1/4"	N	Ø1/4"
	Barrel nut (8pcs)		Spring washer (10pcs)
Q	Ø1/4"	R	Ø4 x 30mm
	Flat washer(10pcs)		Wood screw (44pcs)
S		T	AG)
Cam bolt (8pcs) Cam lock(8pcs)			
ASSEMBLY TOOLS DECUMPED ( NOT INCLUDED )			
ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )			


Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.


## **CAUTIONS:**


- 1. Do not FULLY TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
- 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
- 3. Keep all hardware parts out of reach of children.


NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

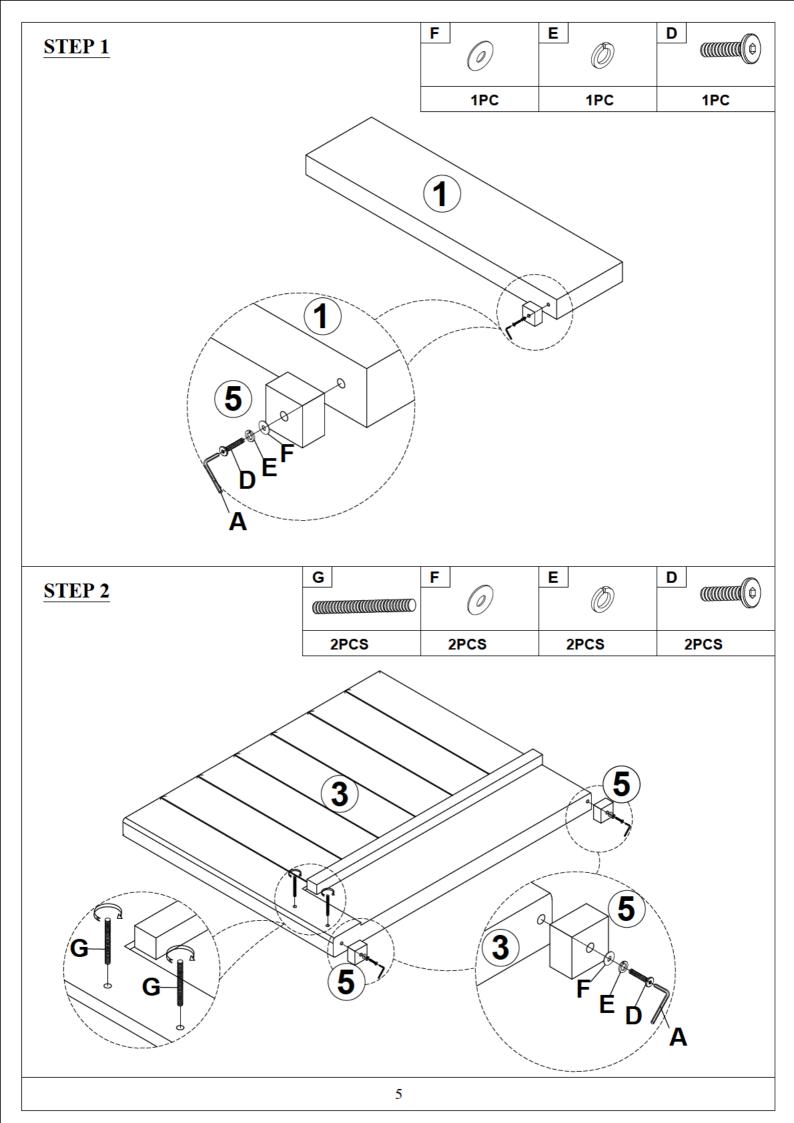


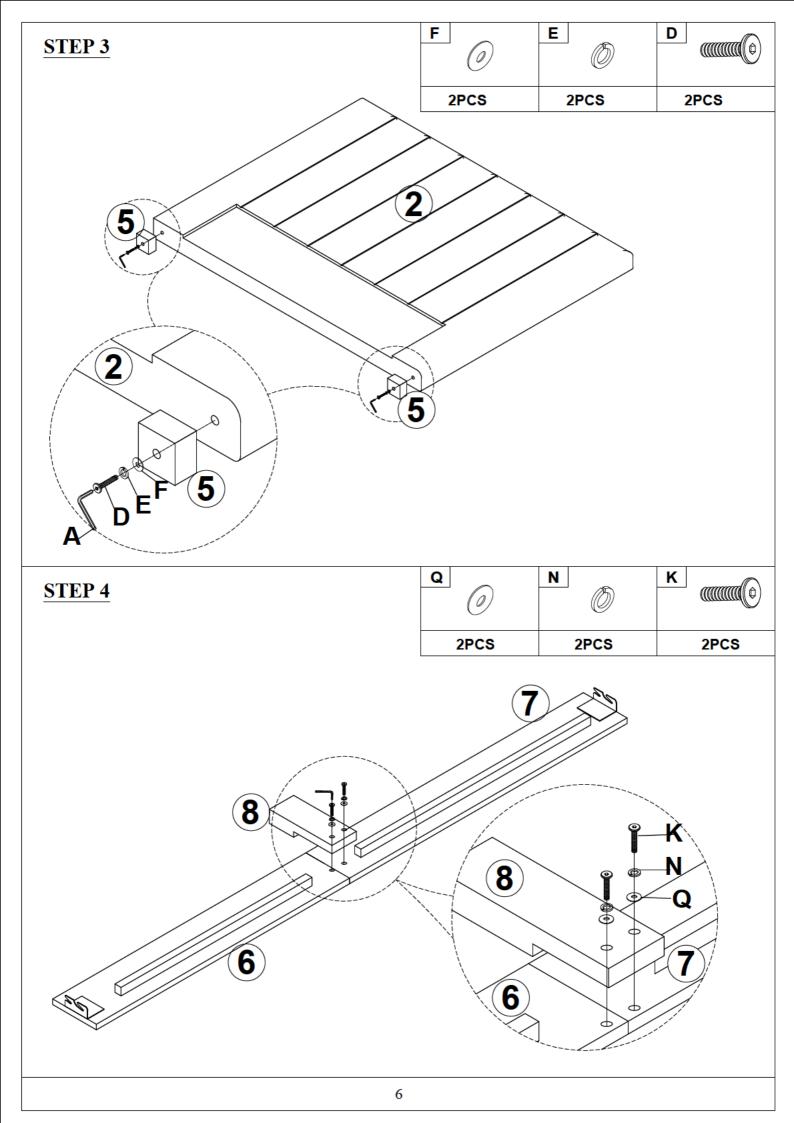


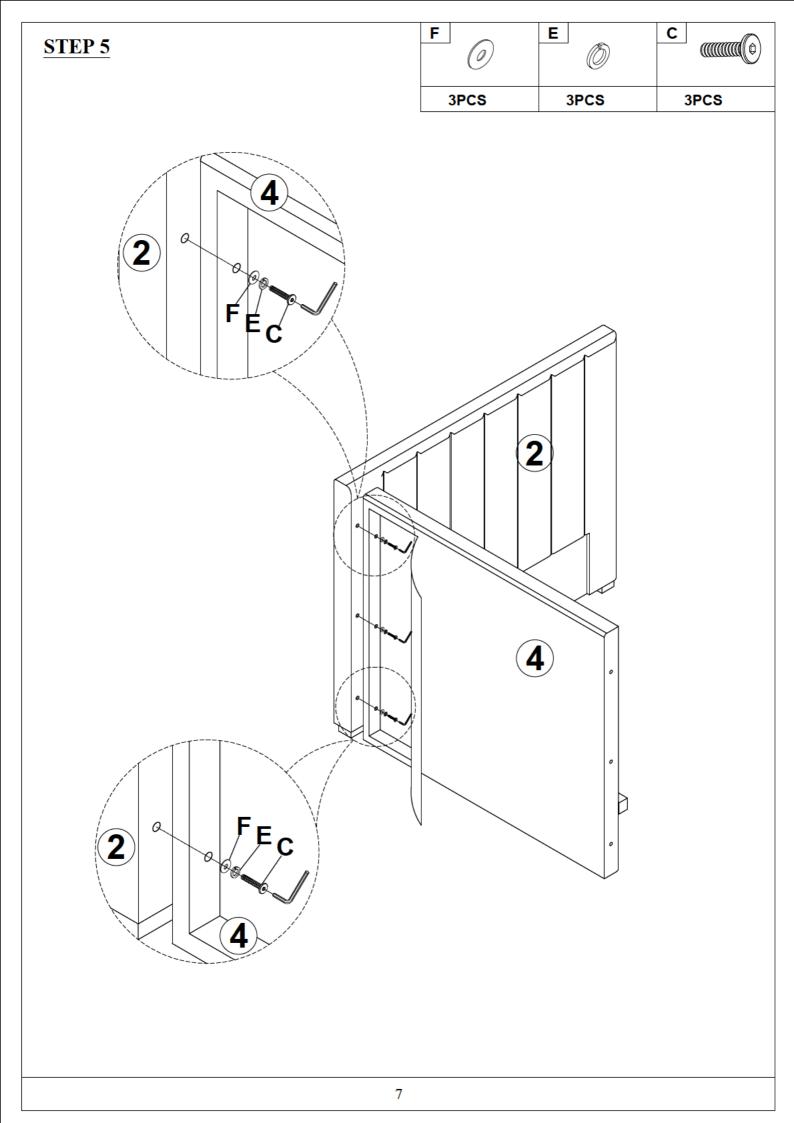


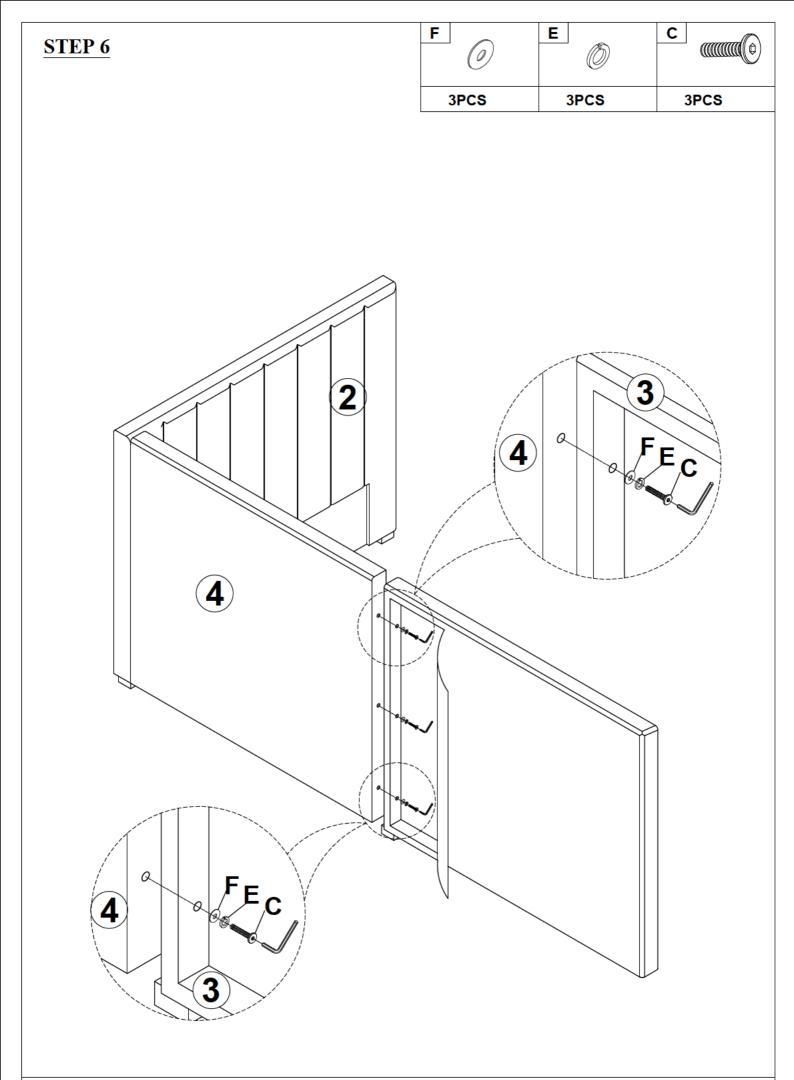


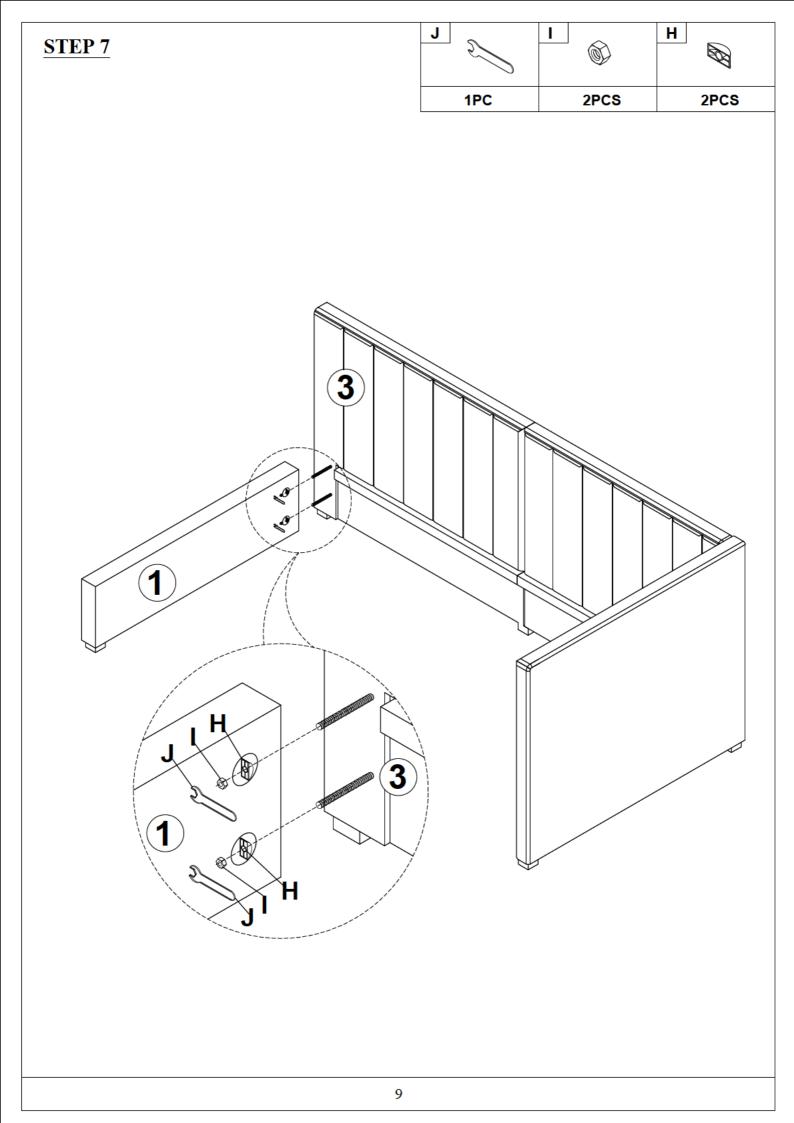

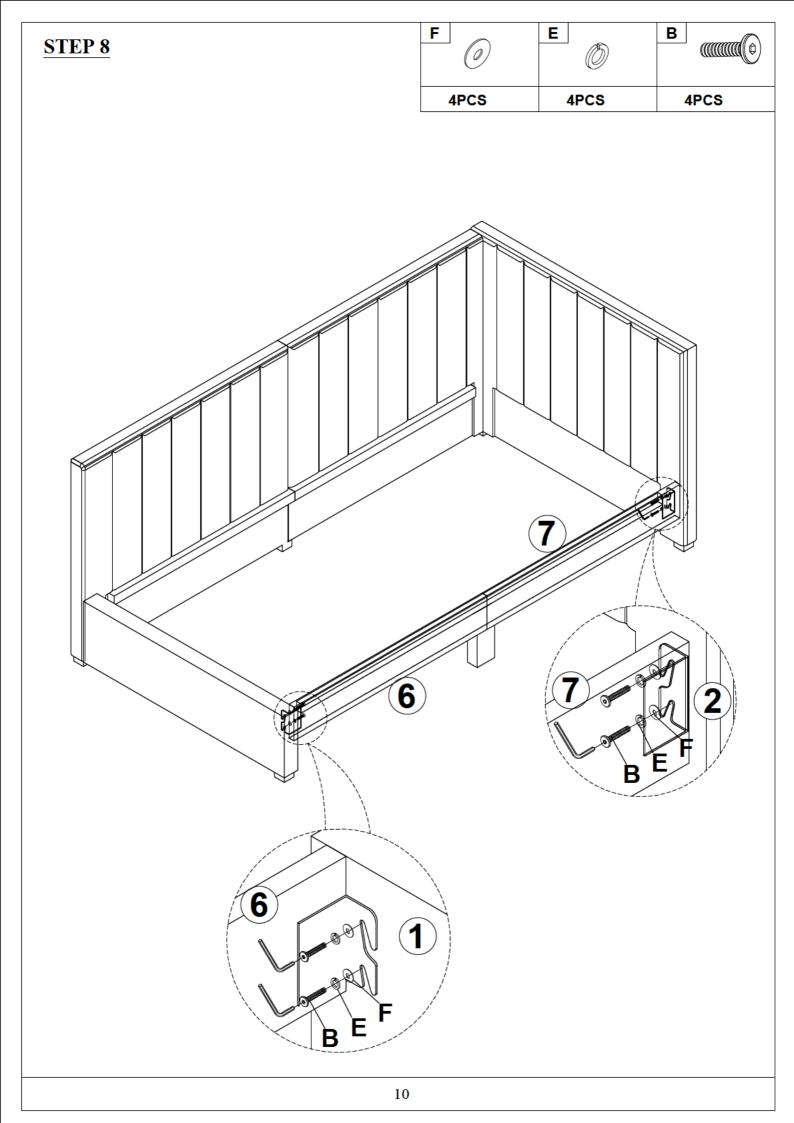

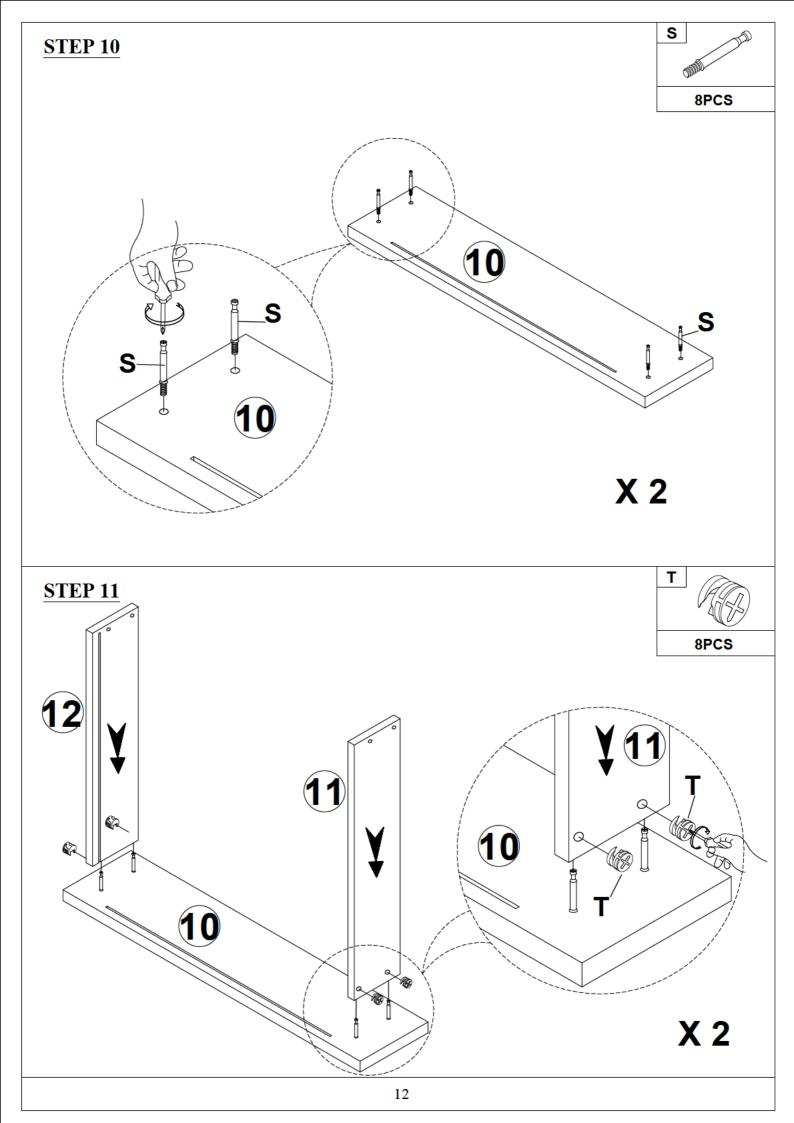

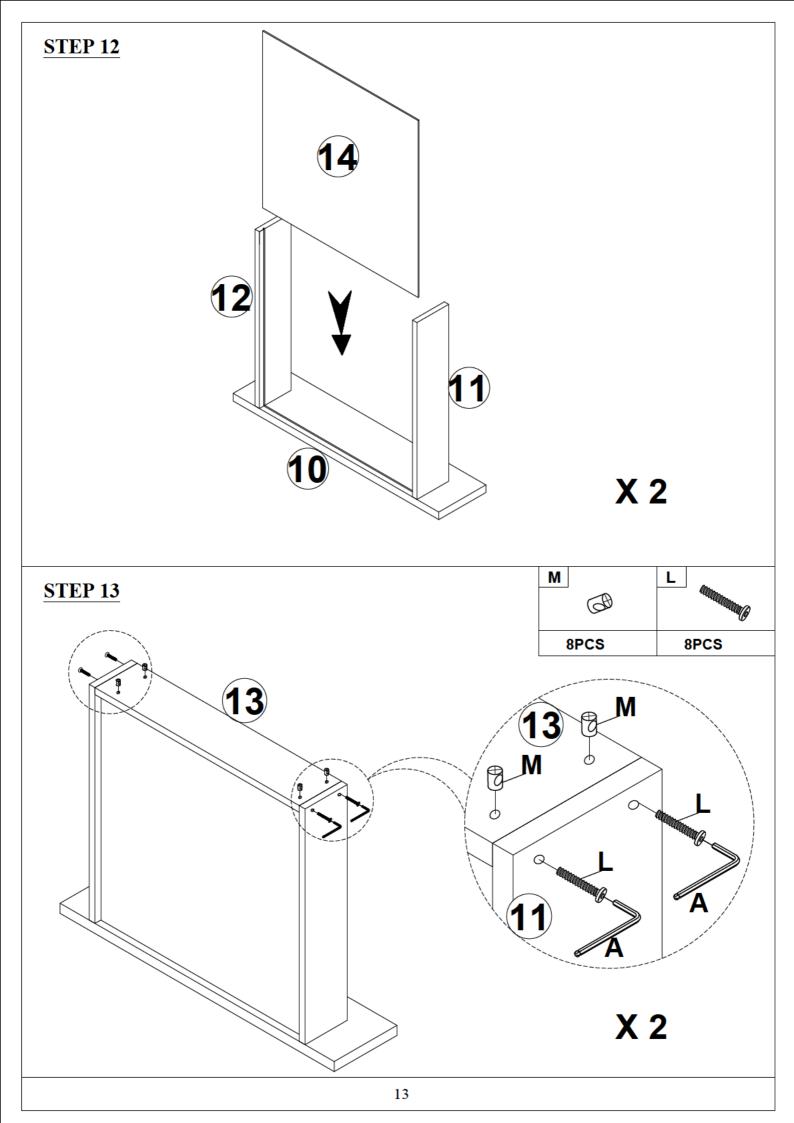

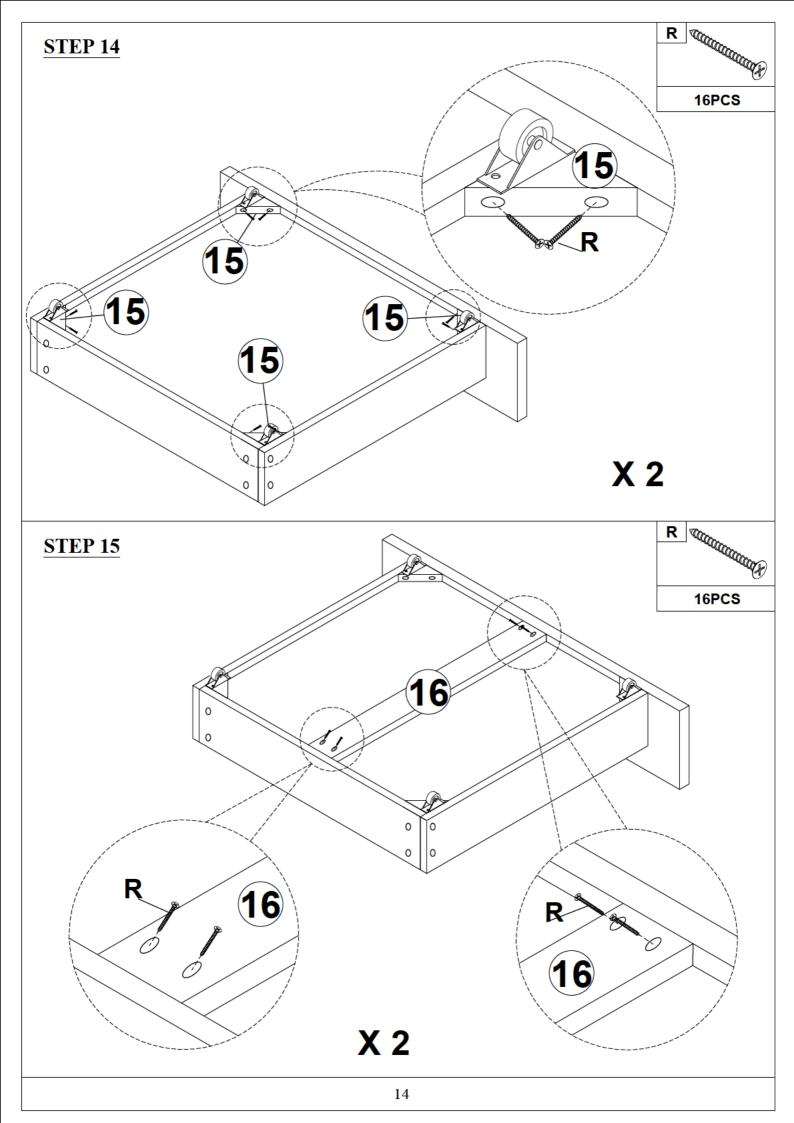

## **STEP 16**