
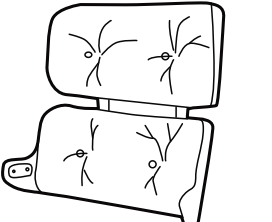
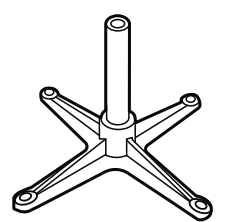
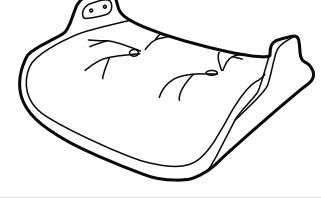
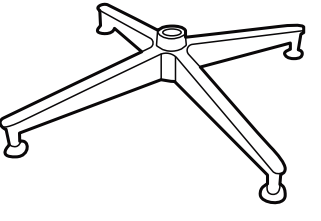
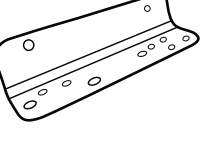
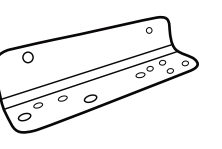
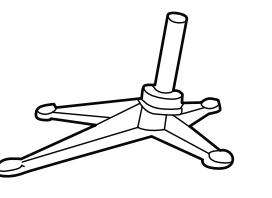
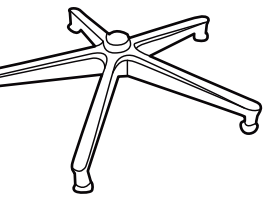
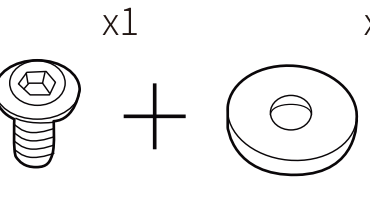
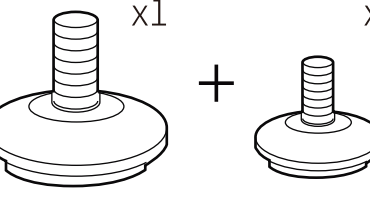
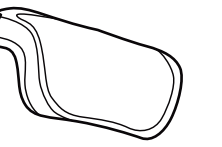
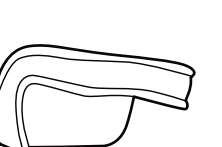

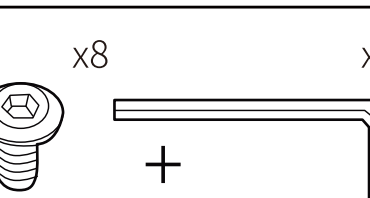
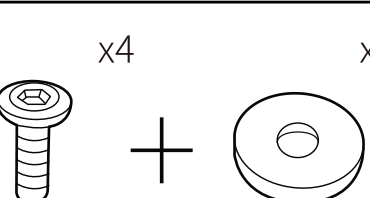




Installation & Assembly

Label	Picture	Description
A1	 x1	Ottoman cushion
A2	 x1	Chair Back Rest
B1	 x1	Chair Base
B2	 x1	Chair Seat
C1	 x1	Metal Leg
D1	 x1 Left	Steel Bracket
D2	 x1 Right	Steel Bracket
E	 x1	Chair Base
F	 x1	Metal Leg
O+H	 x1 + x1	Screws -M8*16mm +ChairWasher
I	 x1 + x1	Hardware mats
G1	 x1 Left	Chair Arm Rest
G2	 x1 Right	Chair Arm Rest
M	 x1	Fastener
O+R	 x8 + x1	Screws -M8*16mm +Allen Key
P+T	 x4 + x4	Screw -M6*25mm +ChairWasher
Q	 x4	Screw -M6*20mm

01 Assemble accessory M(Fastener) into part F(FIVE FOOT BASE).



02 Insert accessory E(Base hold) into the base of part F-M. Press until fully engaged.

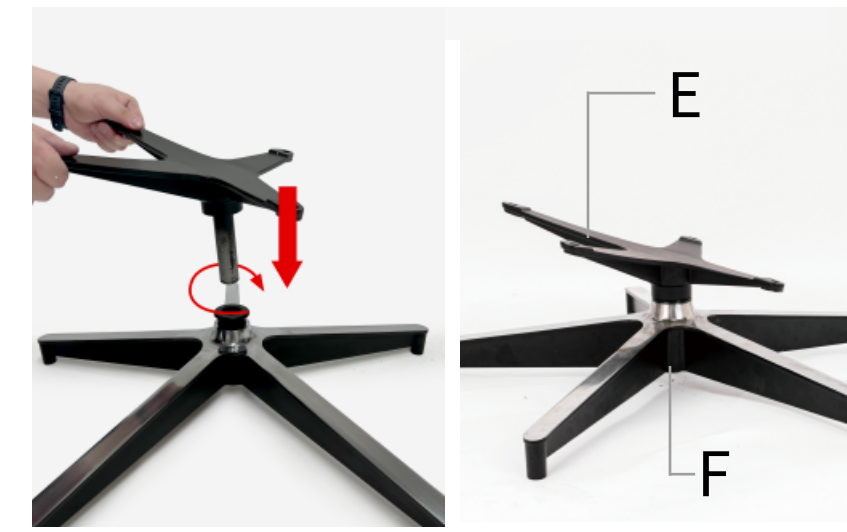

03 Flip accessories E-F over. Use parts O(M8*16) and H to securely fasten F and E together.




04 Connect the E-F component with part B2(Seat part). Flip B2 and align it with the screw holes, then find the short and long sides of the seat back.




05 Put T(Washer) above each screw hole. Use screw P(M6*25) to secure the E-F metal foot in place.

**Remark: Short to short, Long to Long*

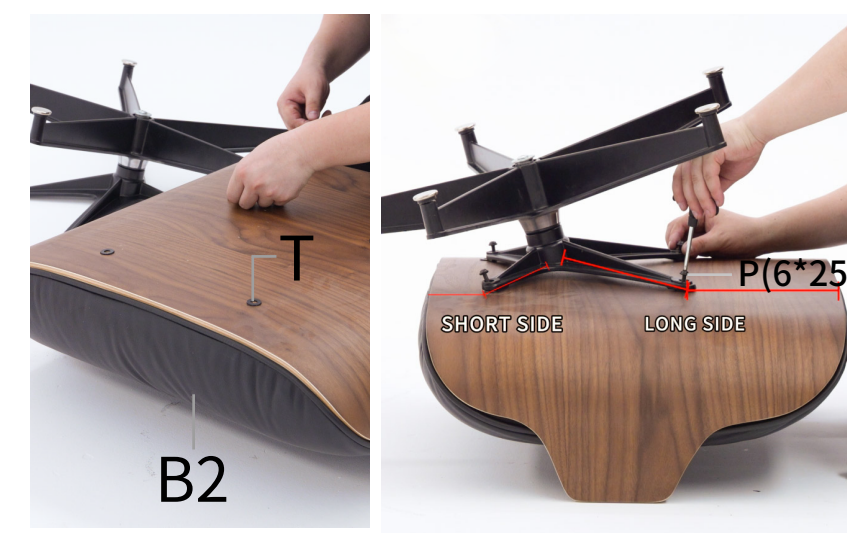

06 Use screw O(M8*16) to attach A2 and armrest brackets D1&D2. Connect part A2 with part D2.

**Remark: Keep D1/D2 hold enough don't tightened in this stage*

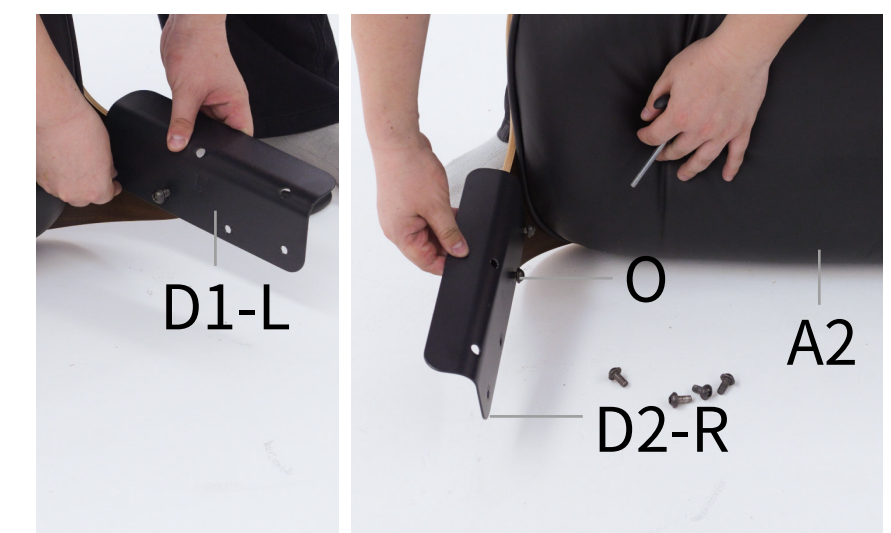

07 Attach the A2-D component to the assembled B2-E-F unit.

**Remark: keep A2&B2-E-F hold enough don't tightened in this stage*



08 Lift A2 upward and sequentially tighten the screws to secure it in place.

**Remark: Maintain the upright position of the backrest*



09 Fasten G1&G2 using Q (M6*20).

**Distinguish the left and right armrests by orienting them with the stitching facing downwards*



10 Press B&C until fully engaged.



11 Assemble the B-C unit component and secure it with the A1 part. Put T above each screw hole. Use screw P to secure the BC with A1 metal foot in place.



12 If the seat wobbles, adjust the J or K foot glides by rotating them until a stable position is achieved.



Note

