


Kitchen Cart

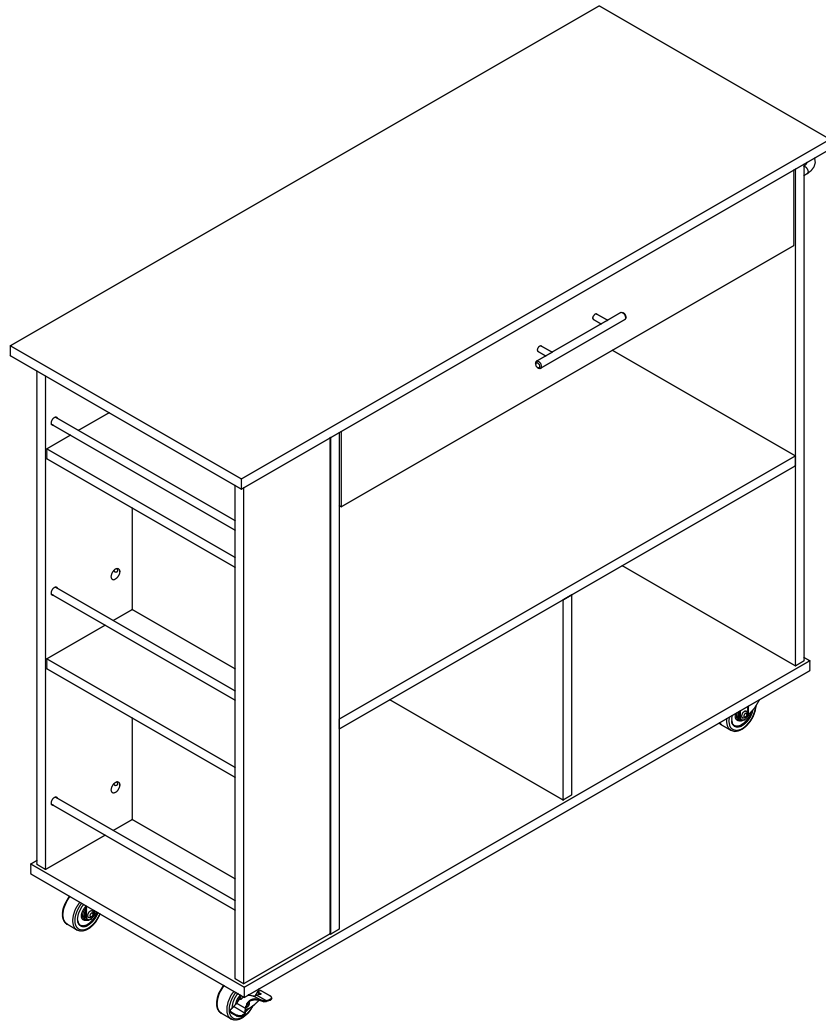

Instruction Manual





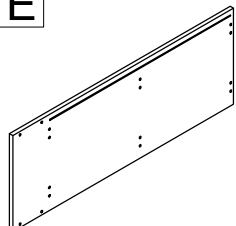
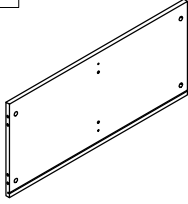

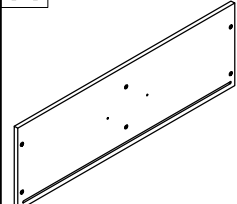
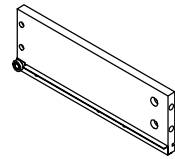
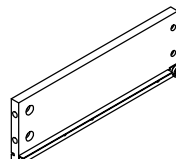
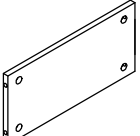
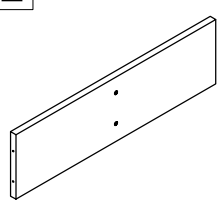
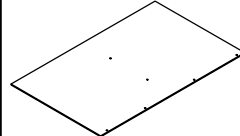
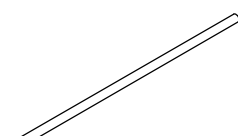
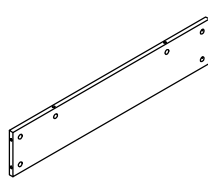
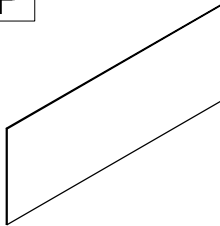


Thank you for shopping with us!

We appreciate your purchase and are ready to be at your service!





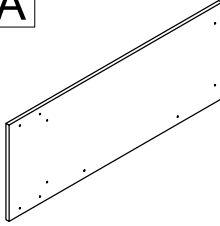









If you find parts missing, broken, or hard to put together or when you are not satisfied or have any valuable suggestions, please do not hesitate to contact us first!

We will definitely give you a satisfactory solution or answer then!


PART LIST

<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 
<p>Top Panel 1 PC</p>	<p>Left Panel 1 PC</p>	<p>Right Panel 1 PC</p>	<p>Lower Partition Panel 1 PC</p>	<p>Bottom Panel 1 PC</p>
<p>F</p> 	<p>G</p> 	<p>H</p> 	<p>I</p> 	<p>J</p> 
<p>Fixed Shelf Panel 1 PC</p>	<p>Cross Slab 2 PCS</p>	<p>Drawer Front Panel 1 PC</p>	<p>Drawer Left Panel 1 PC</p>	<p>Drawer Right Panel 1 PC</p>
<p>K</p> 	<p>L</p> 	<p>M</p> 	<p>N</p> 	<p>O</p> 
<p>Drawer Partition Panel 1 PC</p>	<p>Drawer Back Panel 1 PC</p>	<p>Drawer Bottom Panel 1 PC</p>	<p>Iron Pipe 3 PCS</p>	<p>Upper Back Panel 1 PC</p>
<p>P</p> 	<p>Q</p> 	<p>R</p> 		
<p>Lower Back Panel 1 PC</p>	<p>Left Front Vertical Plate 1 PC</p>	<p>Left Back Vertical Plate 1 PC</p>		

HARDWARE LIST
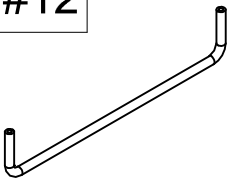
<p>#1</p>  <p>Ø7*38mm</p>	<p>#2</p>  <p>Ø8*30mm</p>	<p>#3</p>  <p>Ø3.5*25mm</p>	<p>#4</p>  <p>Ø6*35mm</p>	<p>#5</p>  <p>Ø15*9mm</p>
<p>Screw</p> <p>10 PCS (Extra 2)</p>	<p>Wood Dowel</p> <p>16PCS (Extra 4)</p>	<p>Screw</p> <p>10PCS (Extra 4)</p>	<p>Cam-bolt</p> <p>42PCS (Extra 6)</p>	<p>Cam-lock</p> <p>42PCS(Extra 6)</p>
<p>#6</p>  <p>3"</p>	<p>#7</p>  <p>3"</p>	<p>#8</p>  <p>Ø4.5*13mm</p>	<p>#9</p> 	<p>#10</p>  <p>Ø3.5*14mm</p>
<p>Caster With Lock</p> <p>2 PCS</p>	<p>Caster</p> <p>3 PCS</p>	<p>Screw</p> <p>20 PCS (Extra 2)</p>	<p>Back Bracket</p> <p>6 PCS (Extra 2)</p>	<p>Screw</p> <p>6 PCS (Extra 2)</p>
<p>#11</p>  <p>150*32*Ø12mm</p>	<p>#12</p>  <p>310*60*Ø10mm</p>	<p>#13</p>  <p>M4*22mm</p>	<p>#14</p>  <p>M5*25mm</p>	
<p>Handle</p> <p>1 PC</p>	<p>Towel Bar</p> <p>1 PC</p>	<p>Round Head Bolt</p> <p>2 PCS</p>	<p>Bolt</p> <p>2 PCS</p>	

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required

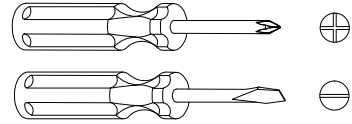


INSERTING AND TIGHTENING CAM-BOLT

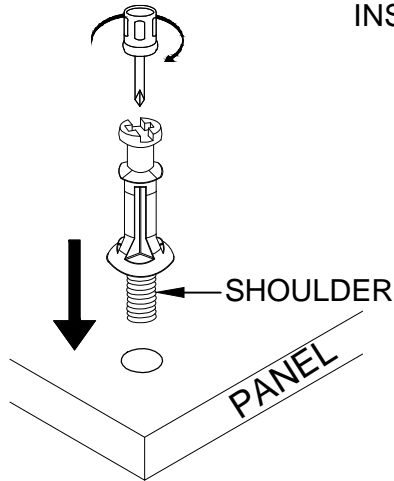

Place Cam-bolt on pre-drilled hole and screw in vertically

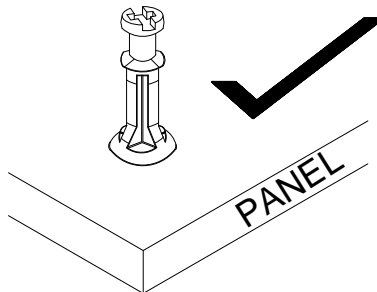


Shoulder is flushed (on the same level) with the panel.

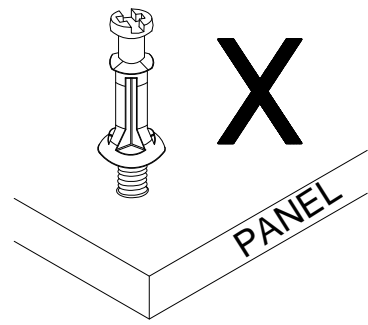

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

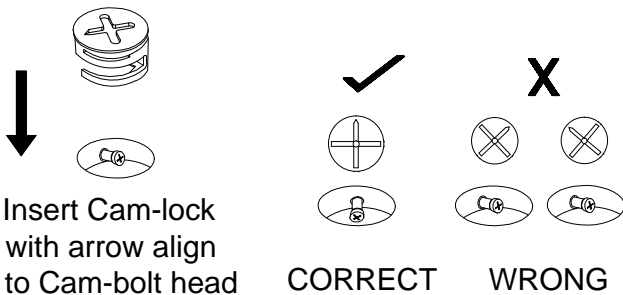


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG




Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK




Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


Step 1.

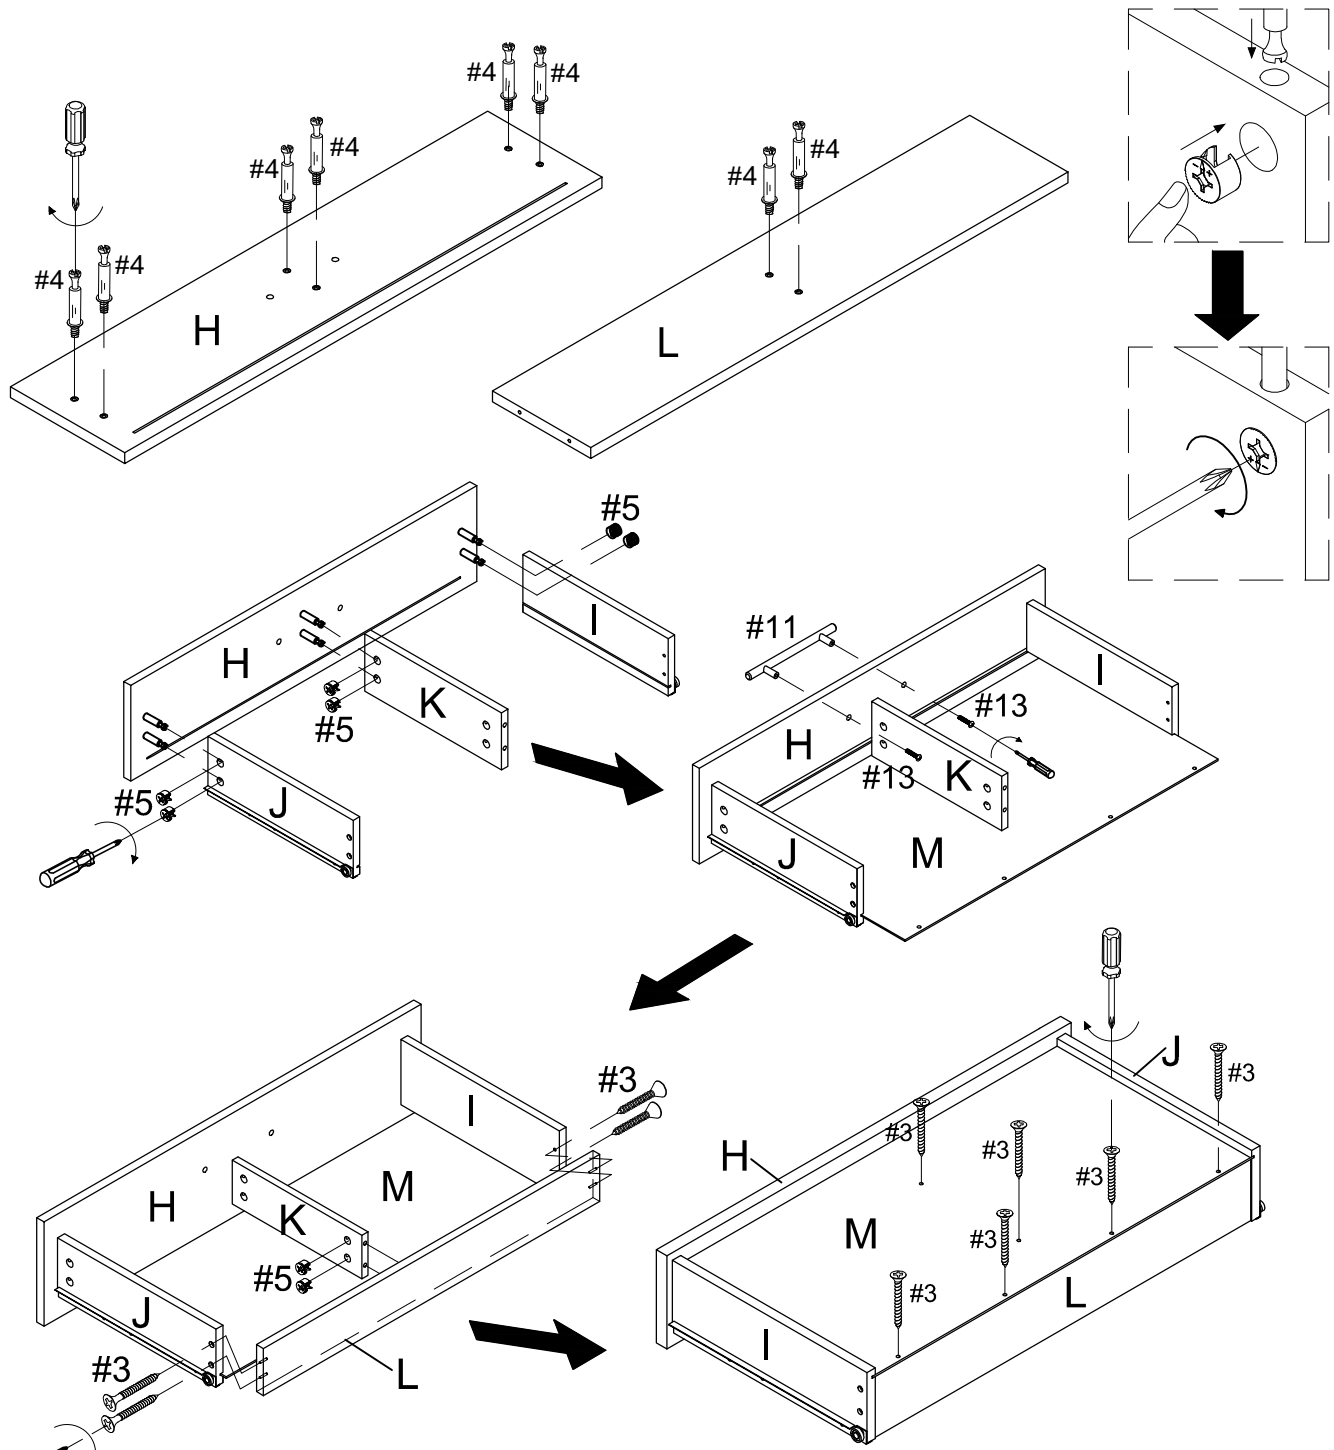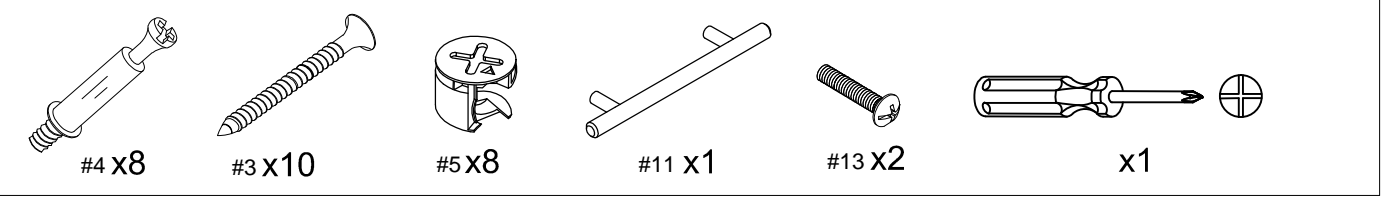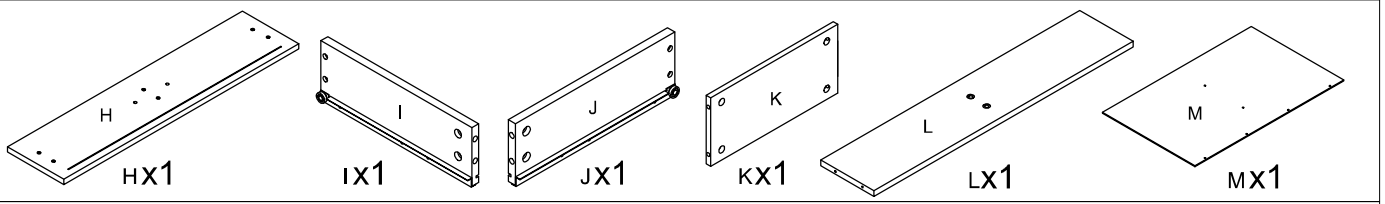




Step 2.

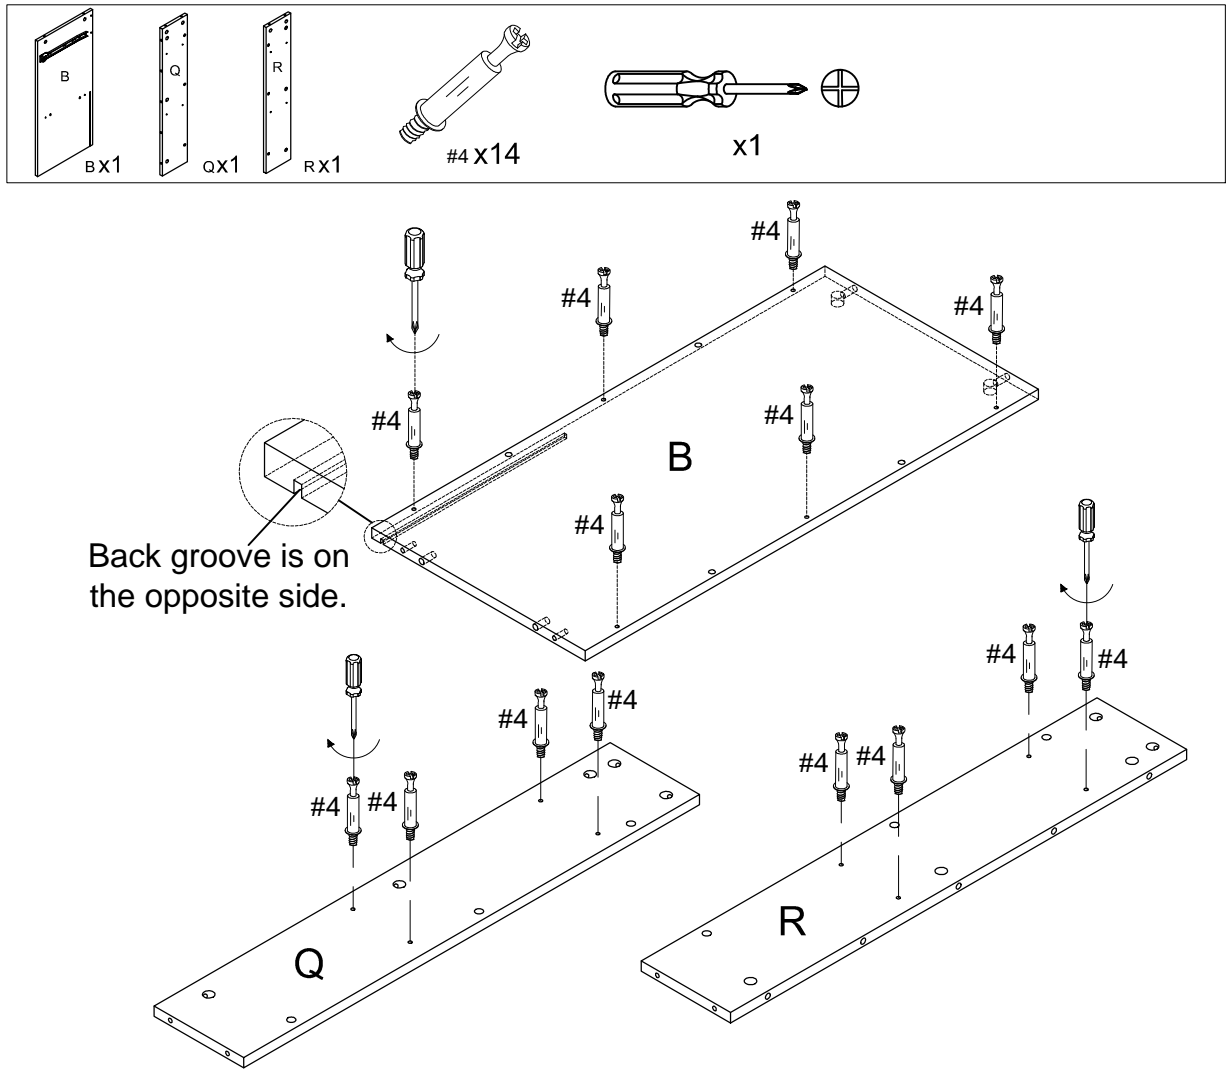




Step 3.

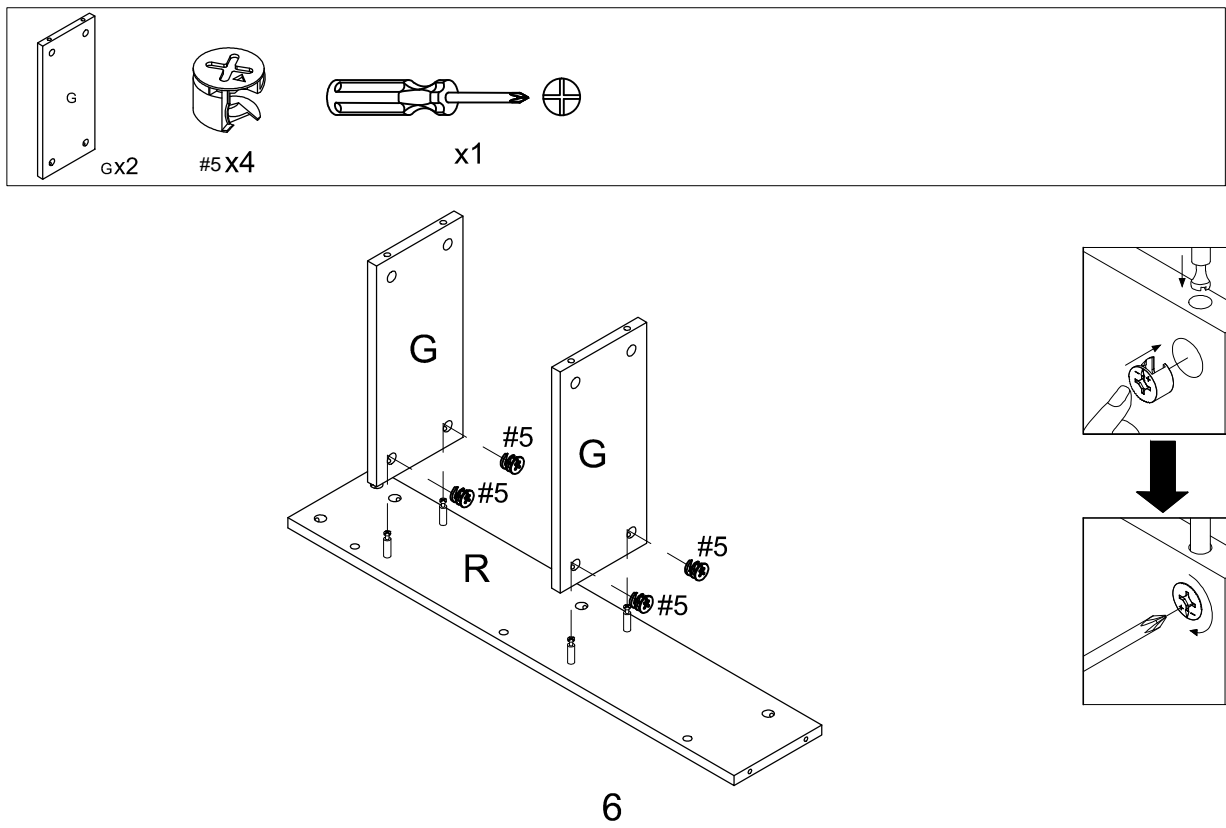




Step 4.

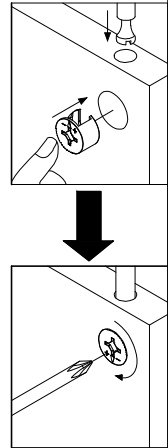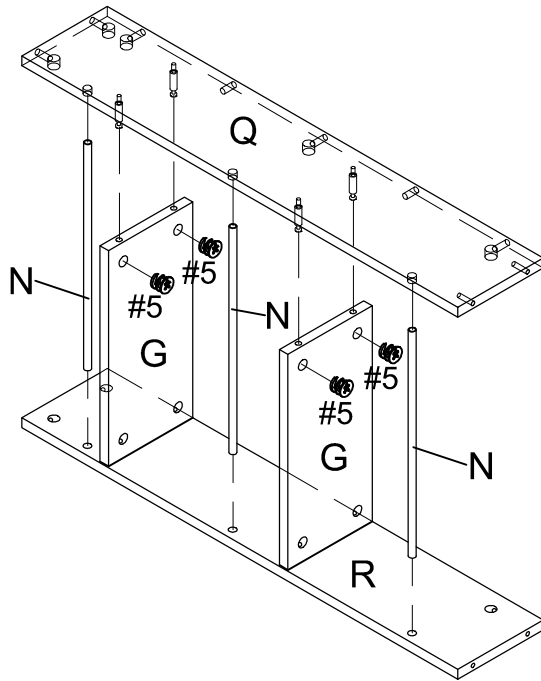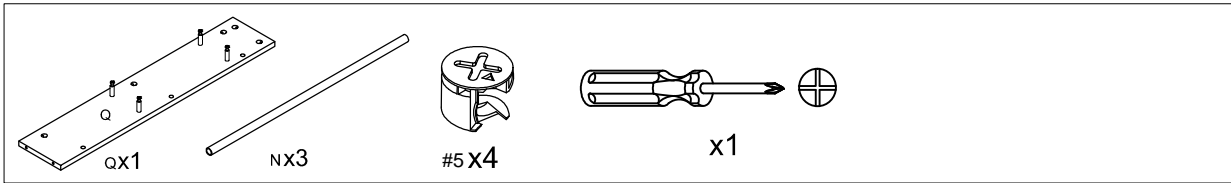




Step 5.

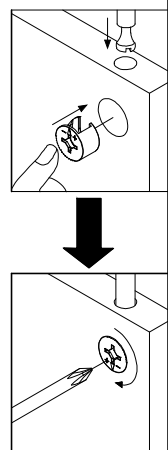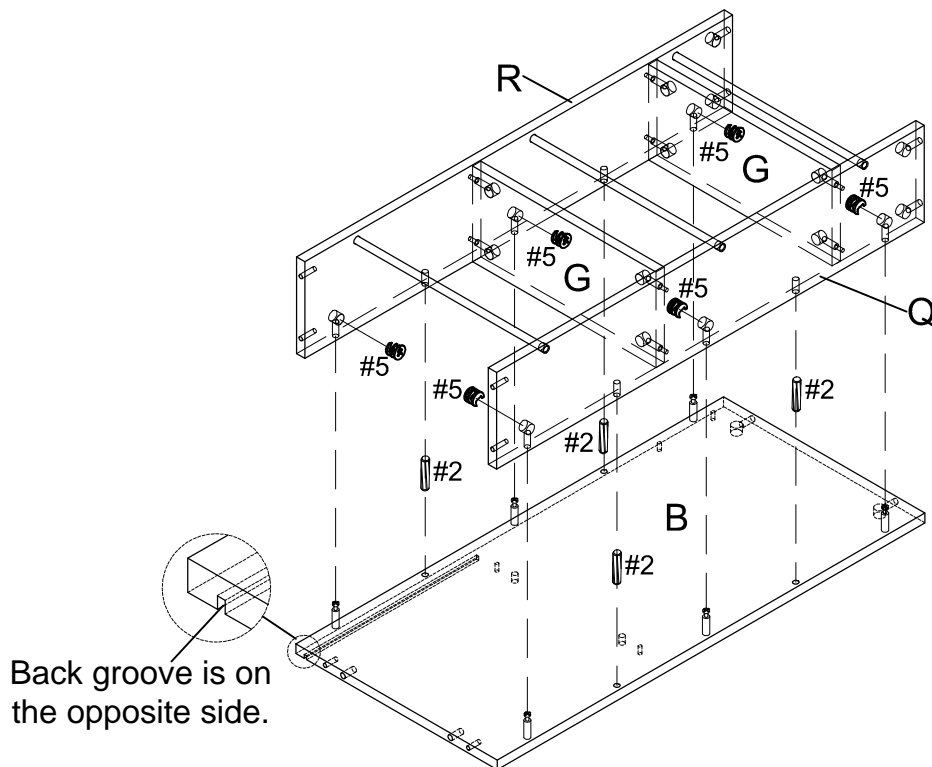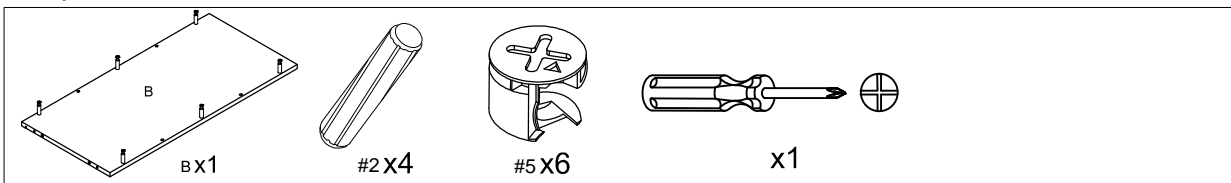





Step 6.

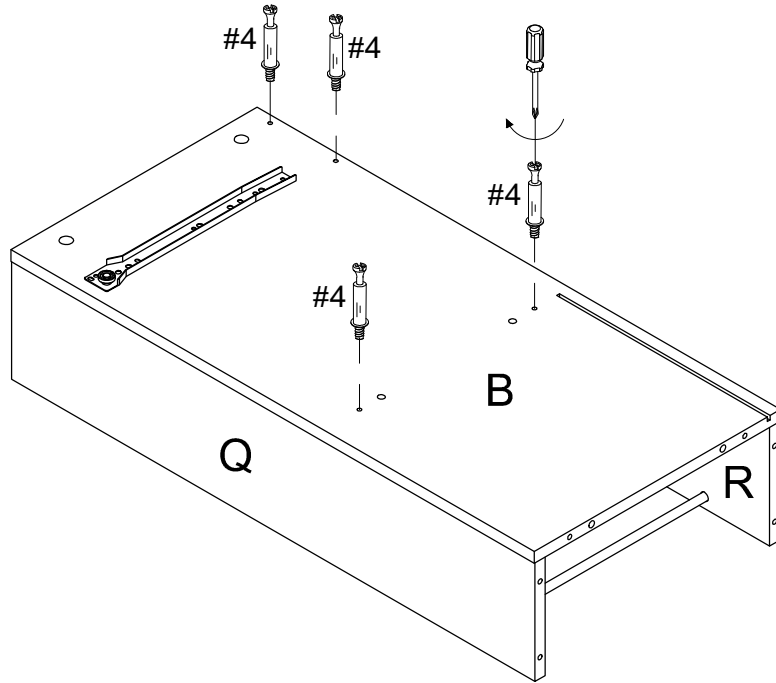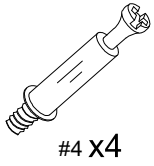

Step 7.


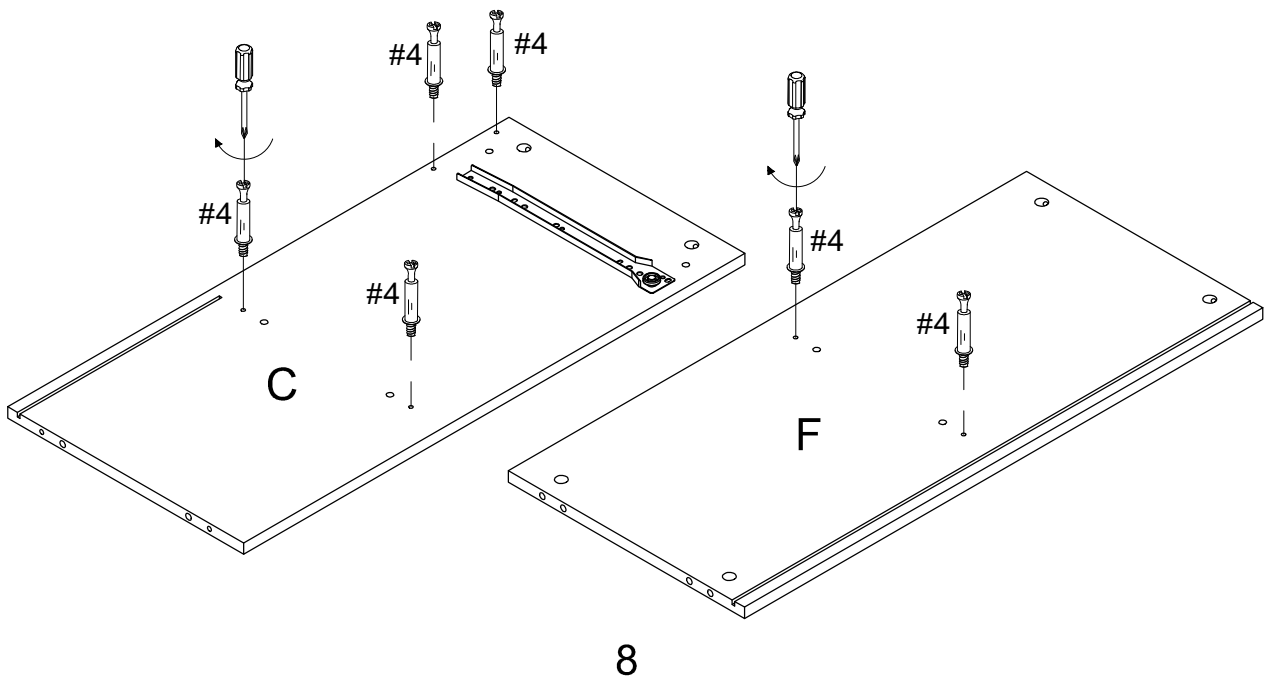

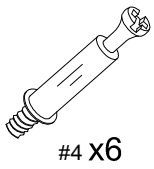


Step 8.

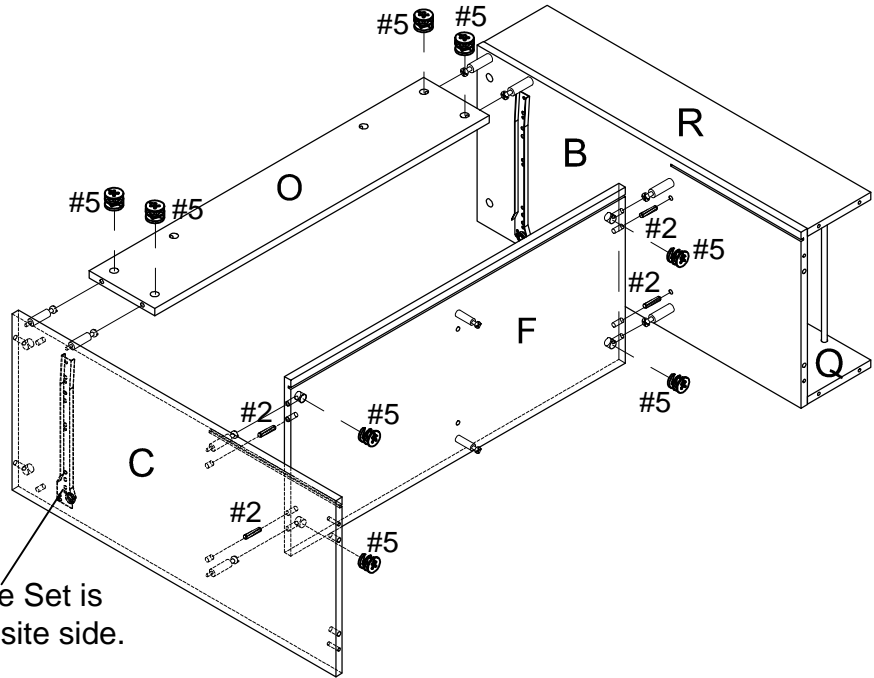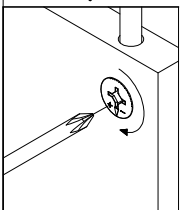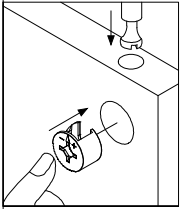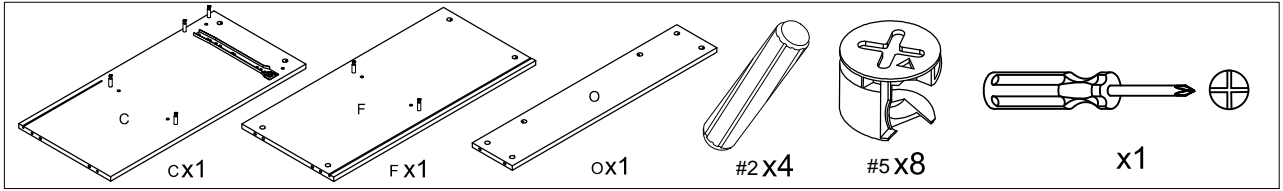


Drawer Slide Set is on the opposite side.



Step 9.

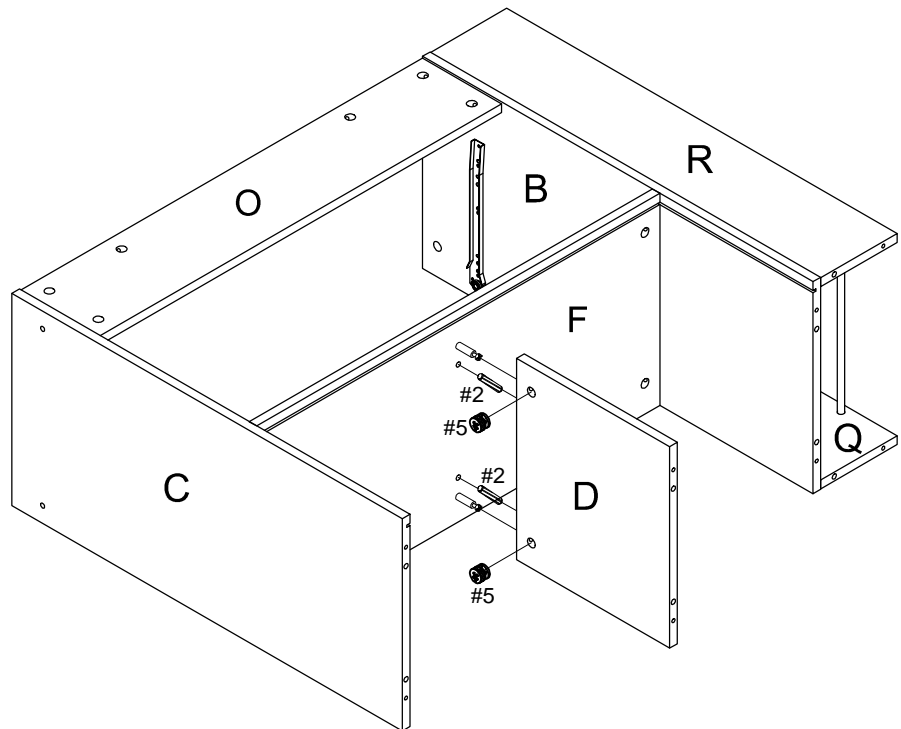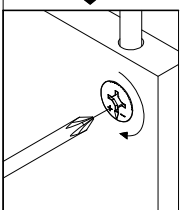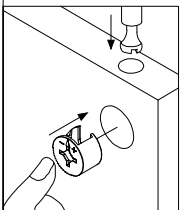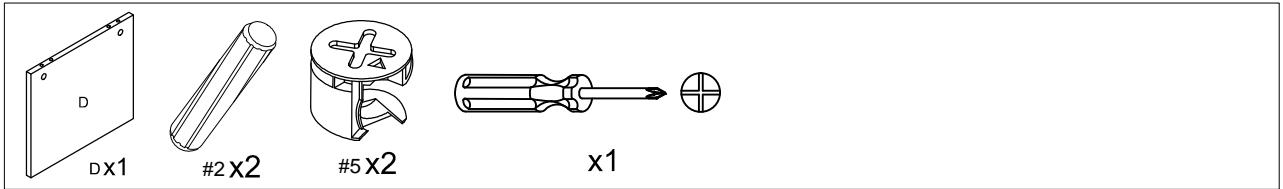



Step 12.

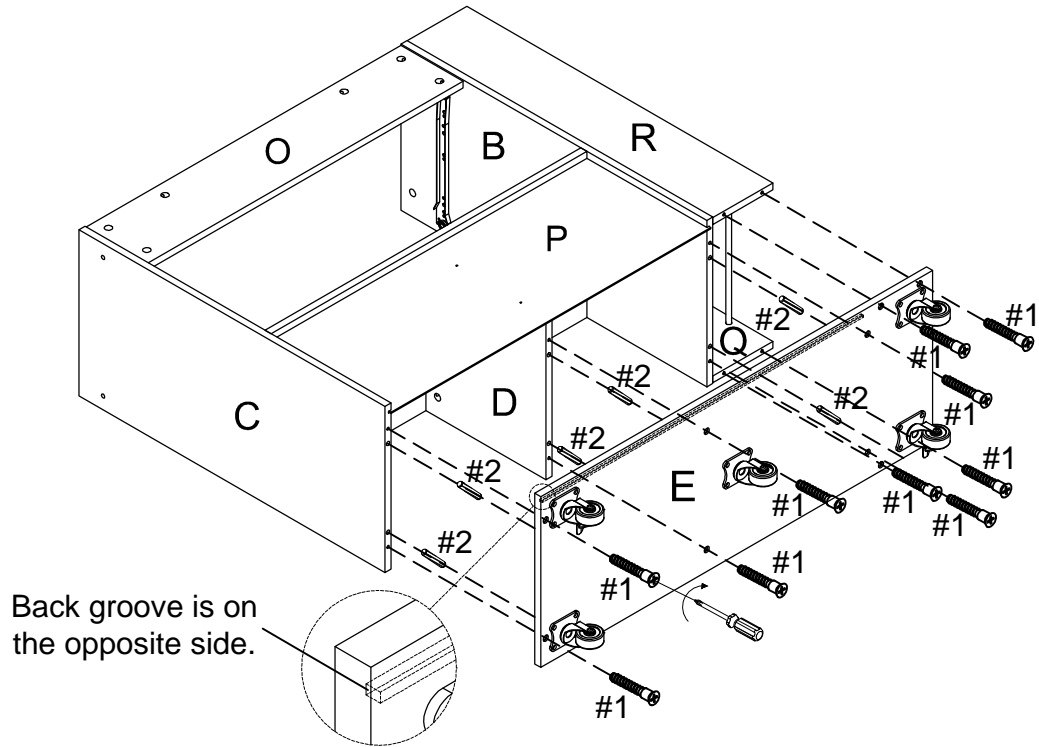




Step 13.

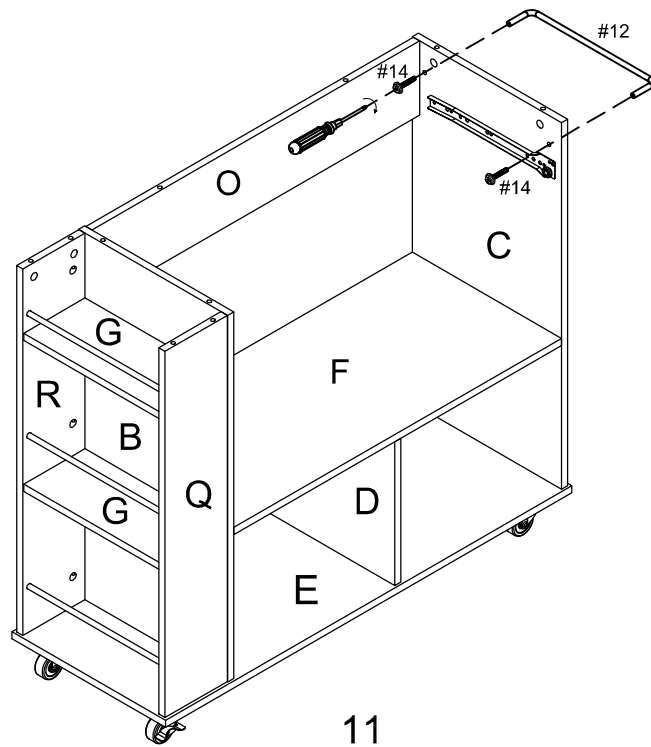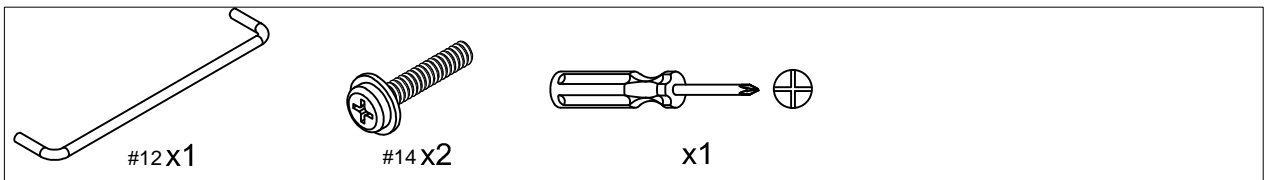


Step 14.

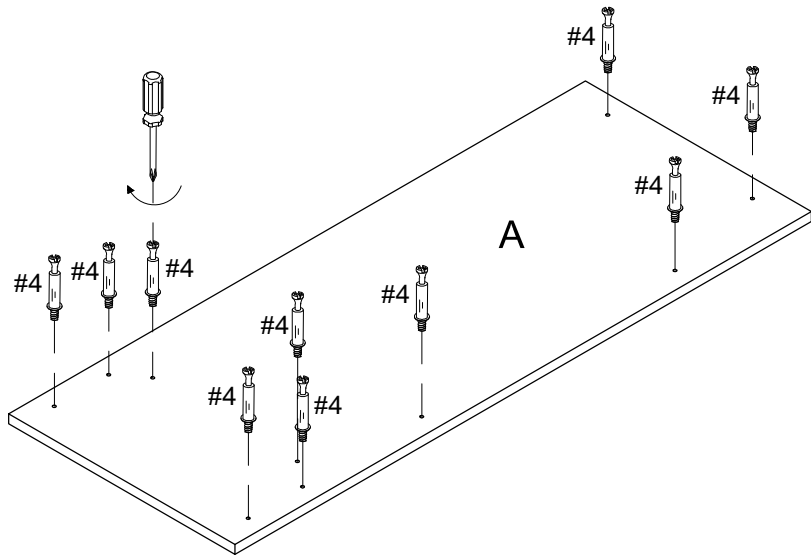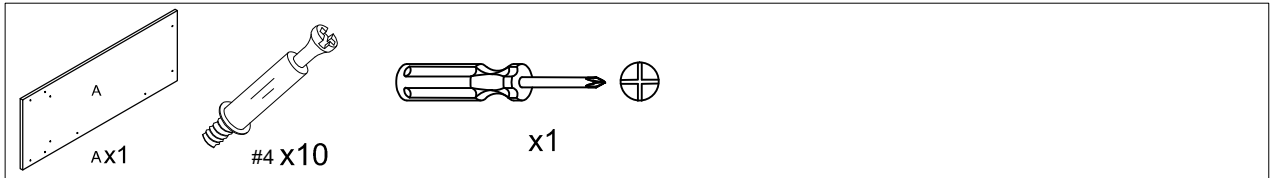

Step 15.

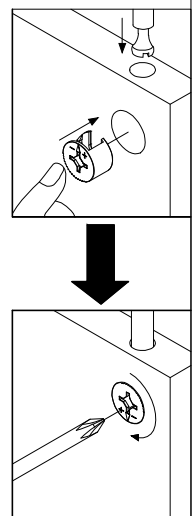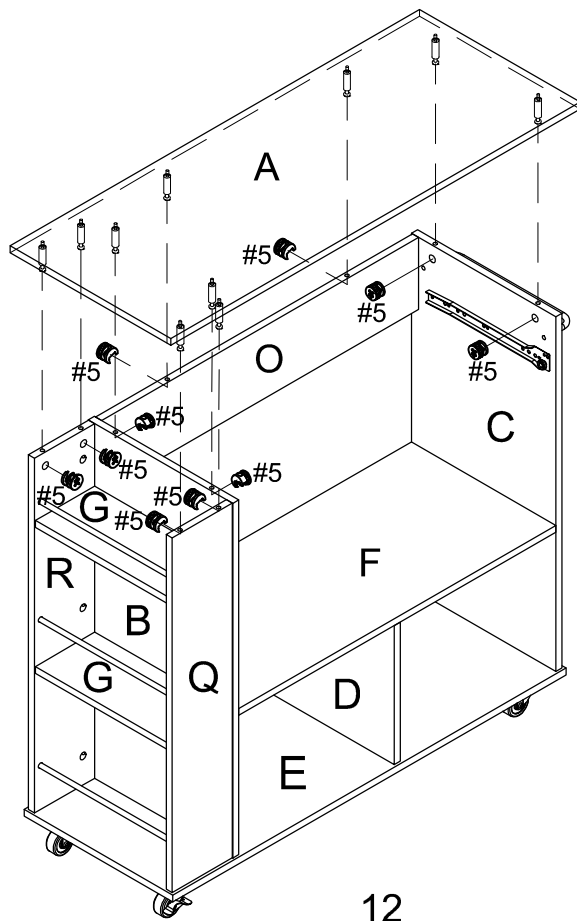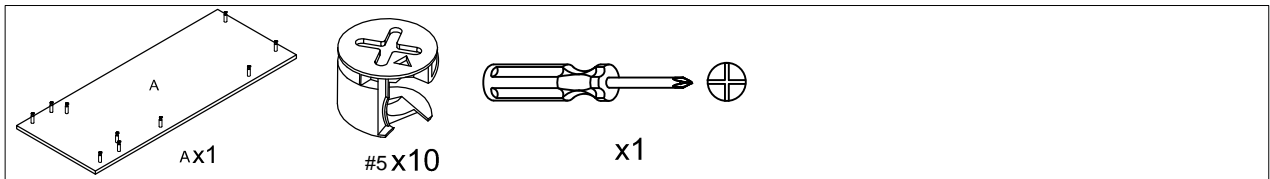

Step 16.

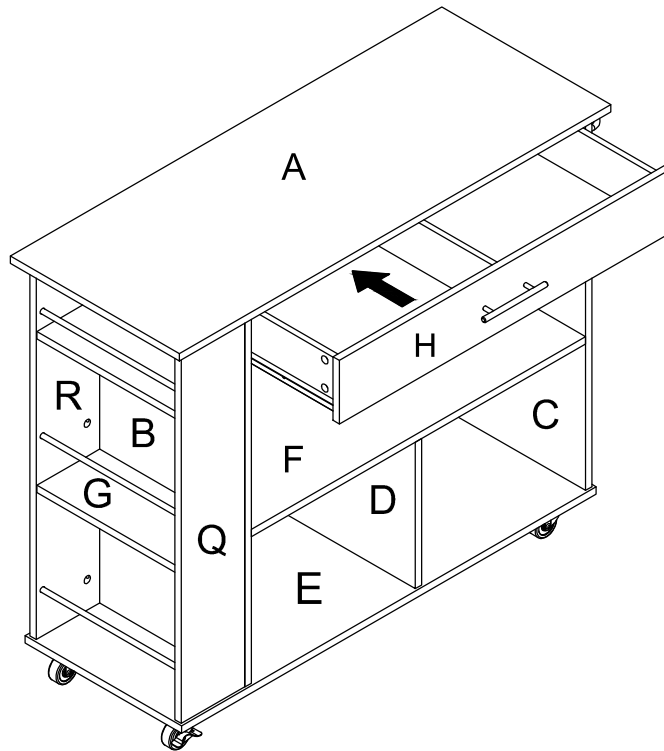

Step 17.

