
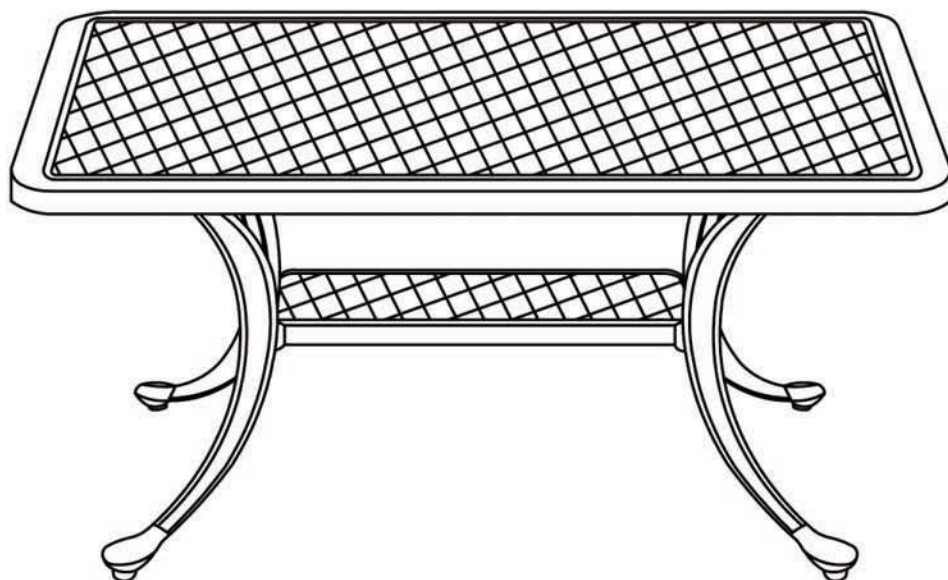




CAST ALUM. RECT COFFEE TABLE




PARTS LIST

A 	B 	C 
Leg 4 PCS	Top 1 PC	Stretcher 1 PC

HARDWARE LIST

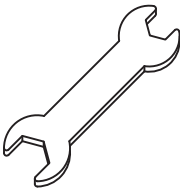1 	2 	3 	4 	5 
Cylinder Bolt (M8*35) 4PCS	Spring Washers (M8) 8 pcs.	Flat Washers (M8) 8 pcs.	Nuts (M8) 8 pcs.	Nut Caps (M8) 8 pcs.
6 				
Wrench (M6 &M8) 1 PC				

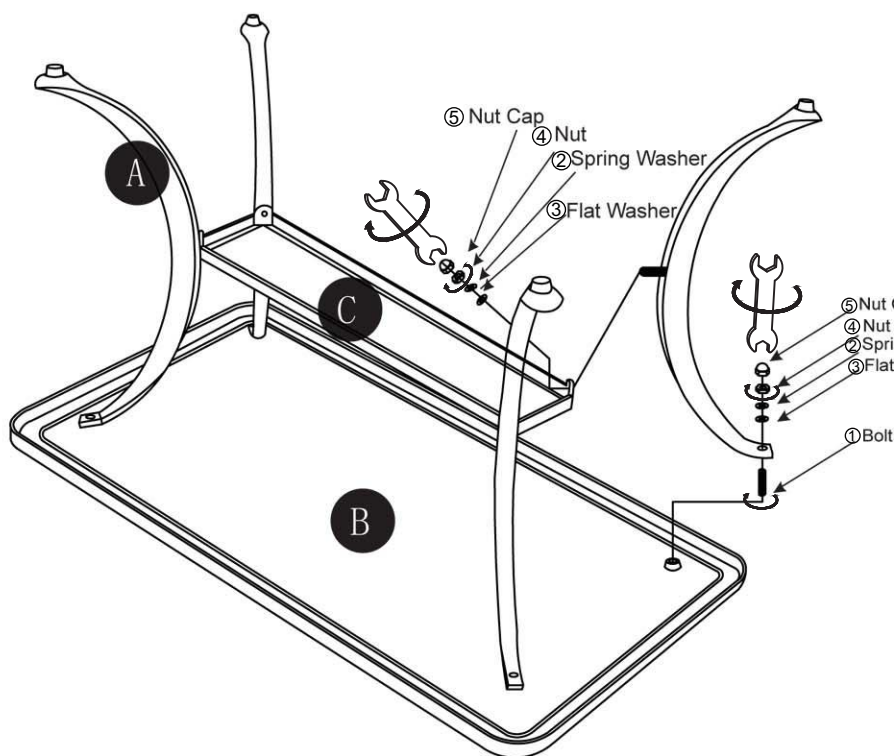

Step 1: Place Top (B)
upside down on a soft cloth.

Insert all Cylinder Bolts(Part #1) into
the pre-drilled holes of Top (B).

Step 2: Attach two adjacent Legs (B)
by inserting the Cylinder Bolts (Part #1)
through the holes in Legs (A) by fitting
the leg on top of the attached cylinder
bolt. Secure the Legs (B) using Flat
Washers (Part #3), Spring Washers
(Part #2), and Nuts (Part #4).
Note - -Tighten the Nuts (Part #4) only
half way at this time using
wrench (Part #6).

① Bolt		x 4
② Spring Washer		x 8
③ Flat Washer		x 8
④ Nut		x 8
⑤ Nut Cap		x 8

Step 3: Attach Stretcher (C) to the two
attached Legs (A) with Flat Washers
(Part #3), Spring Washers (Part #2),
and Nuts (Part #4).
Note - -Tighten the Nuts (Part #4) only
half way at this time.

Attach the other two legs (B) to the
Top (B) & Stretcher (C) using the
same method as the first two legs.
Tighten all Nuts (Part #4) completely.

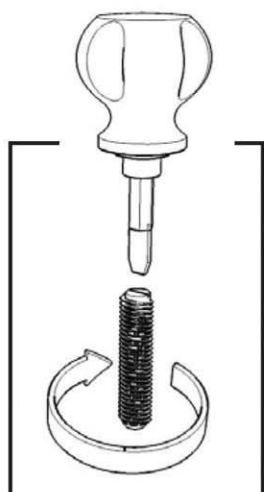


Figure 1

Flathead screw
driver(not included)

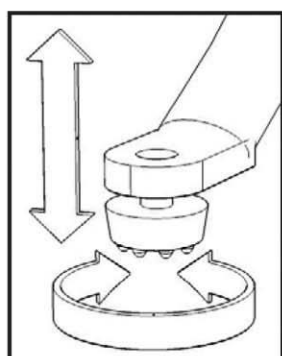


Figure 2

Step 4: Cover all Nuts (Part #4) with
Nut Caps (Part #5). Turn the table
over to the upright position. Adjust
the levelers on the bottom of the legs
to level the table.