

Assembly instructions



assembly 2 people



tool rubber mallet



tool hammer



tool philips head screwdriver



assembling time 2 hours 30 minutes

or...




tool electric screwdriver



assembling time 1 hour 30 minutes






wine rack




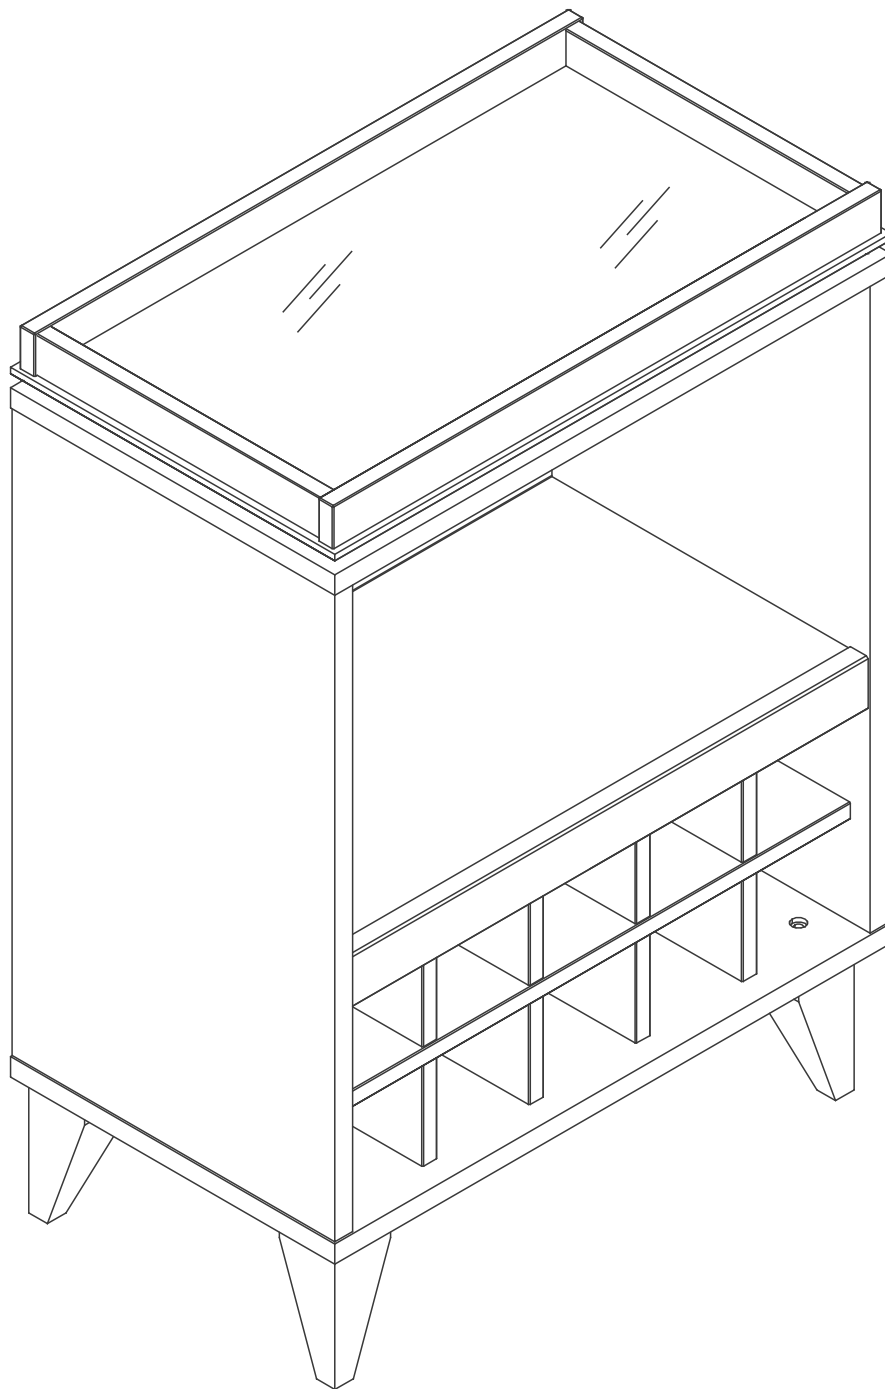


Attention!


- 1- Please read the assembly instructions very carefully before assembling your product
- 2- The product assembly has to be carried out on a clean and flat surface. We recommend the use of the package material (cartons/cardboards) to cover your room surface during assembly in order to protect the floor
- 3- The screws and bolts of your furniture have to be tightened periodically
- 4- Please avoid contact with sharp objects
- 5- Please avoid hitting the furniture surface

HARDWARE/ACCESSORIES


| | | |
|---|--|----|
| A |  Ø 5/16" x 1" | 66 |
| B |  Ø 1/4" x 1.3/8" | 06 |
| C |  Ø 19/32" | 06 |
| I |  Ø 5/32" x 1.3/16" | 31 |
| J |  Ø 9/32" x 2" | 04 |

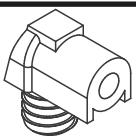

| | | |
|---|---|----|
| K |  Allen Key | 01 |
| L |  Ø 1/8" x 5/8" | 22 |
| N |  Sticker | 01 |
| Q |  Trapeze | 02 |

COMPONENTS

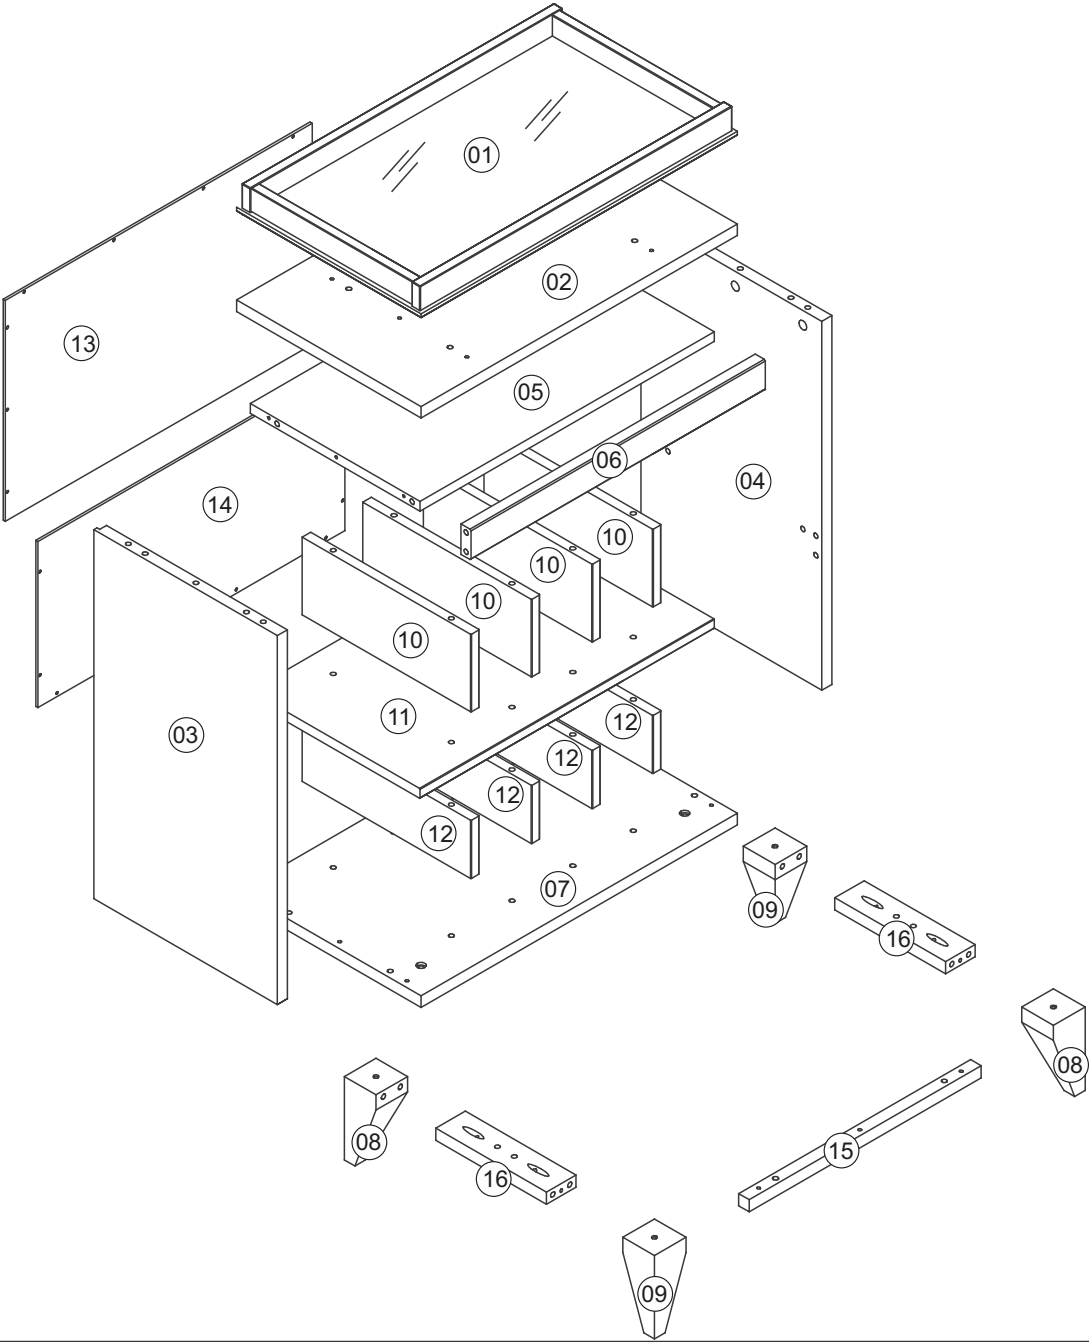



01

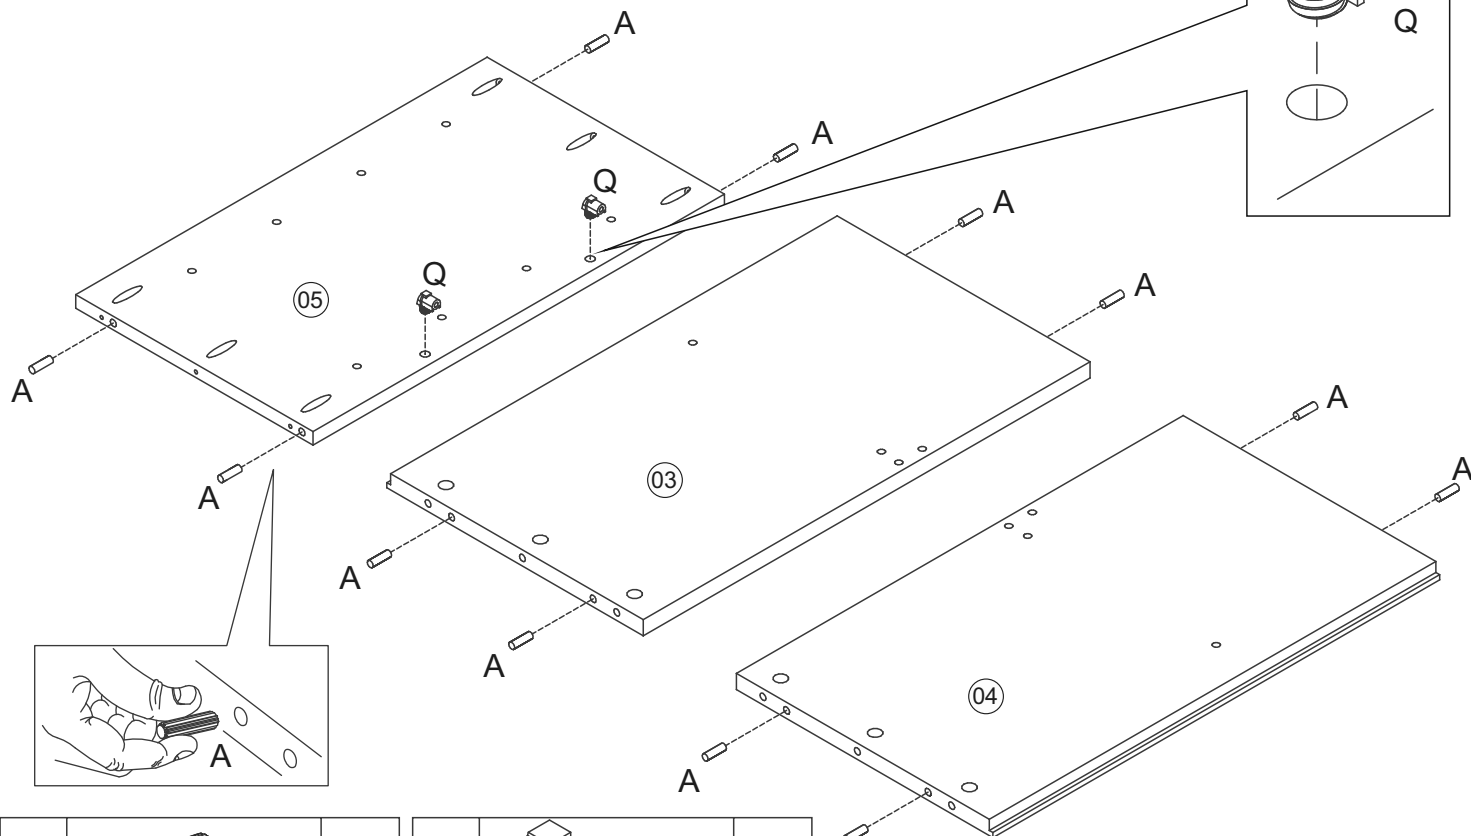


| | | | | | |
|---|---|----|---|---|----|
| A |  | 12 | Q |  | 02 |
| | Ø 5/16" x 1" | | | Trapeze | |

02

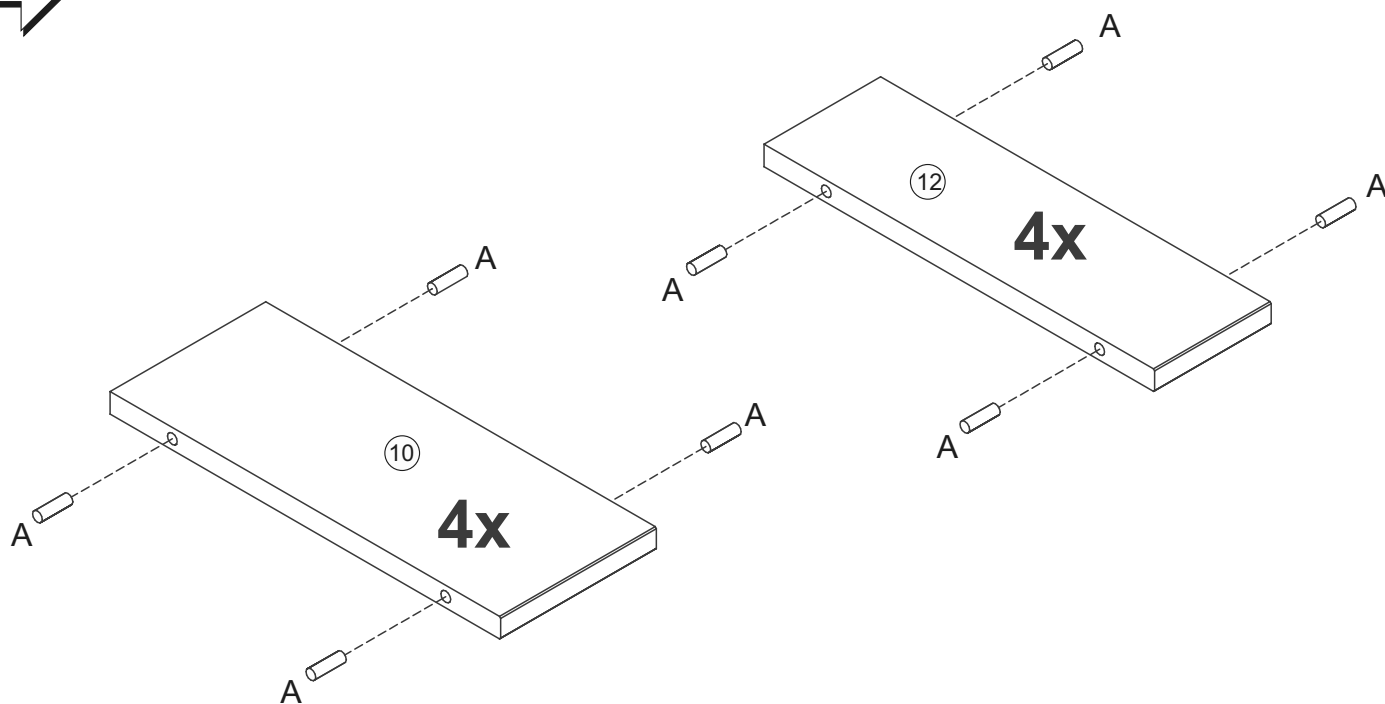


| | | |
|---|---|----|
| A |  | 32 |
| | Ø 5/16" x 1" | |


03

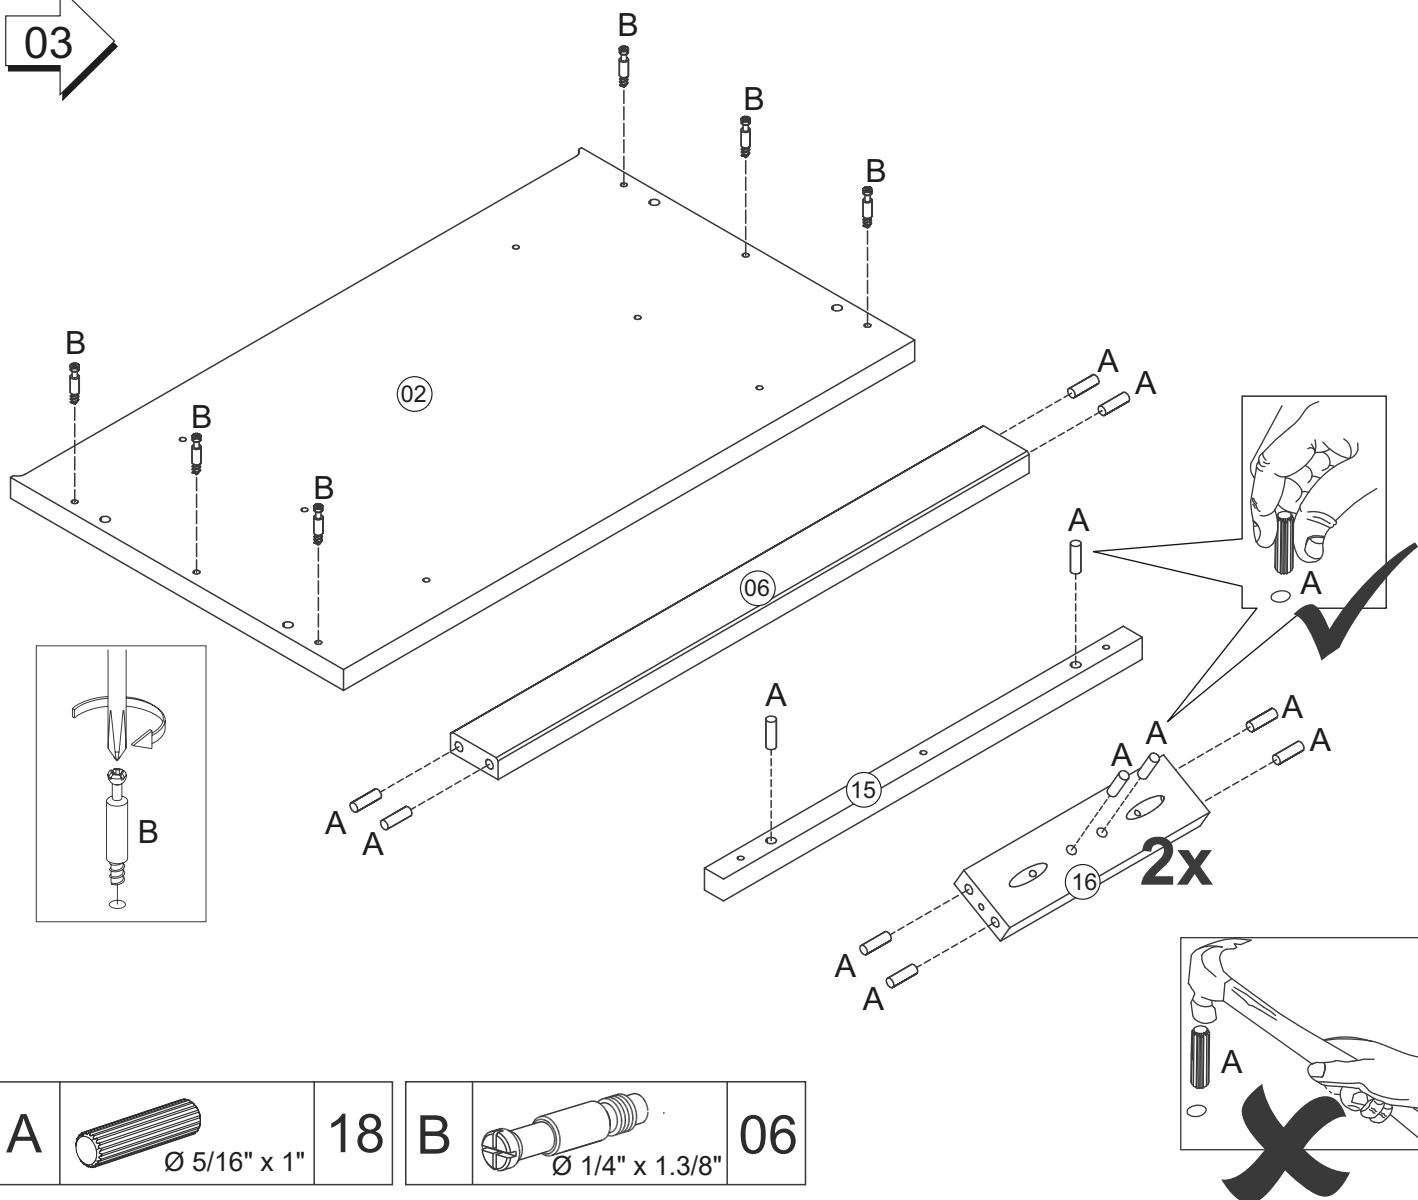


04

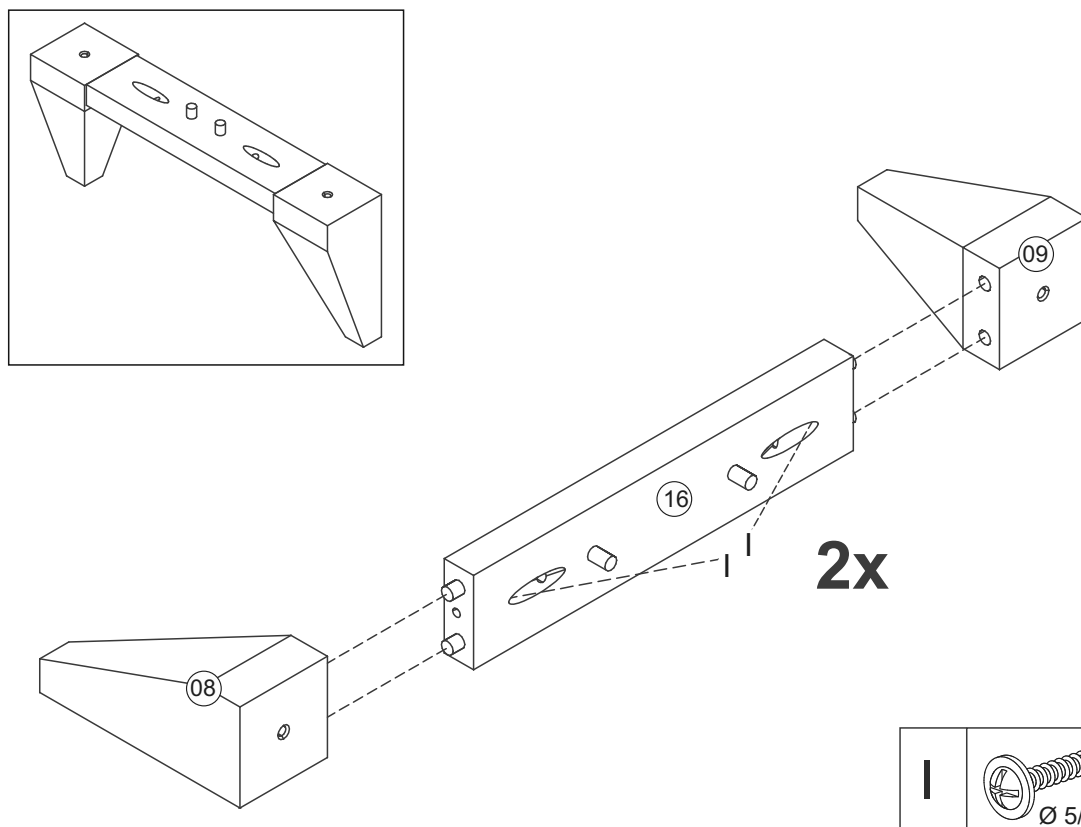


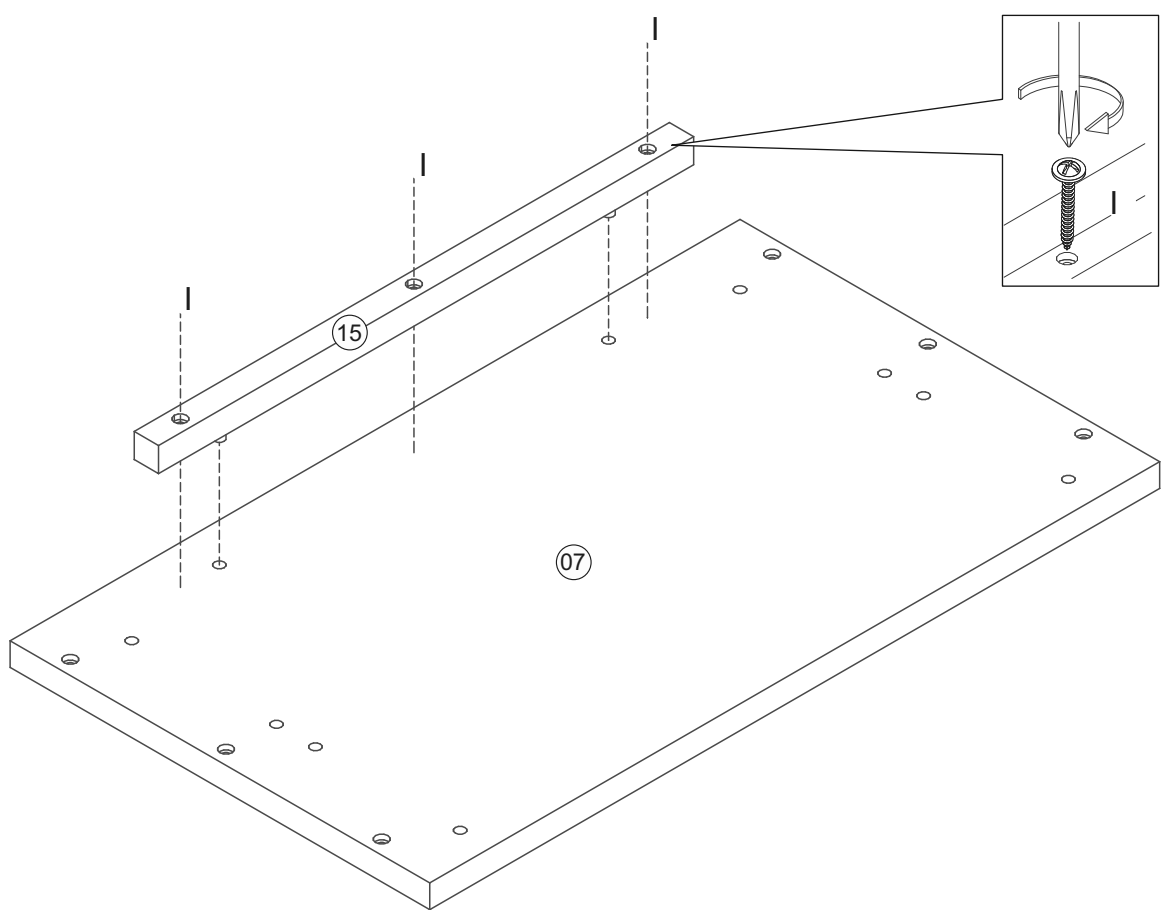

05




| | | |
|---|--|----|
| I |  Ø 5/32" x 1.3/16" | 03 |
|---|--|----|

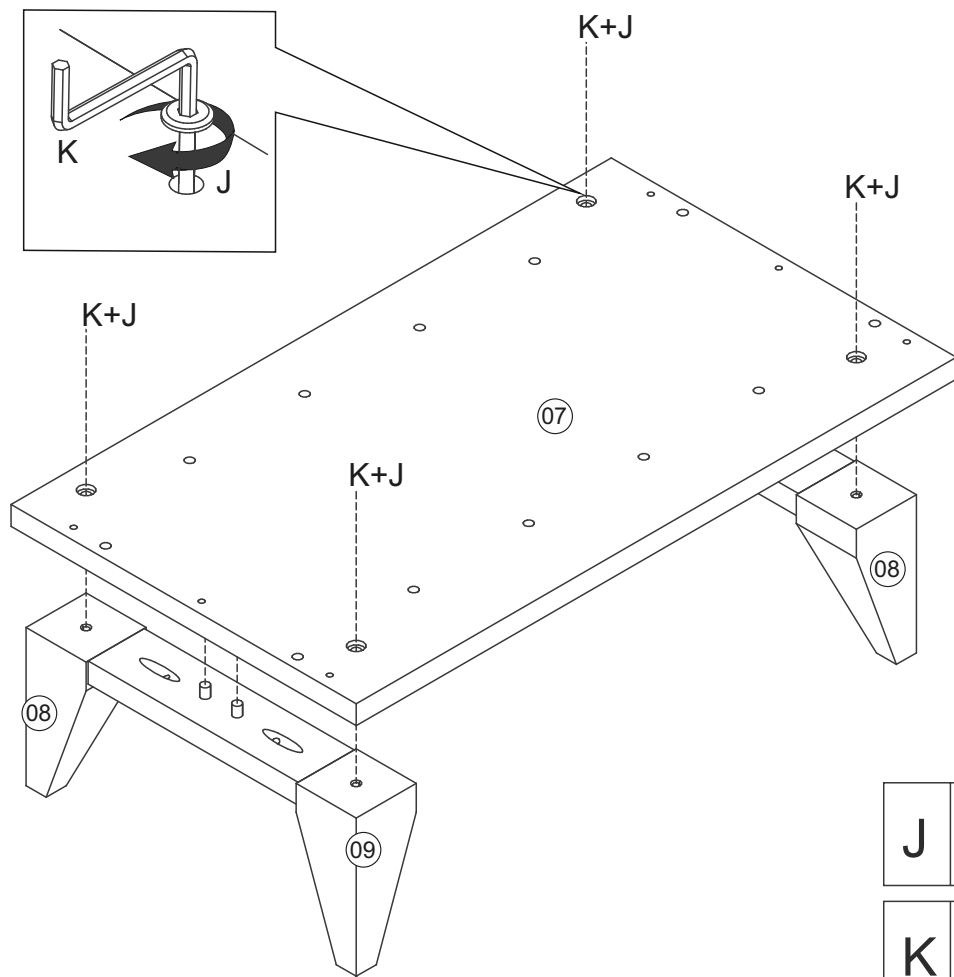
06




| | | |
|---|---|----|
| J |  Ø 9/32" x 2" | 04 |
| K |  Allen Key | 01 |


07

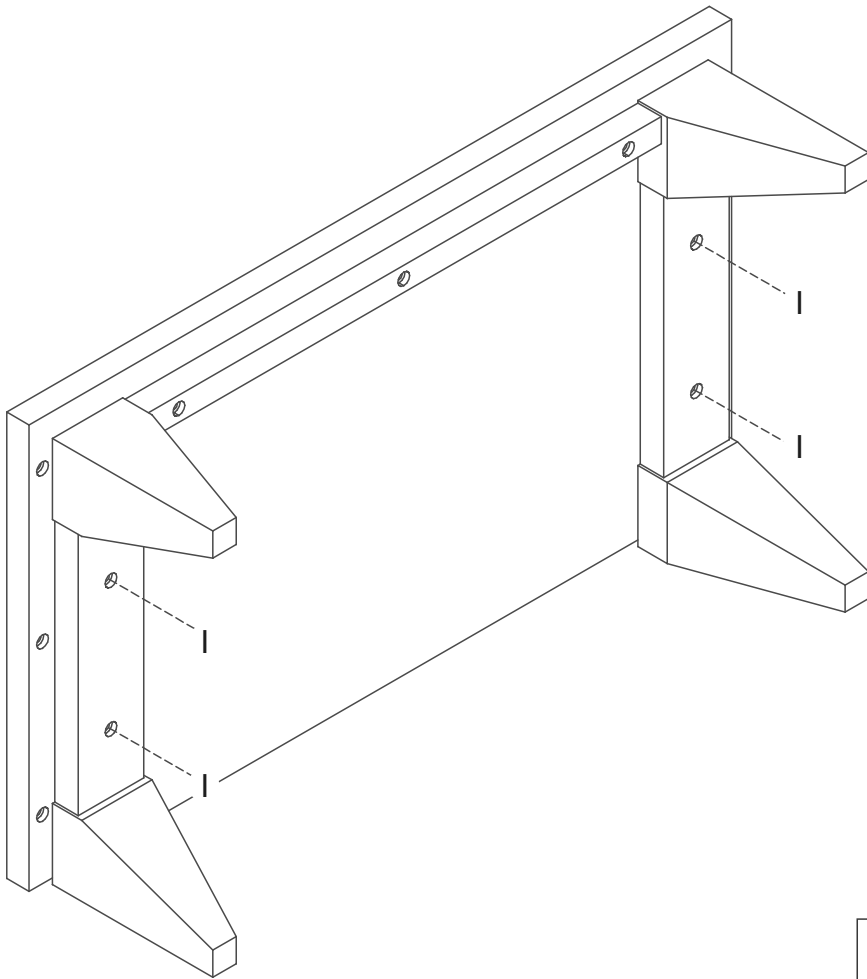


| | | |
|---|---|----|
| I |  Ø 5/32" x 1.3/16" | 04 |
|---|---|----|

08


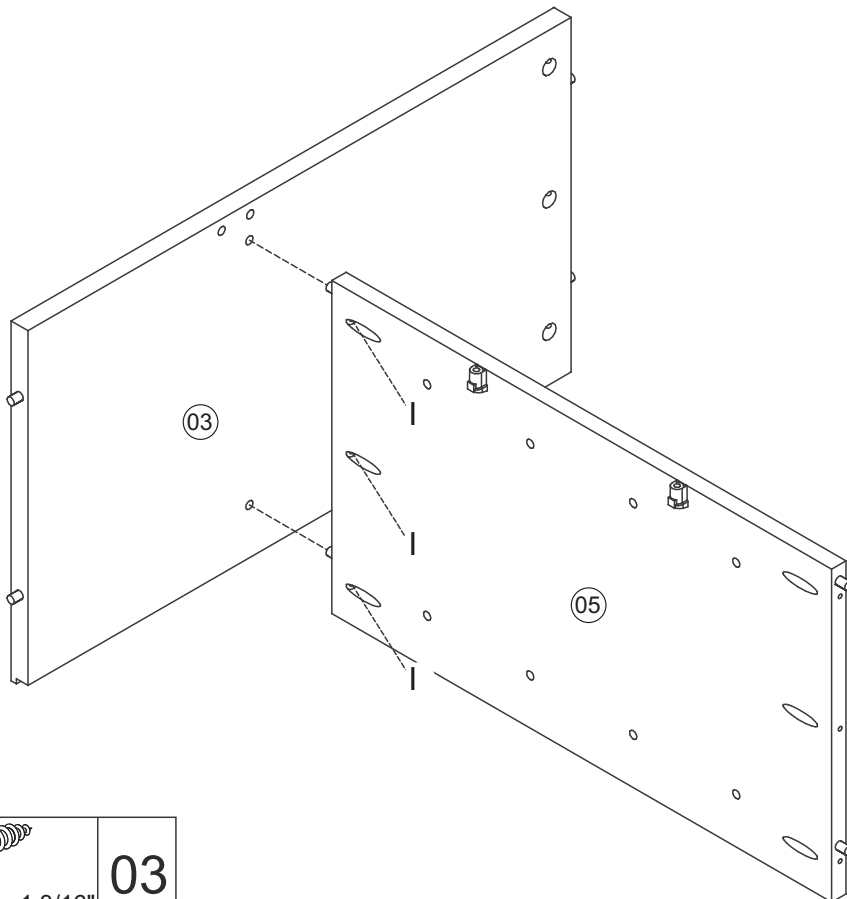


| | | |
|---|--|----|
| I |  Ø 5/32" x 1.3/16" | 03 |
|---|--|----|


09

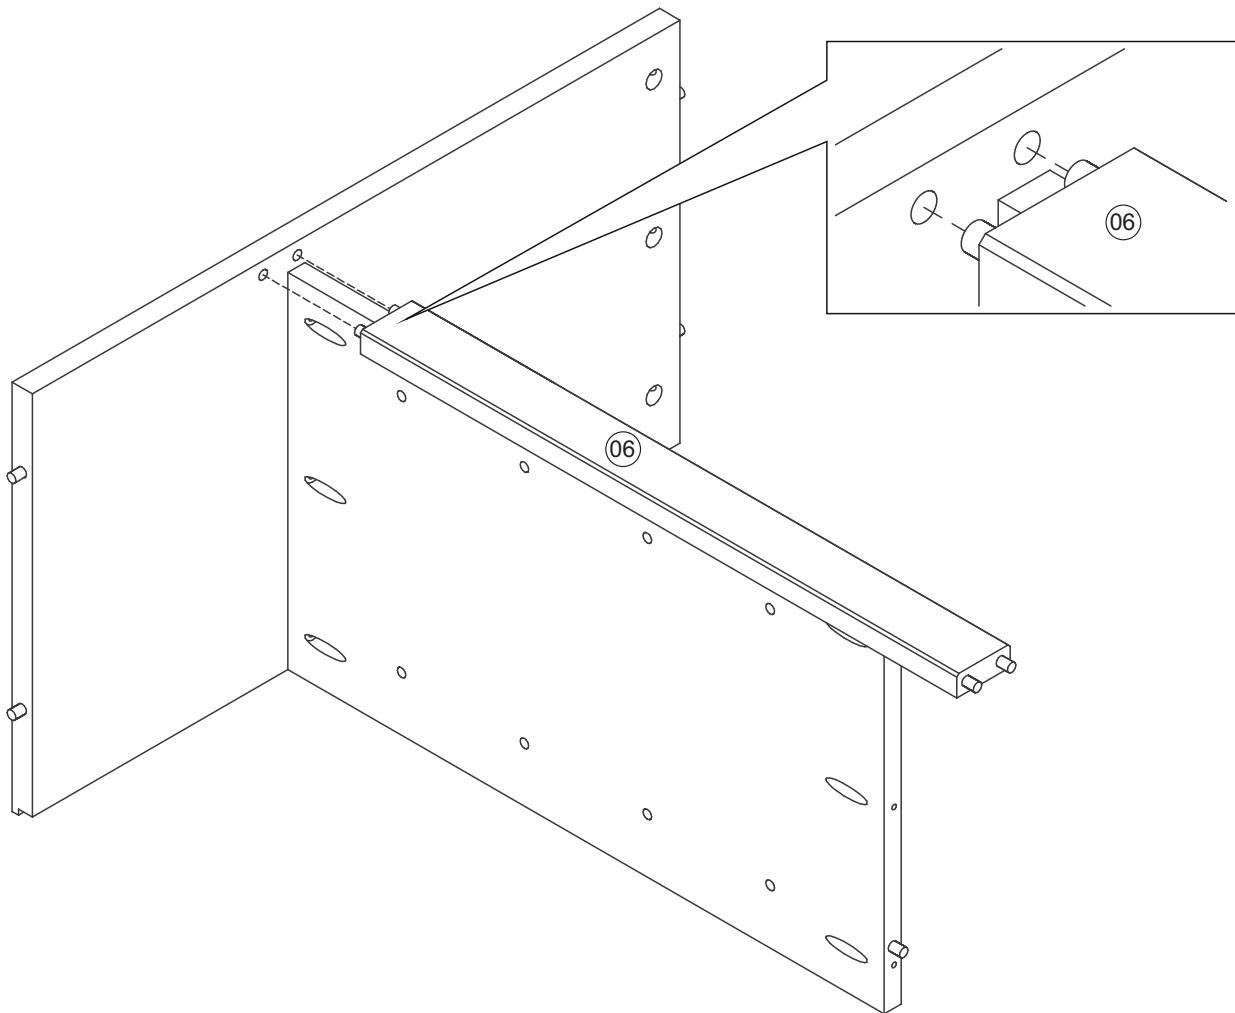


10

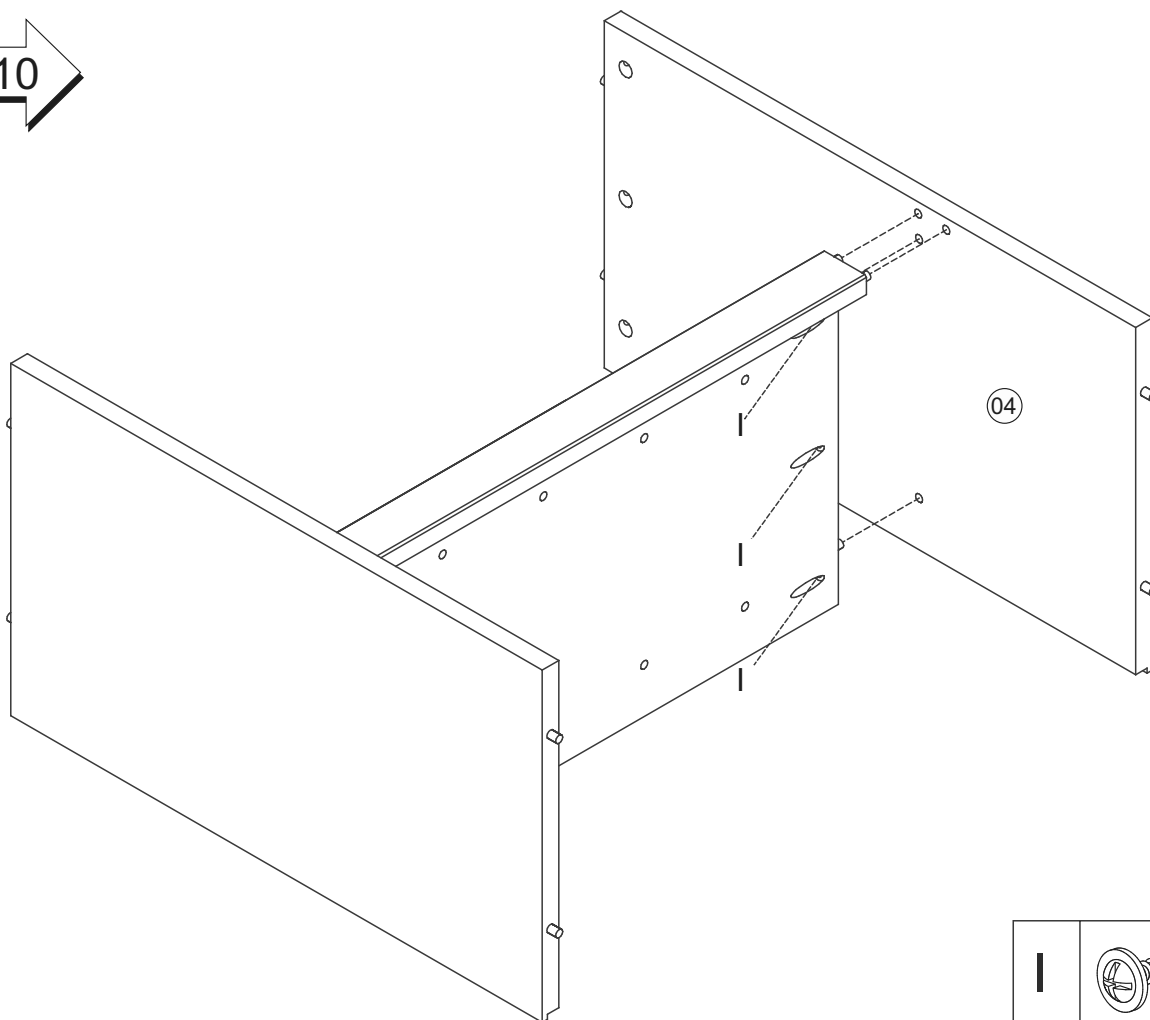

11

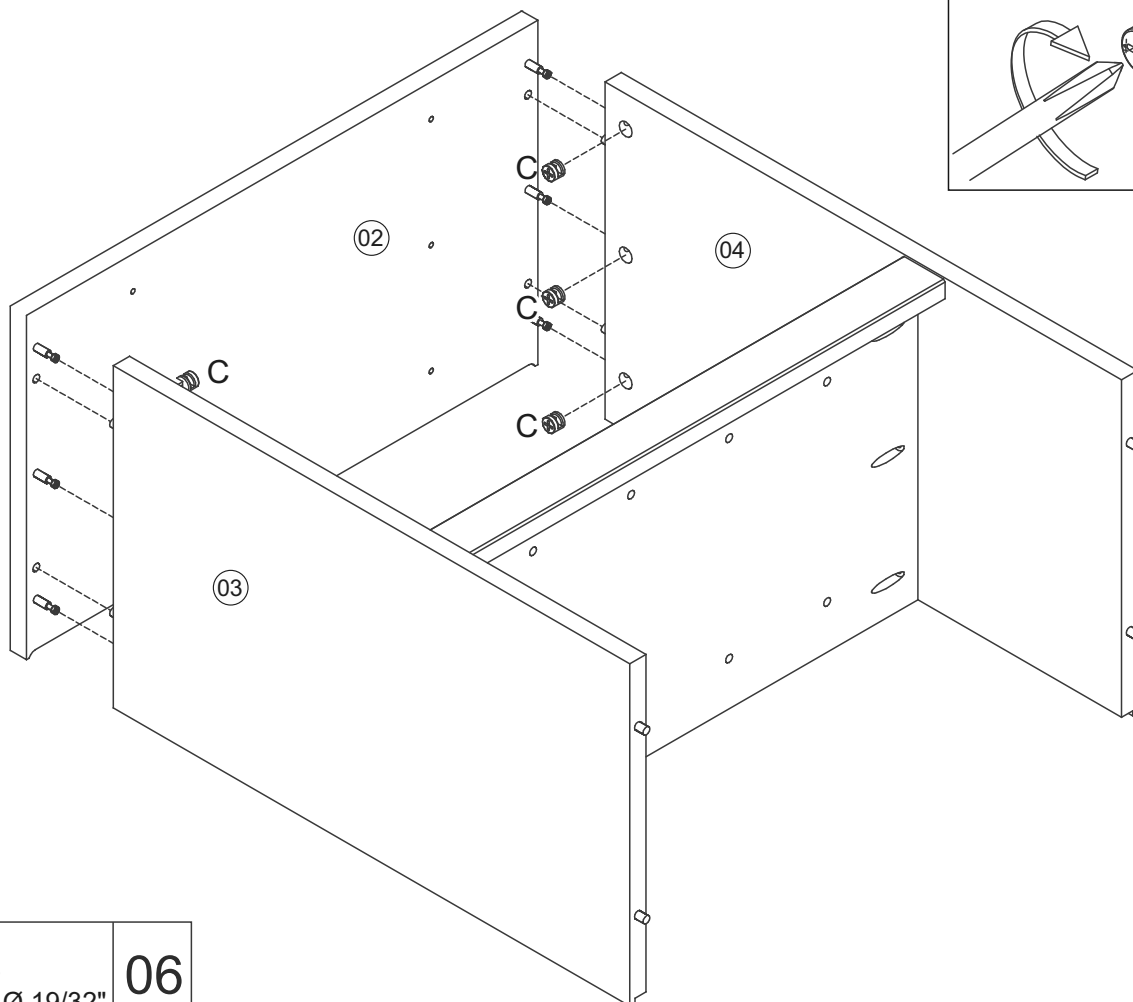


C




Ø 19/32"

06

12

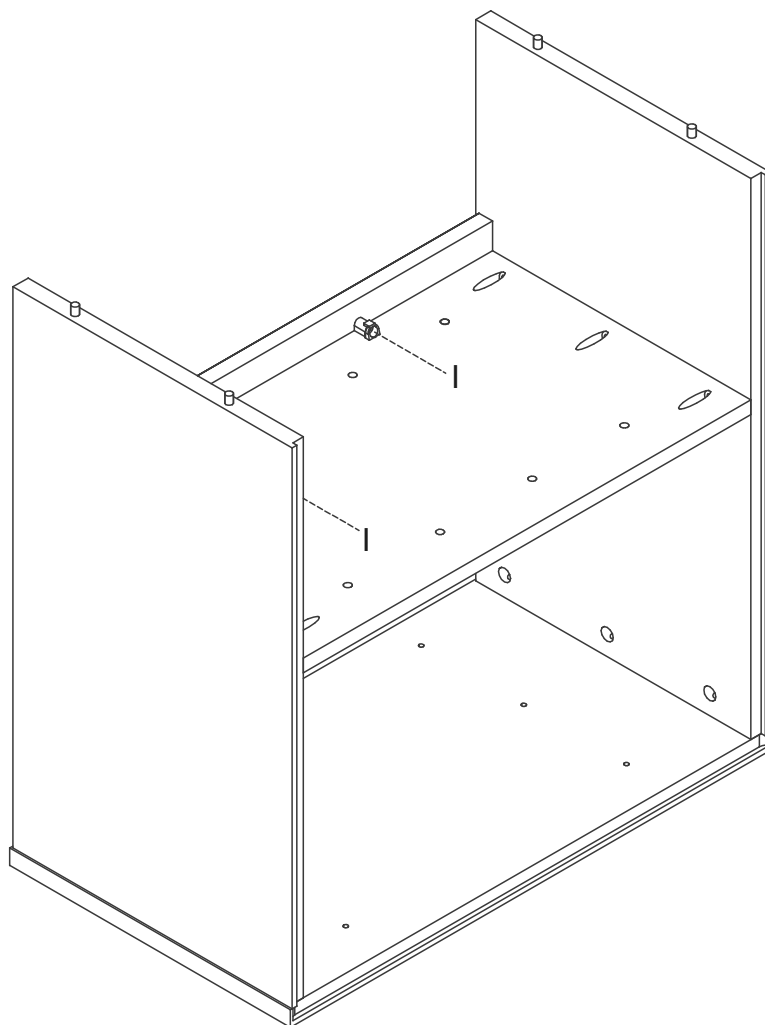


I




Ø 5/32" x 1.3/16"

02


13

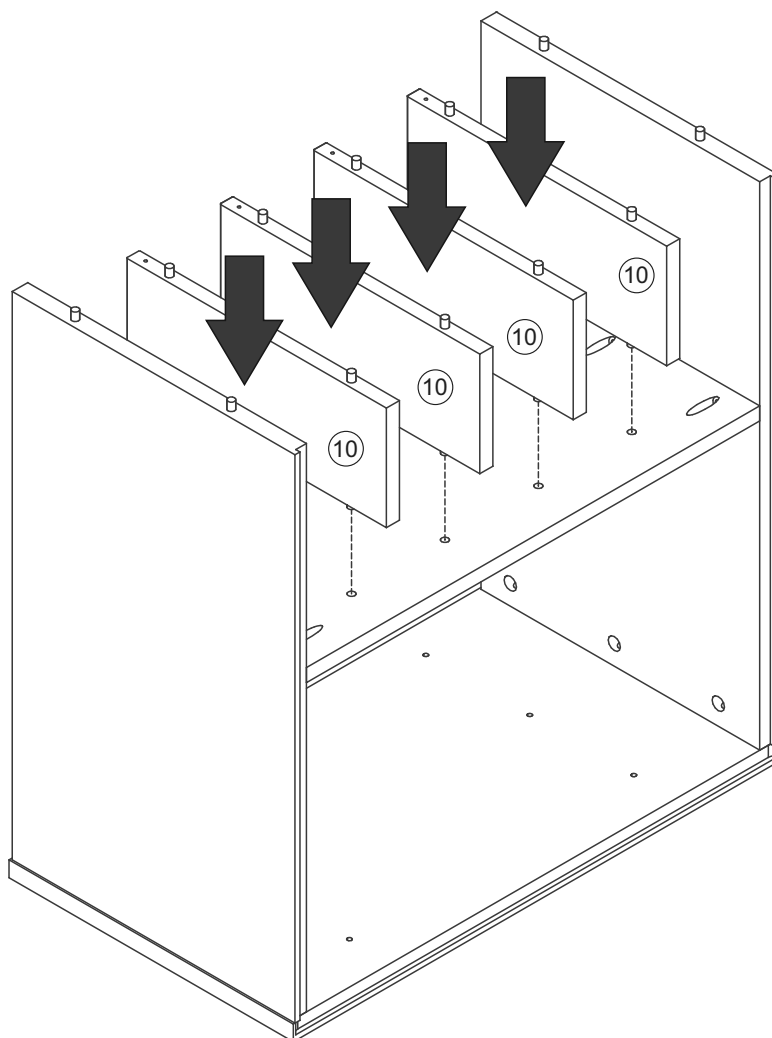




14

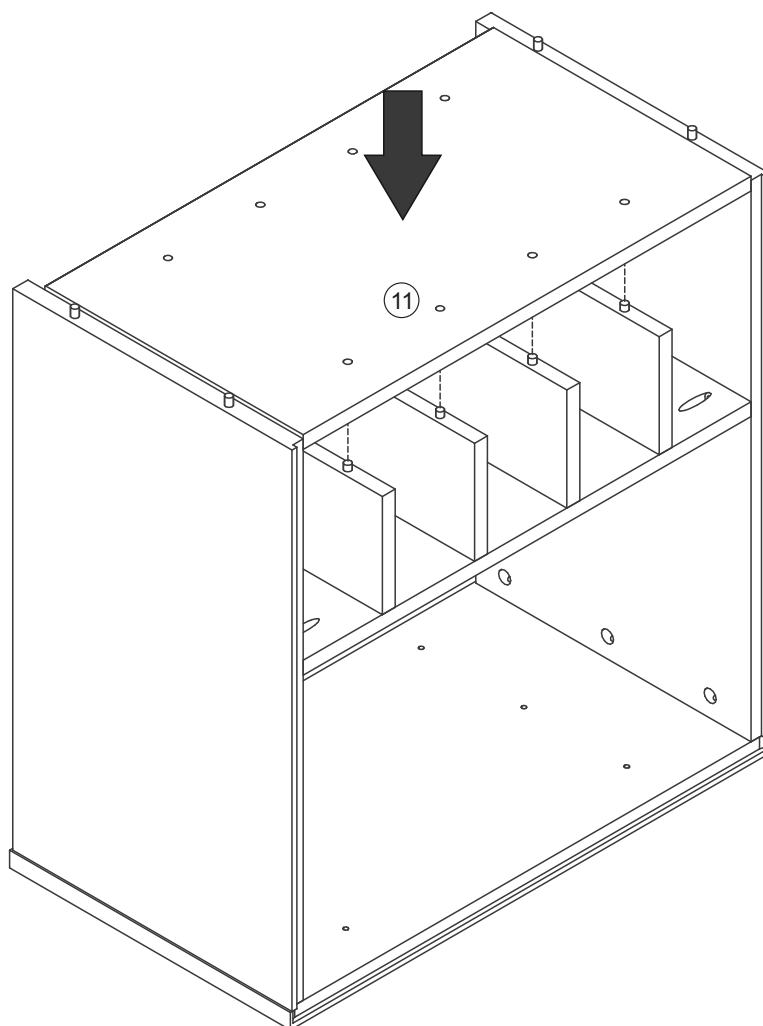



15

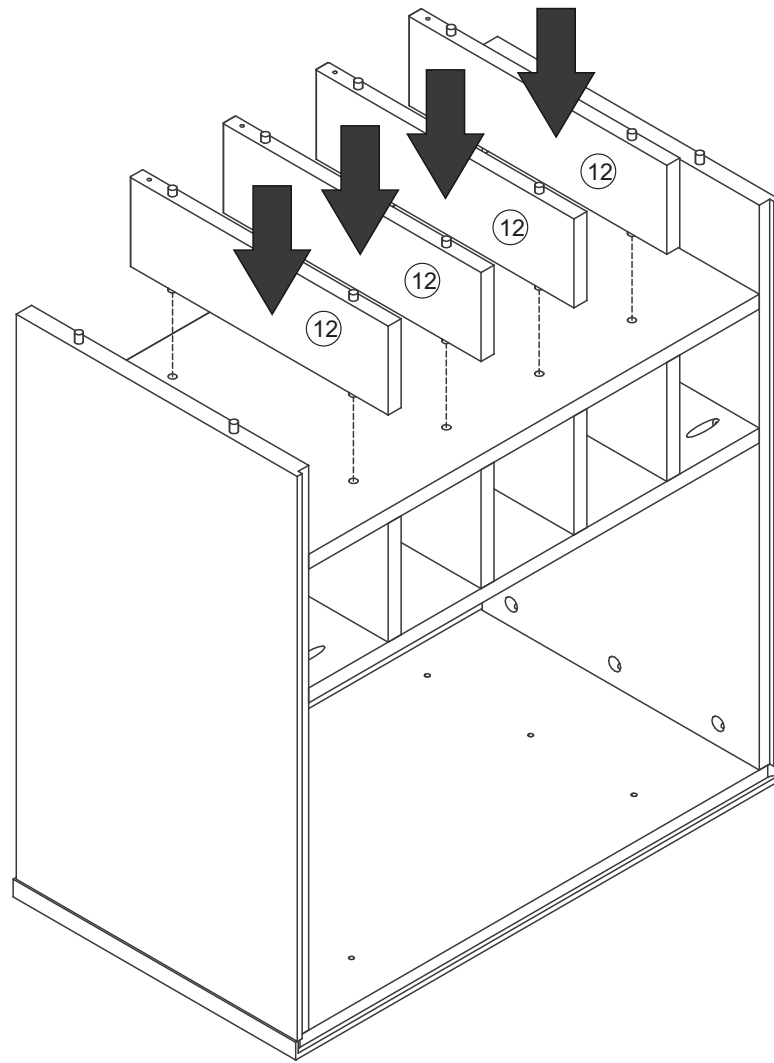




16

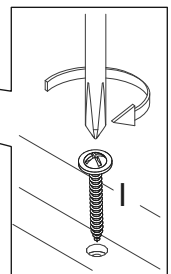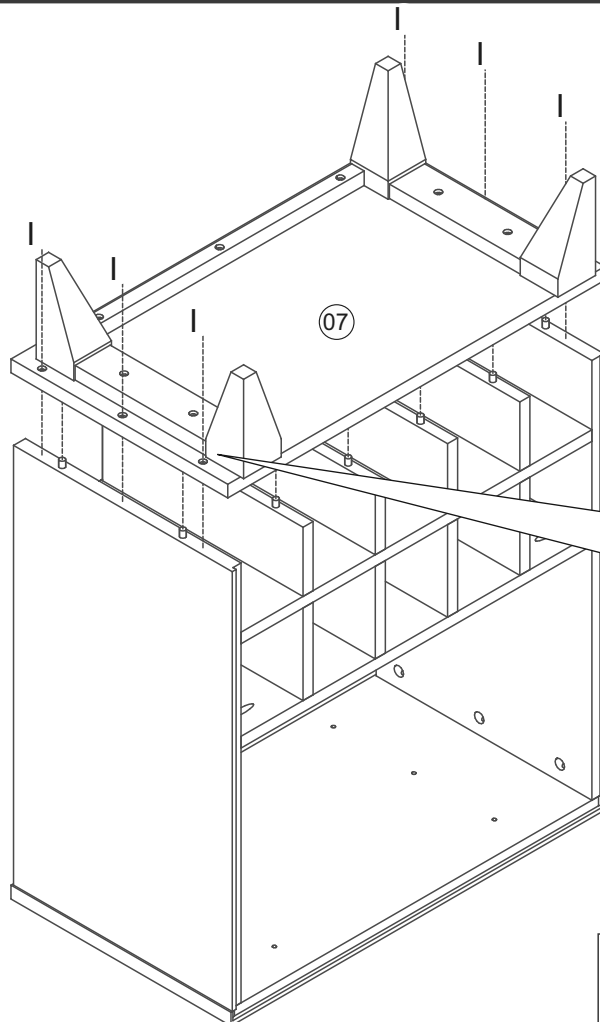



17

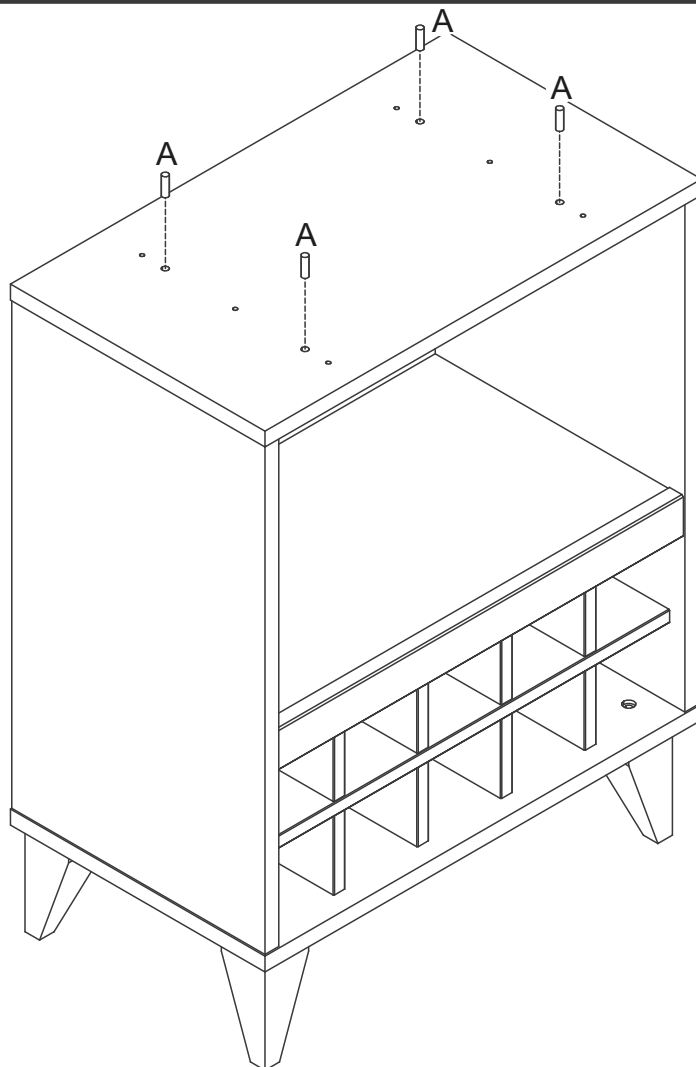



18

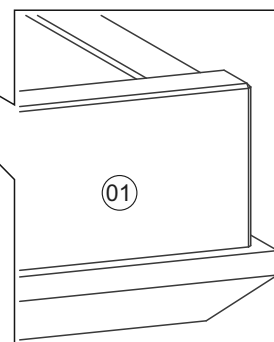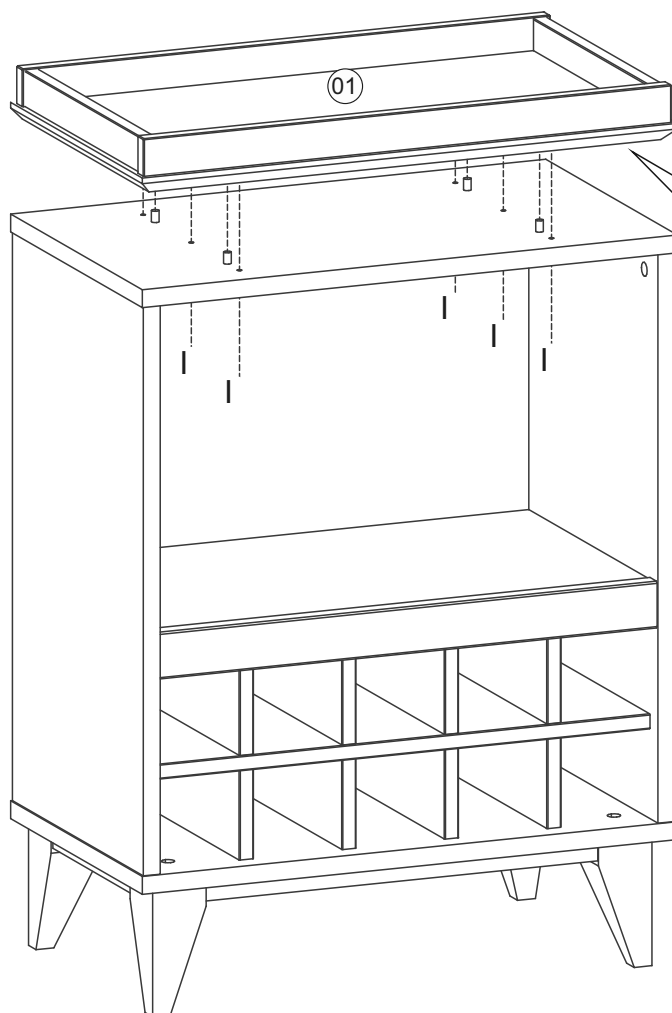

19

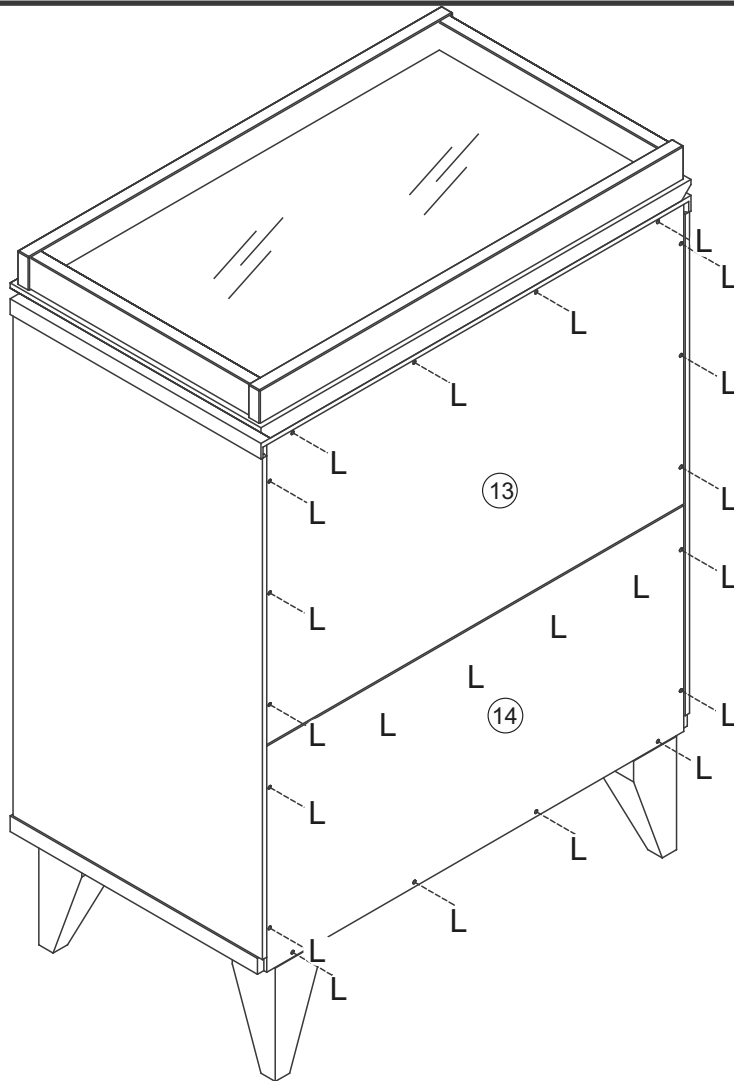

20

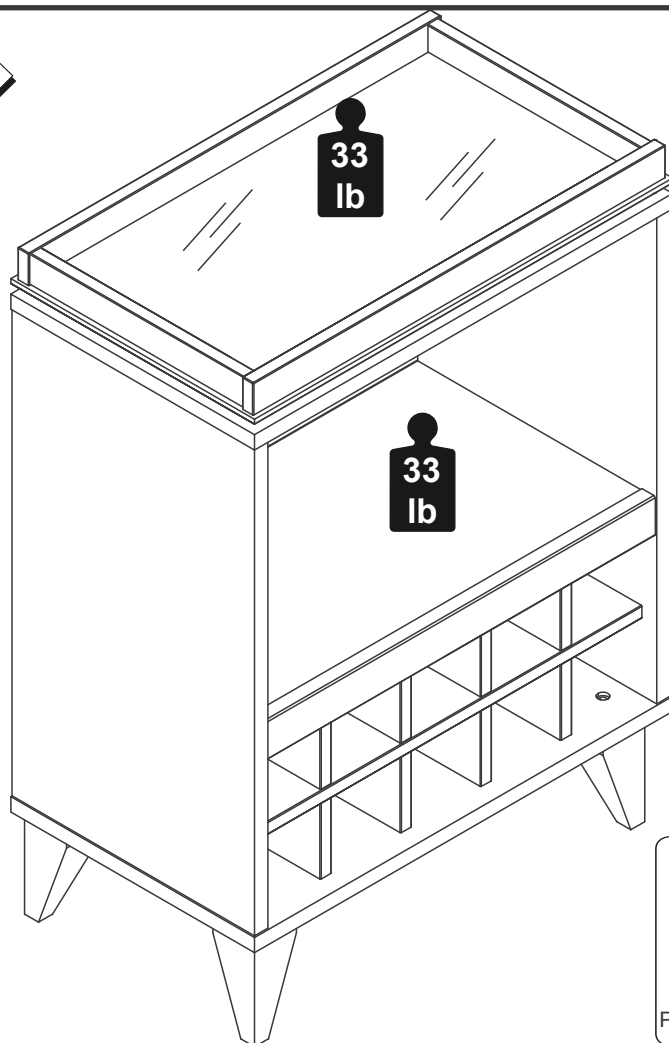

Hi there!
Have you finish the assembly of your product?
How about choosing a good place to set your sticker?
It's green and was send to you inside the accessories bag.

