


ASSEMBLY INSTRUCTIONS

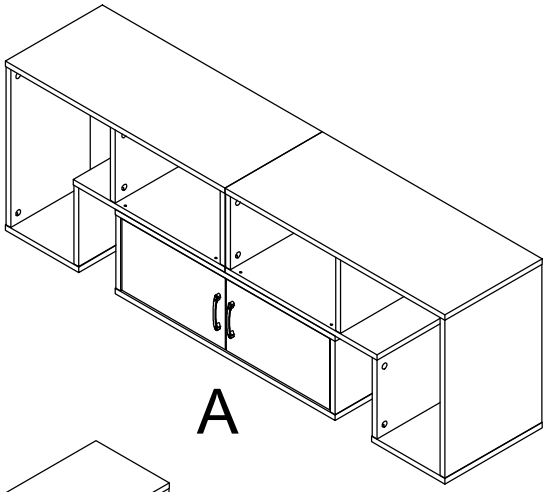


A

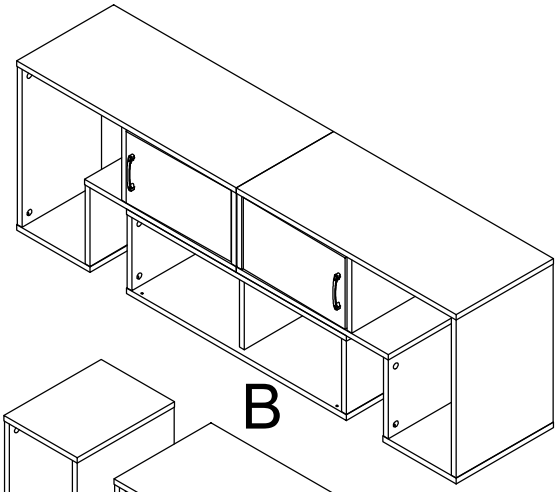


B

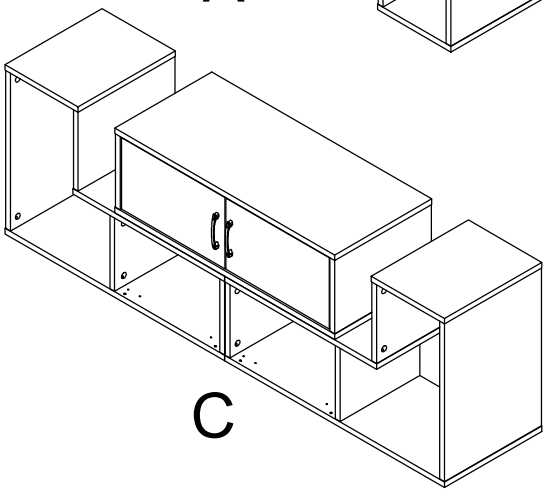


C

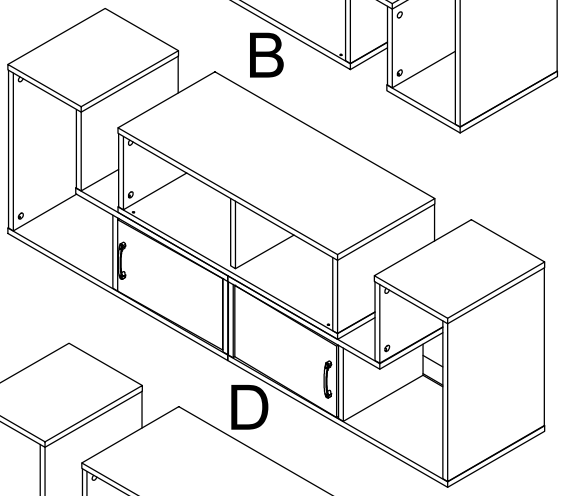


D

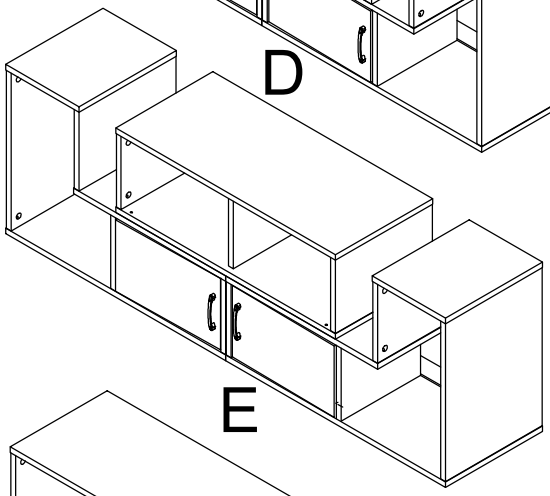


E

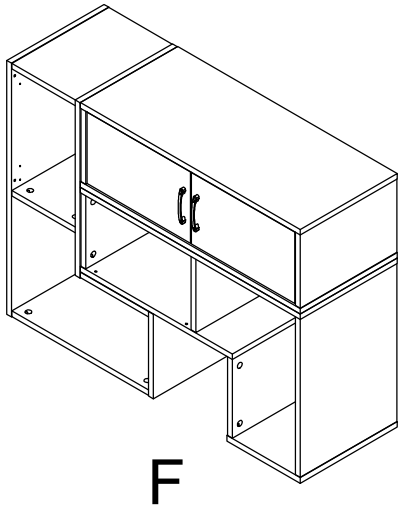


F

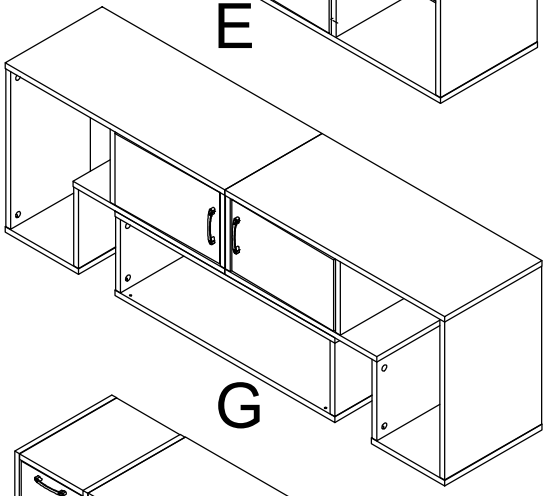

G

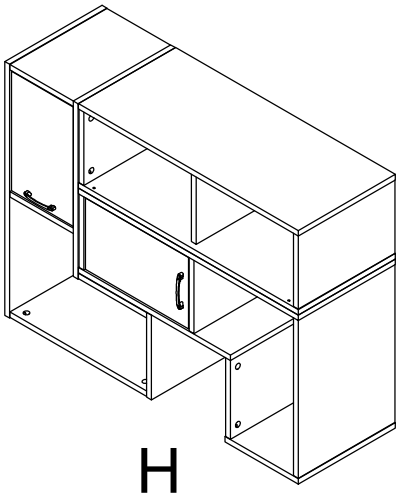



H

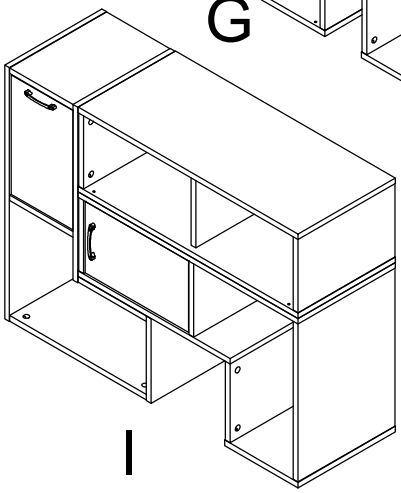


I


WARNING !



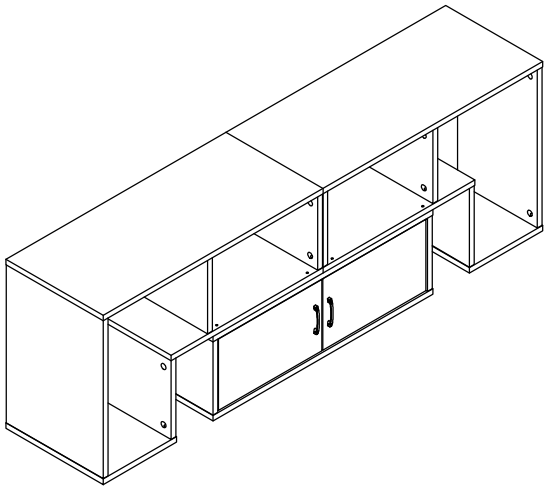

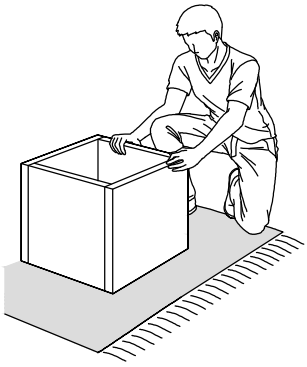

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

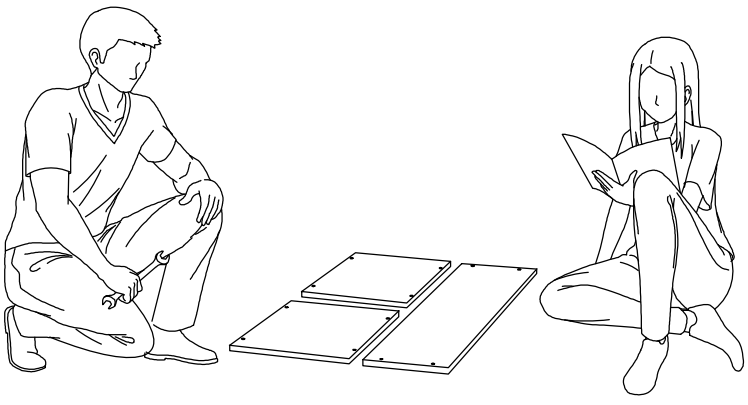



This furniture requires 2 people to assembly.


Make sure no parts are missing or damaged before assembly.

Board Identification

Not actual size

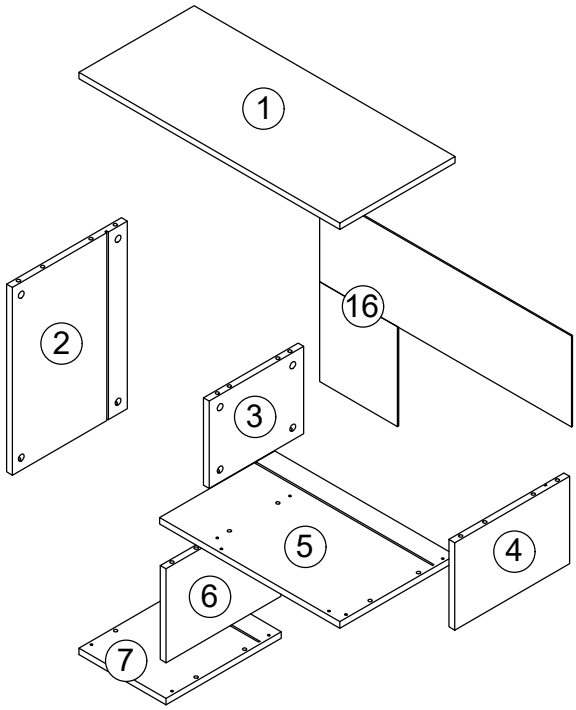


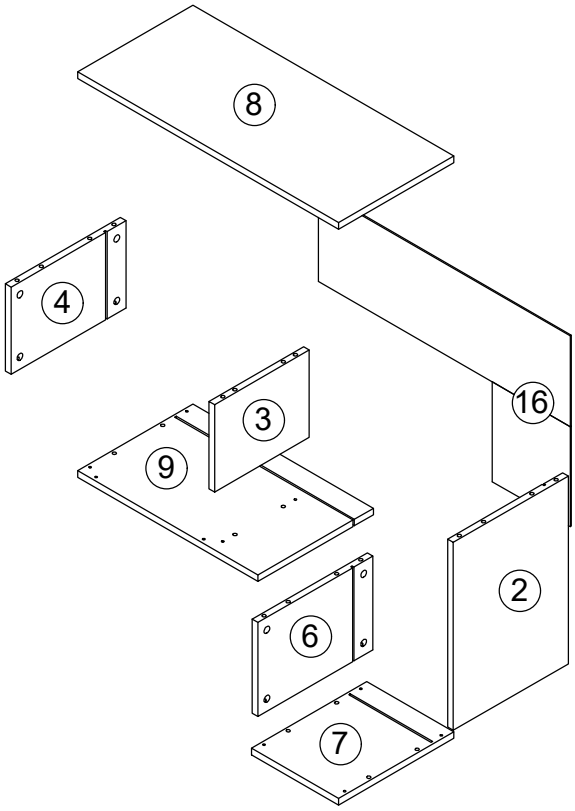

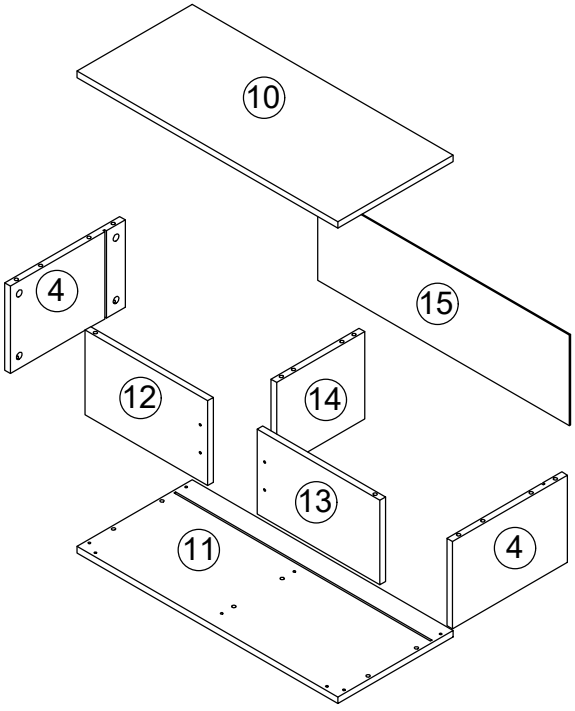


BOARD IDENTIFICATION


Not actual size

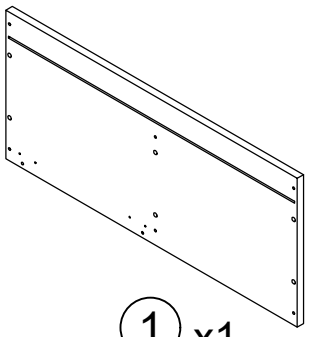


① x1

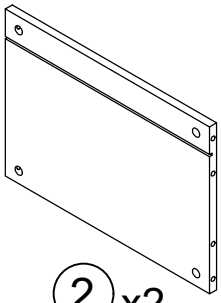


② x2

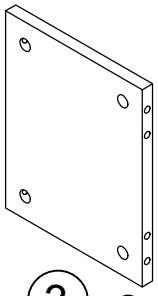


③ x2

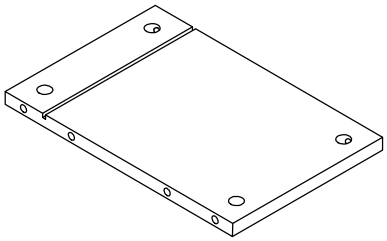


④ x4

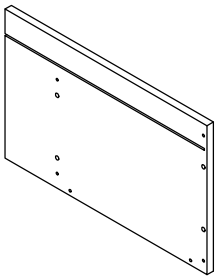


⑤ x1

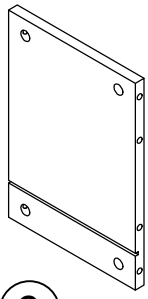


⑥ x2

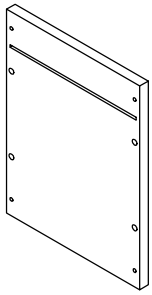


⑦ x2

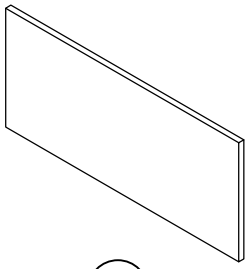


⑧ x1

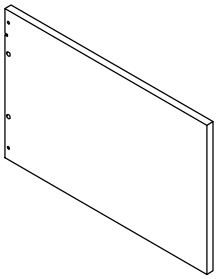


⑨ x1

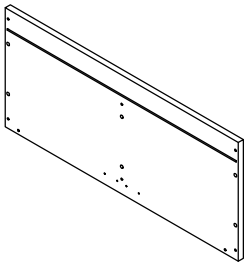


⑩ x1

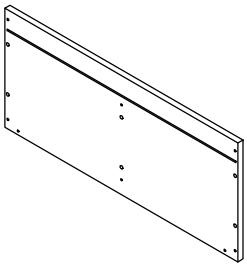


⑪ x1

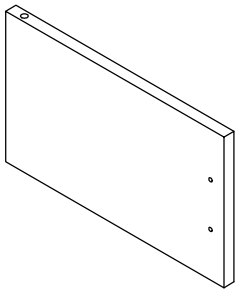


⑫ x1

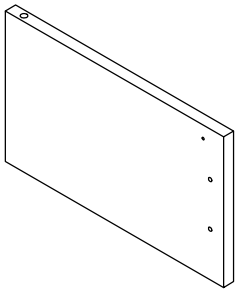


⑬ x1

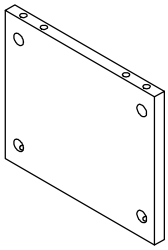

⑭ x1

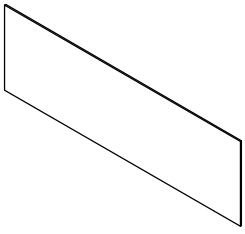

⑮ x1

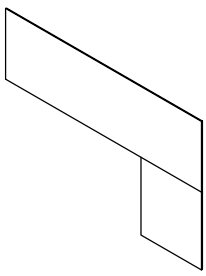


⑯ x2

HARDWARE LIST




A	x44+2




Ø15x9.5

B	x44+2



Ø8x30


C	x44+2



M4x19


D-1 D-2

D	x2




Ø3.5x12

E	x2+1



F	x4+1




G	x2




Ø21

H	x32

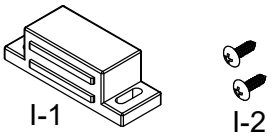


I-1 I-2


I	x2




J	x32+2



K	x2+1




L	x4




M	x1

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

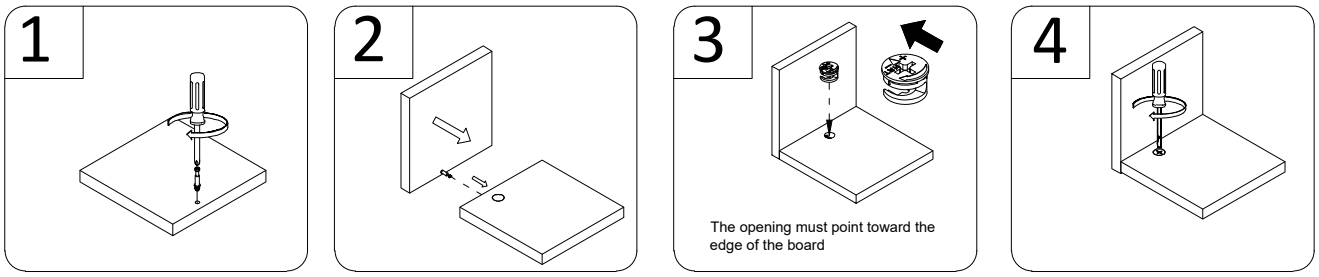


STEP 1

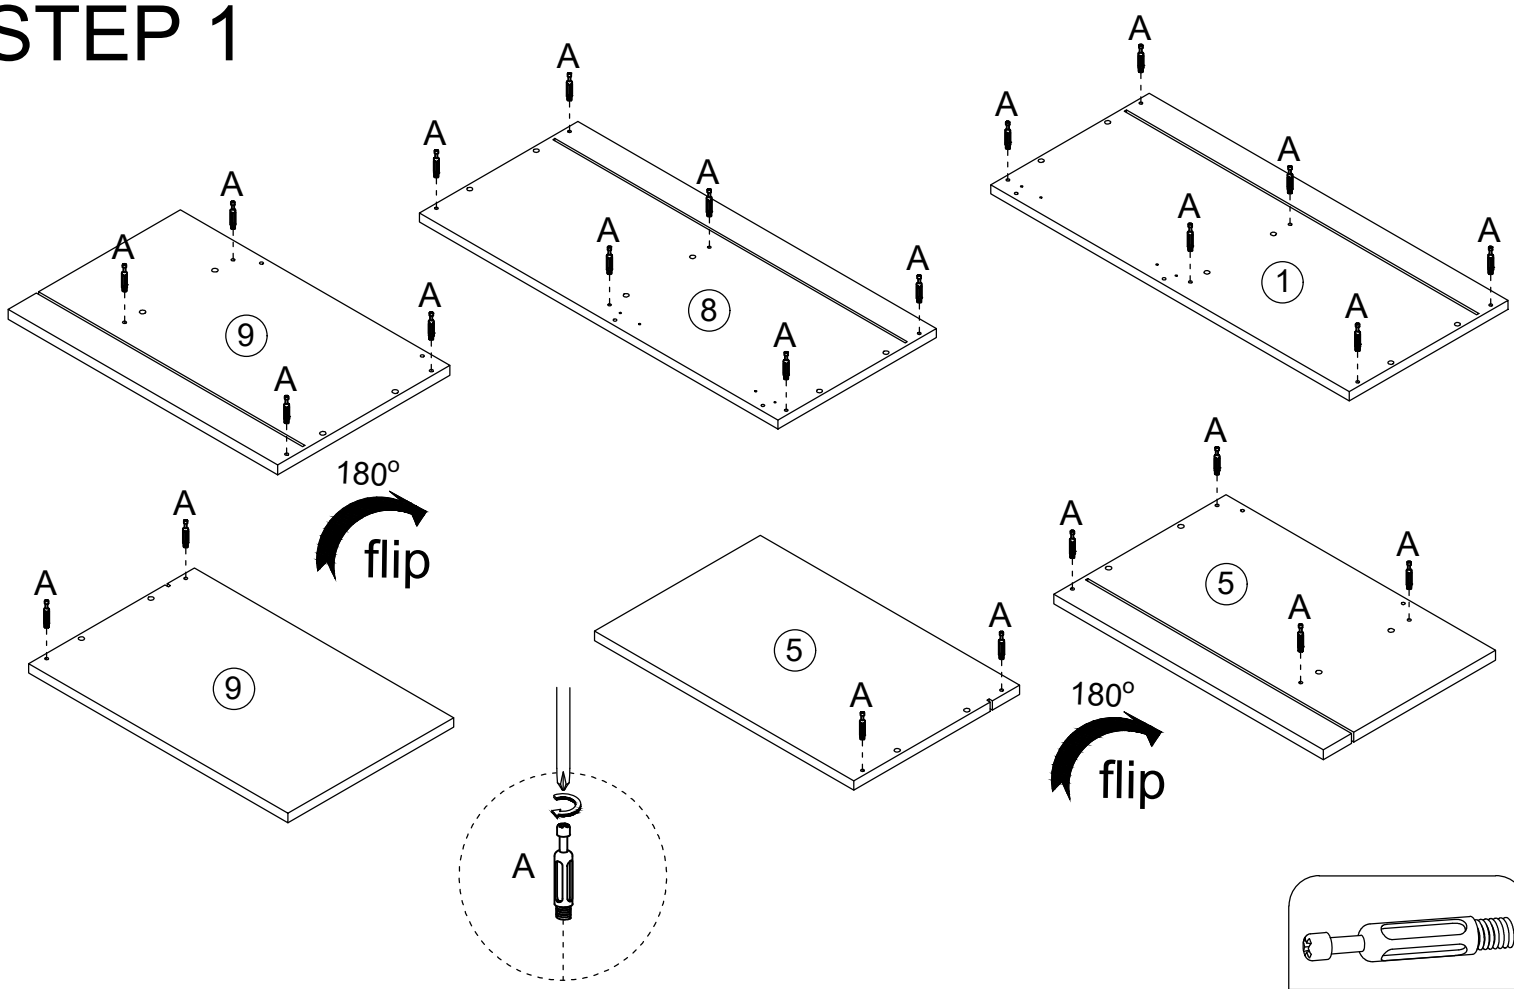


STEP 2

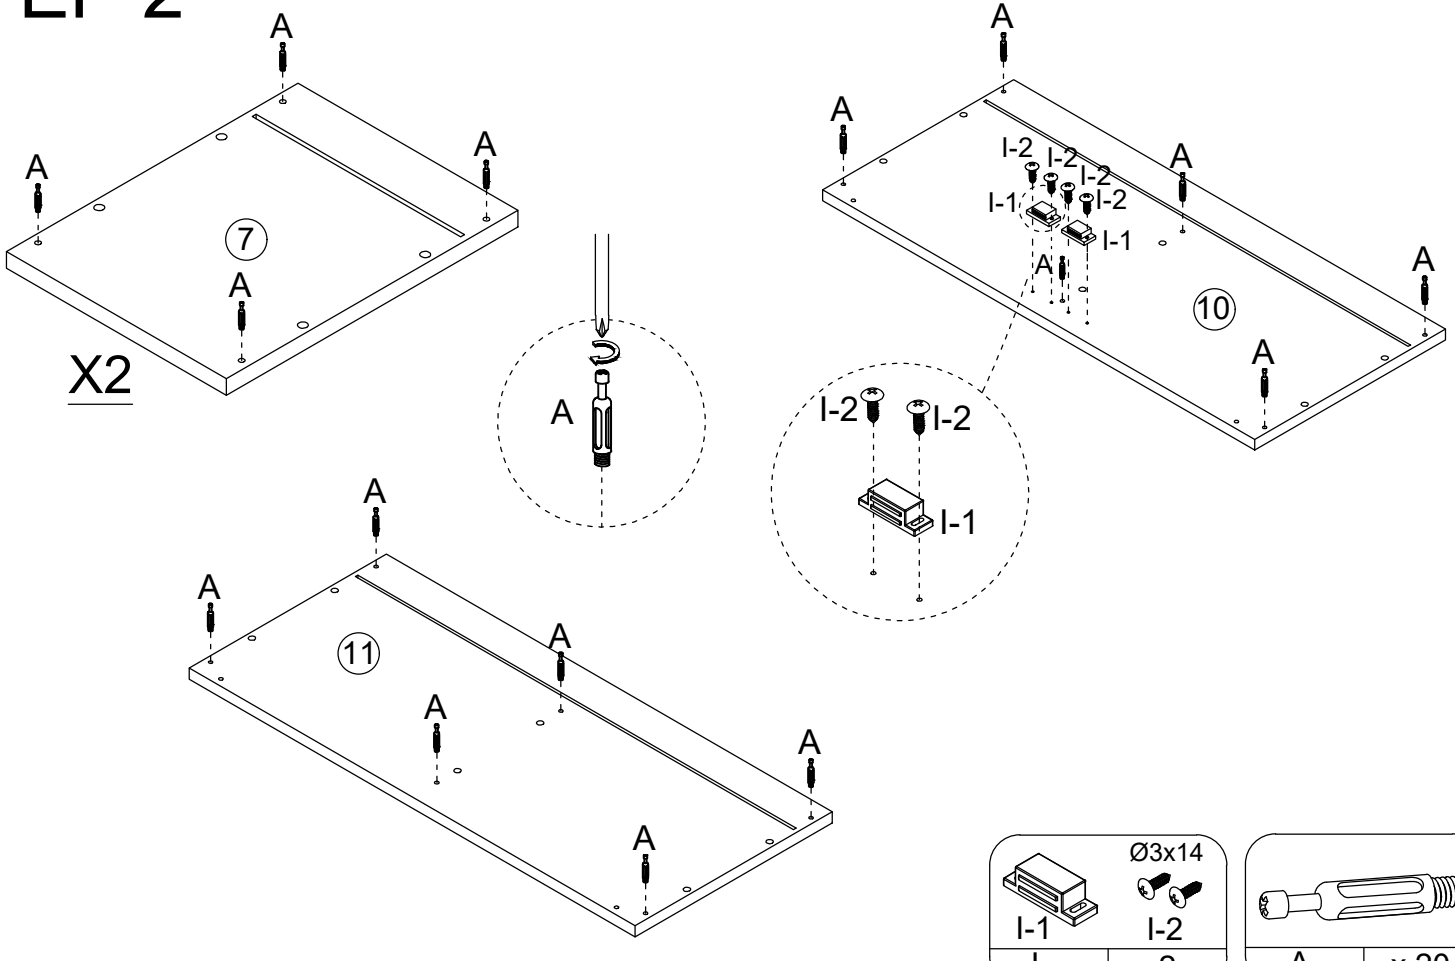

STEP 3

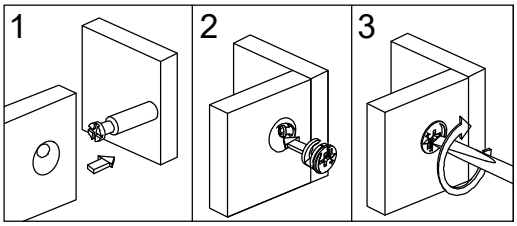


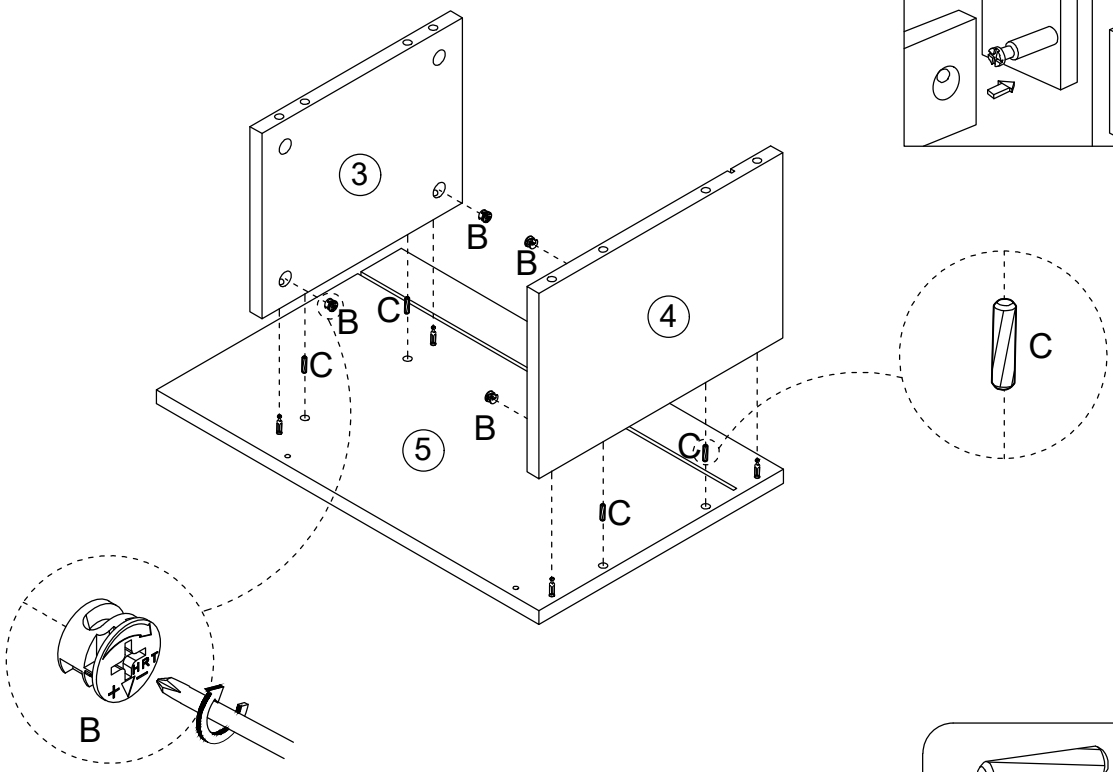


Ø8x30	
C	x 4

Ø15x9.5	
B	x 4

STEP 4

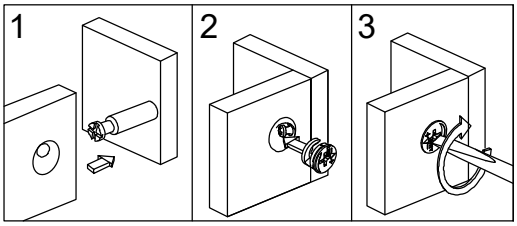


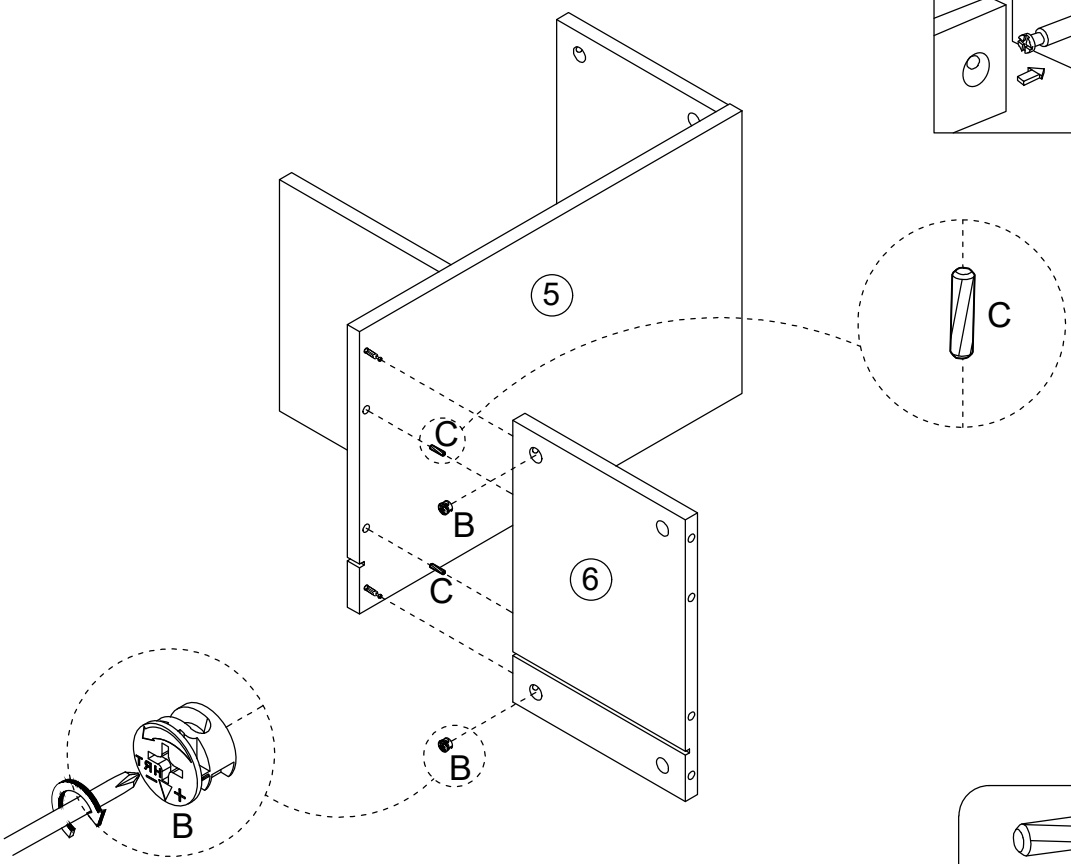


Ø8x30	
C	x 2

Ø15x9.5	
B	x 2

STEP 5

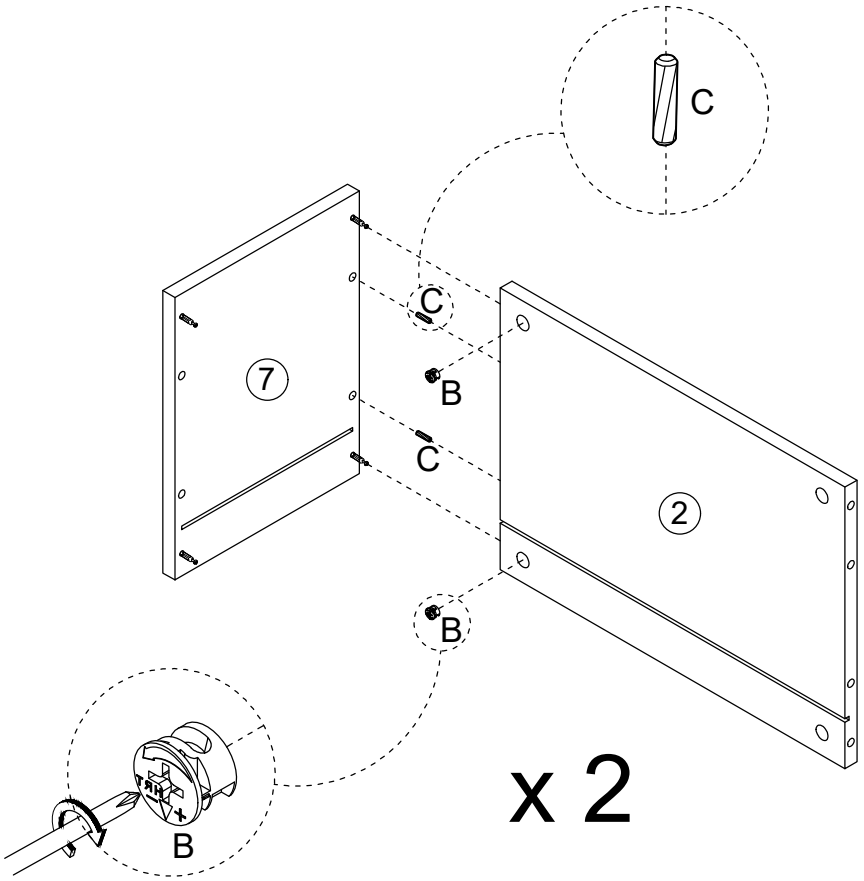


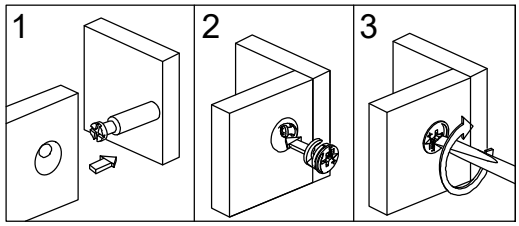


Ø8x30	
C	x 4

Ø15x9.5	
B	x 4

STEP 6

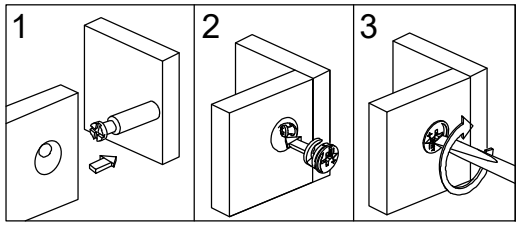


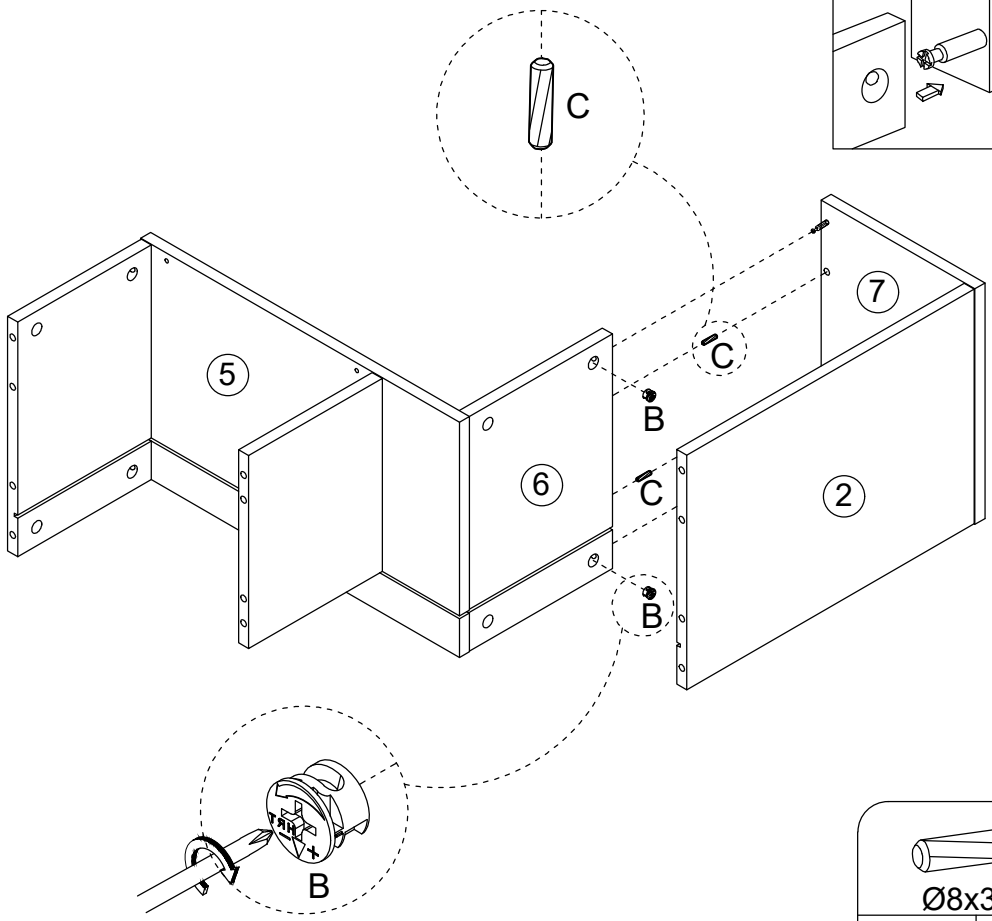


Ø8x30	
C	x 2

Ø15x9.5	
B	x 2

STEP 7

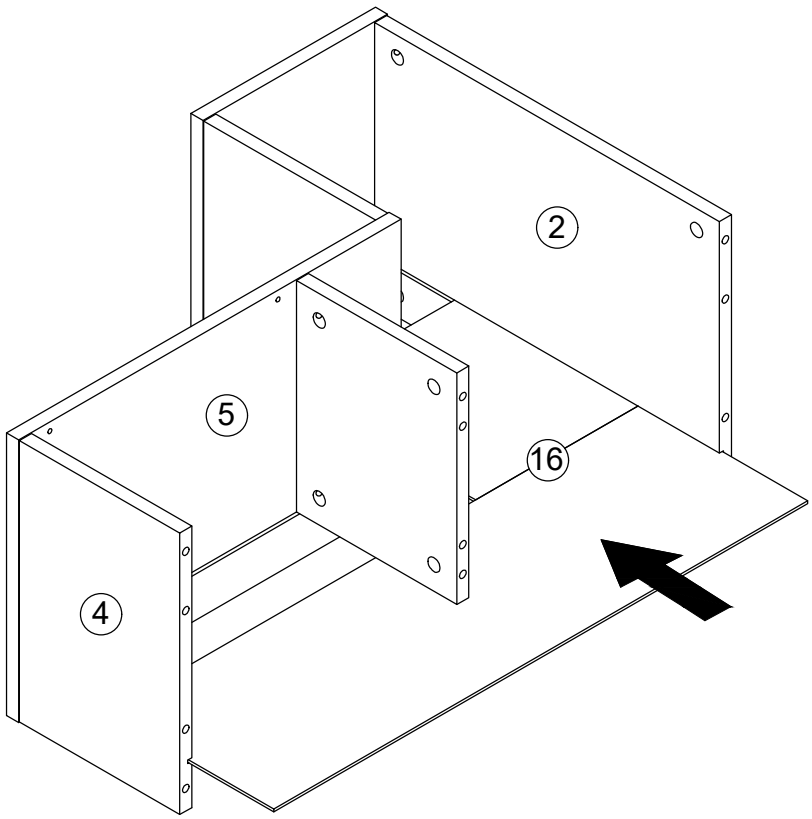


STEP 8

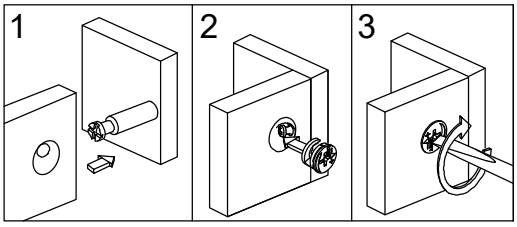



Ø8x30	
C	x 6

Ø15x9.5	
B	x 6


STEP 9

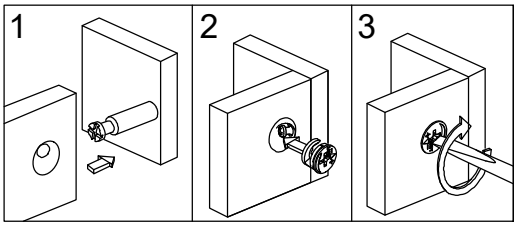


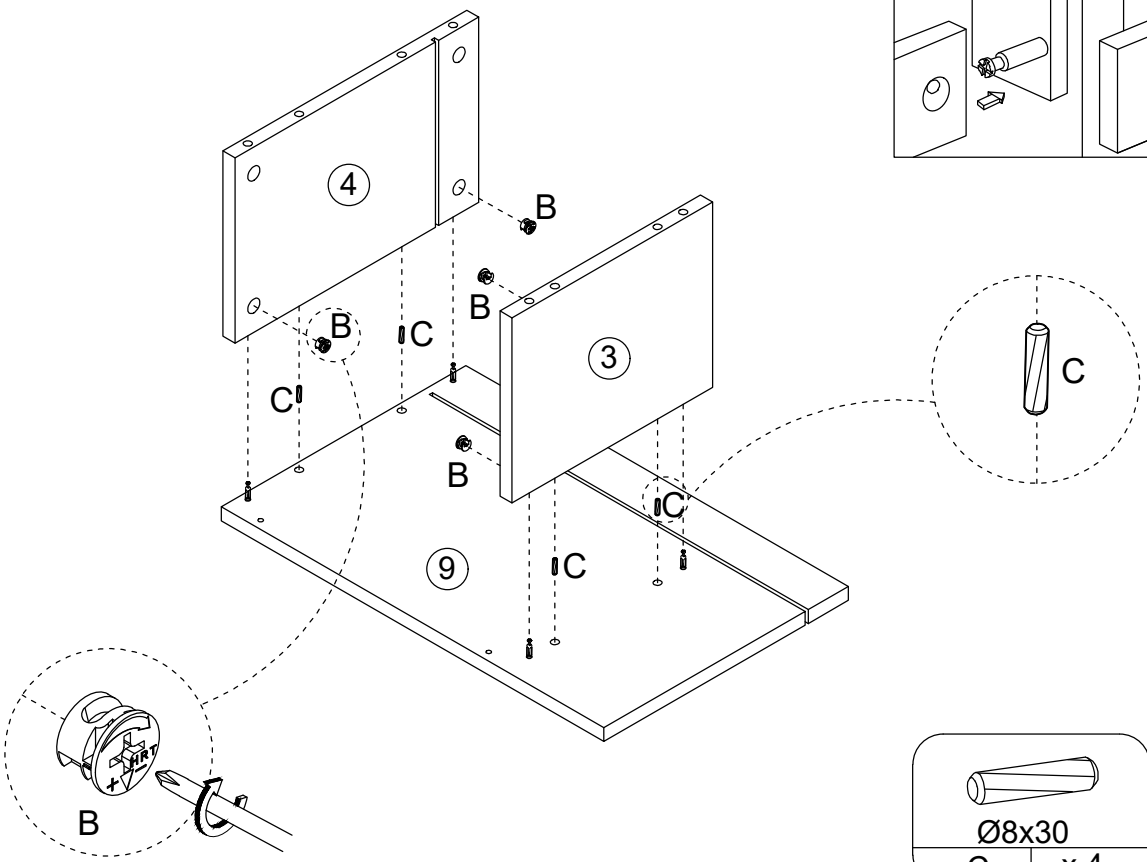



STEP 10

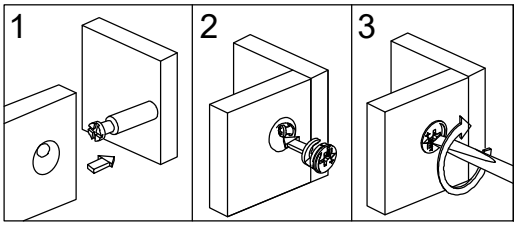


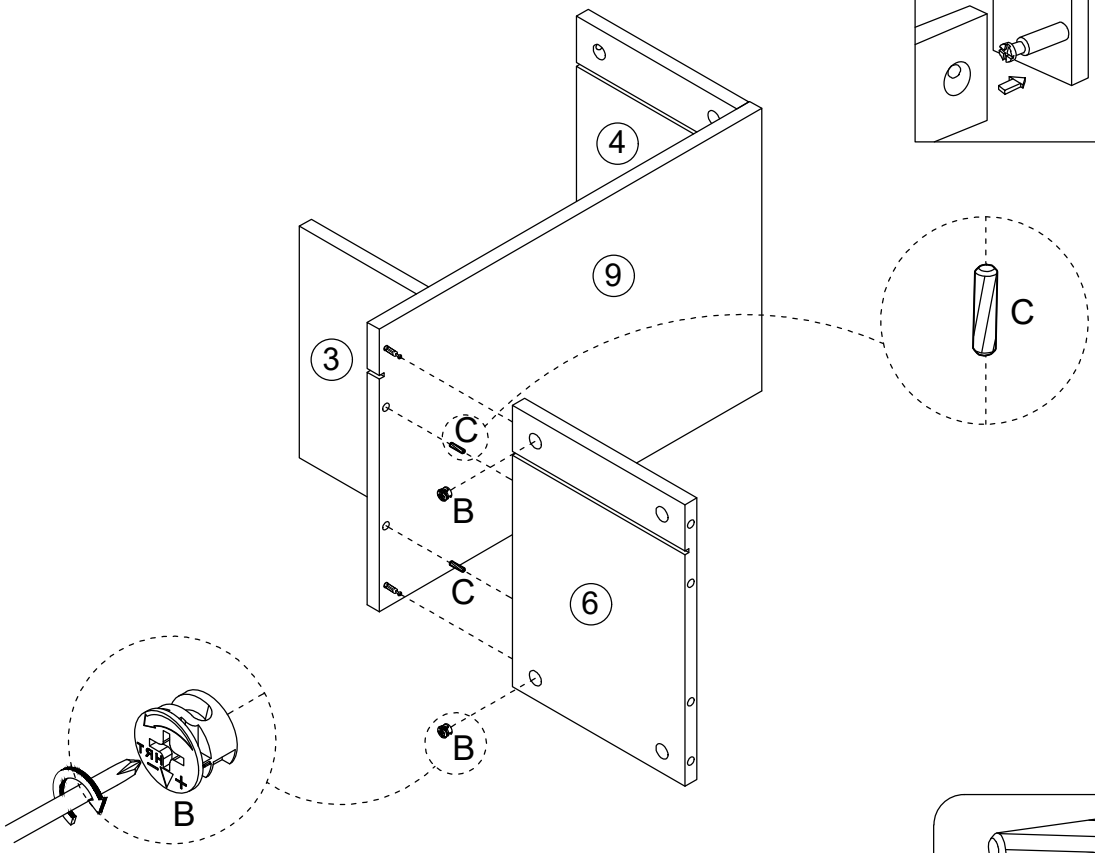






STEP 11

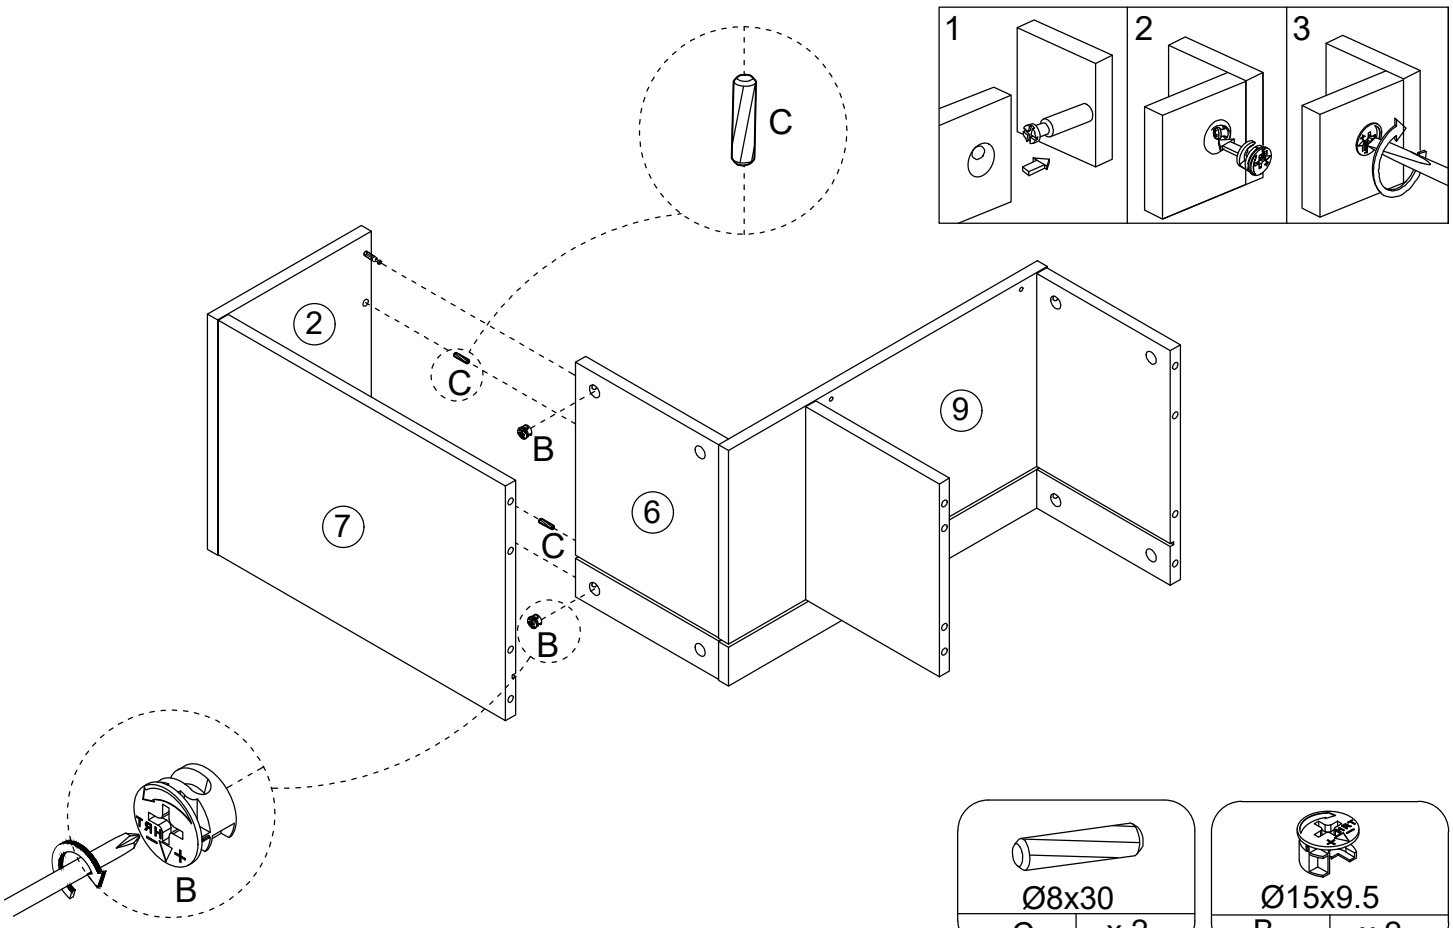


Ø8x30	
C	x 2

Ø15x9.5	
B	x 2

STEP 12

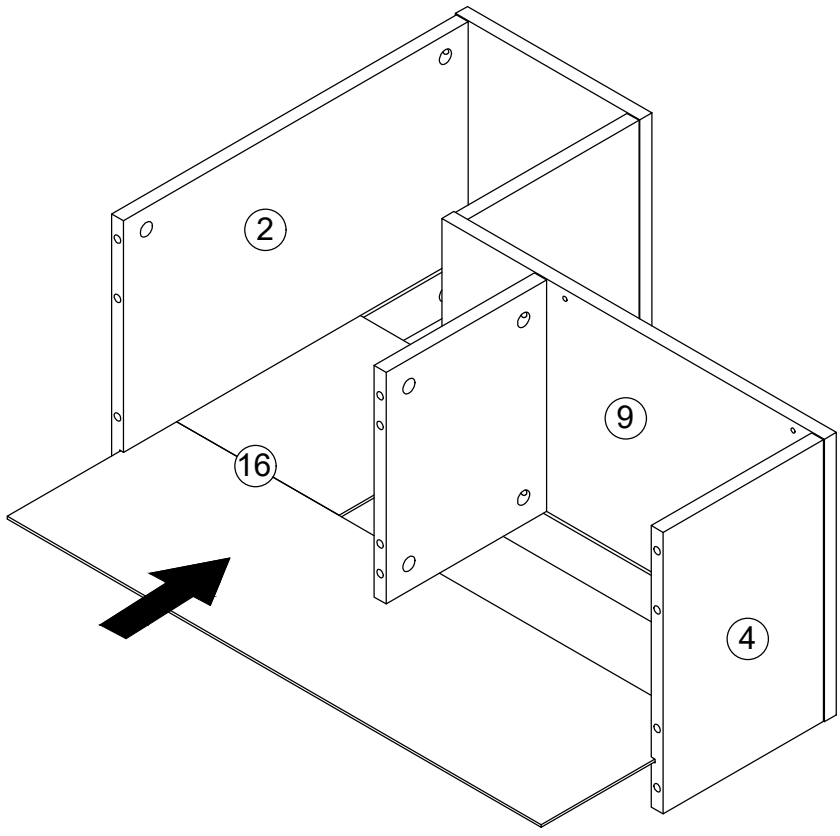


STEP 13

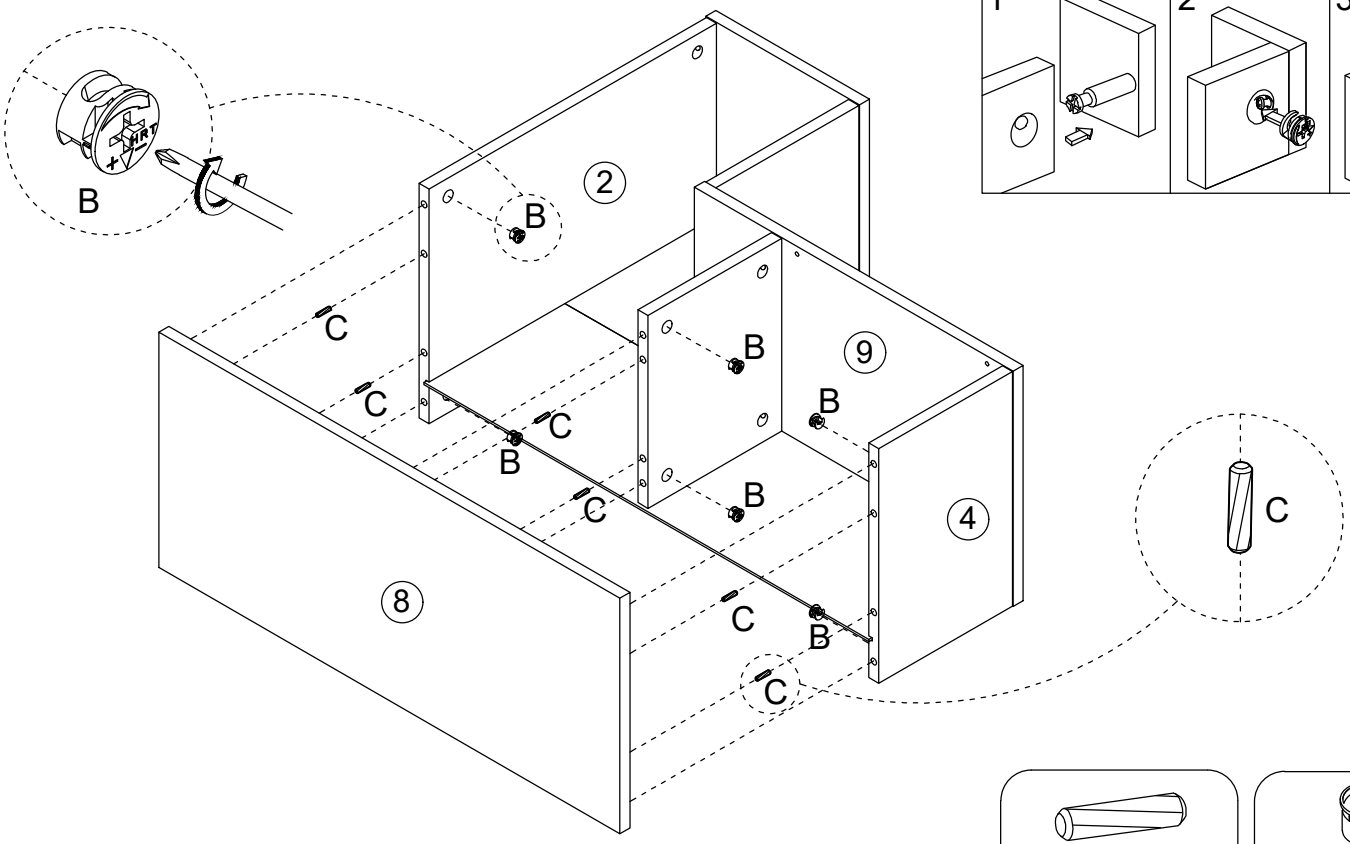


Ø8x30	
C	x 6

Ø15x9.5	
B	x 6

STEP 14

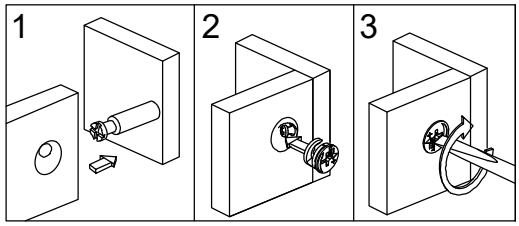


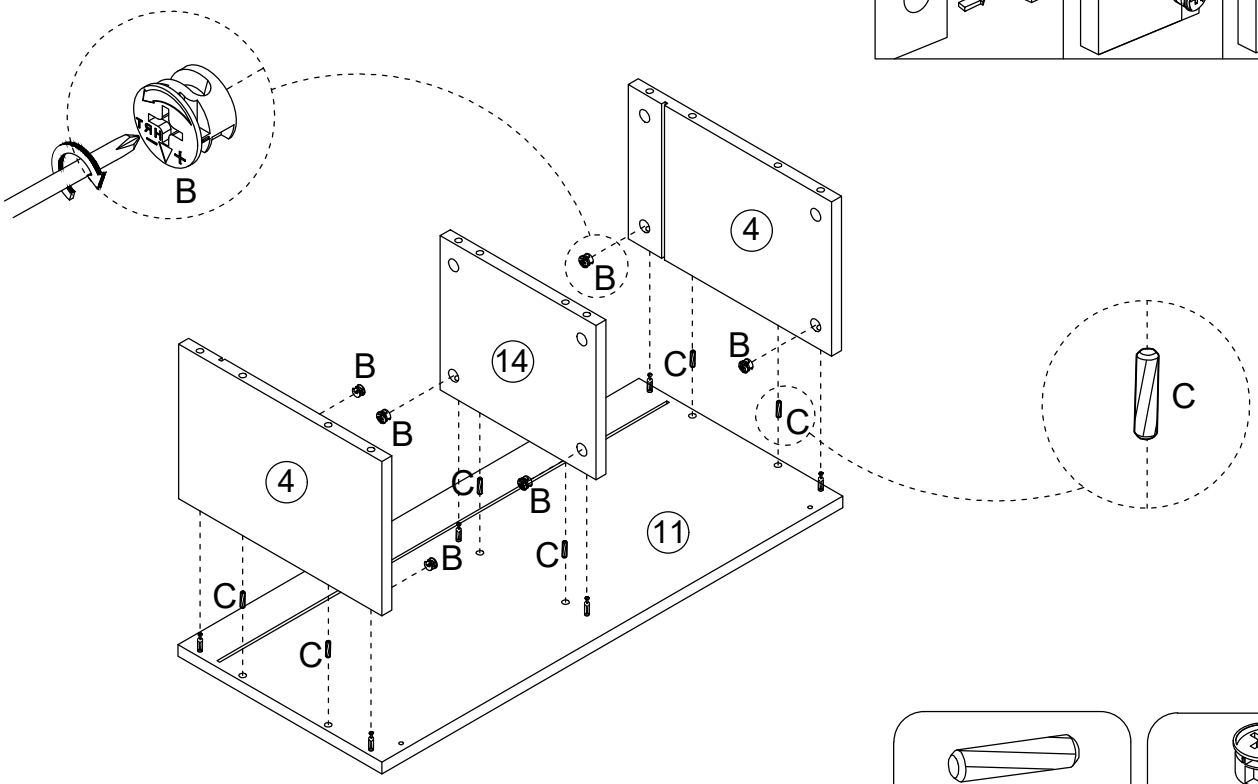


Ø8x30	
C	x 6


Ø15x9.5	
B	x 6

STEP 15

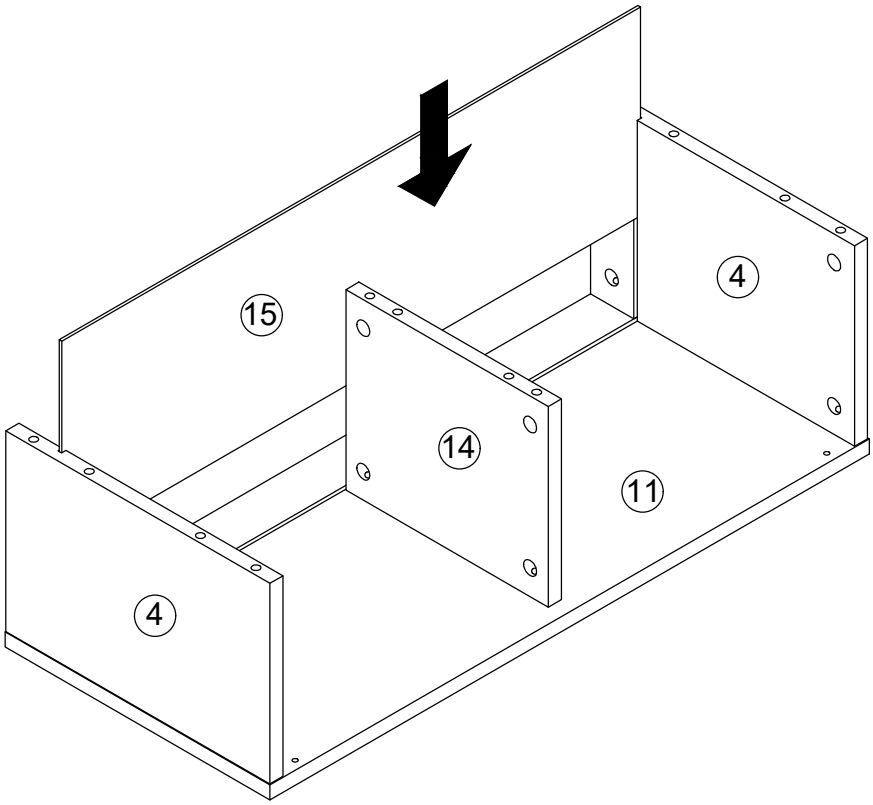

STEP 16

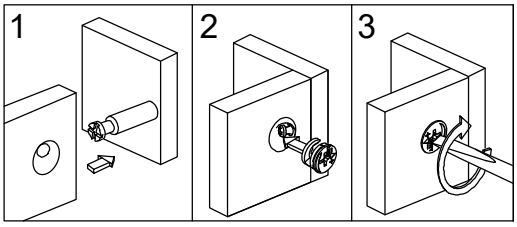


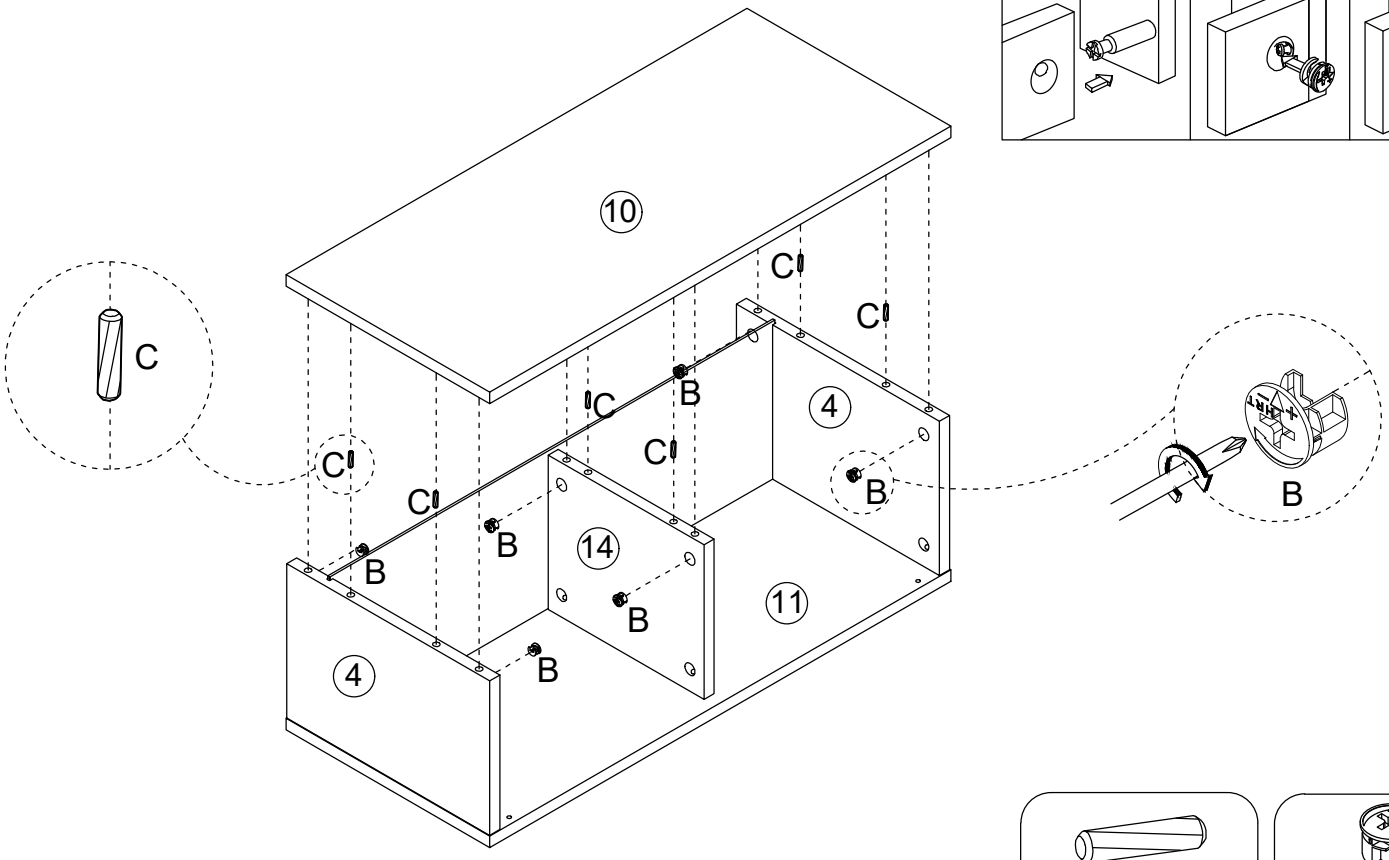



Ø8x30	
C	x 6

Ø15x9.5	
B	x 6


STEP 17

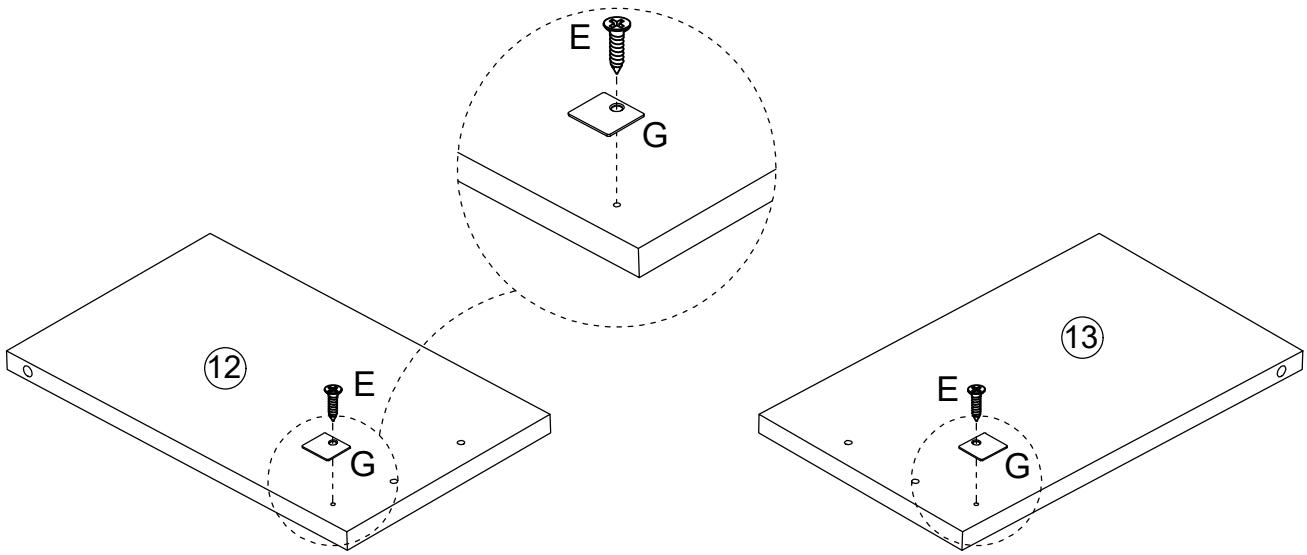

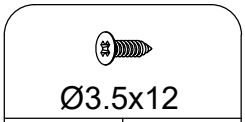


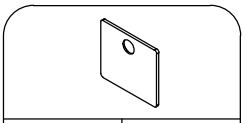


STEP 18

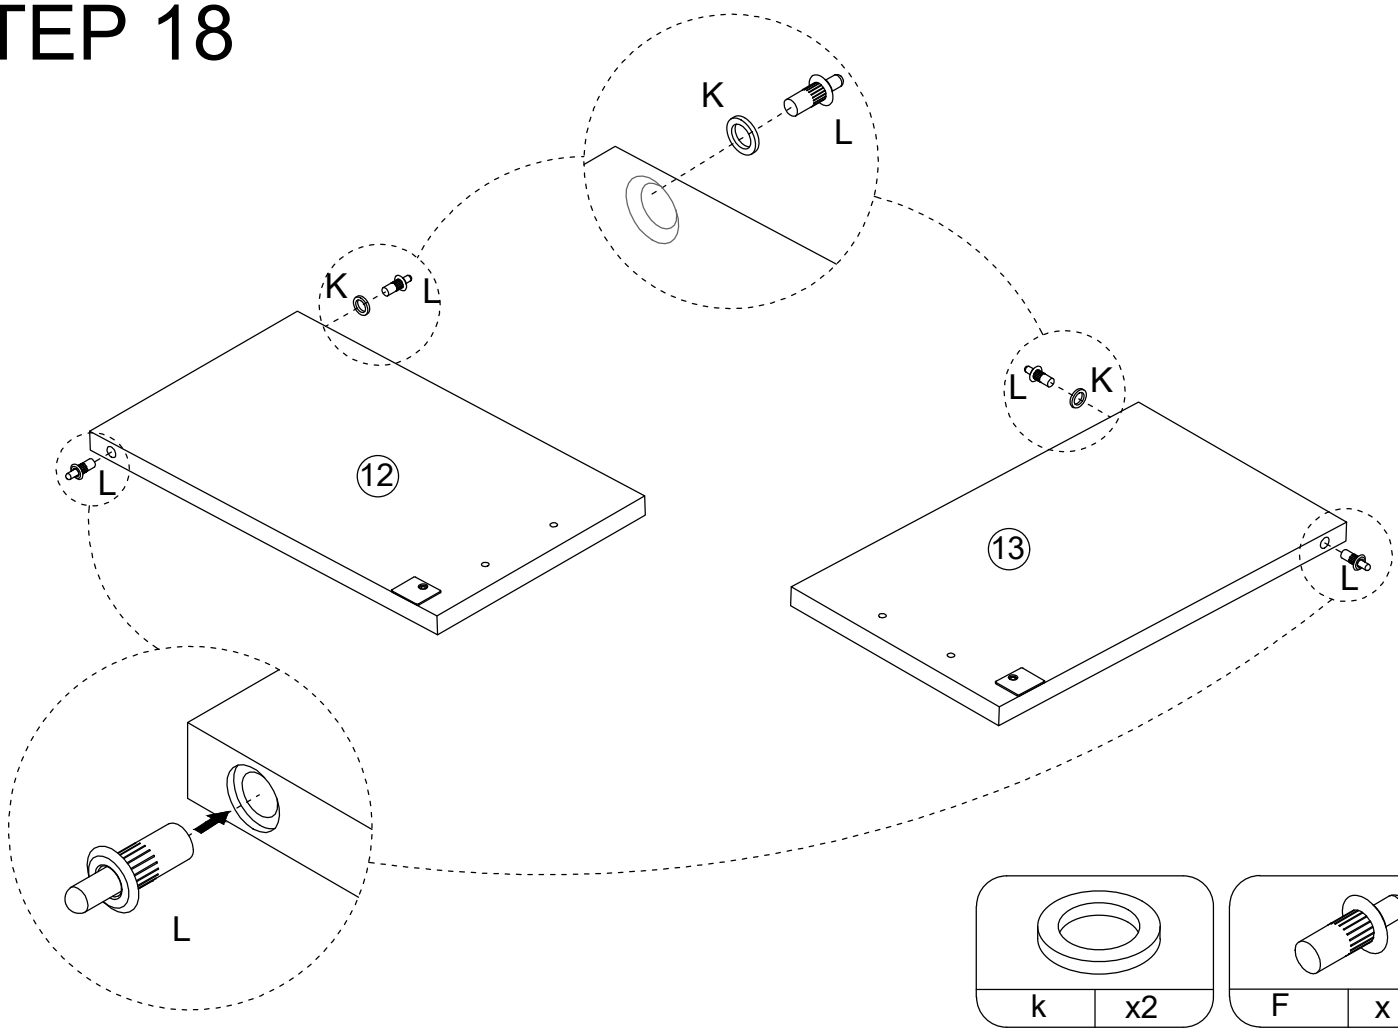


STEP 19

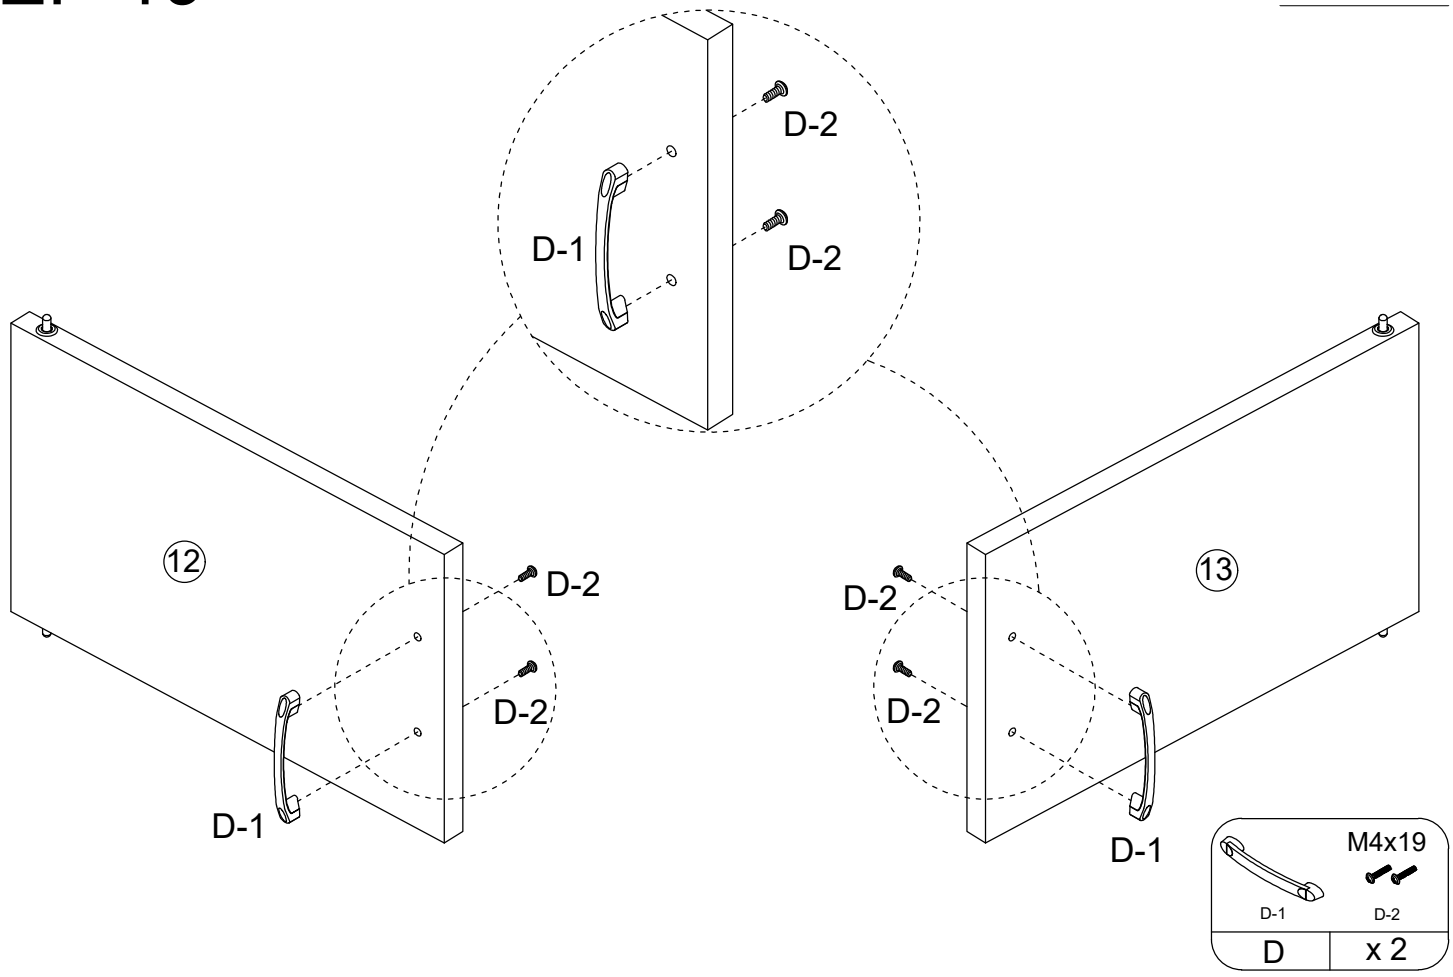


STEP 20

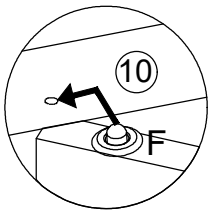


Step 3

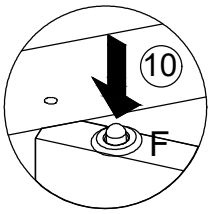


Step 2

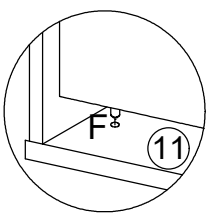


Step 1

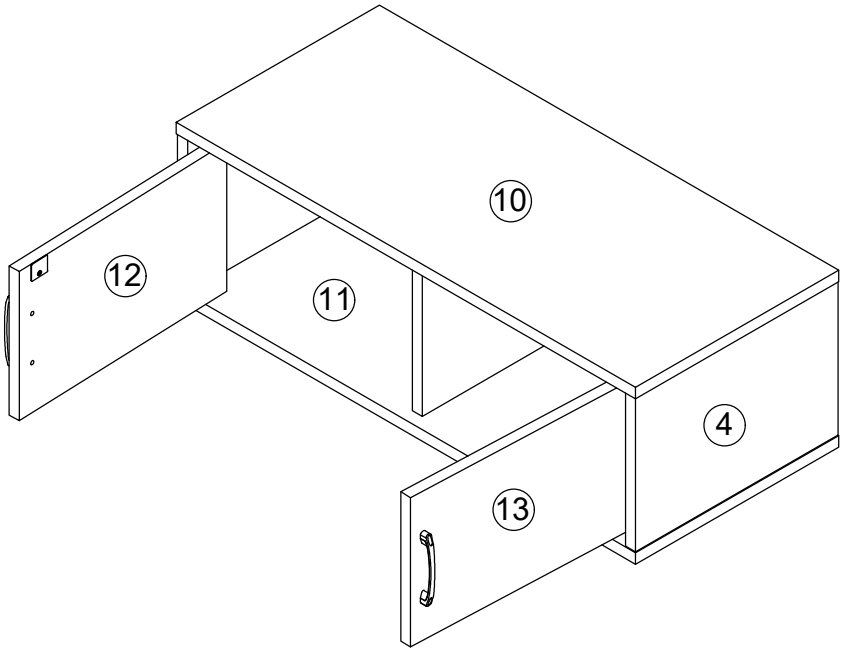



STEP 21

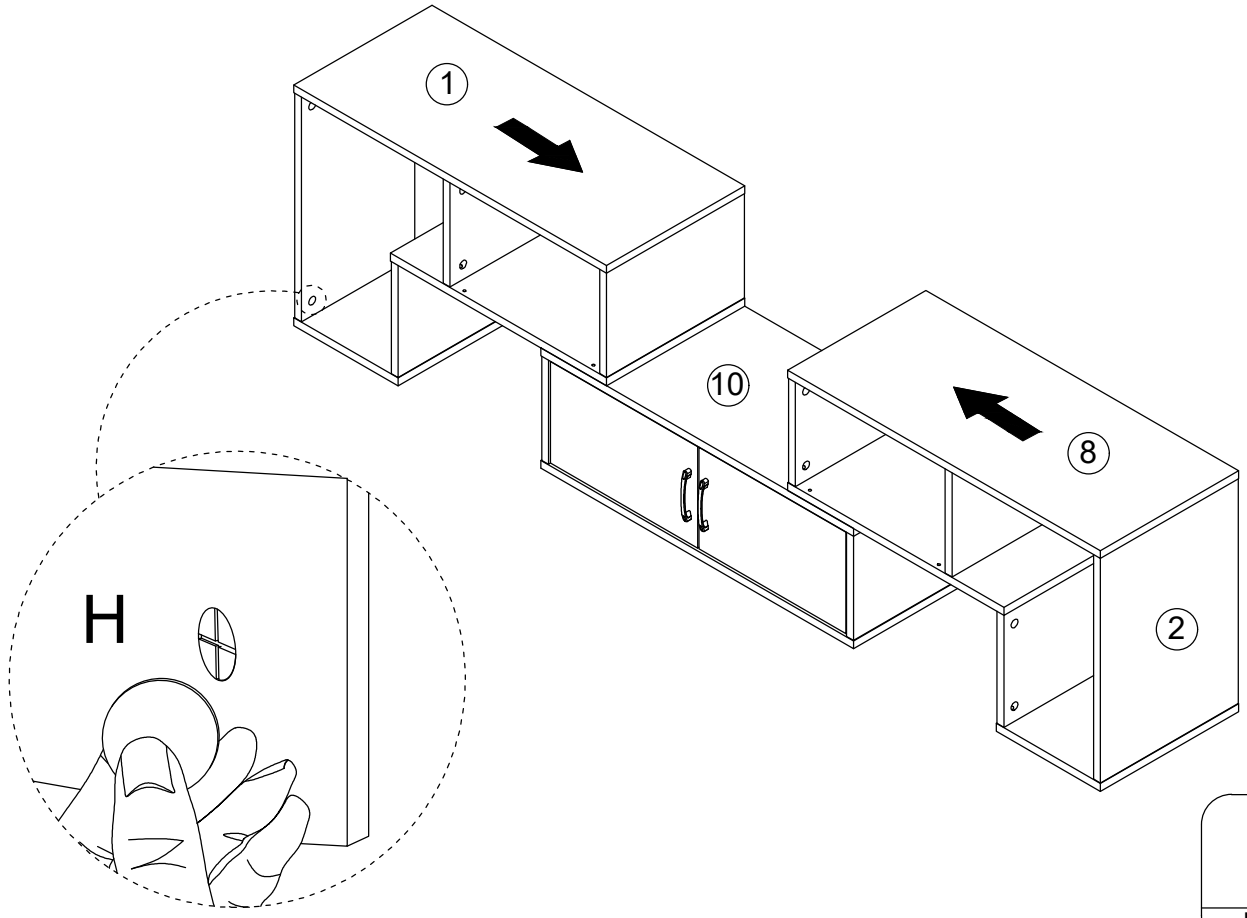

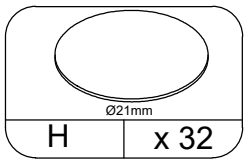


STEP 22

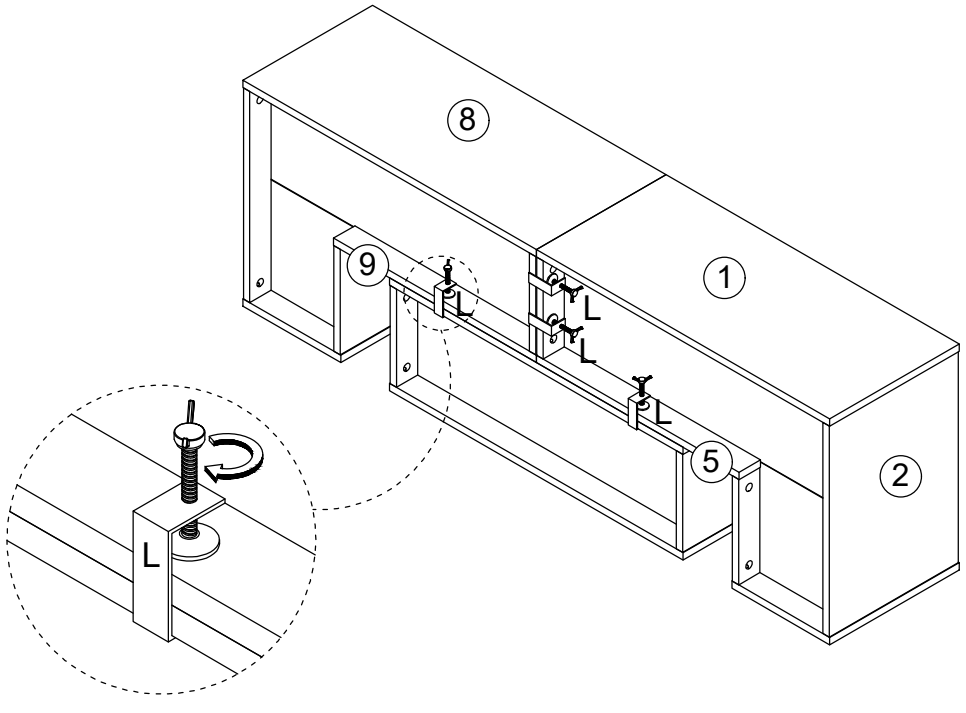

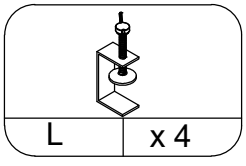


STEP 23

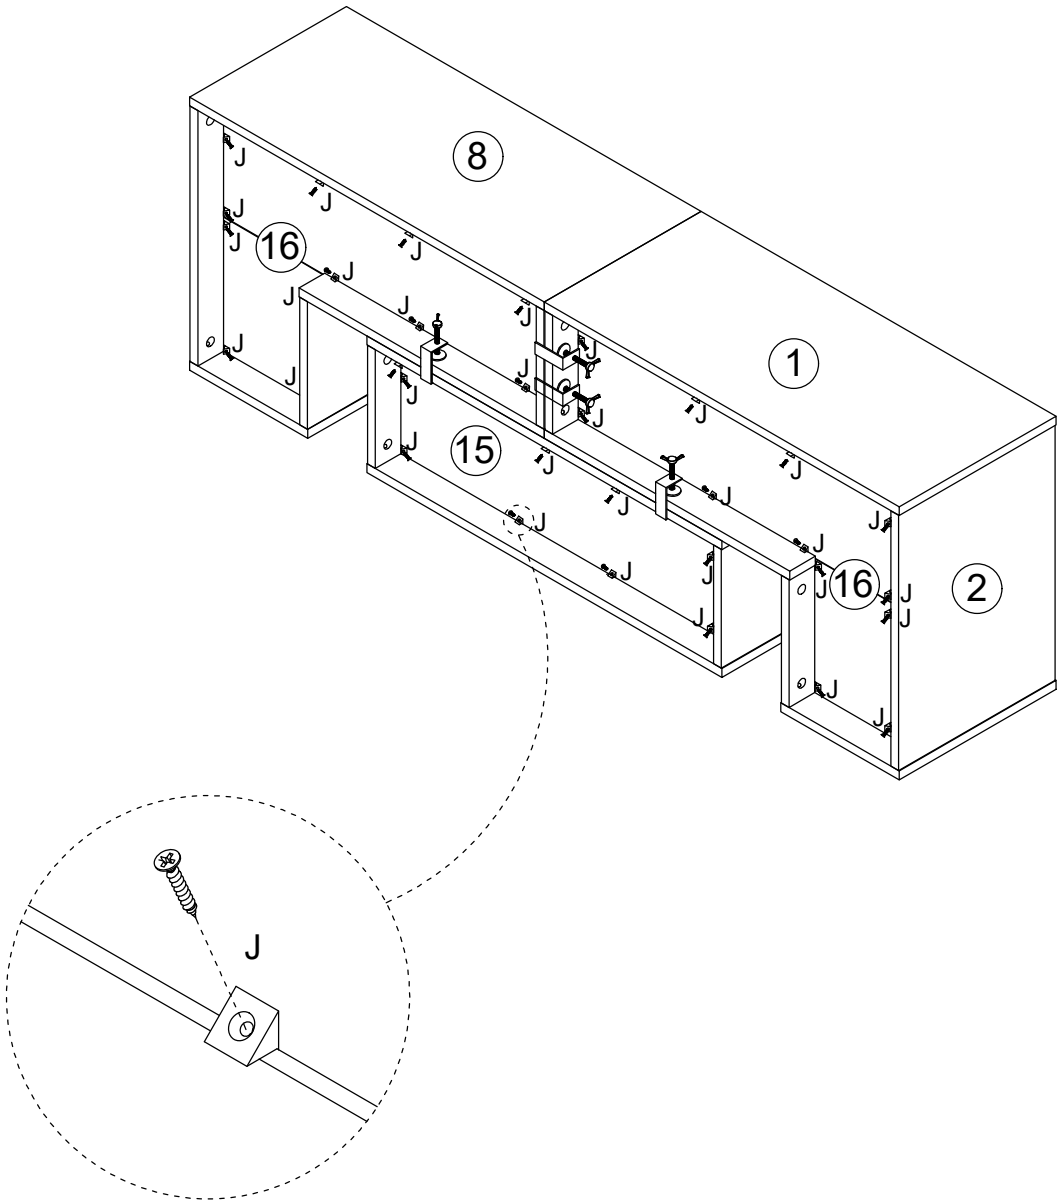

J	Ø3x14 x 32

STEP 24

You can choose the cabinet placement and door installation method according to your usage scenario.
Note: After installing the door in your desired position, please mount the magnetic catch (I) and clamp (L) onto the corresponding side panel. Refer to the previous assembly steps for the door installation method.

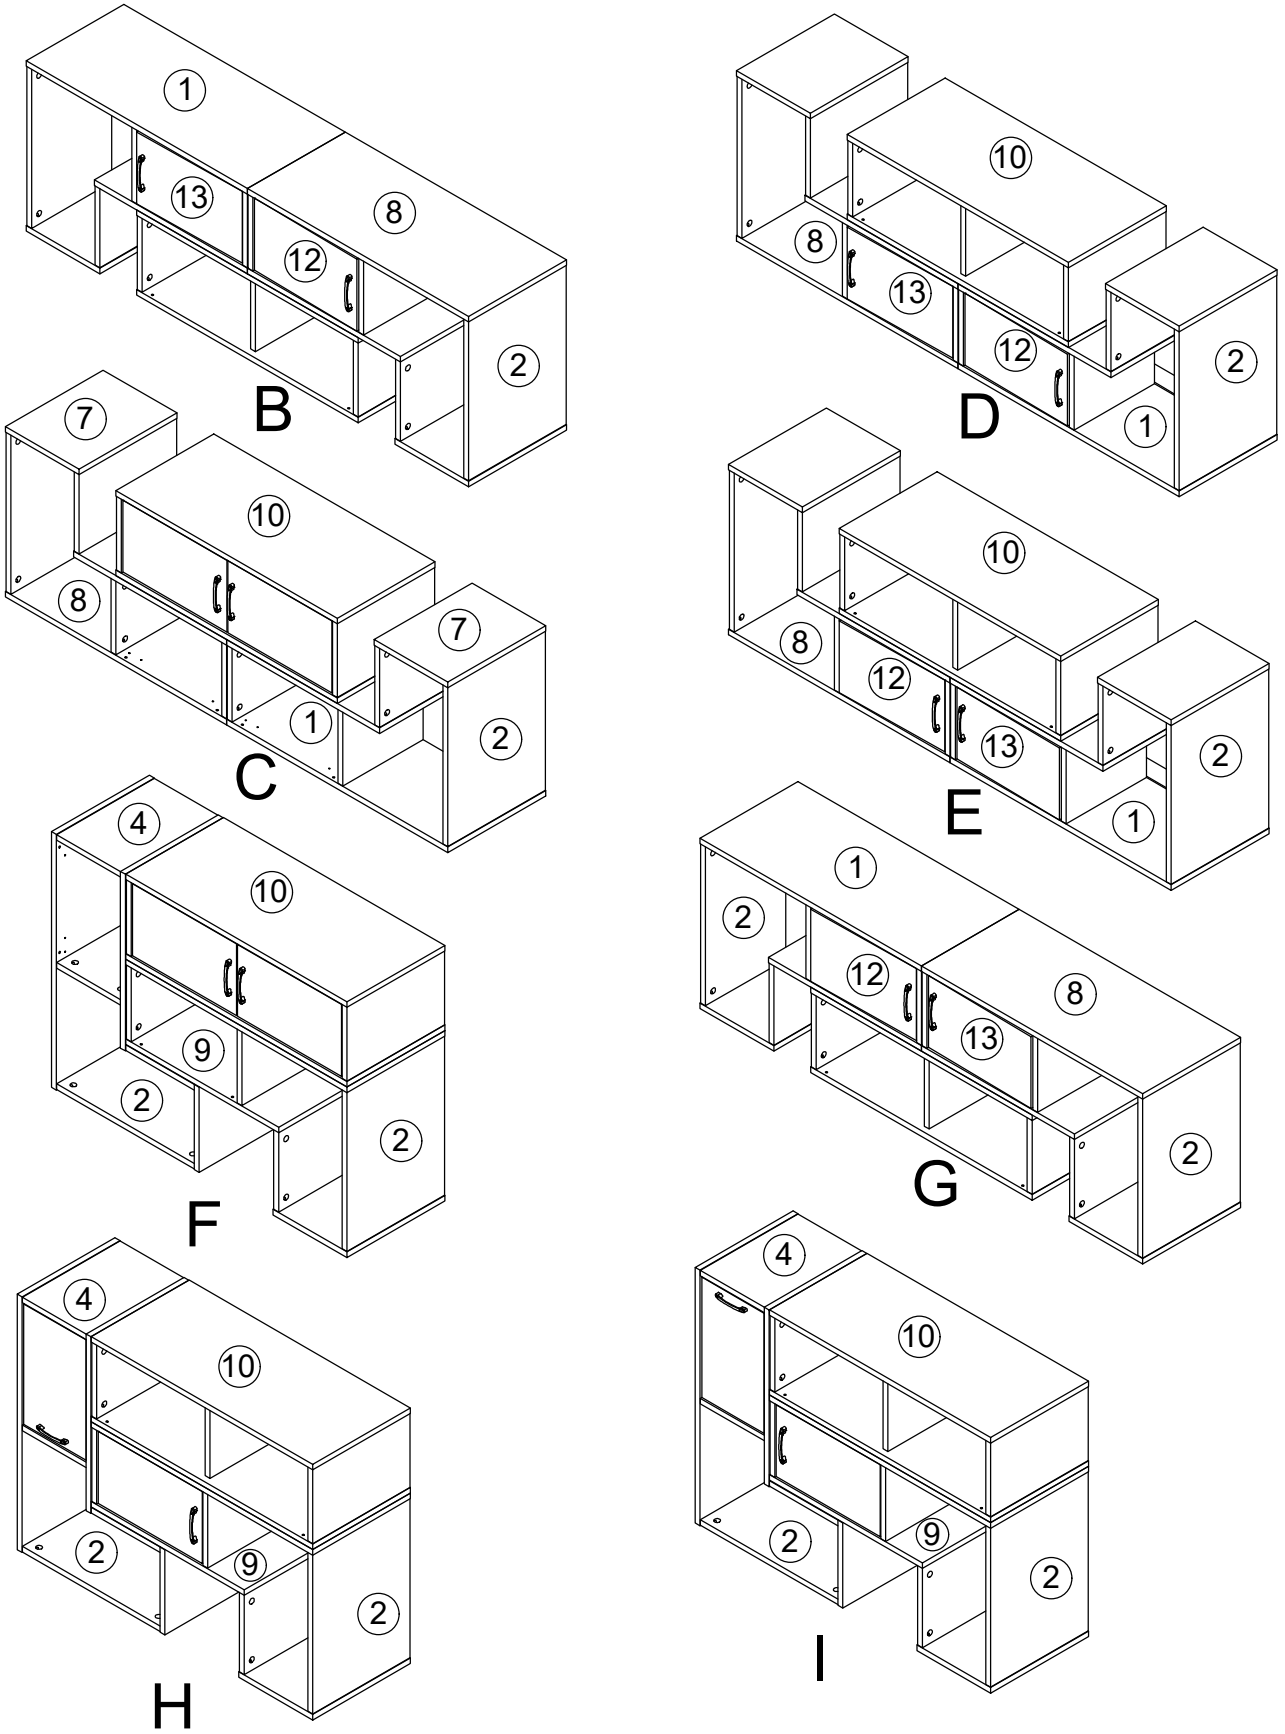

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning