

installation instructions:

SIGNATURE URETHANE GABLE PEDIMENT

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear safety goggles.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

Gable brackets are not load-bearing, decorative use only.

TOOL & MATERIAL CHECKLIST

- | | |
|---|--|
| <input type="checkbox"/> electric drill | <input type="checkbox"/> construction adhesive |
| <input type="checkbox"/> drill bit for pilot hole | <input type="checkbox"/> caulking gun |
| <input type="checkbox"/> countersink bit | <input type="checkbox"/> mechanical fasteners |
| <input type="checkbox"/> lag screws & washers | |
| <input type="checkbox"/> caulk | |
| <input type="checkbox"/> sandpaper | |

IMPORTANT INFO

- It is highly recommended that you paint/finish our pediments before installation.
- Once installed, you can apply any necessary touch-up paint/finish.
- Clean installation surface and bracket of all dirt and dust with a clean cloth or dry sponge.
- Measure and mark the location where the pediment is going to be installed.


INSTALL INSTRUCTIONS:

Solid Decorative Pediments

1. **MARK INSTALLATION AREA-** Select the location for your Decorative Millwork. Hold the millwork in place and mark the location with a pencil.
2. **APPLY ADHESIVE-** Apply a 1/4" bead of PL Premium Adhesive to only the portion of the millwork surface that will touch the mounting surface.
3. **FASTEN MILLWORK INTO PLACE-** Press the millwork in place using the pencil marks as guides. Fasten securely with nails or screws. Countersink fasteners and fill holes with caulk or wood filler.
4. **FILL GAPS-** If desired, caulk around millwork, filling any gaps between millwork and mounting surfaces.
5. **FINISH AS DESIRED-** Sand any filled holes and touch up with paint or other finishes, as desired.

Gable pediment decorations are screwed to the soffit, the bottom board of the eave. The fascia (eave face board) usually overhangs the soffit by a small amount. Gable Decorations are normally installed below and immediately behind the fascia. That is, they are mounted out from the wall, suspended just behind the front edge of the eave.

EXAMPLE DIAGRAM:

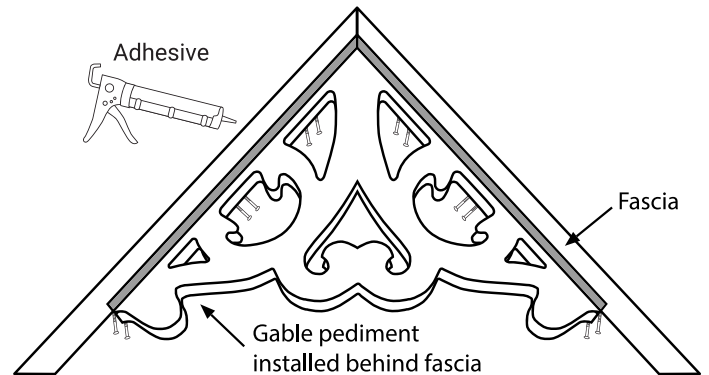

We Can Help. Call (866) 607-0453



Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

www.ekenamillwork.com