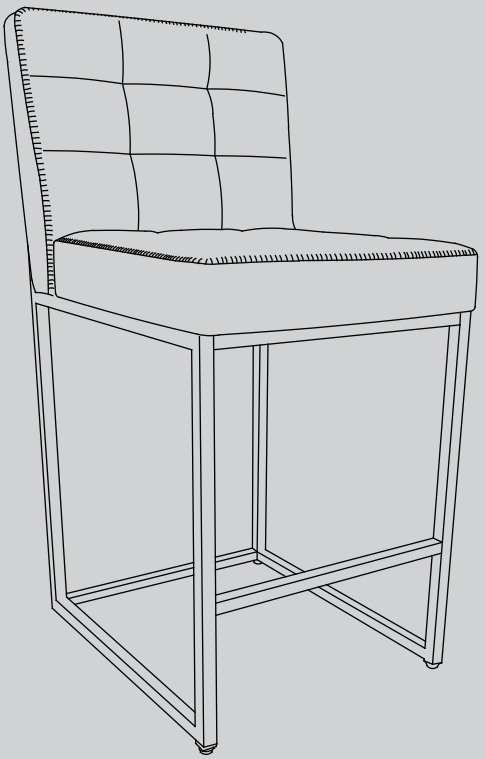
# BAR STOOL



## Helpful Hints

1.Different lighting conditions and different display devices may cause color differences.We hope you understand

## Customer Service

Returning and shipping large furniture items can be difficult,

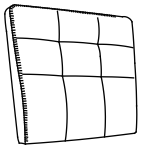


so we kindly request that you contact us if you have any questions.

We will provide professional customer service solutions.



# PART LIST &HARDWARE

1

Parts list

| | | | |
|---|---|---|---|
| ① x1pc<br>Back<br> | ② x1pc<br>Seat<br> | ③ x1pc<br>Left Support Frame<br> | ④ x1pc<br>Right Support Frame<br> |
| ⑤ x1pc<br>Connector<br> | ⑥ x3pcs<br>Connector<br> | | |

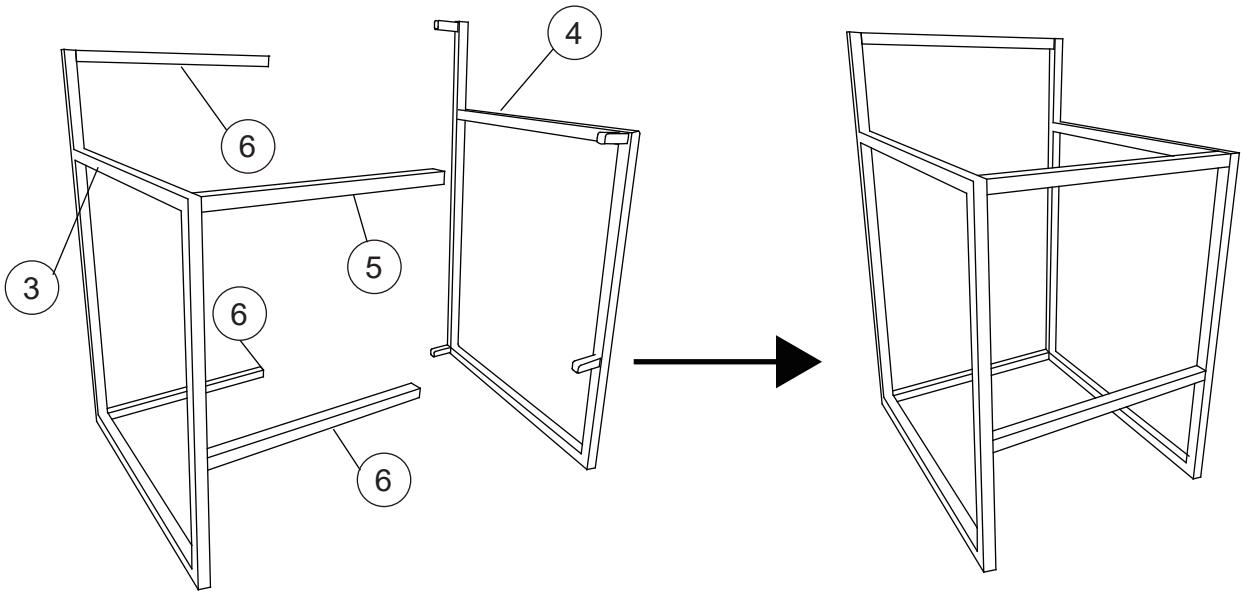
Hardware list

| | | |
|---|---|---|
| Ax16+2pcs<br>Bolts<br><br>6x12mm | Bx5+1pcs<br>Bolts<br><br>6x35mm | Cx1pc<br>Allen Wrench<br><br>M6 |

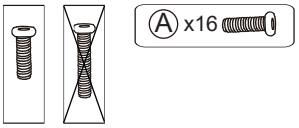
# Assembly Instructions

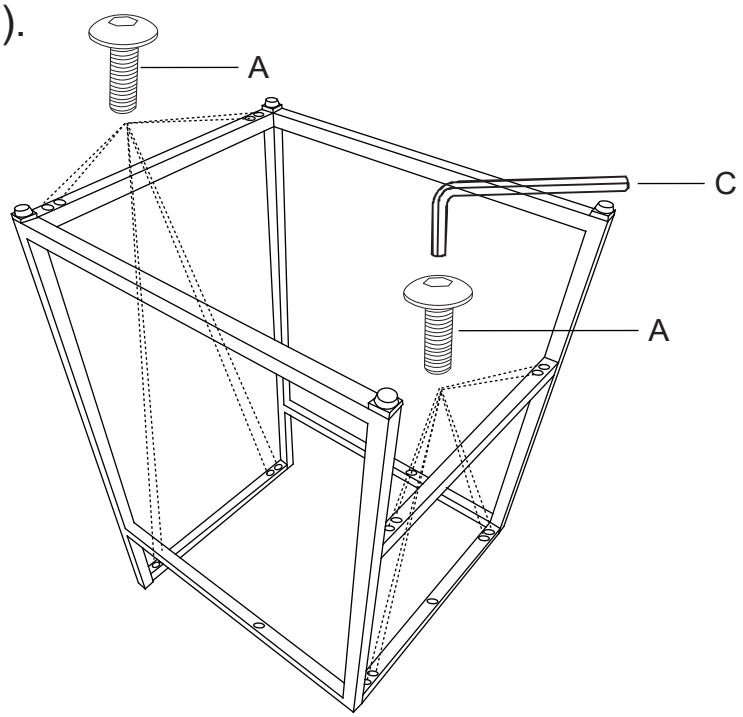
1

step 1:Take out Left Support Frame (3), Right Support Frame (4), Connecting Rod (5),Connecting Rod (6)*3pcs. Assemble into the chair support frame preliminarily, Do not install screws temporarily.




step 2:Flip the assembled frame upside down. After checking that all holes are aligned, Use (A) Bolt M6*12 *16pcs to fasten it (tighten to 100%).




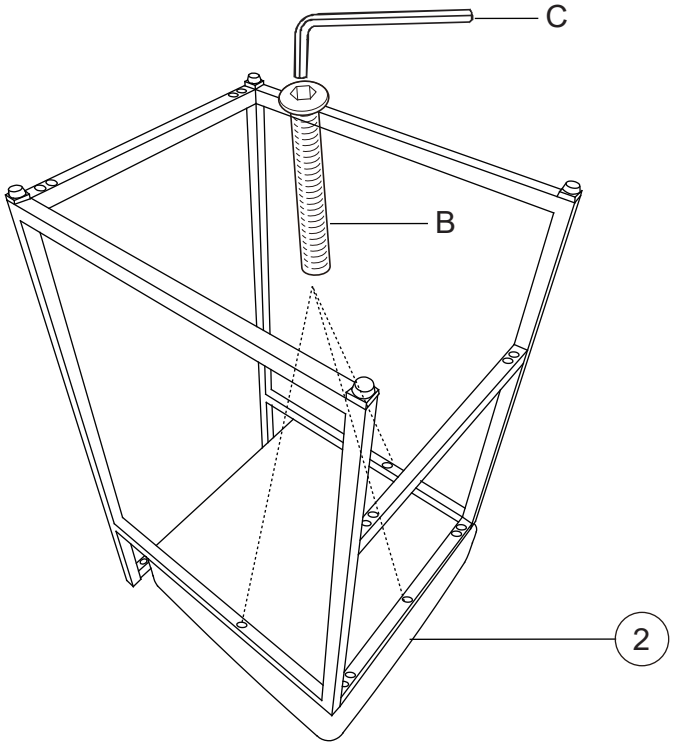
# Assembly Instructions

1


step 3:Keep the frame upside down. After checking that all holes are aligned, install the Seat (2) and Use (B) Bolt M6*35 *3pcs to fasten it (tighten to 100%).



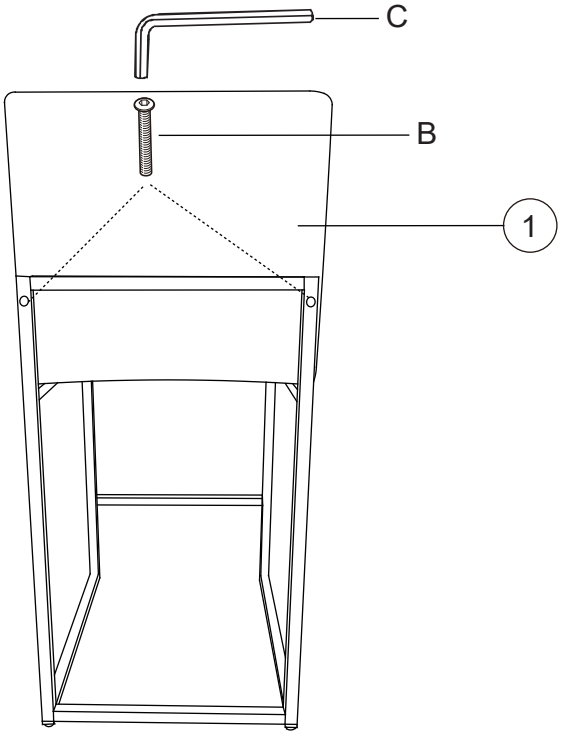



step 4:Flip the whole chair upright. Install the Back (1), Use (B) Bolt M6*35 *2pcs to fasten it (tighten to 100%).



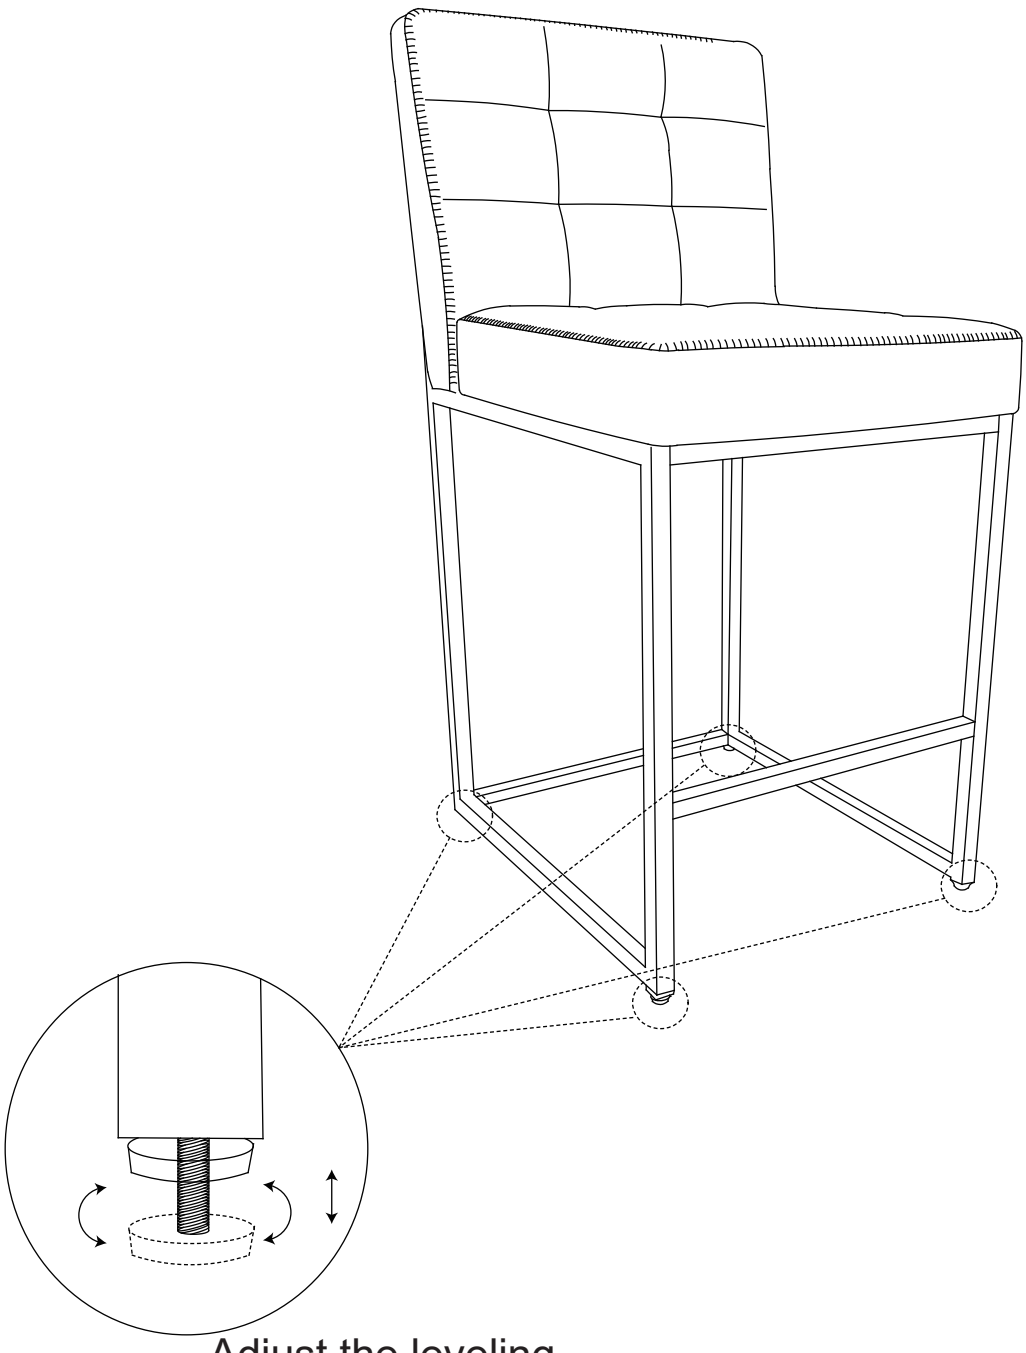


# Assembly Instructions

1

step 5:Adjust the leveling feet for balance. Complete.



Adjust the leveling
feet for balance