



WARNING!

Children have died from furniture tipover. Fixed wall device have been included with this product;you must install the fixed wall device according to these instructions in order to minimize the risk of furniture.If you have any questions about this product or the Fixed wall device , please contact us immediately.


Never allow children to climb or hang on furniture,including drawers or cabiner doors.


In addition to installing the restrains,to help prevent tip-over.













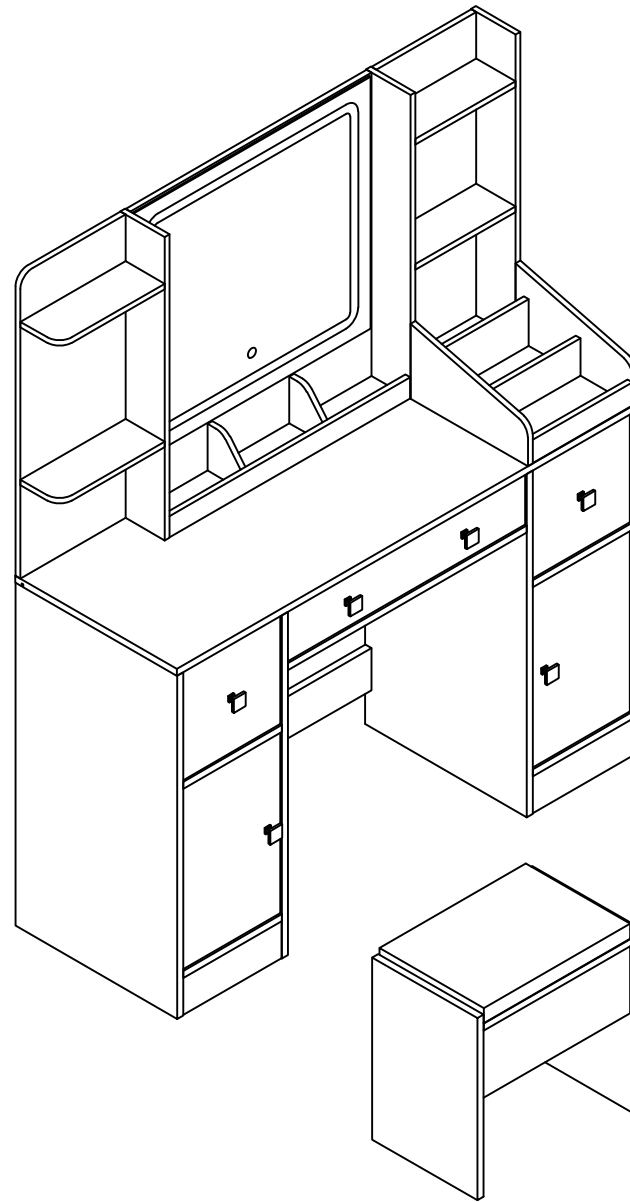



1. Never put a TV or other heavy objects on top of this product.
2. Do not stand on the product.

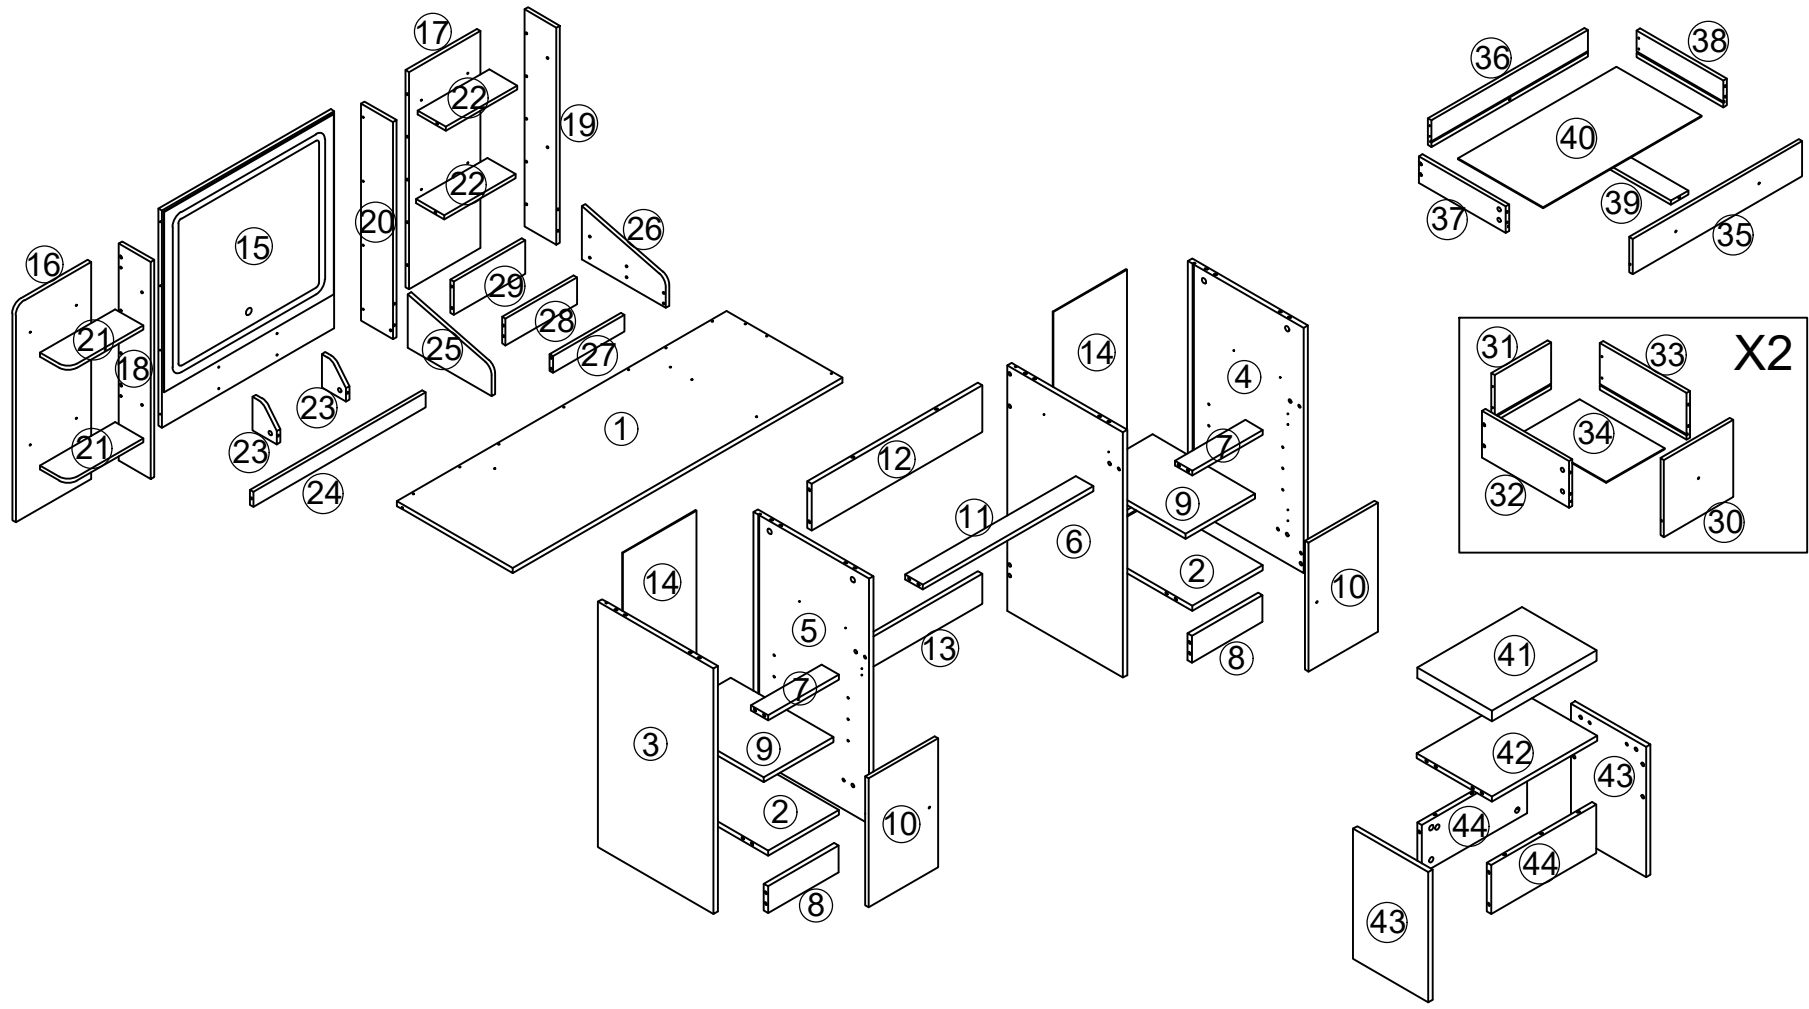
! WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: <ul style="list-style-type: none">• ALWAYS install tipover restraint provided.• NEVER put a TV on this product.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heaviest items in the lowest drawers.• Do not defeat or remove the drawer interlock system. <p><i>This is a permanent label. Do not remove!</i></p>
	

QL24004

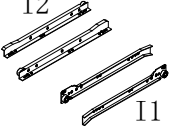





<p>A</p>  <p>52PCS</p>	<p>B</p>  <p>52PCS</p>	<p>C</p> <p>8*40</p>  <p>32PCS</p>	<p>D</p> <p>3.5*12</p>  <p>52PCS</p>	<p>E</p> <p>3.5*30</p>  <p>46PCS</p>	<p>F</p> <p>6*30</p>  <p>24PCS</p>	<p>G</p>  <p>31PCS</p>	<p>H</p>  <p>8PCS</p>	<p>I</p> <p>300mm</p>  <p>3PCS</p>	<p>J</p>  <p>4PCS</p>
<p>K</p>  <p>8PCS</p>	<p>L</p>  <p>6PCS</p>	<p>M</p> <p>4*18</p>  <p>6PCS</p>	<p>N</p>  <p>2PCS</p>	<p>O</p>  <p>8PCS</p>	<p>P</p>  <p>2PCS</p>				

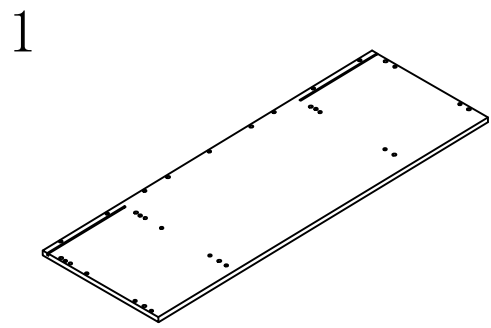


1140*400 1PS

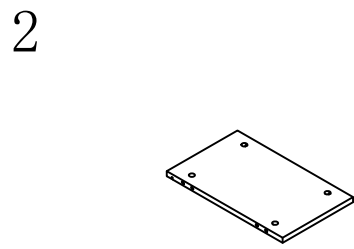


244*400 2PS

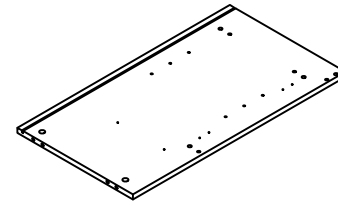


735*400 1PS

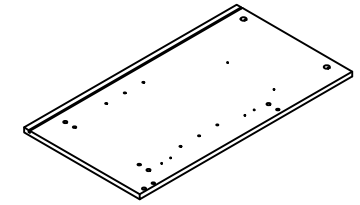

735*400 1PS

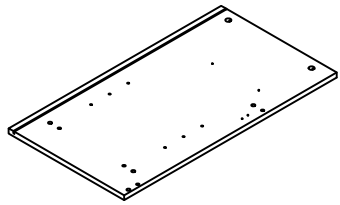


735*400 1PS

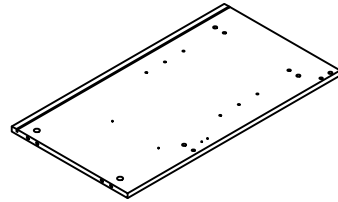


735*400 1PS




244*60 2PS




244*80 2PS




241*355 2PS




386*240 2PS

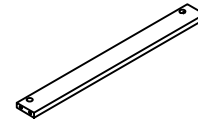


590*60 1PS

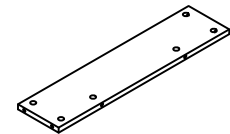


590*140 1PS

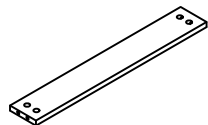


590*90 1PS

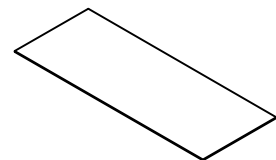

650*254 2PS

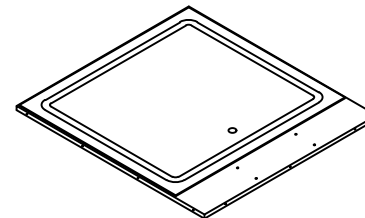


650*596 1PS

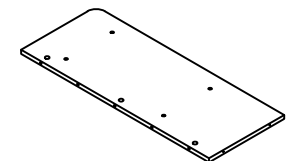


650*260 1PS

17

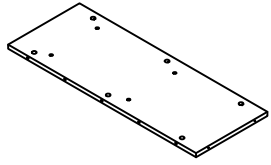


650*247 1PS

18

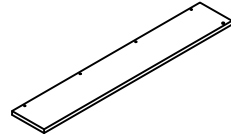


650*110 1PS

19

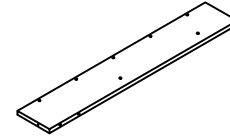

650*110 1PS

20

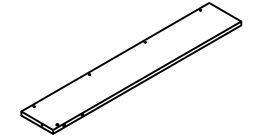


650*110 1PS

21



260*97 2PS

22




247*97 2PS

23




100*84 2PS

24




596*45 1PS

25



160*290 1PS

26




160*290 1PS

27



247*50 1PS

28




247*80 1PS

29



247*100 1PS

30




240*231 2PS

31




195*140 2PS

32




300*140 2PS

33




300*140 2PS

34




202*294 2PS

35

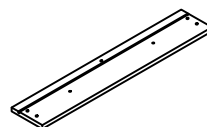

586*106 1PS

36




541*80 1PS

37




300*80 1PS

38




300*80 1PS

39




287*60 1PS

40

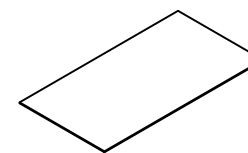


548*294 1PS

41

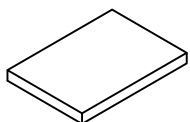


364*260 1PS

42




364*260 1PS

43

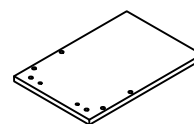

390*260 2PS

44




364*146 2PS




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

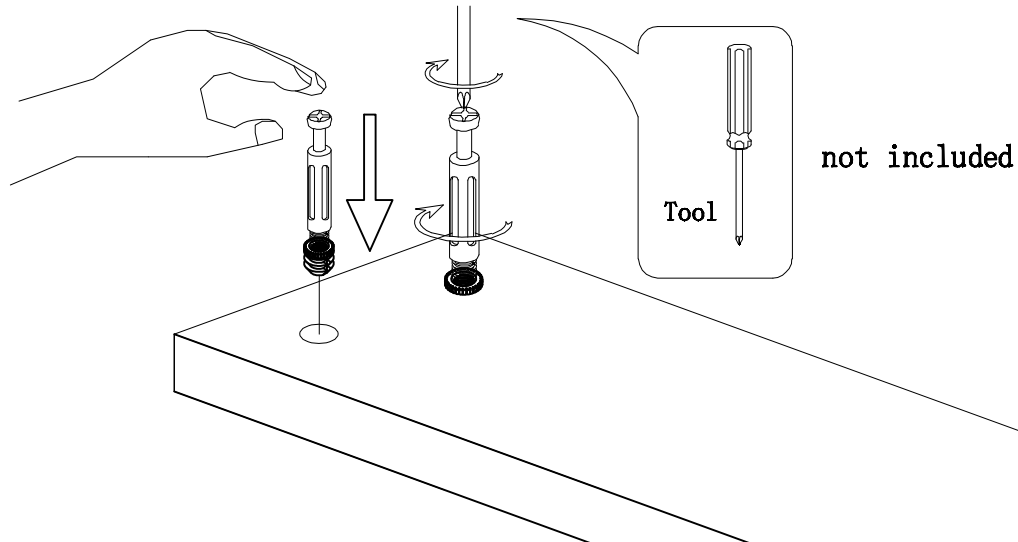

II

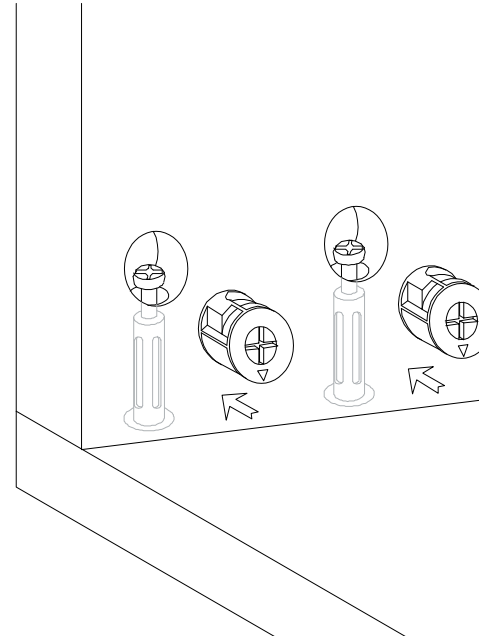

III







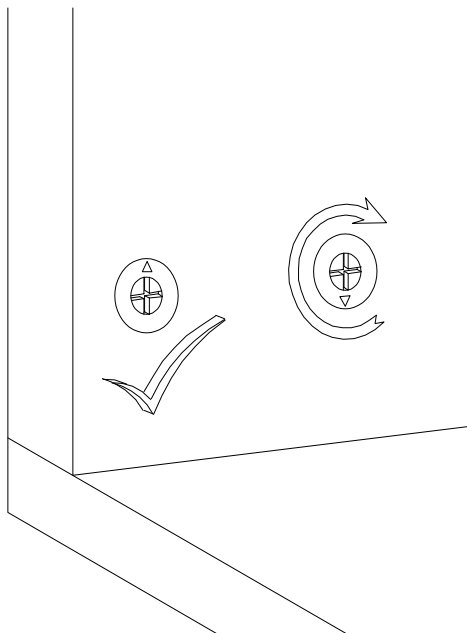






IV



Scan QR code for assembly video


1

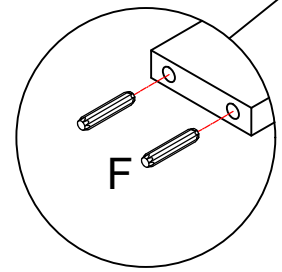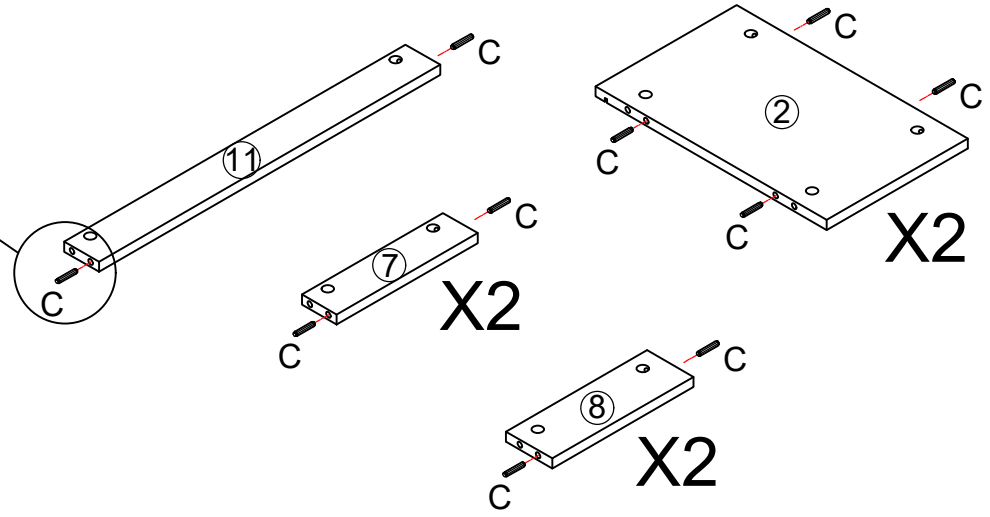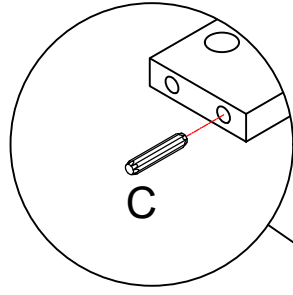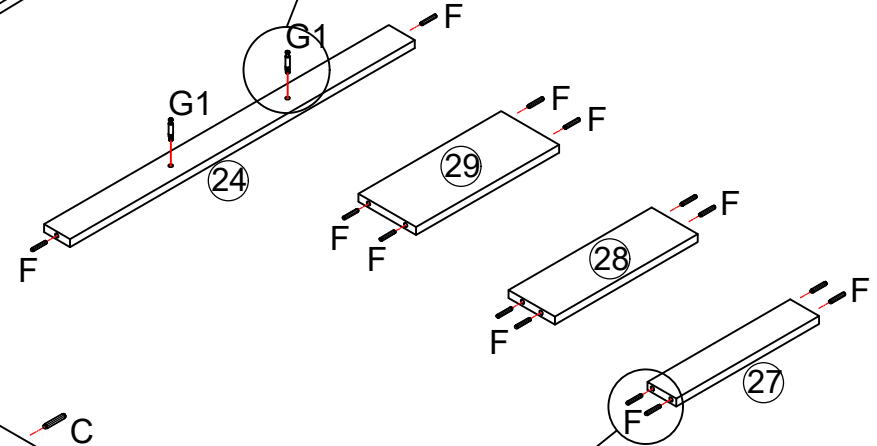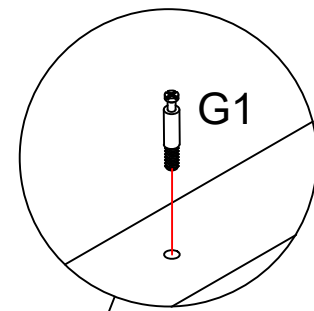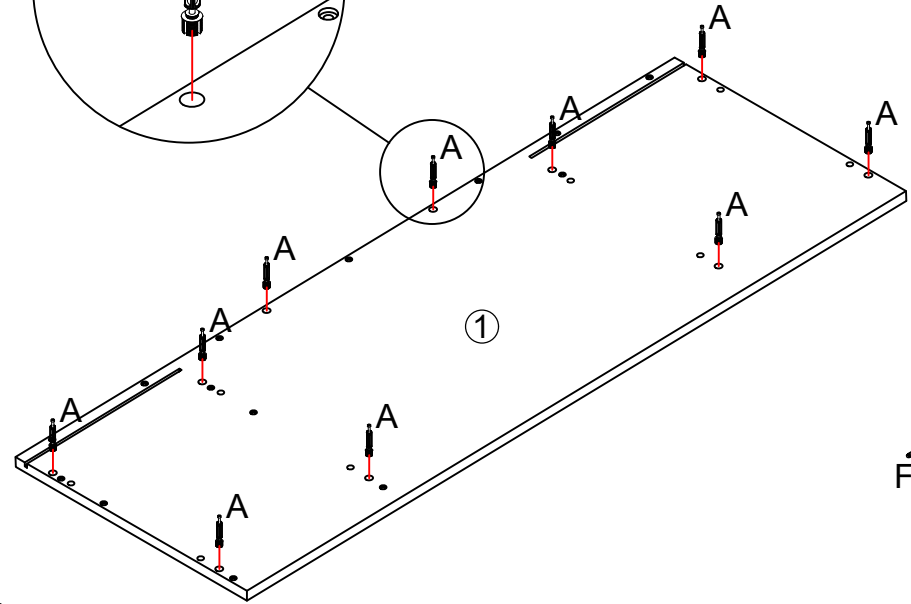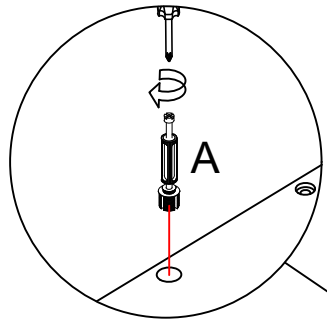



	A*10
	C*18
	F*14
	G1*2

put A on board ①
 put C on board ② ⑦ ⑧ ⑪
 put F on board ⑲ ⑳ ㉑
 put G1 on board ㉔


2

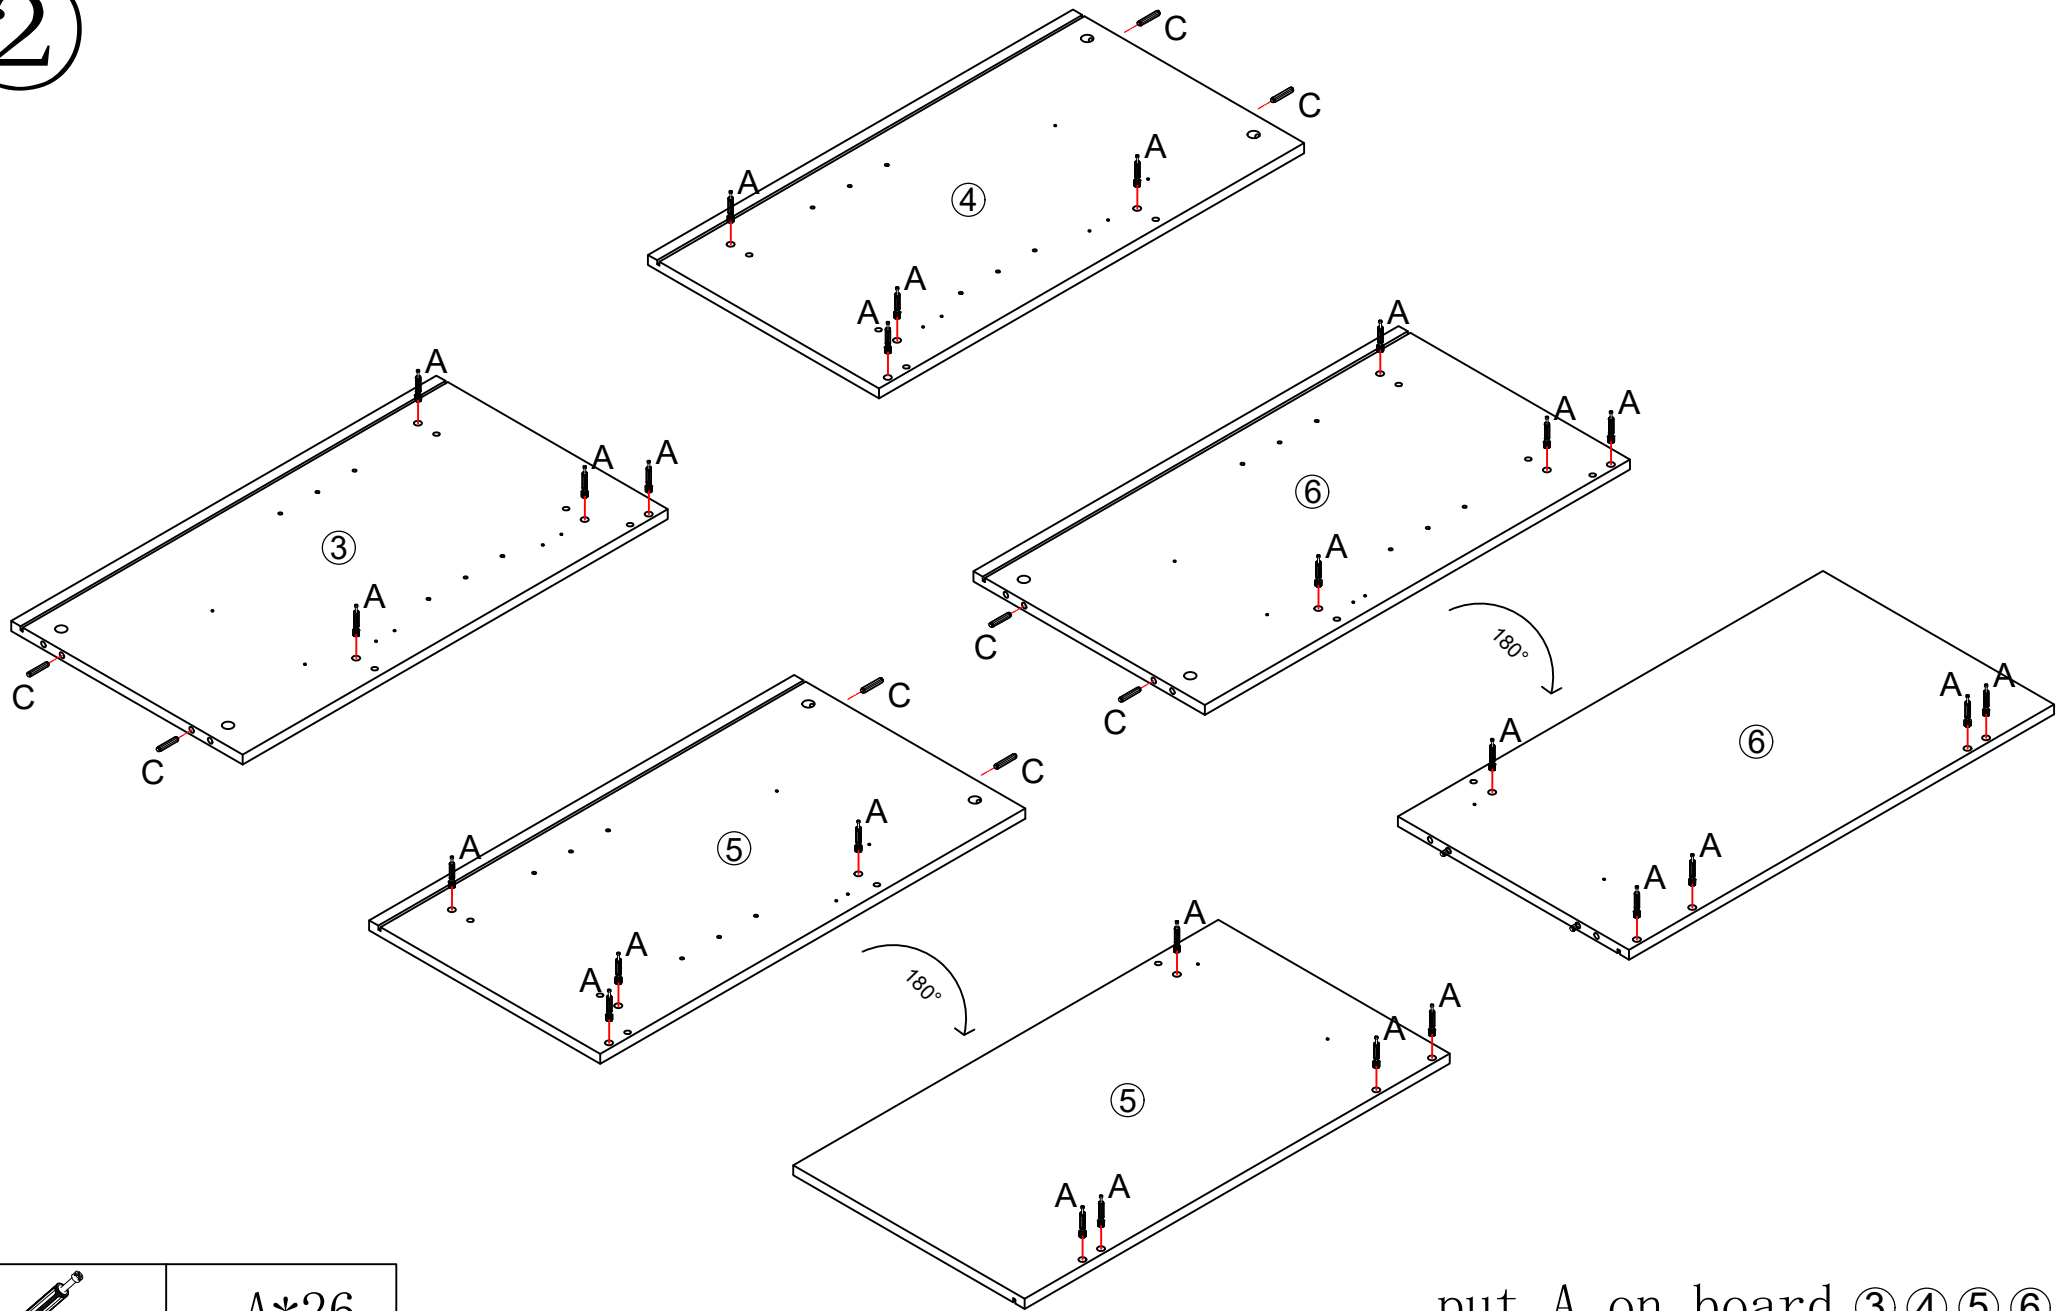

	A*26
	C*8

put A on board ③④⑤⑥
put C on board ③④⑤⑥

3

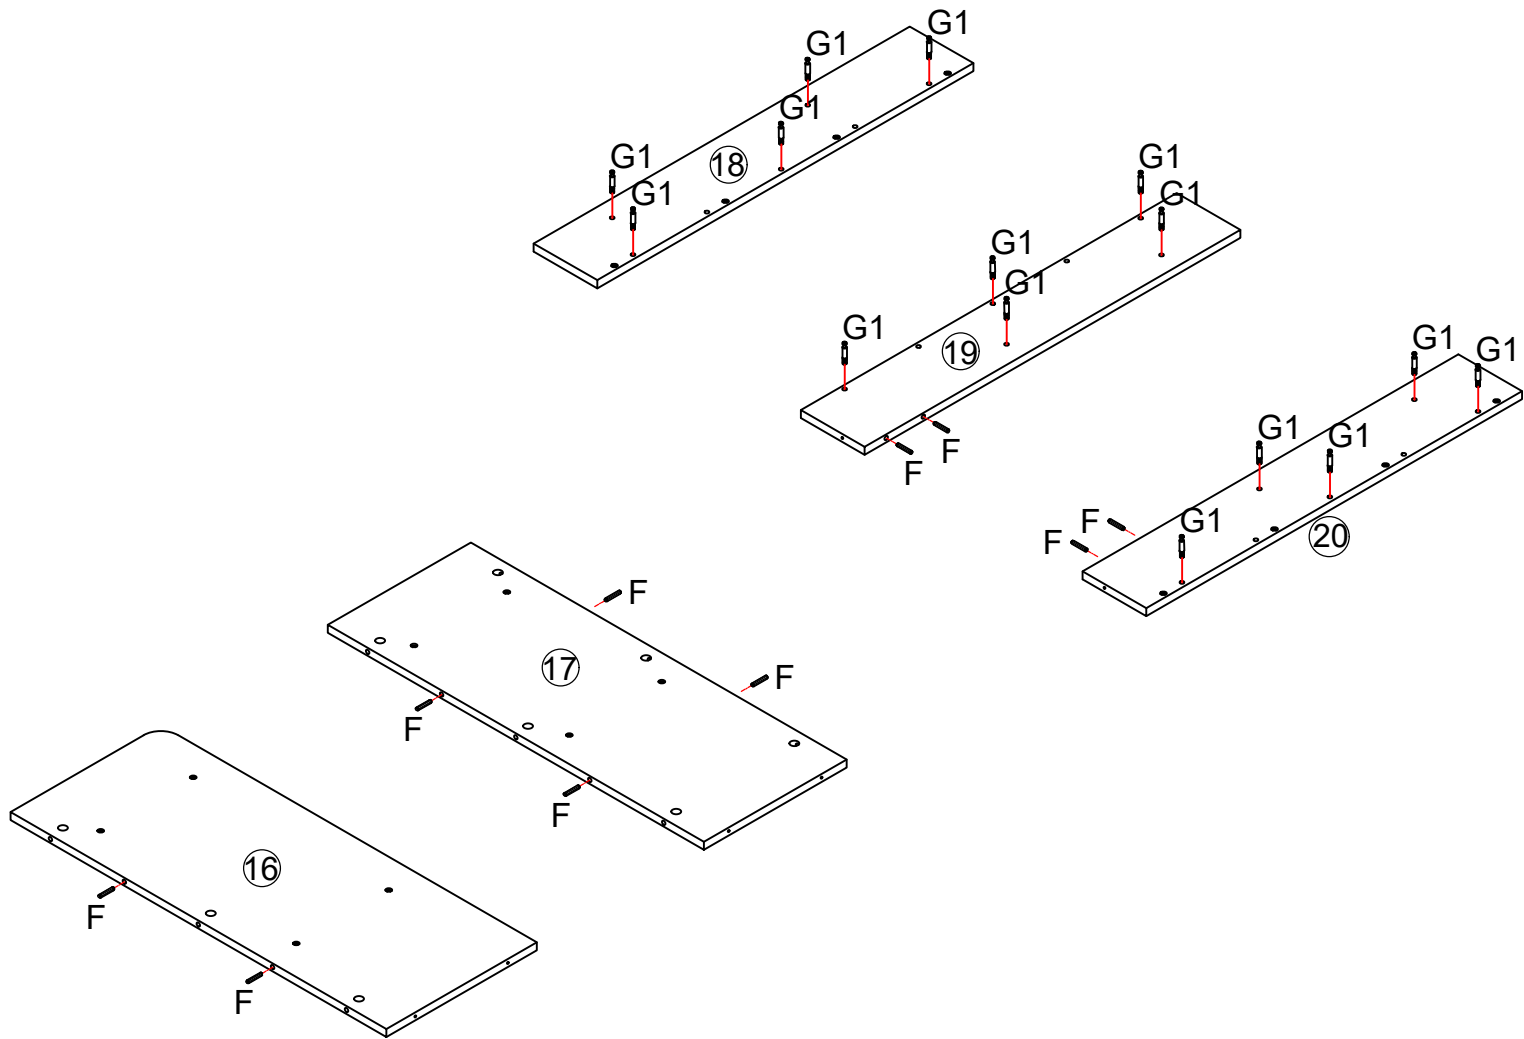











F*10





G1*15

put F on board 16 17 19 20
put G1 on board 18 19 20


4

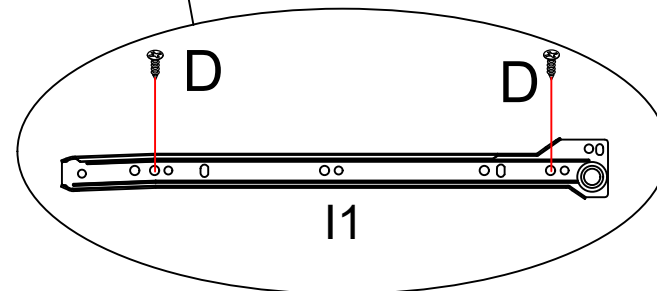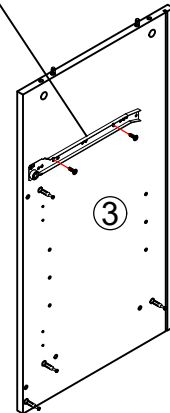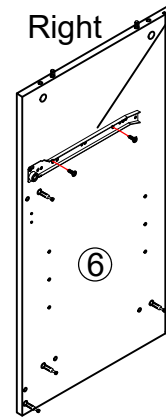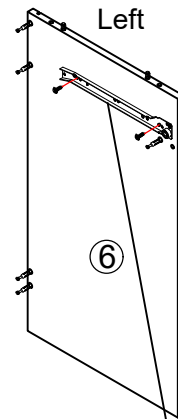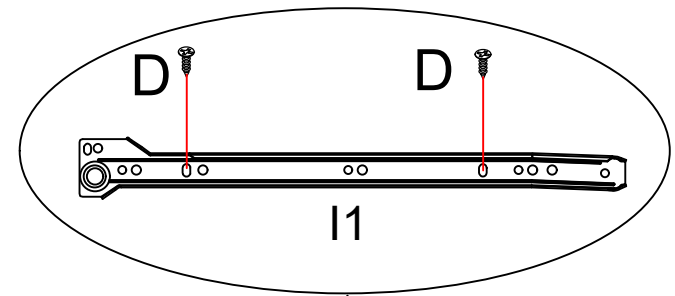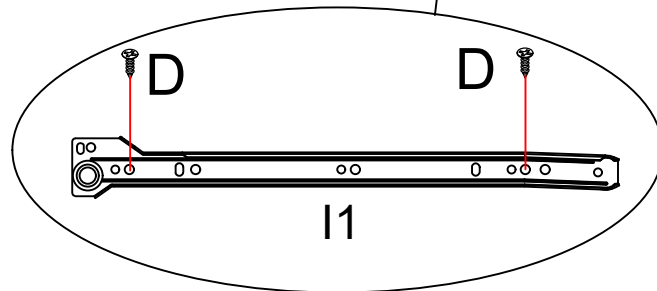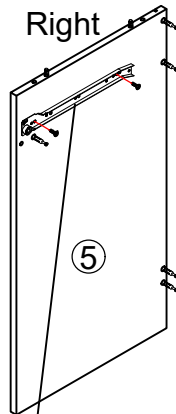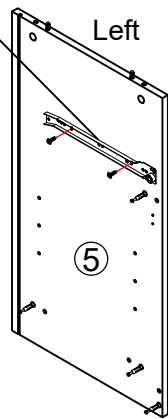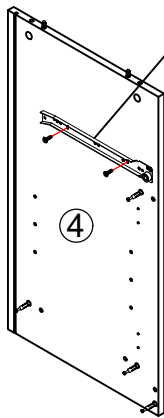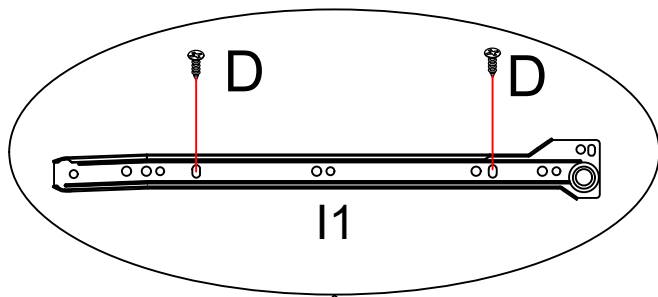

	D*12
	I1*3





5

Make sure the arrow on the screw align to the hole on the side.

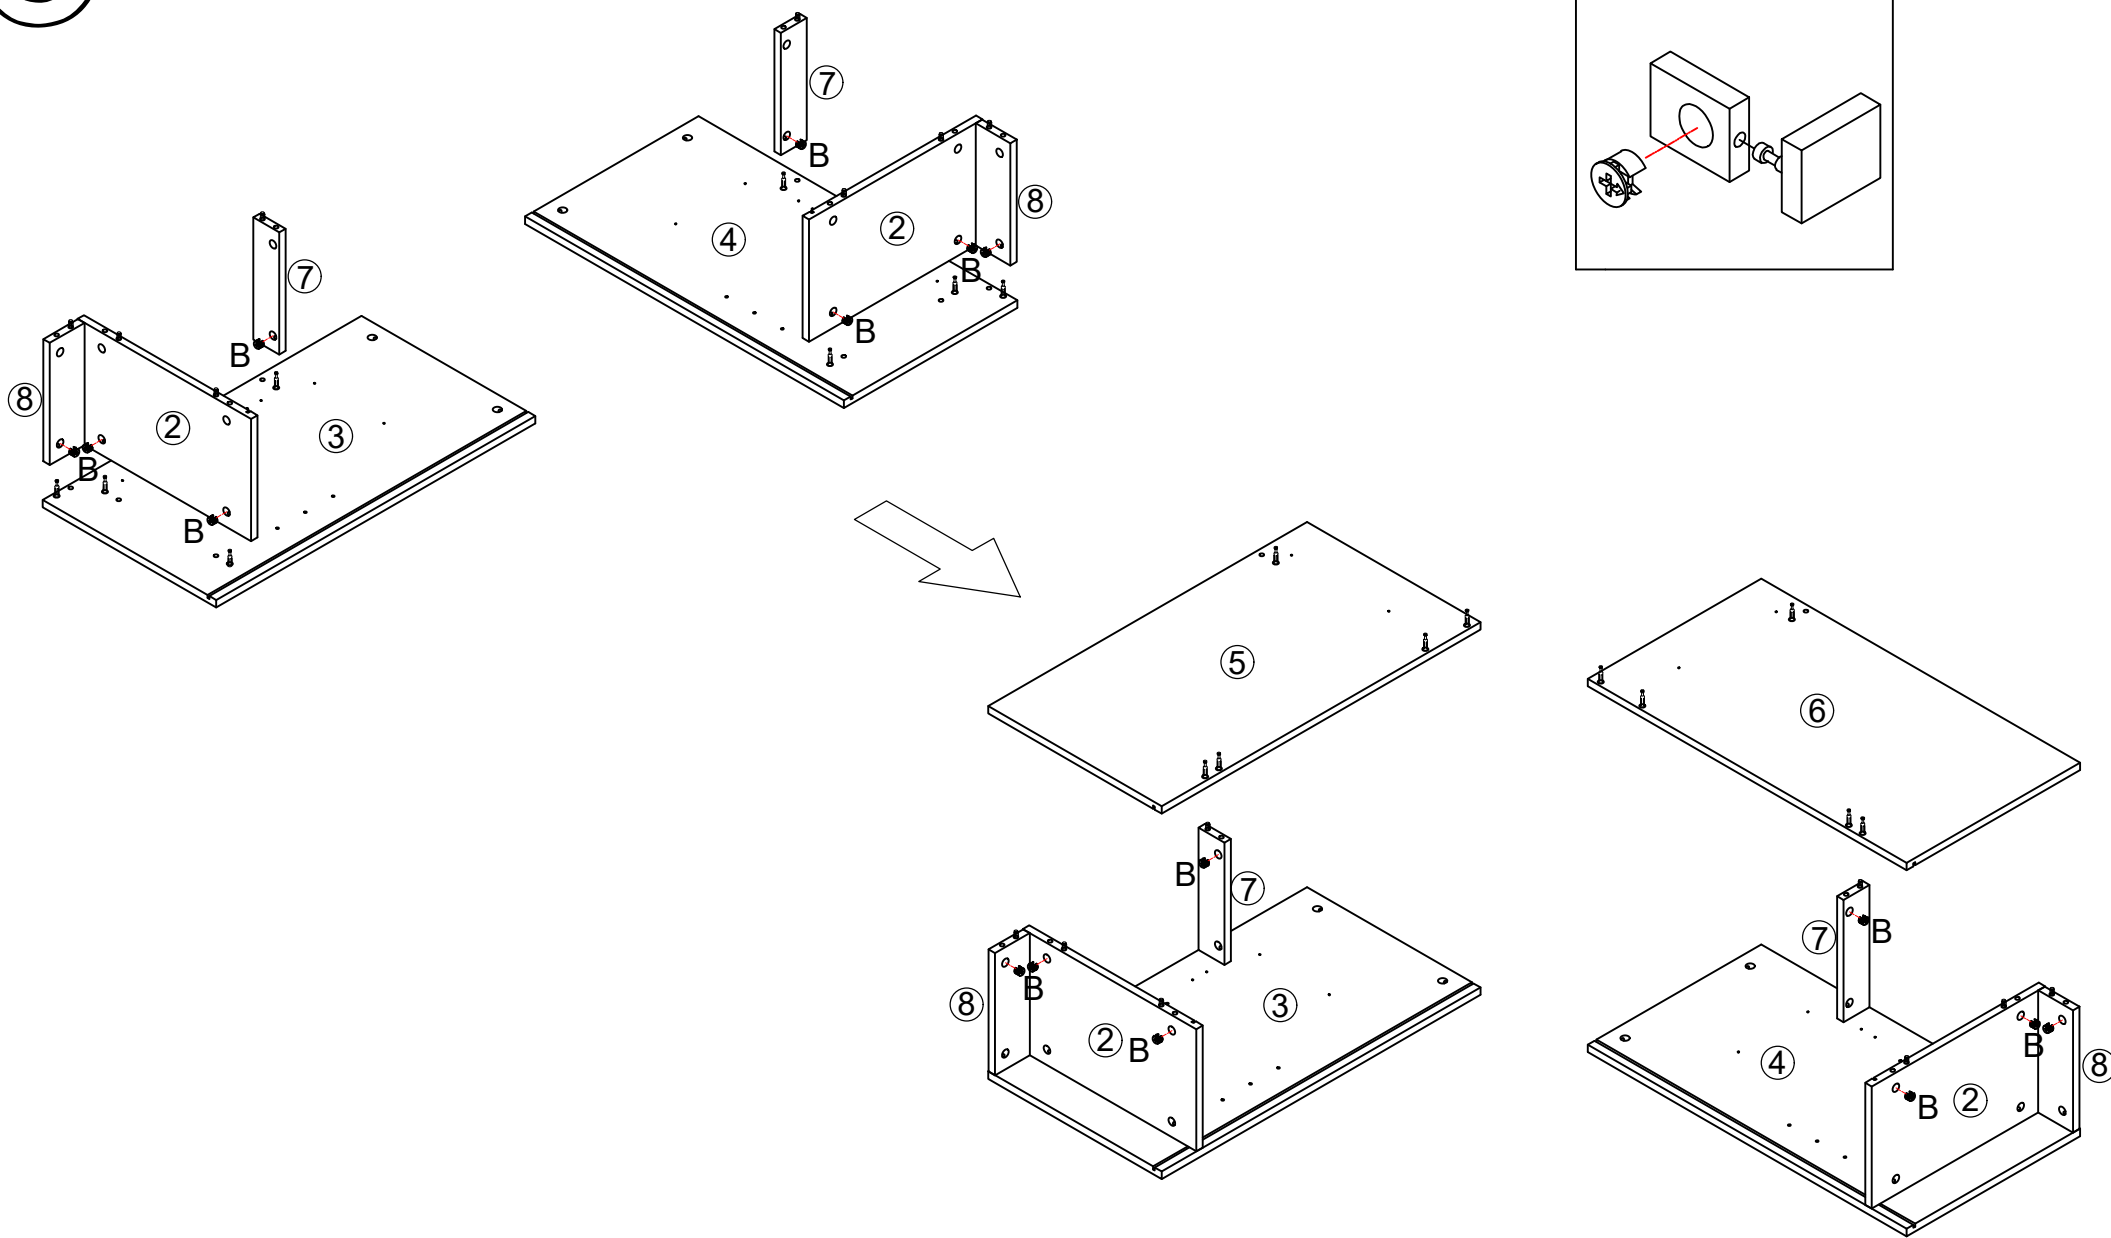

B*16





6

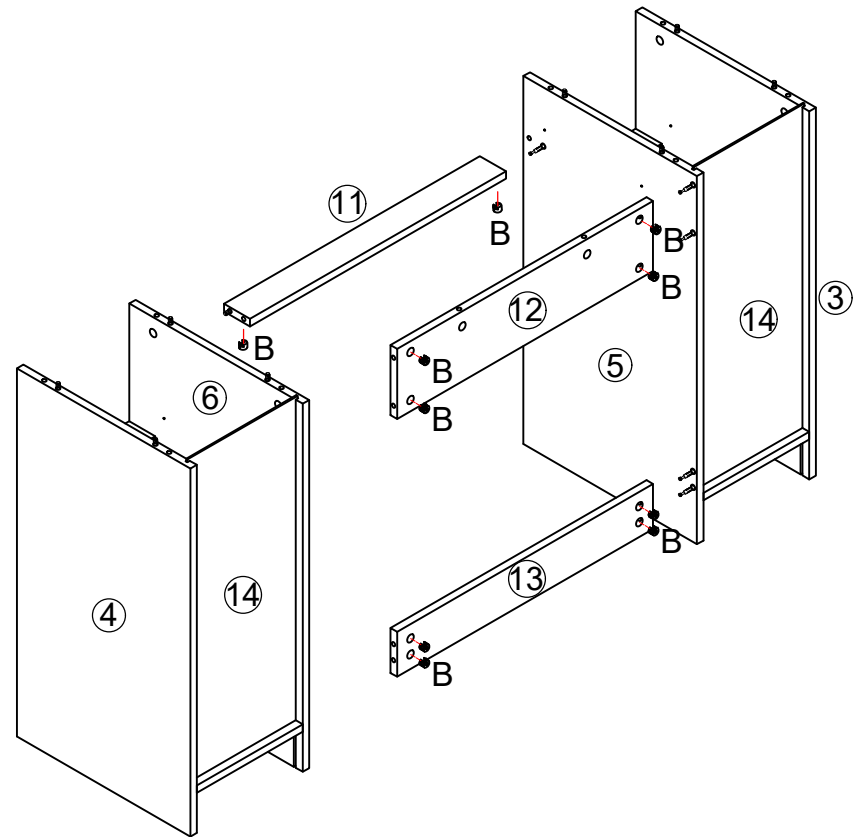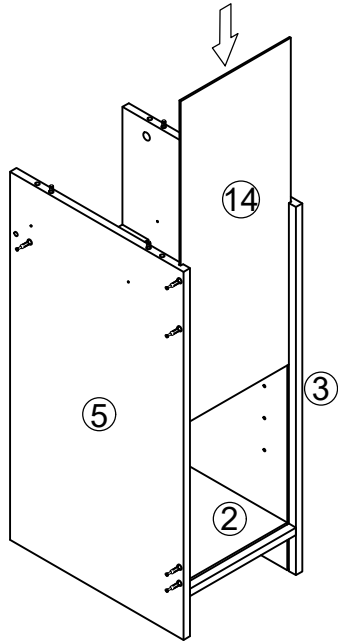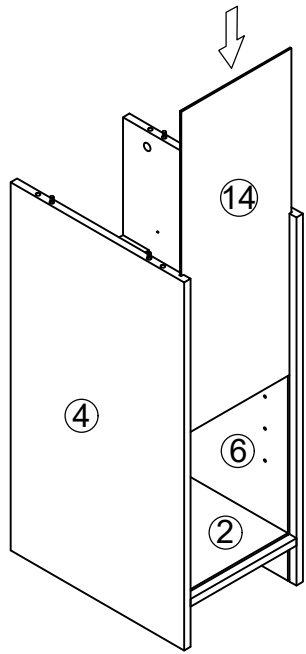


B*10

7

Make sure the arrow on the screw align to the hole on the side.

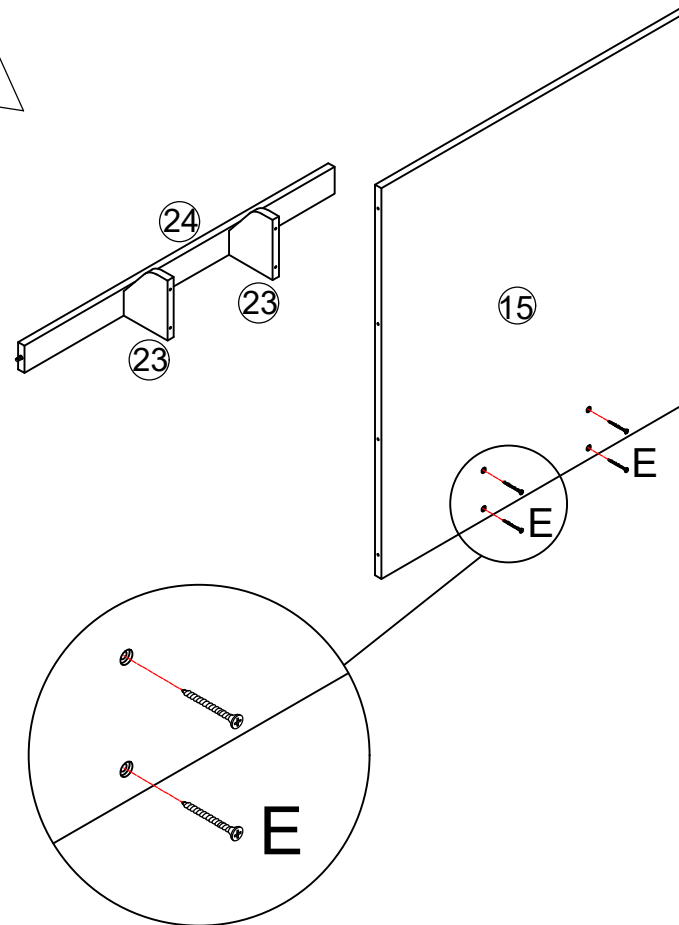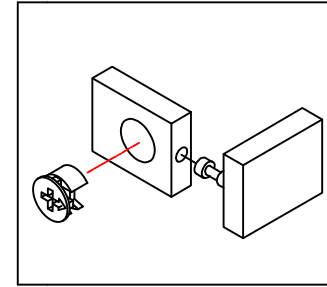
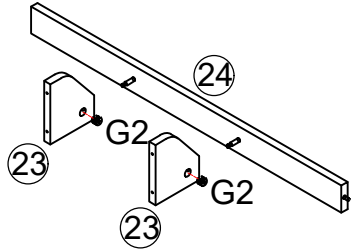


G2*2






E*4

8

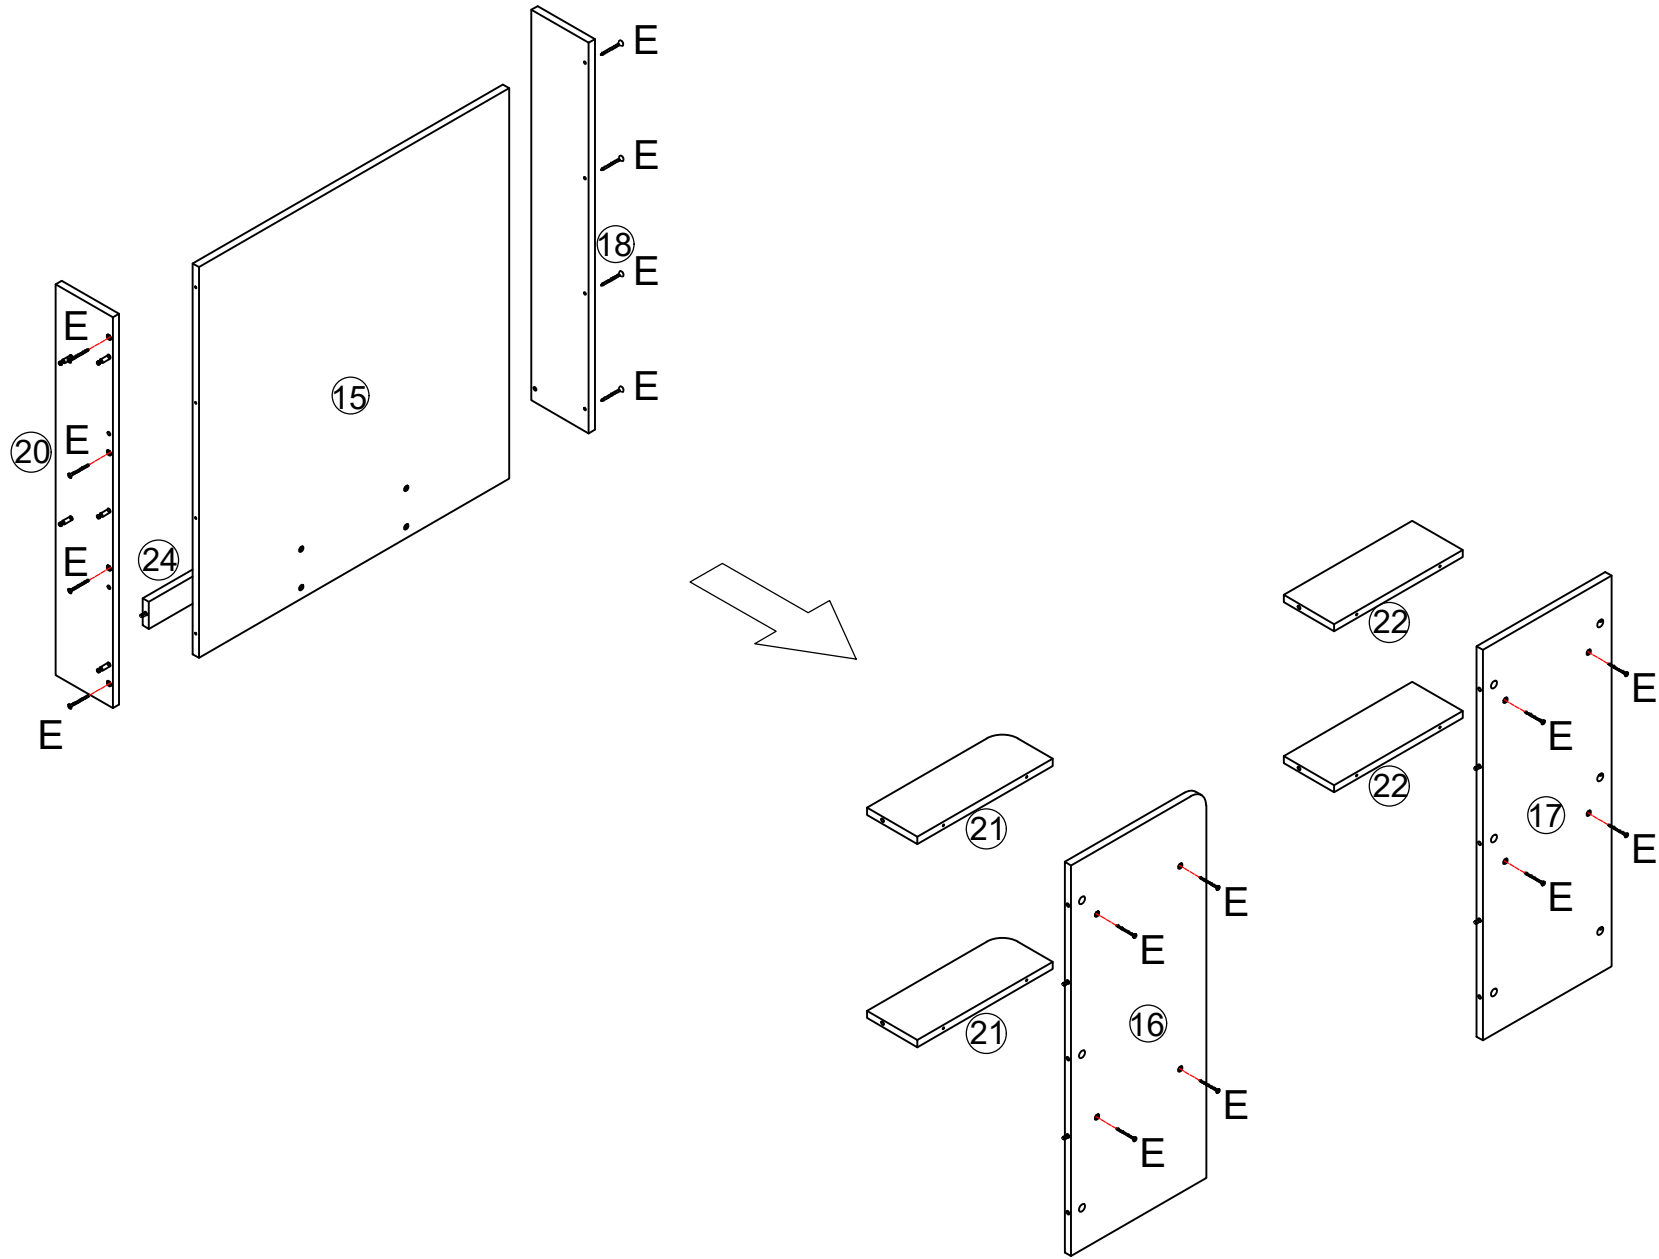


E*16

9

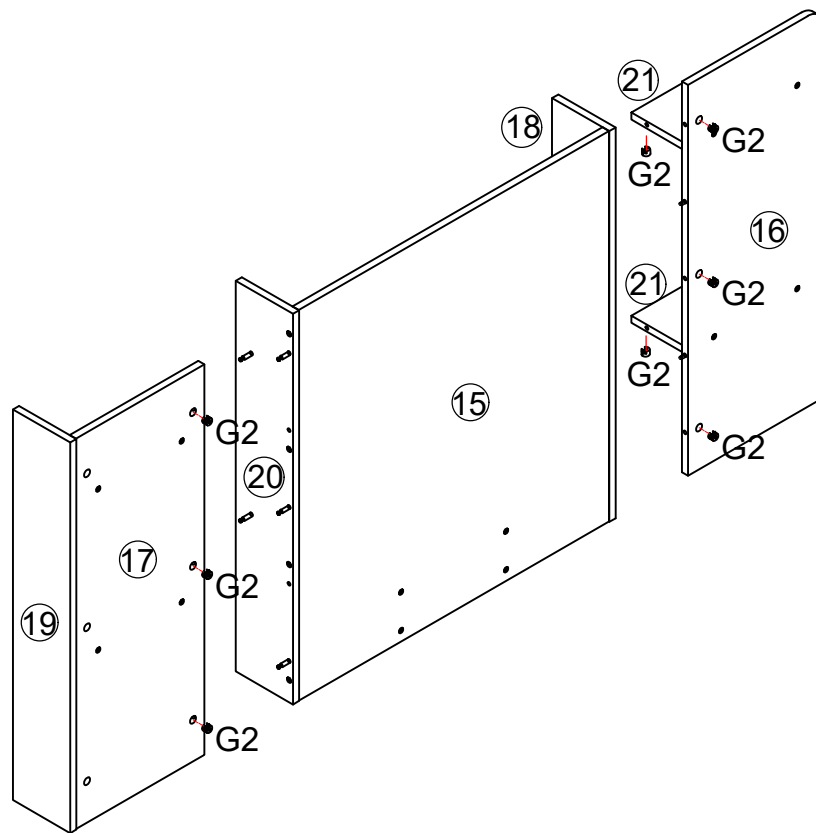
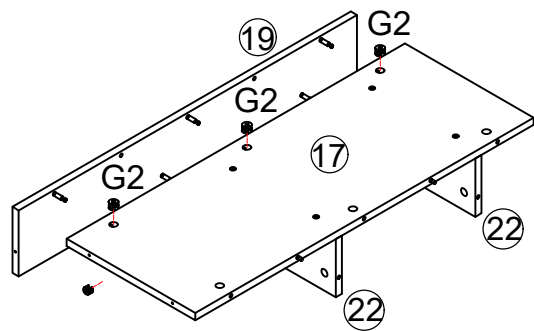


G2*15


10

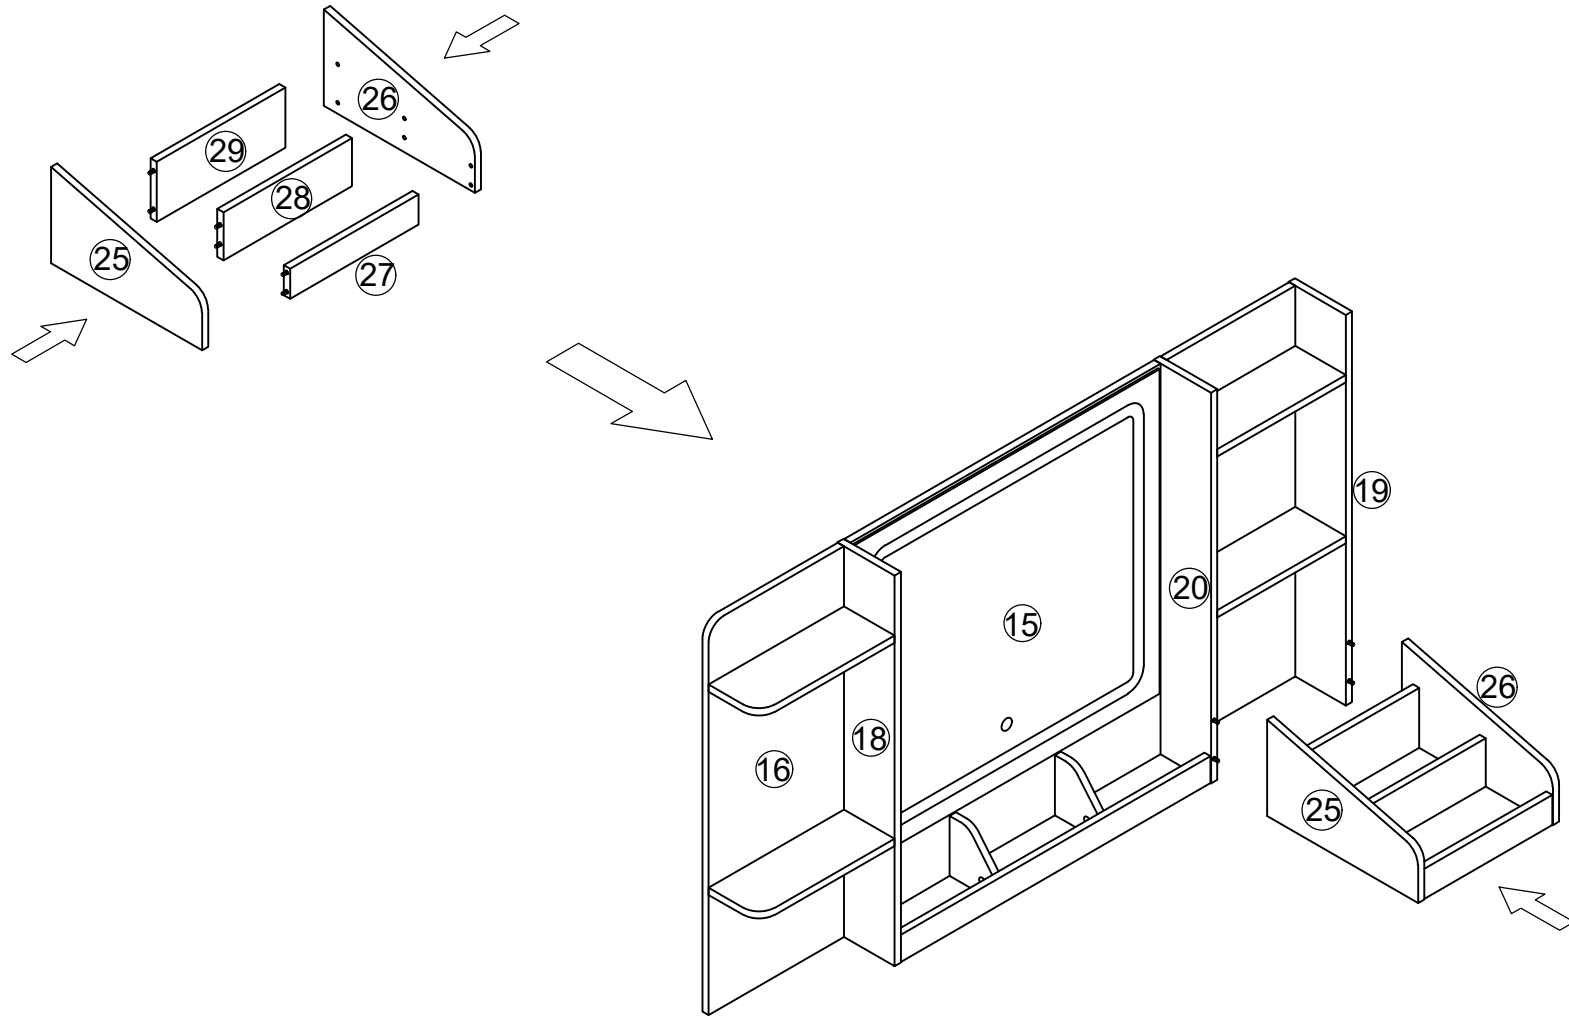

11

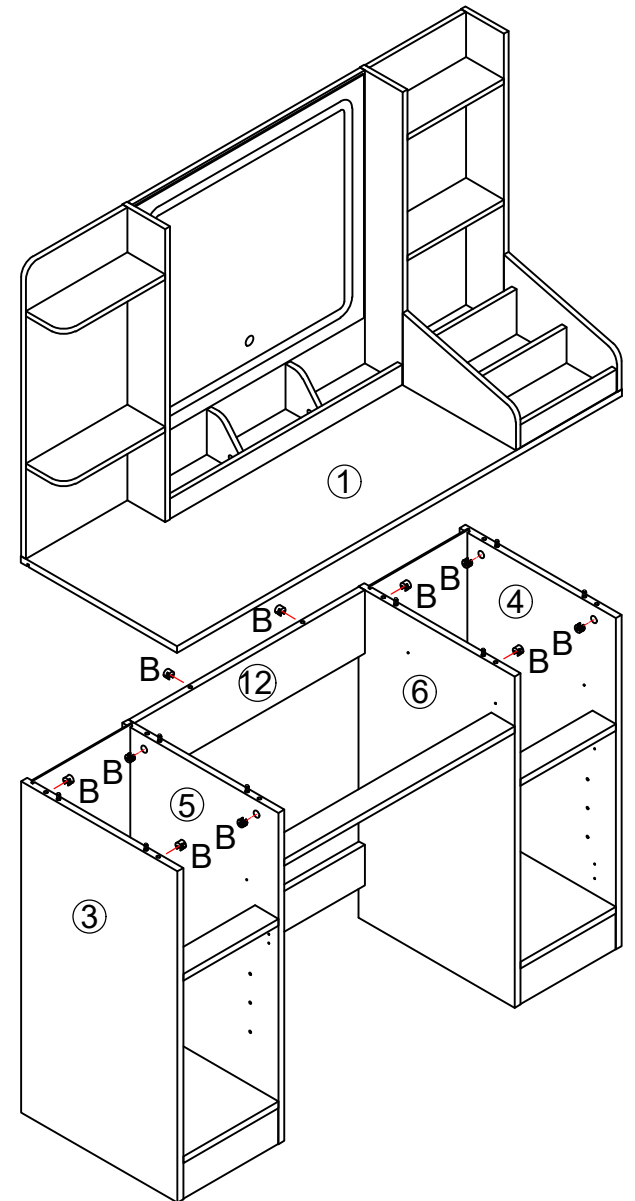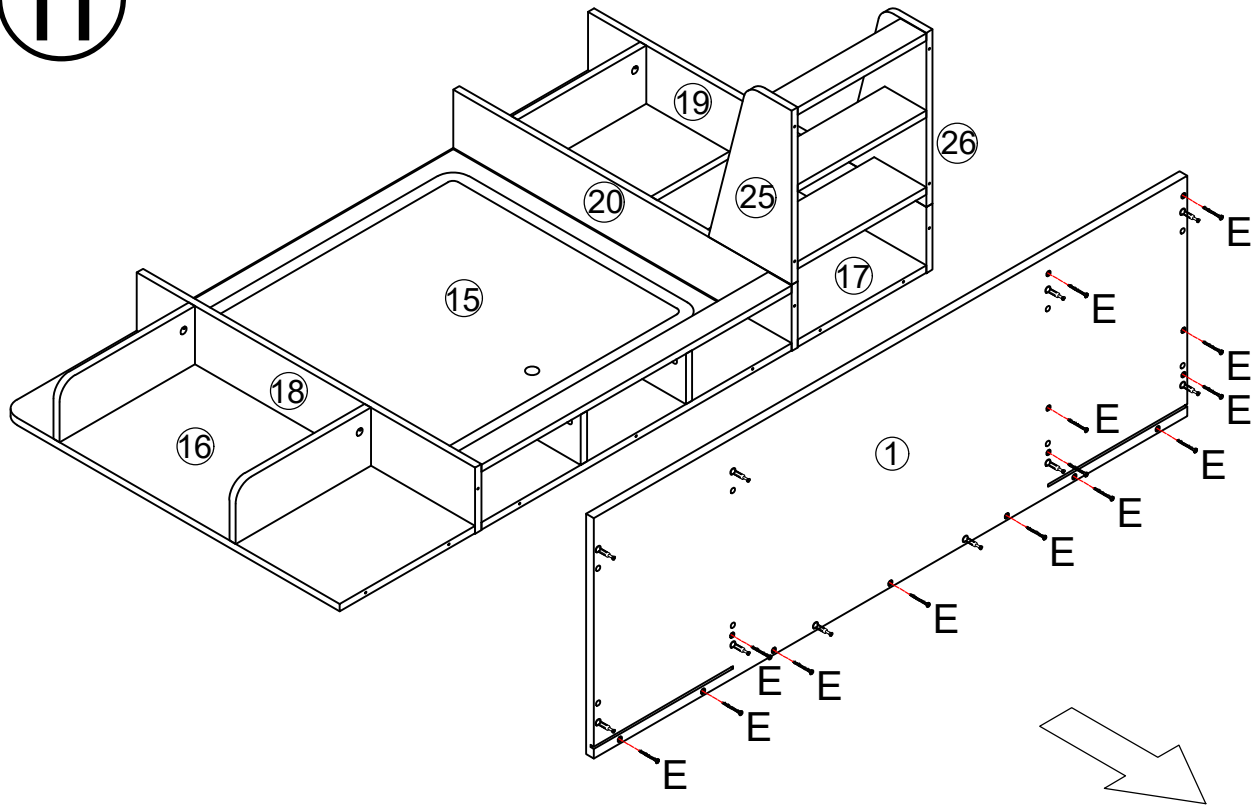


B*10



E*14

12

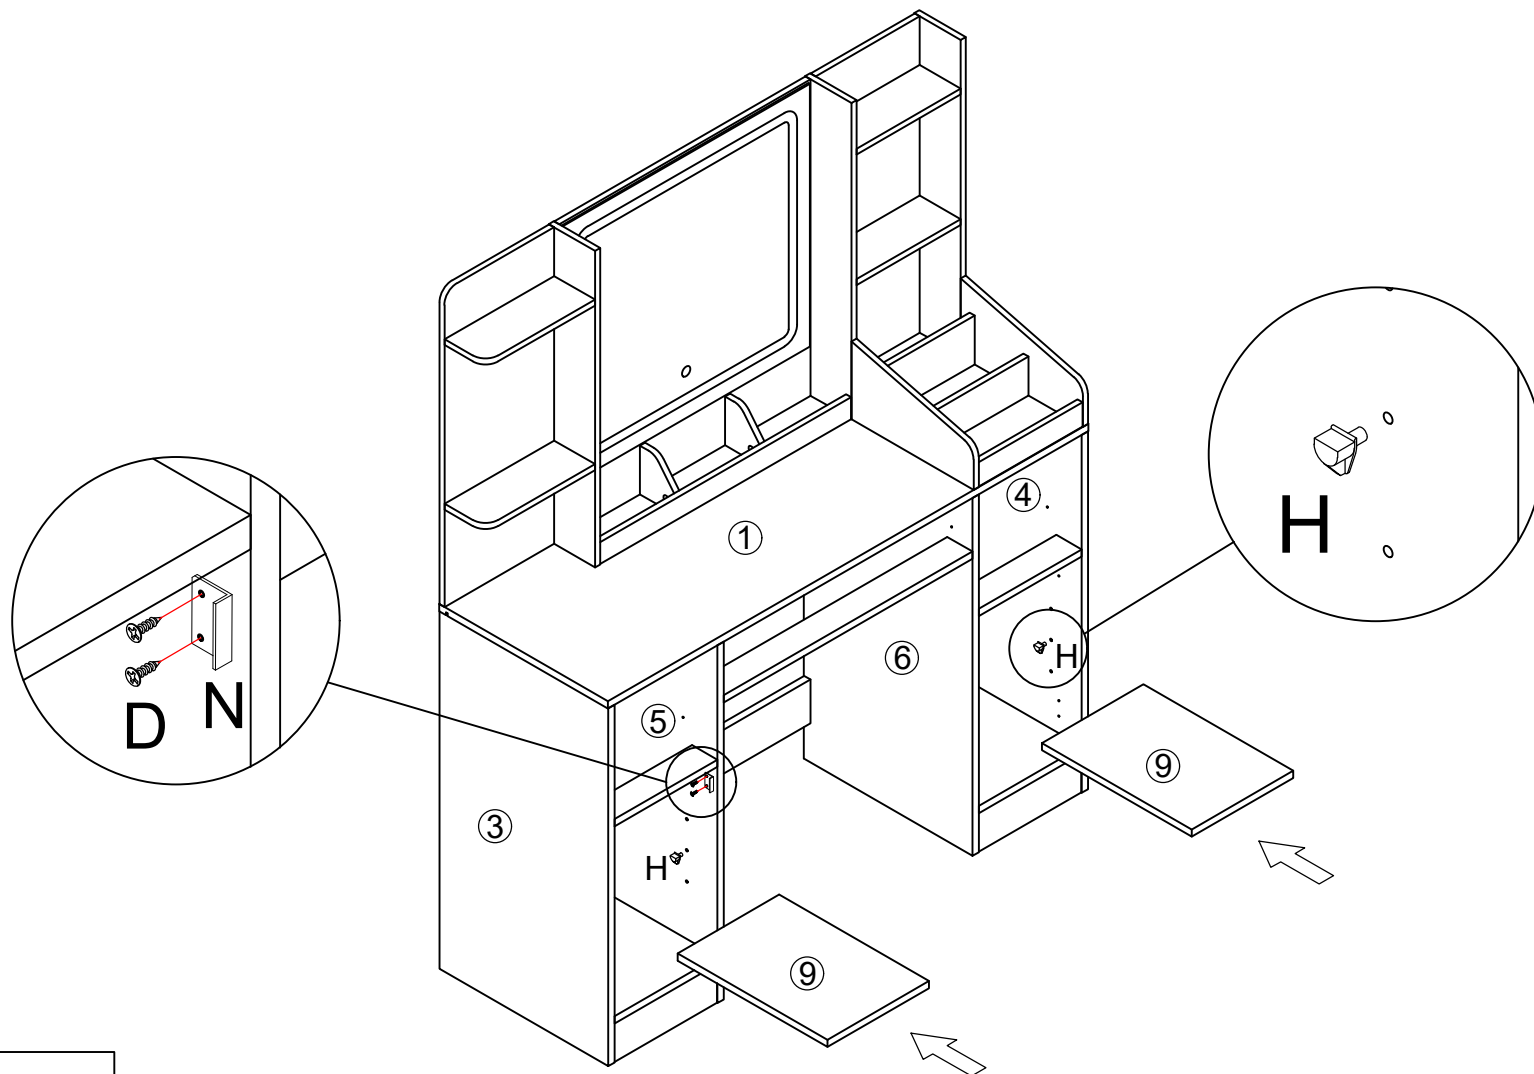

D*4








N*2

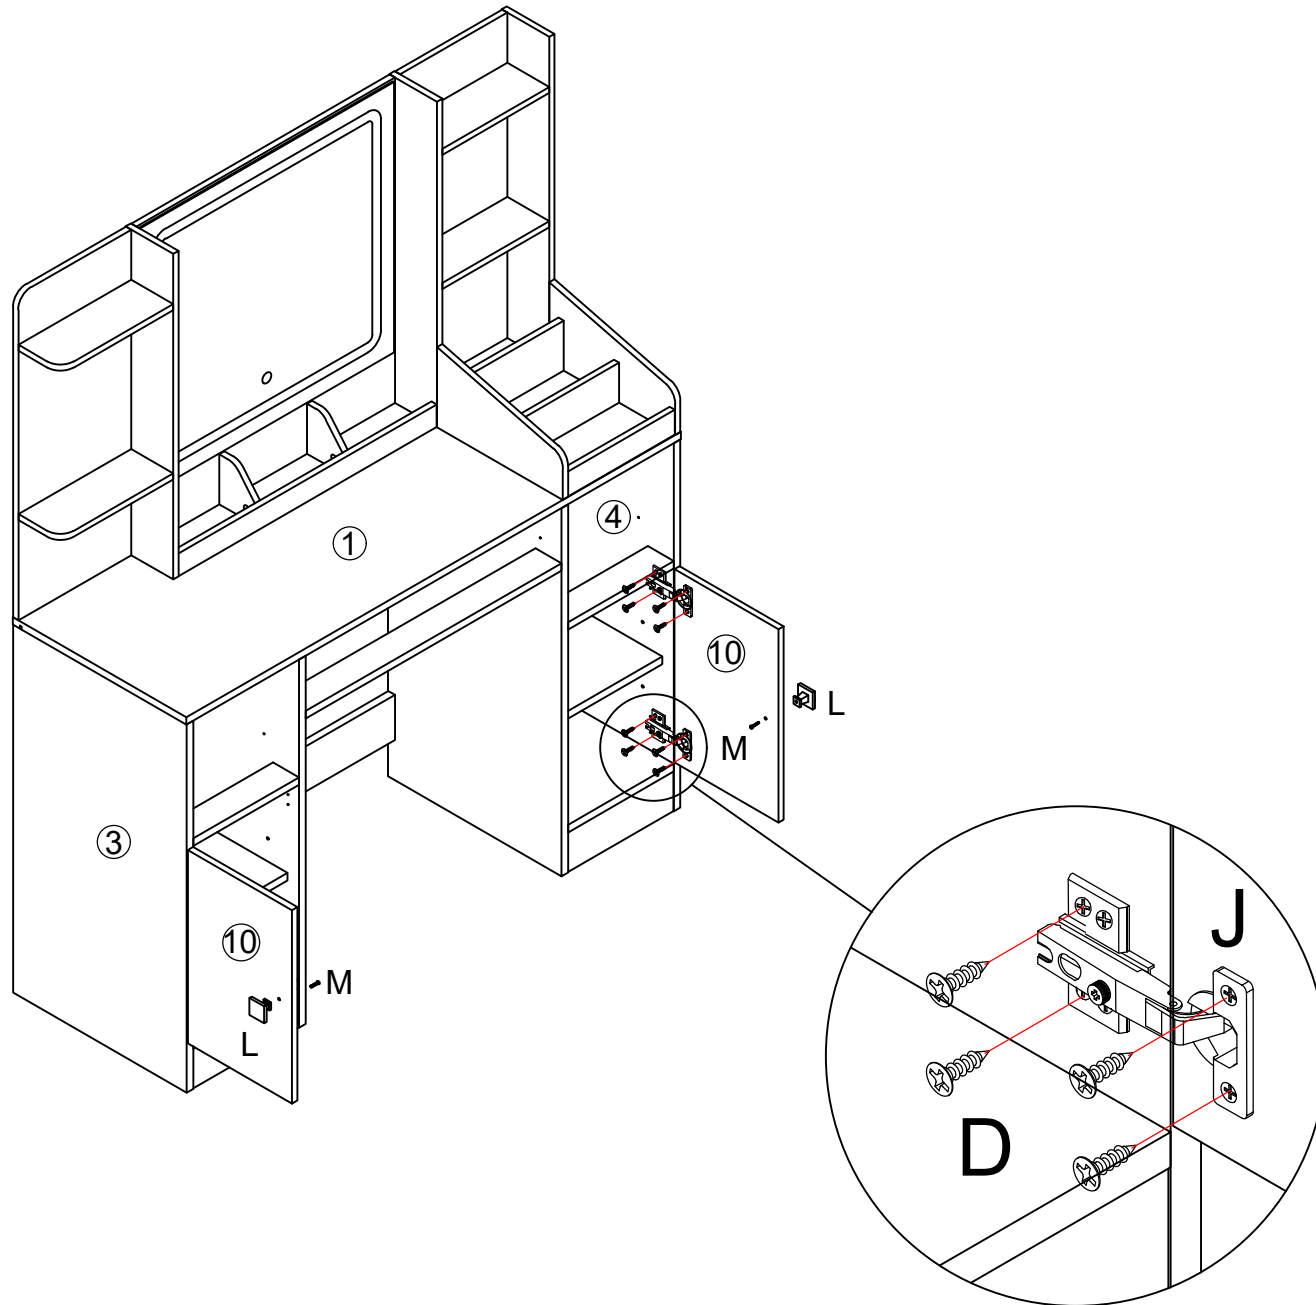


H*8

13



	D*24
	J*4
	L*2
	M*2

14

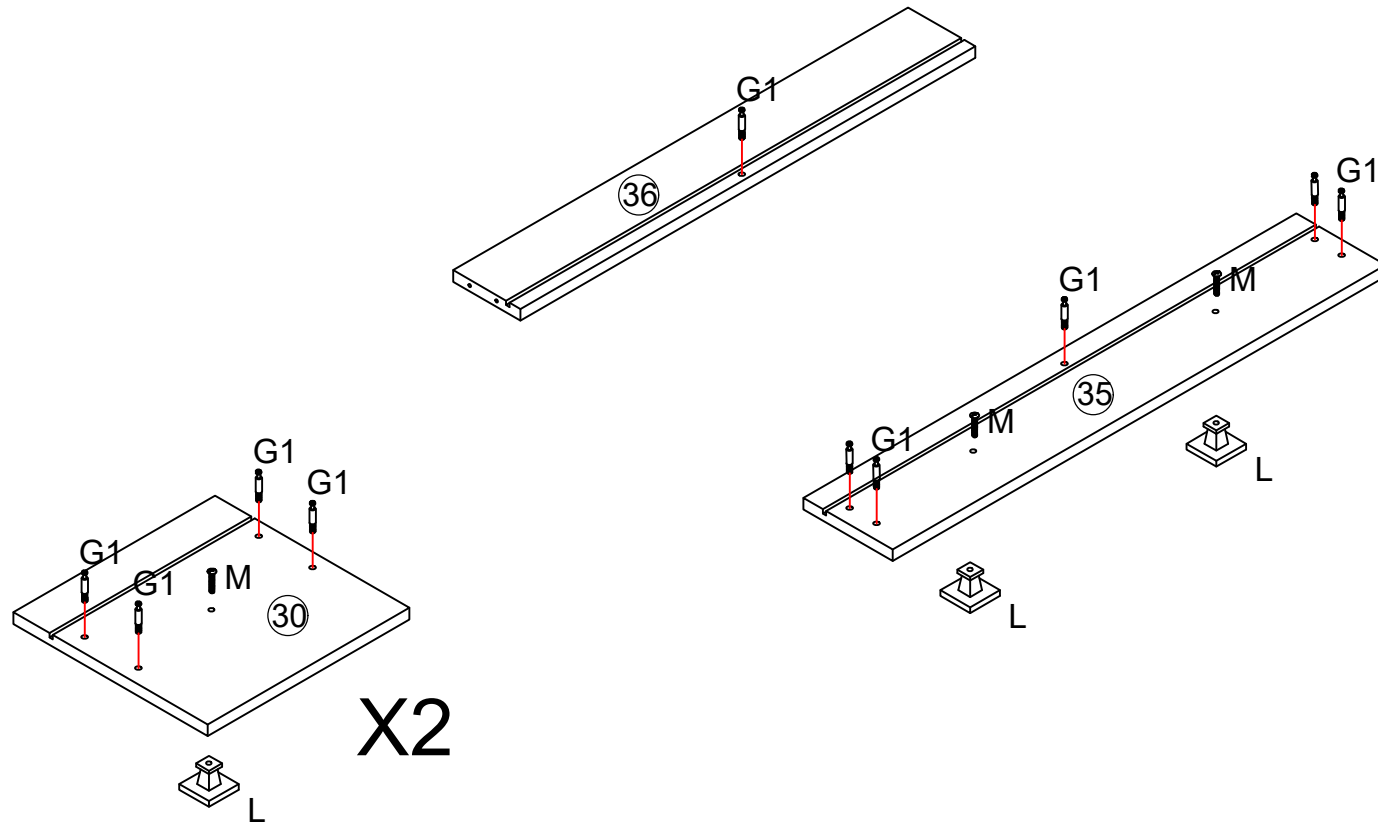

G1*14









L*4



M*4

15


X2

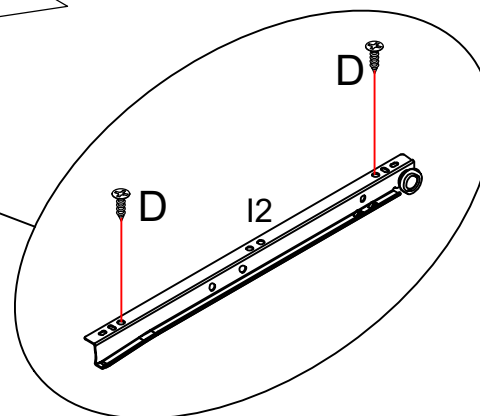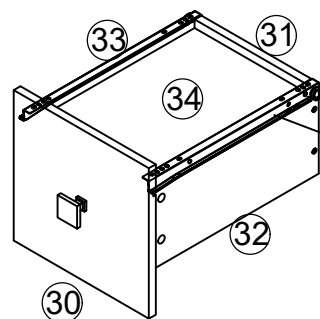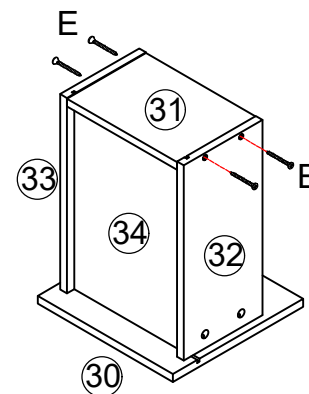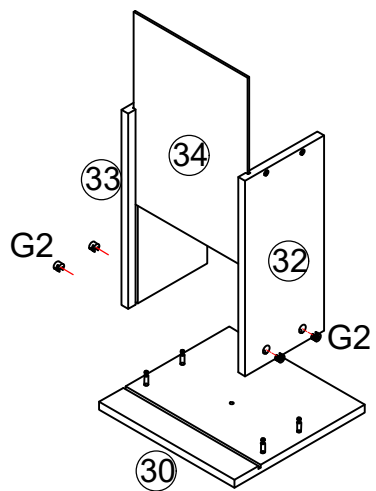


G2*8



D*8





E*8



I2*2


16

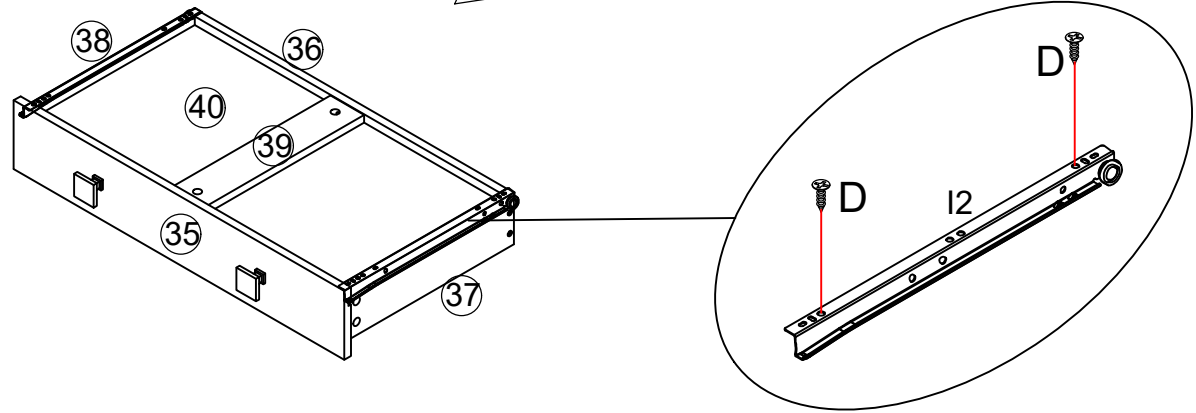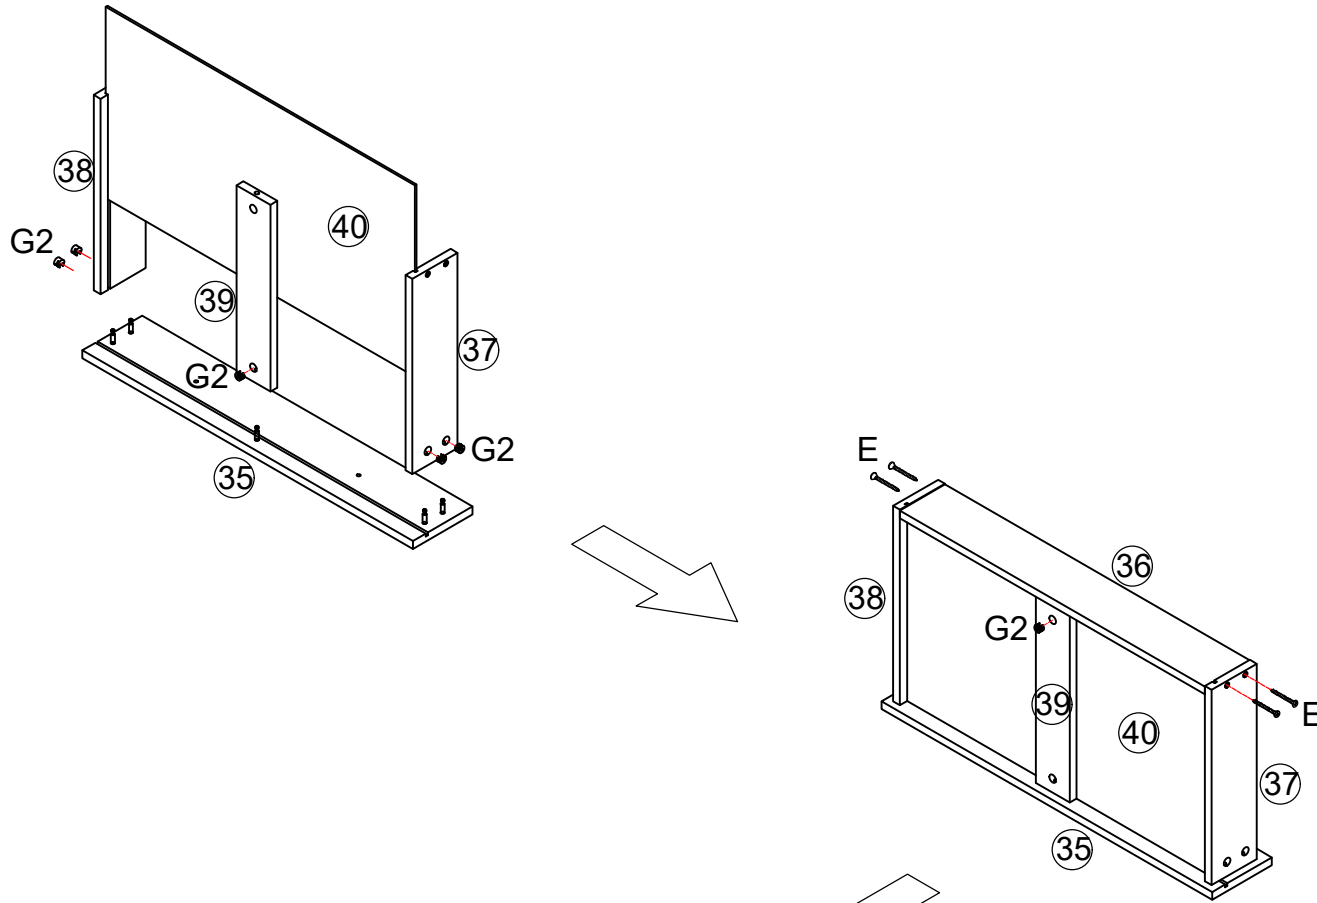


G2*6



D*4







E*4



I2*1

17


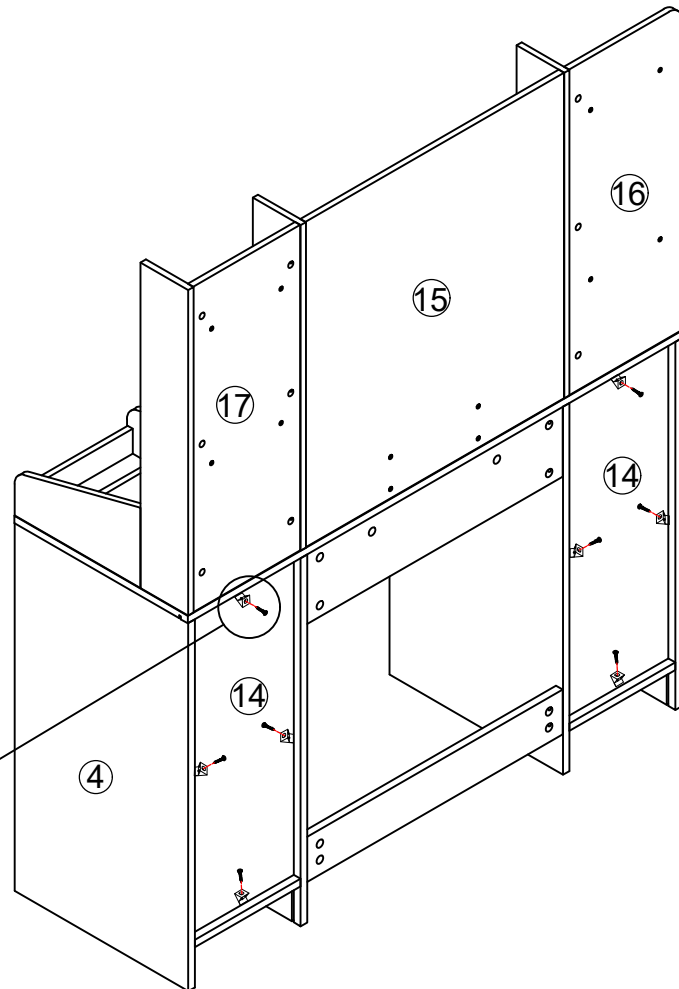
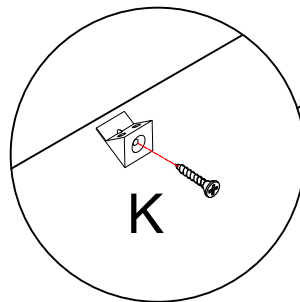
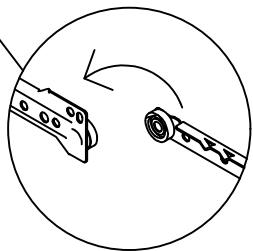
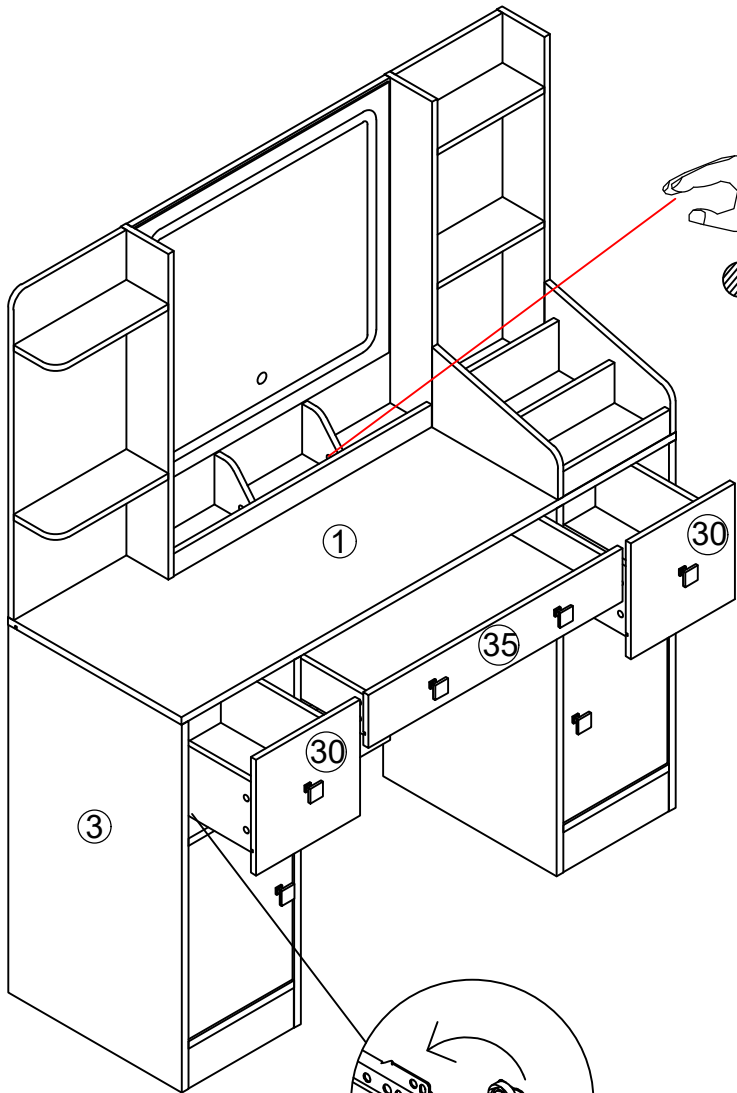


K*8



0*8

18

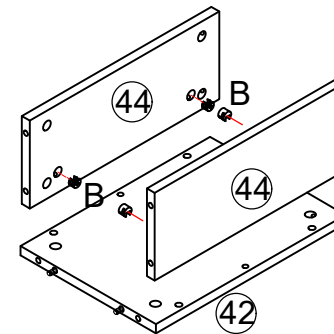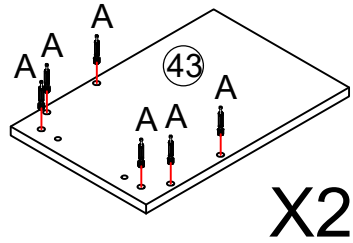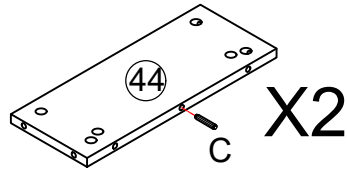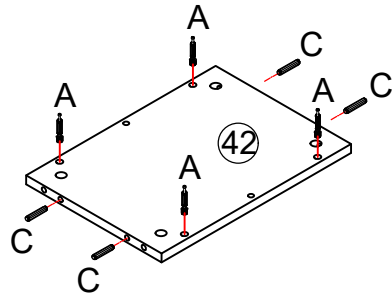

A*16





B*4









C*6

19

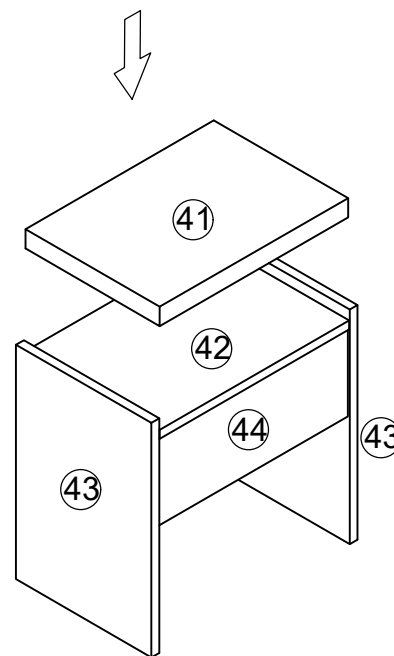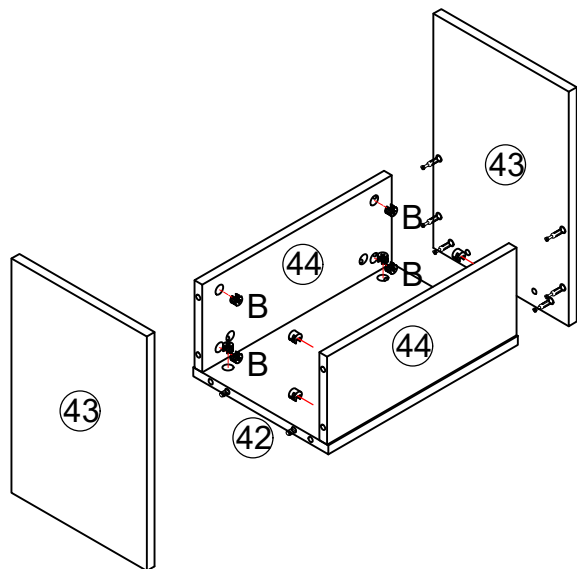

B*12

20

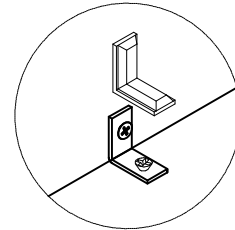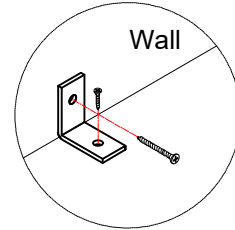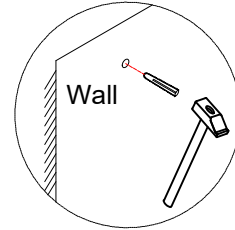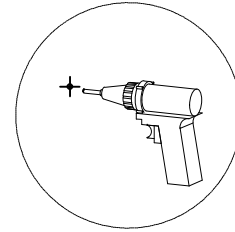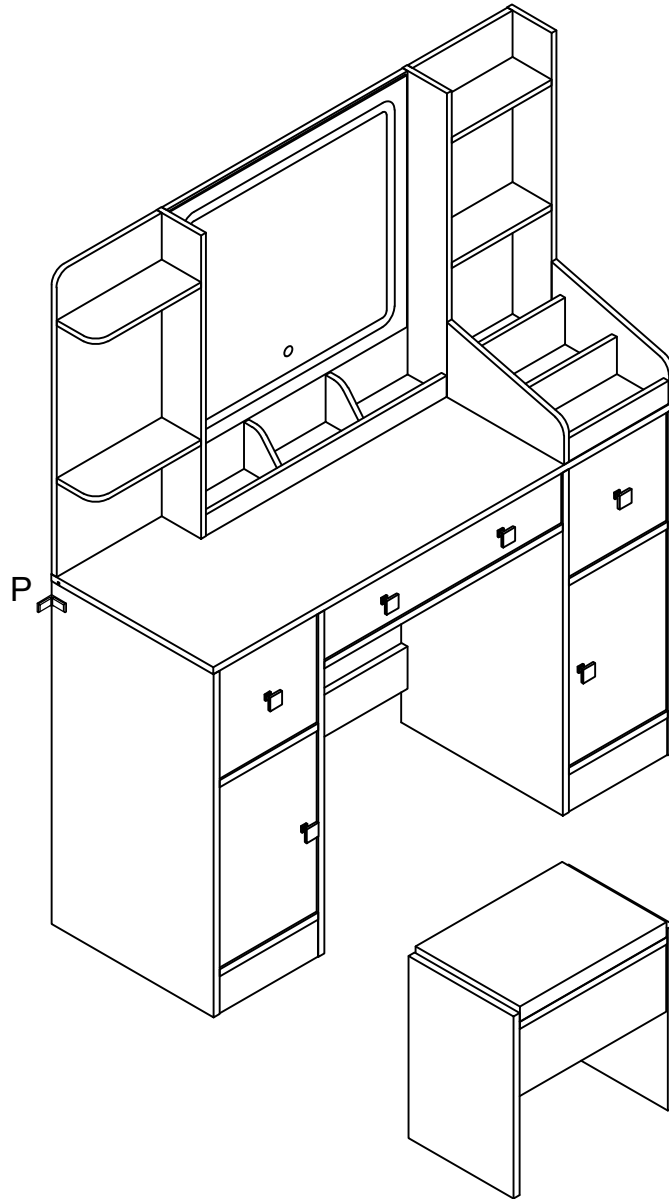

P*2

Please install tip-proof fitting.