

ASSEMBLY INSTRUCTION PATIO FURNITURE SETS

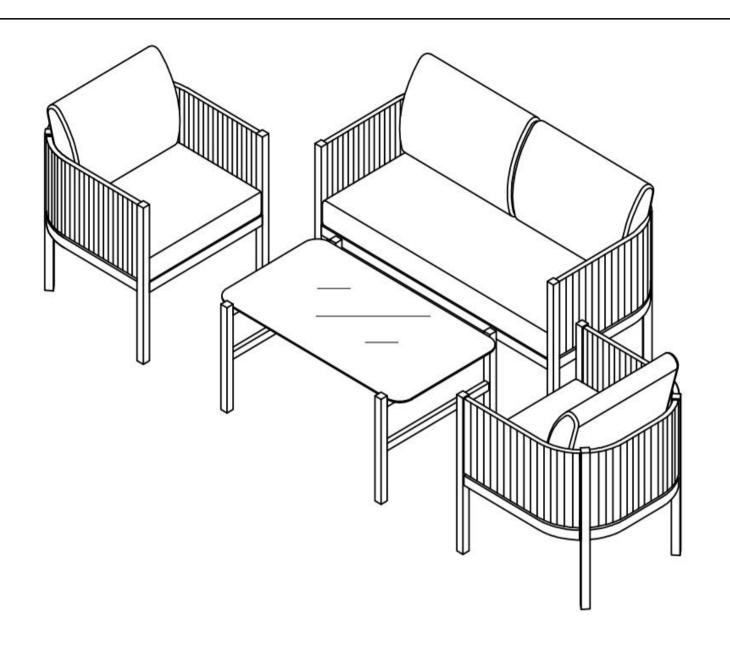

Notice:

- 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill. all screws again.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- 3. Tighten up all screws with tools gradually.
- 4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up not be aligned with holes. In addition, all the holes are designed to be relatively larger
- 6. Note: If one or some screws are fully tightened during assembly, chances are the others will to provide more space for the adjustment of the screws.

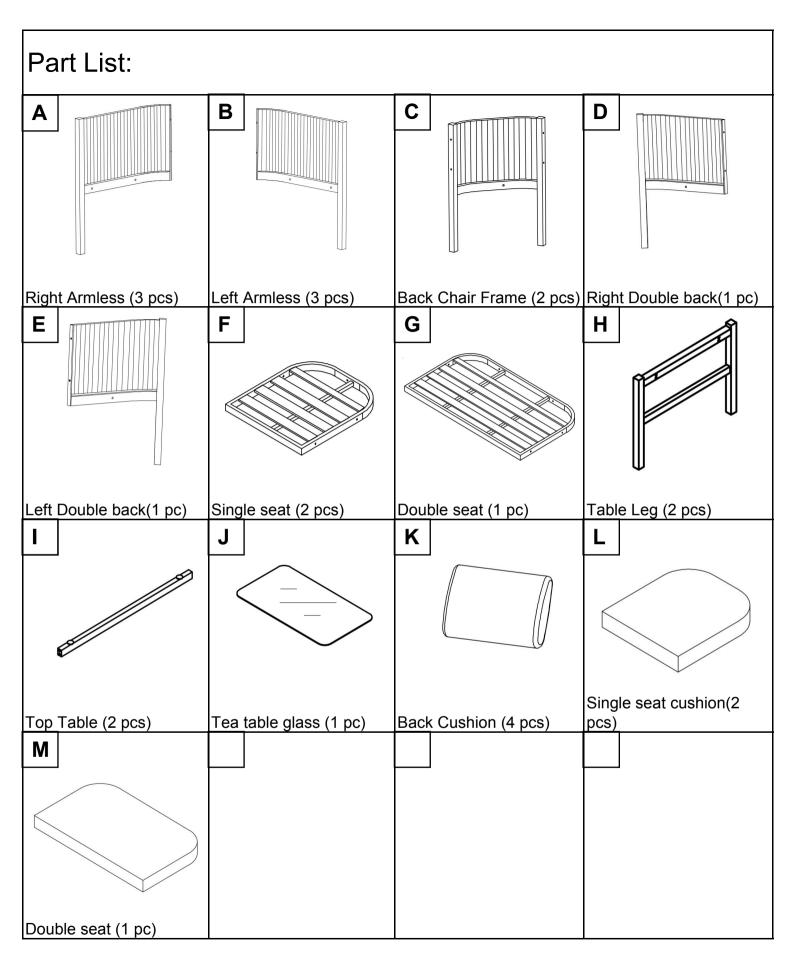

Hardware :			
1	2	3	4
Bolt M6x15 (2 pcs) +Extra (1pc)	Bolt M6x20 (12 pcs) +Extra (1pc)	Bolt M6x35 (8 pcs) +Extra (1pc)	Bolt M6x40 (16 pcs) +Extra (1pc)
5	6		
Flat Washer M6 (38 pcs) +Extra (1pc)	Allen Key (1 pc)		

CARTON CONTENT: 1FO2 H x 2 L x 2 Fx 2 J x 1 Gx 1 Mx 1 2FO2 **Bx 3 Ax 3** Kx 4 C x 2 Dx 1 Ex 1 1 x 2

