


ASSEMBLY INSTRUCTION

TWIN BED

Page : 1 OF 1

Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

STEP 1.

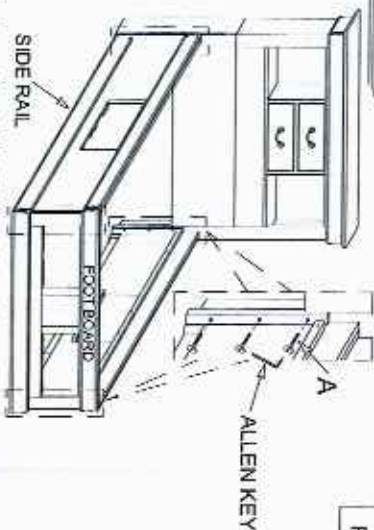

TIPS : Insert the Side Rail into the hole of Footboard.


ASSEMBLY TIPS:

Remove hardware from box and sort by size.
Please check to see that all hardware and part are present prior start of assembly.

NO	HARDWARE DESCRIPTION	QTY
A.	JCBC Bolt M6 x 25mm	12PCS
B.	Chipboard Screw M4 x 32mm	30PCS
C.	Adjuster Screw M6 x 24mm	3PCS
D.	JCBC Bolt M6 x 35mm	13PCS


Screw Driver Not Provide !!!

STEP 3.

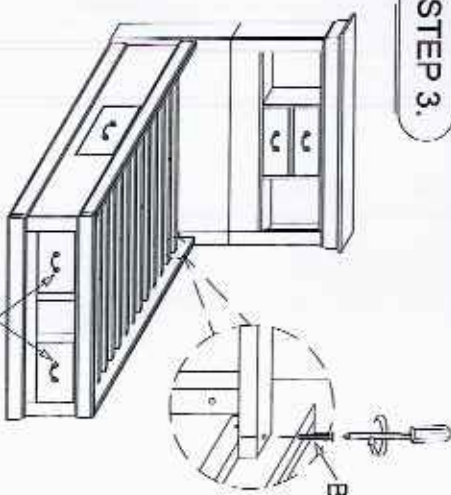



STEP 2.

TIPS : Attach the drawer support and slat support to footboard and fasten with Bolt.

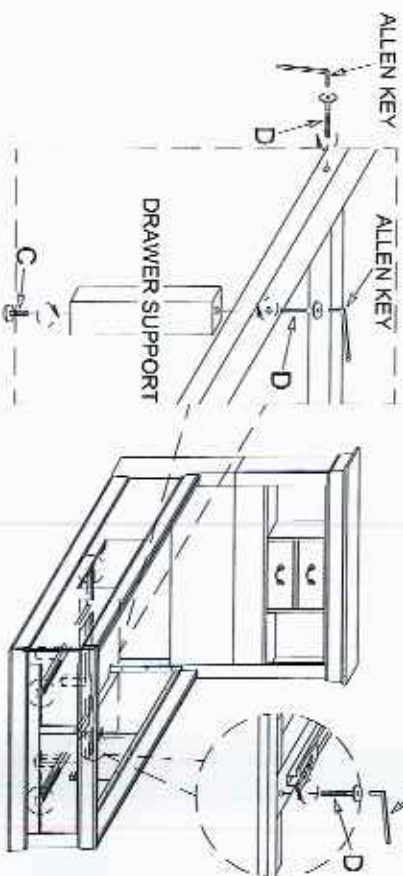

TIPS : Attach the Bed Slat to the Side Rail. Fasten the Bed Slat by tighten screw through the pre-drilled hole of Bed Slat.

TIPS : Rotate the slat support and tighten using with Allen Key.

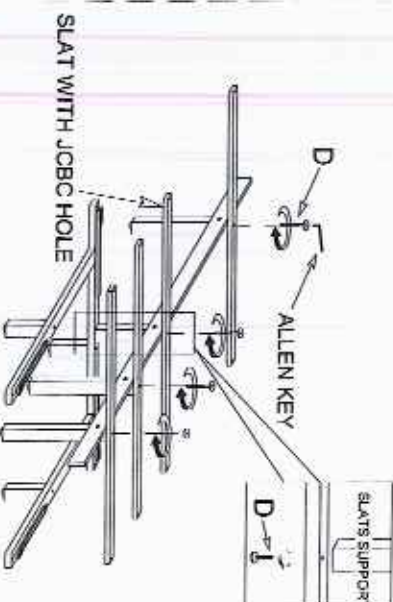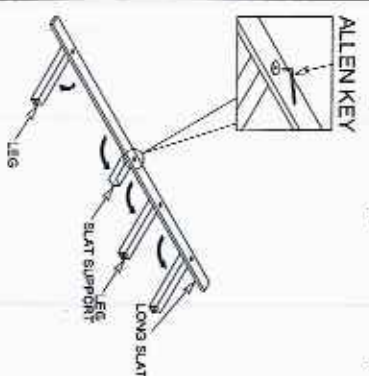

TOTAL SLAT : 15 PCS + 1PC LONG + 3PCS LEG + 1PC SLAT SUPPORT + 3PCS DRAWER SUPPORT (SMALL)

ASSEMBLY INSTRUCTION TWIN BED



Page : 1 OF 1

Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

ASSEMBLY TIPS:

Remove hardware from box and sort by size.

Please check to see that all hardware and part are present prior start of assembly.

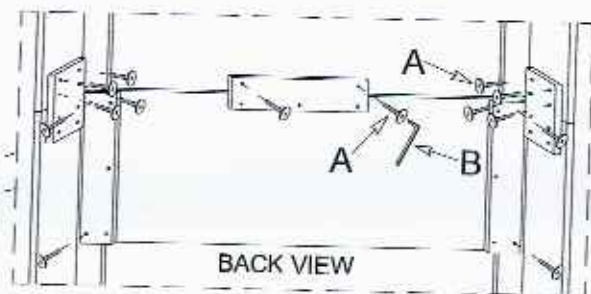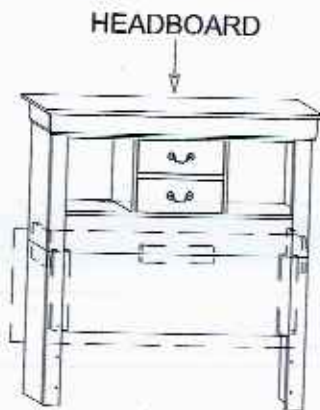

TIPS:

Attach & tighten the Headboard Leg (R&L),
Headboard Center Panel to the Headboard.
Use JCBC Bolt M6 x25 and Allen Key to fix.

NO	HARDWARE DESCRIPTION	QTY
A.	JCBC Bolt M6 x 25mm 	14PCS
B.	Allen Key 	1PC

Screw Driver Not Provide !!!