



# Dining Table

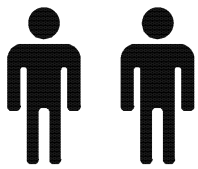


2 Persons

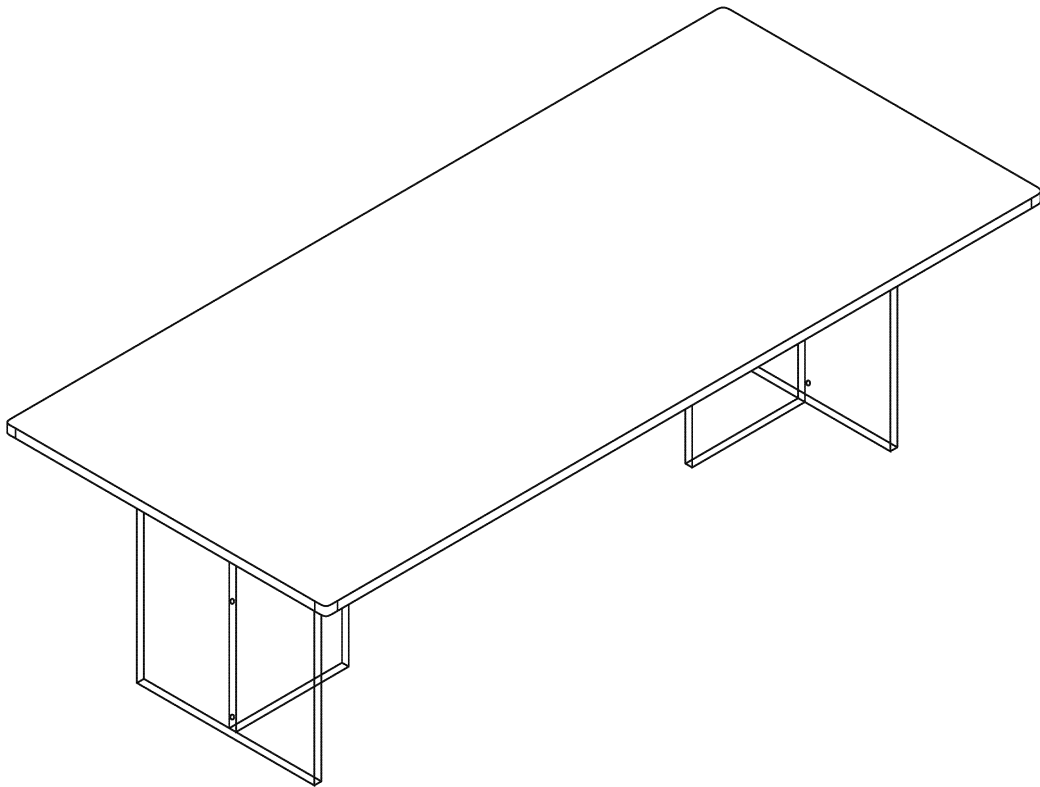




W1600\*H800MM  
W1800\*H900MM  
W2000\*H900MM
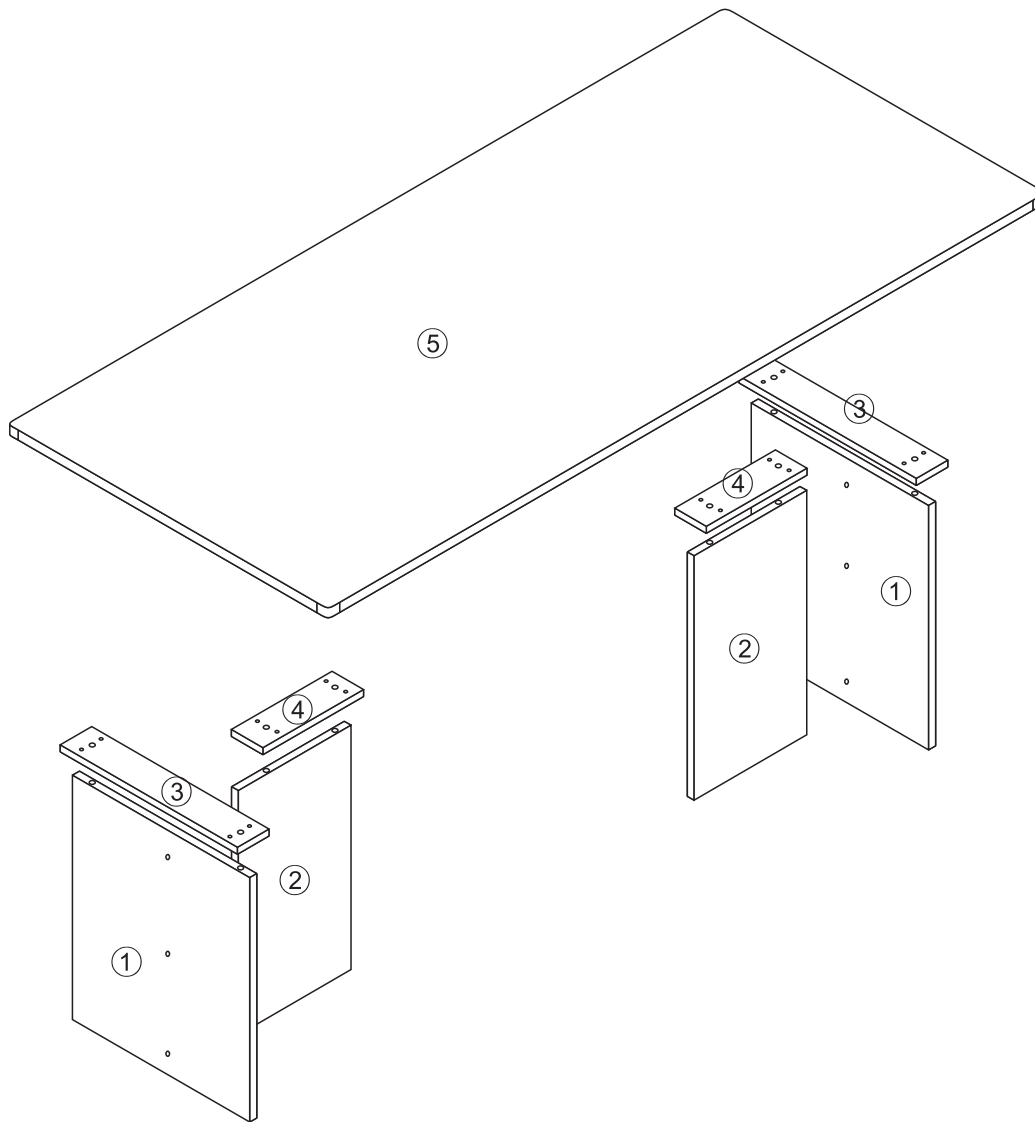
## Installation Instructions

Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.




Parts and accessories

<b>A</b>	6PCS	<b>B</b>	24PCS	<b>C</b>	6PCS	<b>D</b>	6PCS	<b>E</b>	1PC
									
6*35mm		6*20mm		17*4mm		20*5mm		Phillips screwdriver	


Disassembly and installation of accessories

1

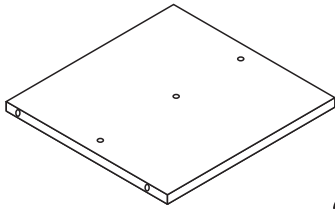


2PCS

2

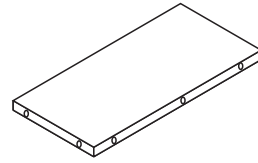


2PCS

3

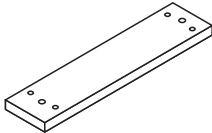


2PCS

4




2PCS

5

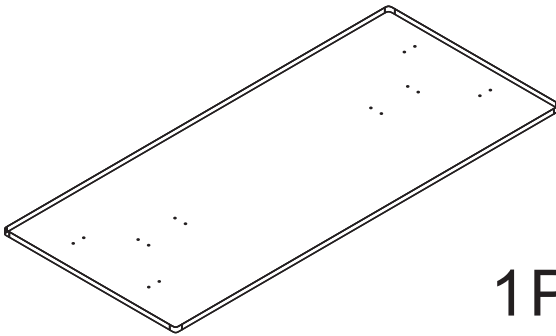


1PC

## Precautions

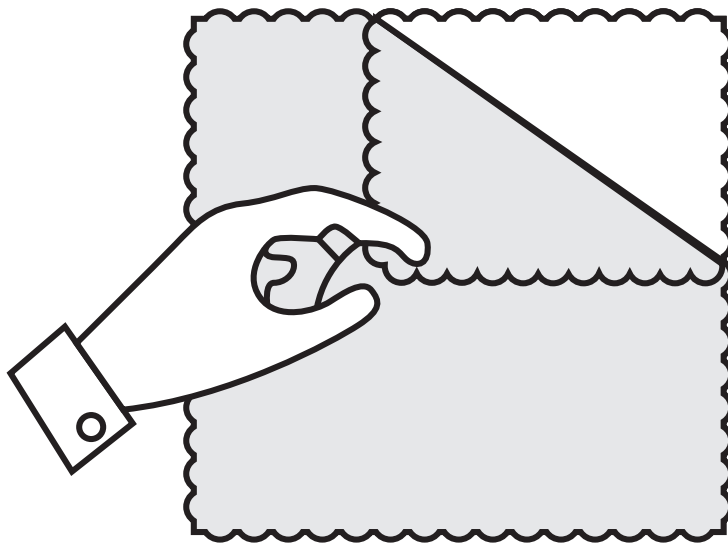



▲ Before installation, please tear off the film for all the boards. Be careful not to scratch the film after the film is installed.


1

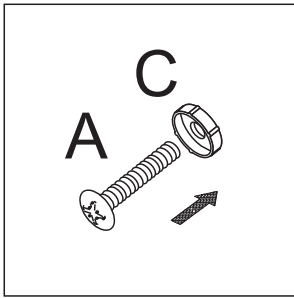



Ax3  
Cx3

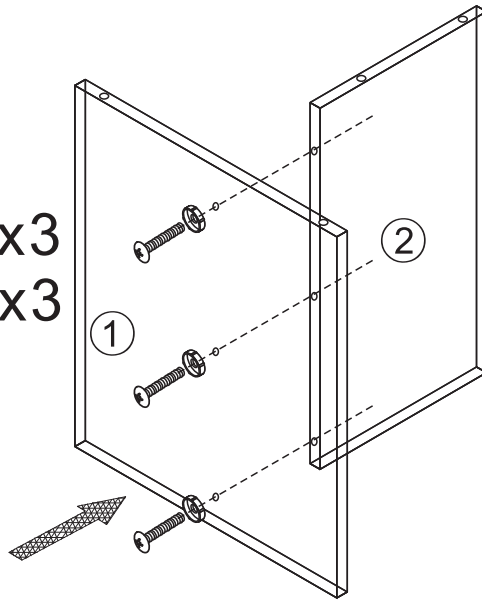


A	3PCS
	
6*35mm	



C	3PCS
	
17*4mm	


2

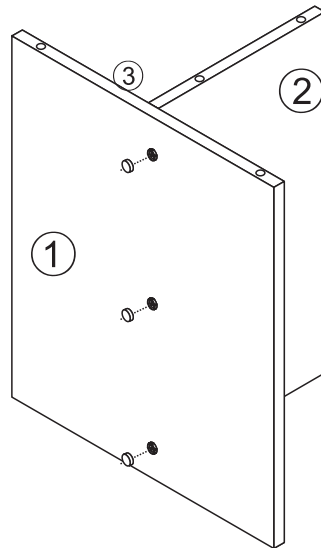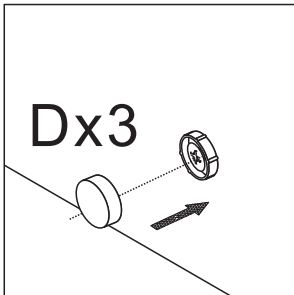



D	6PCS
	
20*5mm	


3

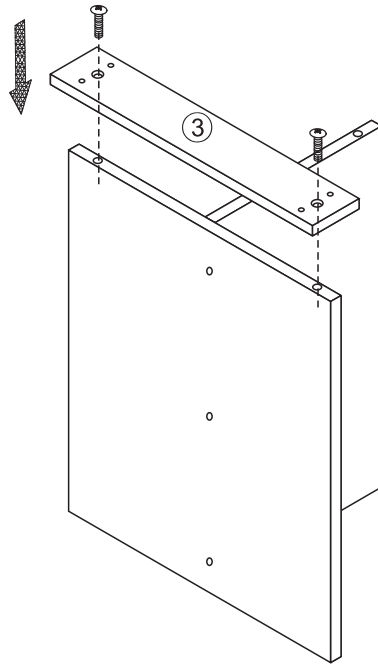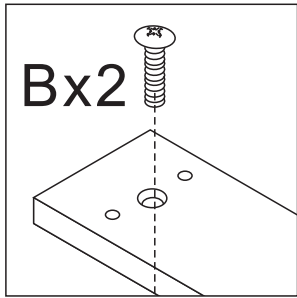


B	2PCS
	
6*20mm	

4

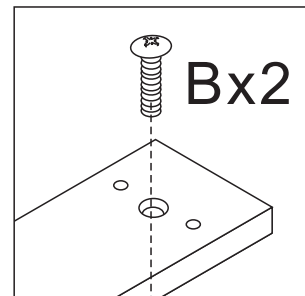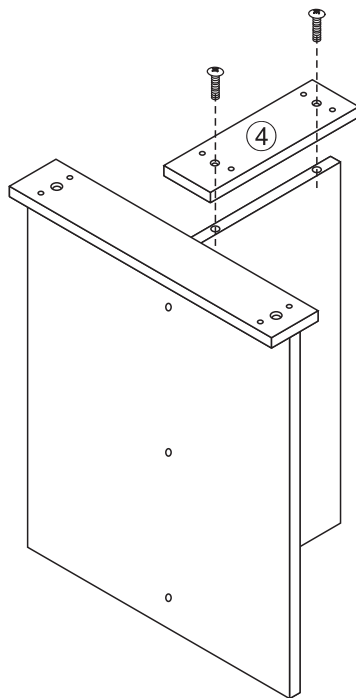




B	2PCS
	
6*20mm	

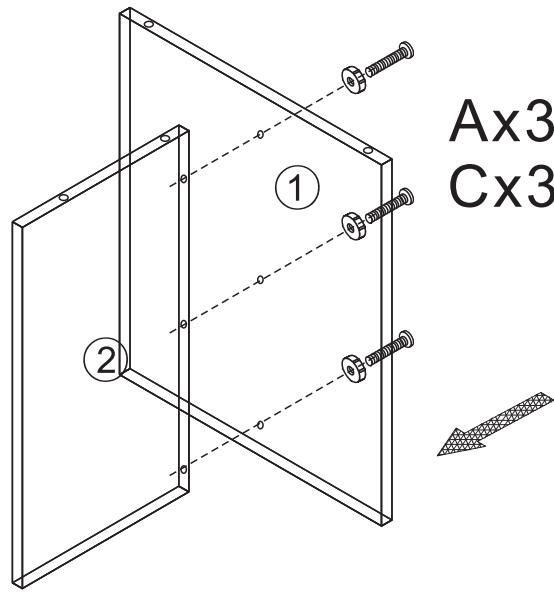5


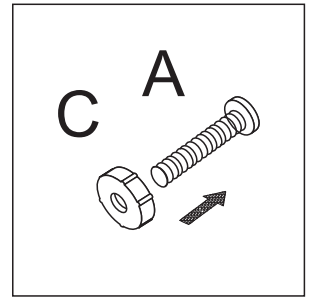


Ax3  
Cx3




A	3PCS	C	3PCS
			
6*35mm		17*4mm	



6

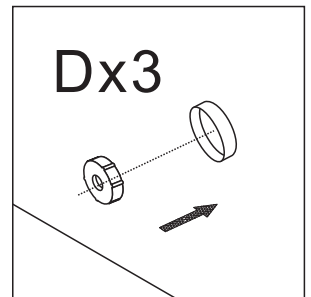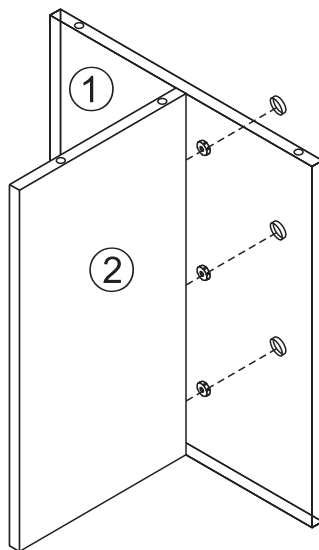


Dx3



D	6PCS
	
20*5mm	


7

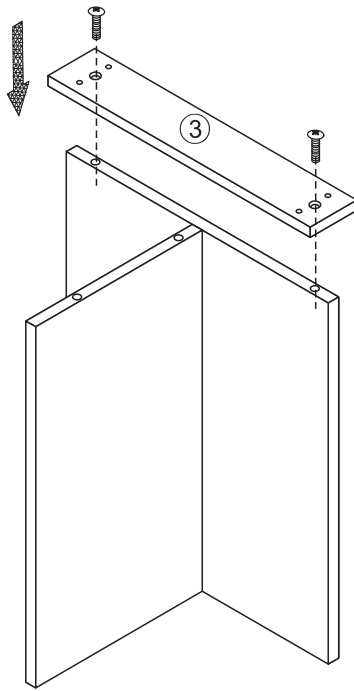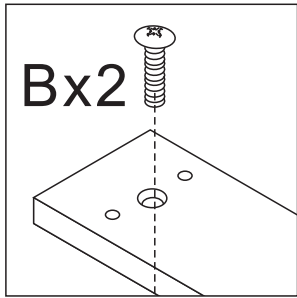



<b>B</b>	2PCS
	
6*20mm	


8

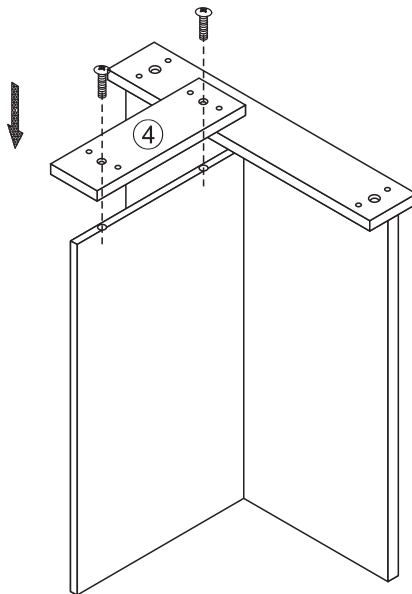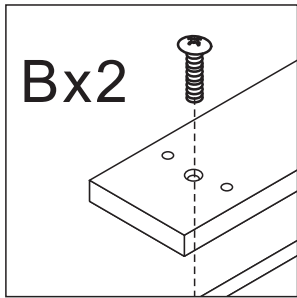


<b>B</b>	2PCS
	
6*20mm	

8

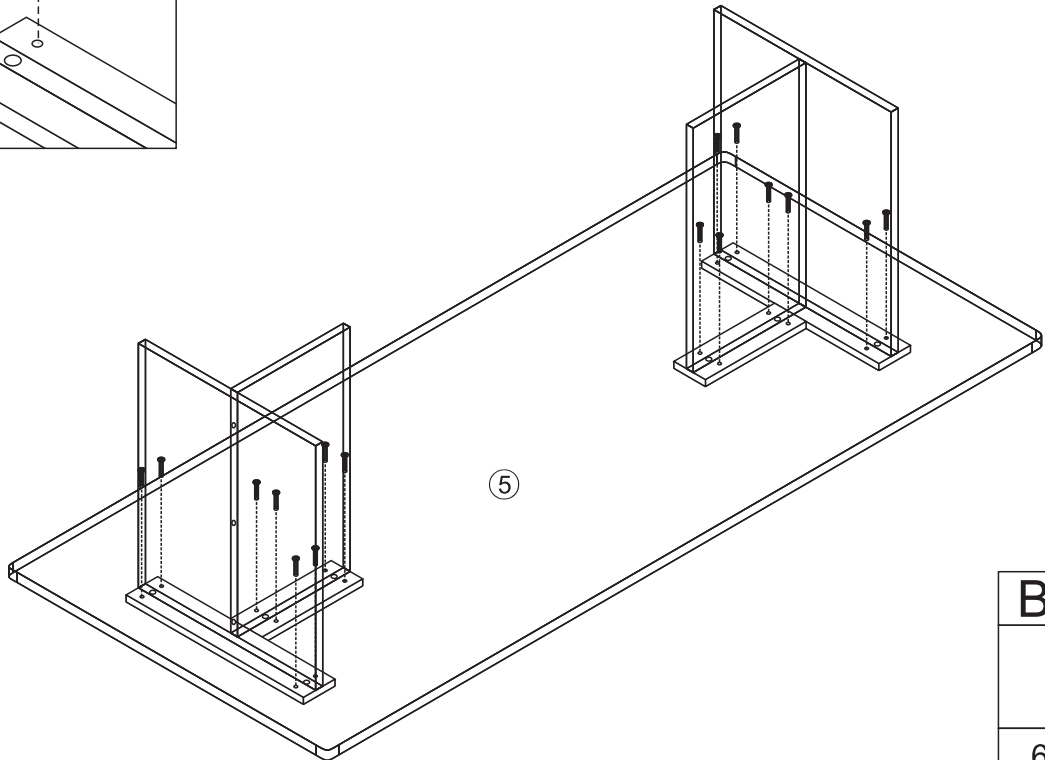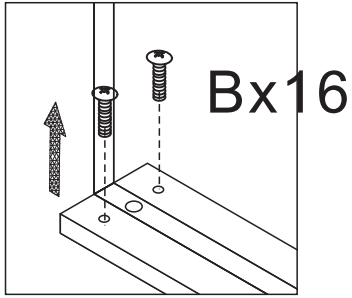

B	16PCS
	
6*20mm	

9

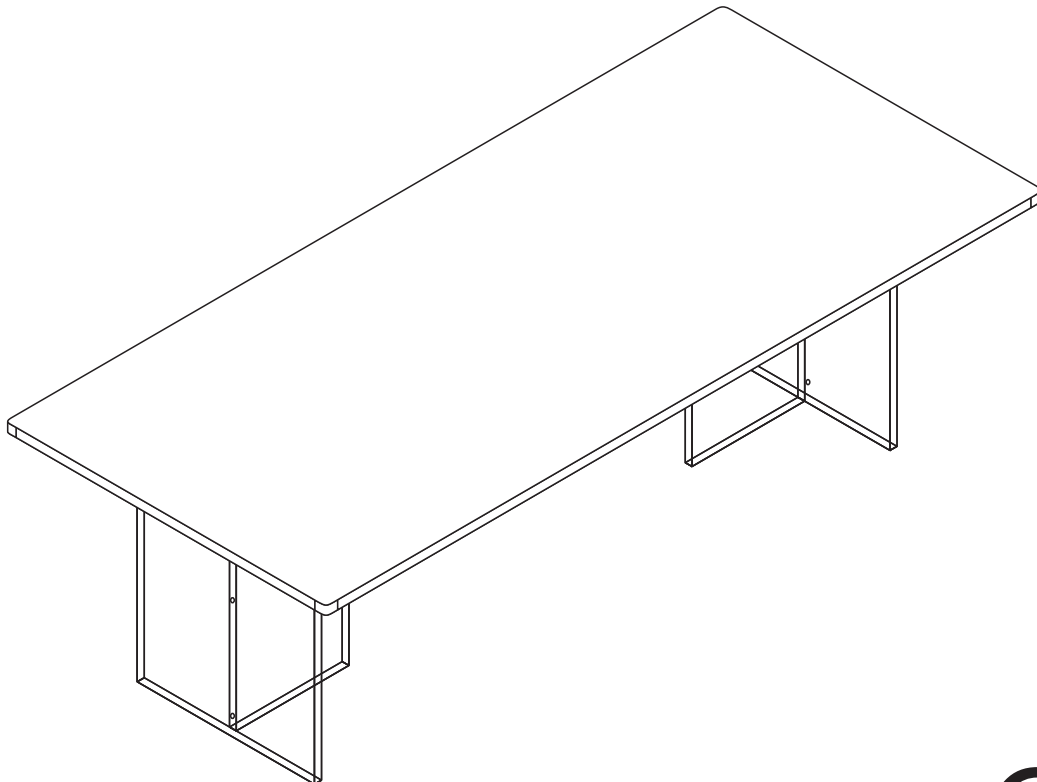

OK