
Patio Chaise Lounge Chair

ASSEMBLY MANUAL

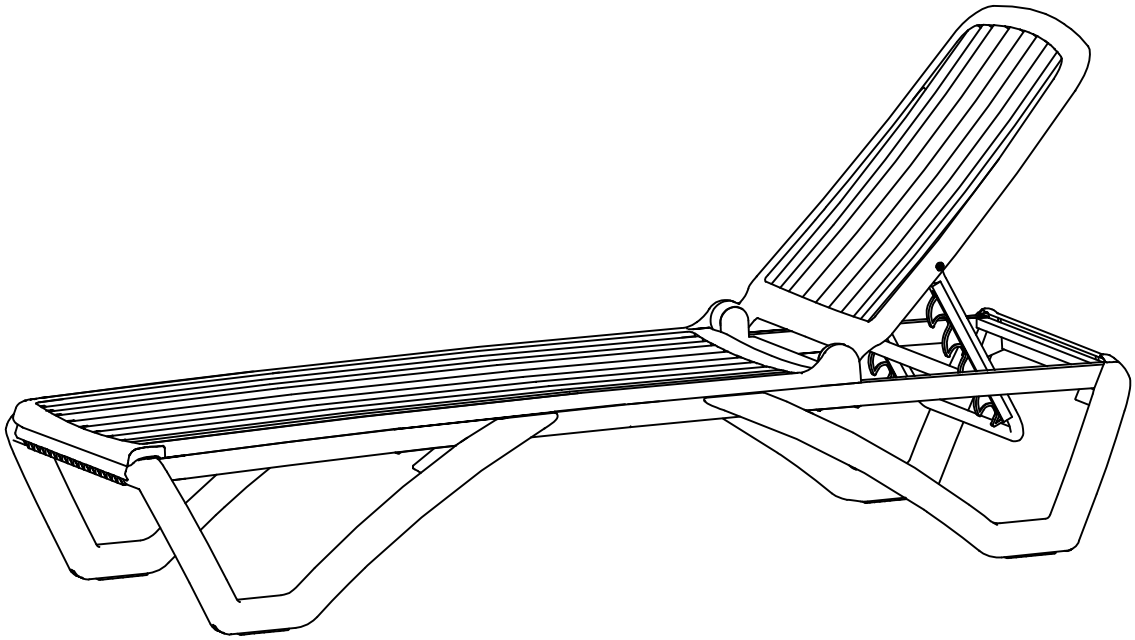

MODEL#: LLDZ0549

- Prior to assembly, please confirm all of the parts listed included.
- All bolts should be tightened before use. Maybe, you need allen wrench for assembly.


Missing part? Damaged? Contact us via email at


service@domioutdoorliving.com


www.domioutdoorliving.com


© Copyright 2022–2024 domi LLC. I All Rights Reserved.


Part List:

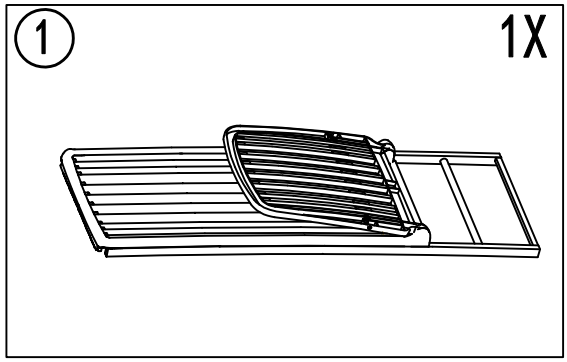


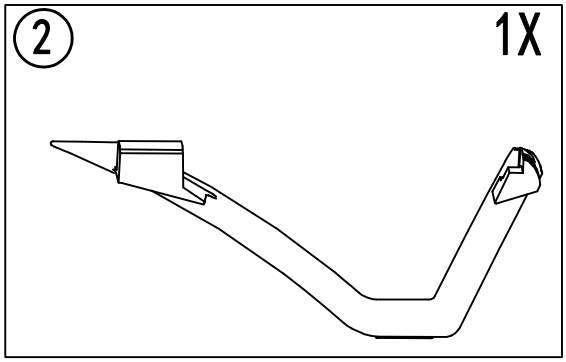


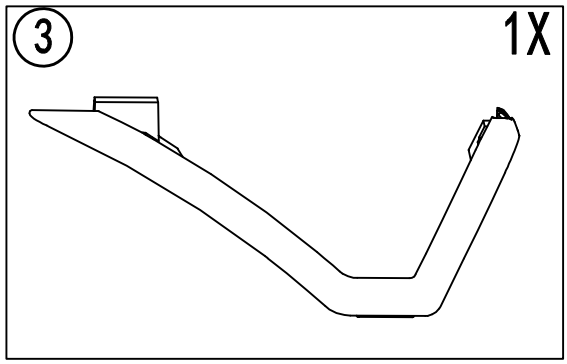


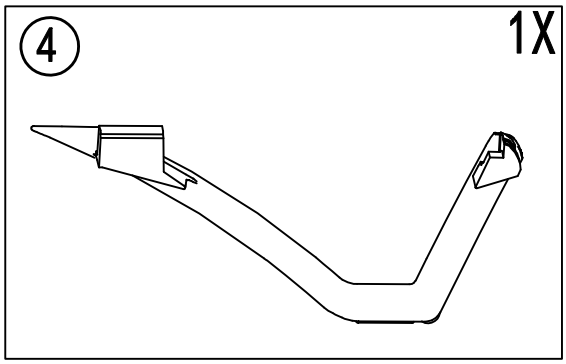


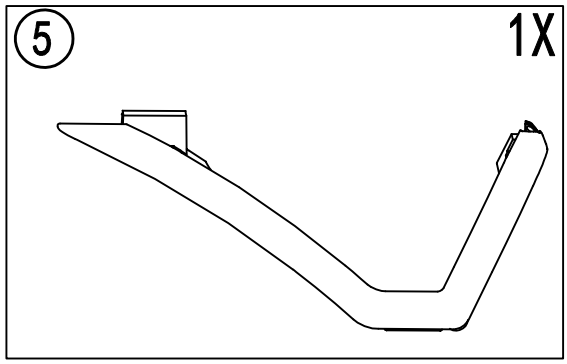


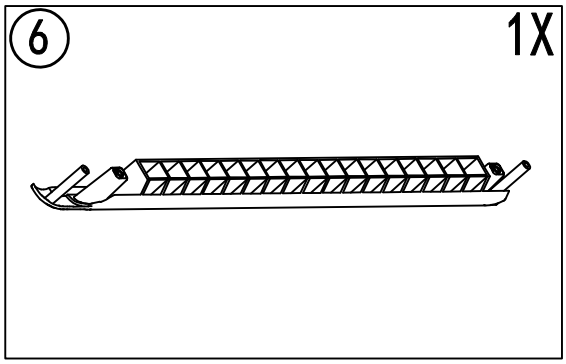


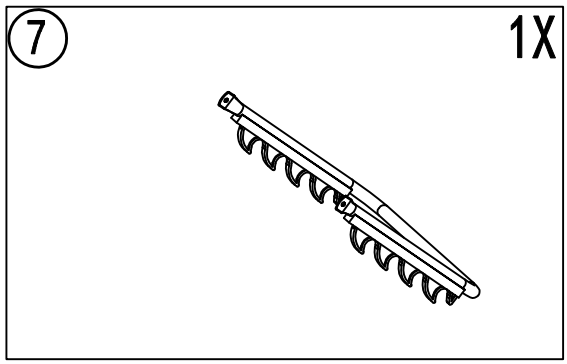


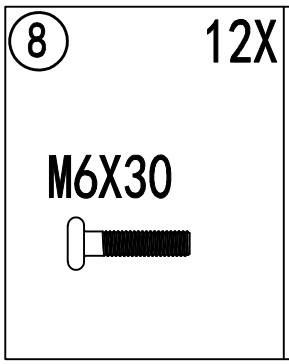


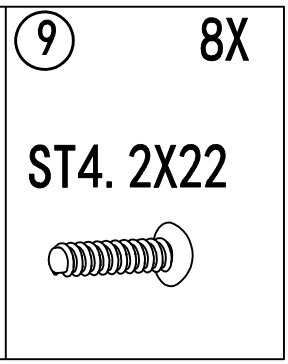

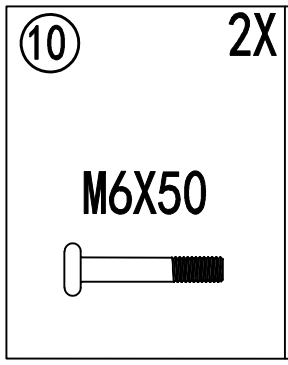


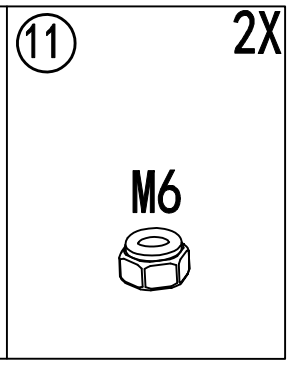

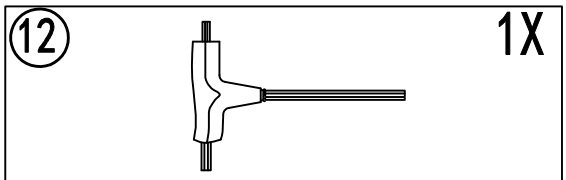

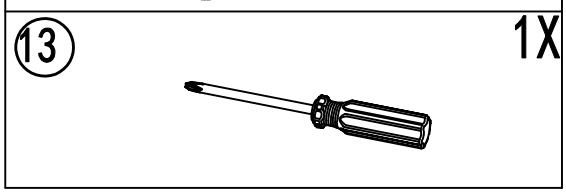


Please assemble the lounge chair on the carton or carpet to avoid scratches.

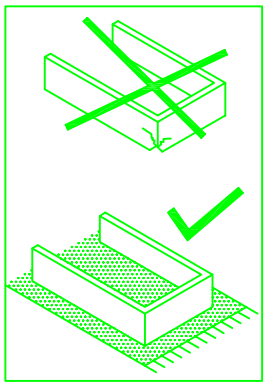


Warm Tip: Please don't tighten the screws before finishing assembly.




① 1X

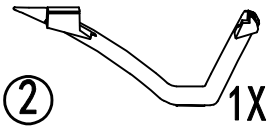


② 1X

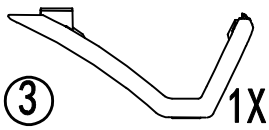


③ 1X

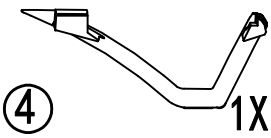


④ 1X

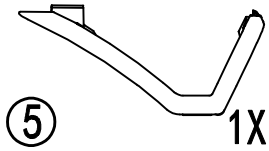

⑤ 1X




⑧ 12X

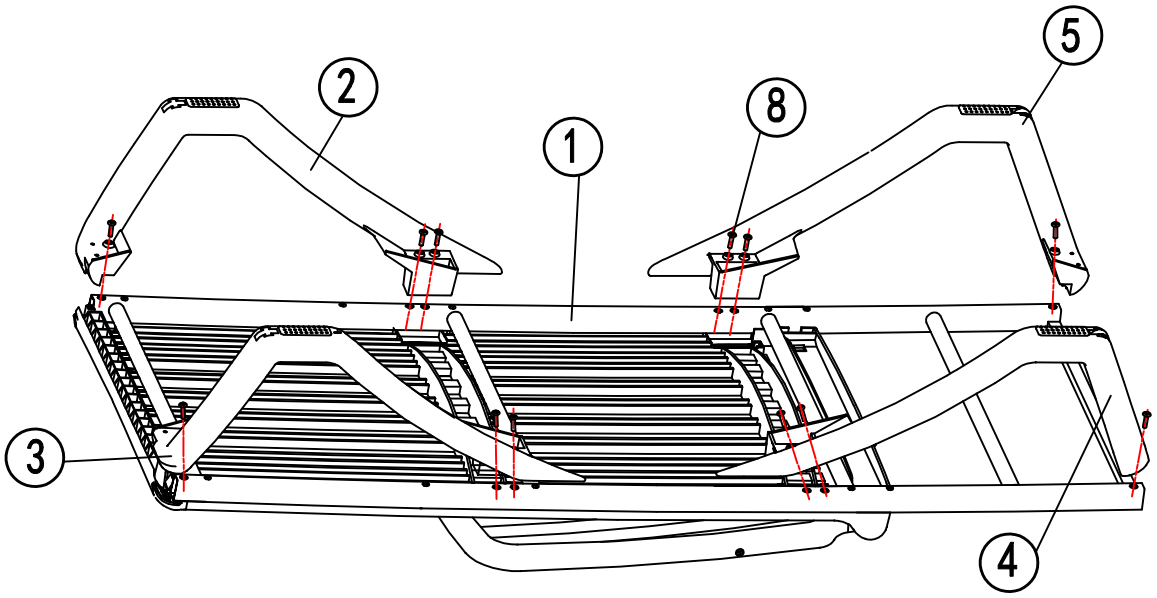


Step 1:
Insert 4 legs (Part #2 #3 #4 #5) to Part #1 separately using 12 Bolts #8 as shown in diagram.



⑥ 1X

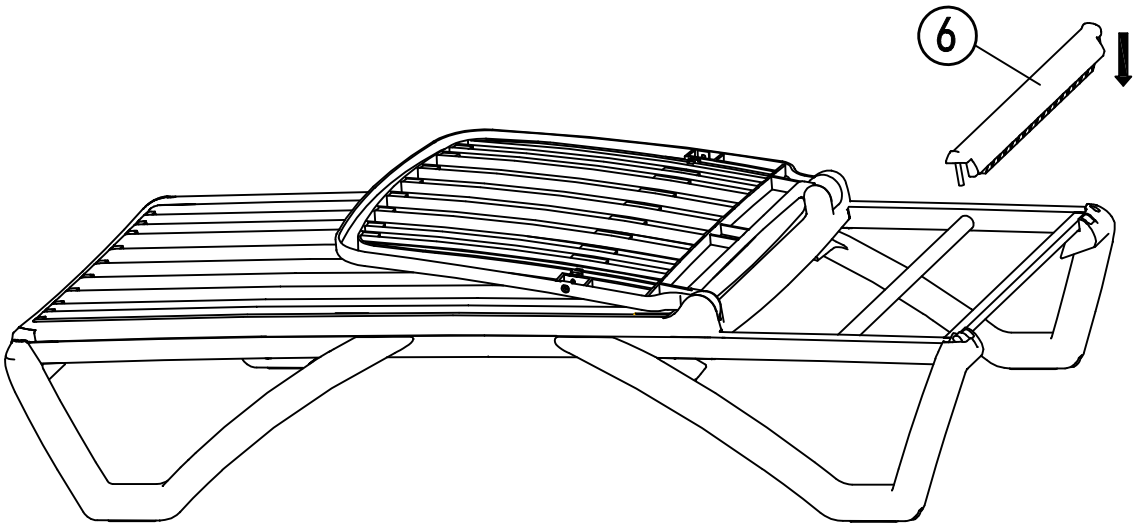


Step 2:
Insert Part #6 to the legs as shown in diagram(you may need a hammer if possible).



ST4. 2*22


⑨ 8X

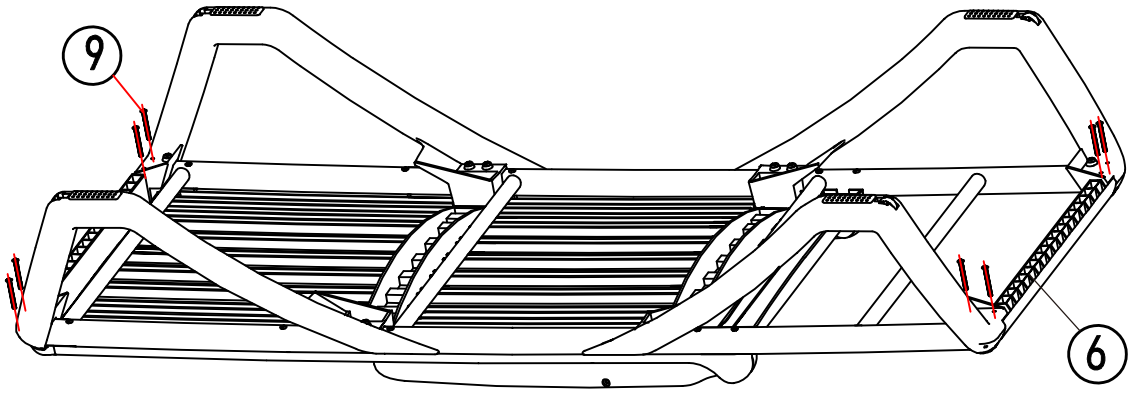

Step 3:


Turn it around, use 8 self-tapping bolts #9 to secure part #6 and front legs to the frame.

(Tips: Please press part #6 to make sure all the self-tapping bolts are fully tightened)

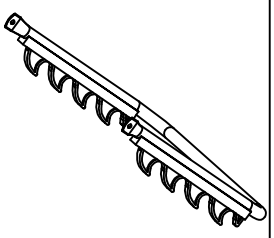

⑦ 1X

M6X50




⑩ 2X



M6

⑪ 2X

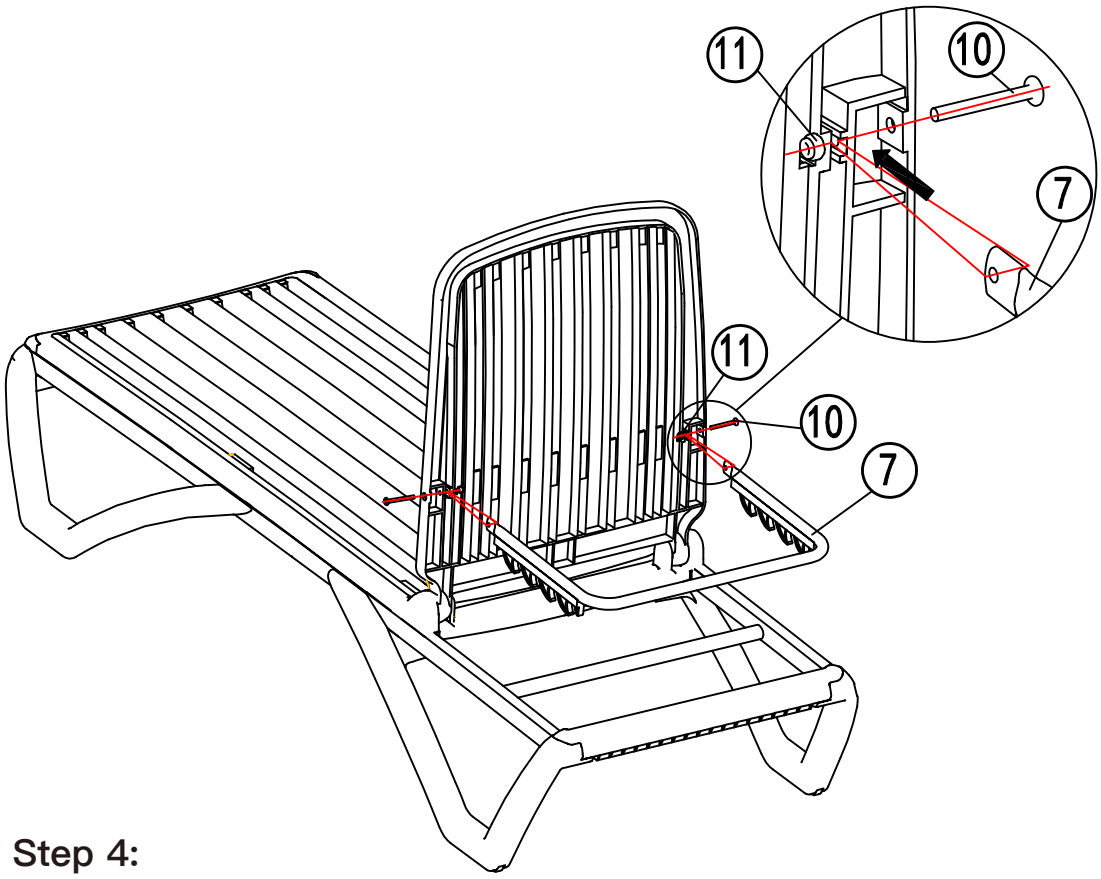

Step 4:

Insert 2 nuts #11 to the slot of the backrest;

Insert part #7;

Align the holes and secure with 2 bolts #10.