
Assembly Instructions

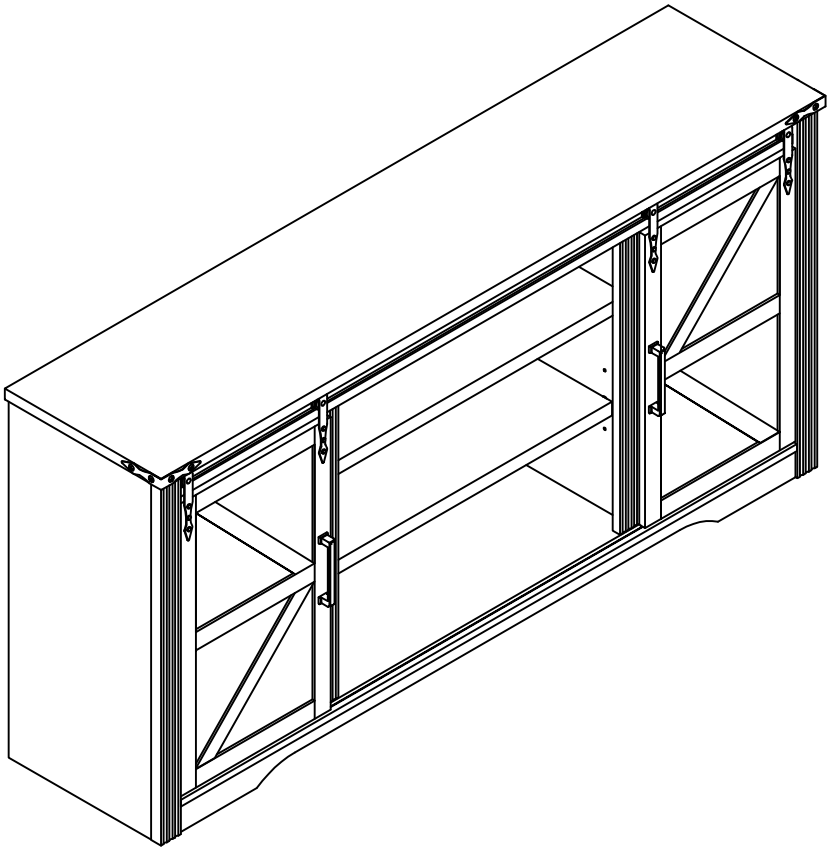

If you have any questions, please follow these steps(“Find Your Orders”- “Problem with the Order” - “Contact Seller”) to contact our customer service. Thanks!

General Assembly Guidelines


Ⅰ. Ensure that all parts and hardware are available before beginning assembly.

Ⅱ. Follow each step carefully to ensure the proper assembly of this product.


Ⅲ. Two people are recommended for ease in the assembly of this product.

Ⅳ. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.


Ⅴ. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

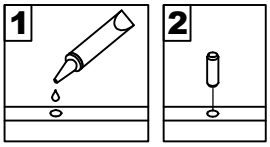


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

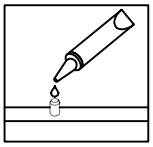


Ⅵ. A Phillips head screwdriver is required for the assembly of this product .

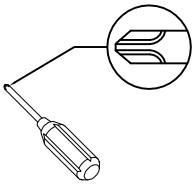


Ⅶ. Power tools should not be used to assemble this product .

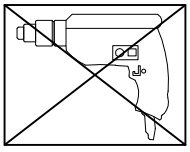


Ⅷ. Concealed hinges are three-way adjustable.

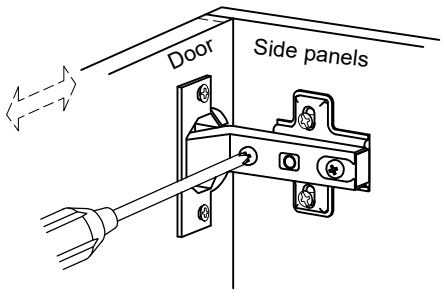

Horizontal
by screw adjustment

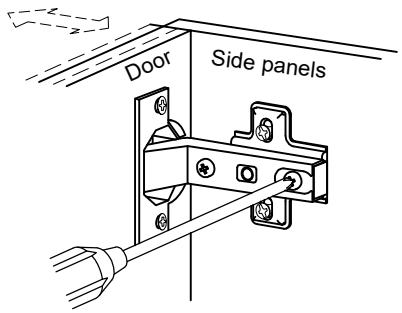


In-and-Out
by loosening the hinge-arm mounting screw or via cam adjustment





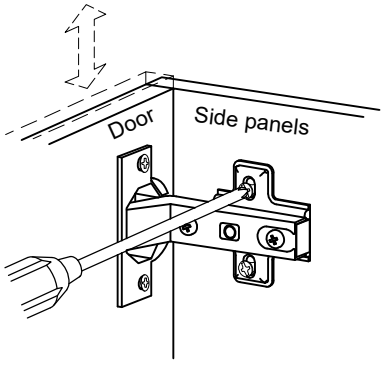



Vertical
Via slots in the mounting plate or via cam adjustment

Parts List

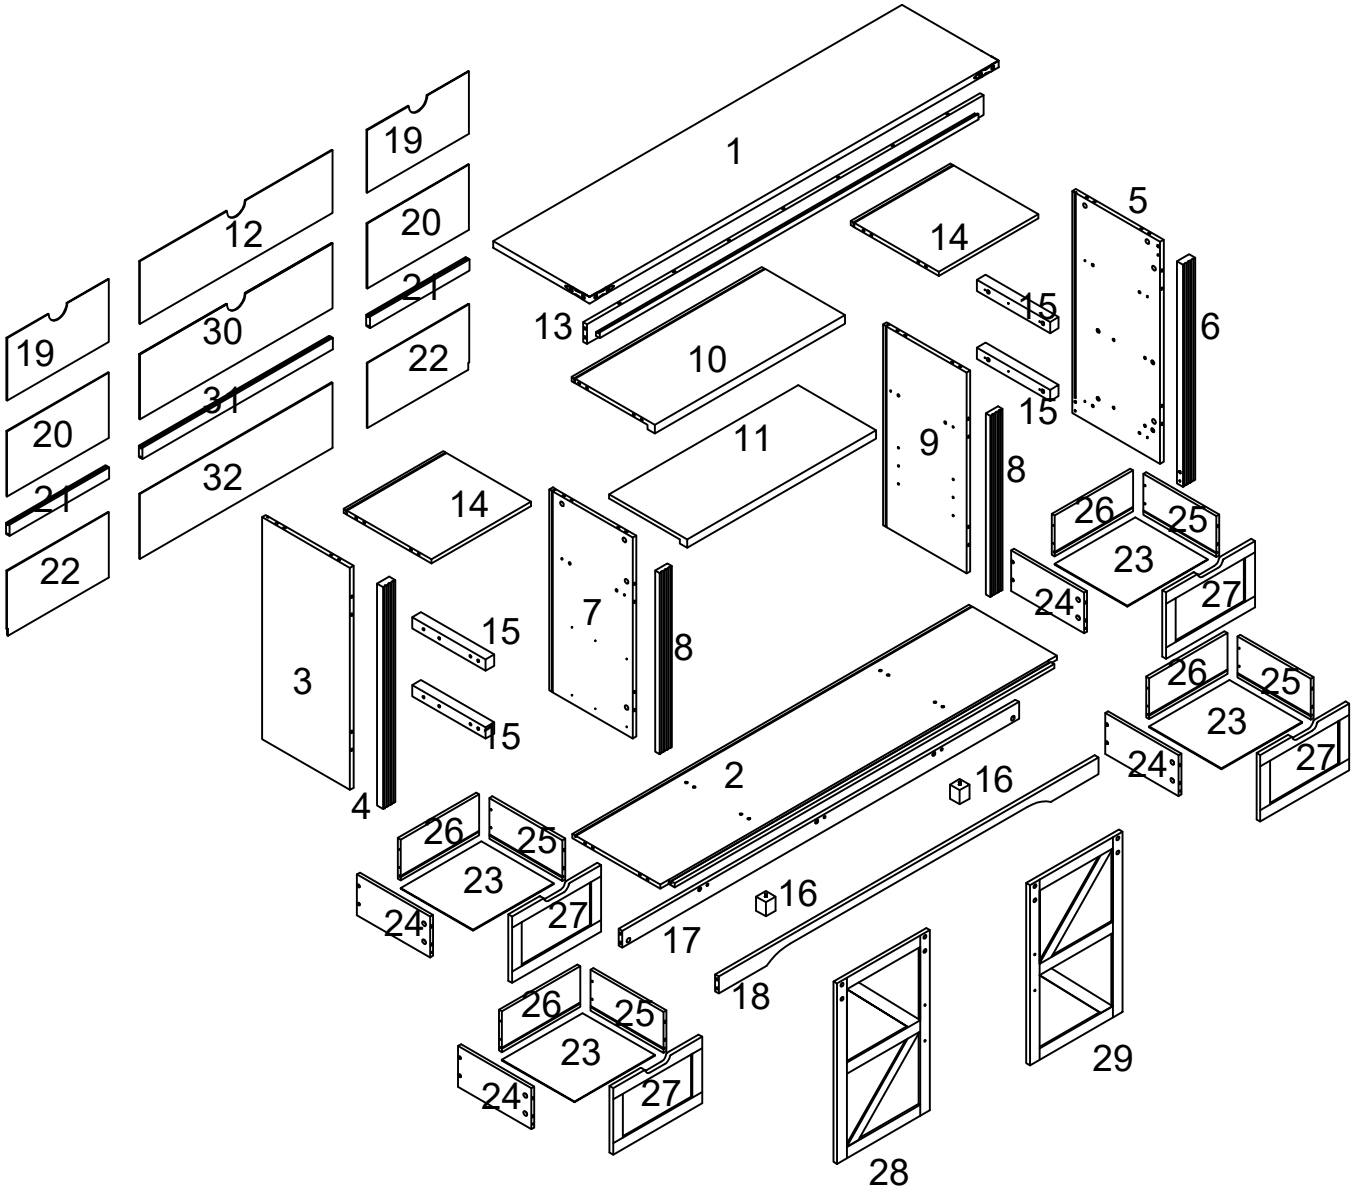
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32

Hardware List


A		Ø8x30mm	Wooden dowel	53	pcs
B		Ø6x35mm	Cam bolt	58	pcs
C		Ø15x11mm	Cam lock	42	pcs
D		Ø30mm	Sticker	58	pcs
E		Ø6x50mm	Bolt	4	pcs
F		M 4	Hex Key	1	pc
G		M6*12mm	Bolt	12	pcs
H			Plastic wedge	6	pcs
I			Handle	2	pcs
J		Ø4x19mm	Bolt	4	pcs
K		M6*35mm	Bolt	8	pcs
L		Individually packed	Drawer slides	4	pcs
M		Ø3x12mm	Screw	48	pcs
N		Ø4x32mm	Screw	16	pcs
O		Ø15x9mm	Cam lock	16	pcs
P			Pulley	4	pcs
Q		M6*12mm	Bolt	8	pcs
R			Metal plate	4	pcs
S		Ø4*12mm	Screw	8	pcs
T			Plastic wedge	30	pcs
U		Ø3x17mm	Screw	30	pcs
V			Anti-inversion hardware	4	pcs
W		Ø4x15mm	Screw	4	pcs
X		Ø4x35mm	Screw	4	pcs
Y			House lizard	4	pcs
Z			Strip	2	pcs
AA		Ø5x13x26mm	Shelf holder	4	pcs
BB			Glue tube	2	pcs

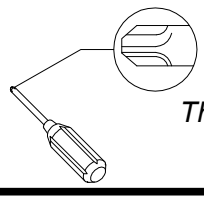

Philips head screwdriver required for assembly
(not included)

The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.


Step 1

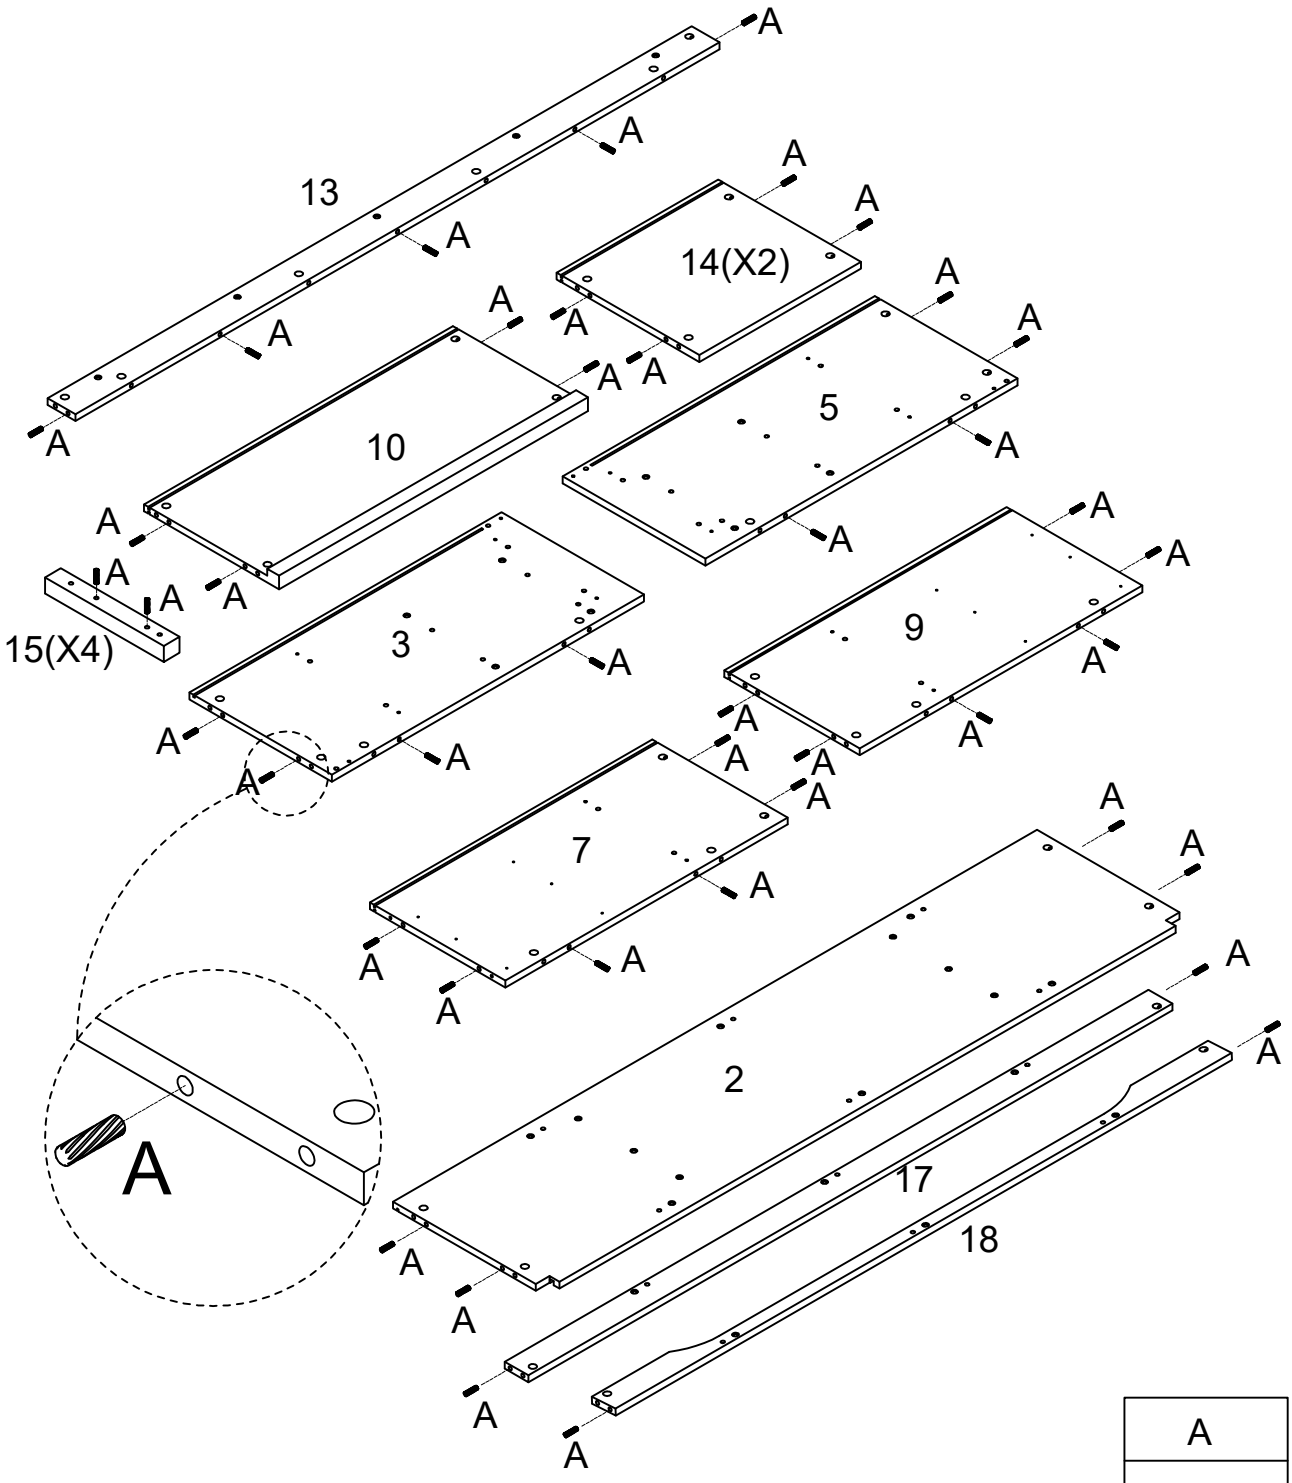

A

X53


Step 2

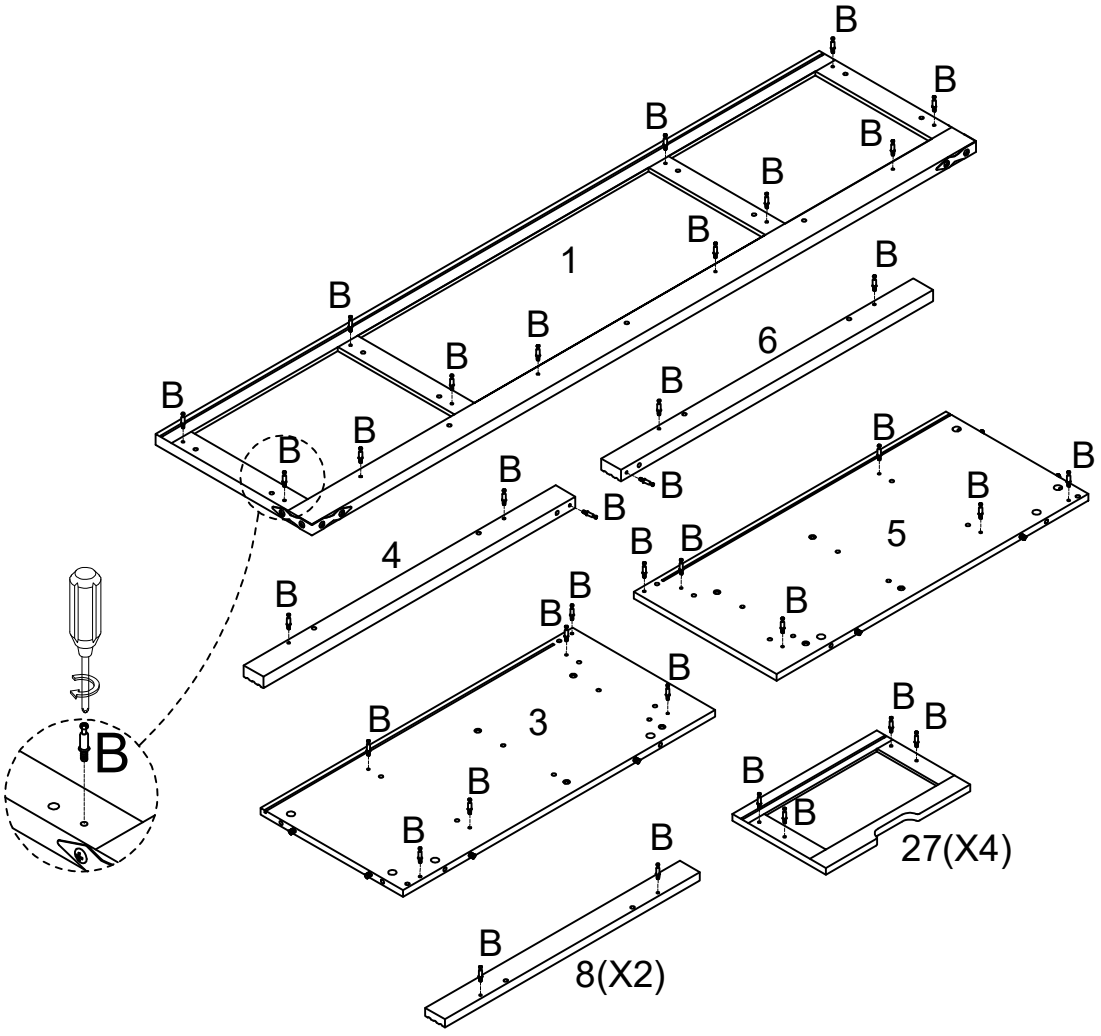

B

X50

Step 3

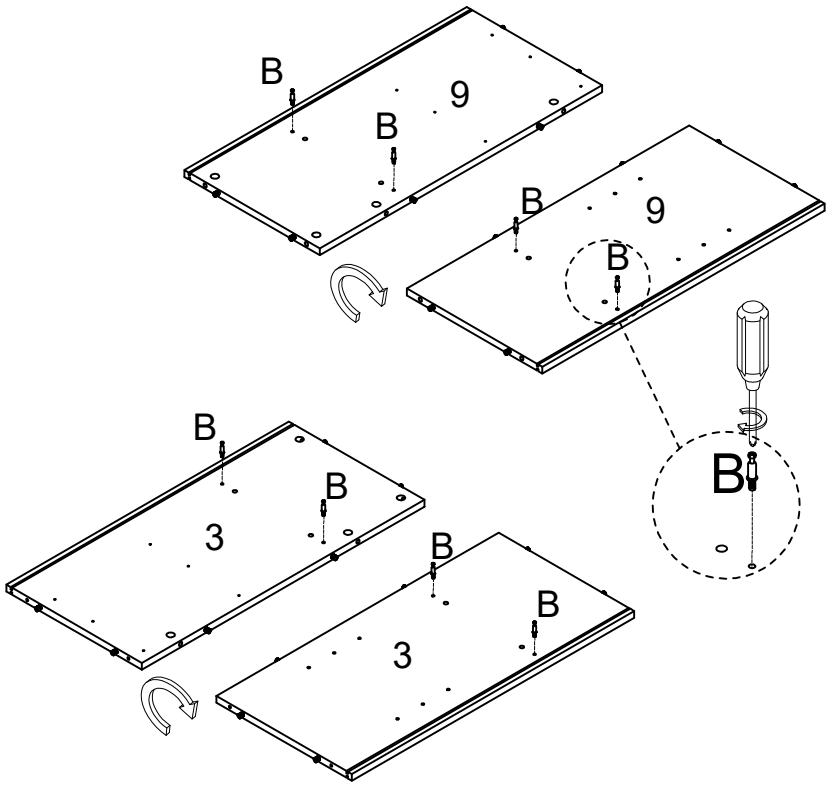


B

X8

Step 4




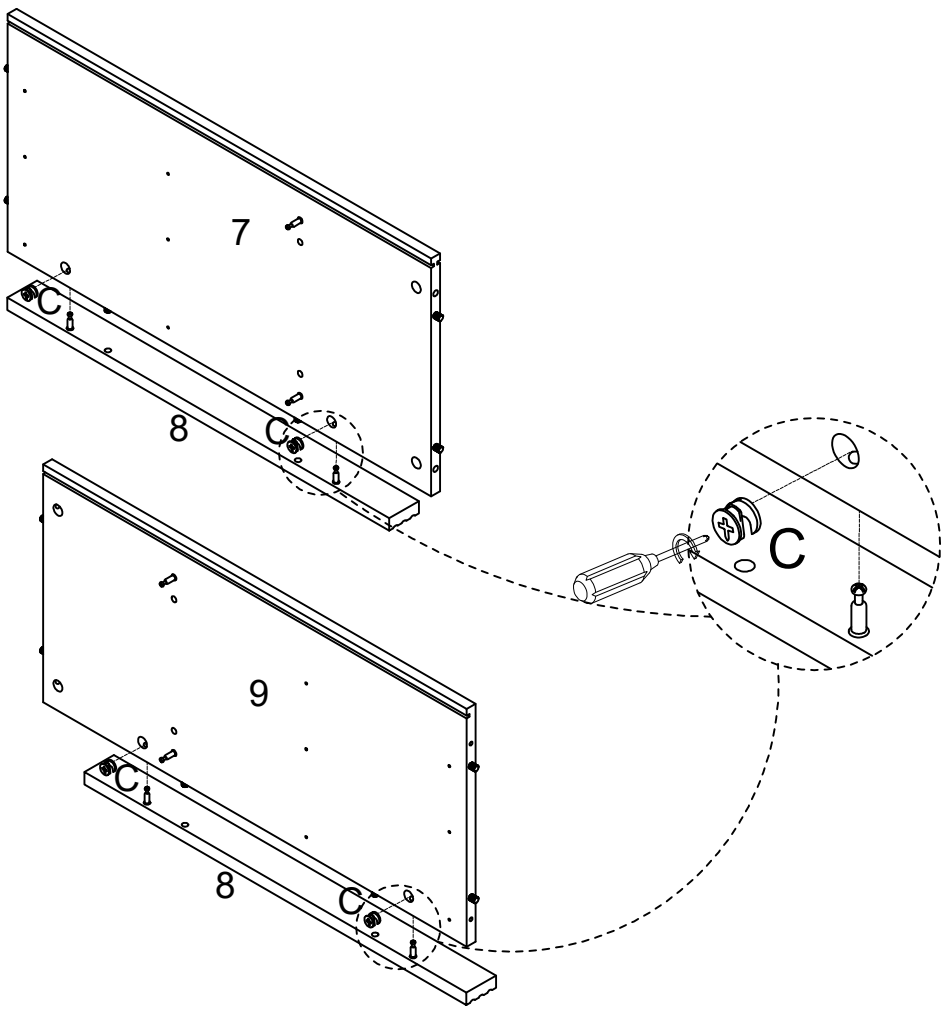


C

X4

Step 5

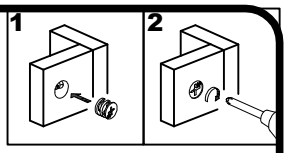


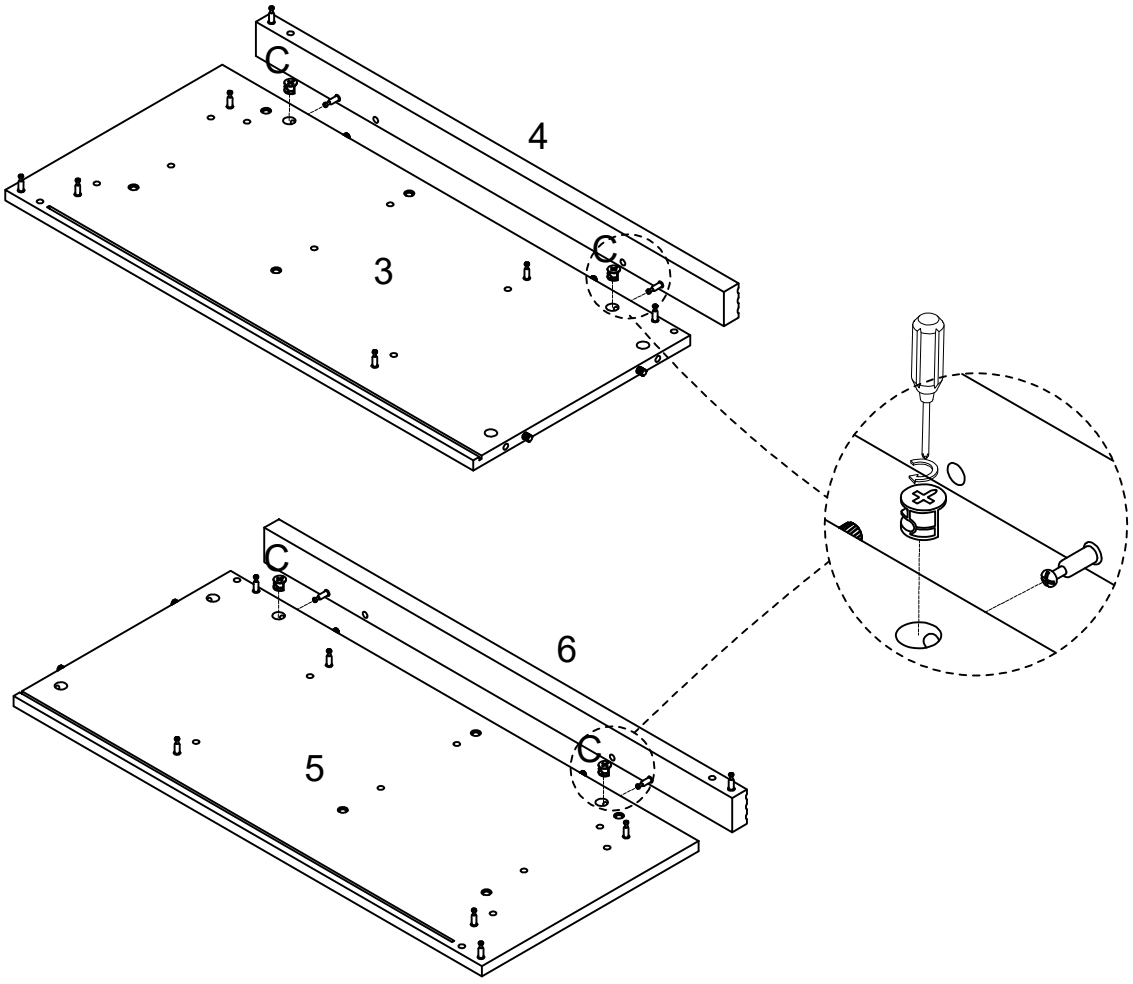


C


X4


Step 6

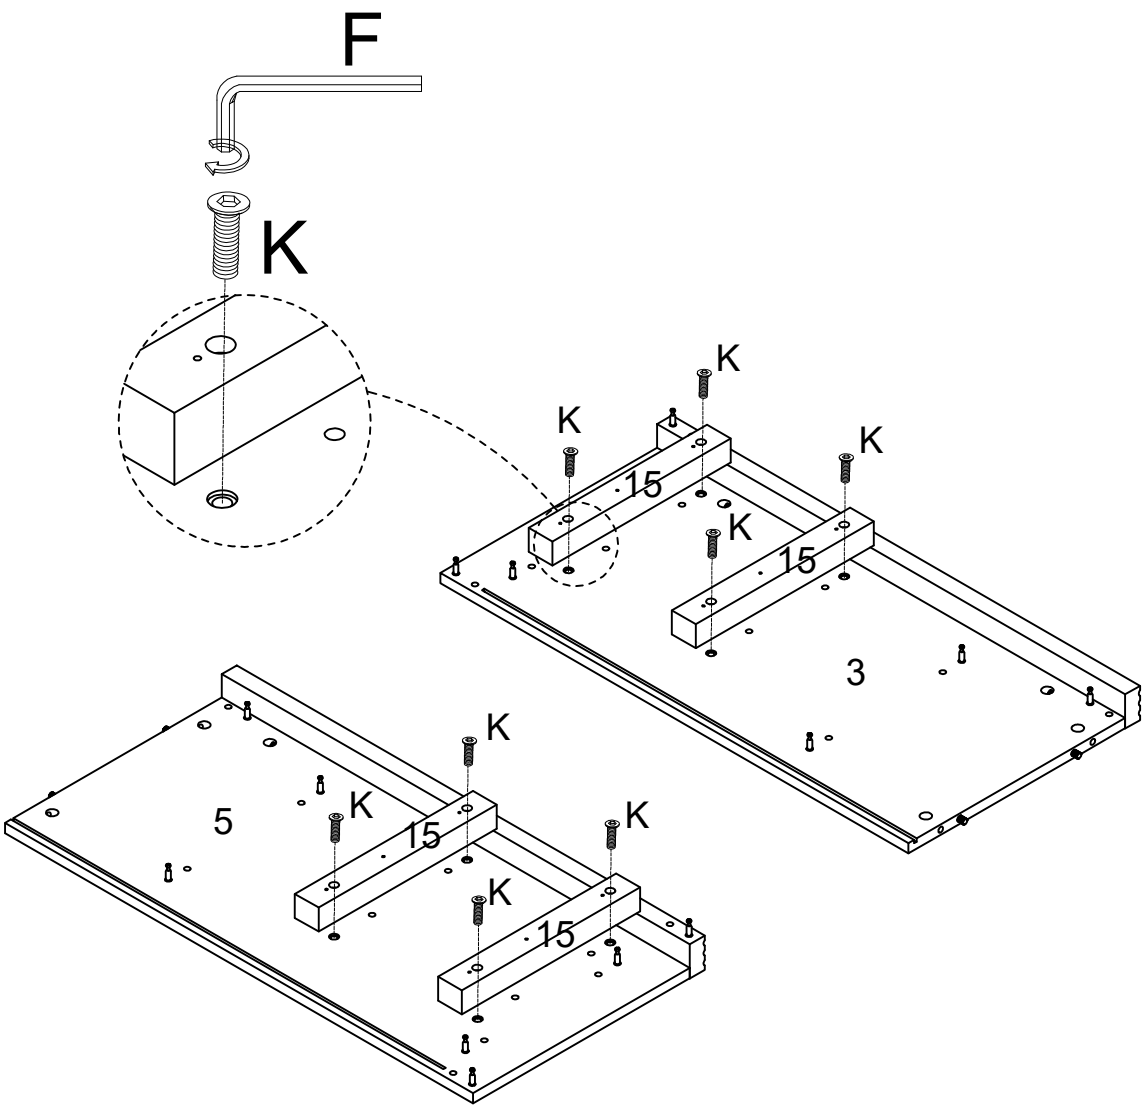


K	F
	
X8	X1

Step 7






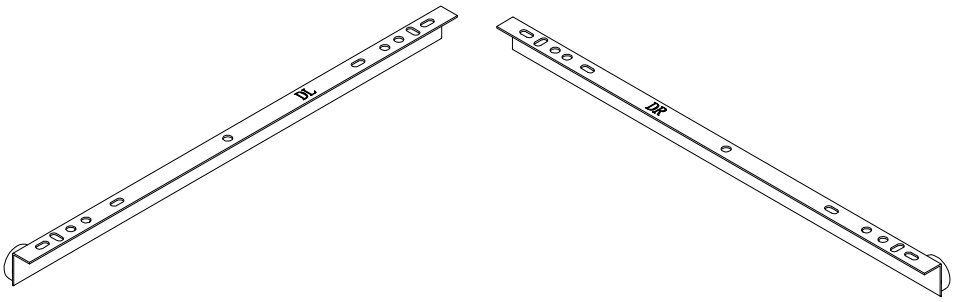


Step 8

NOTE:
Refer to the images to identify (left) and (right). Attach to #9 panel and to #7 panel. [M] screws must go in the exact spots shown.



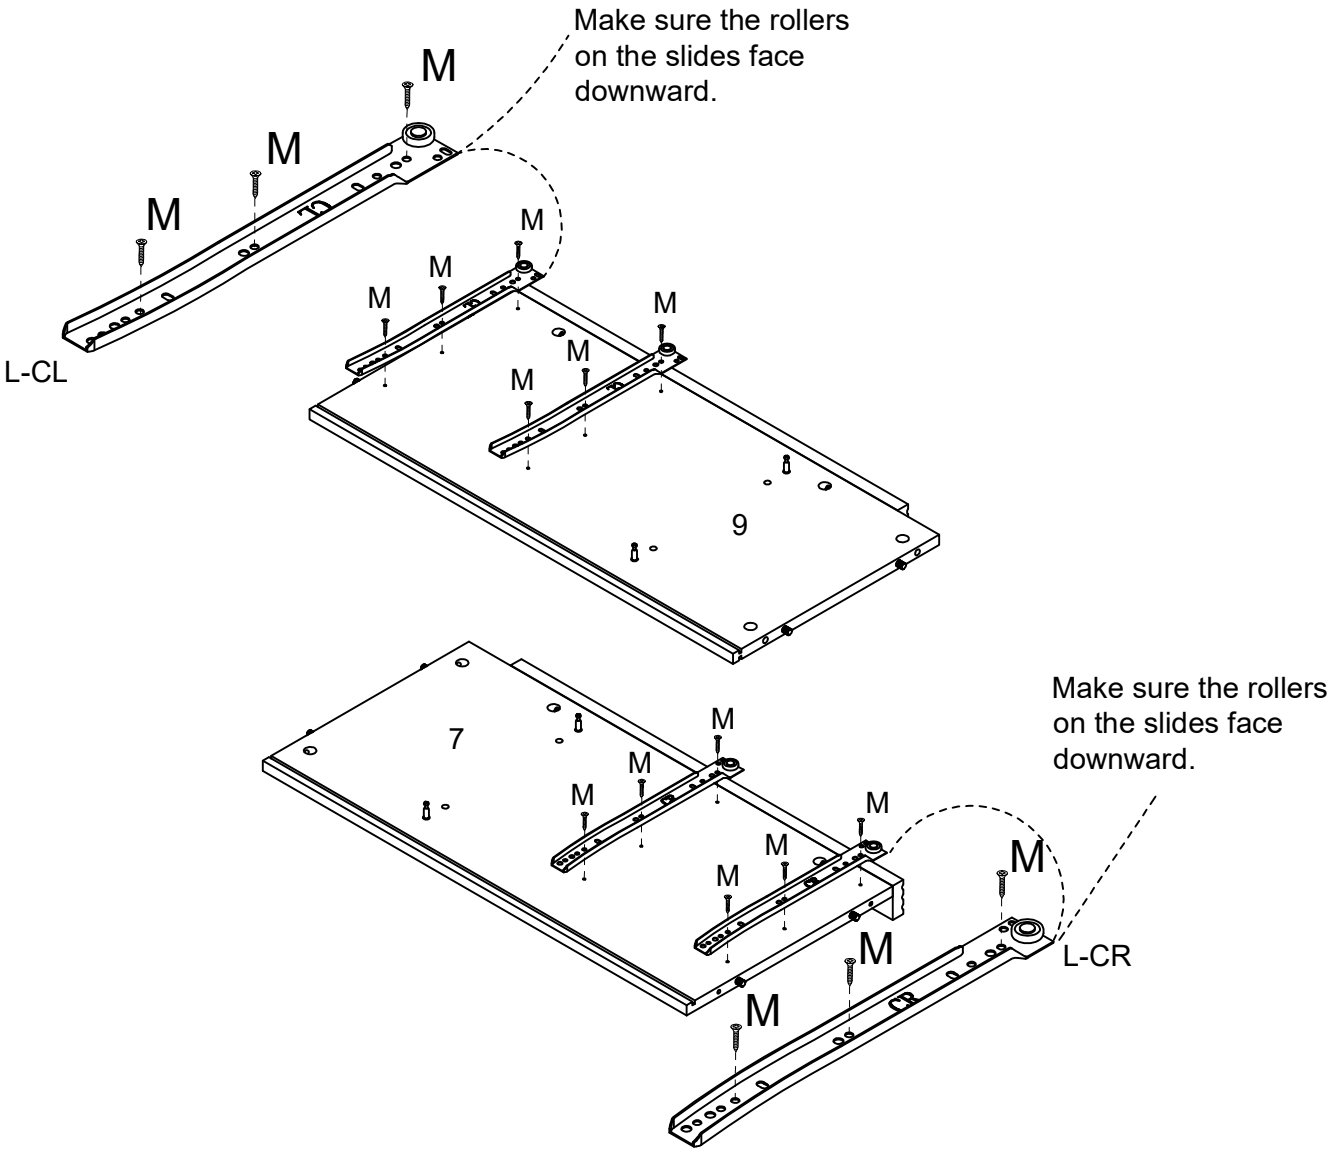



M	L
	
X12	X2

Step 9


NOTE:
Refer to the images to identify (left) and (right). Attach to #15 panel and to #15 panel. [M] screws must go in the exact spots shown.




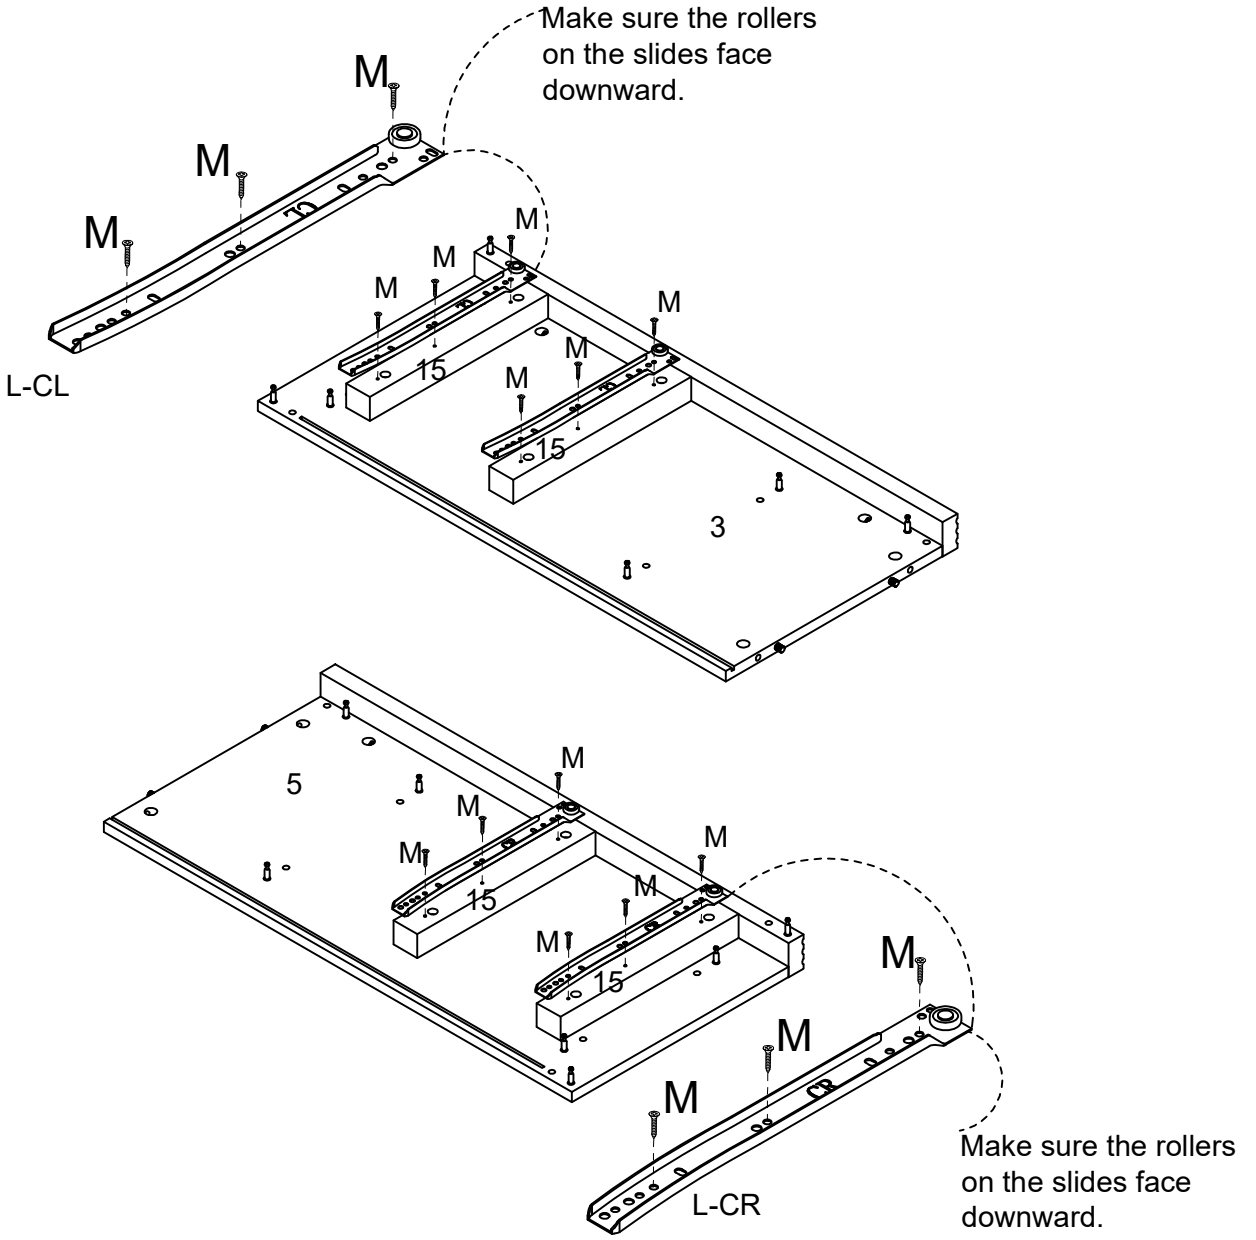


M	L
	
X12	X2

Step 10

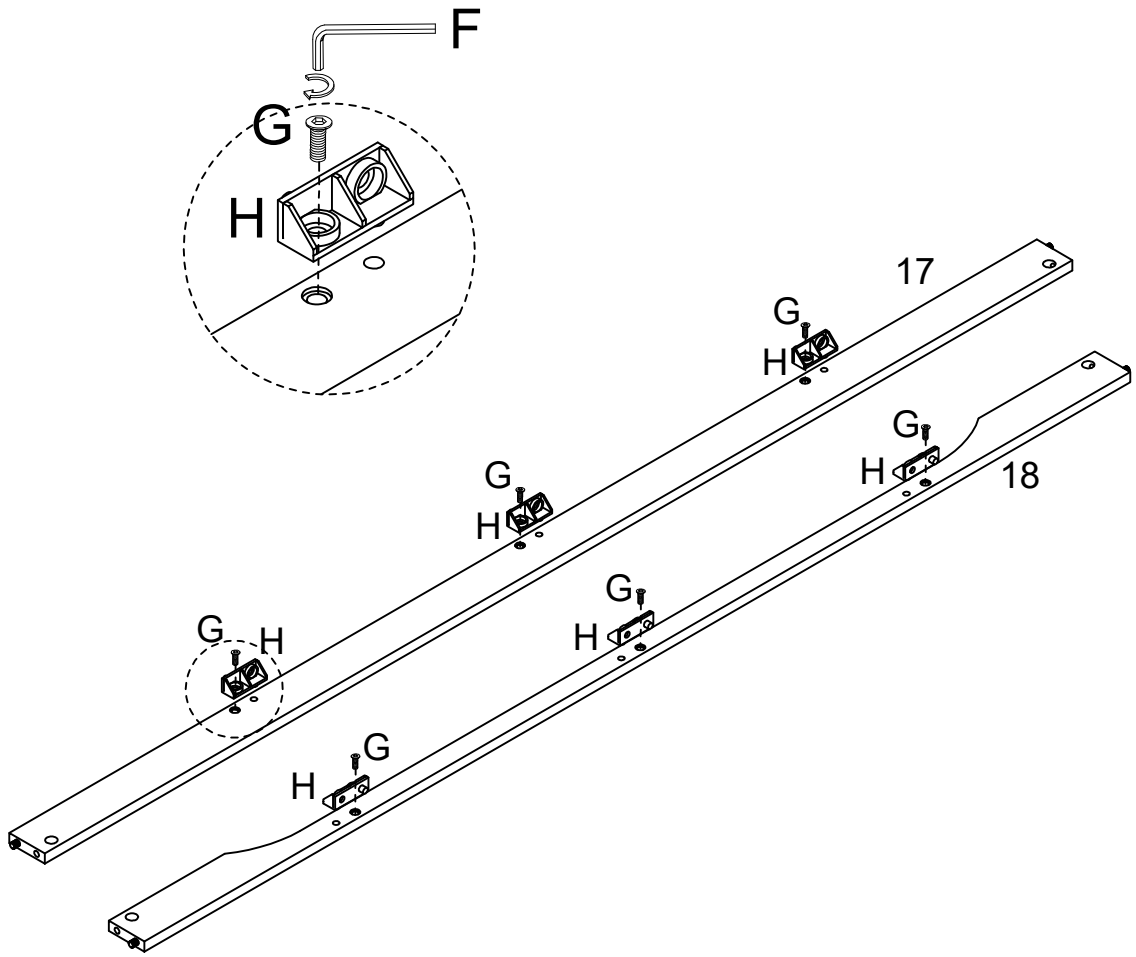


H	G	F
		
X6	X6	X1

Step 11

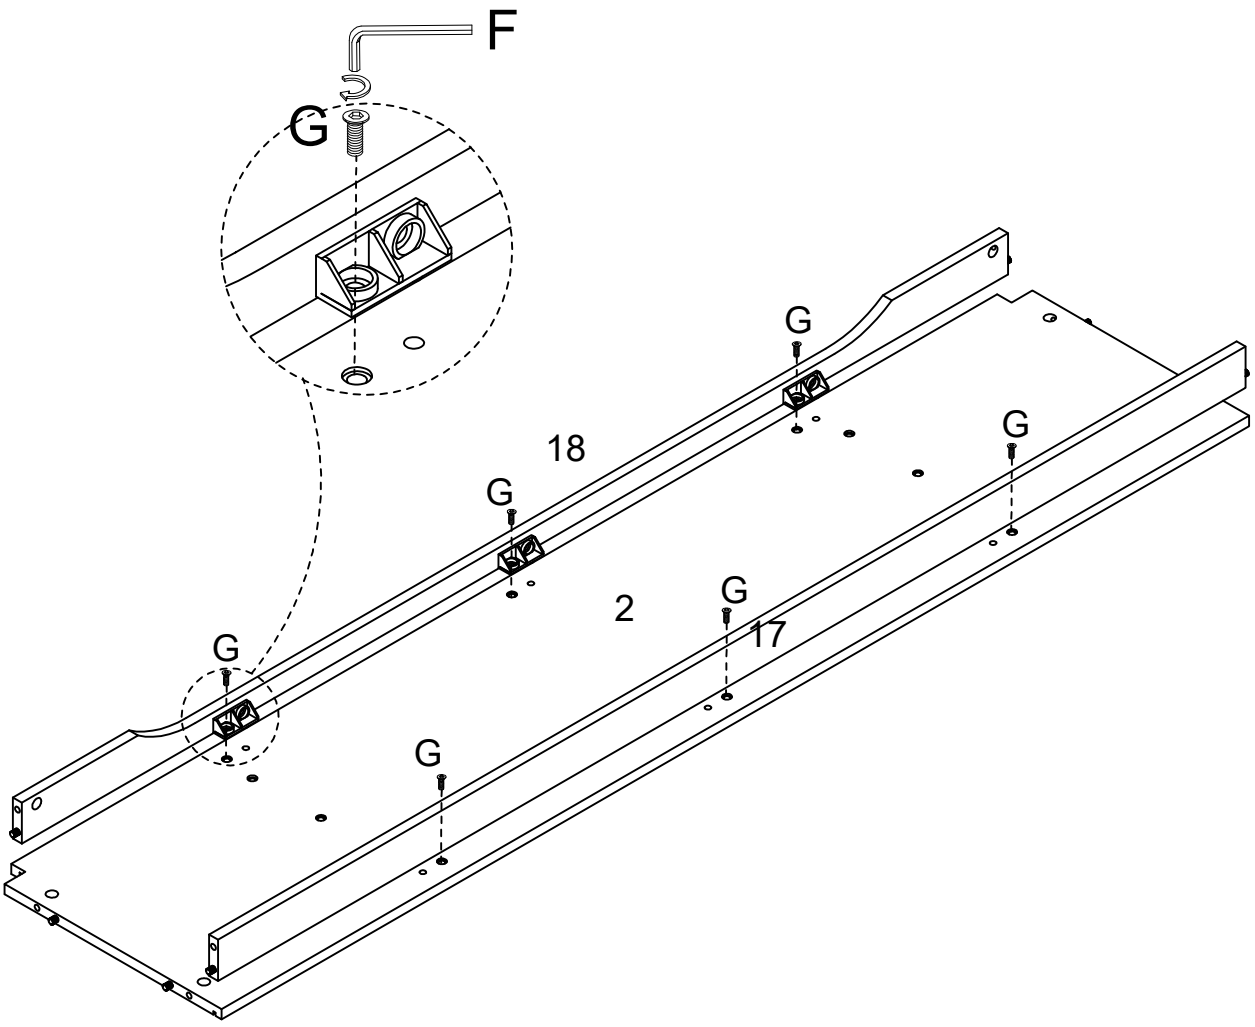

G	F
	
X6	X1


Step 12

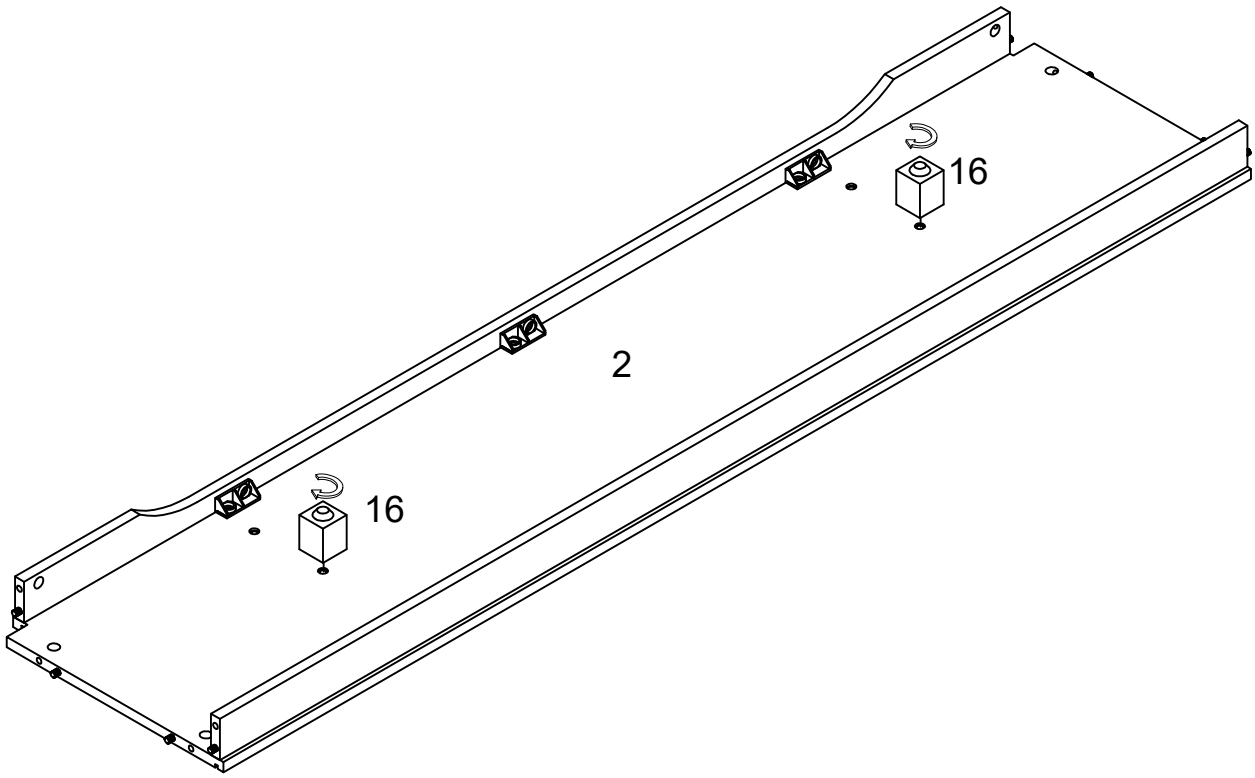


C

X2

Step 13

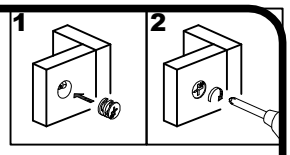


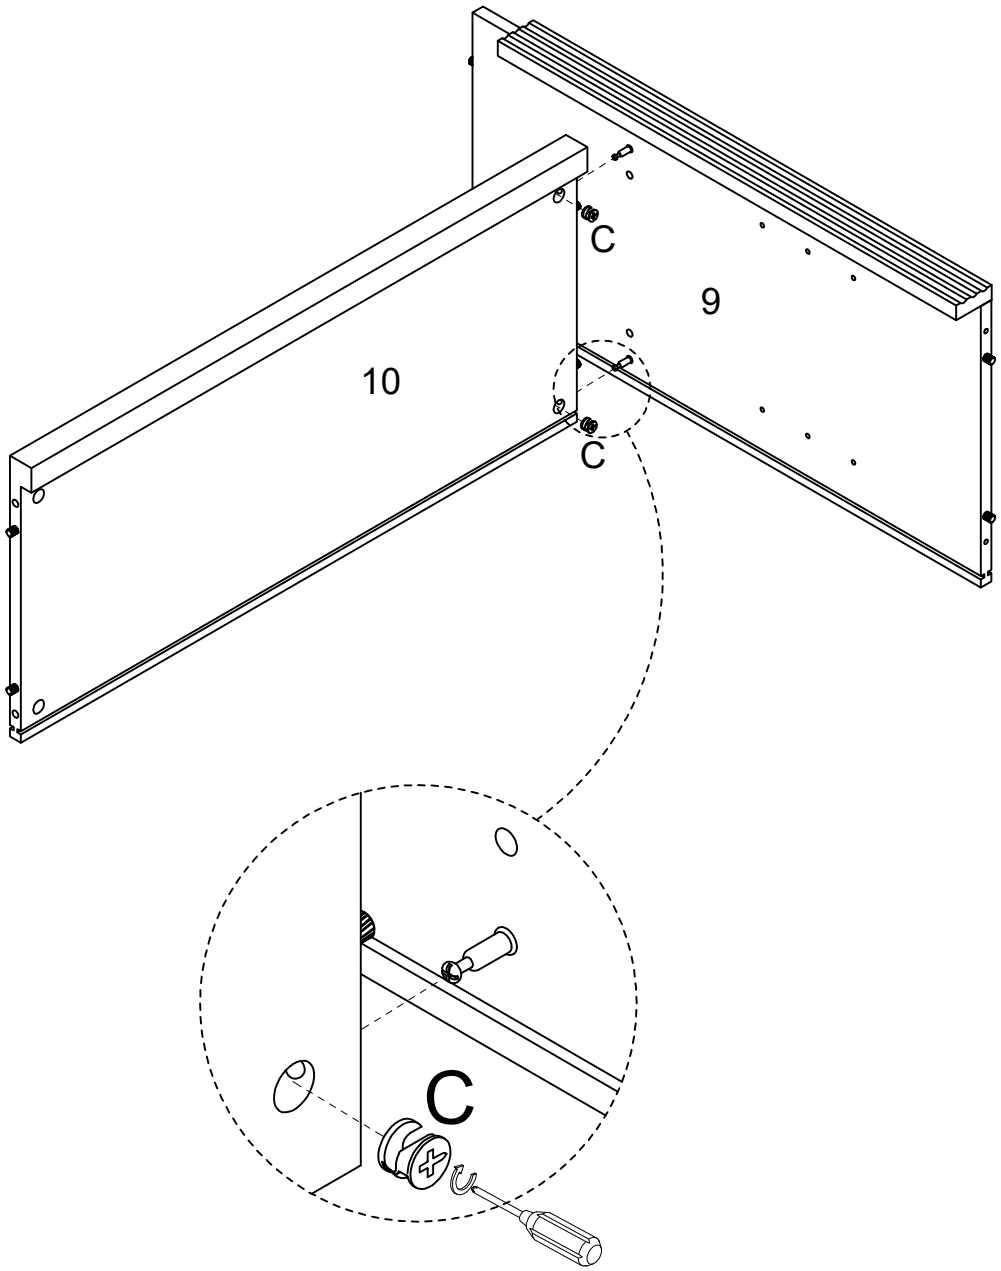


C

X2

Step 14

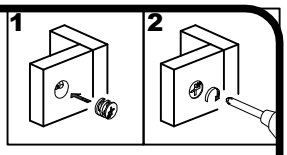


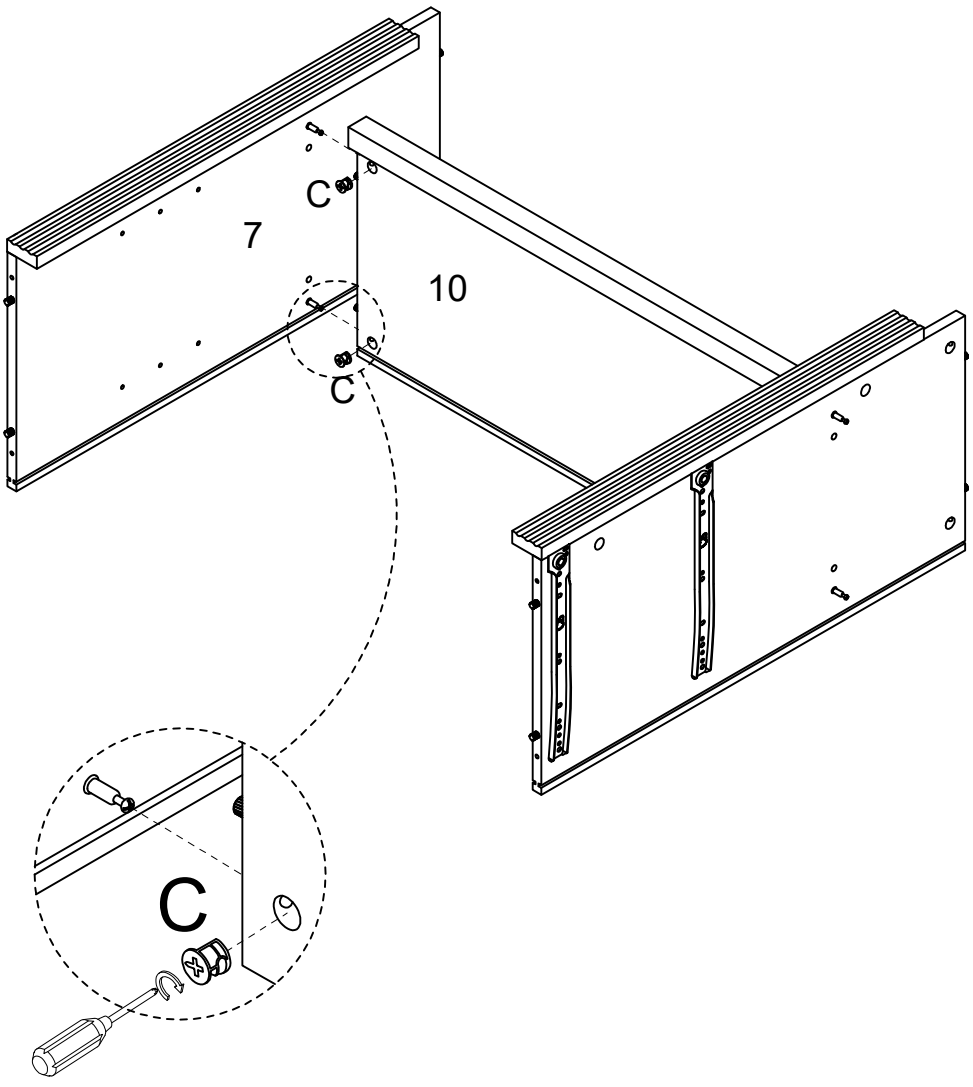


C


X2

Step 15

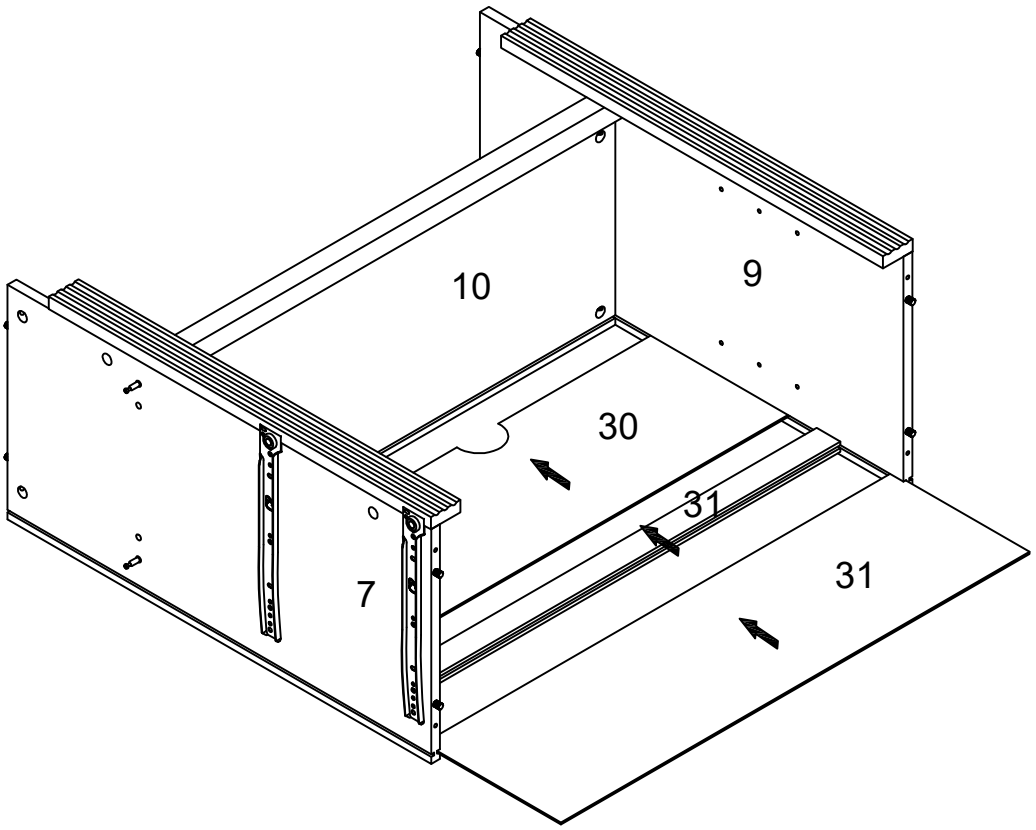


Step 16

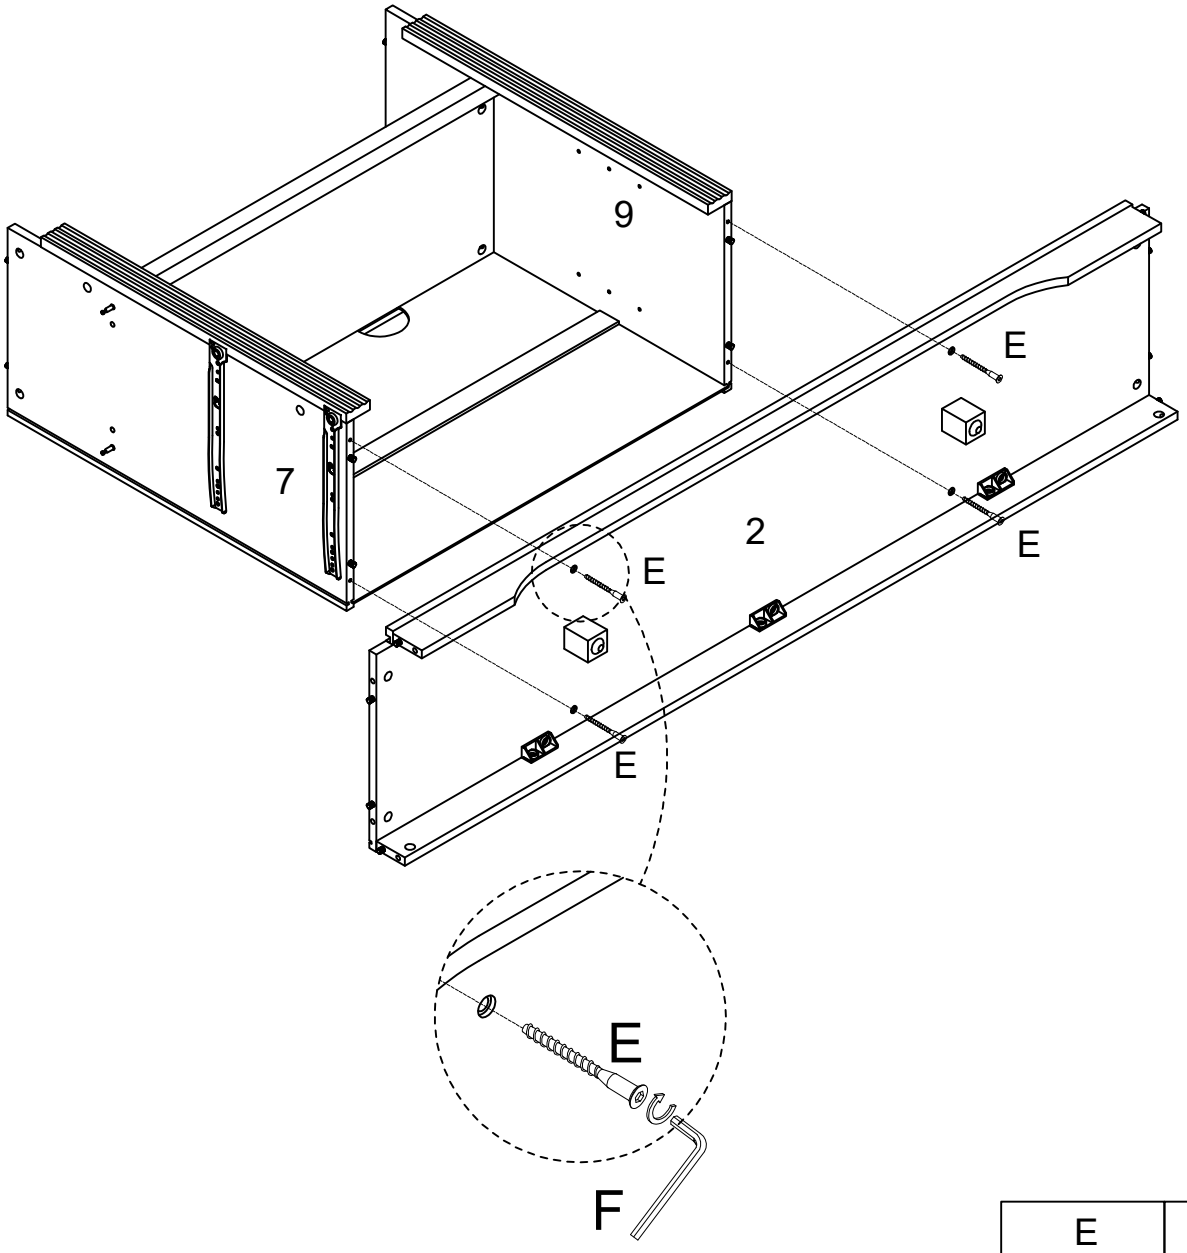

E	F
	
X4	X1


Step 17

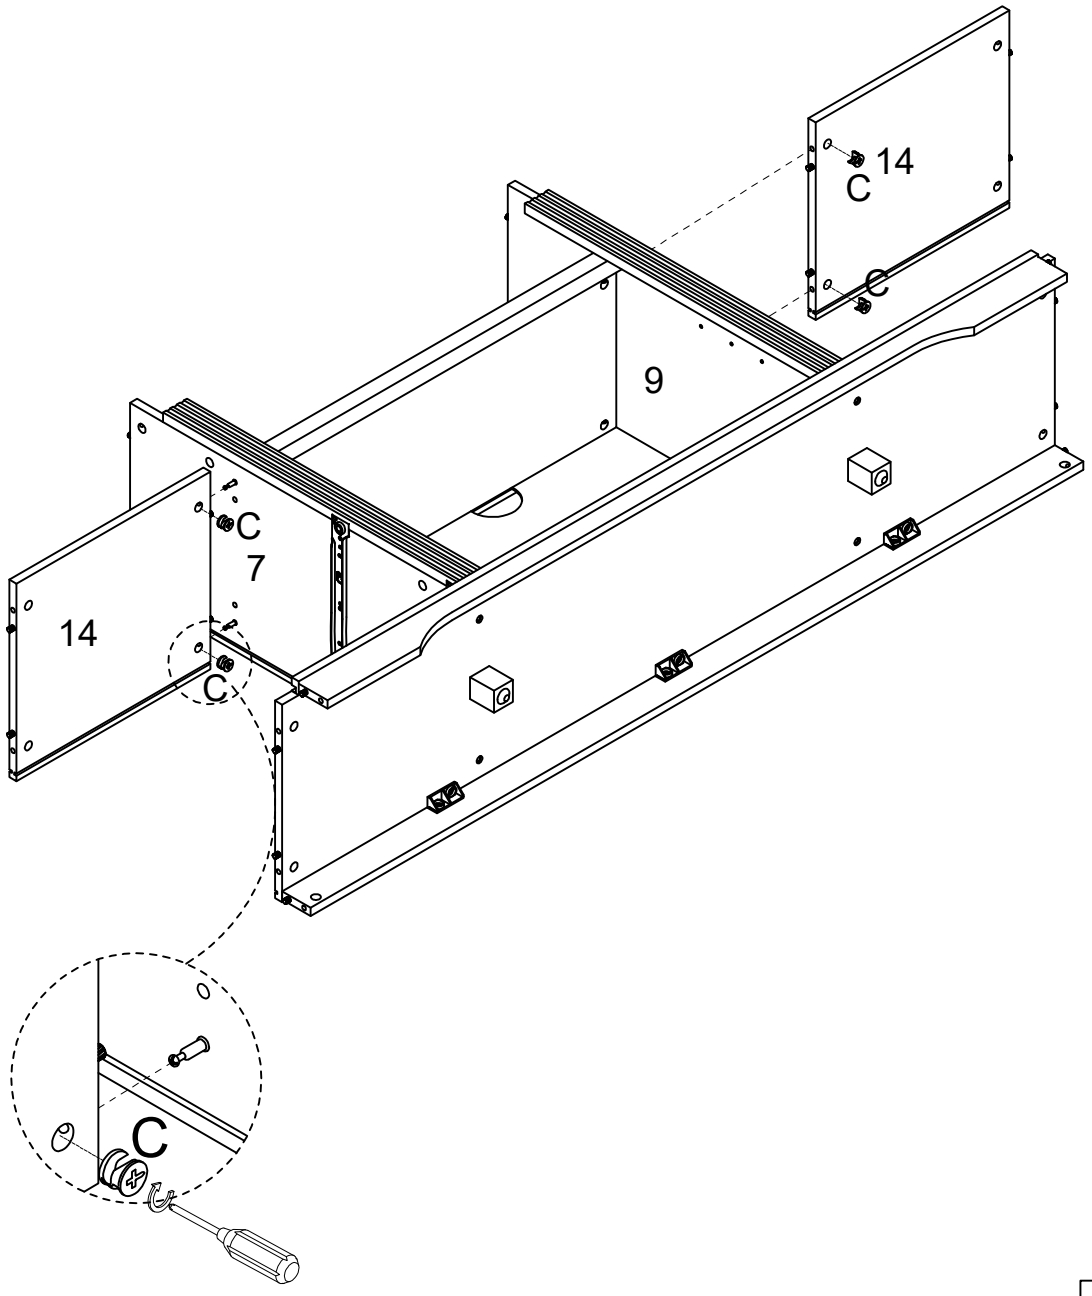


C


X4


Step 18

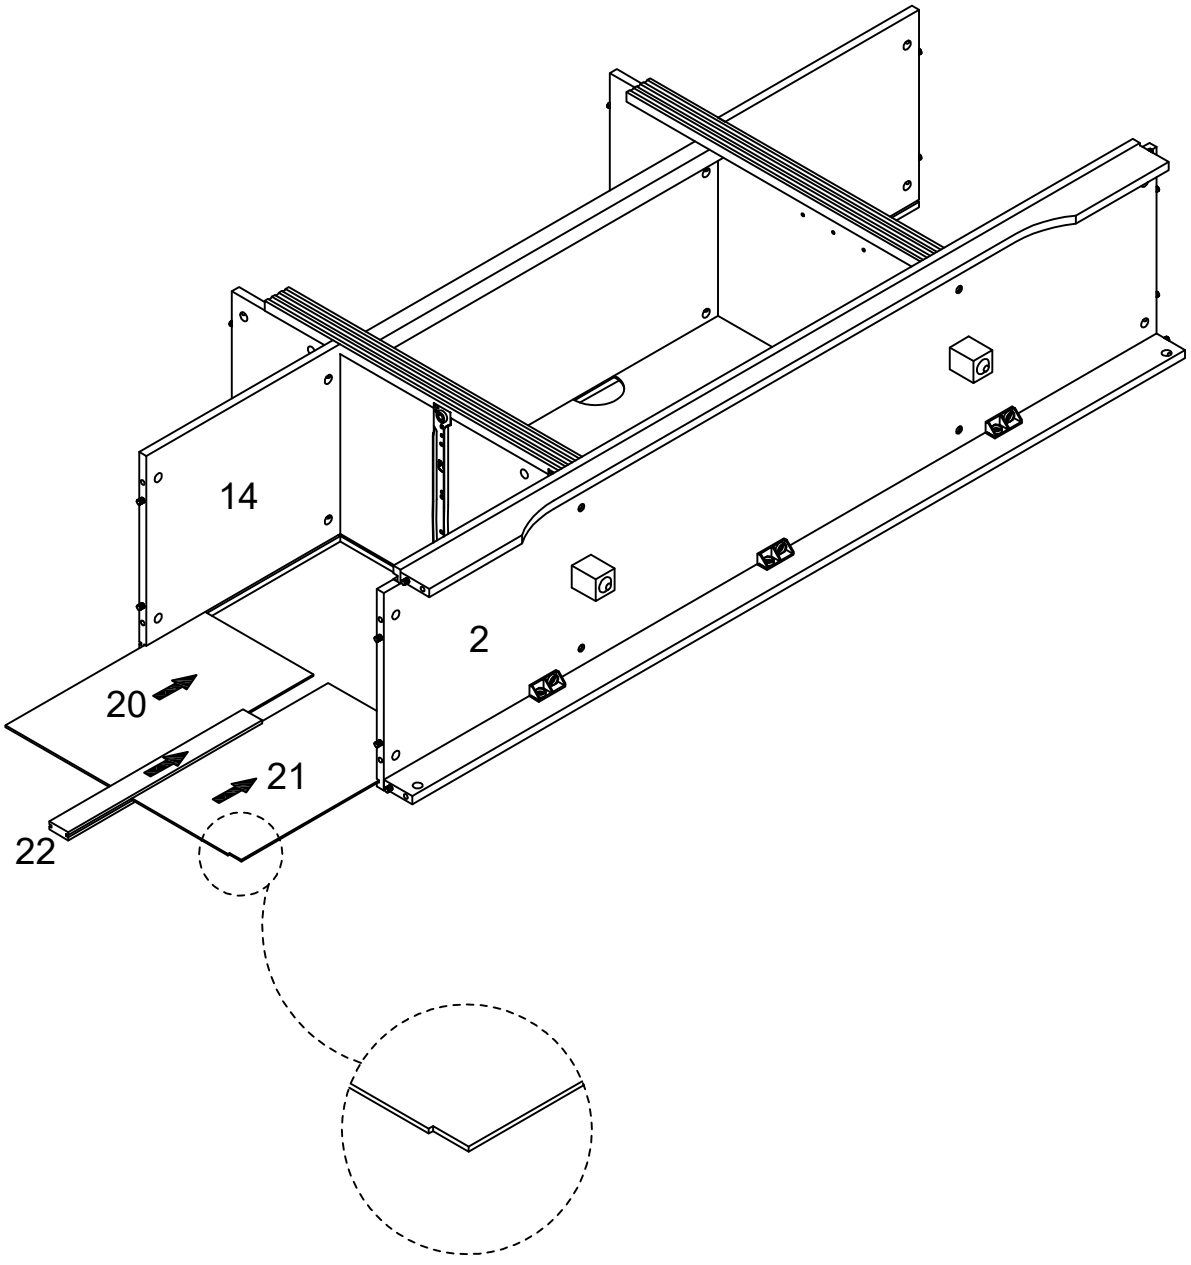

Step 19

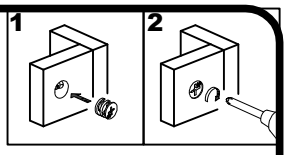

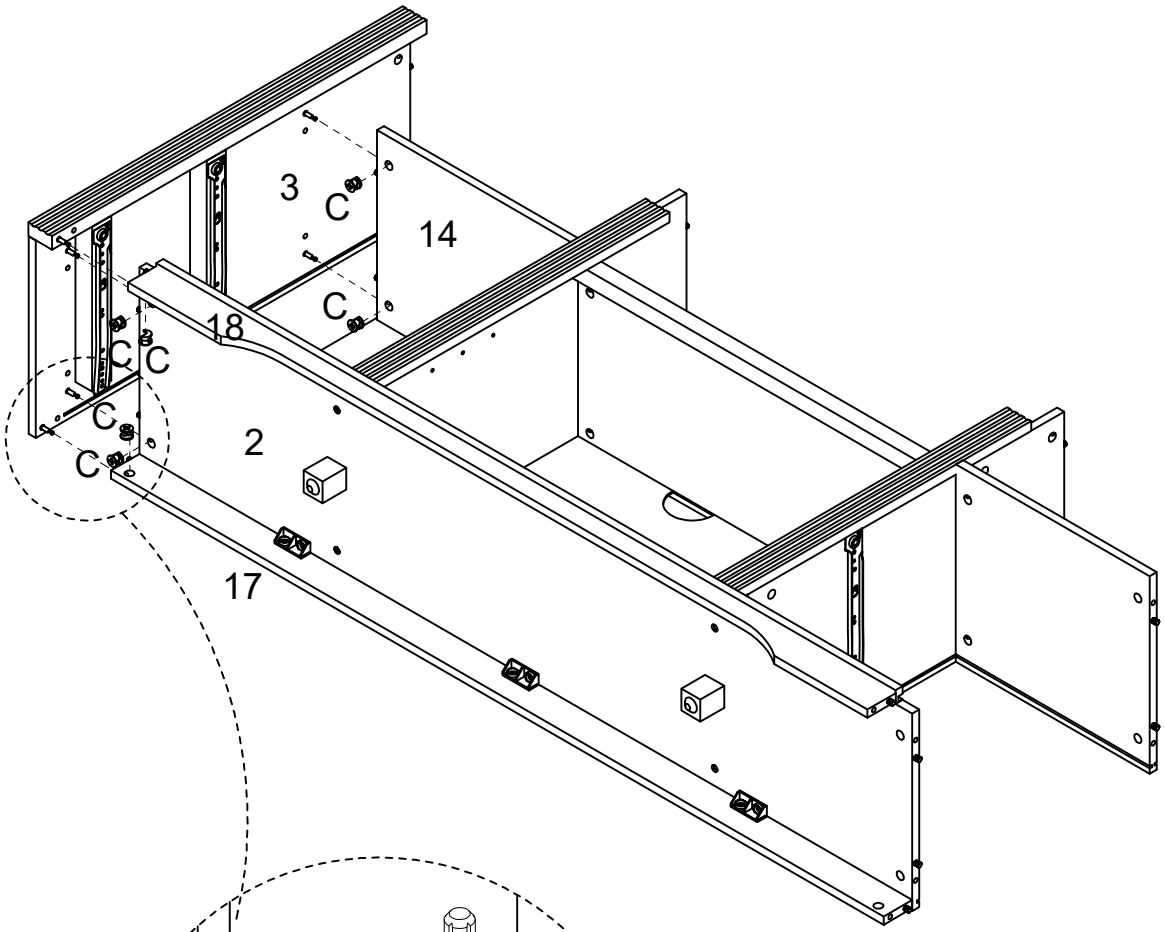


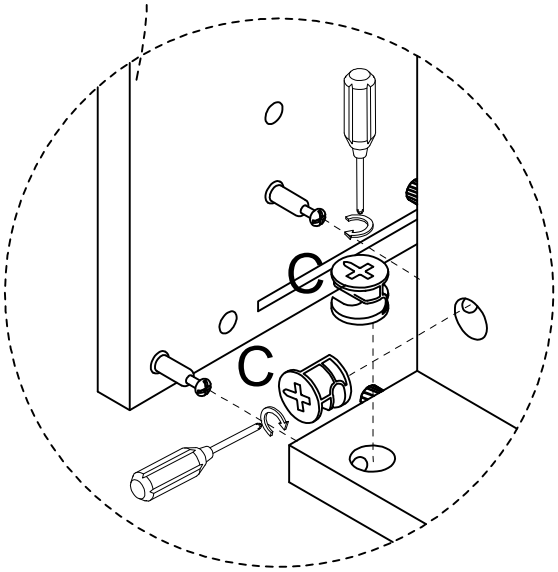

C

X6


Step 20

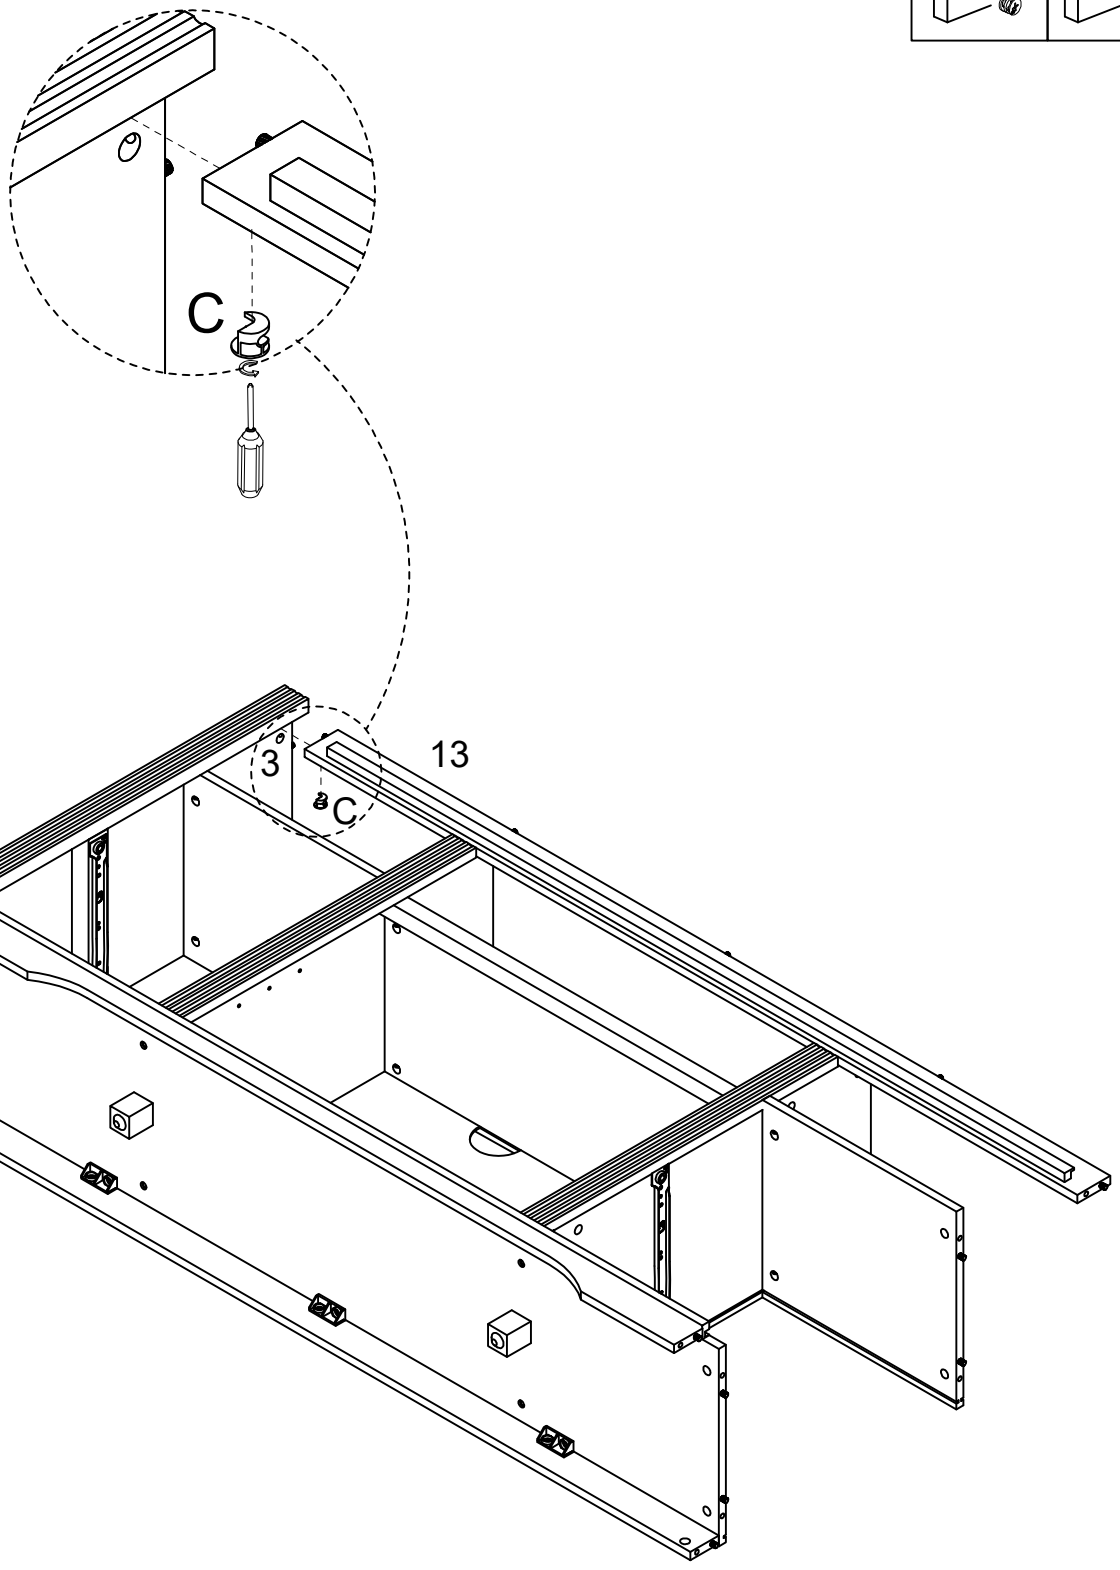


C


X1

Step 21

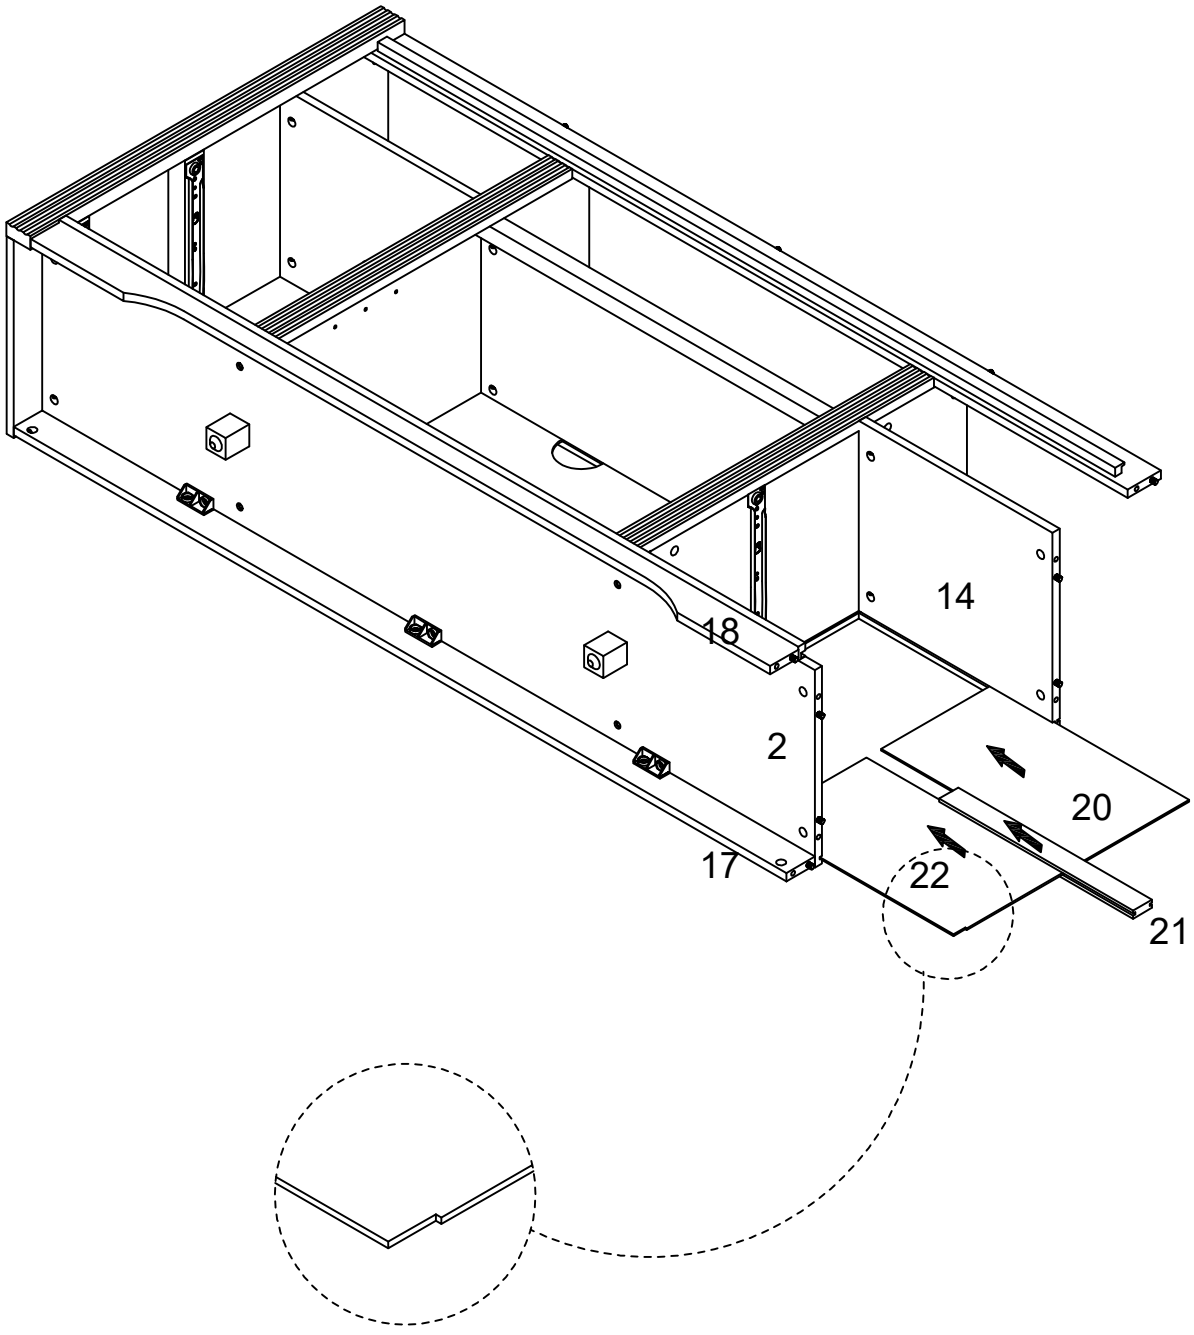

Step 22

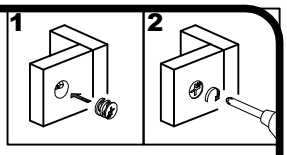


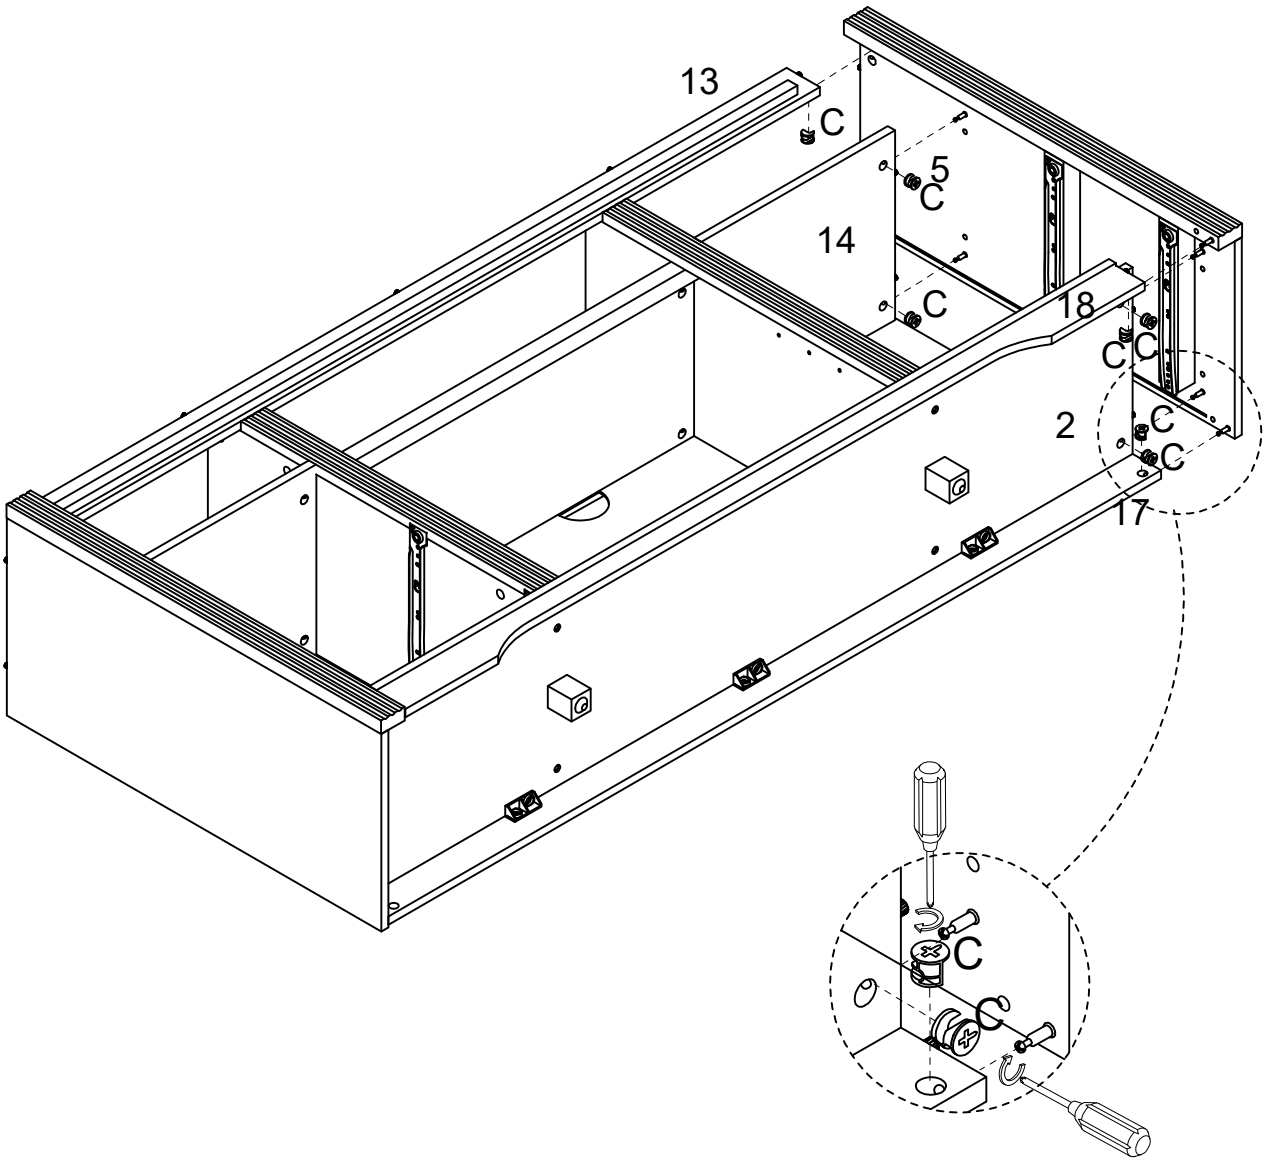

C

X7


Step 23

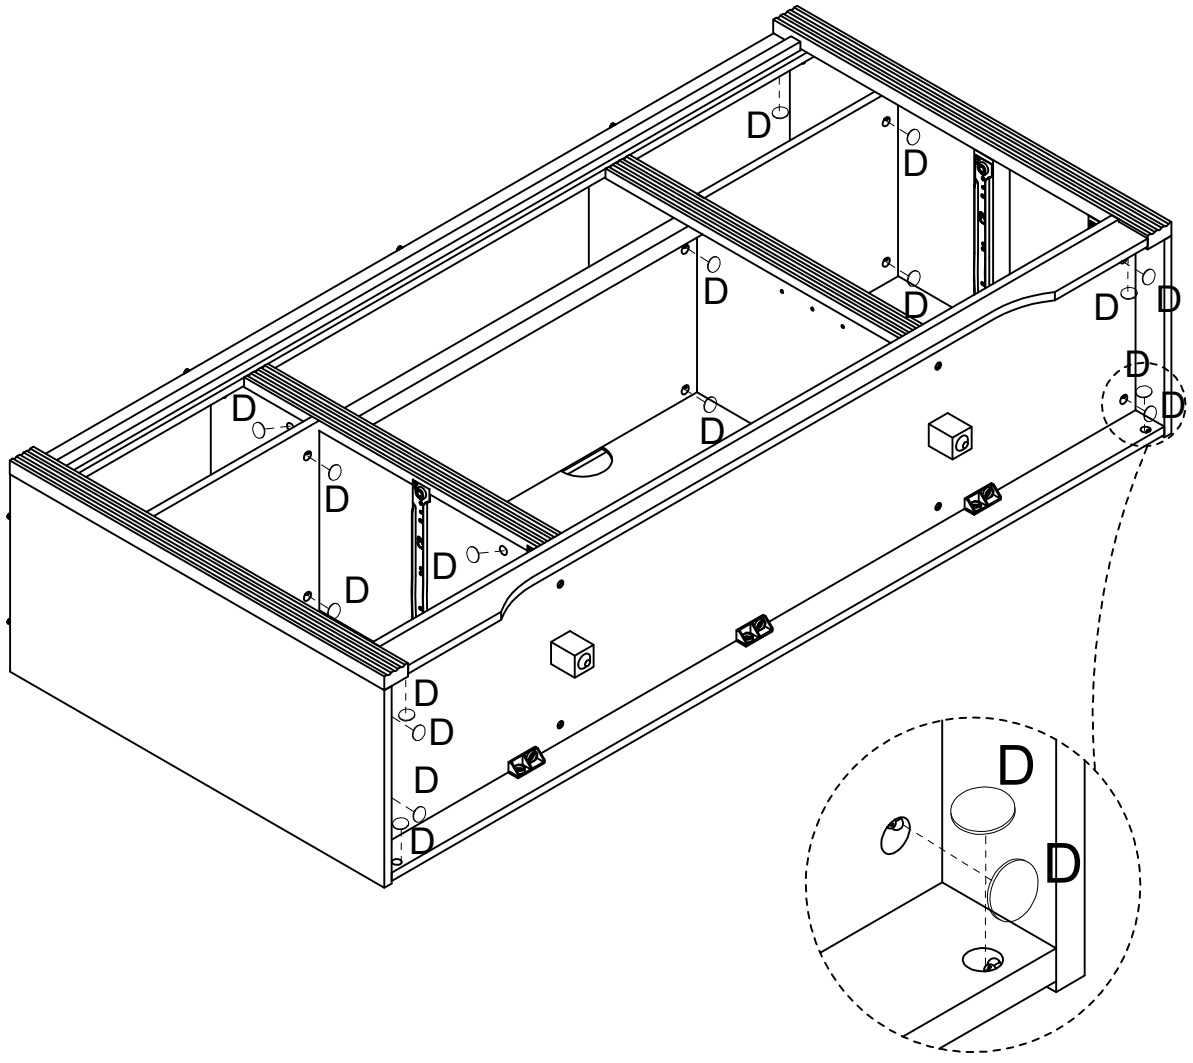


D


X30

Step 24

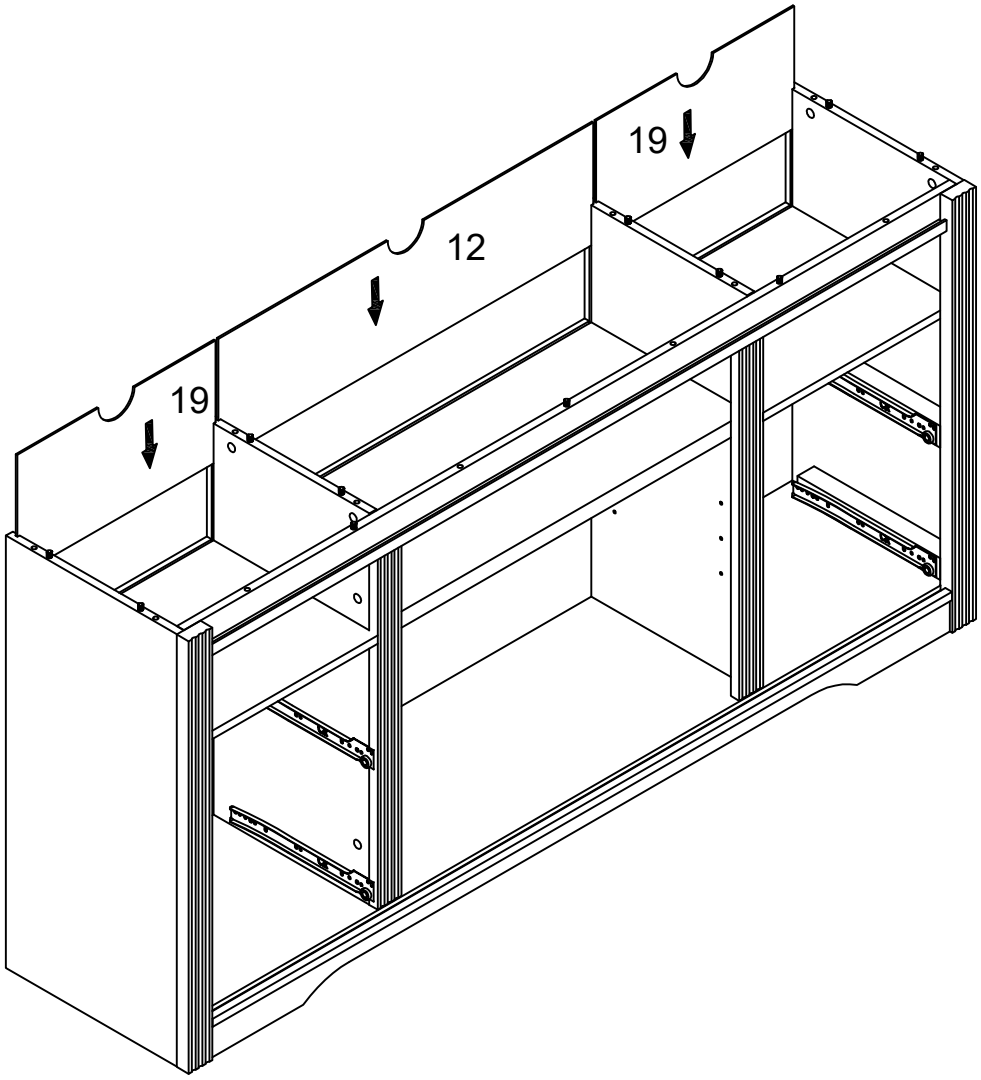

Step 25

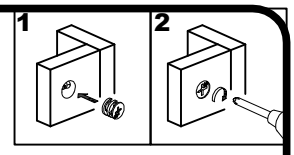


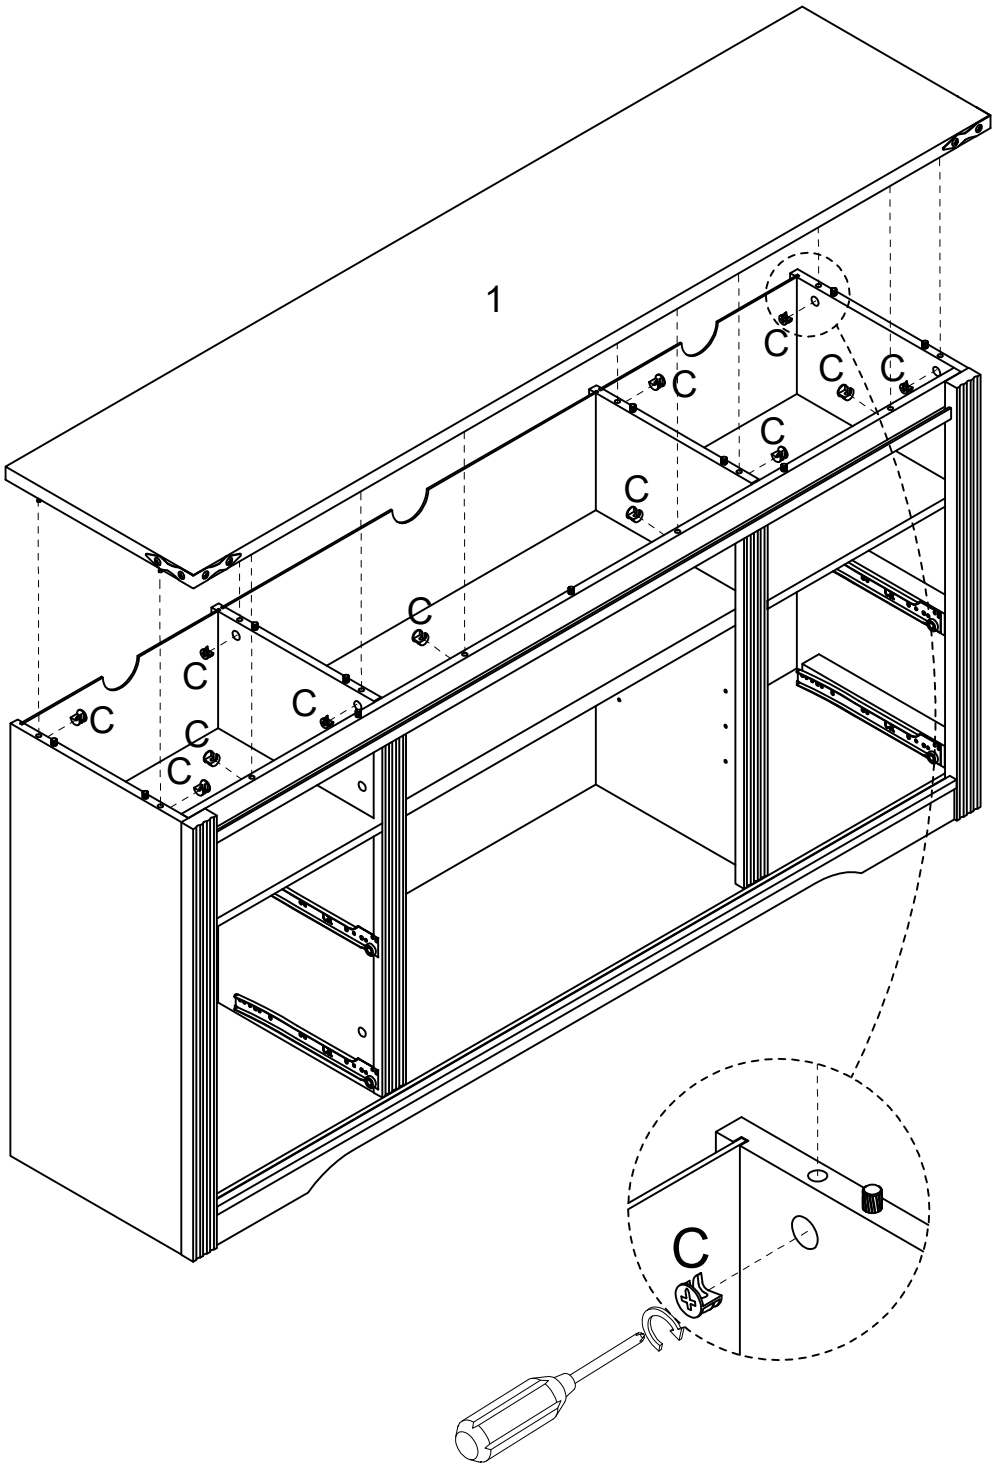

C

X12


Step 26

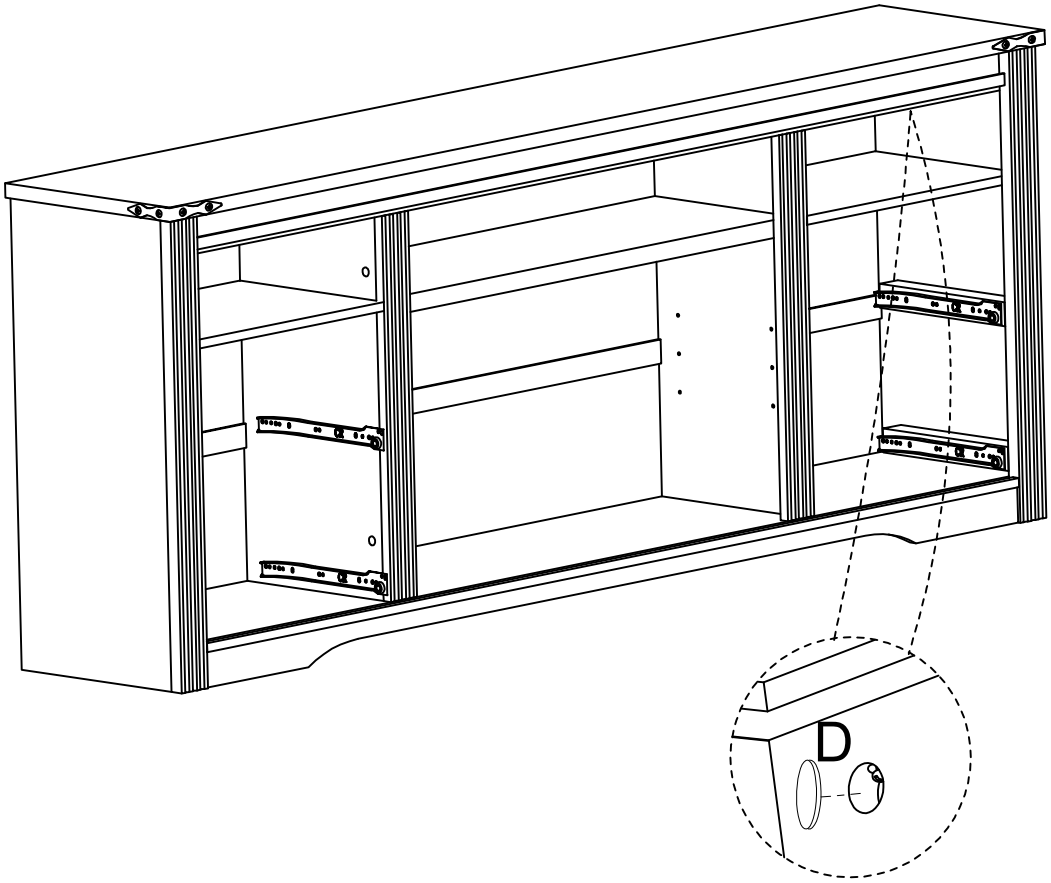

D

X12


Step 27

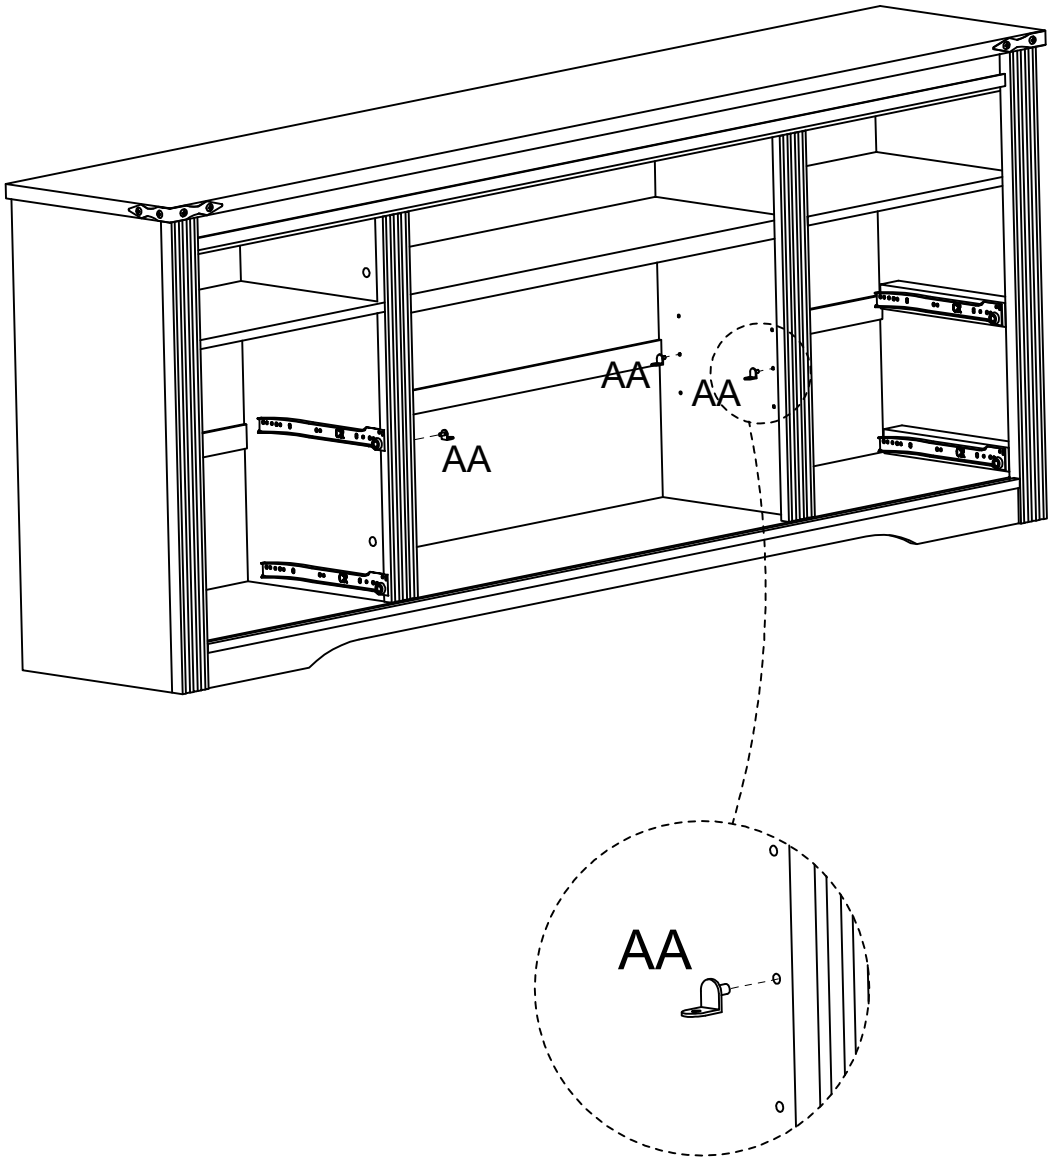


AA

X4

Step 28

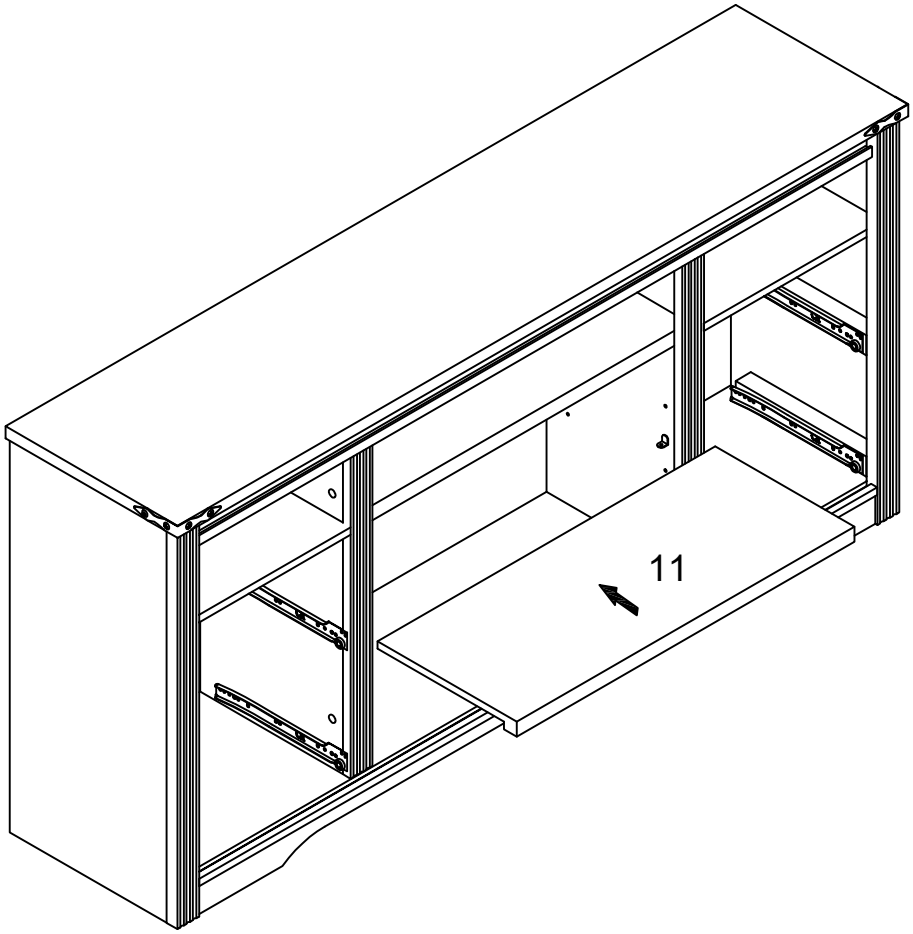


Step 29

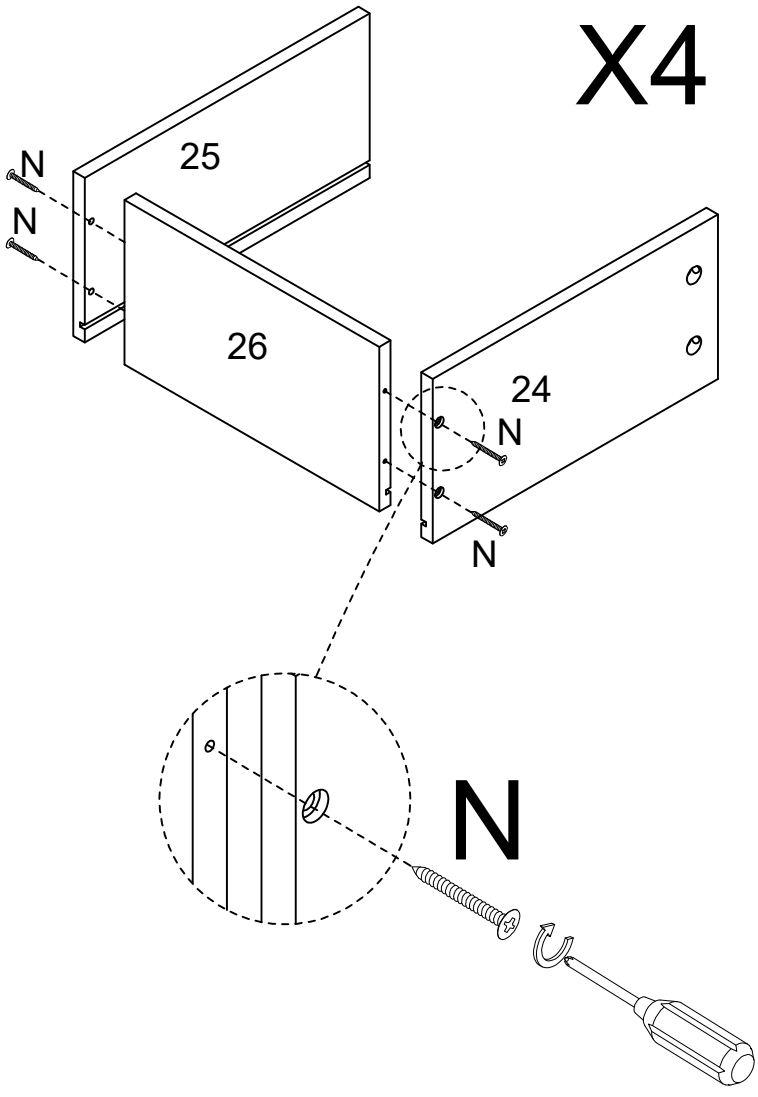

N


X16


Step 30

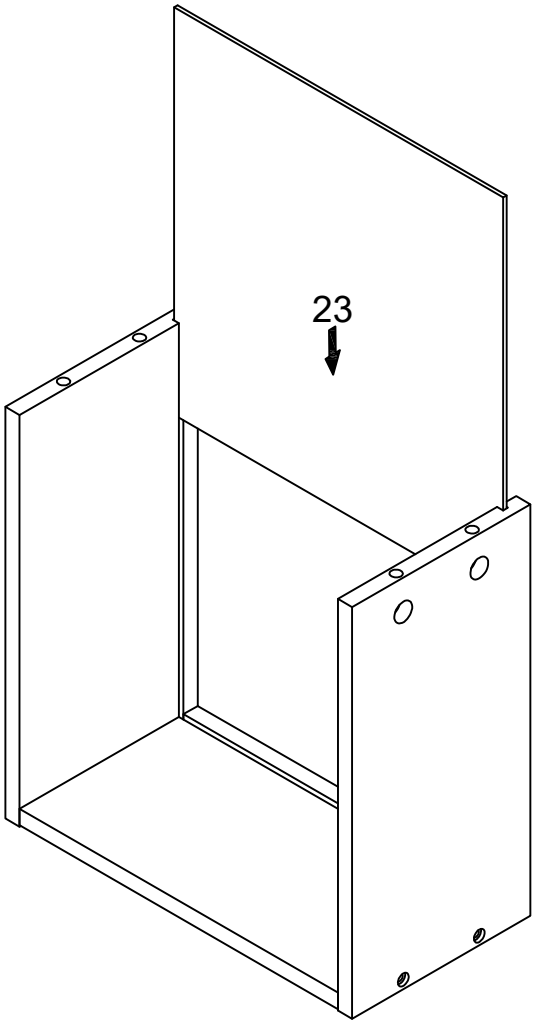

X4

Step 31

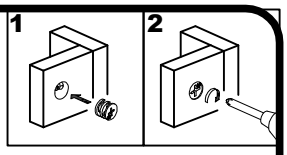


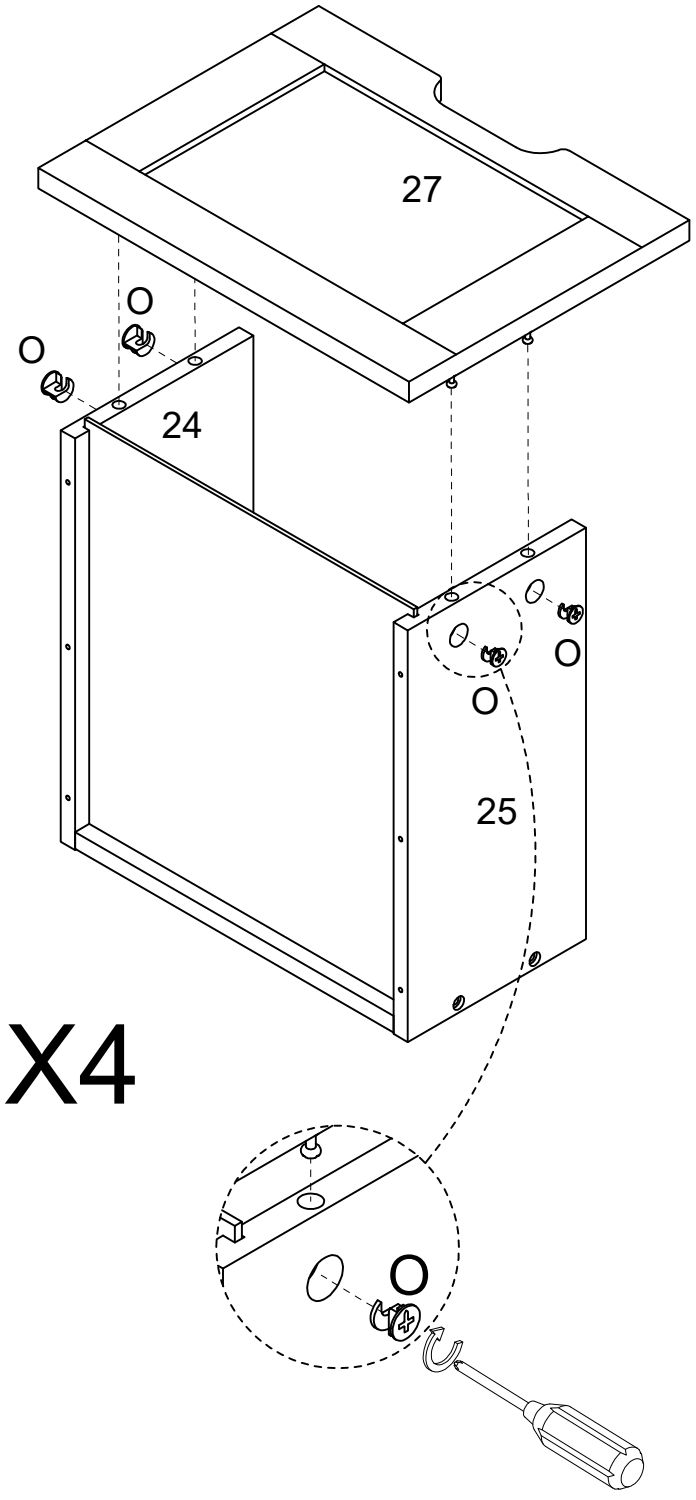


O
X16

Step 32


NOTE:
Refer to the images to identify (left) and right). Attach to #24 panel and to #25 panel. [M] screws must go in the exact spots shown.

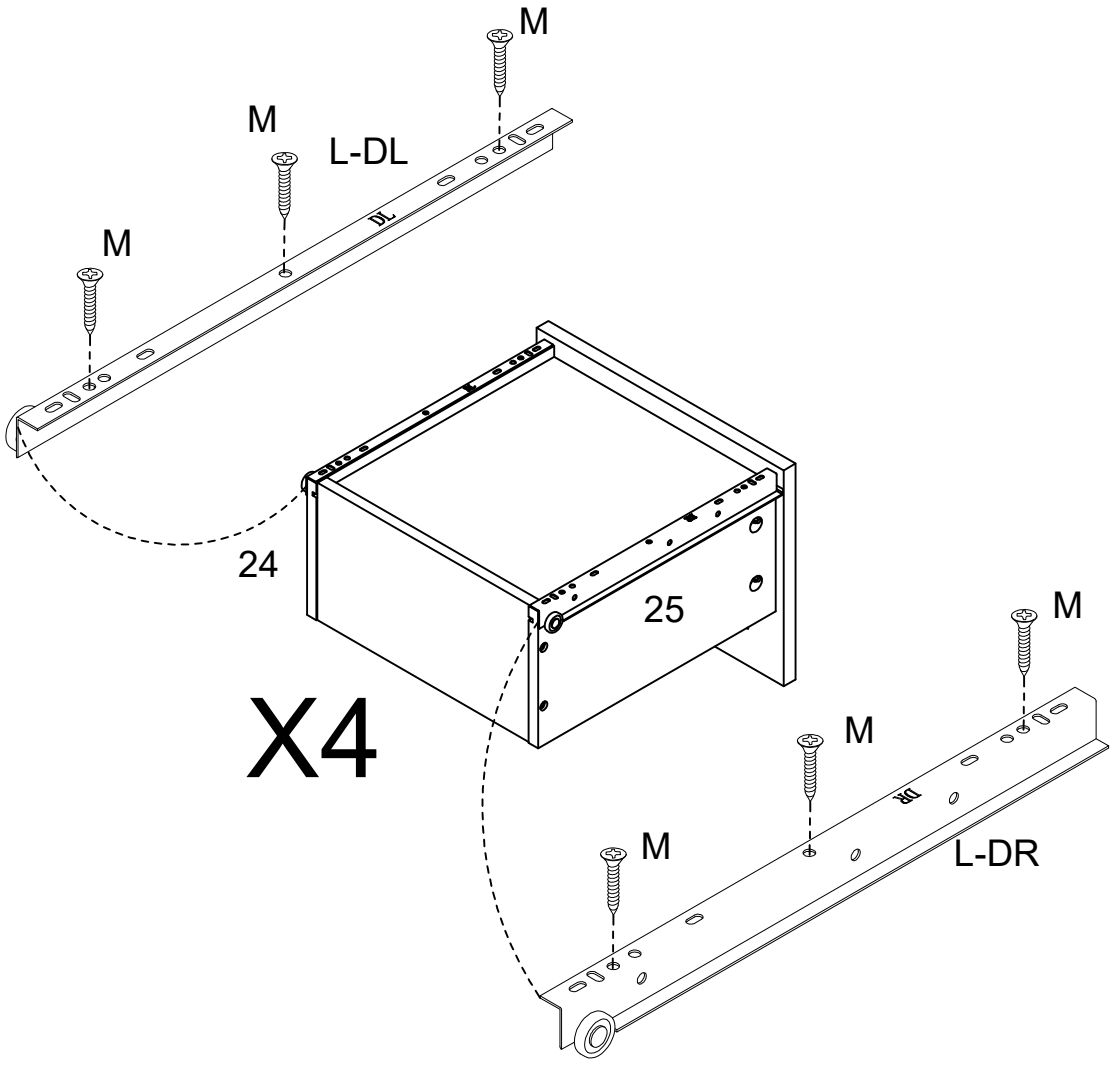

M	L
	
X24	X4


Step 33

X4

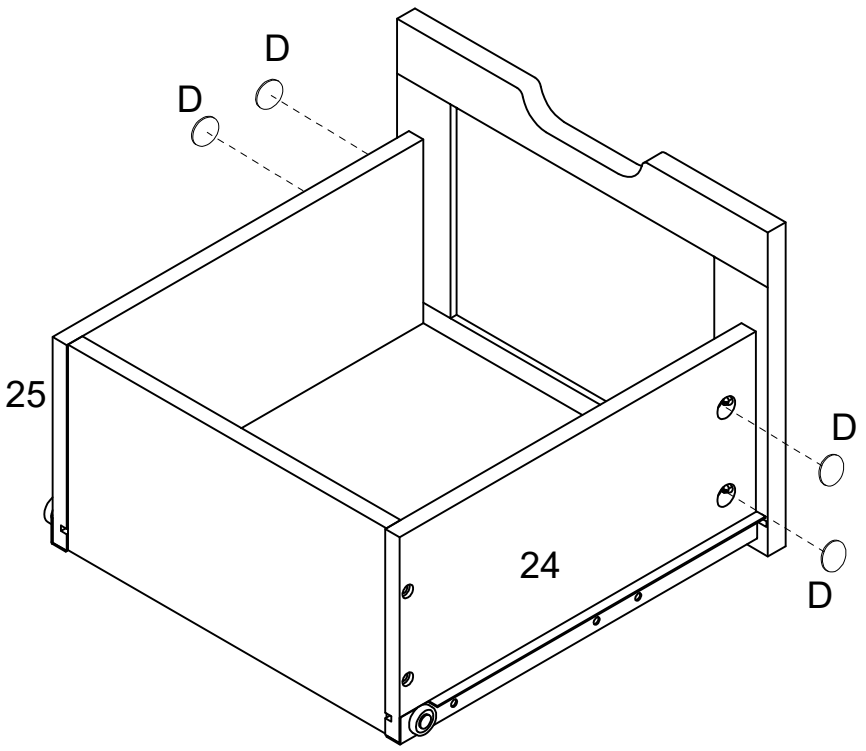


D
⬭
X16

Step 34

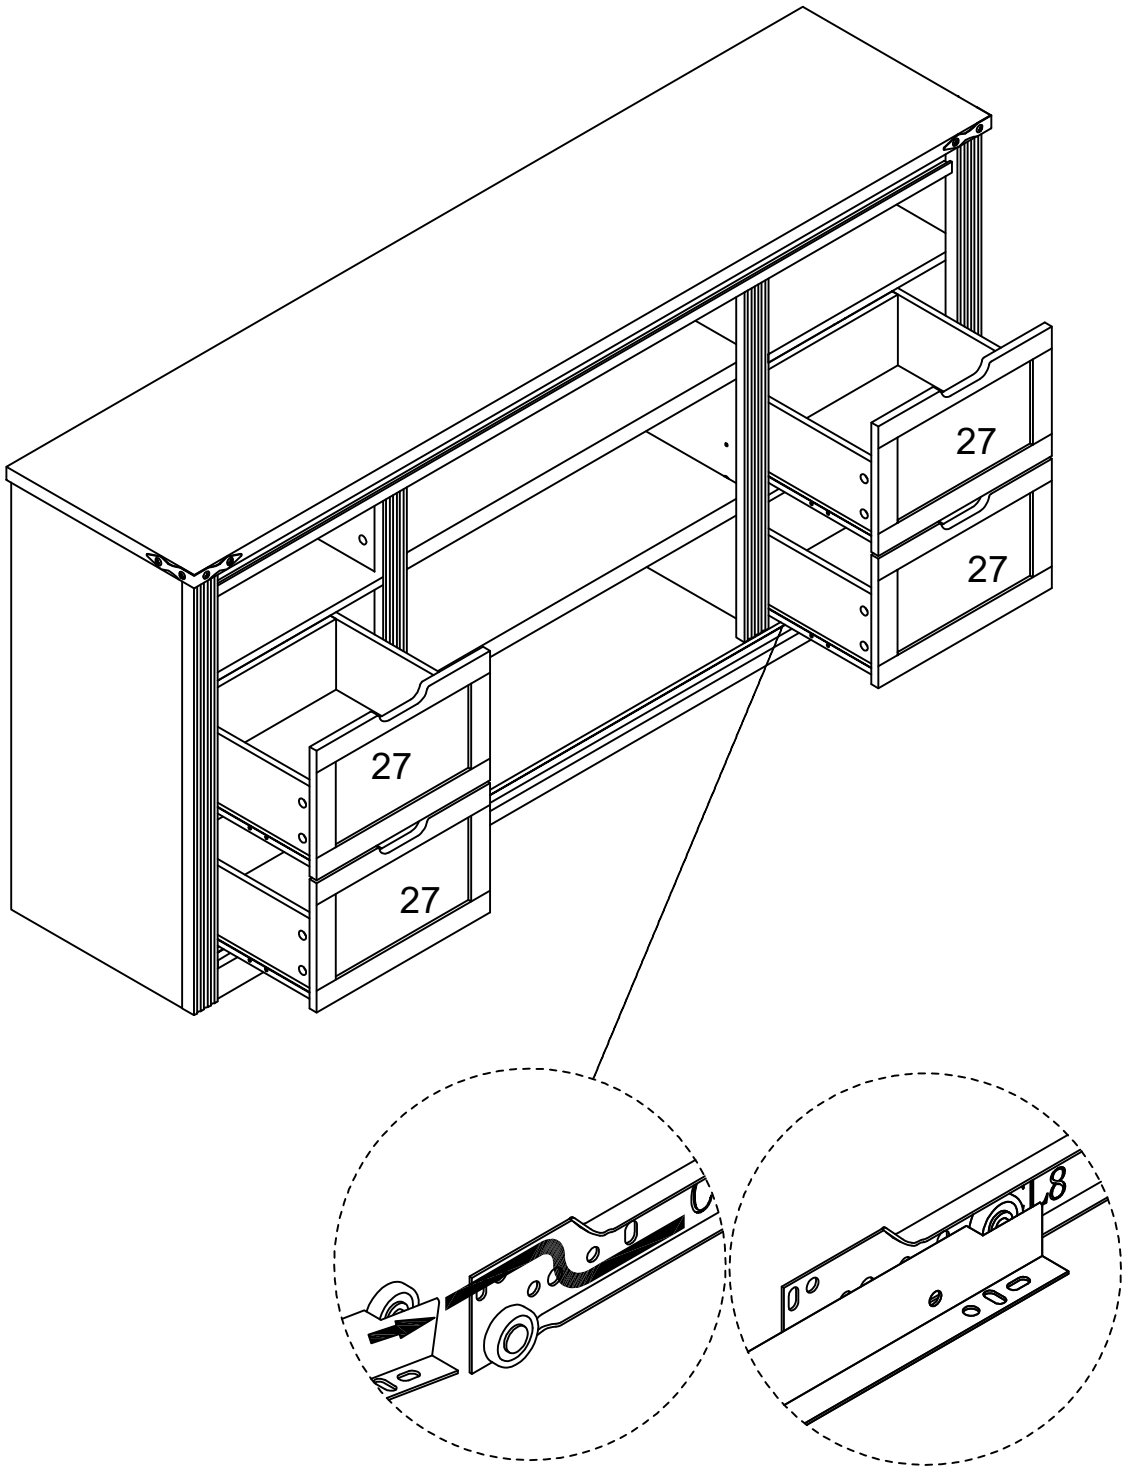


Step 35

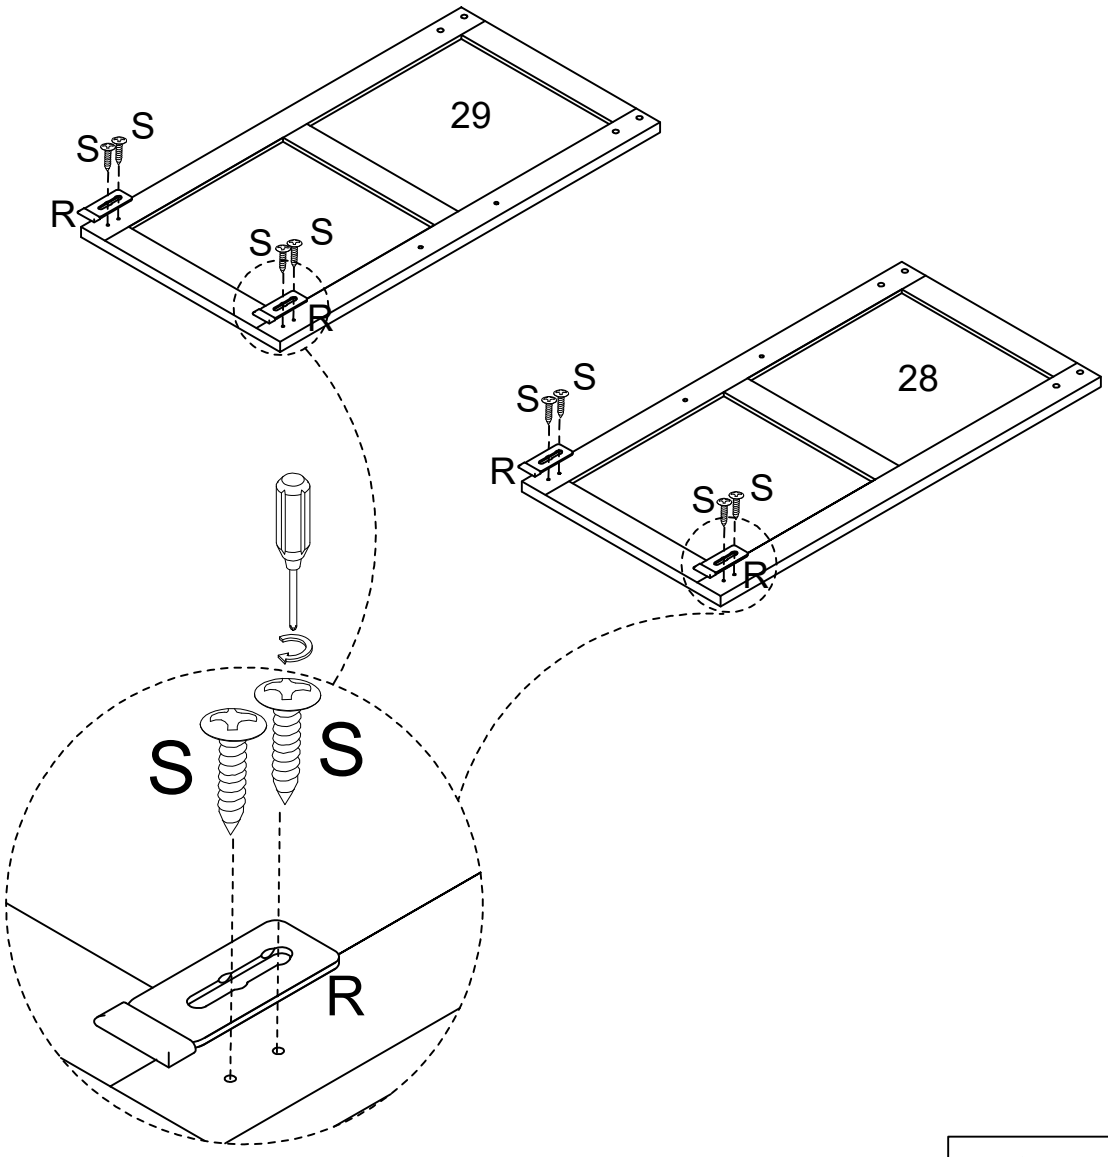


S	R
X8	X4

Step 36

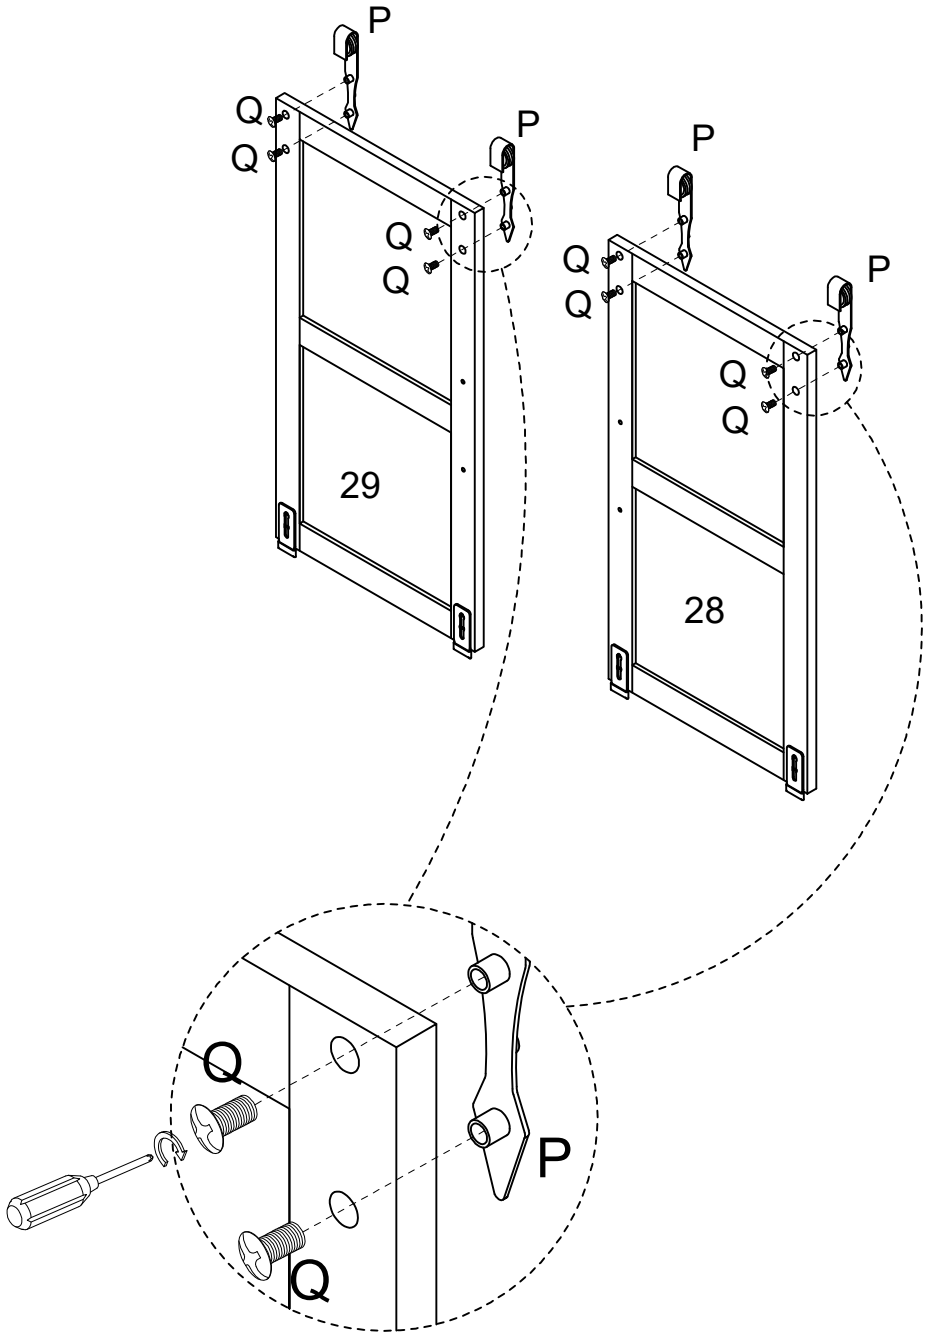


Q	P
	
X8	X4

Step 37

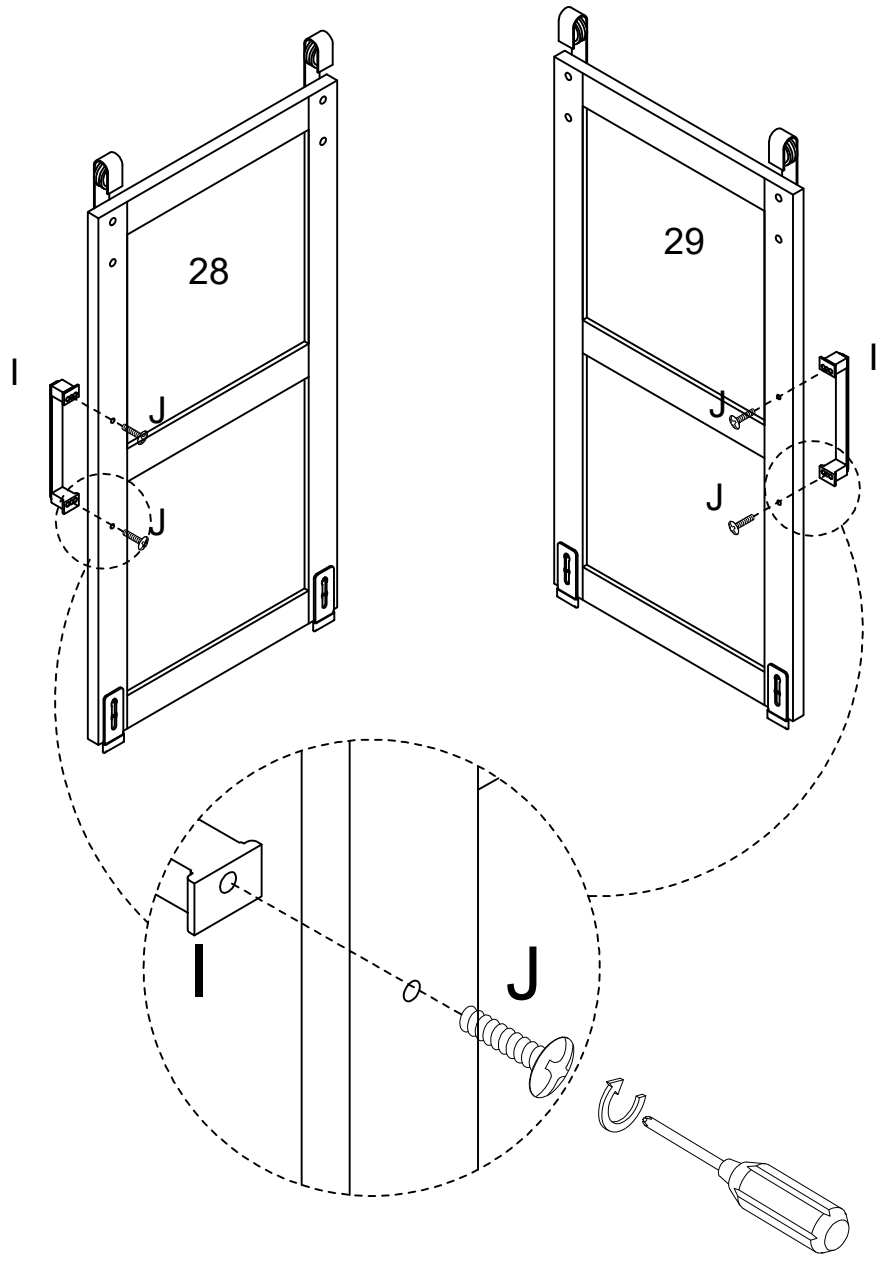


J	I
	
X4	X2

Step 38

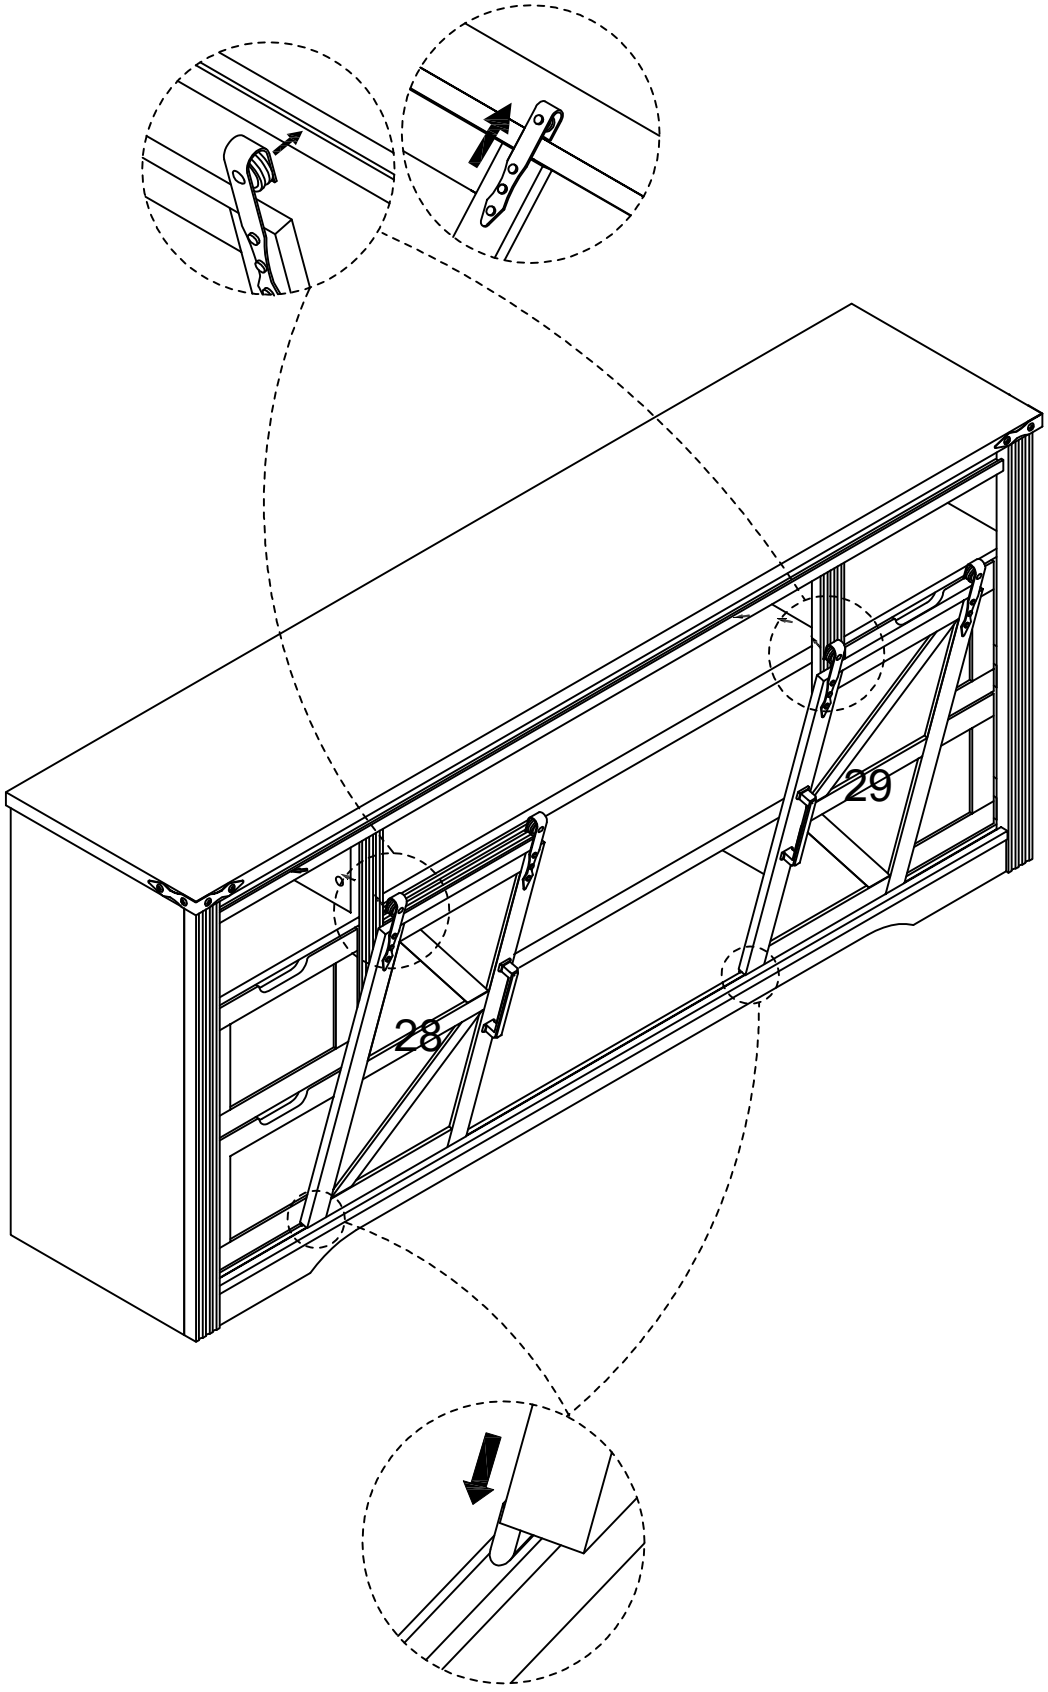


Step 39

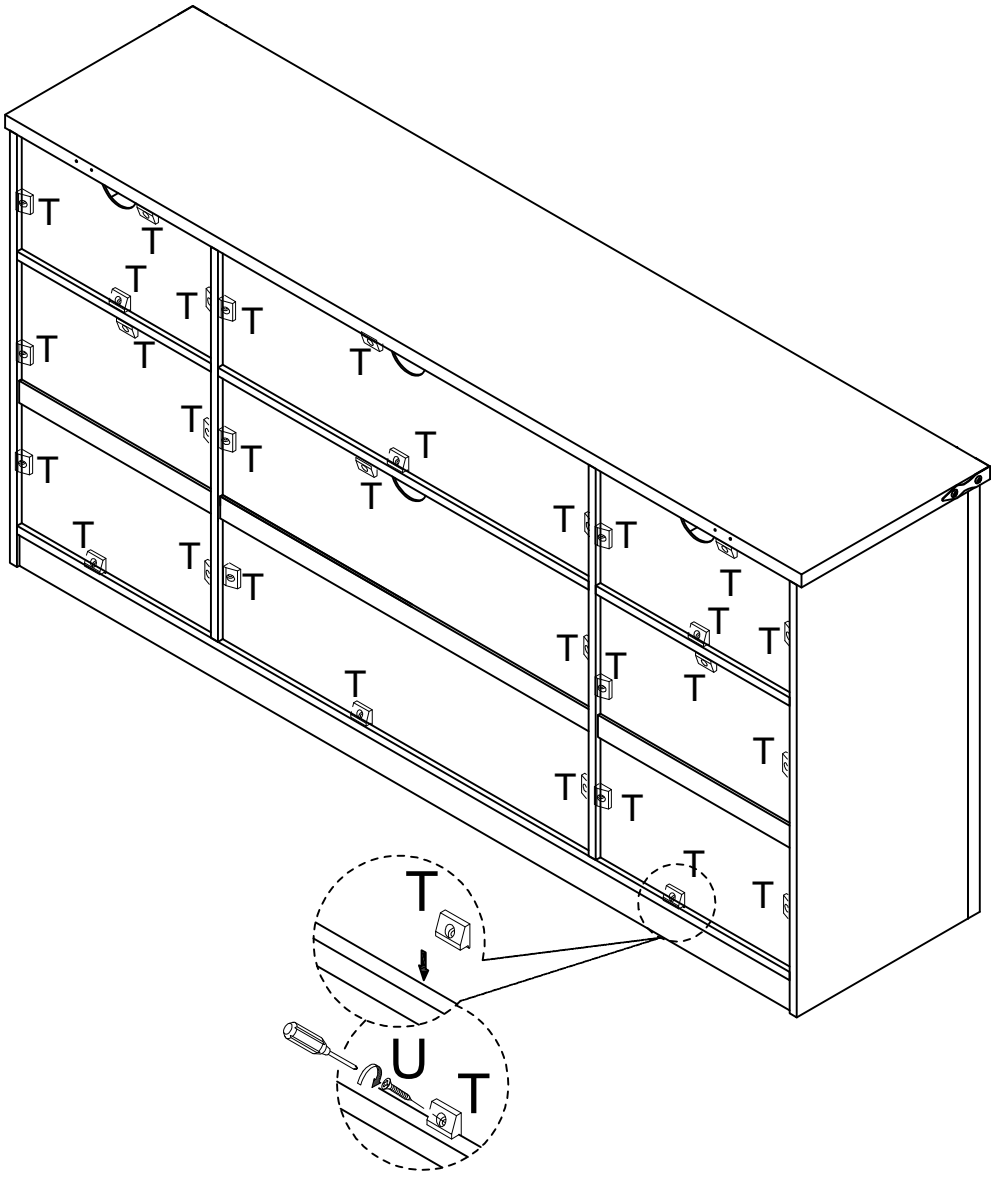


U	T
	
X30	X30

Step 40

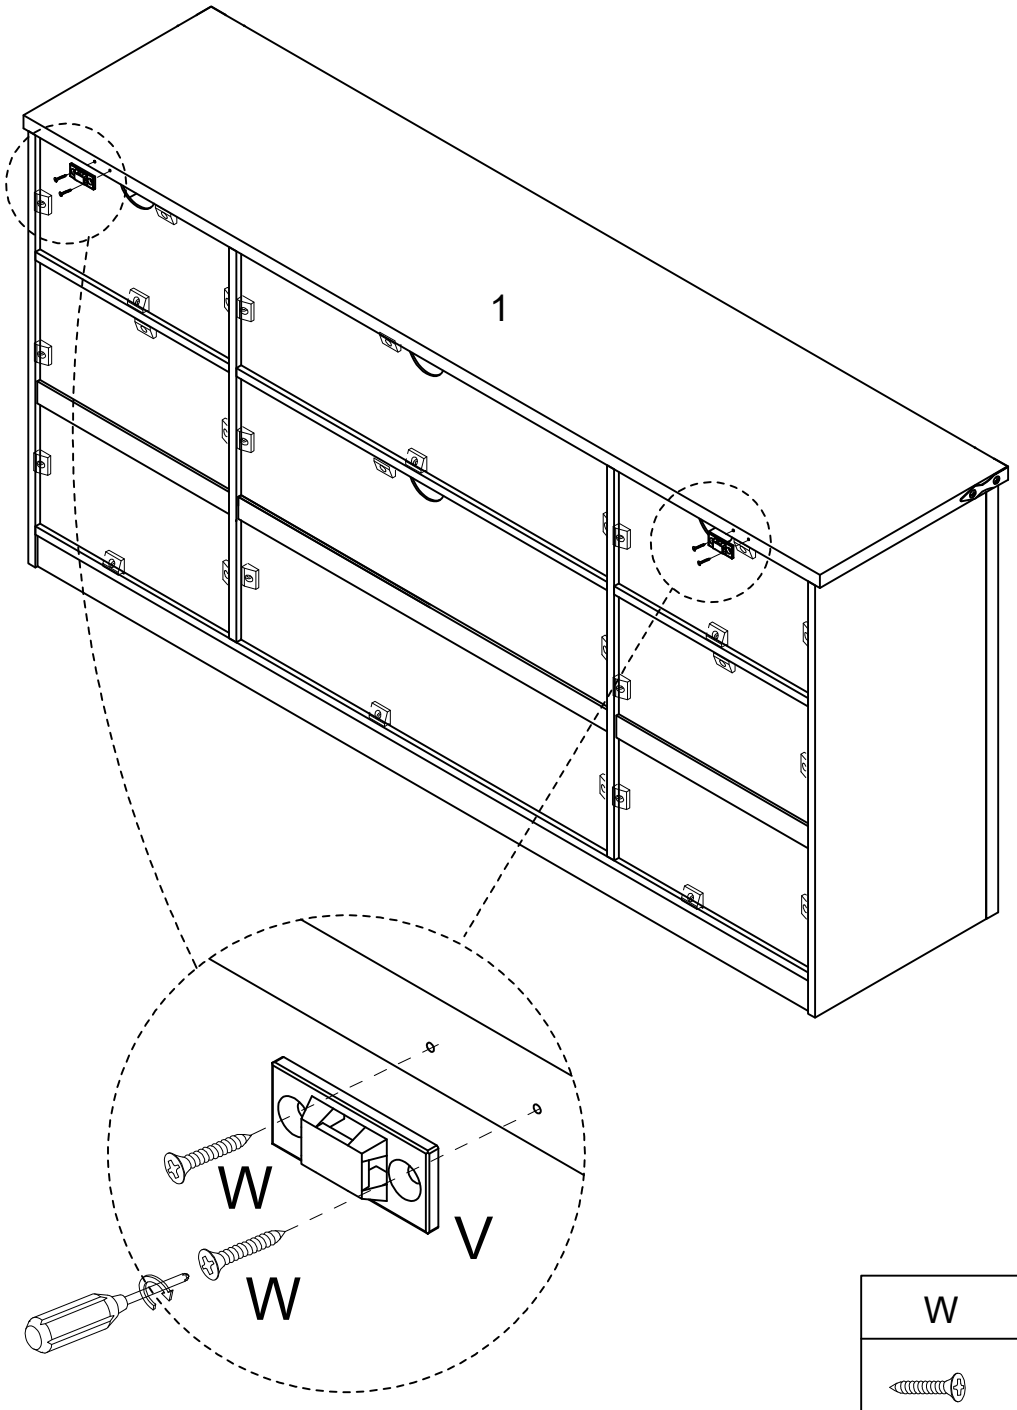


W	V
	
X4	X2

Step 41

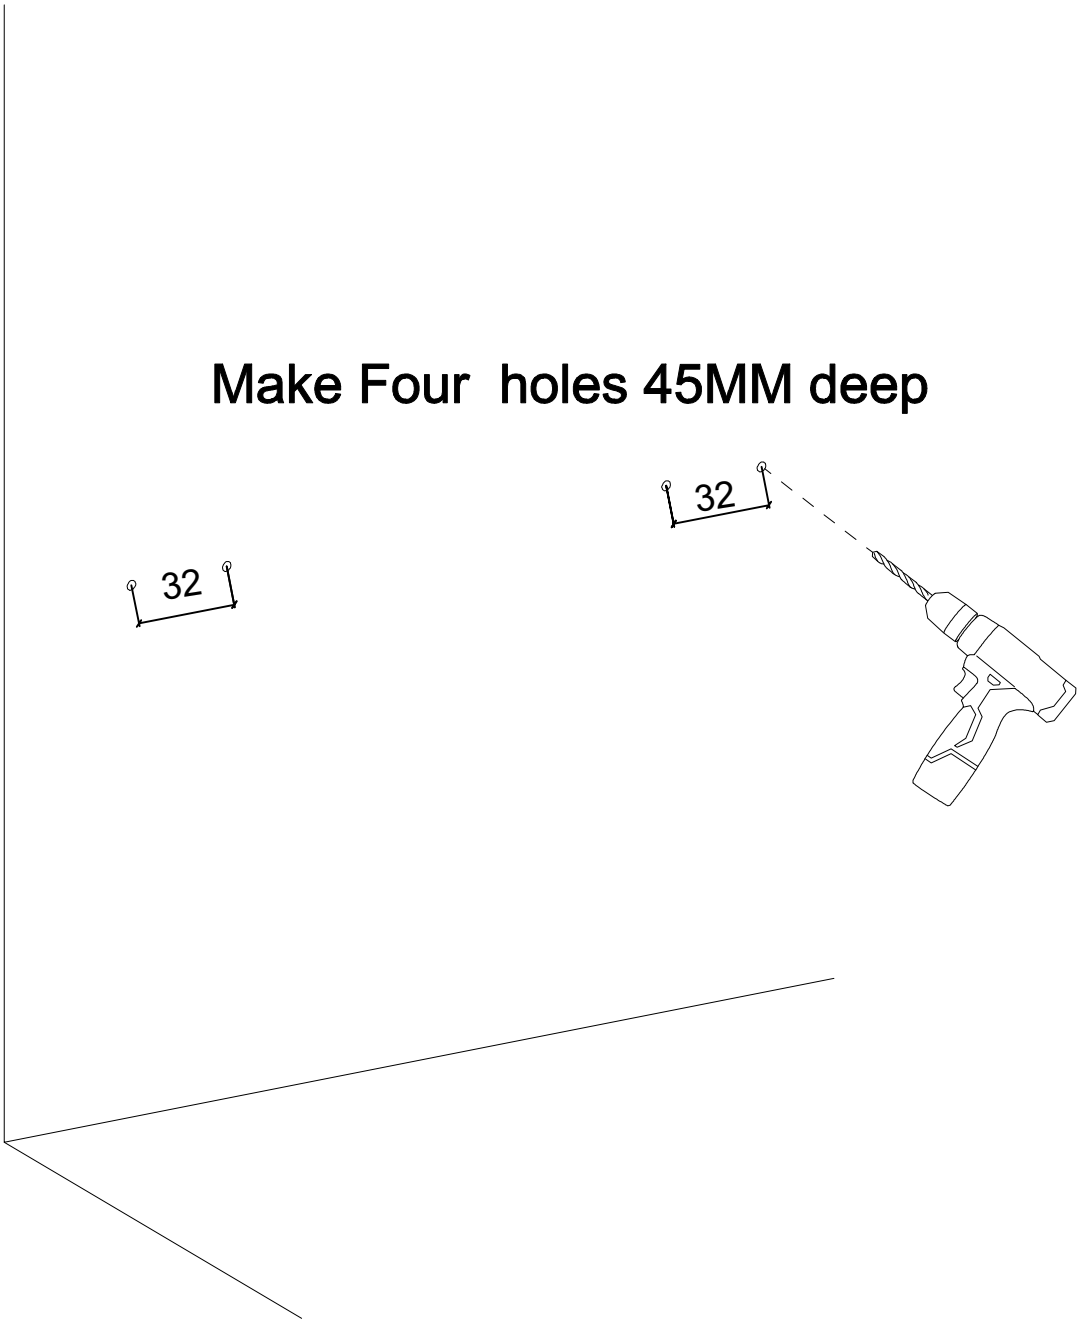


Step 42

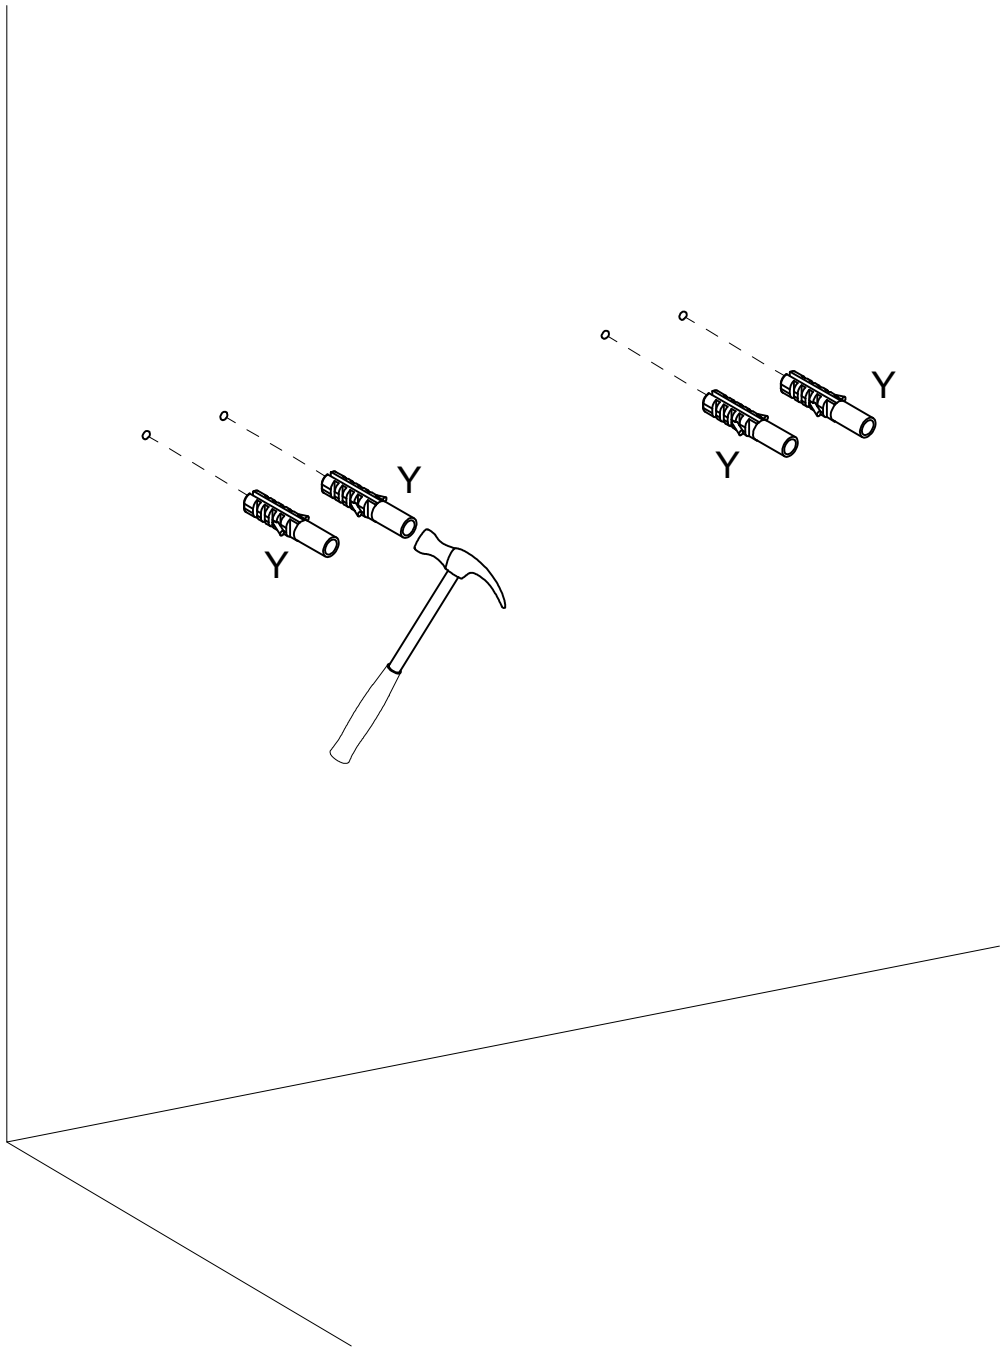

Y


X4

Step 43

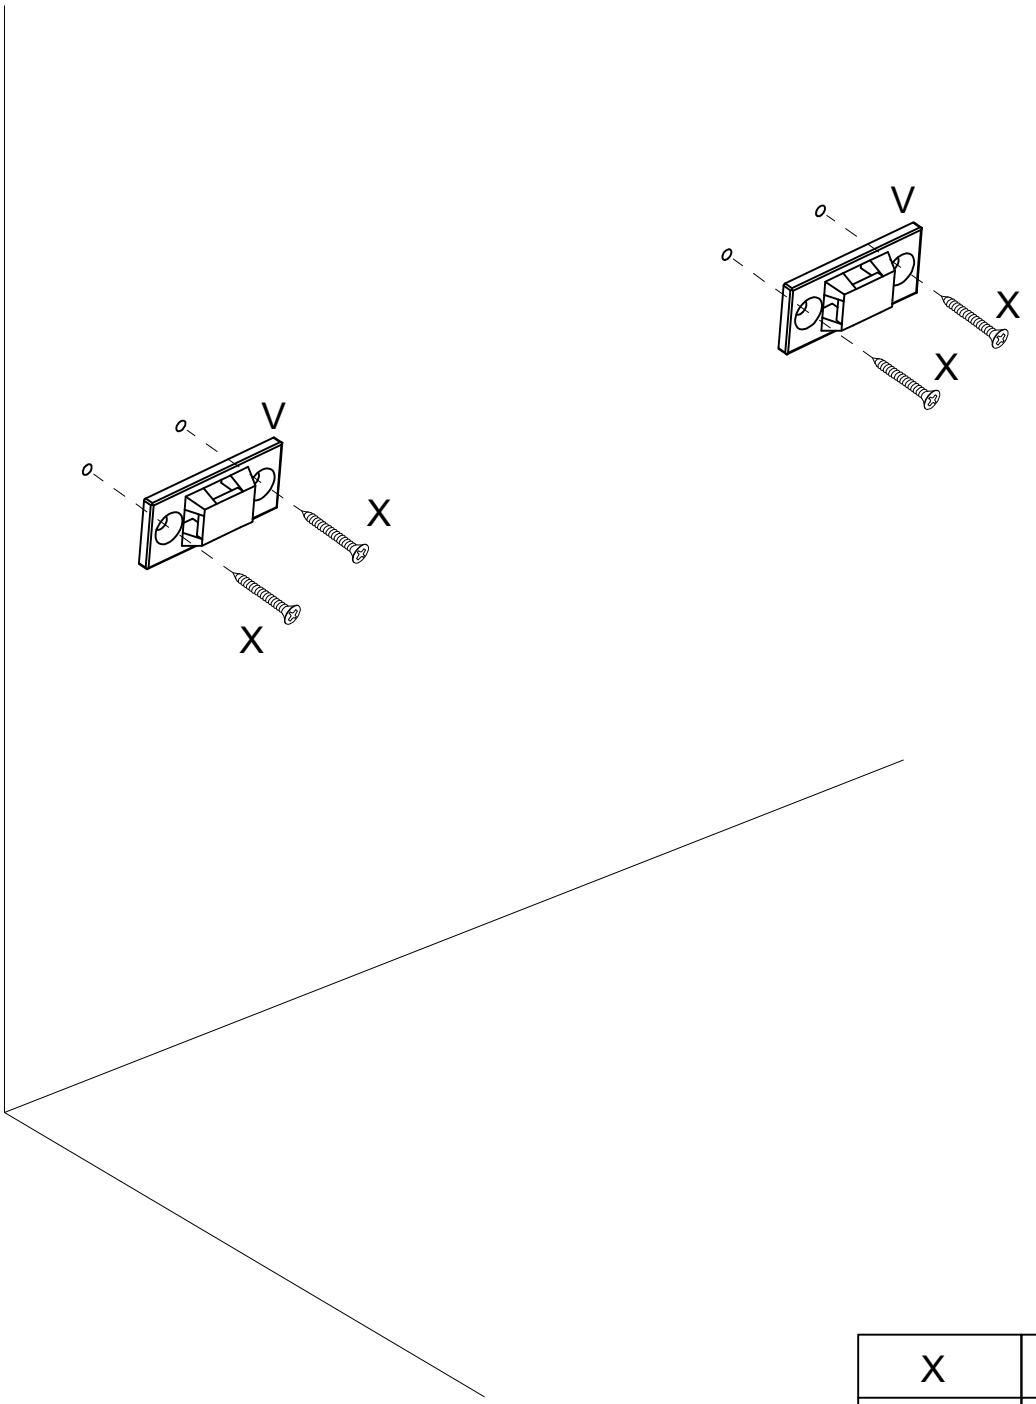

X	V
	
X4	X2

Step 44

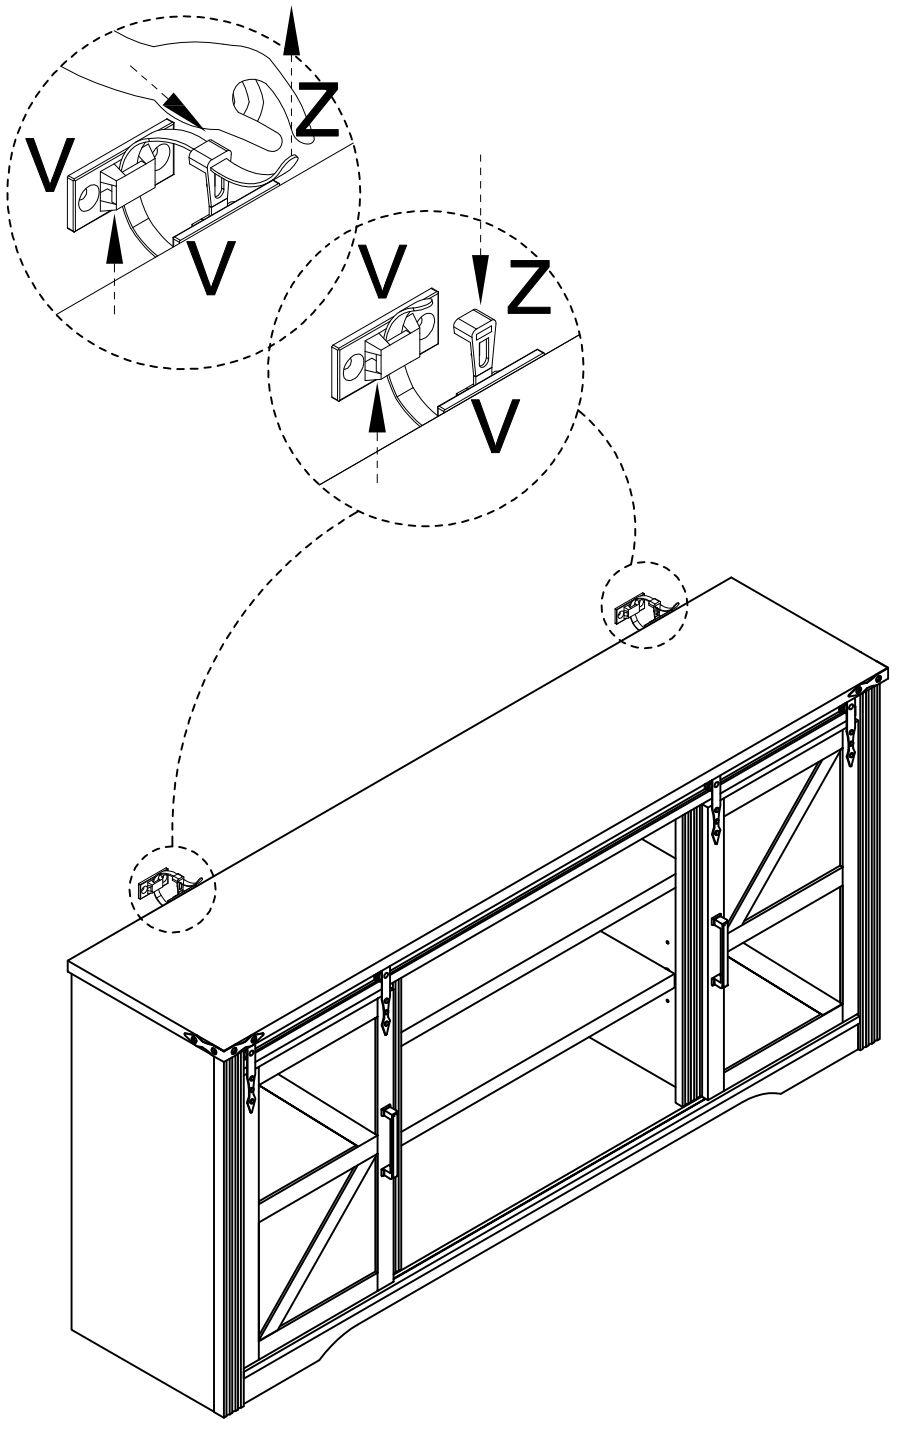

Z
—
X2

Step 45

