


Reptile Enclosure Assembly Instructions

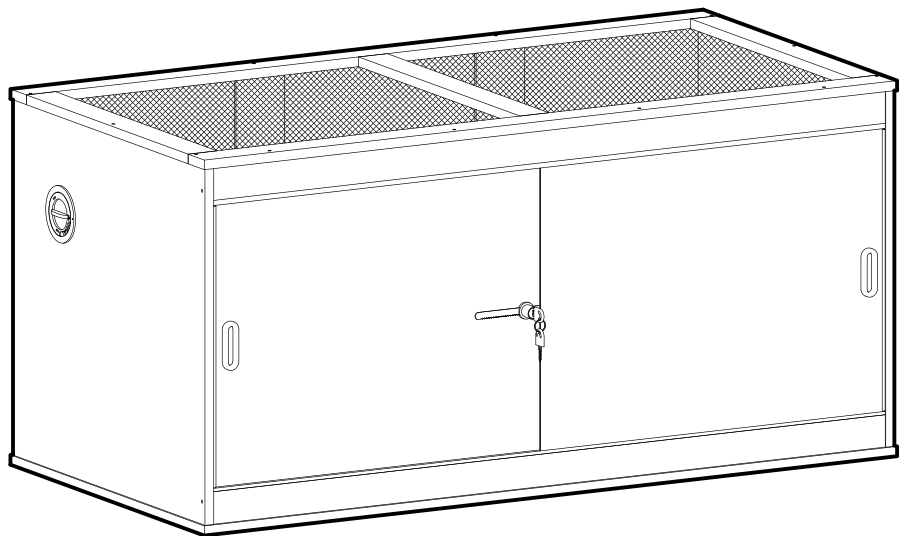

Scan QR code to
view assembly video



Universe Home Inc.

If you have any issues with the product,
please contact us.











☎ : +1 (877) 313 6212
(Mon–Fri, 8:00 am – 5:00 pm PT)

@ : info@universeh.com (24/7)

🌐 : unipawspro.com



Scan to submit a request
We'll reply within 1 business day

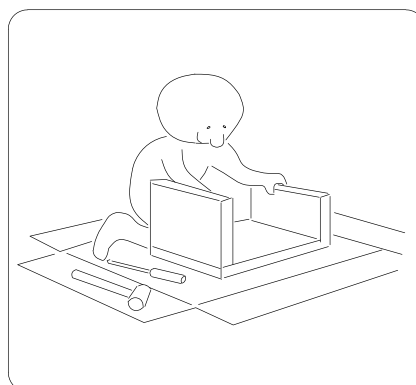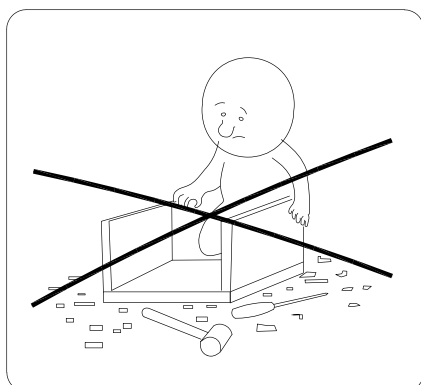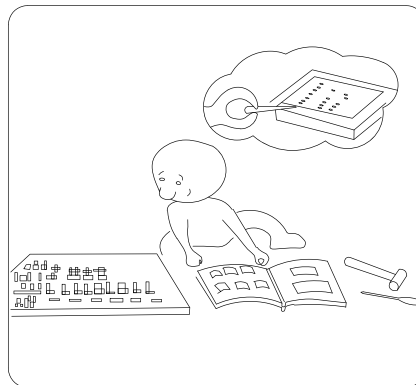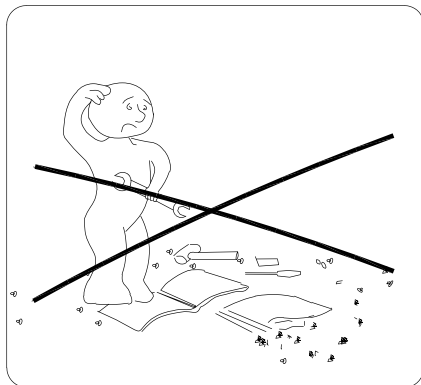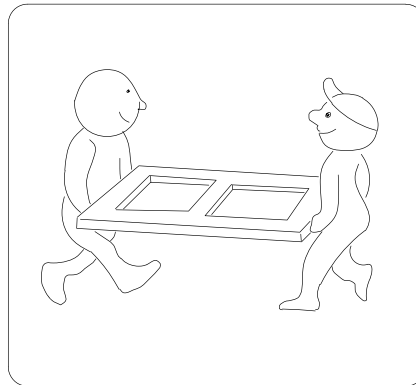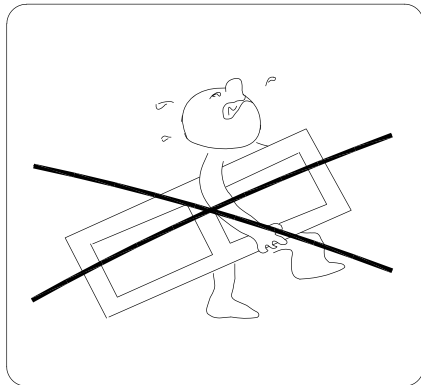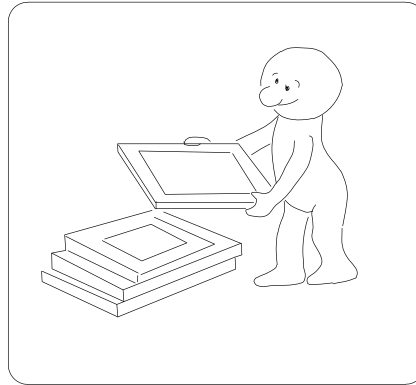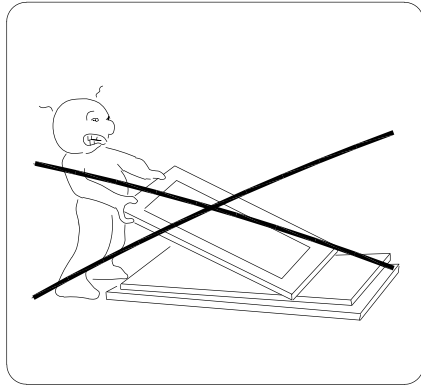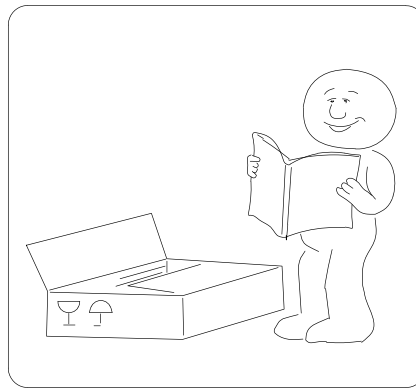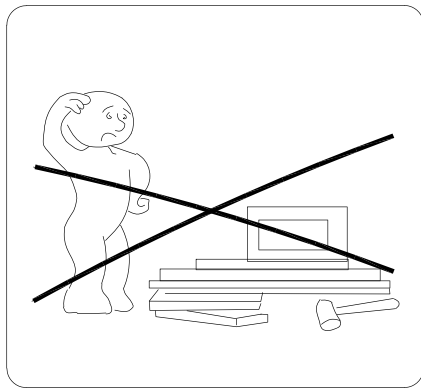

WARNING




1. PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING ASSEMBLY.
2. DO NOT LET ANY SHARP OBJECTS TOUCH OR RUB THE SURFACE OF THE PRODUCT.
3. WHEN ASSEMBLING, DO NOT LET CHILDREN PLAY AROUND THE WORKING AREA.
4. PLEASE CONFIRM ALL PARTS ARE CORRECT BEFORE STARTING THE ASSEMBLY PROCESS.
5. DO NOT TIGHTEN ALL BOLTS AND SCREWS COMPLETELY UNTIL THE ENTIRE UNIT HAS BEEN ASSEMBLED AND SET UP.

ADVISE



1. DO NOT SIT OR STAND ON THIS PRODUCT. IT IS INTENDED FOR PETS ONLY.
2. THIS PRODUCT SHOULD BE ASSEMBLED BY AN ADULT.
3. PLEASE PUT THE PRODUCT ON A SMOOTH SURFACE AFTER YOU ASSEMBLED IT.
4. PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
5. THE SCREW OF HINGE ON THE DOOR ALSO CAN BE ADJUSTABLE, TO MAKE IT EVEN THEN TIGHTEN ALL SCREWS.

TOOL NEEDED




SCREWDRIVER REQUIRED
- NOT INCLUDED


PARTS

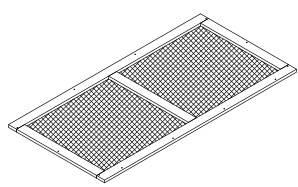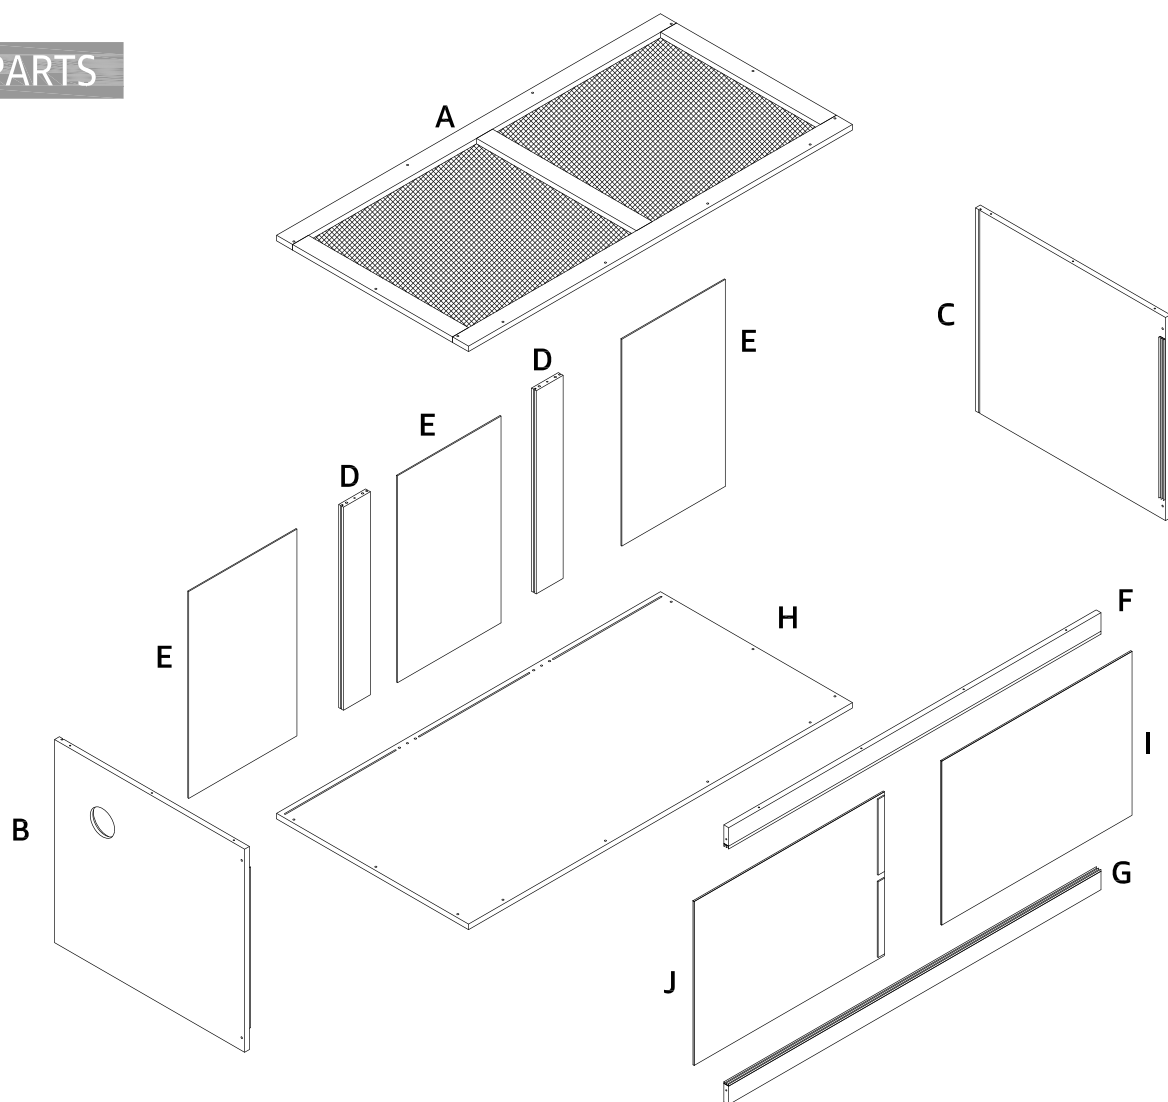

A
Top Panel
x1




B
Left Side Panel
x1




C
Right Side Panel
x1



D
Middle Support Bar
x2




E
Back Panel
x3

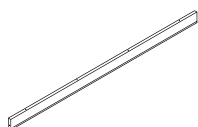


F
Upper Apron
x1




G
Bottom Apron
x1

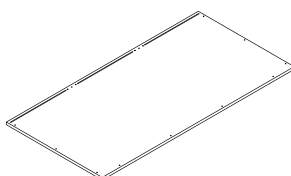

H
Bottom Panel
x1

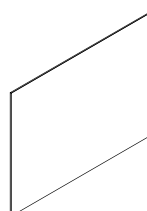


I
Right Door Panel
x1

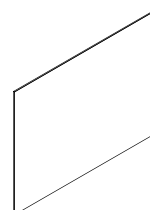

J
Left Door Panel
x1

Contact us at: info@universeh.com

HARDWARE




1
x 28 pcs




2
x 8 pcs



3
x 1 pc

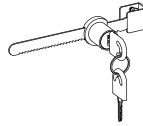

4
x 1 pc



5
x 2 pcs



6
x 6 pcs

ASSEMBLY INSTRUCTIONS


1

Connect Upper Apron F & Bottom Apron G to Left side panel B & Right side panel C with No.1 screws.

Then install Bottom panel H by using No.1 screws.

Stick the anti-slip pad 6 onto the bottom panel H.

1 x 14 pcs	6 x 6 pcs


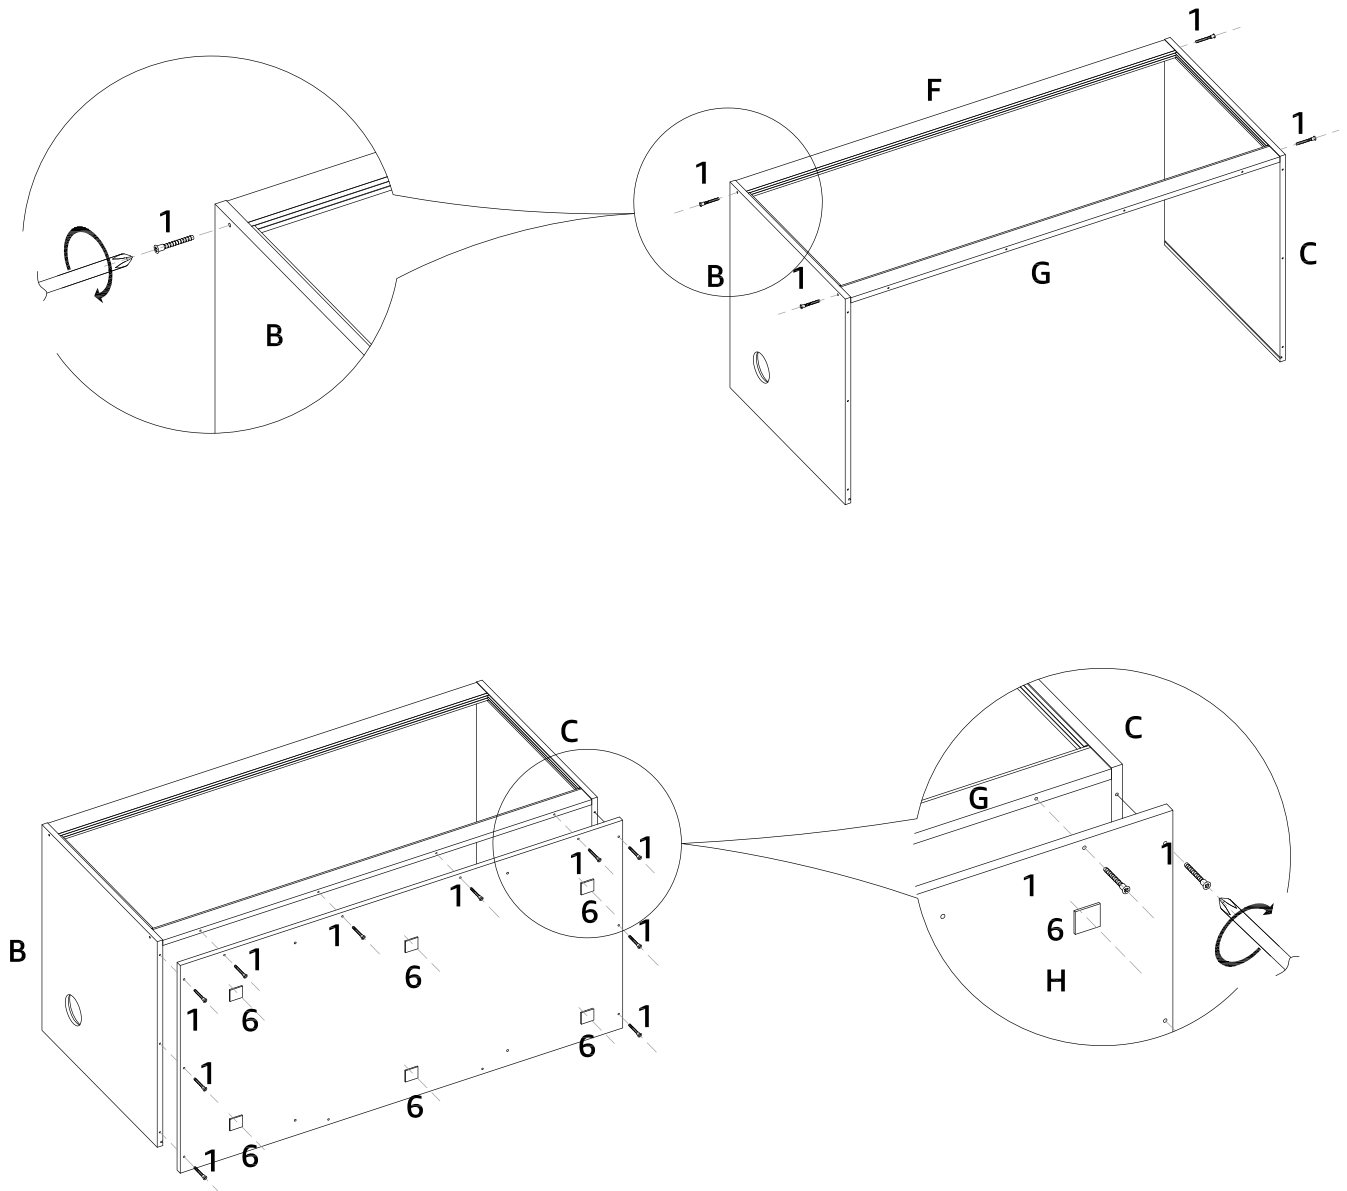


2

Insert the 2 dowels into the board D and put the Board D on bottom panel H with No. 1 screws.

Insert the E plate into the slot.

	
1 x 2 pcs	2 x 4 pcs

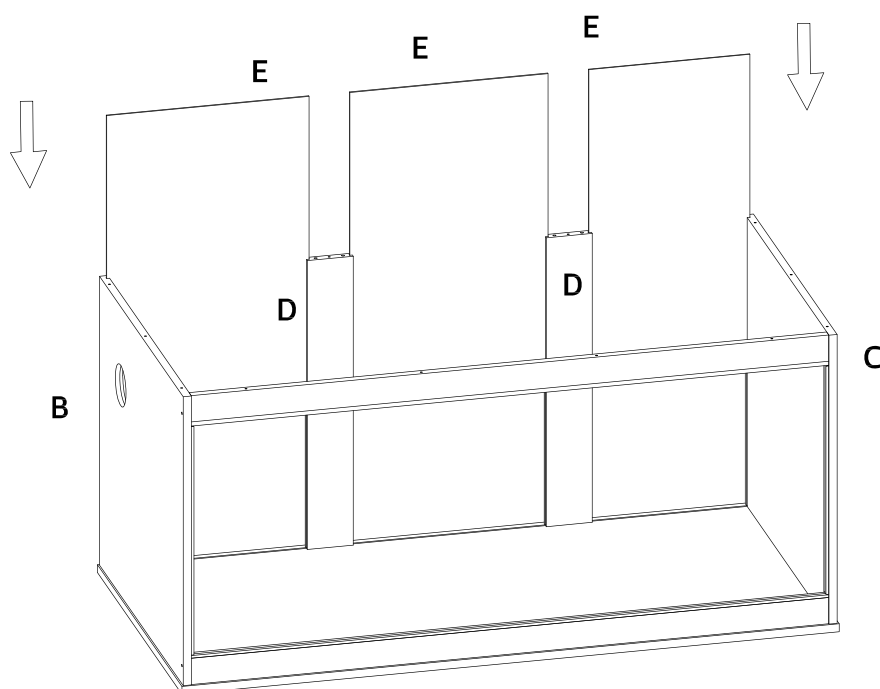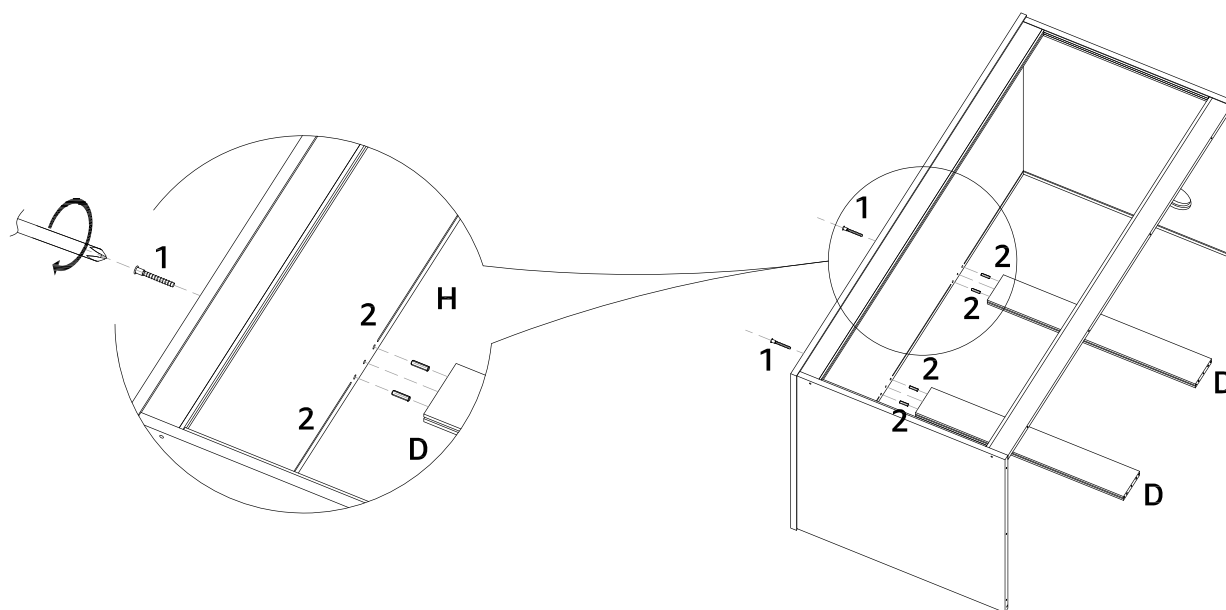


3


Divided part 3 into two parts, fill them into the hole separately in the panel B, and then clasp them.

Assemble top panel A to the two side panels B and C with No.1 screws after inserting dowels 2 into board D.

		
3 x 1 pc	1 x 12 pcs	2 x 4 pcs


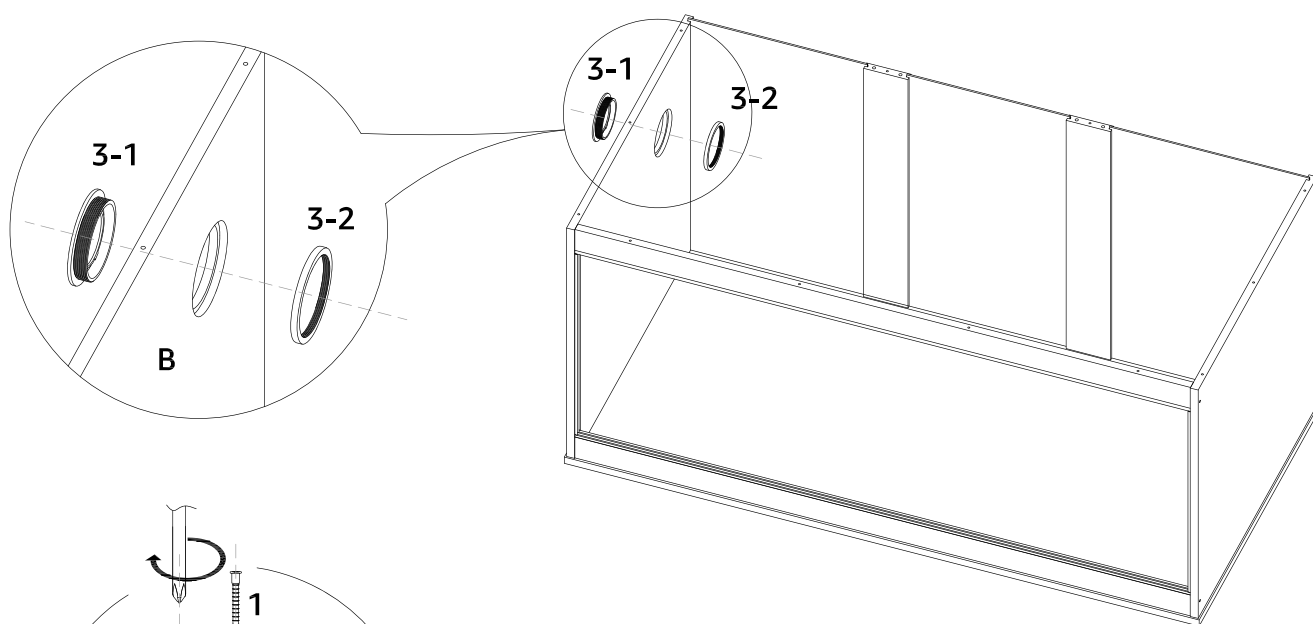


When assembling the Top Panel A, It's recommended that two people work together to make the Back Panel E inserted into the slot of Top Panel A.

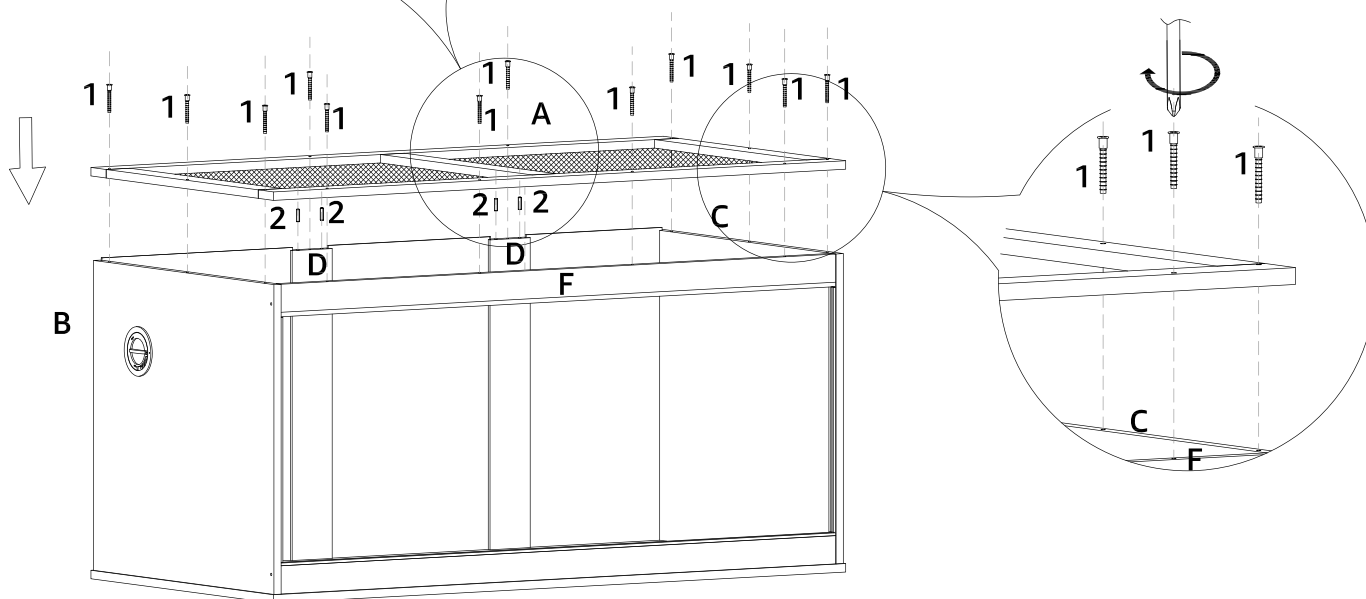


4



Insert panel J into the groove on the upper & bottom Apron (F &G).
Fasten the No. 4 lock to the left door panel J.

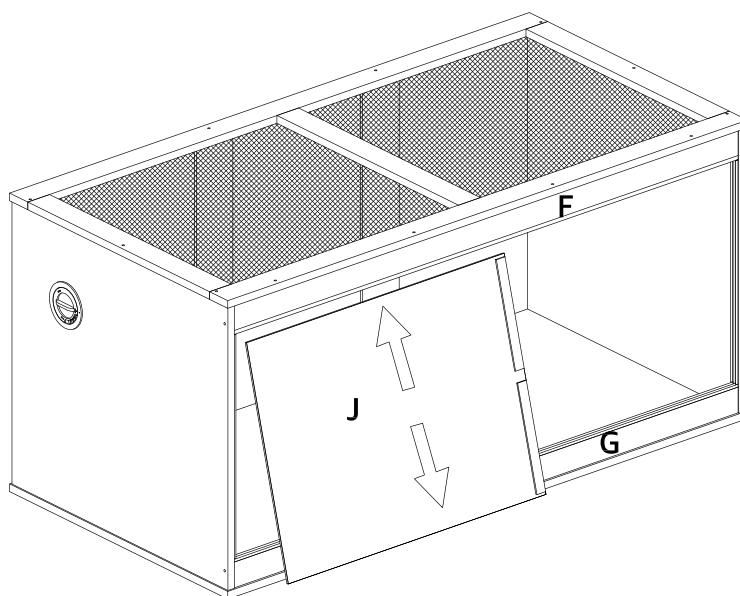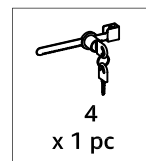

Install right glass door J into the inner track.

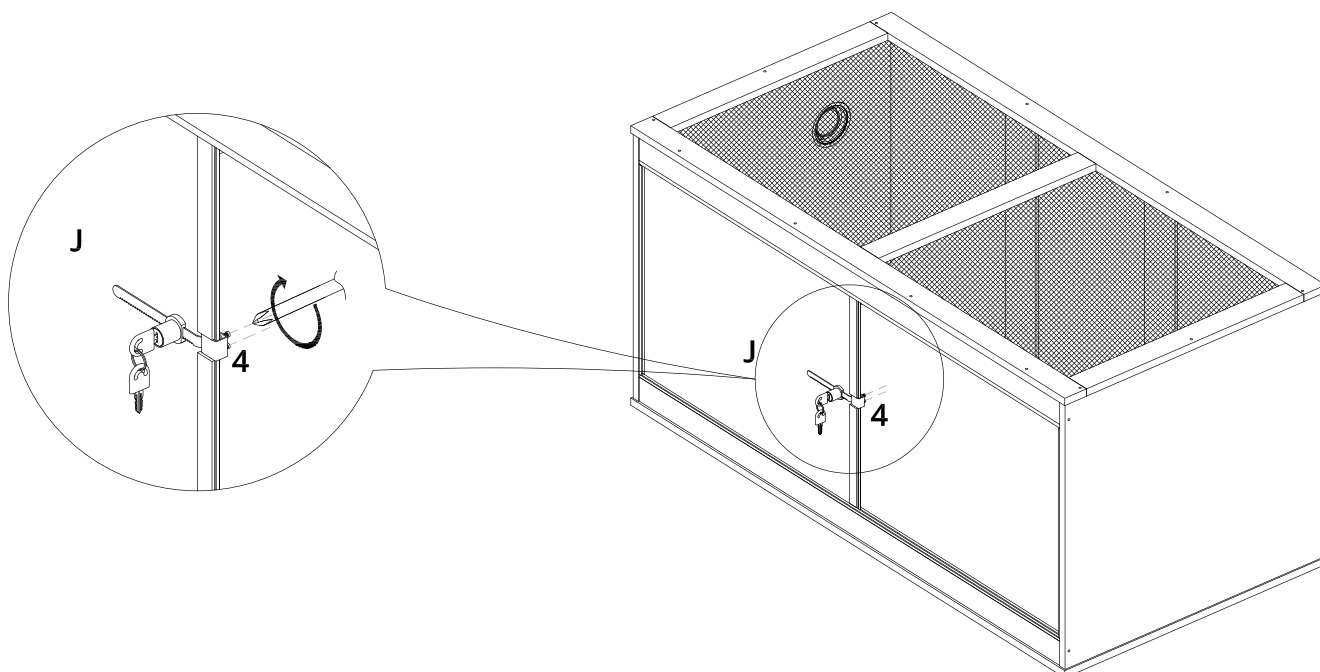

- 5** Push the left door panel J to the end, and then install the right door panel I in the same way.

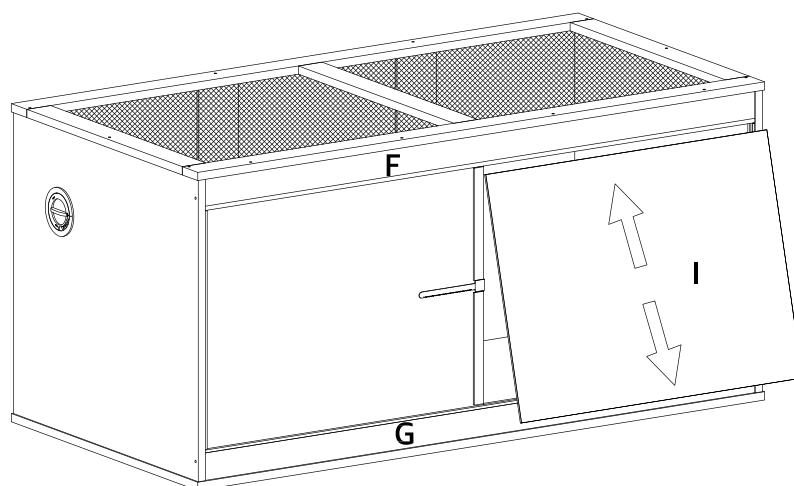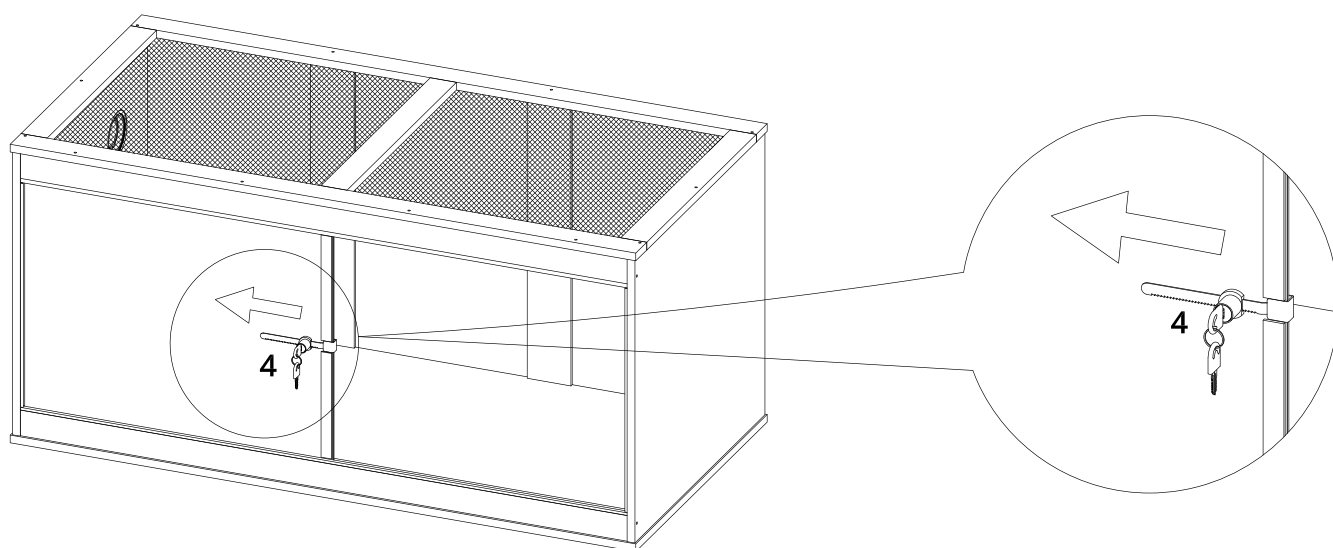

6

Attach accessory No. 5 to the door.

It is recommended to wait 24 hours before using it.

Put the No. 4 lock back in place.

