

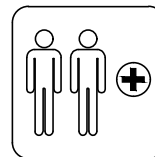
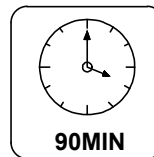
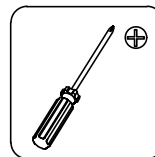
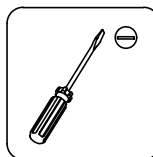



Installation & Assembly

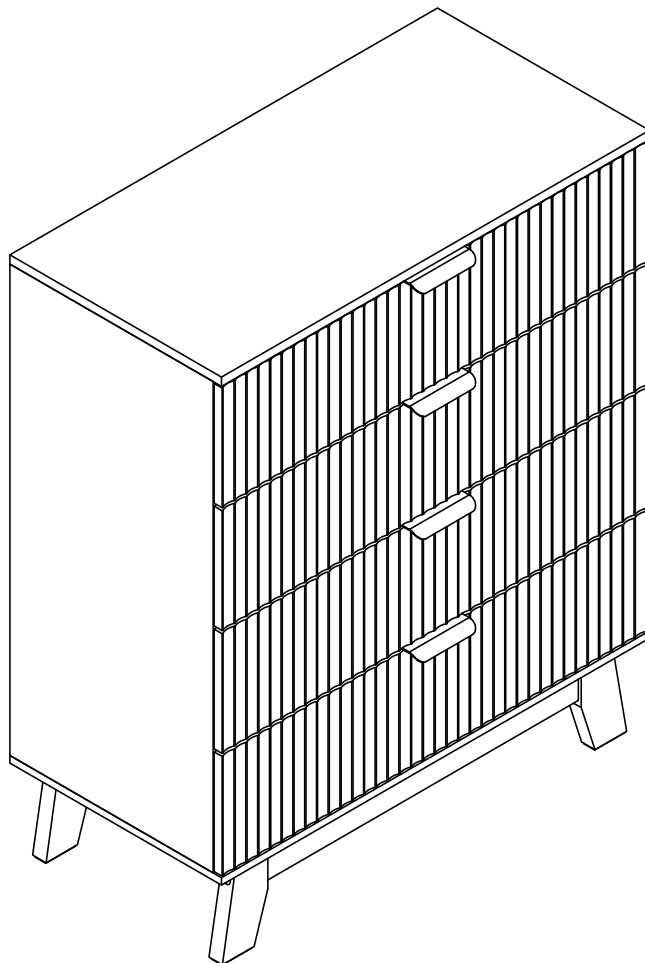


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

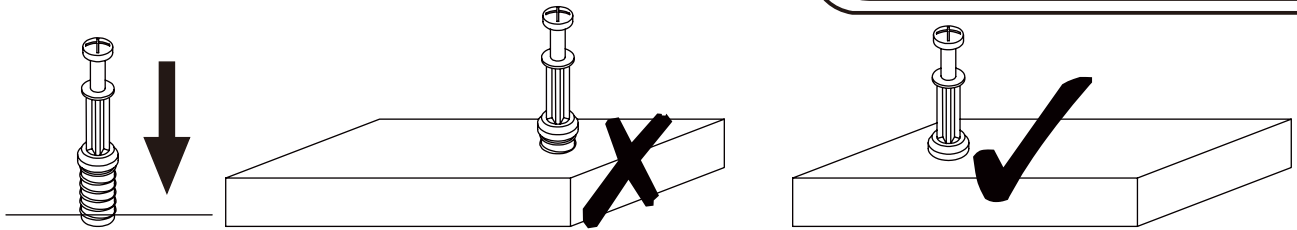


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

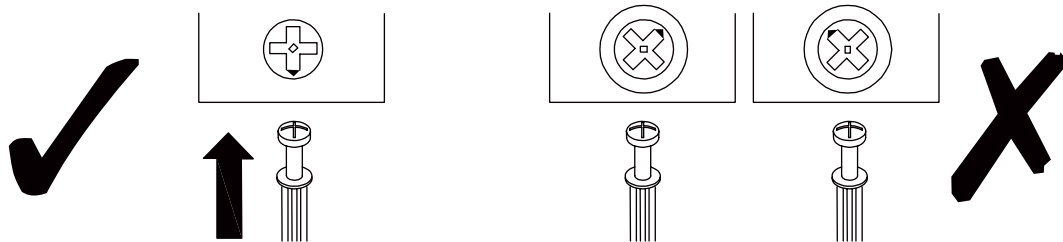









EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.







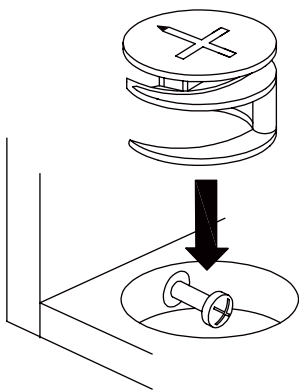




EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.












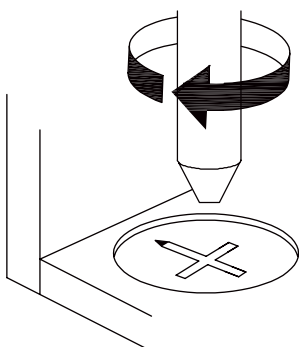


EN_Turn cam lock clockwise to tighten.

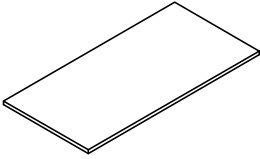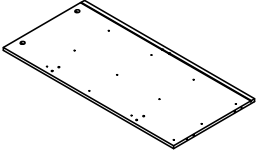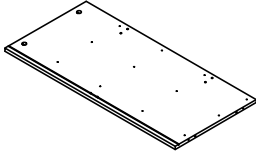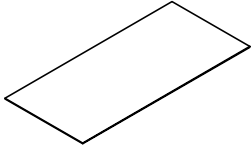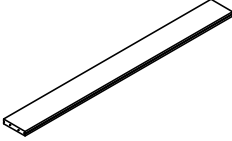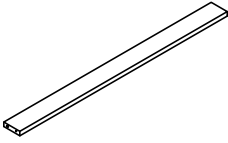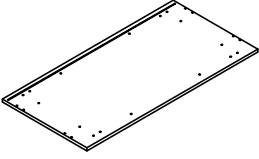NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x2	
5		x1	
6		x2	
7		x1	
8		x2	
9		x2	
10		x2	

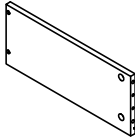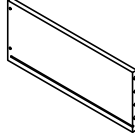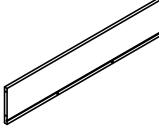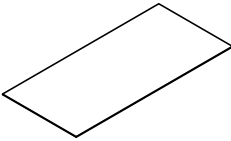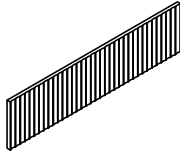NO.	PARTS	QTY	SPARE
11		x2	
12		x4	
13		x4	
14		x4	
15		x4	
16		x8	
17		x4	
	 Hardware Kit	x1	

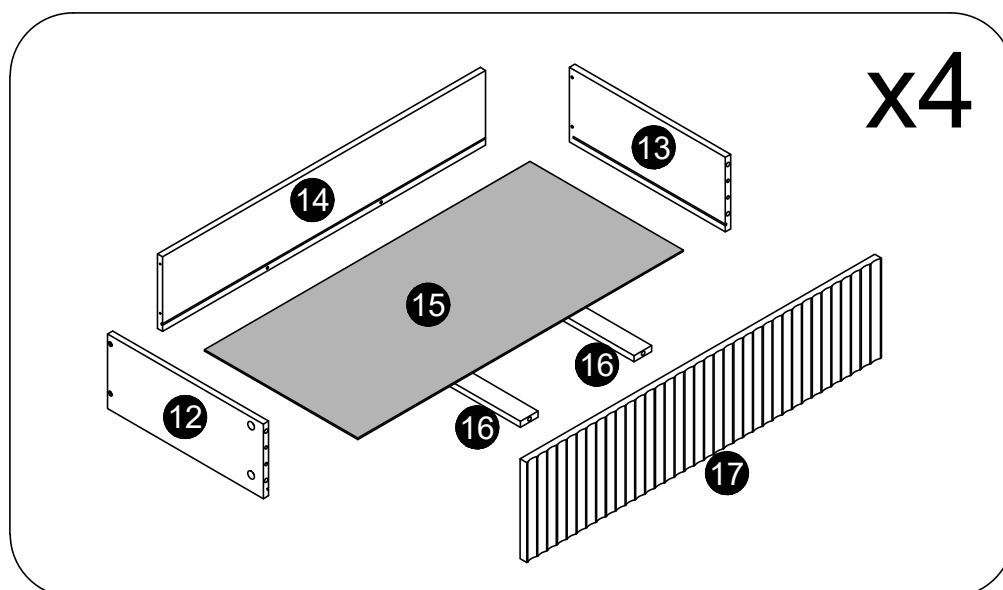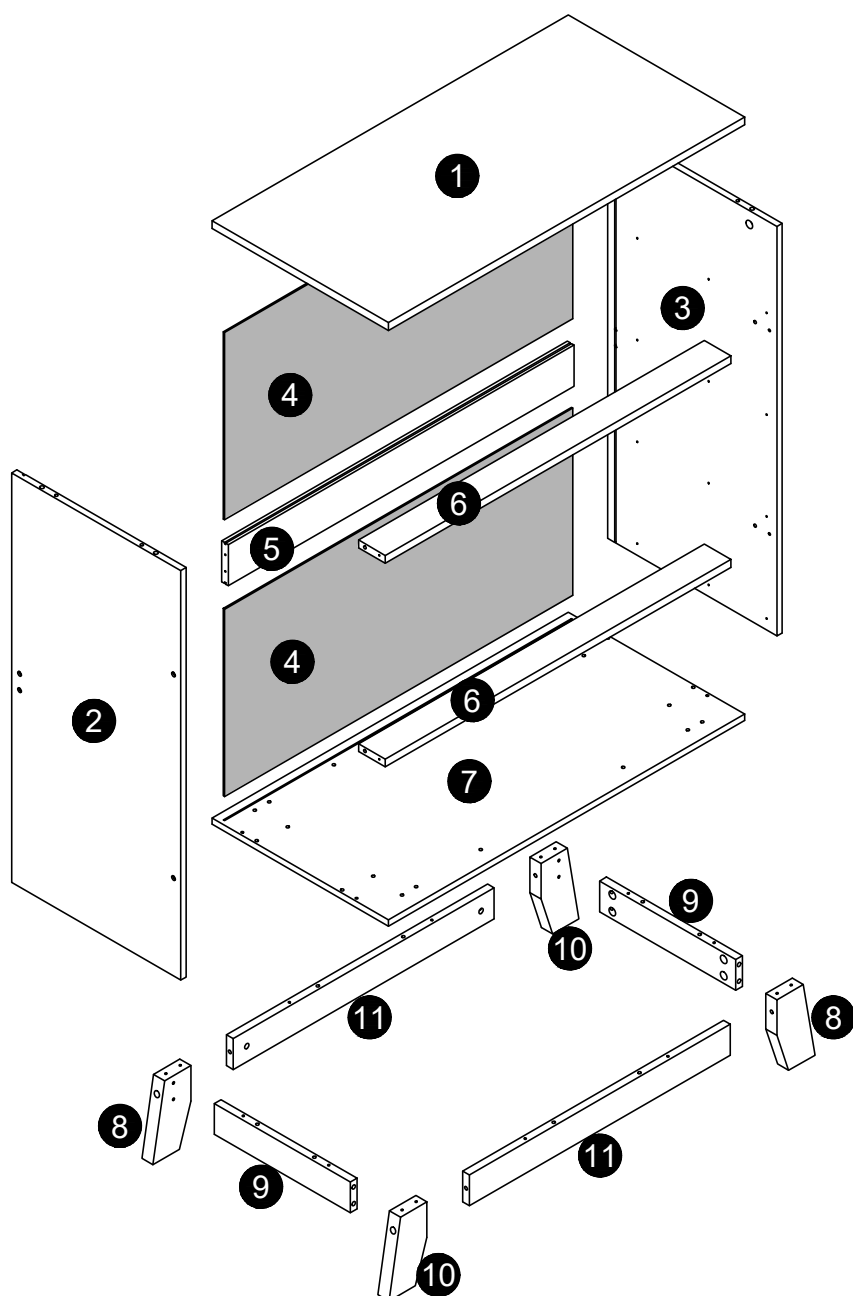

 A x36 Ø6x35mm +3(spare)	 B x36 Ø15x10mm +3(spare)	 C x36 Ø6x30mm +3(spare)	 D x38 Ø4x35mm +3(spare)	 E x48 Ø3.5x12mm +4(spare)	 F x4 F-1 F-2
 G x4	 H x4 Ø6x80mm	 I x16 Ø5x35mm +1(spare)	 J x12 +4(spare)	 K x8 Ø3x16mm +1(spare) K-1 K-2	 L x2 Ø4x14mm L-1 L-2
 M x2 Ø6x30mm	 N x4				
 CL x4 L350mm	 CR x4 L350mm	 DL x4 L350mm	 DR x4 L350mm		




x4



A x24

B x24


C x16

D x24

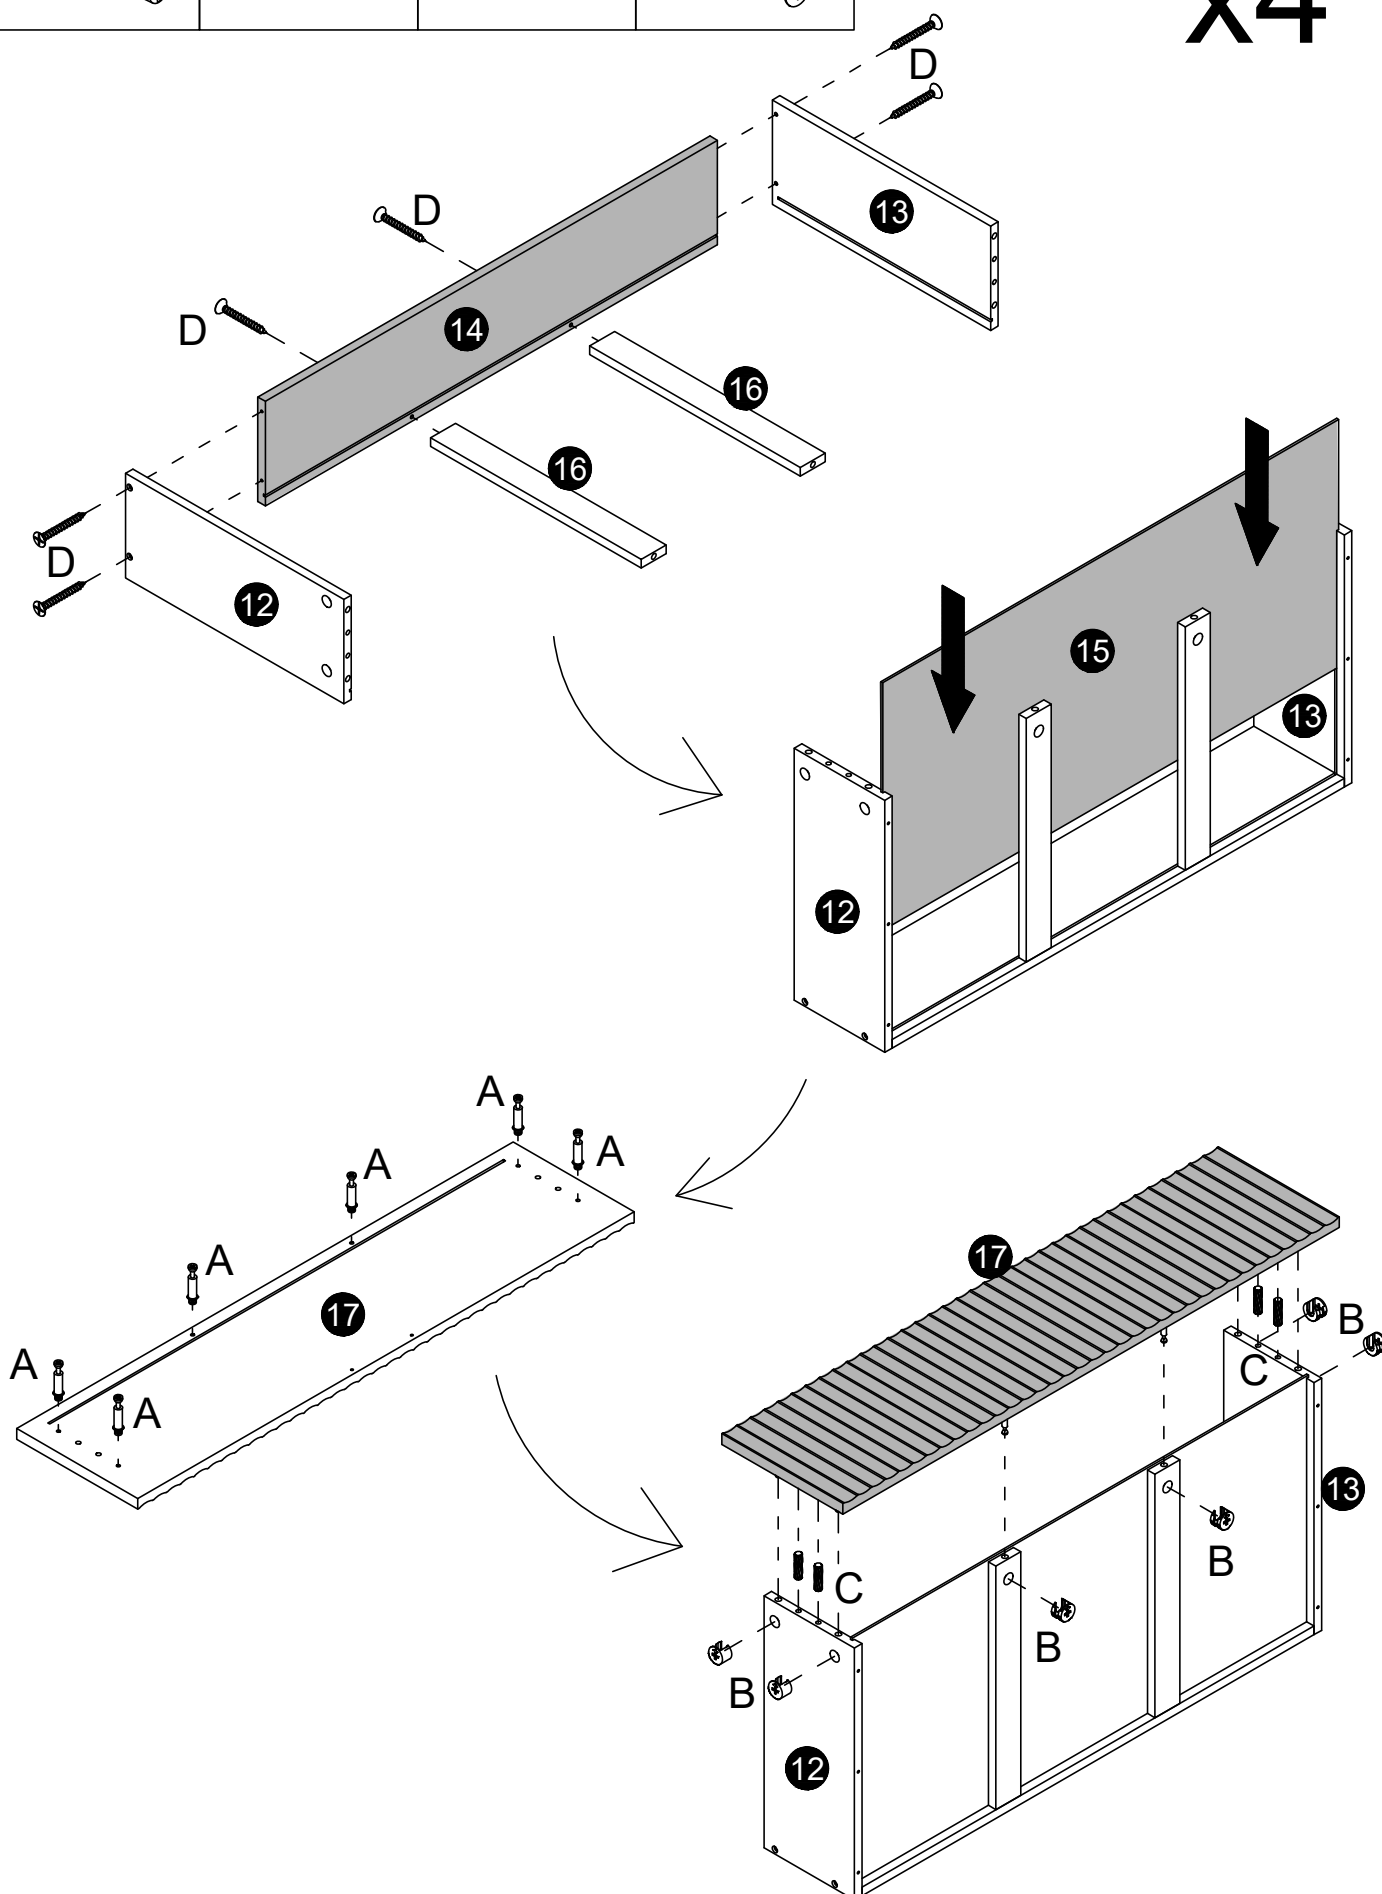

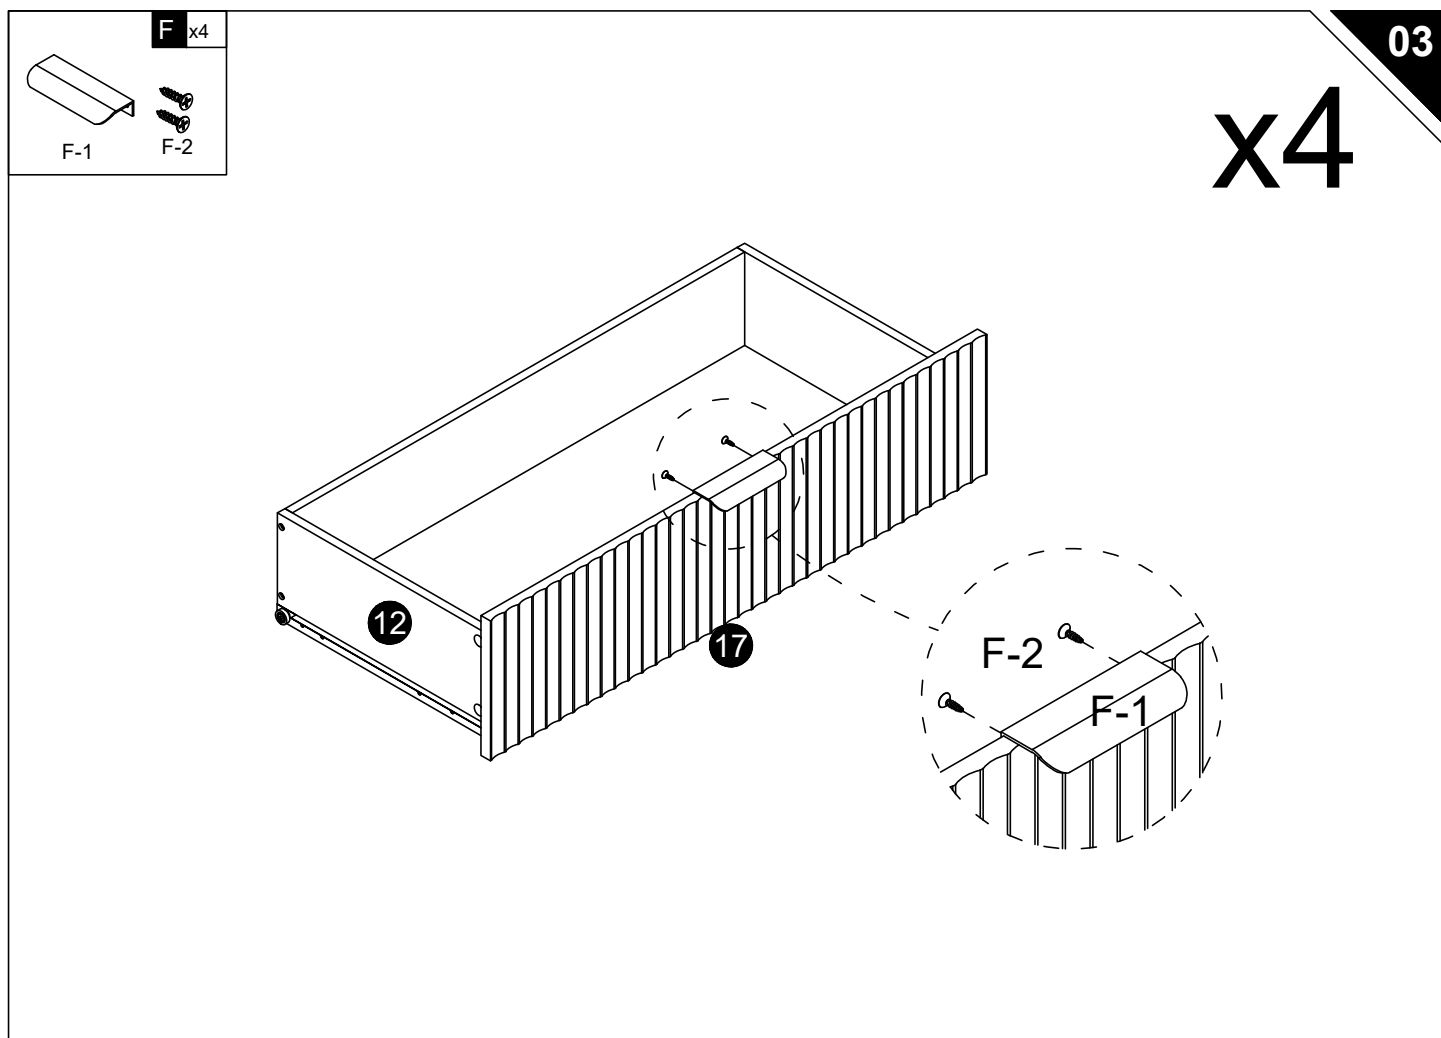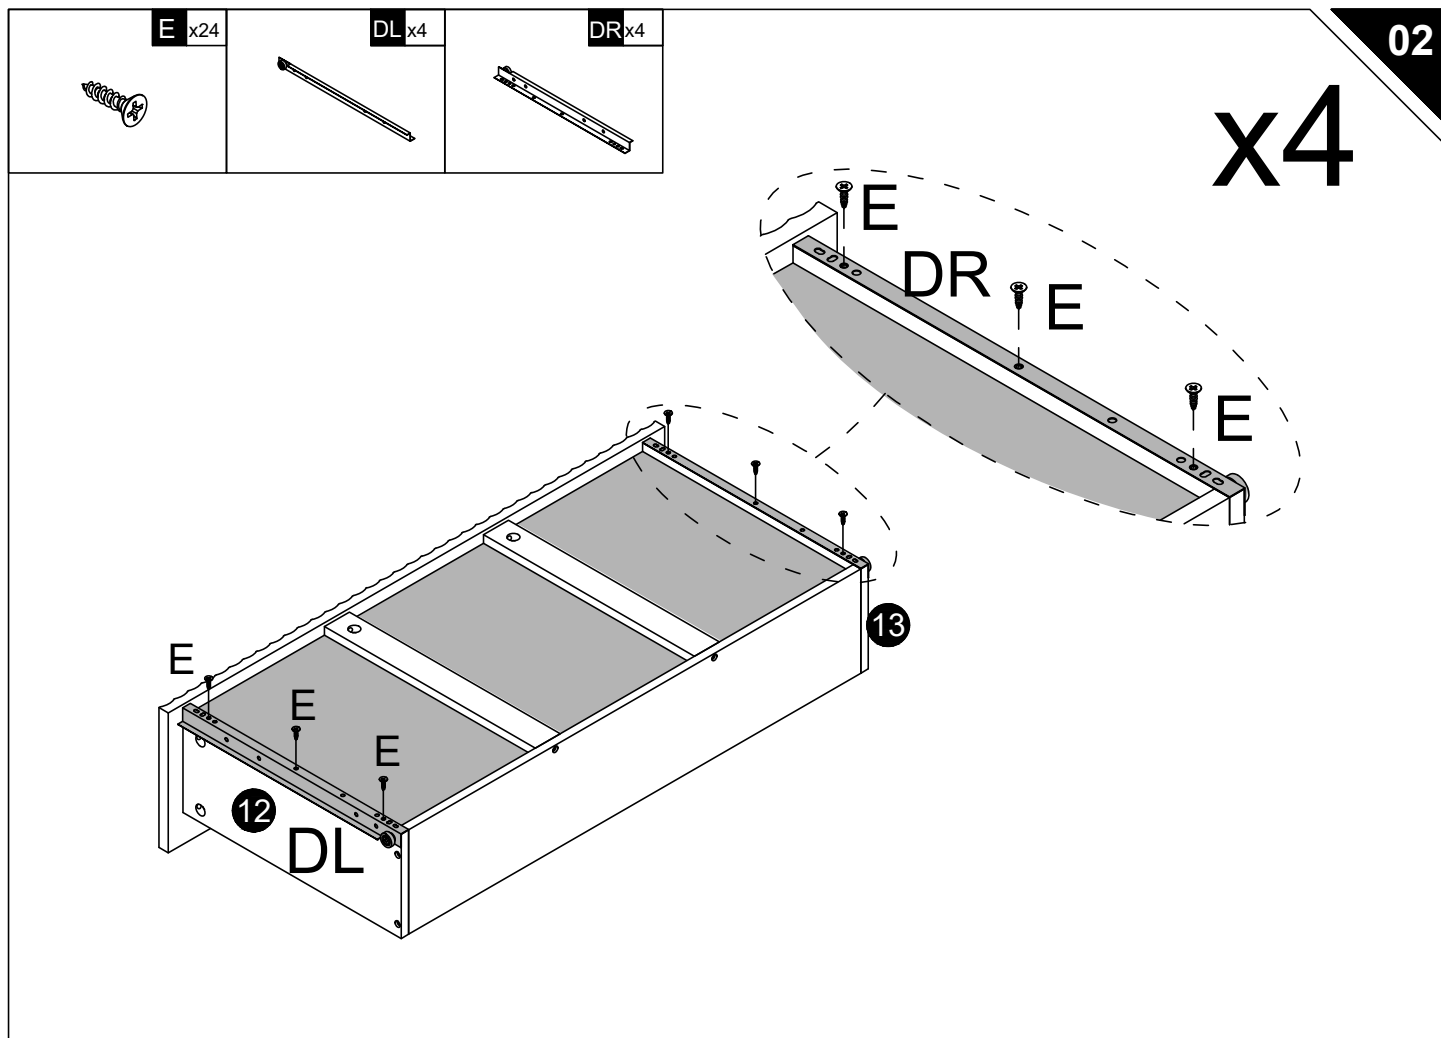


A x8



04

x2

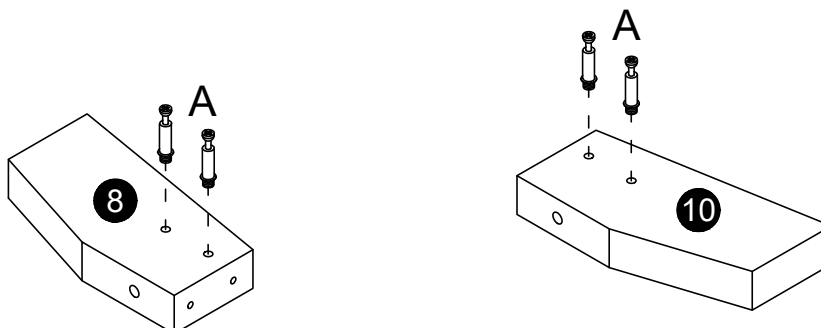


B x8



05

x2



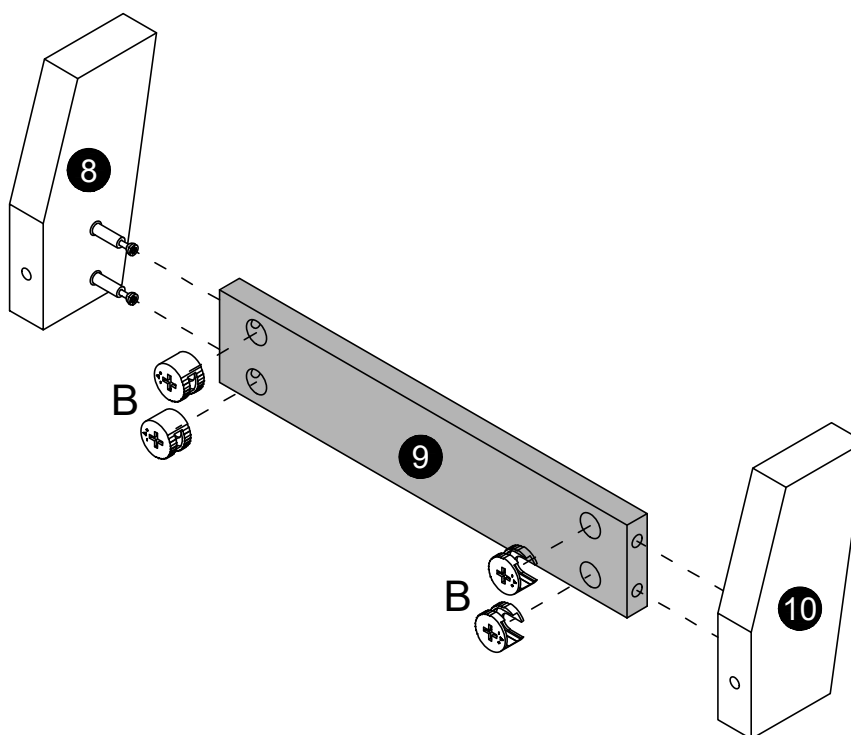


06

G x4

H x4



N x4

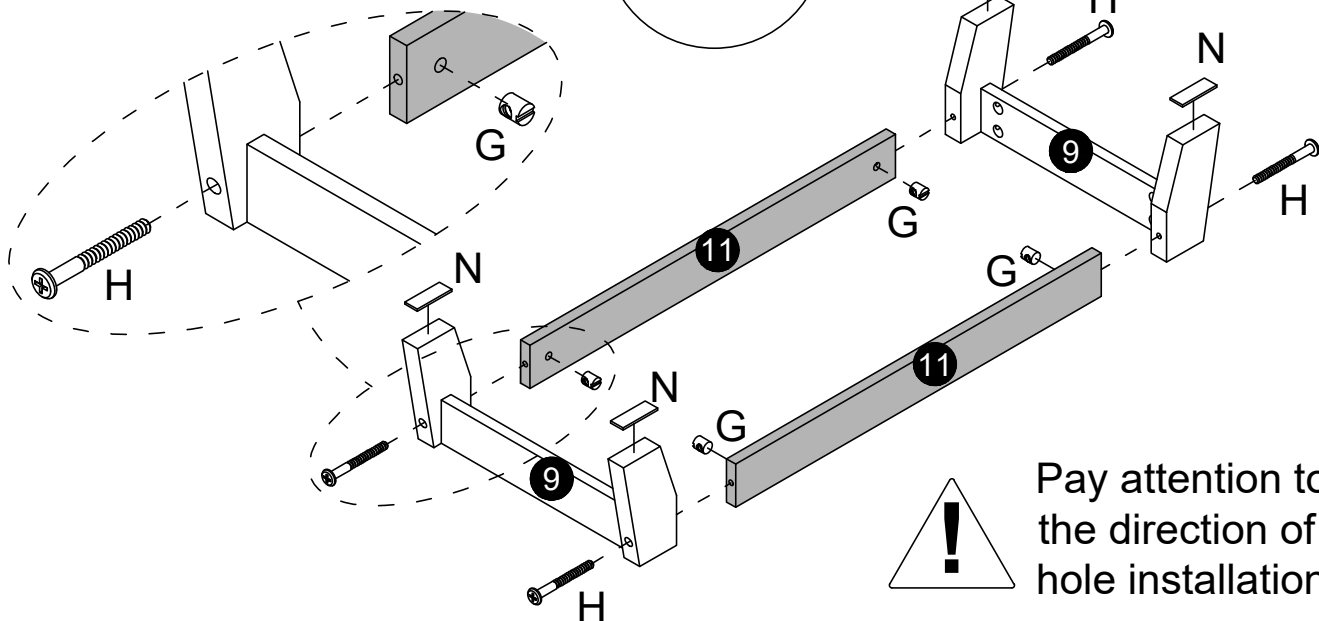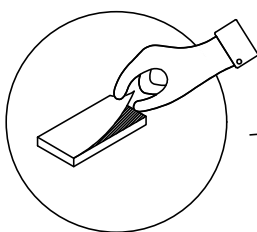

07

C x8



I x16

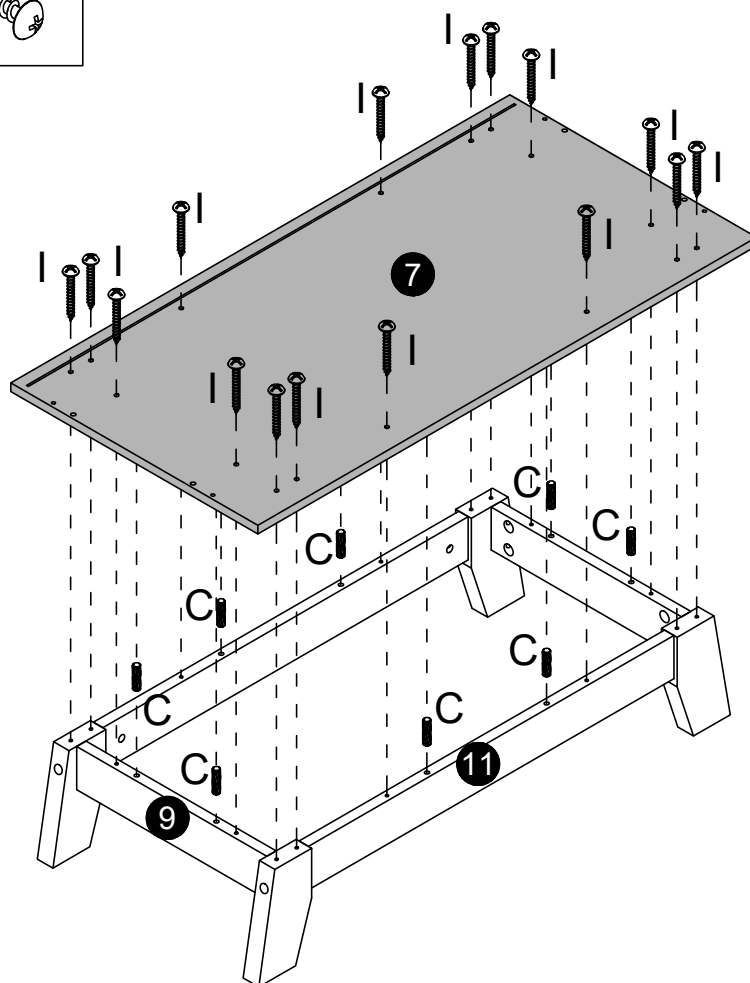

E x12

CL x4


08

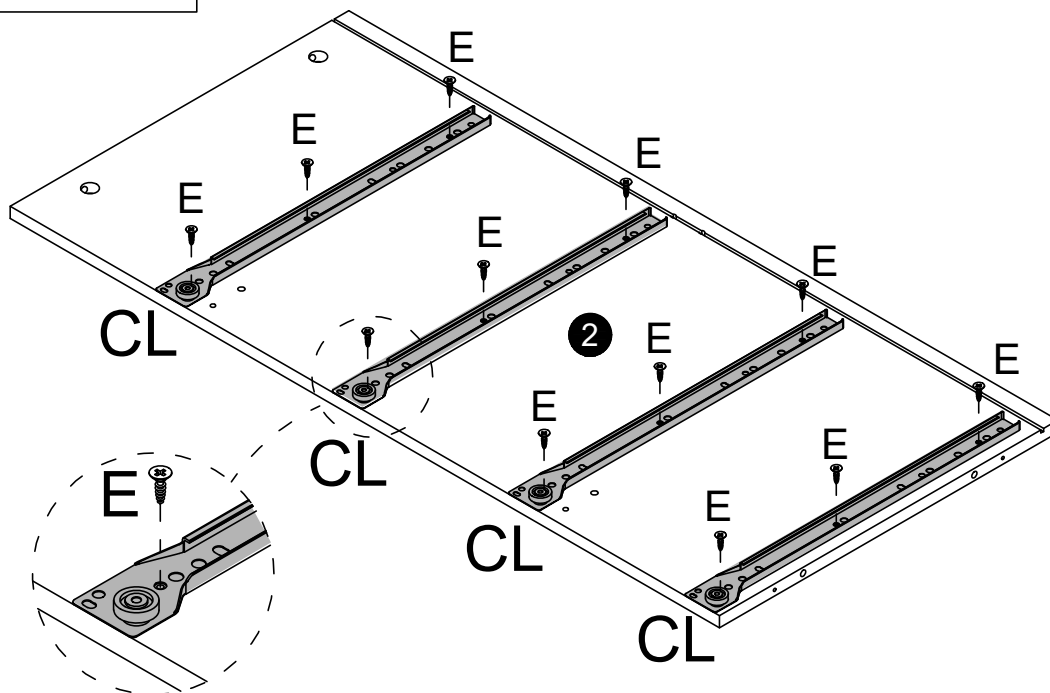

E x12



CR x4

09

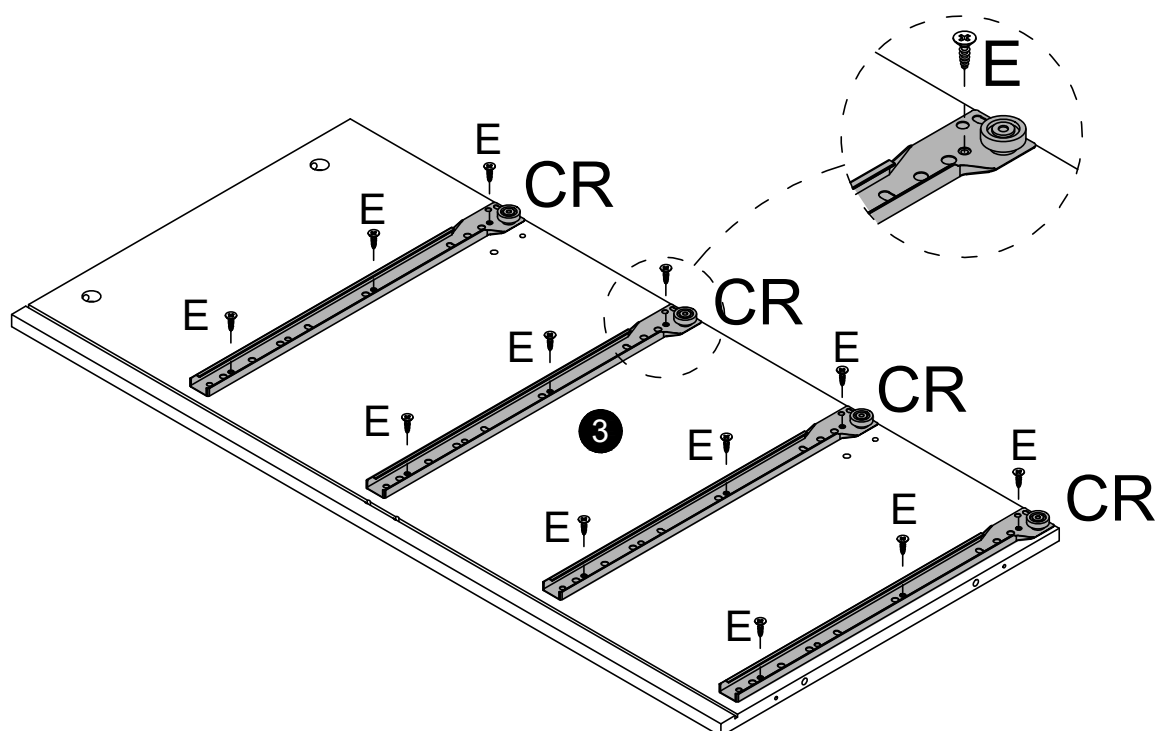

C x4


D x8

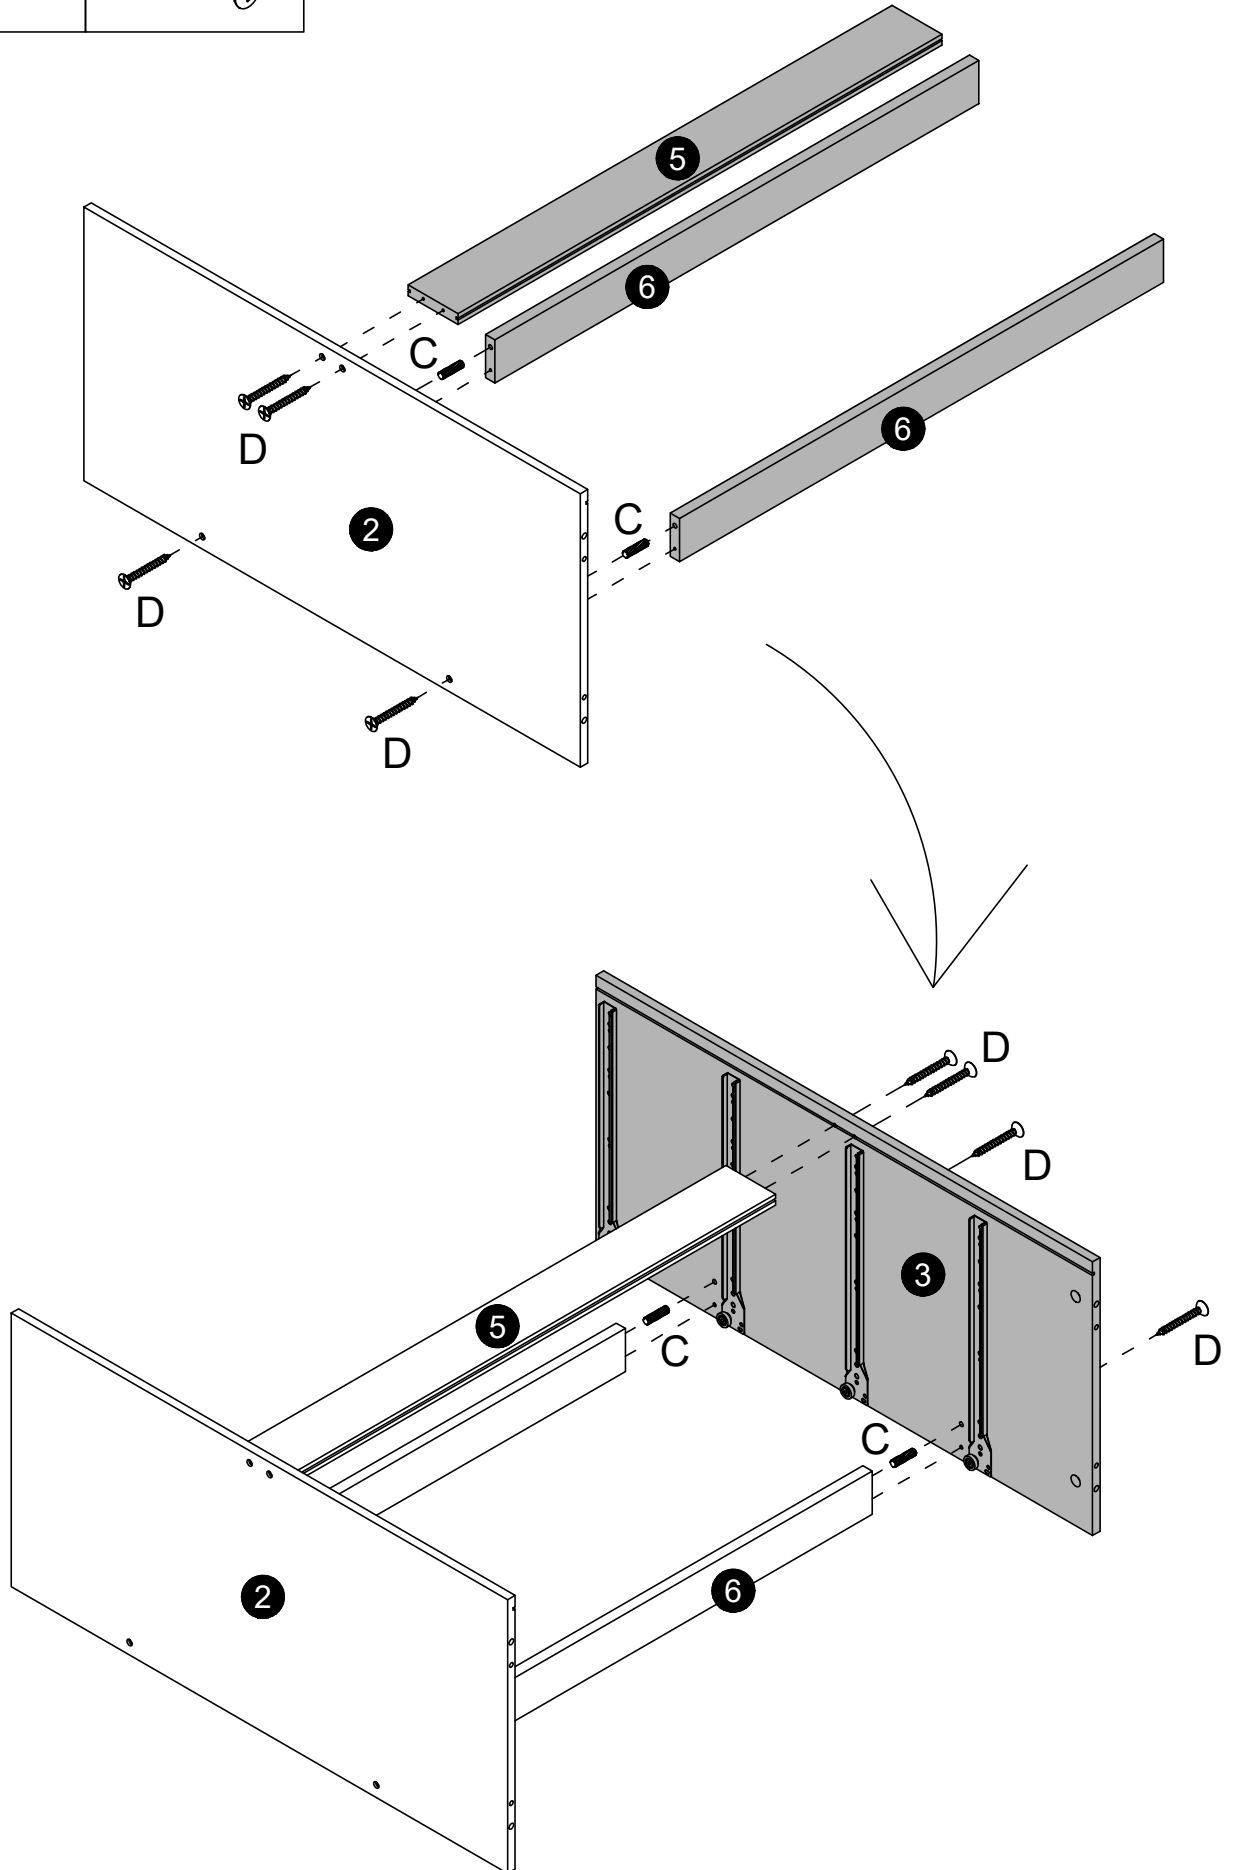


C x4




11

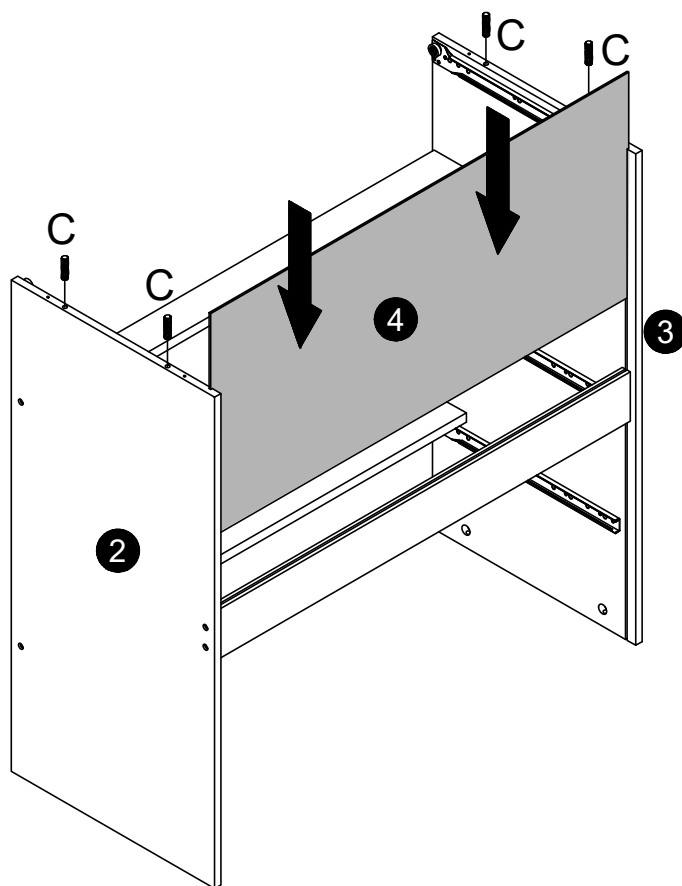

D x4




12

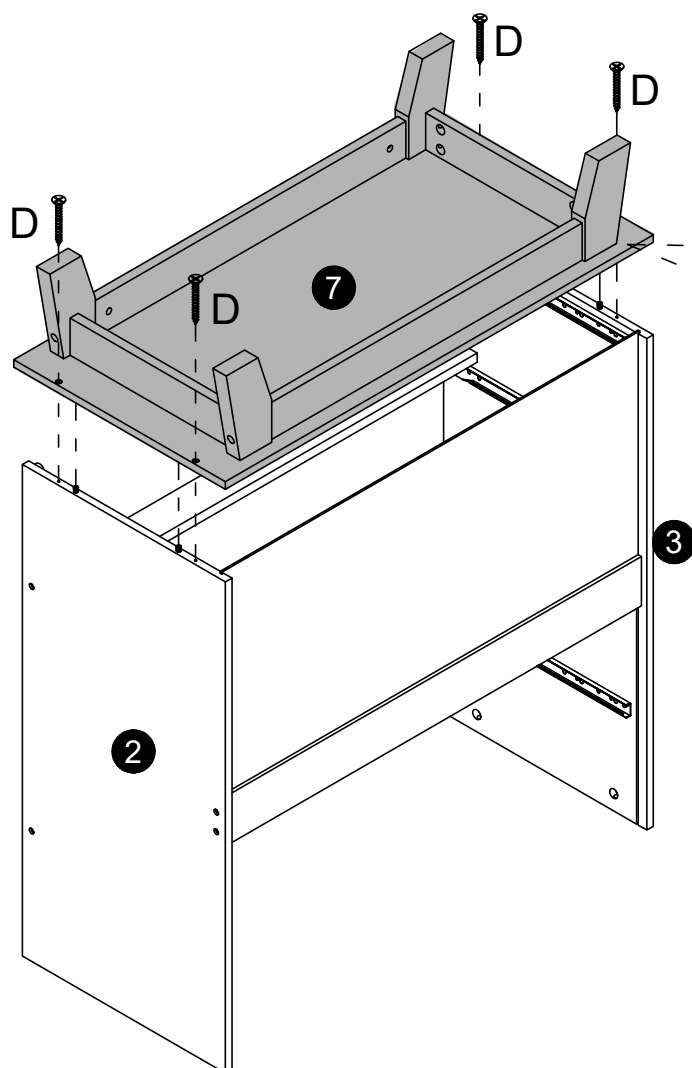


C x4




13

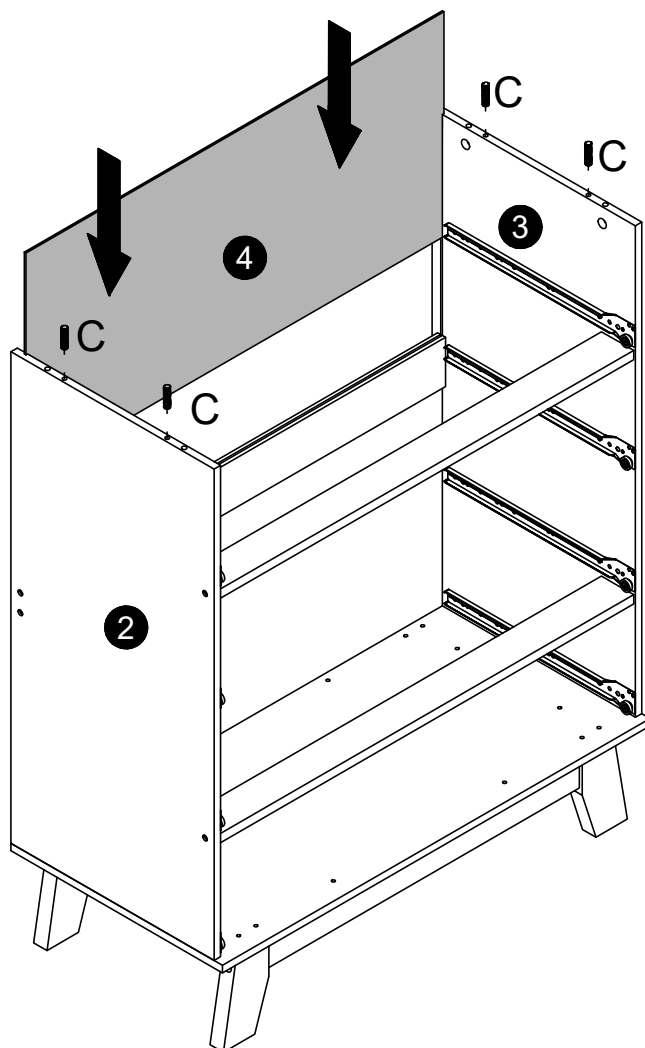

A x4




14

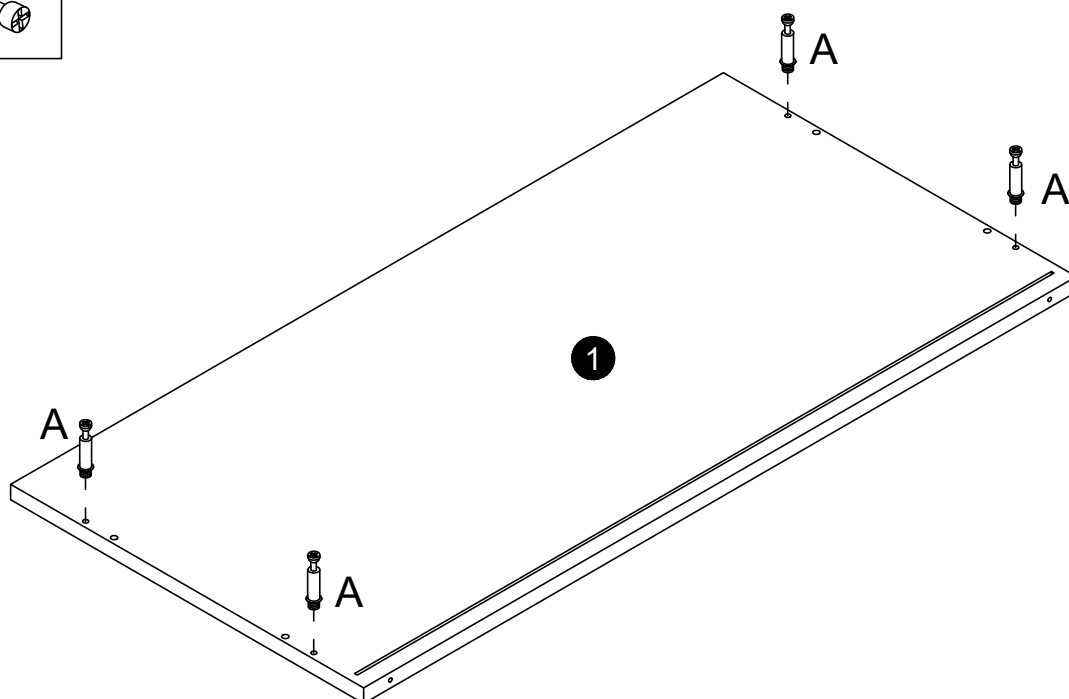

B x4

15

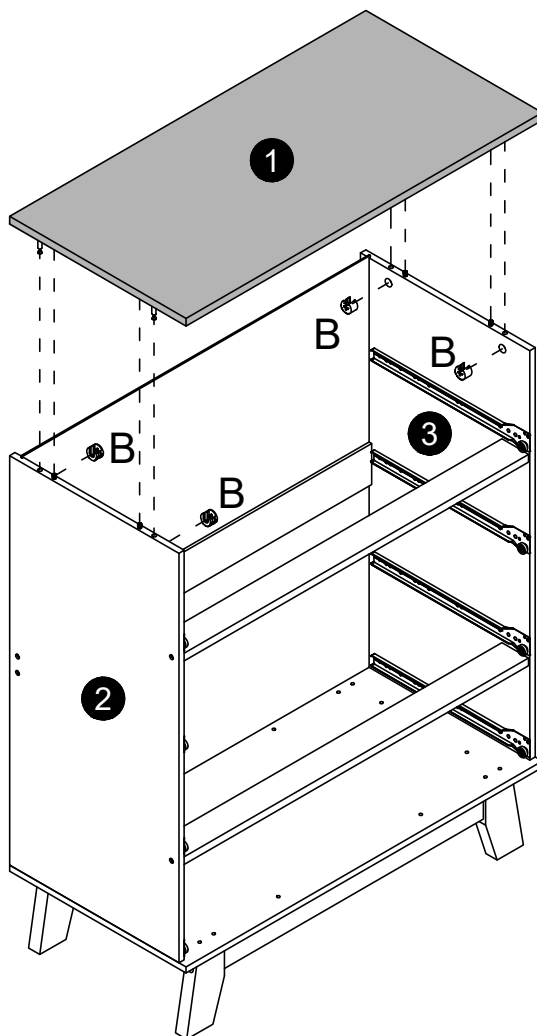

K x8



16



K-1




K-2


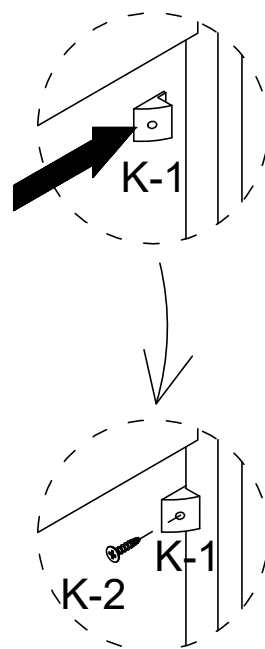
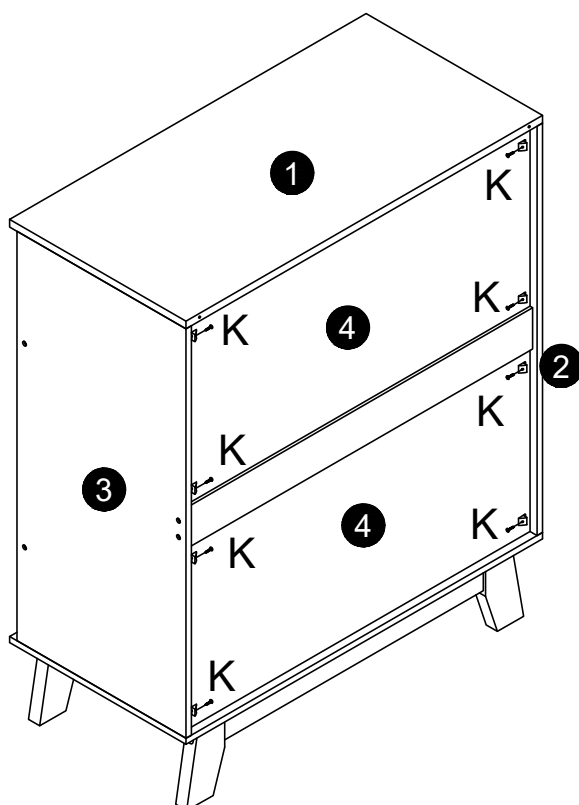





(1)

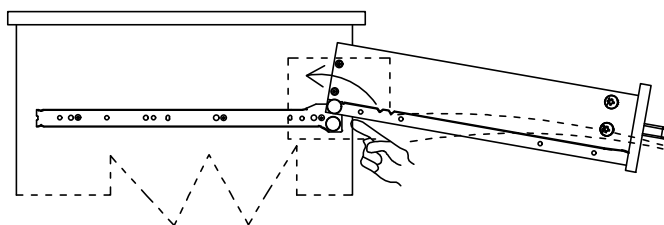

(2)

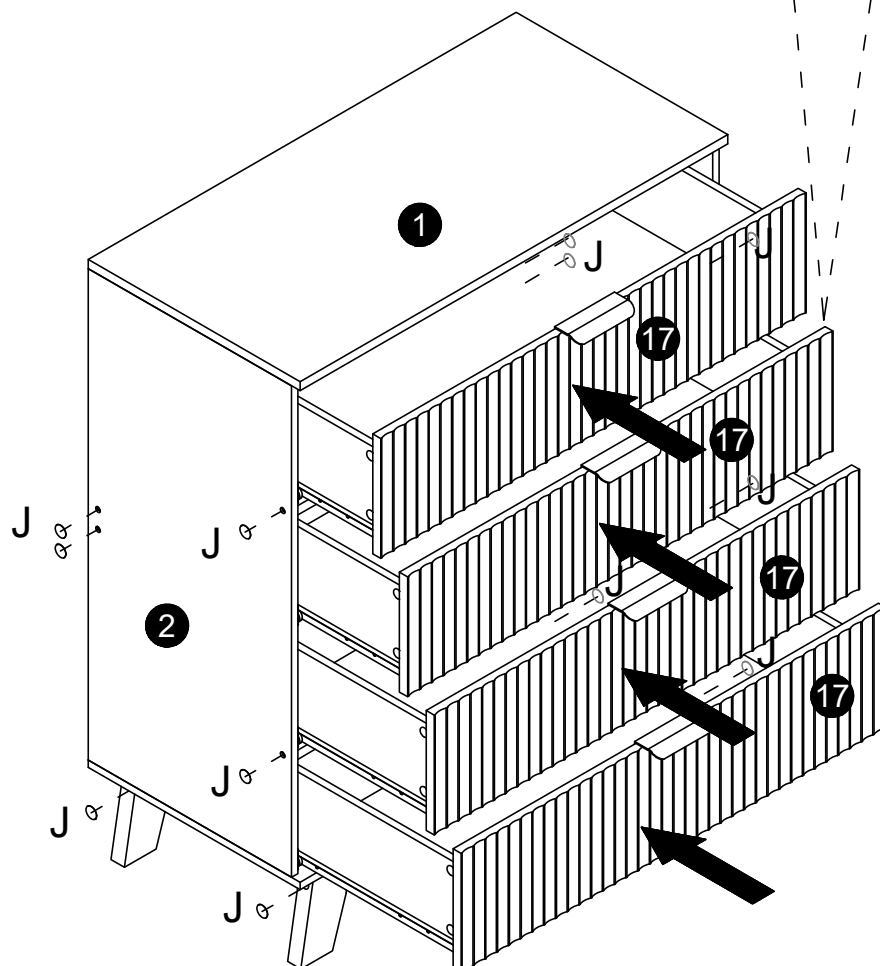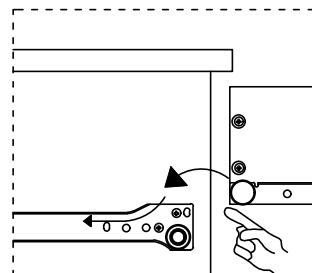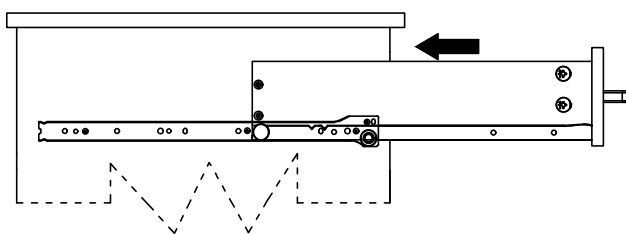


D x2



L x2



M x2



L-1

L-2
(1)x2

First fix the anti-rewind screw in the reserved hole of the product.


WALL

M

(4)x2

Then, put the expansion bolt into the hole

WALL

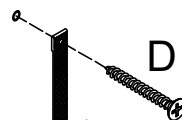

(5)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.


WALL

+
drilling hole
Ø6x30mm

(3)x2



Then use a tape drill to make holes in the wall that are suitable for the product screws.

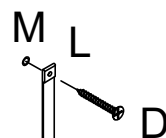

WALL

