MODEL: S1423S-XX

US Version: 2.0


INSTALLATION GUIDE




WIDESPREAD BATHROOM SINK FAUCET

CUSTOMER CARE LINE: +1-866-203-0866


TOOLS RECOMMENDED

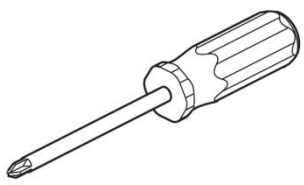

Philips Screwdriver

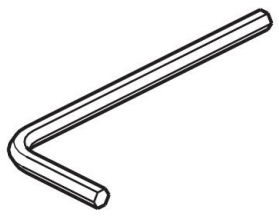

Allen Wrench

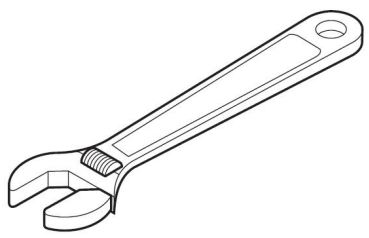

Adjustable Wrench



Channel Locks



Thread Sealant

INSTALLATION STEPS

1. BEFORE PROCEEDING



WARNING: Before beginning installation or operation, read all instructions carefully. If you are unsure about installing this product, consult a licensed professional. This product should be installed in compliance with all applicable local and national plumbing and building codes. Professional assistance is strongly recommended.

2. SHUT OFF WATER SUPPLY

Locate the water supply inlets and shut off the corresponding water supply valves, typically found near the water meter. If replacing an existing unit, remove the old unit and thoroughly clean the mounting surface.


3. CHECKING THE CONTENTS OF THE BOX

Upon opening the box, check to ensure that all the following items are included.
If any of these items are missing, please contact SUMERAIN consumer service by email to: support@sumerain.com


4. INSTALLATION HOLES INSPECTION

Verify that the hole sizes and positions in the wall are correct, the diameter of mounting hole recommend “A” and “C” , the max thickness of deck should be “D”.

Code	Dimensions - Inch	Dimensions - mm
A	4″	102
B	Min:1-1/8″ Max:1-1/4″	Min:28 Max:32
C	Min:7/8″ Max:1-1/4″	Min:22 Max:32

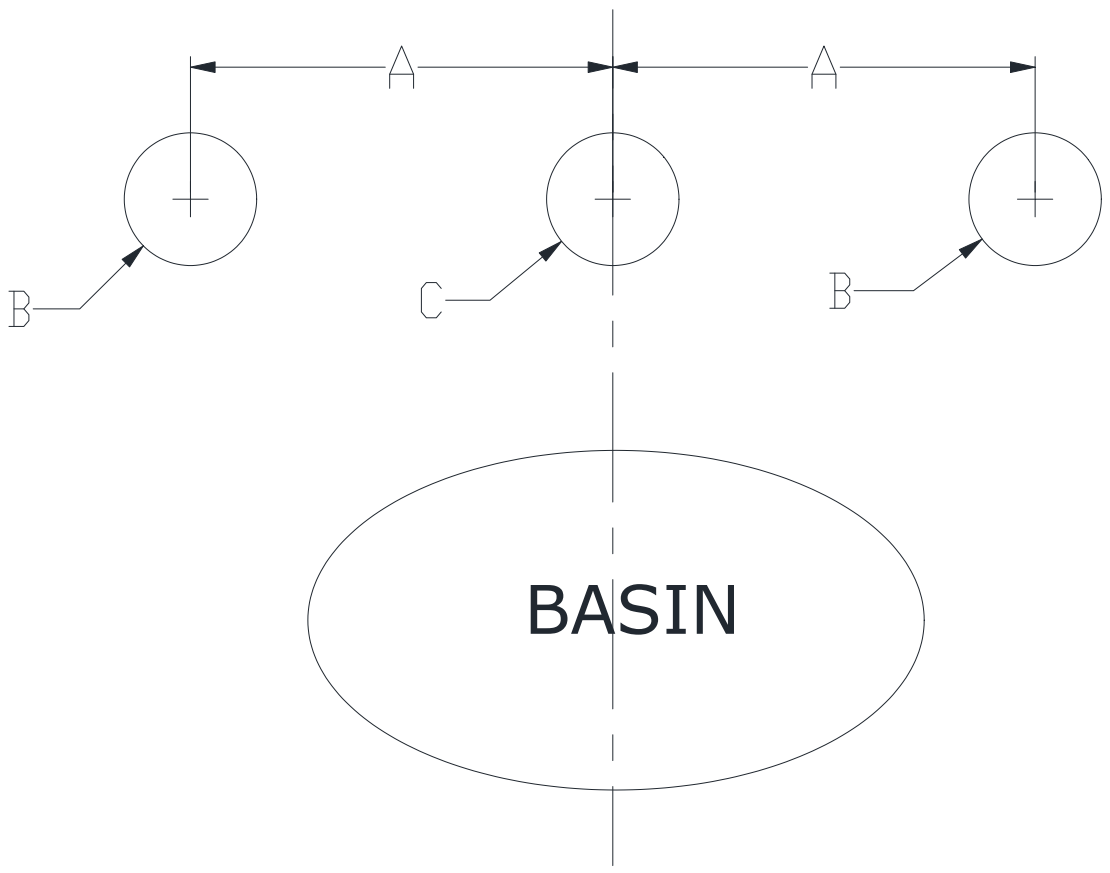


Code	Dimensions - Inch	Dimensions - mm
D	Max:1-1/2″	Max:35

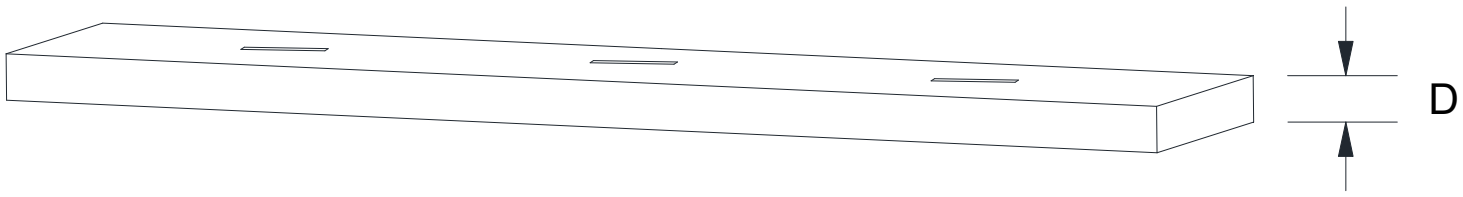


5. INSTALLATION


5.1 Open the shut-off valves to flush the hot and cold water supply pipes before connecting them to the faucet. Allow the water to run for 3–5 minutes to flush out dirt and debris. Shut off the water supply again when finished.

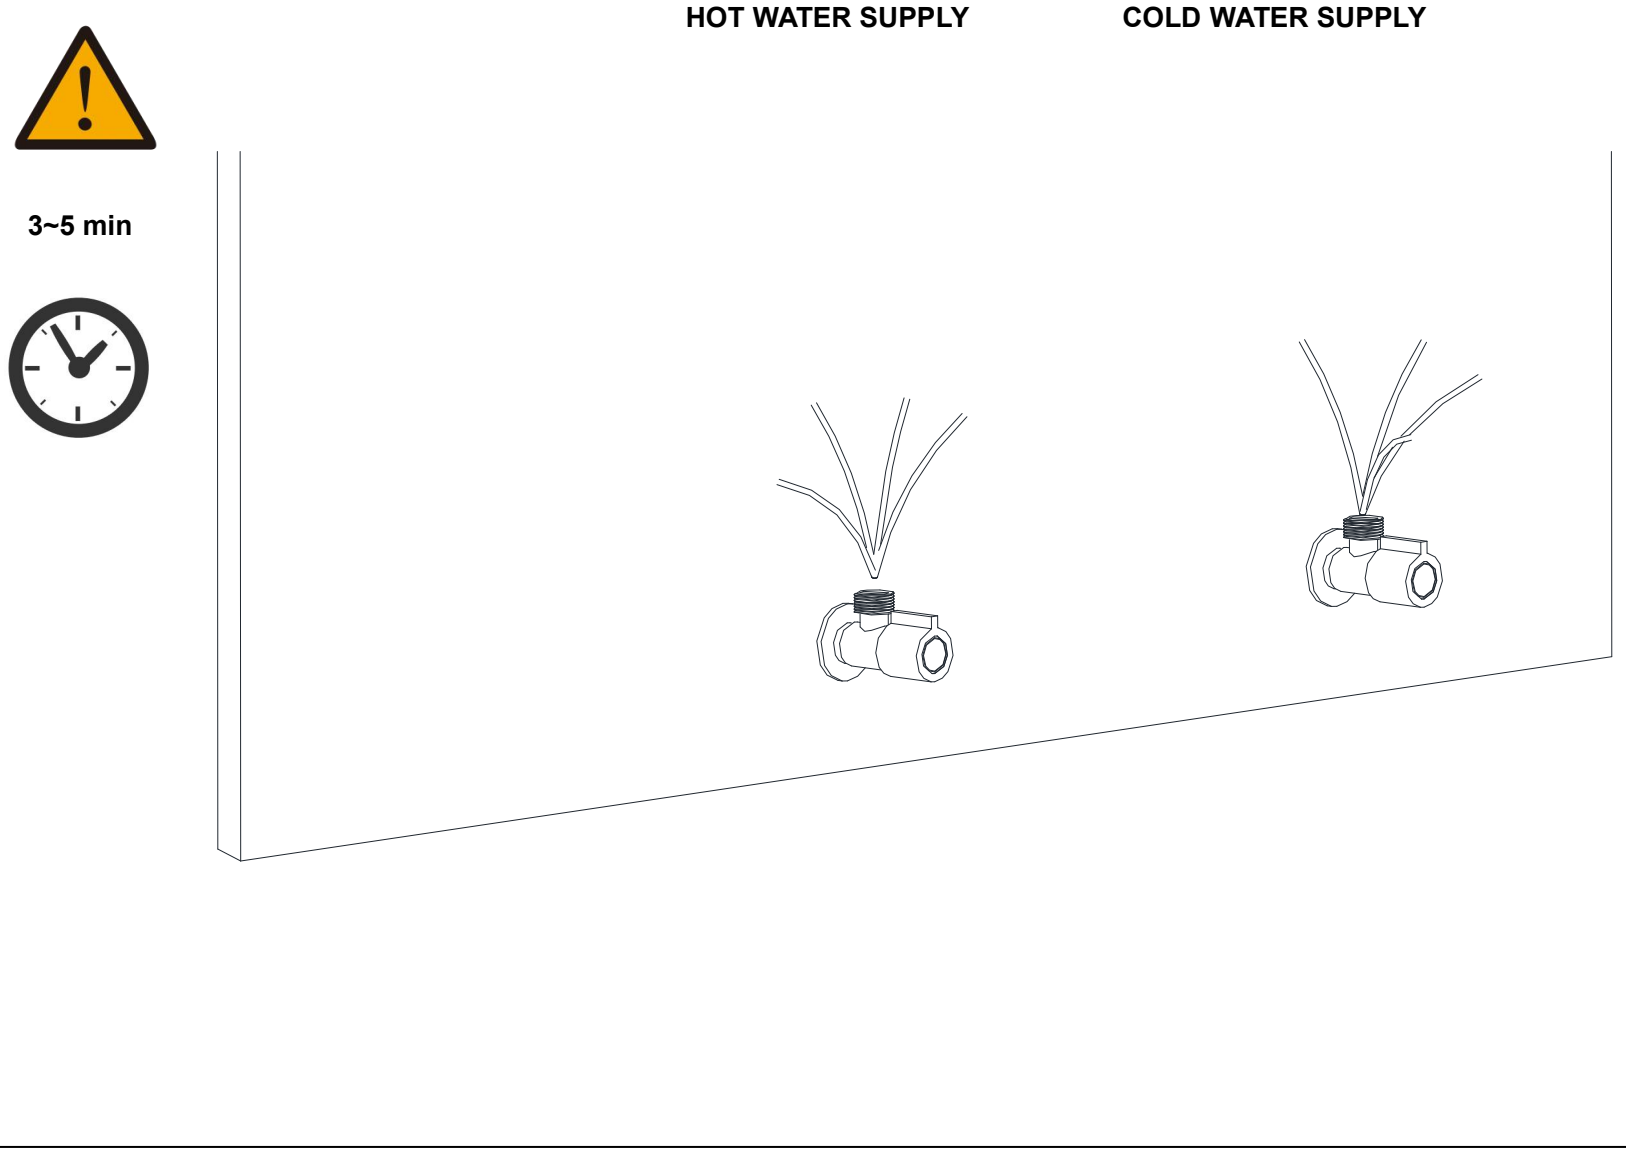


5.2 Remove the mounting hardware from the mounting shank.

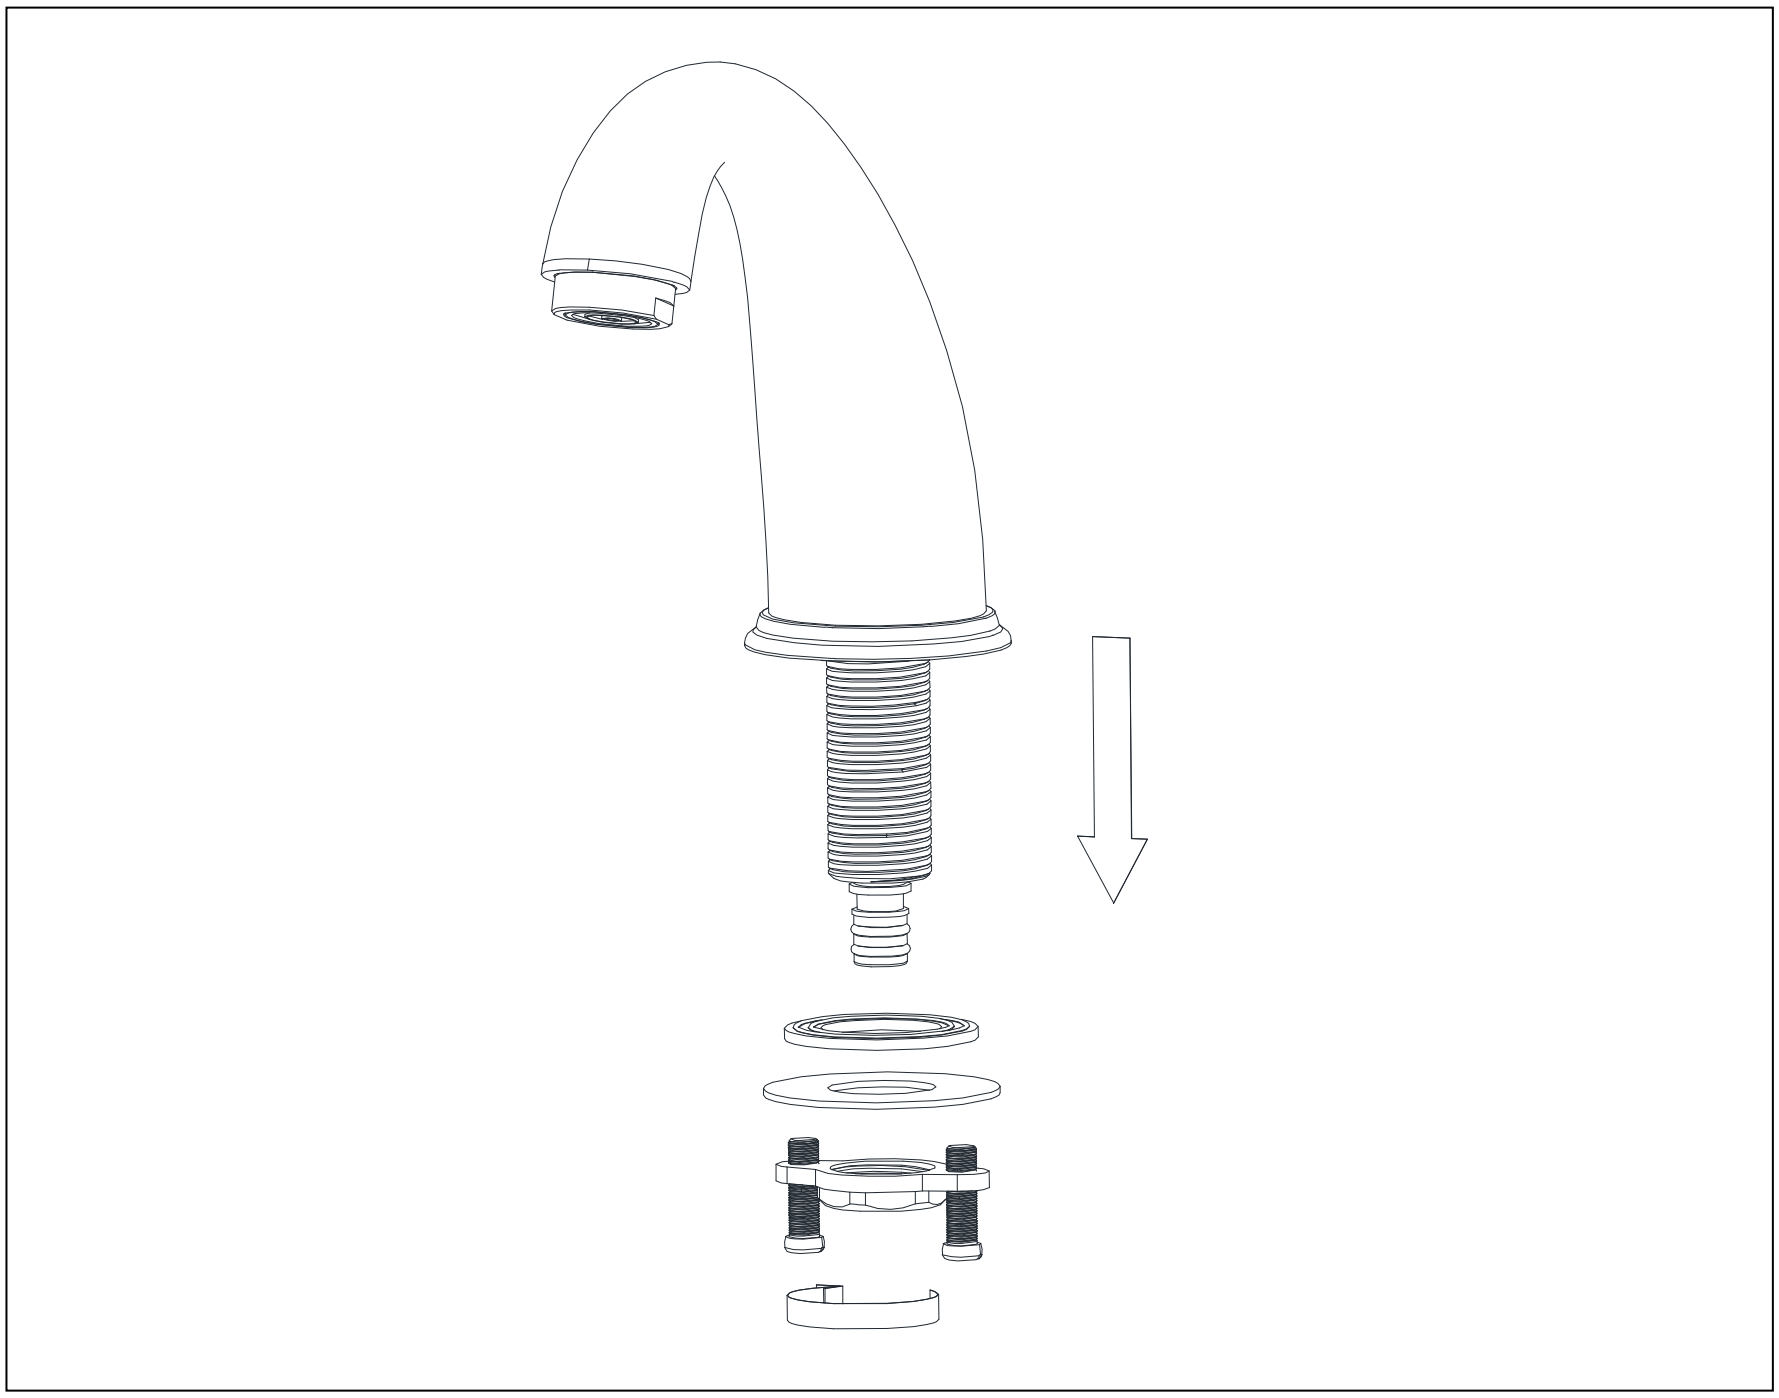


5.3 Make certain the seal (O-ring) is properly seated in the bottom recess of the faucet body. Insert the shank through the mounting hole of the deck. Seat the faucet body base onto the sink or mounting surface, attach all mounting hardware, and tighten the screws from below with a Phillips screwdriver.

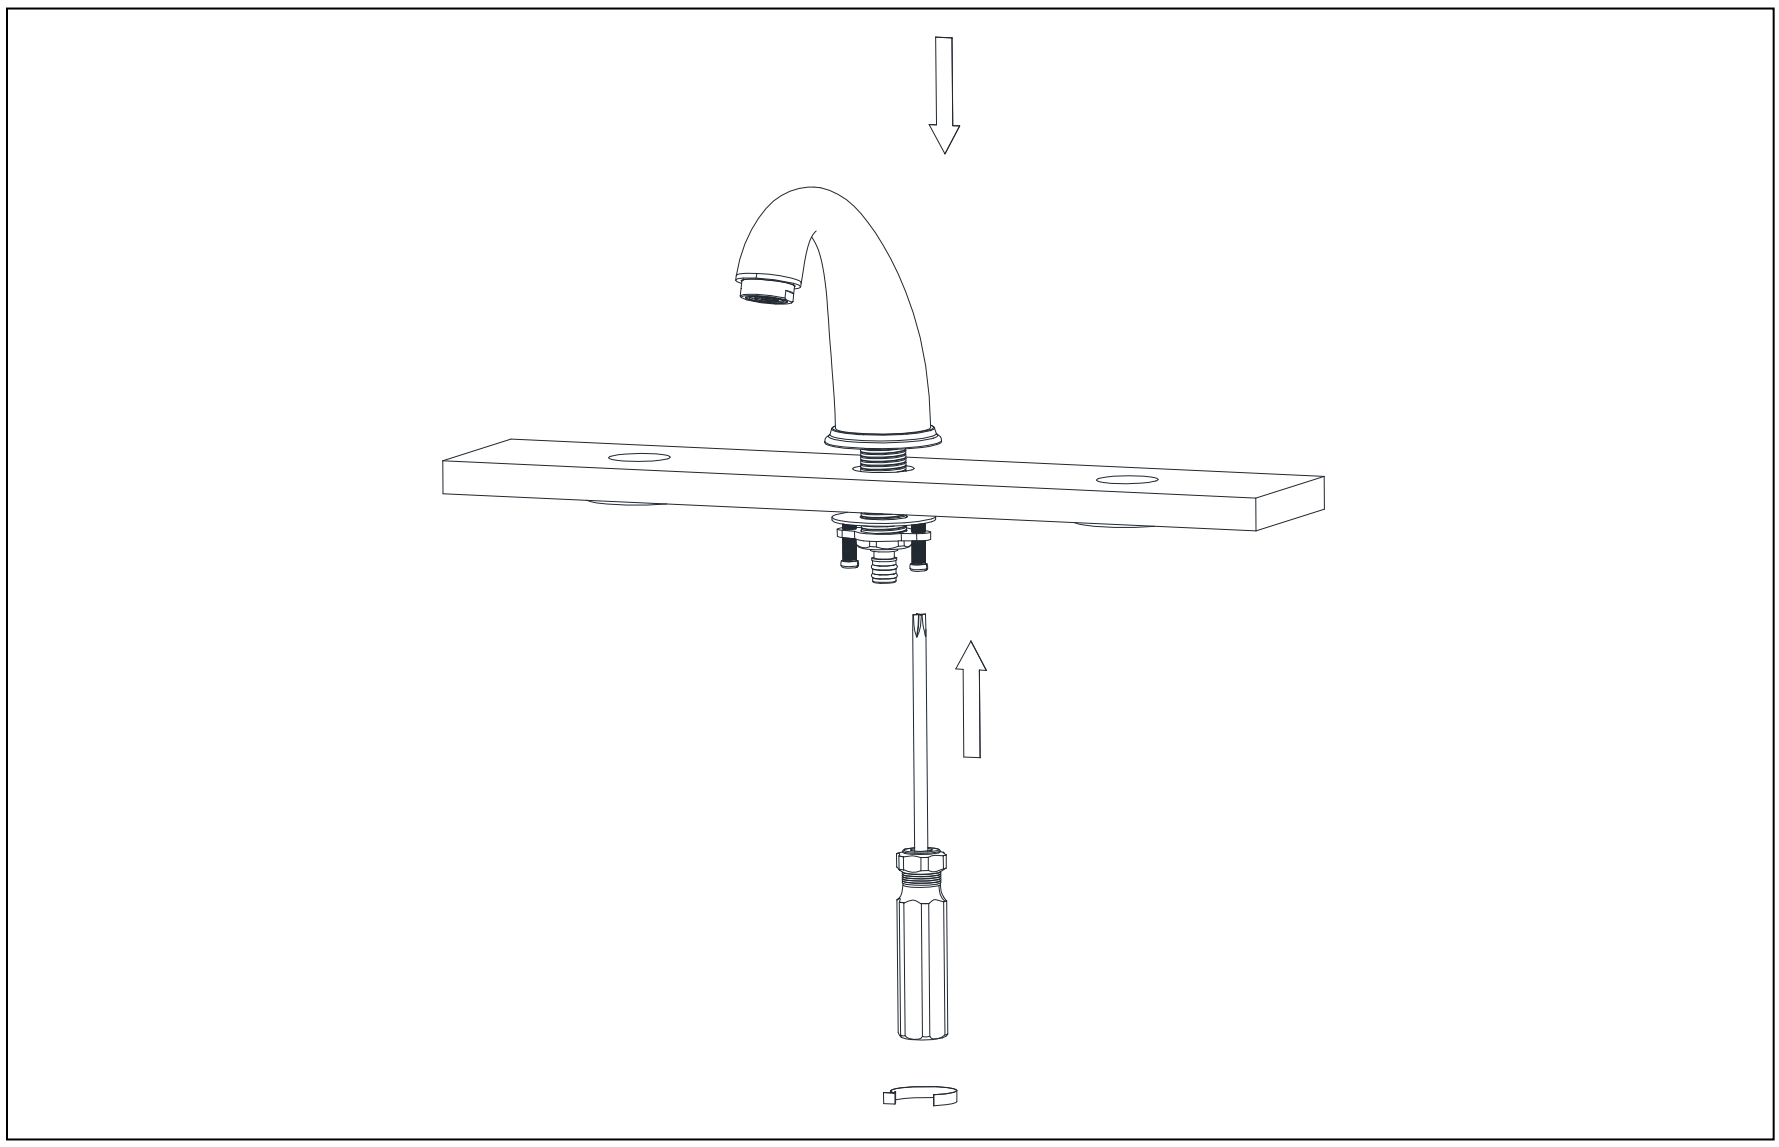


5.4 Hold the hot or cold valve assembly in one hand. With your other hand, reach underneath and rotate the mounting nuts and related components counterclockwise to unscrew and remove them from the assembly.

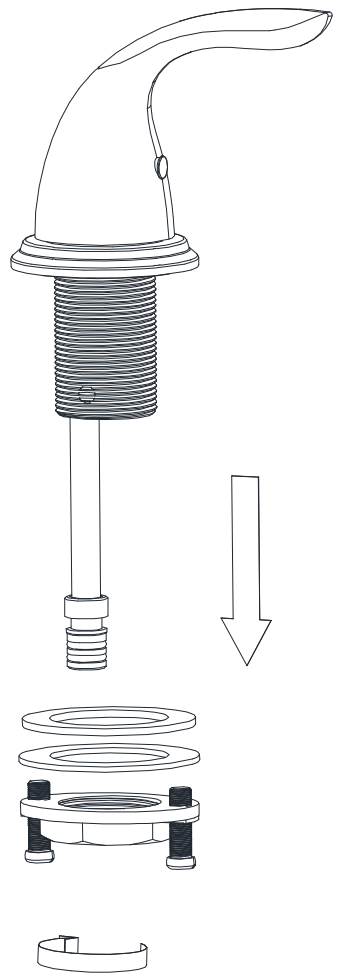

5.5 Install the hot water valve on the left and the cold water valve on the right of the spout. Slide rubber and metal washers onto the valves from under the sink. Hand-tighten the mounting nut of valves counterclockwise onto the countertop. Secure with a Phillips screwdriver by tightening the two screws on the mounting nuts.

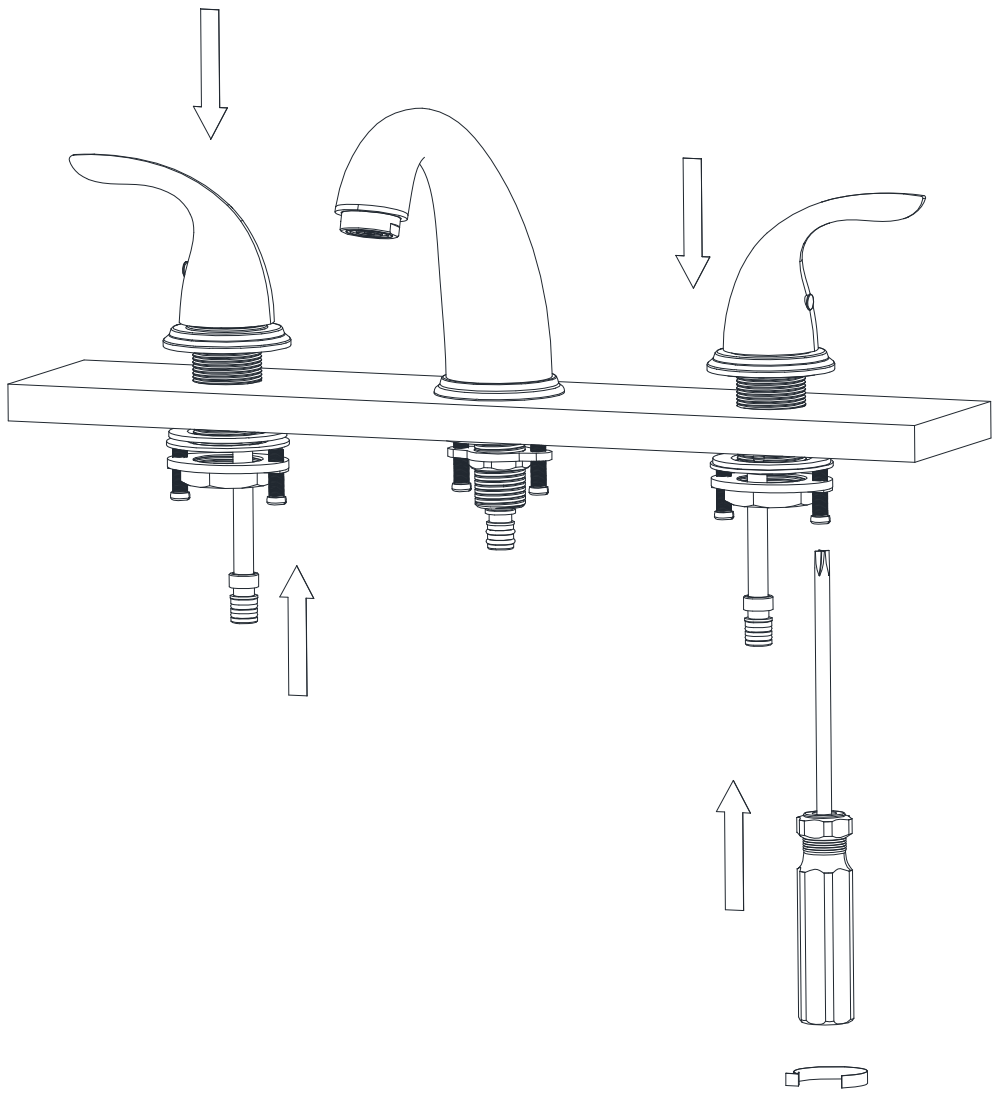



5.6 Attach one end of the Tee connector to the spout inlet and the other two ends to the hot and cold valve outlets respectively, ensuring a secure and leak-free connection.

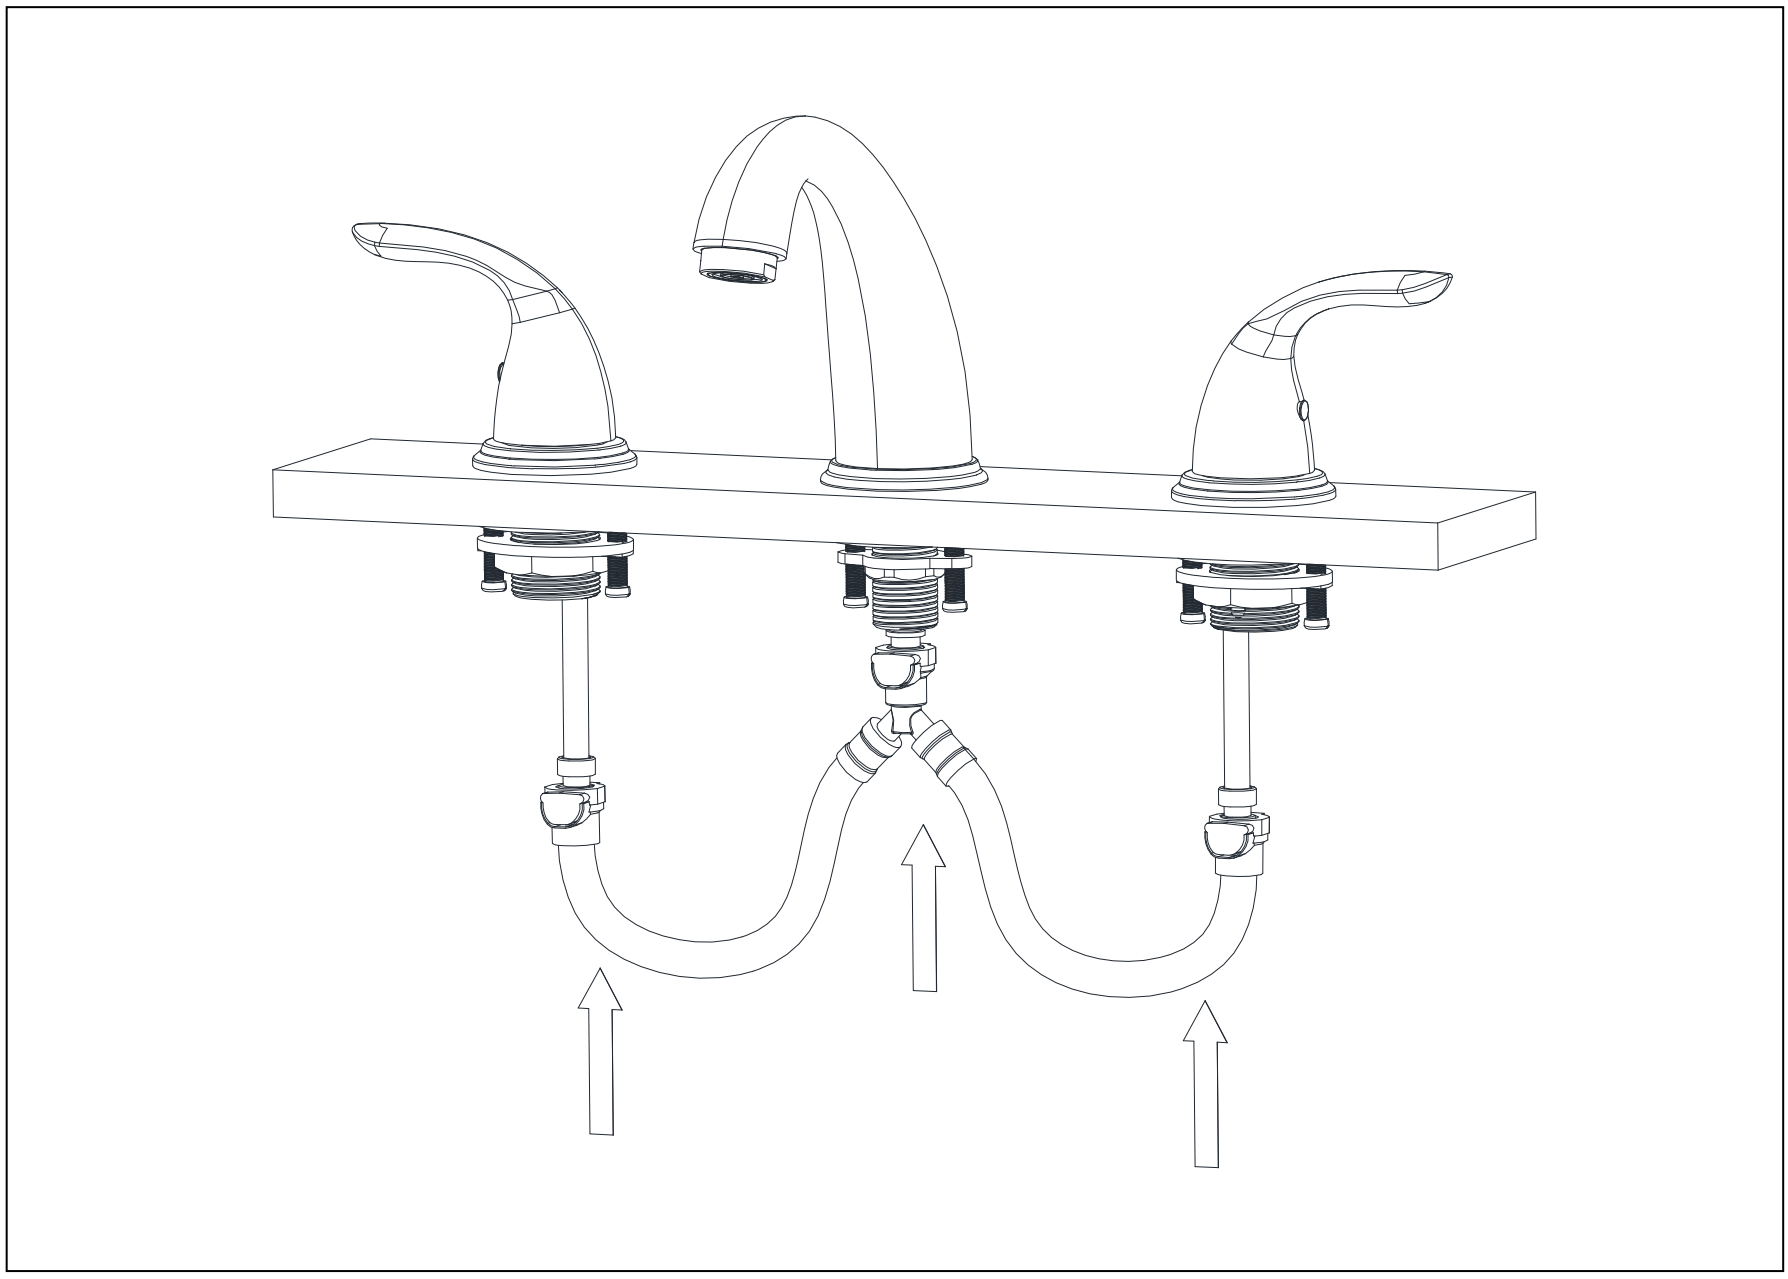

5.7 Connect the cold and hot water supply hoses to their respective valve inlets. Attach the other ends to the cold and hot water supply stops. Use 3/8" compression fittings for North America. Ensure all connections are secure.

Region	Code	Specifications
US	X	3/8″Compression
Europe	X	G 1/2
UK &Other	X	G 1/2

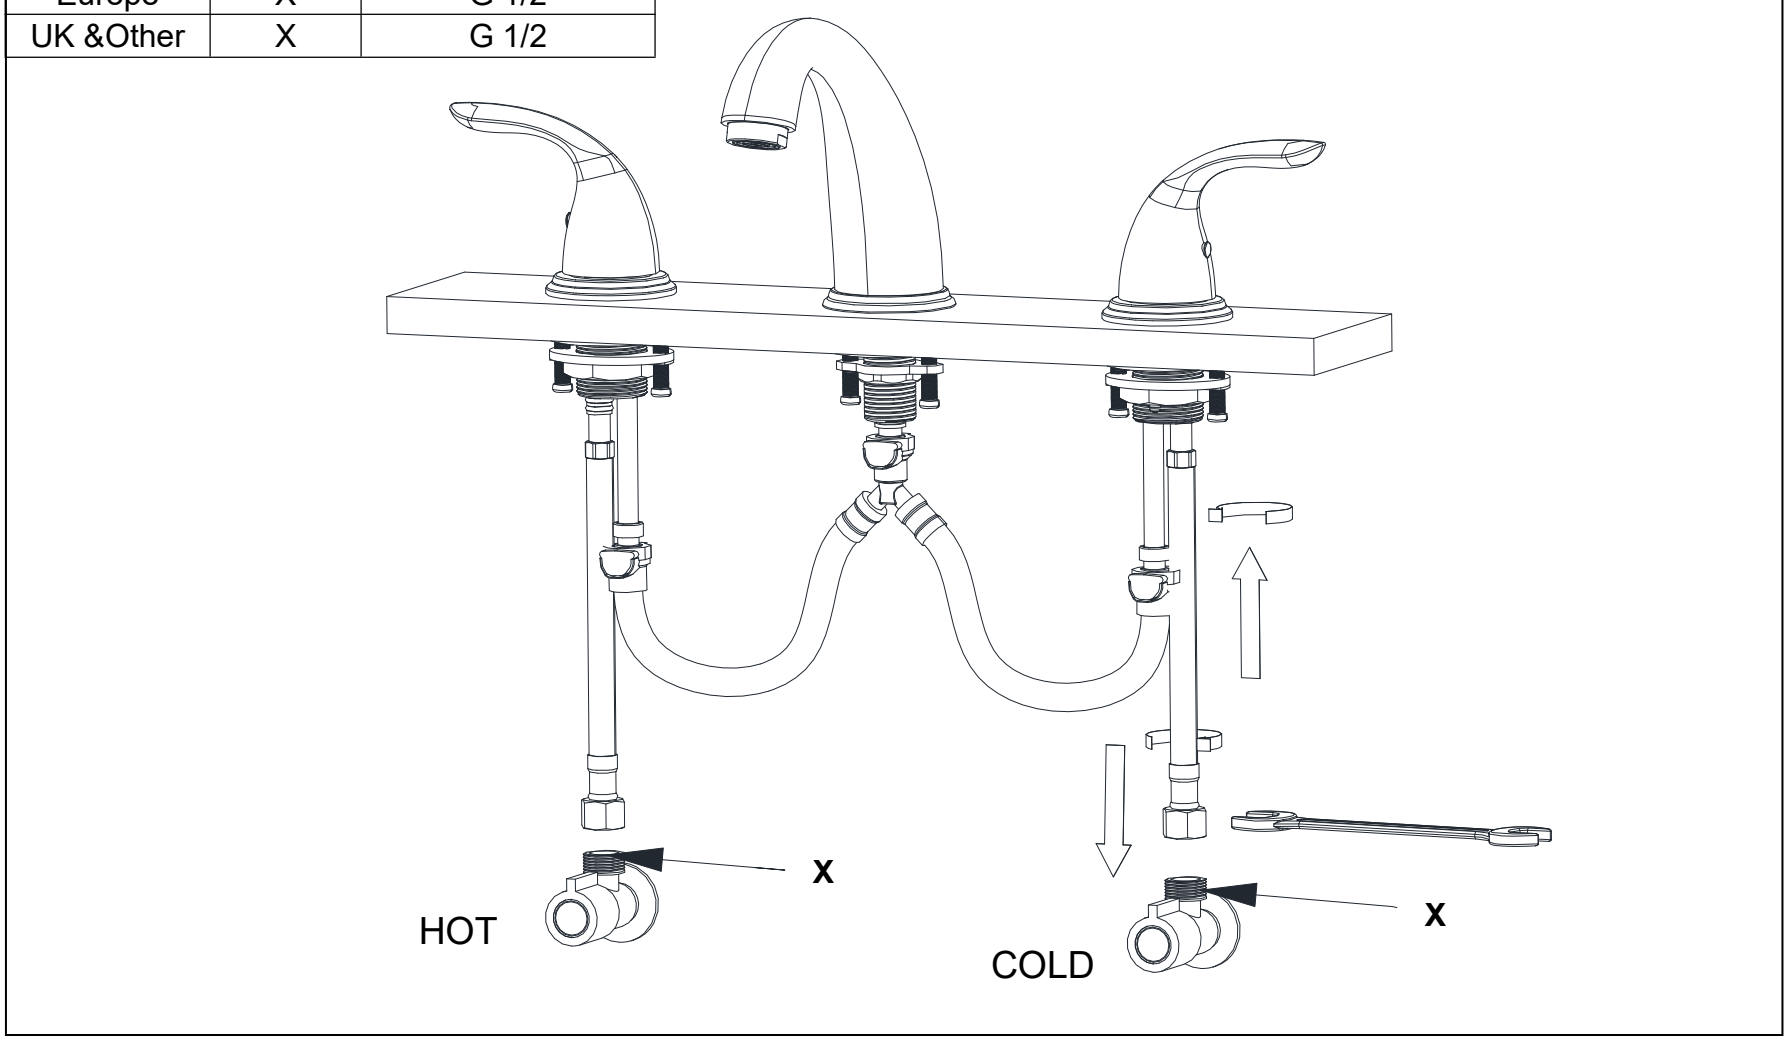

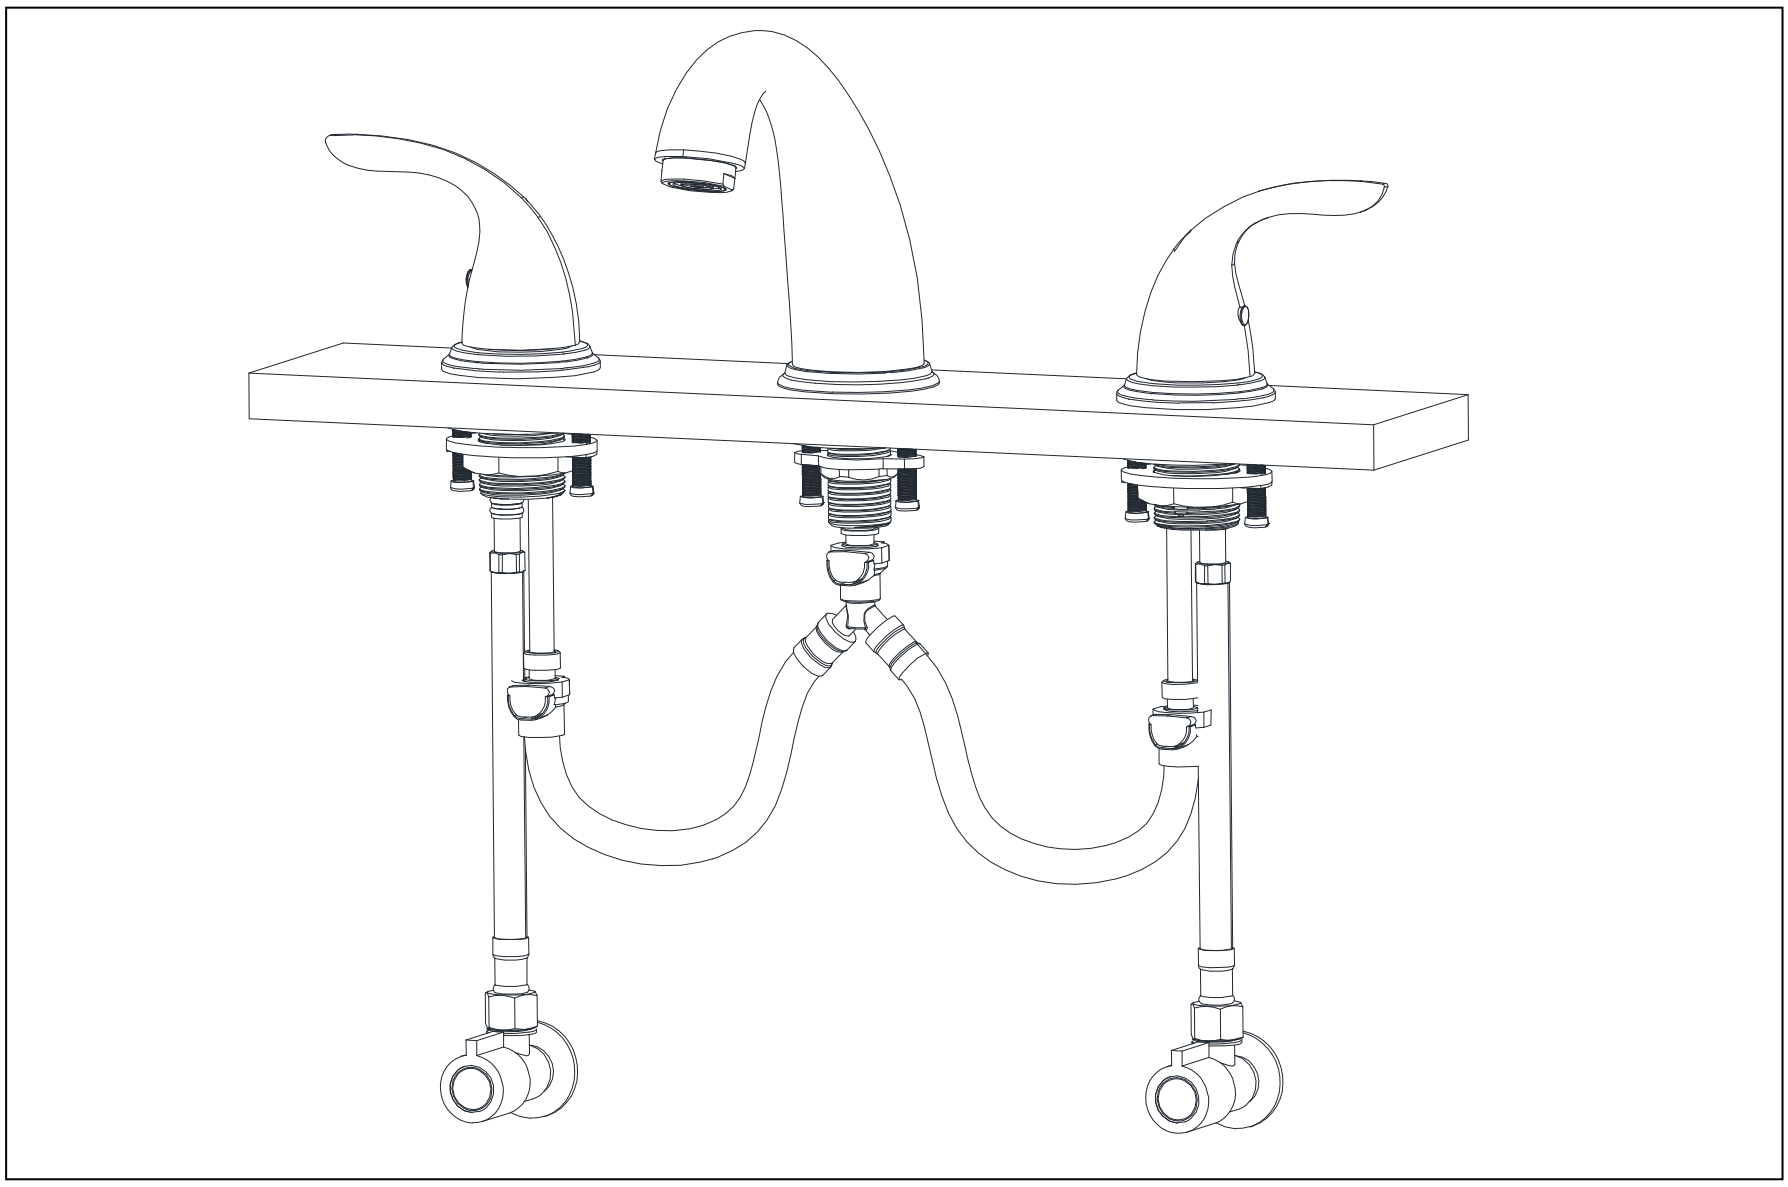

6. INSPECTION

6.1 Turn on the hot and cold water supply and check all connections to ensure there are no leaks.

INSTALL FINISH

North America	Asia	Europe
SUMERAIN INTERNATIONAL GROUP INC.	HONGKONG SUMERAIN SANITARY INDUSTRY CO., LIMITED	SUMERAIN EUROPE SUPPORT TEAM
Add: 1400 Summit Ave, Suite A, Plano, TX 75074, USA	Add: ROOM 14 2/F WELLBORNE COMMERCIAL CENTRE NO.8 JAVA ROAD NORTH POINT HK	Add: Flottwellstr.15 10785 Berlin, Deutschland
Tel: +1-866-203-0866	Tel: +86-750-2731579	Tel: +49 (0)30/23975898
E-mail: support@sumerain.com	E-mail: support@sumerain.com	E-mail: support@sumerain.com