


ASSEMBLY INSTRUCTION

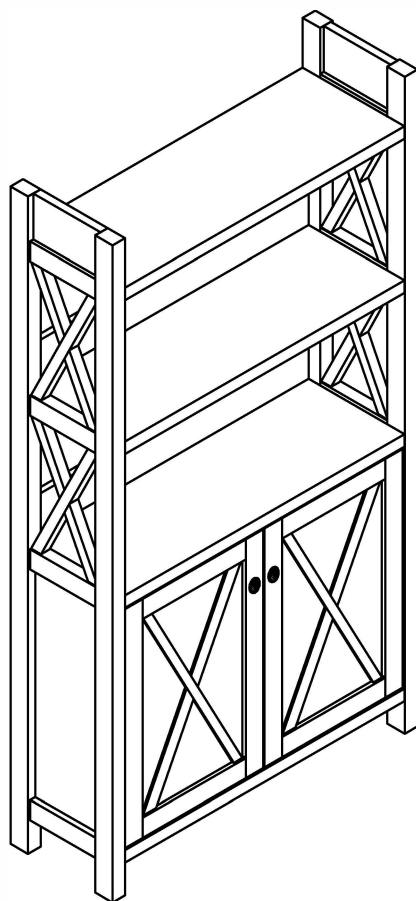


ASSEMBLY INSTRUCTION

PLEASE READ BEFORE ASSEMBLING!


Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Read manual before assembling, it helps!

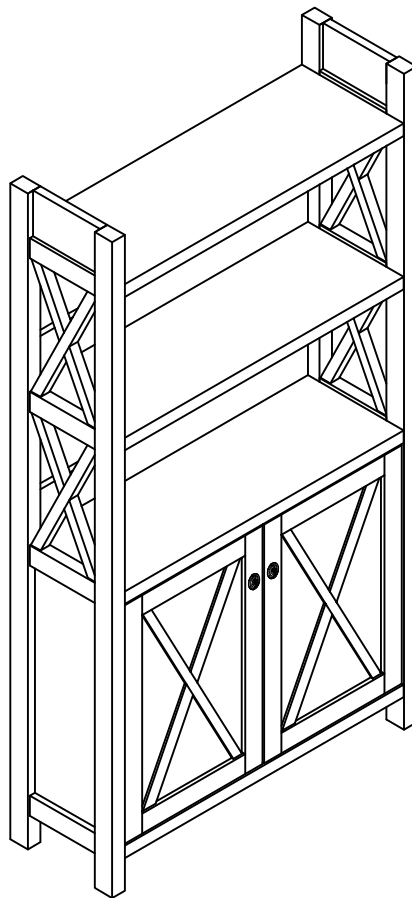


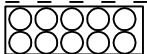


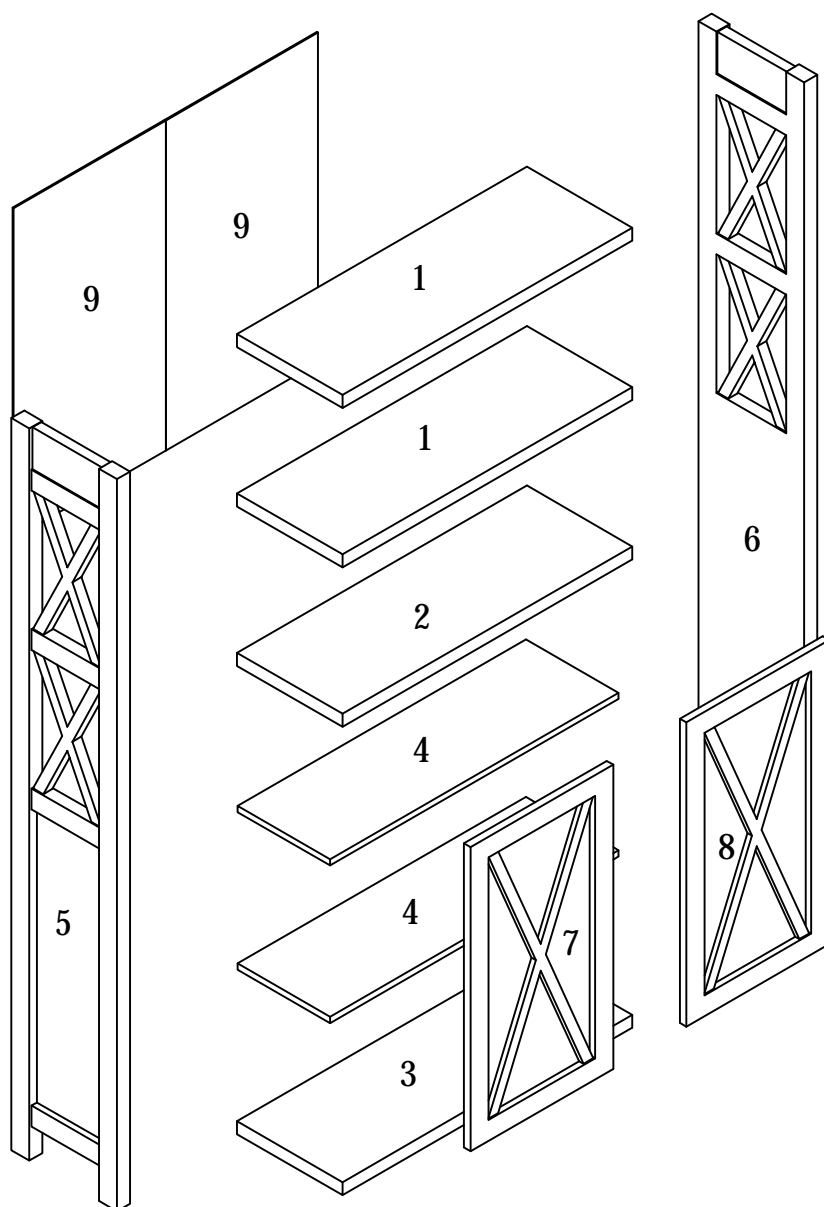







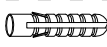




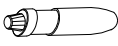


PARTS IDENTIFICATION




(1) 2pcs	(8) 1pc
(2) 1pc	(9) 2pcs
(3) 1pc	
(4) 2pcs	
(5) 1pc	
(6) 1pc	
(7) 1pc	

HARDWARE IDENTIFICATION

A		L29	16pcs
B		$\Phi 15$	16pcs
C		$\Phi 8 \times 25$	8pcs
D		$\Phi 22$	8pcs
E			32pcs
F		$\Phi 16$	4pcs
G		$\Phi 5 \times 15$	8pcs
H			2pcs
I		$\Phi 3 \times 16$	4pcs
J			2pcs
K		$\Phi 3 \times 14$	4pcs
L			2pcs
M		$\Phi 36$	2pcs
N		$\Phi 4 \times 20$	2pcs
O		$\Phi 8 \times 40$	1pc
P		$\Phi 12 \times 12 \times 1$	2pcs
Q		$\Phi 5 \times 40$	1pc
R		$\Phi 4 \times 25$	1pc
S		$197 \times 5 \times 1$	1pc
T		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ASSEMBLY INSTRUCTION

HOW TO

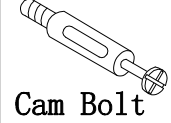


Cam Bolt




Cam Lock

<p>1. Screw Cam Bolt into panel.</p>	<p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	<p>3. Insert Cam Lock. arrow facing bolt.</p>	<p>4. Gently turn Cam Lock clockwise to lock position.</p>

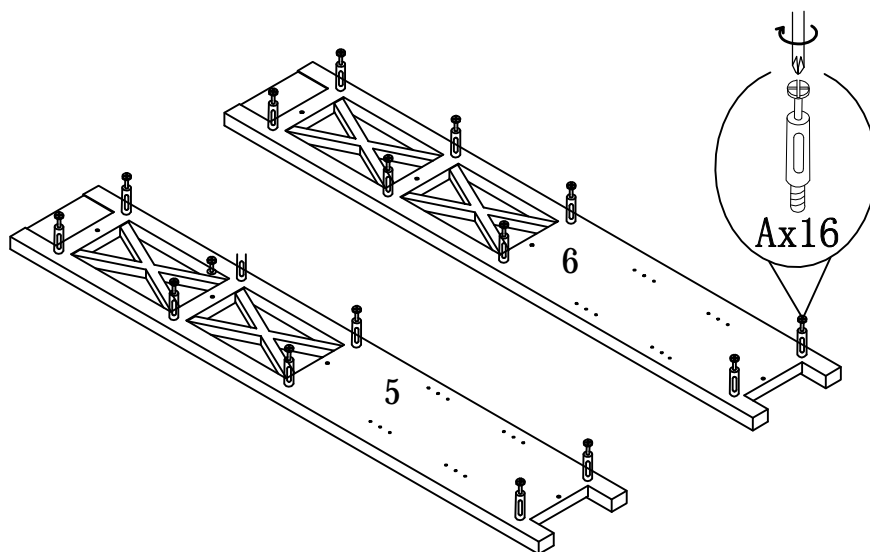


STEP1

STEP2

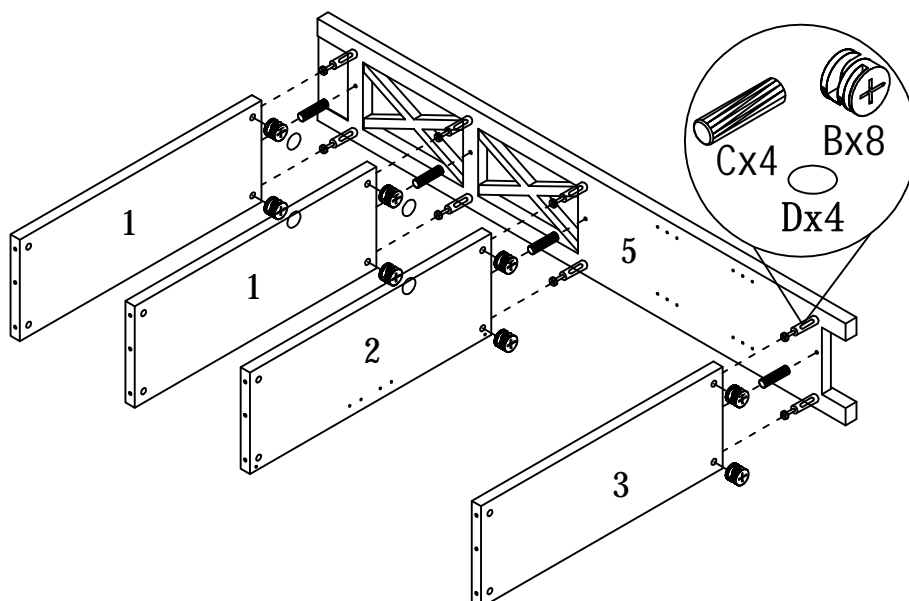


ASSEMBLY INSTRUCTION

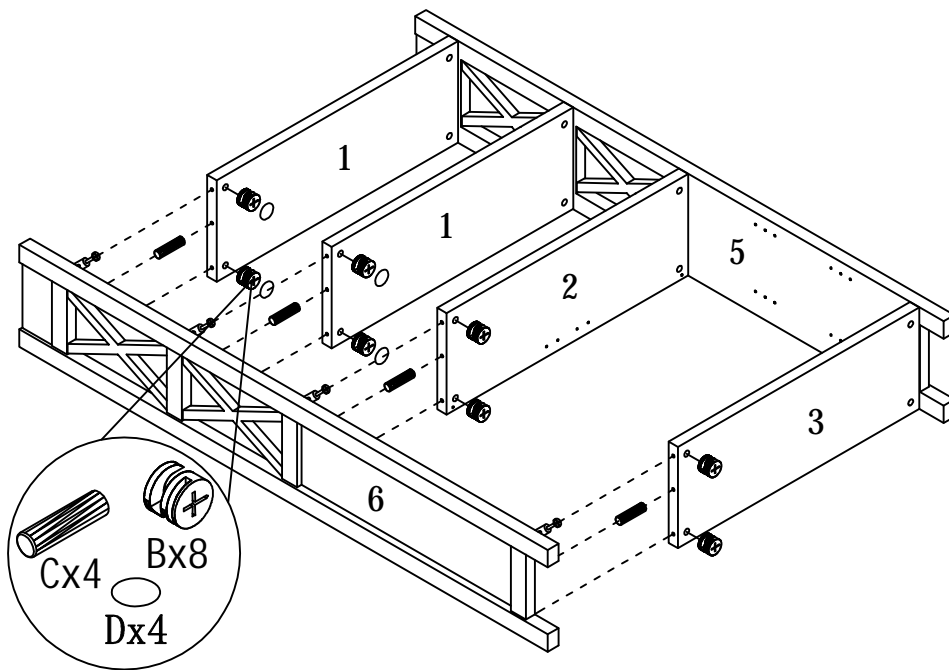


STEP3

STEP4

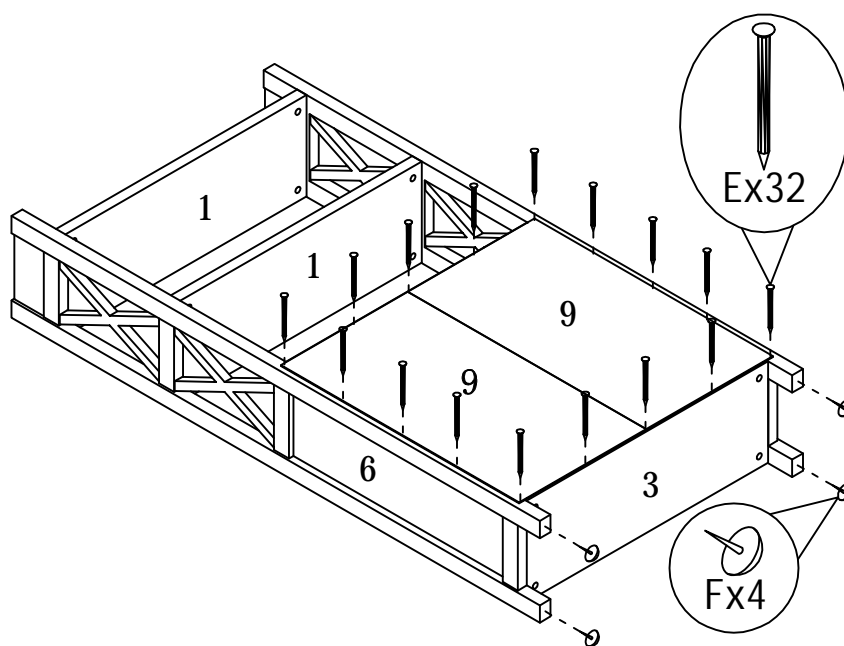


ASSEMBLY INSTRUCTION

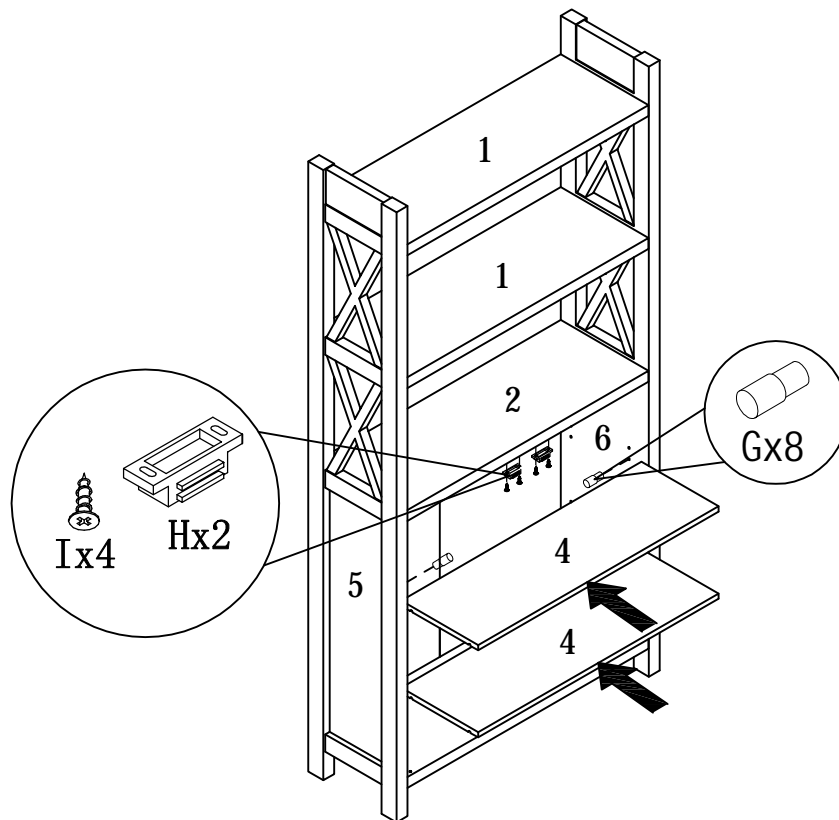

STEP5

STEP6

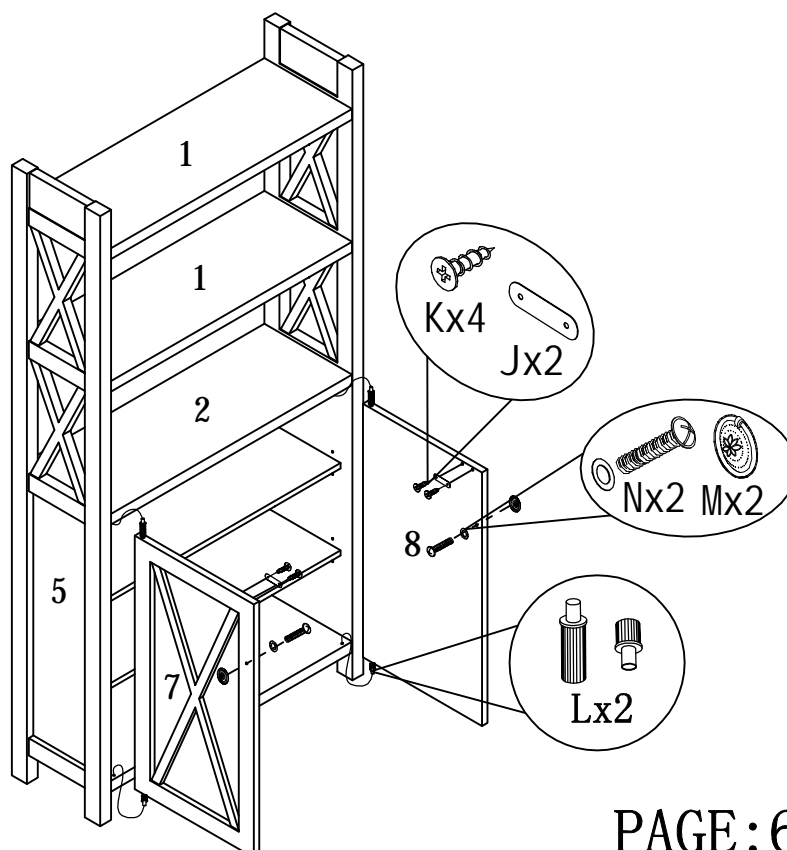


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

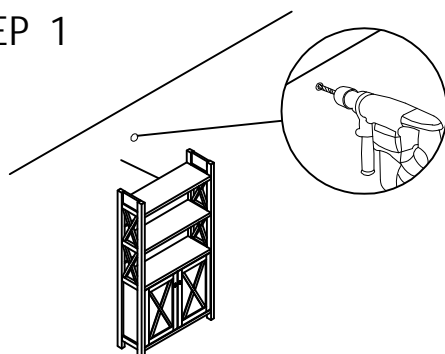


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

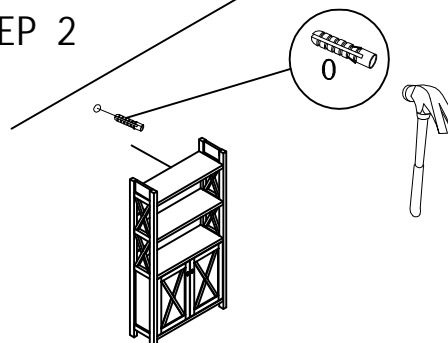


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

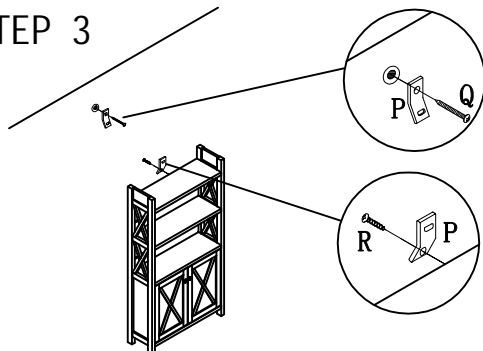

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

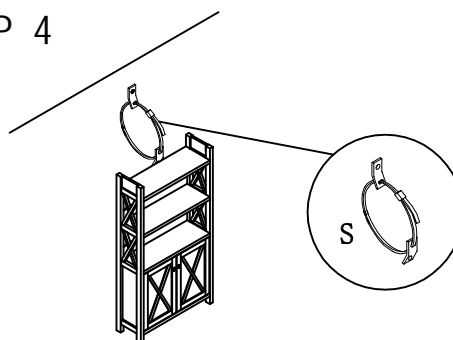

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.