


INSTRUCTION






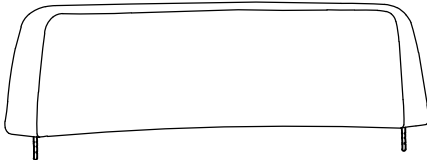
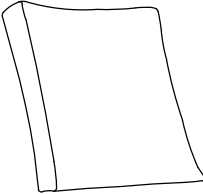
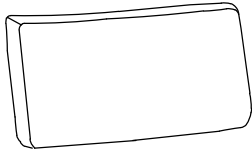



WF317496/WF317490/WF317494

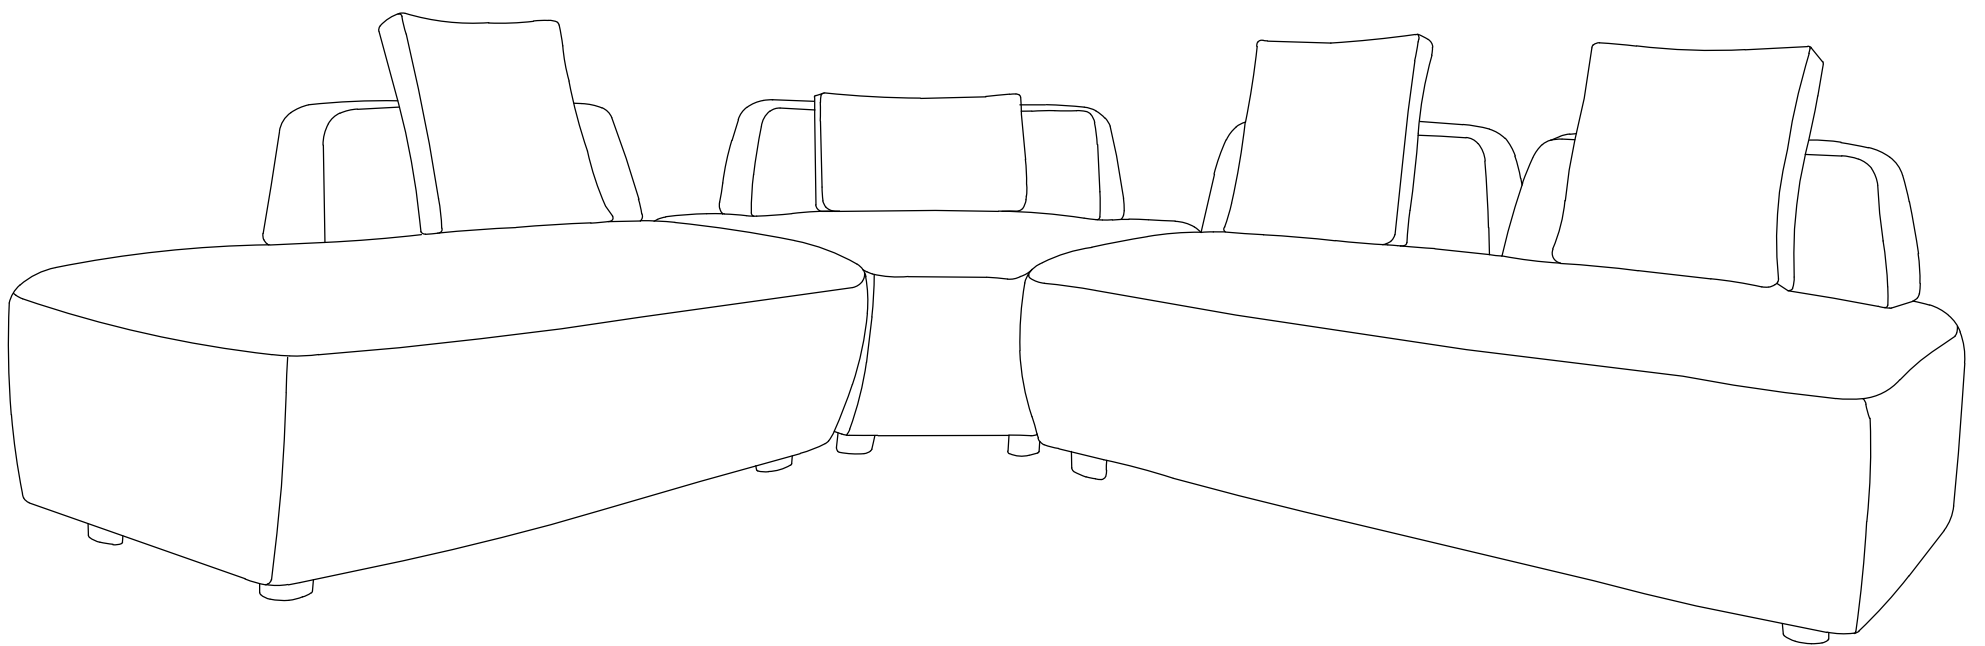


SOFA






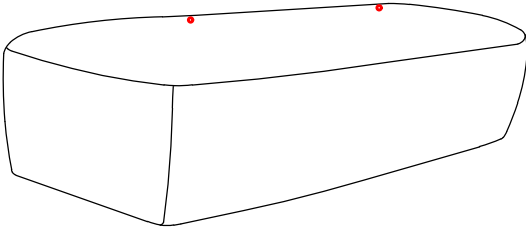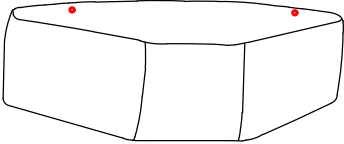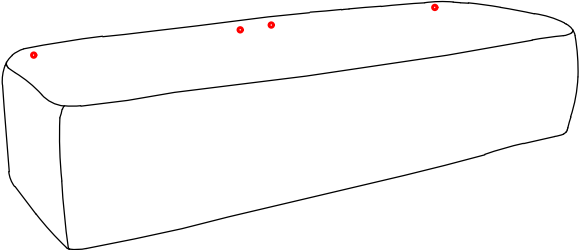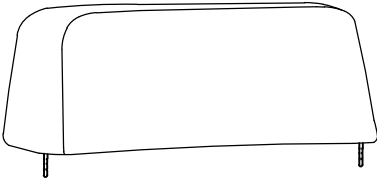
PARTS LIST


NO	PART	DECS	QTY
(A)		SEAT CUSHION	1pc
(B)		SEAT CUSHION	1pc
(C)		SEAT CUSHION	1pc
(D)		BACK	2pc
(I)		BACK	1pc
(E)		BACK	1pc
(F)		PILLOW	3pc
(G)		PILLOW	1pc
(H)		LEGS	13pc


STEP 1

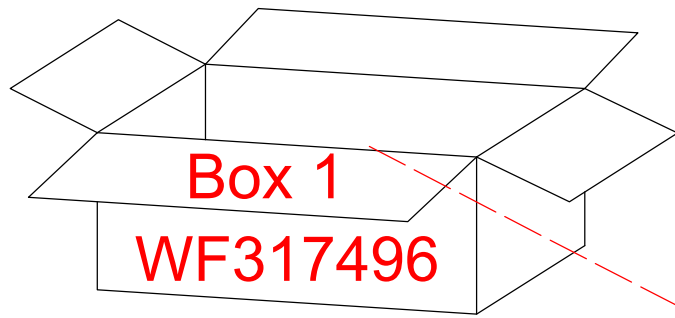
Ship by 3 boxes







NO	PART	DECS	QTY
(A)		SEAT CUSHION	1pc
(I)		BACK	1pc
(F)		PILLOW	1pc
(E)		BACK	1pc
(G)		PILLOW	1pc
(H)		LEGS	9pc

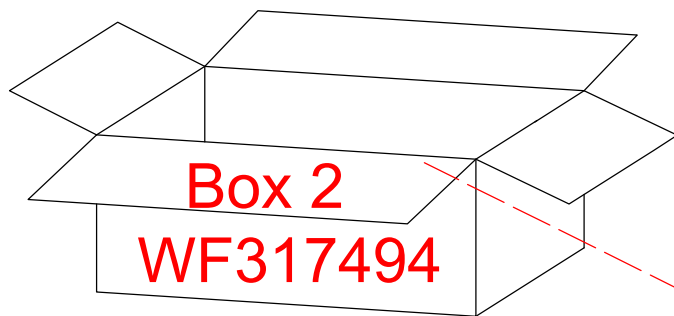


NO	PART	DECS	QTY
(B)		SEAT CUSHION	1pc

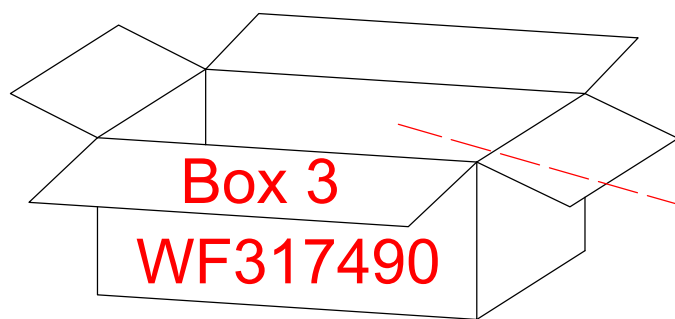


NO	PART	DECS	QTY
(C)		SEAT CUSHION	1pc
(D)		BACK	2pc
(F)		PILLOW	2pc
(H)		LEGS	4pc

STEP 2

Remove the plastic covers ahead before screw in the legs

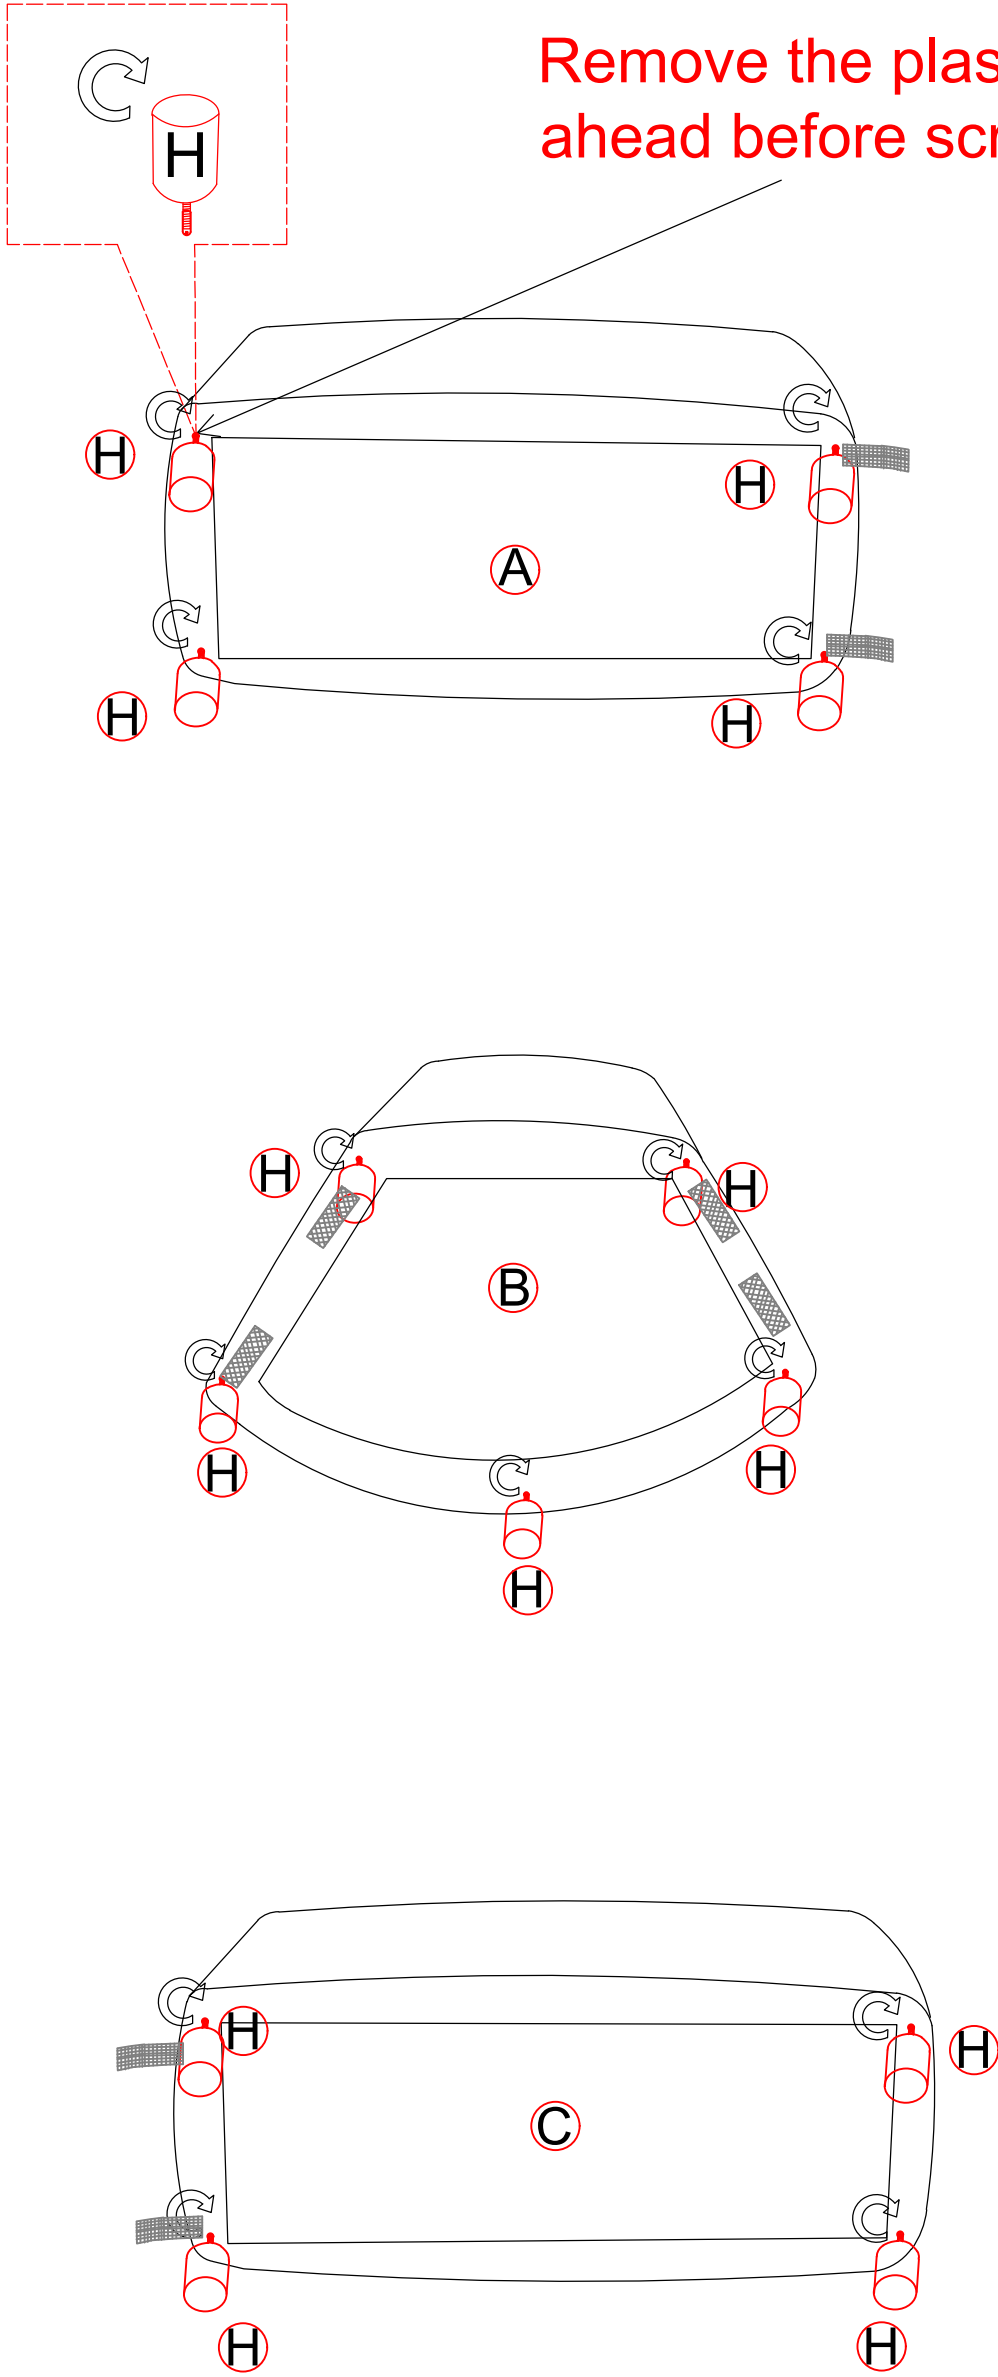


STEP 3

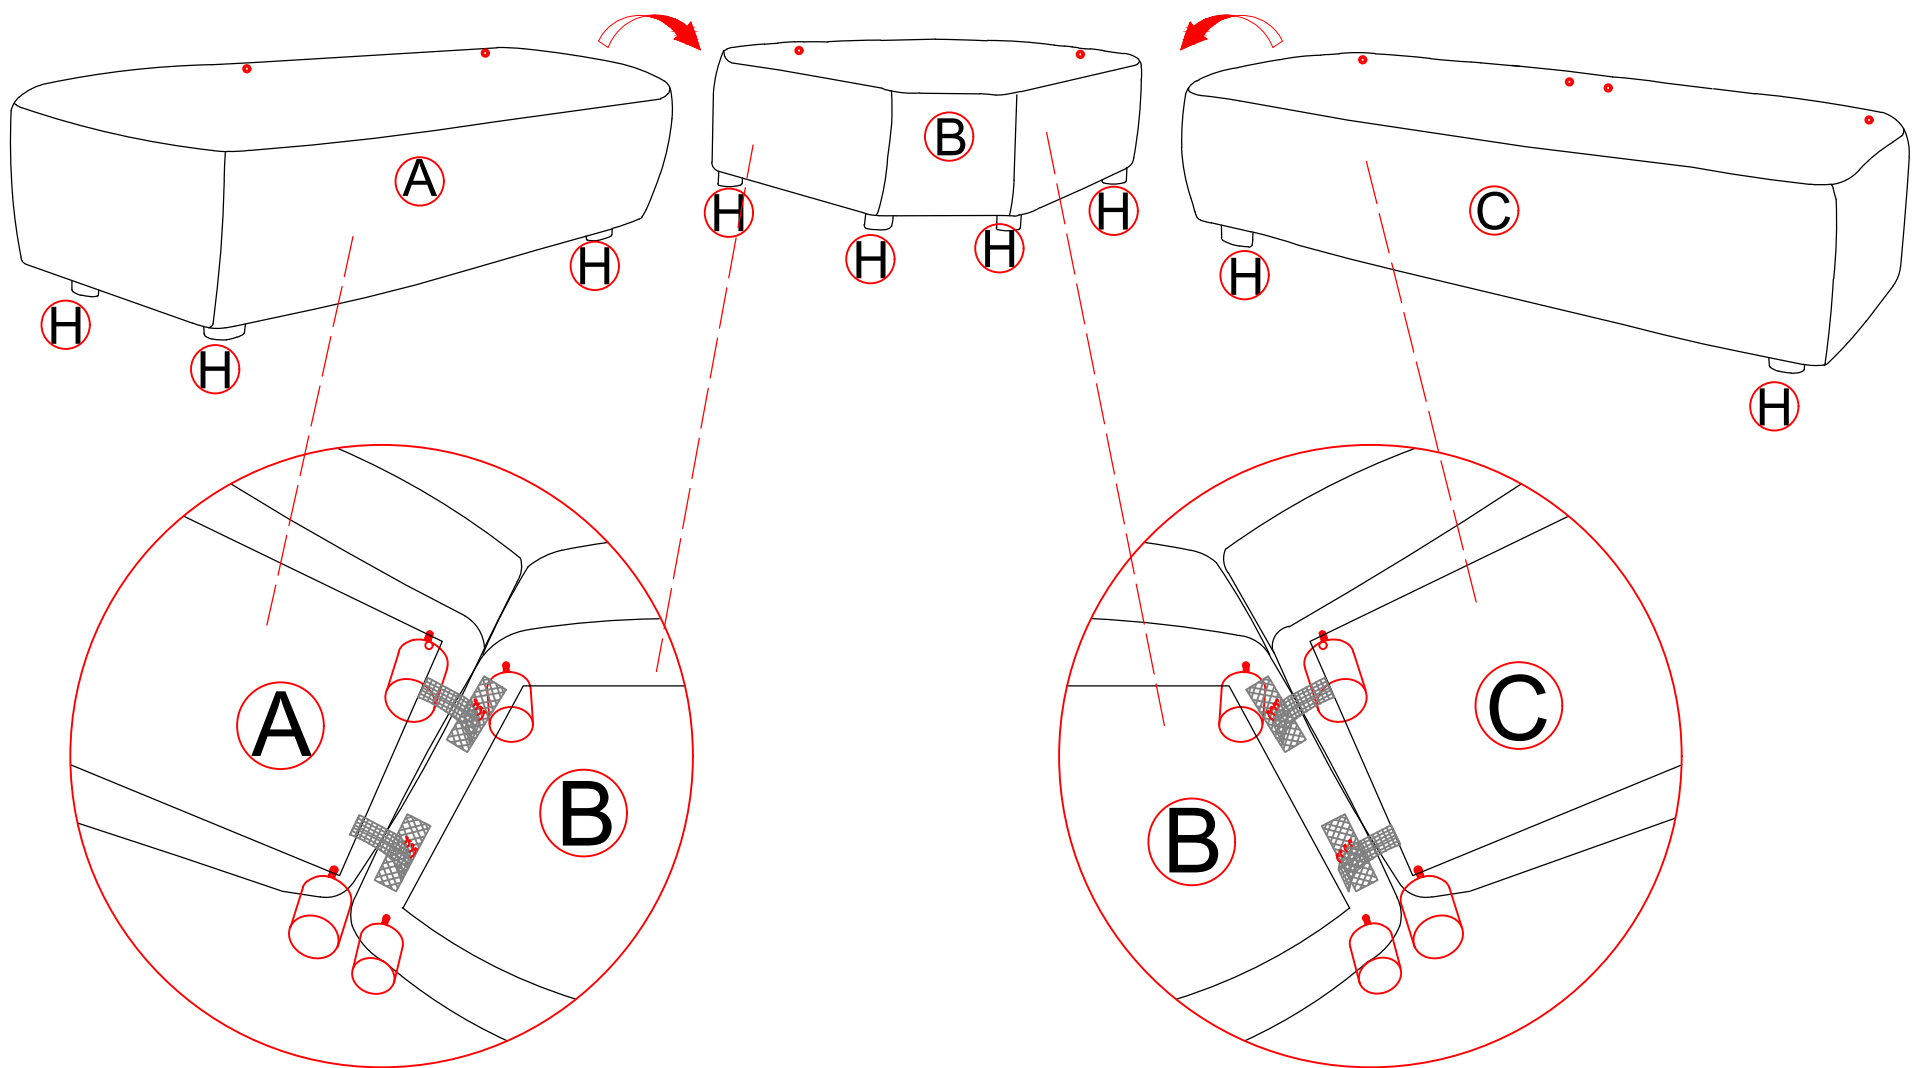


Connect the Velcro at the bottom of Sofa A & B

Connect the Velcro at the bottom of Sofa B & C

STEP 4

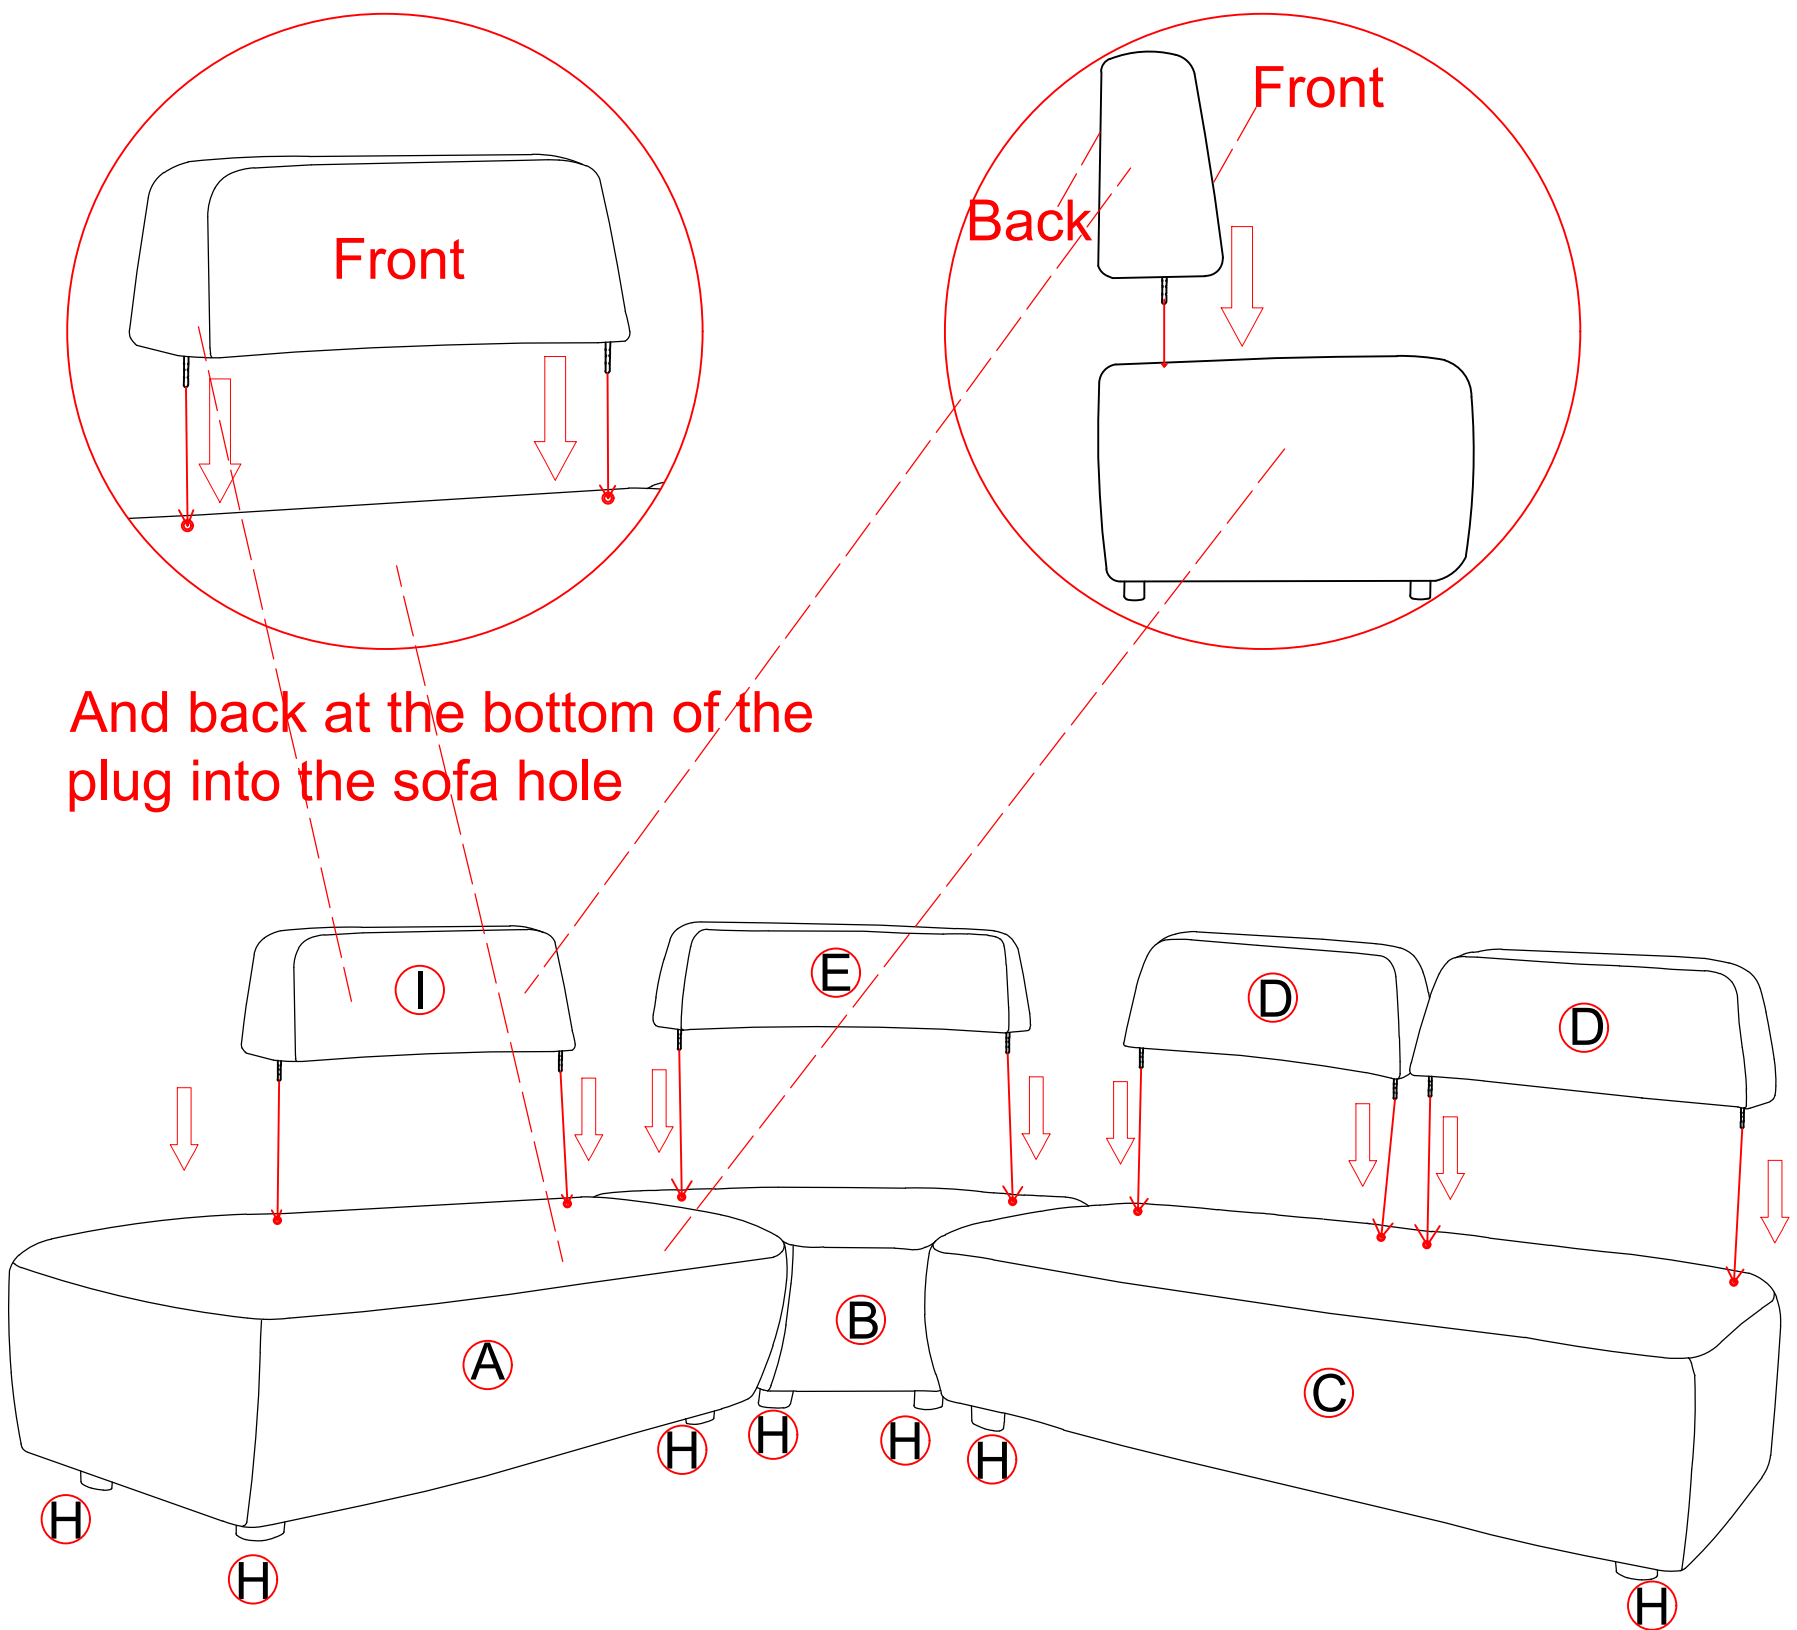

STEP 5

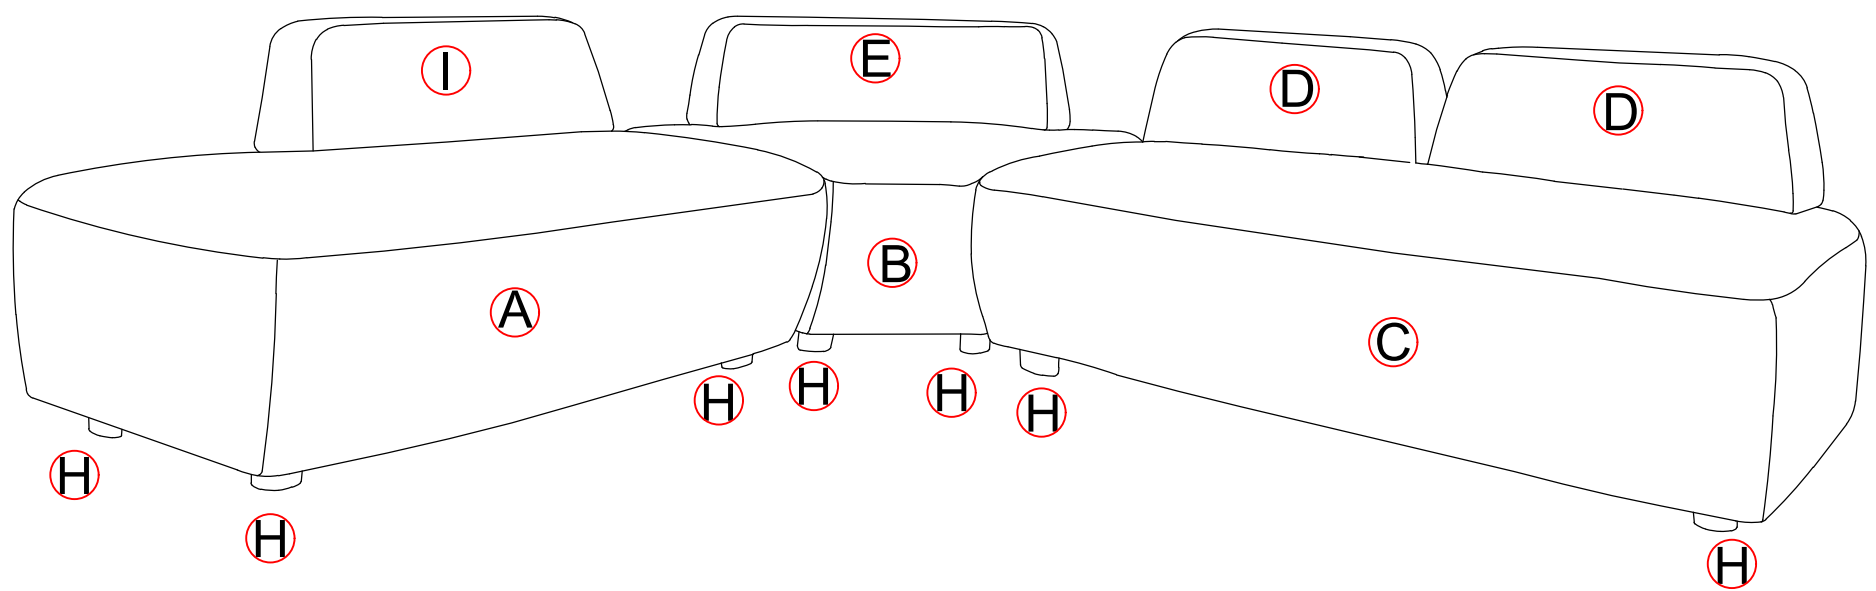

STEP 6

