



## IMPORTANT INFORMATION

READ CAREFULLY.

KEEP THIS INFORMATION FOR FURTHER REFERENCE.

## GENERAL GUIDELINES


- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.

## NOTES


- Please follow the assembly instructions precisely and only use the product as intended.
- If an odor is present when first opening the package, please leave the unwrapped product in a shaded and ventilated area for a few days to air out.
- Prior to assembly, please check the product for defects or missing accessories. If any defects are found or accessories are missing, do not use product as damage or injury may occur;  
Please contact us for assistance and replacement.
- It is suggested you regularly check the products bolts and connections to ensure safe use.
- Assemble the item on a soft flat and clean surface to avoid scratches and damage.
- It is recommended that two people assemble this product.

## WARNINGS



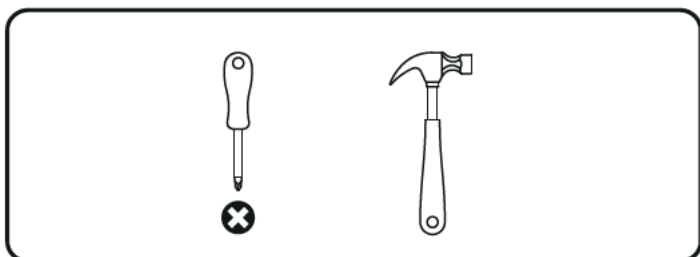



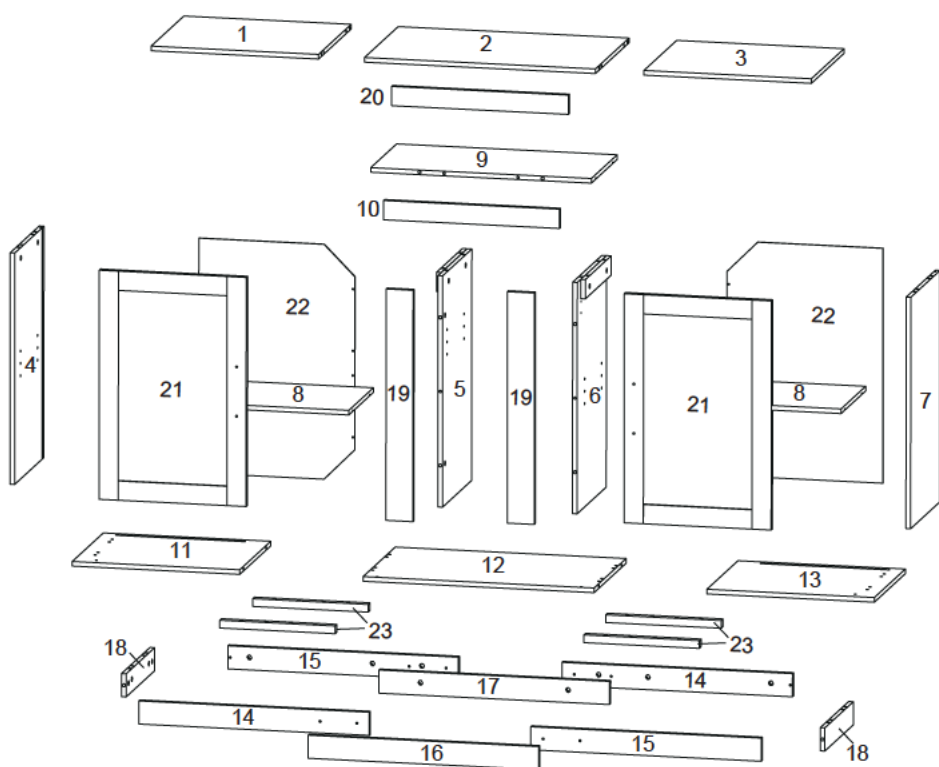













- During assembly, keep parts and packaging materials away from children and pets as there could cause injury and are a potential choking hazard.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- Please open the item slowly and cautiously to avoid pinching your hands by metal joints, especially children.



# EXPLODED DRAWING





# PARTS


	<b>A</b> X52		<b>B</b> X34		<b>C</b> X52
	<b>D</b> X12		<b>E</b> X16		<b>F</b> X16 M6x28
	<b>G</b> X1		<b>H</b> X1		<b>I</b> X8 M5x50
	<b>J</b> X8 M4x22		<b>K</b> X4		<b>L</b> X8 M4x12
	<b>M</b> X8		<b>N</b> X8 M4x14		<b>O</b> X2
	<b>P</b> X4	 	<b>Q</b> X2		<b>R</b> X8 M3x11
					<b>S</b> X50

# REMARK

## MINIFIX POSITION

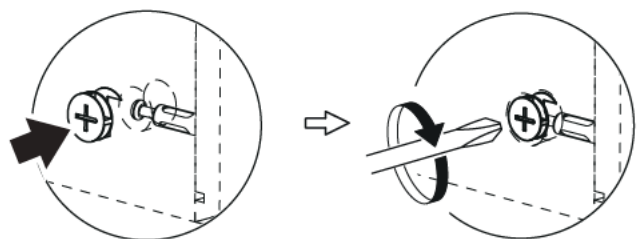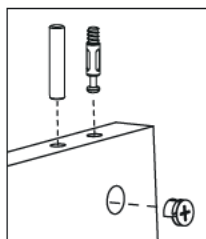


# 1




## REMARK

1. Put a blanket under the board to avoid scratch or damage.
2. Please do not screw **A** too deep or too shallow.

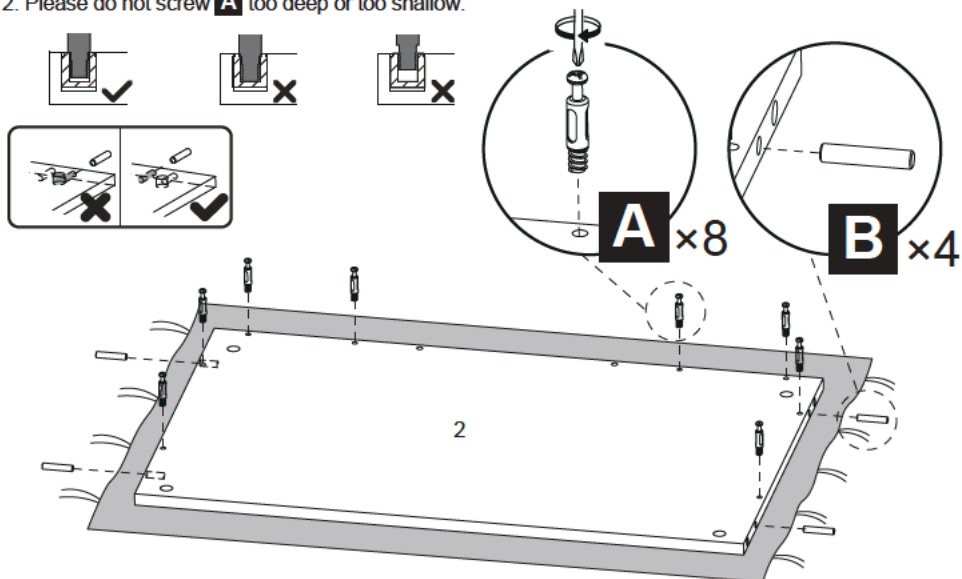


# 2

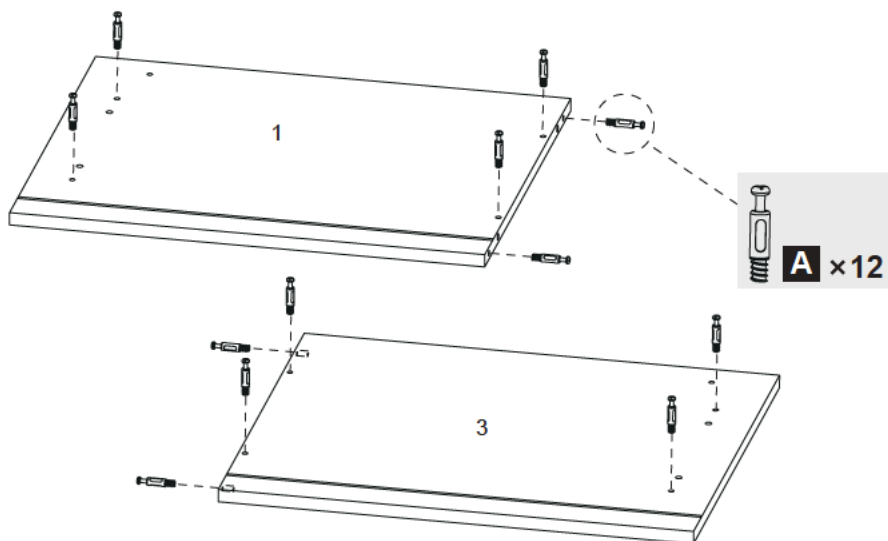

# 3




**C** X4


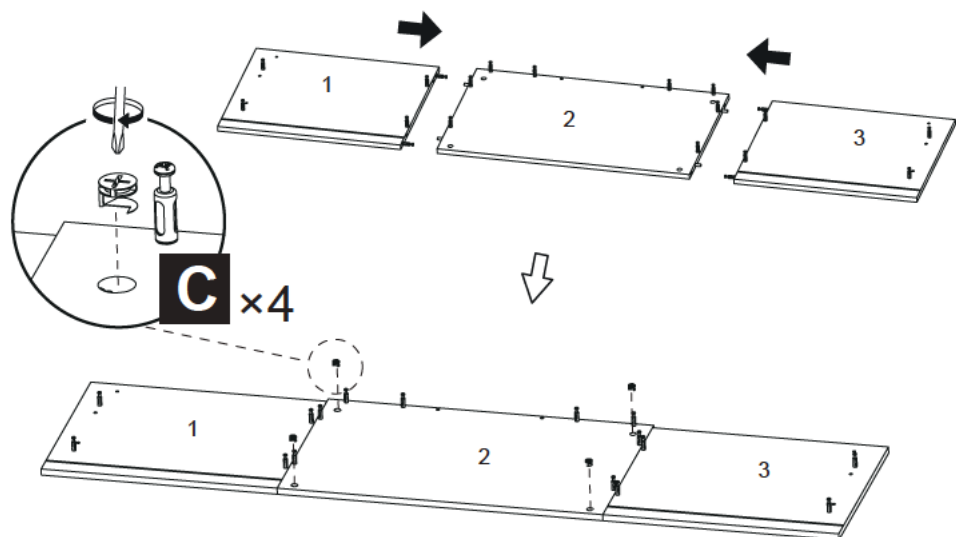


# 4

**B** X6


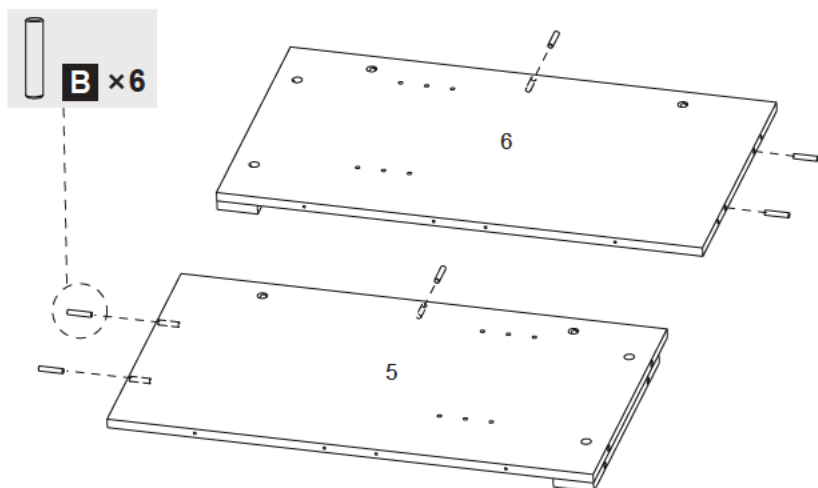


5

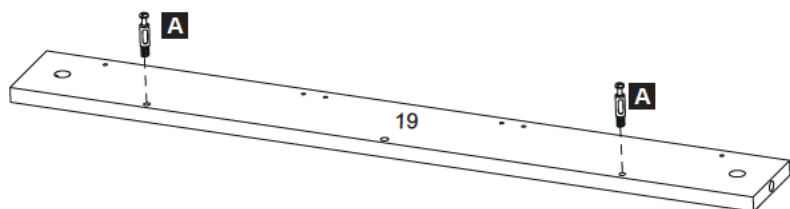

×2


6

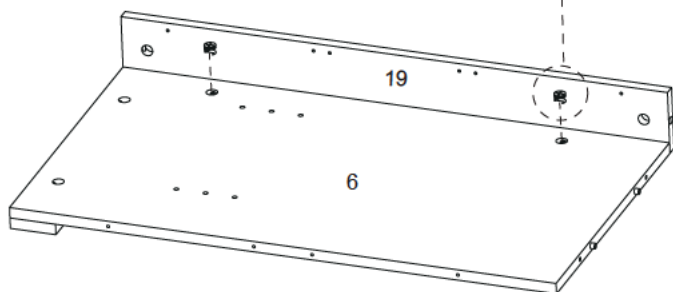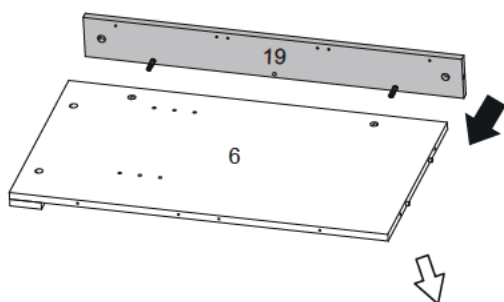

7







C x2

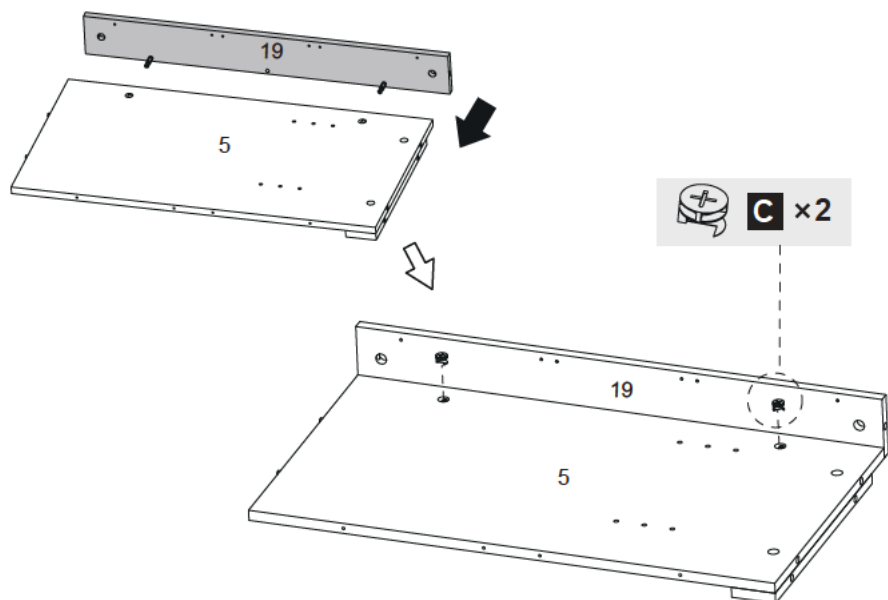

8


B x2

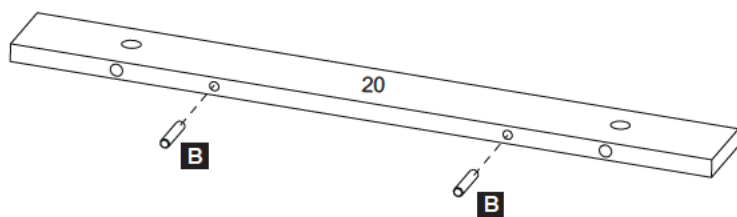

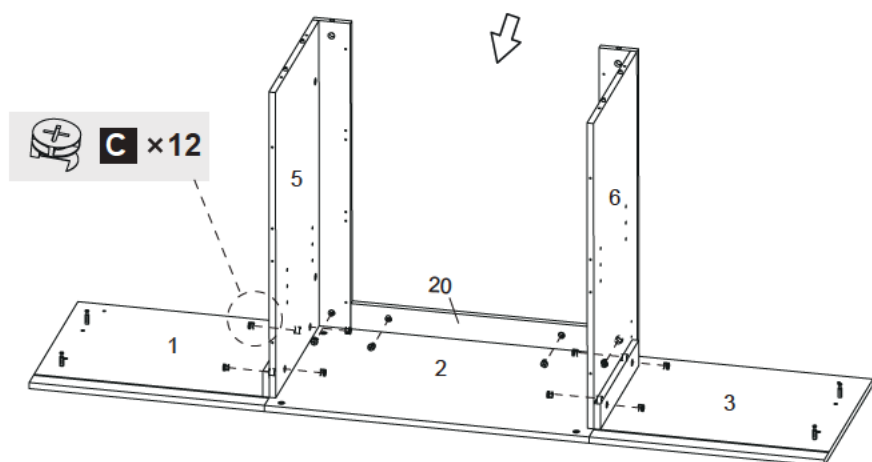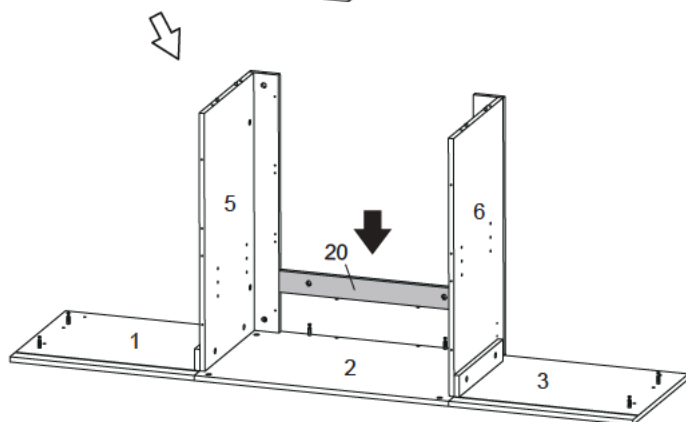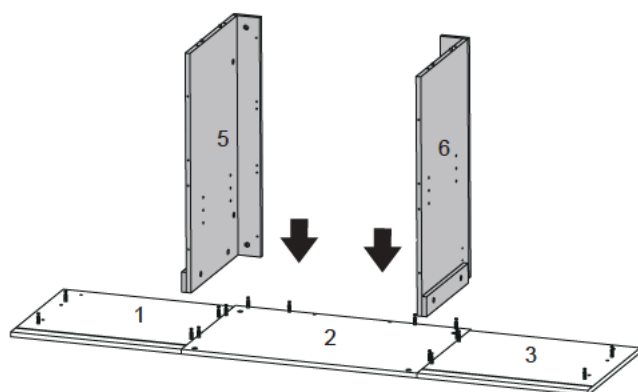

# 10


**B** X8

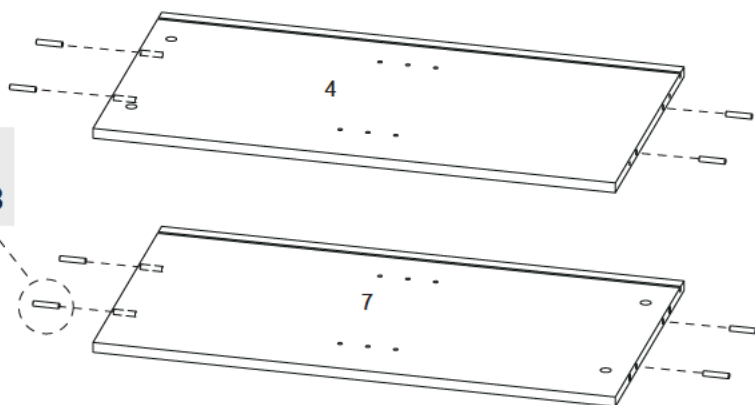


**B** X8

# 11

**C** X4

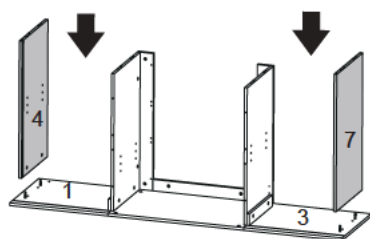




**C** X4

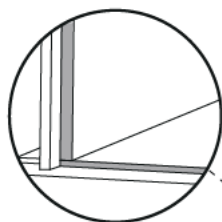





## REMARK

Let the grooves on part 4 and 7 be connected to the groove on part 1 and 3.

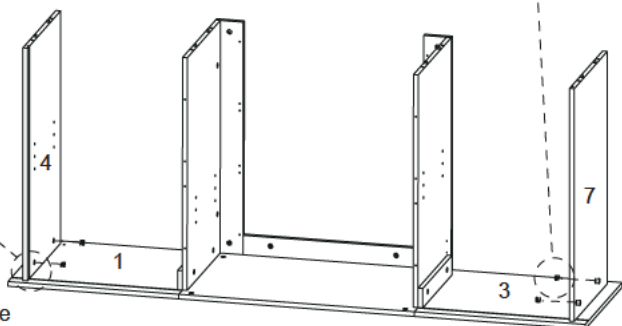


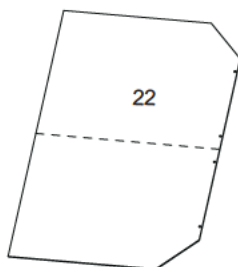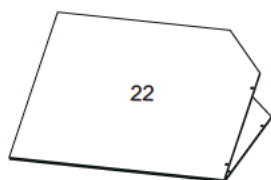


x2

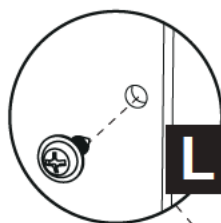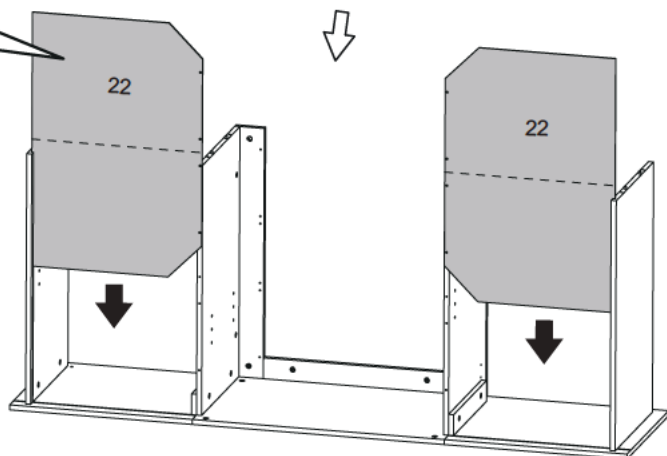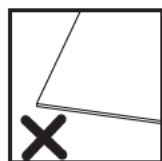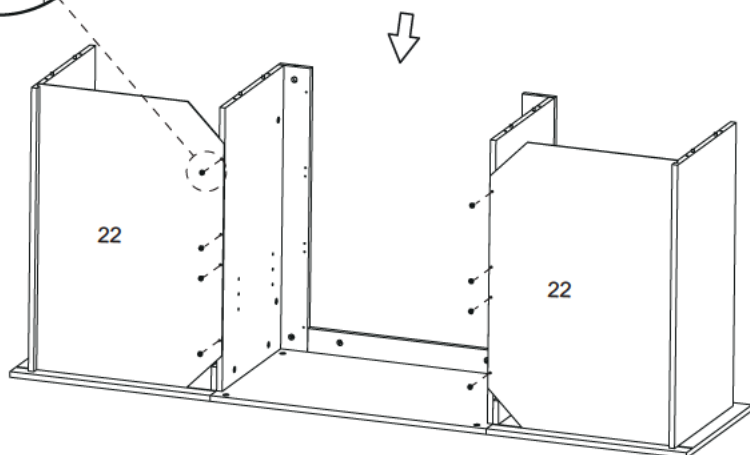**L** x8

# 13

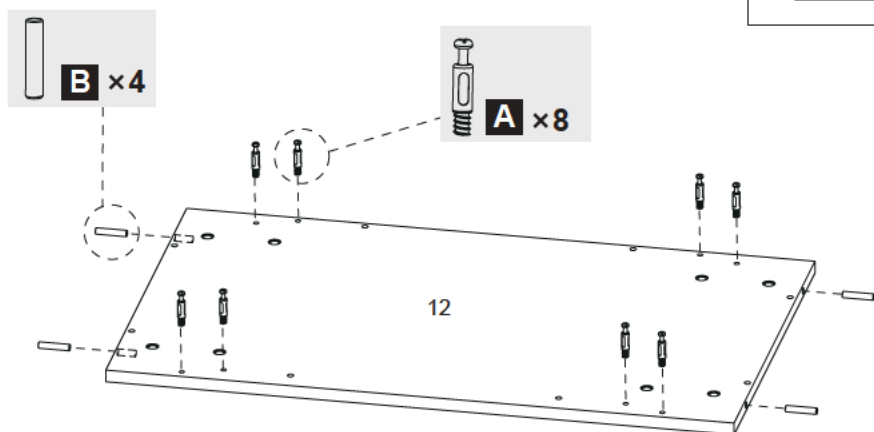



# 14

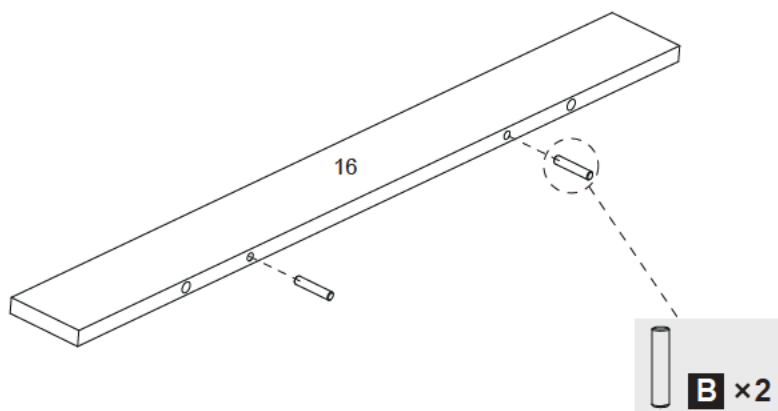


# 15



**C** X2

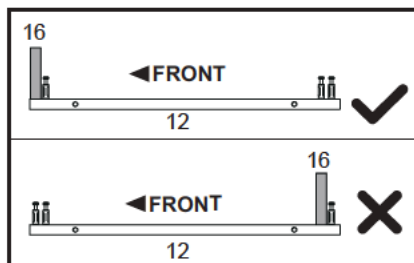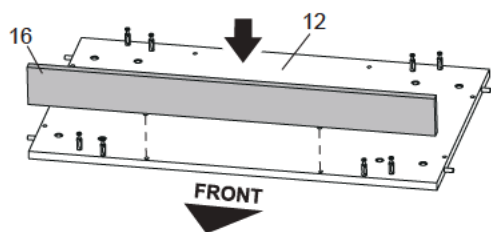


**C** x2

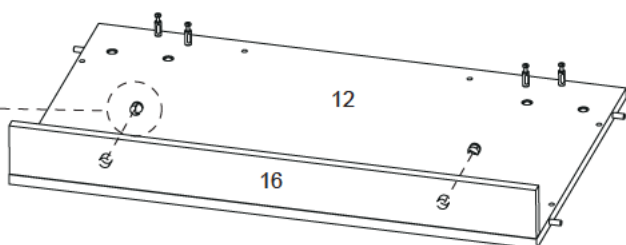



# 16





**A** X12

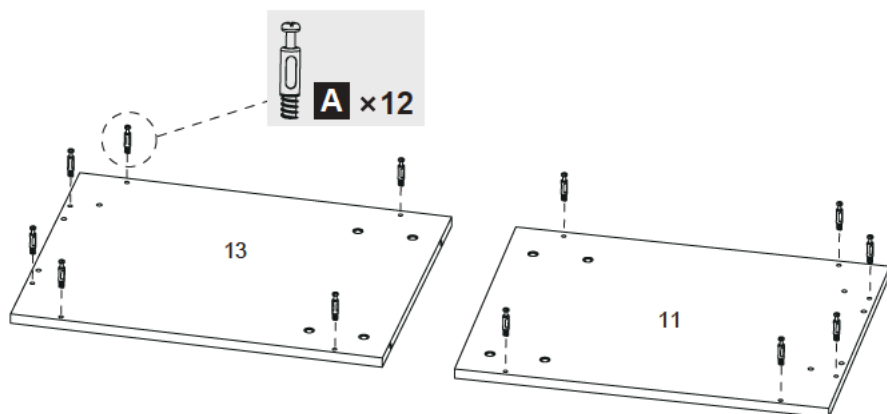

# 17

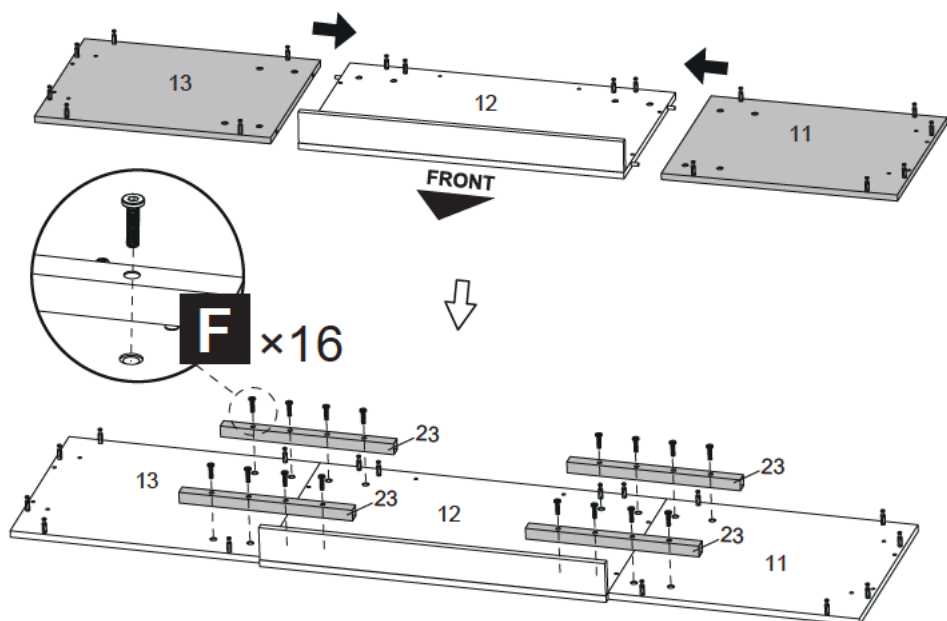



# 18

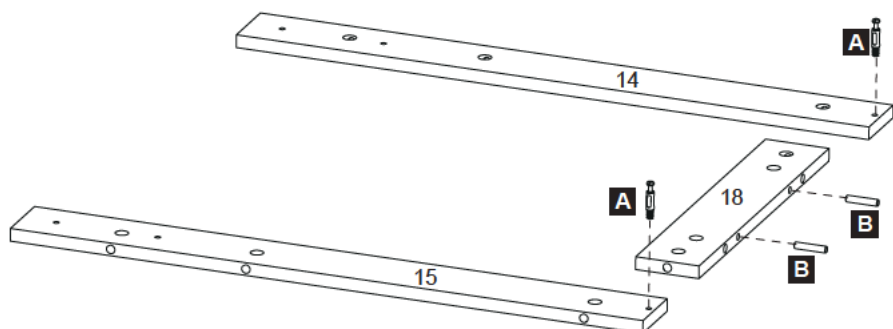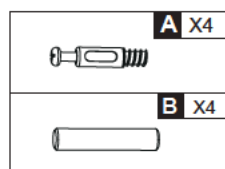

x2

# 19

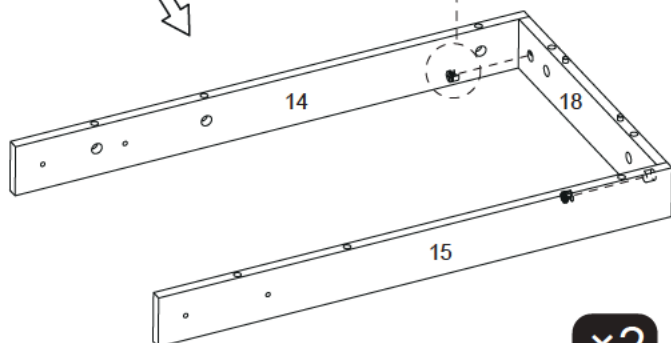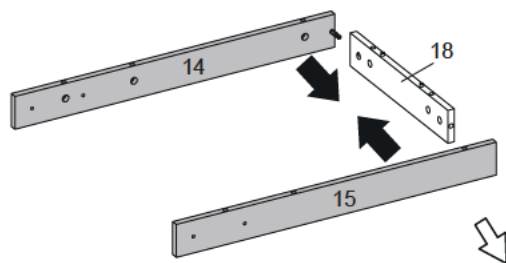

×2





C X4



C ×2

# 20

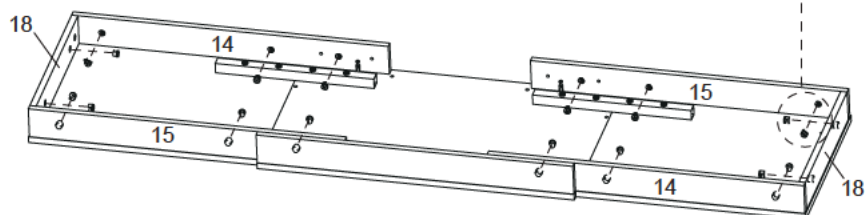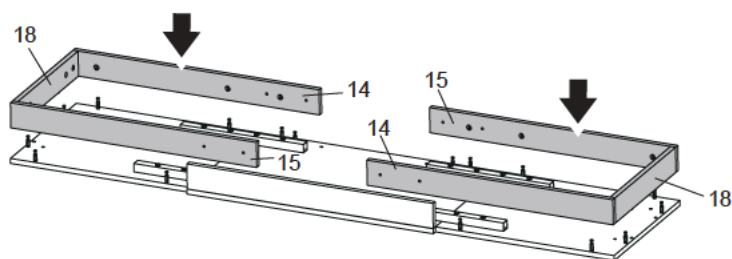


C ×16



C X16

# 21



**B** x2

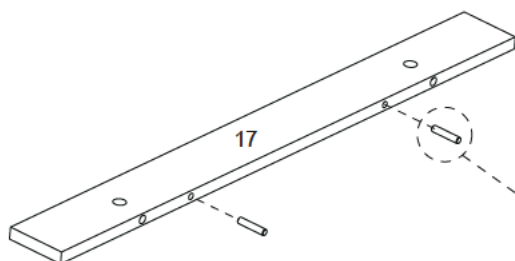

**B** x2

# 22

**C** x2

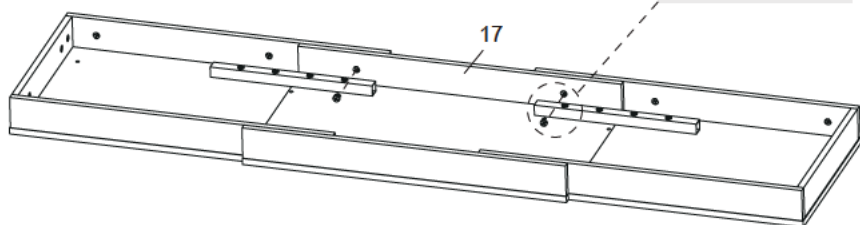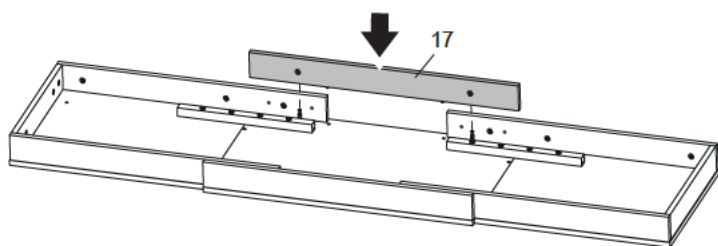


**C** x2

# 23



**J** X8  
M4x22

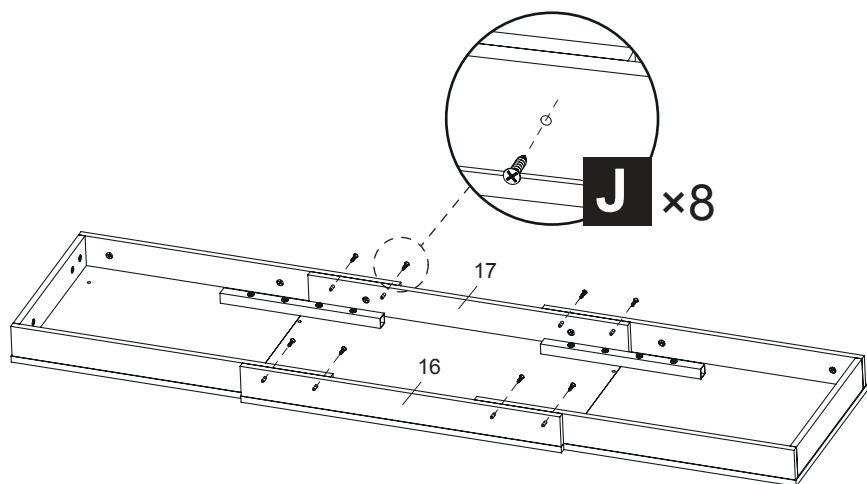


**J** x8

# 24




**E** X16

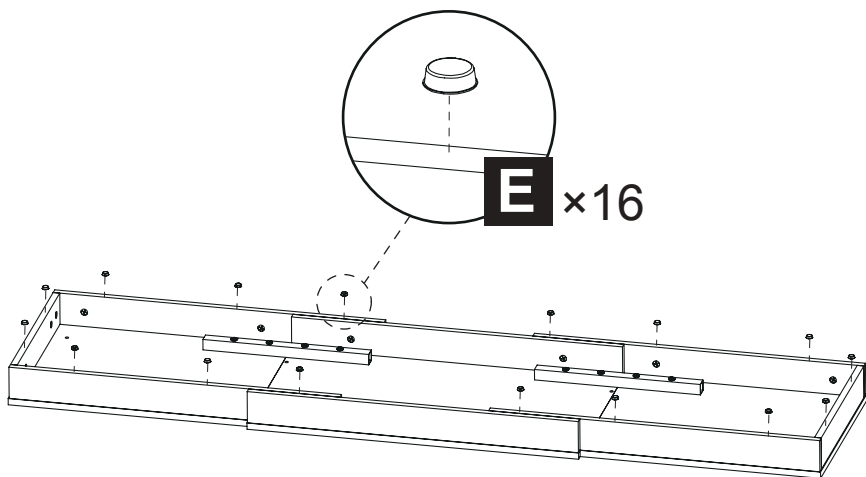


**E** x16

# 25

**A** X2

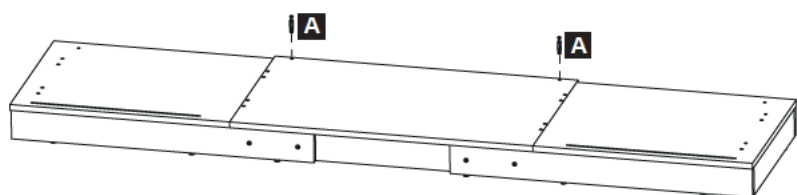

# 26

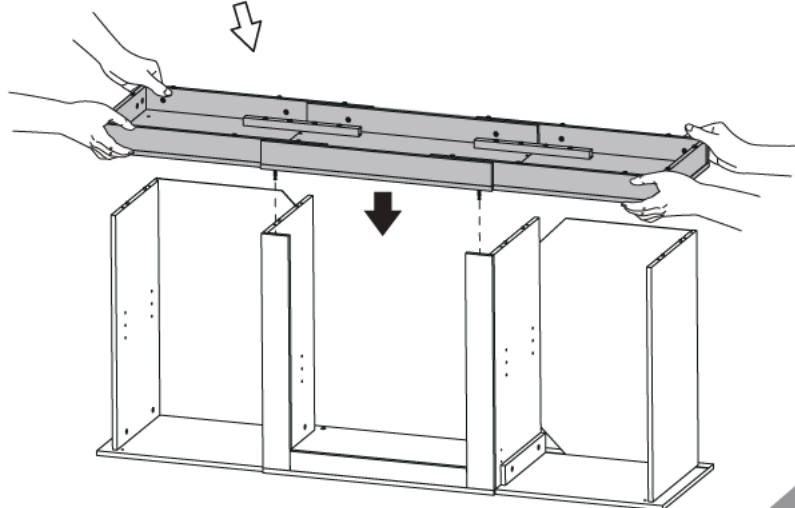


27



**C** X2




**C** X2

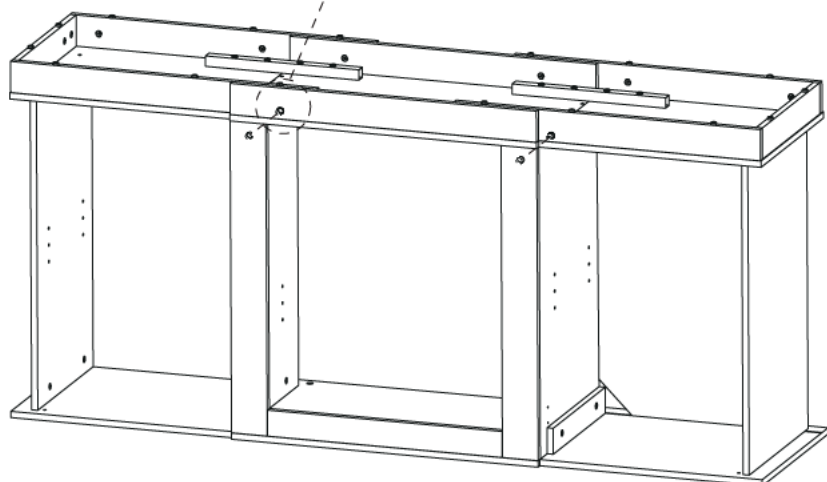


28





**I** X8  
M5x50

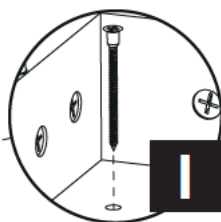


**I** X8

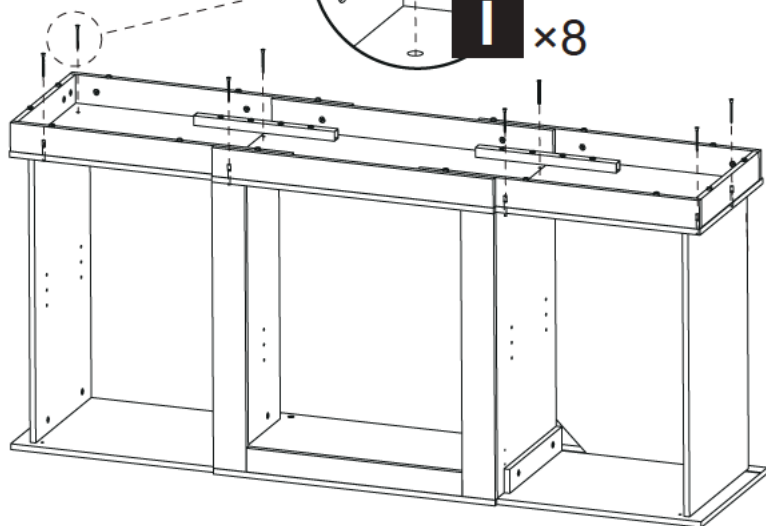

# 29





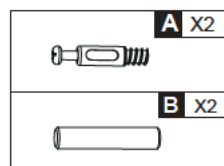
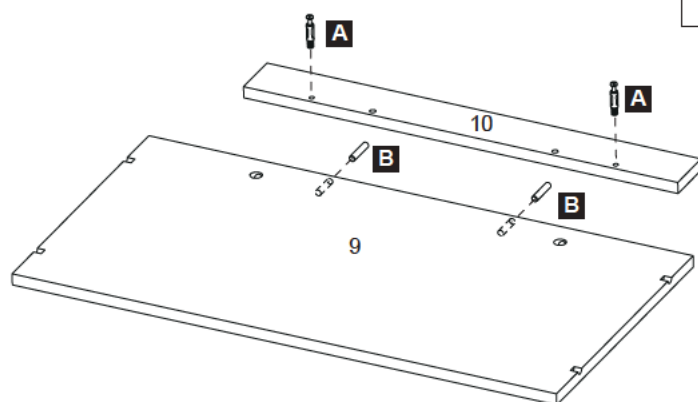


# 30

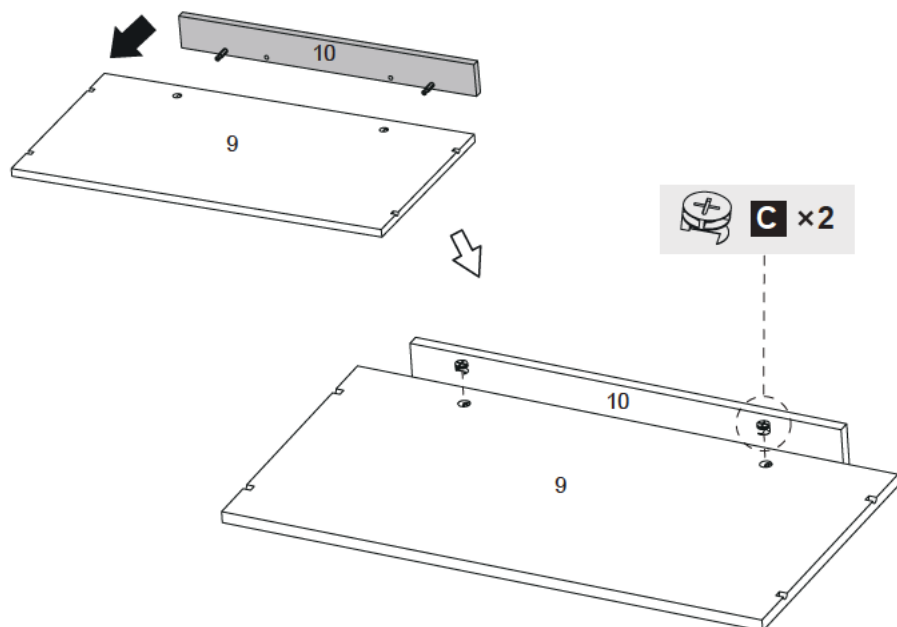

**REMARK**

If you are going to install a fireplace, you need to install Part **D** to the top level.

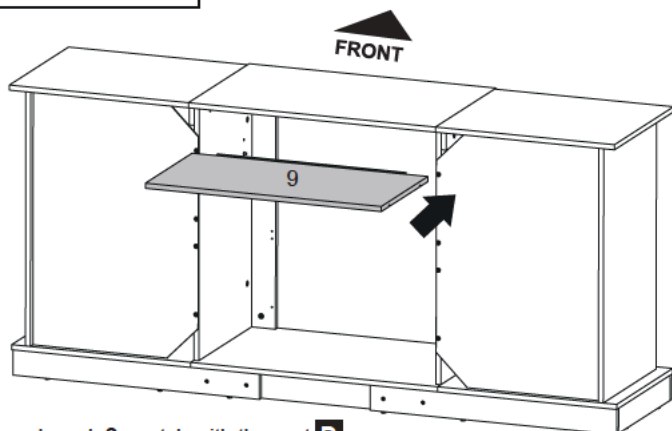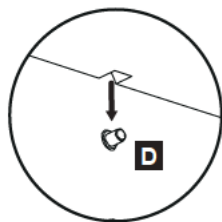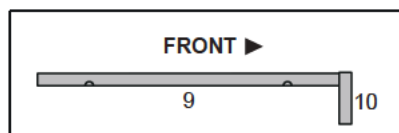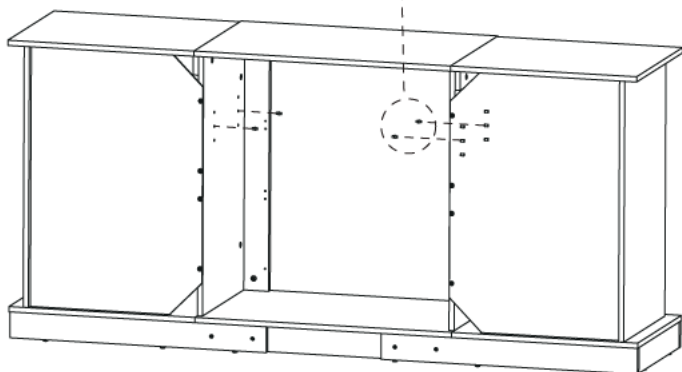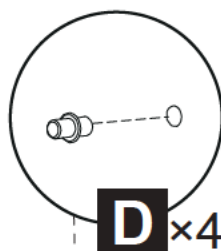
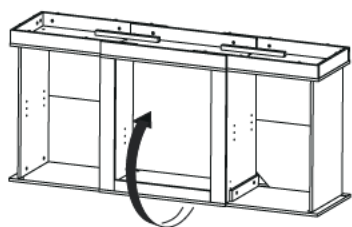
**REMARK**

Please make the groove on board **9** match with the part **D**.


# 32





**D** X8

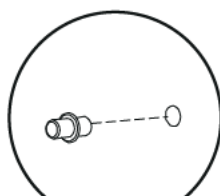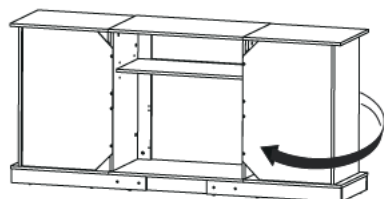

**D** X8

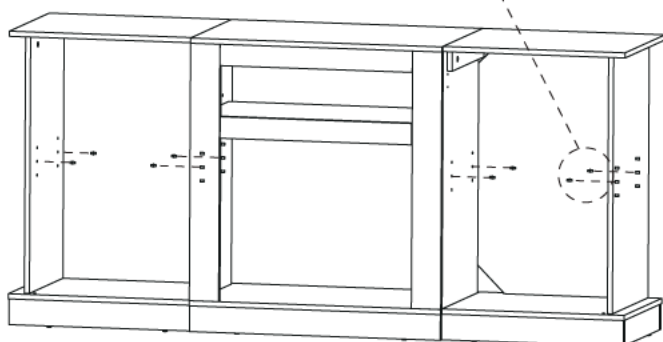

# 33

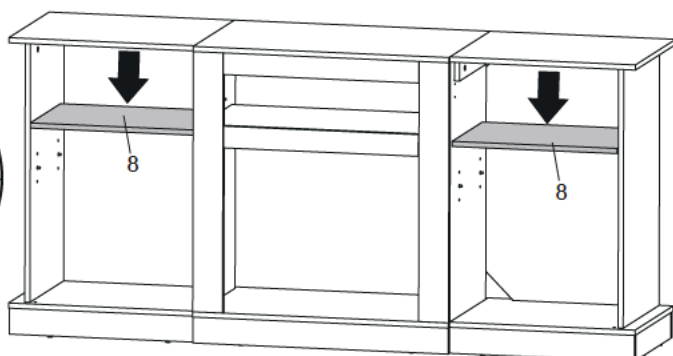
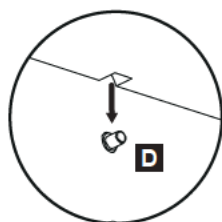


## REMARK



Please make the groove on board **8** match with the part **D**.




**REMARK**

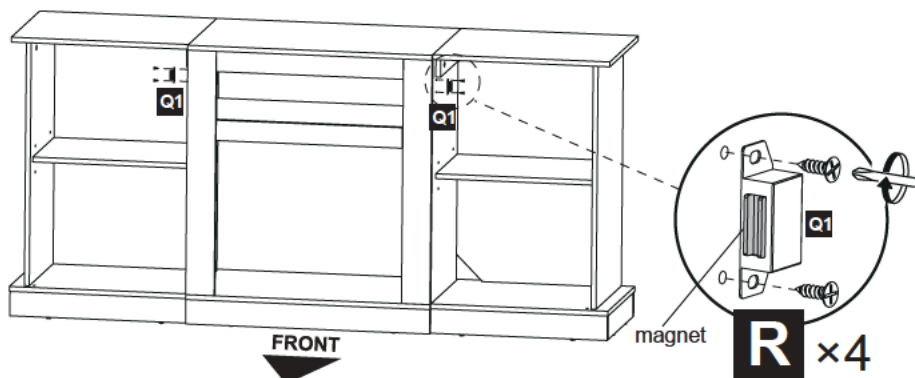
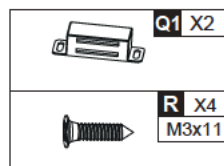
You can adjust the magnet to the right position through the oval hole to make a good connection with doors.

**REMARK**

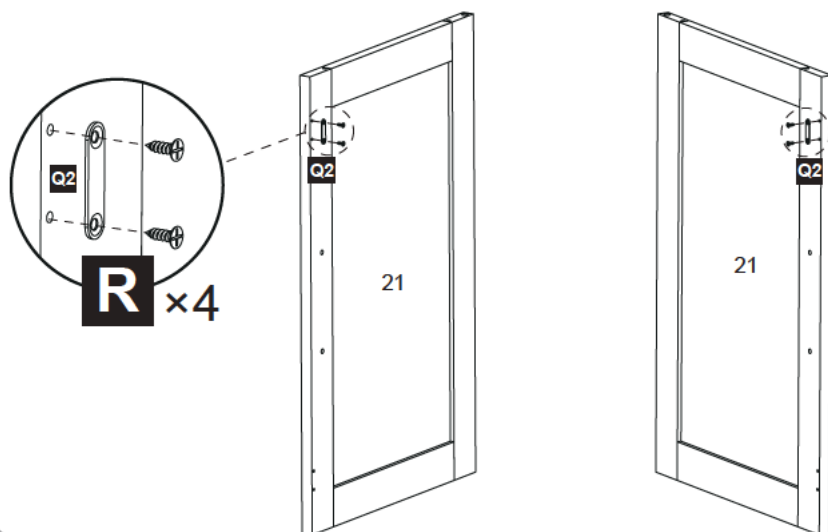Install the right side of the cabinet door, with the magnetic catch installed in the upper right corner of the door. Install the left side of the cabinet door with the lead magnetic catch installed in the upper left corner. (As shown in the picture)






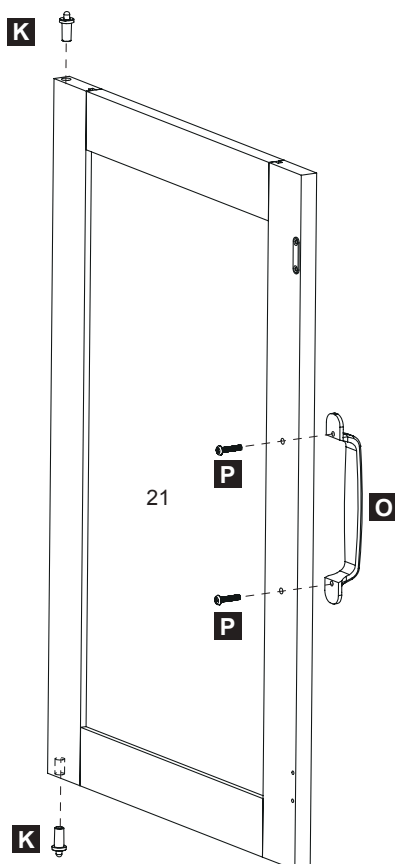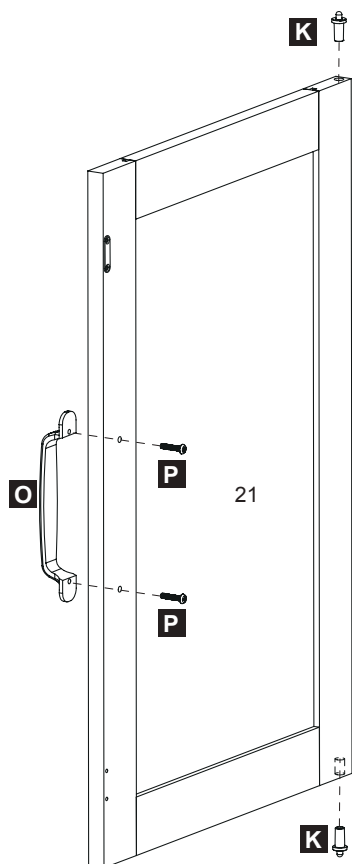

 <b>K</b> X4	 <b>O</b> X2
	 <b>P</b> X4






**REMARK**

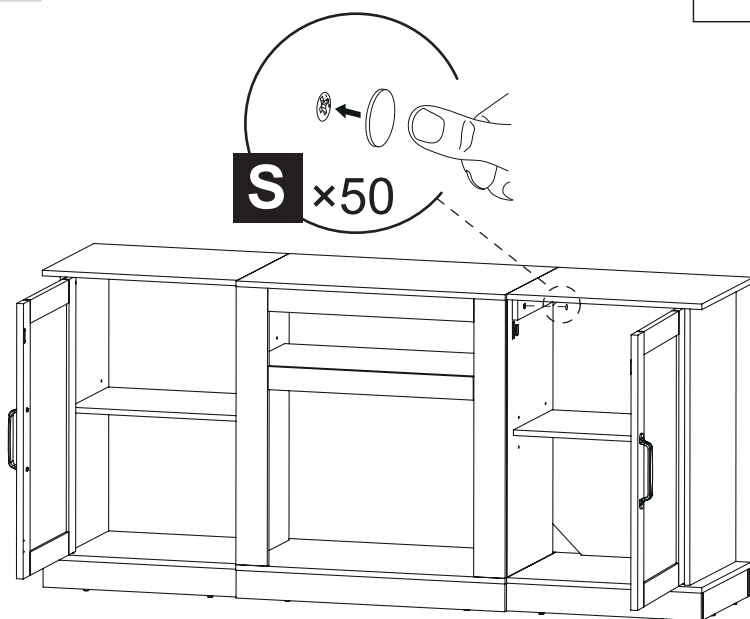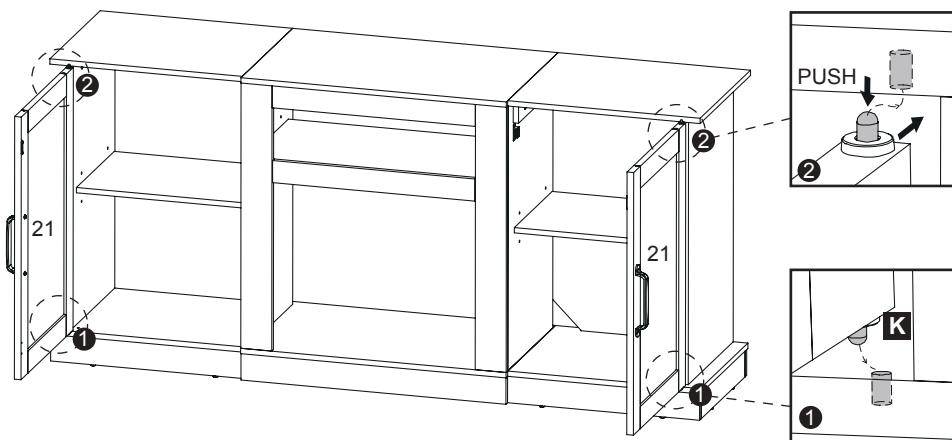1. Please install part **21** in the order shown in the picture. Install the bottom part first and then the upper part.
2. Please push down the part **K** and then install into the upper hole.



	<b>M</b> X8
	<b>N</b> X8 M4x14

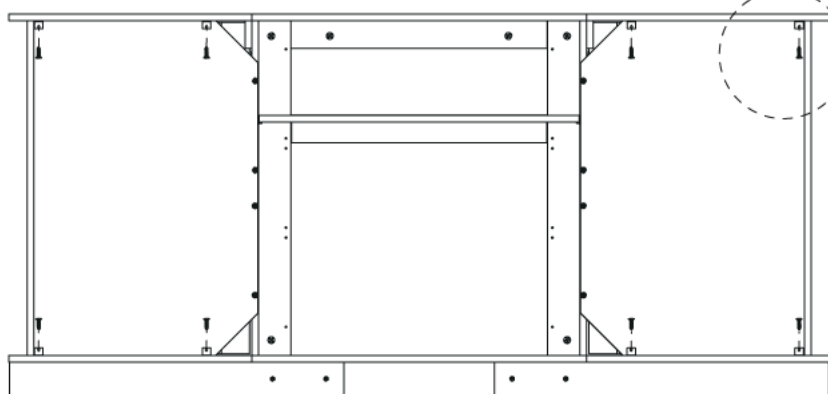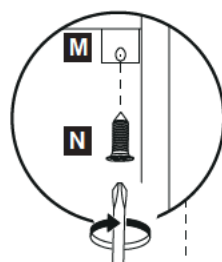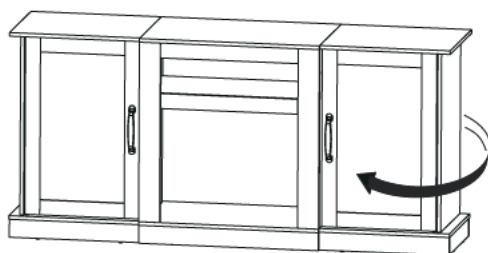

**REMARK**

Remove the protective film before use.

