



Installation Instruction

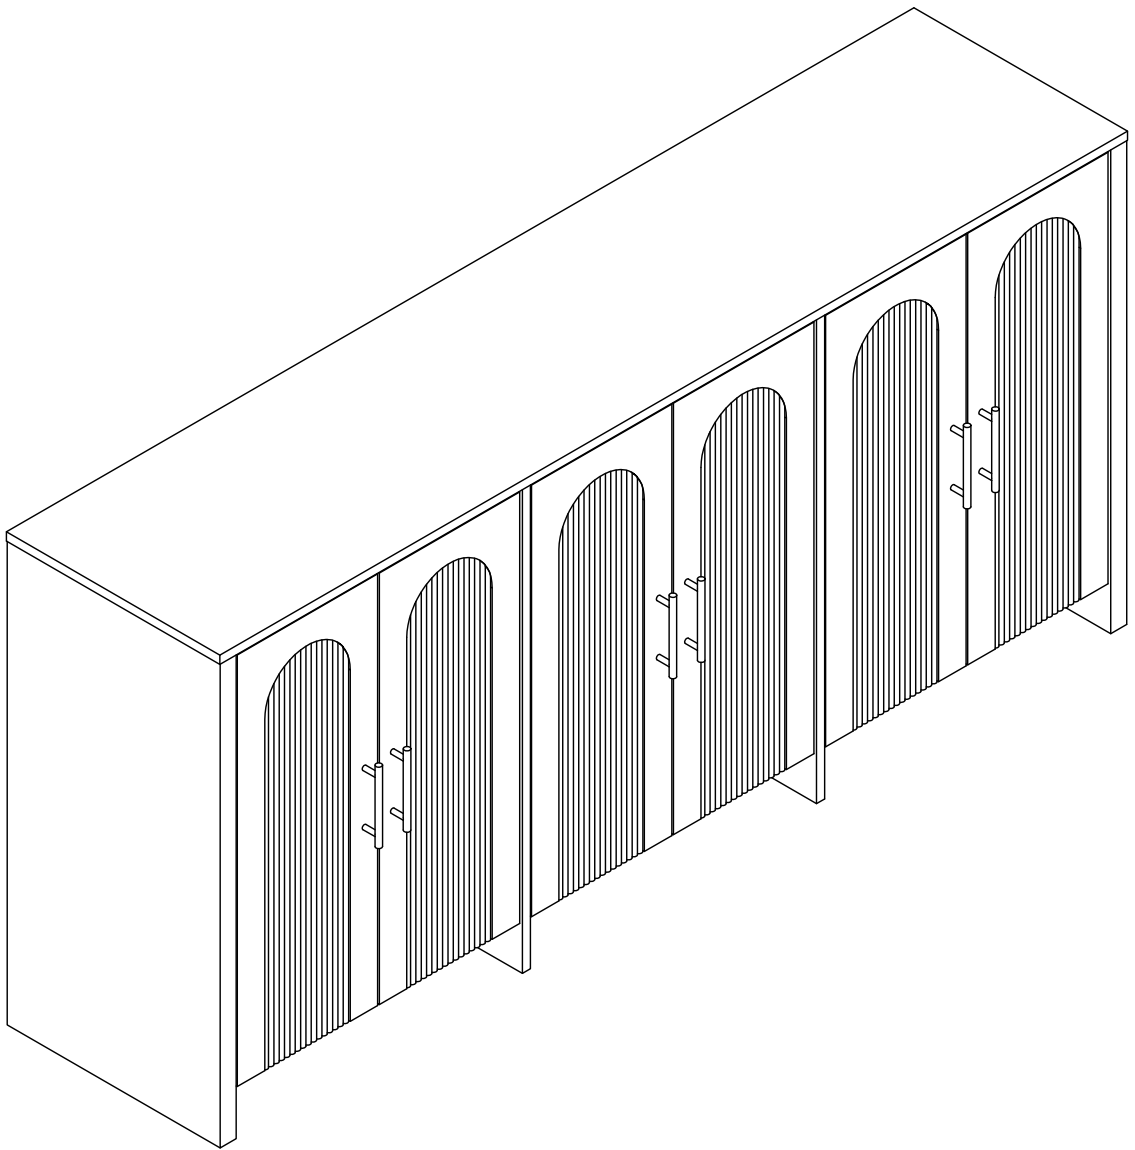


Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation

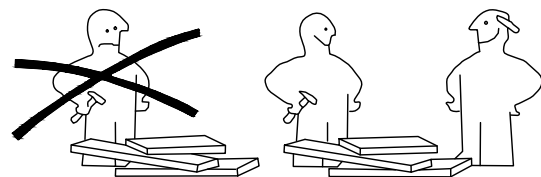


What' included


Code	Description	Qty
A	Cam Bolt M6X35MM	32
B	Cam Lock15X10MM	32
C	Wooden Dowel M8X30MM	12
D	Wooden Dowel M8X50MM	4
E	The screw M3.5X14MM	96
F	The screw M3.0X14MM	24
G	Screw M4X40MM	2
H	Screw M3.5X12MM	2
I	Ron absorption	6
J	Conical metal handle	6
K	Sheet iron	12
L	Nylon Strap	2
M	Anchor	2
N	Hole position sticker	20
O	Hinge	12
P	Foot nail	8
Q	The back button	24
R	Cam Bolt M4X18MM	12
S	Shelf Holder	12

The Hardware


Ⓐ




Ⓑ



Ⓒ



Ⓓ




Ⓔ




Ⓕ




Ⓖ



Ⓗ



Ⓘ




Ⓙ



Ⓚ



Ⓛ




Ⓜ



Ⓝ




Ⓞ



Ⓟ



Ⓠ



Ⓡ



Ⓢ




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)


Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Left Bottom Panel	1
3	Right Bottom Panel	1
4	Midsole plate	1
5	Left side board	1
6	Right side board	1
7	Middle left side panel	1
8	Middle right plate	1
9	Back tie	2
10	Back tie	1
11	Backboard	4
12	Backboard	2
13	Right ventricular endplateeft	2
14	Right ventricular endplateeft	1
15	Left ventricular endplateeft	3
16	Right ventricular endplateeft	3


The Accessoriess

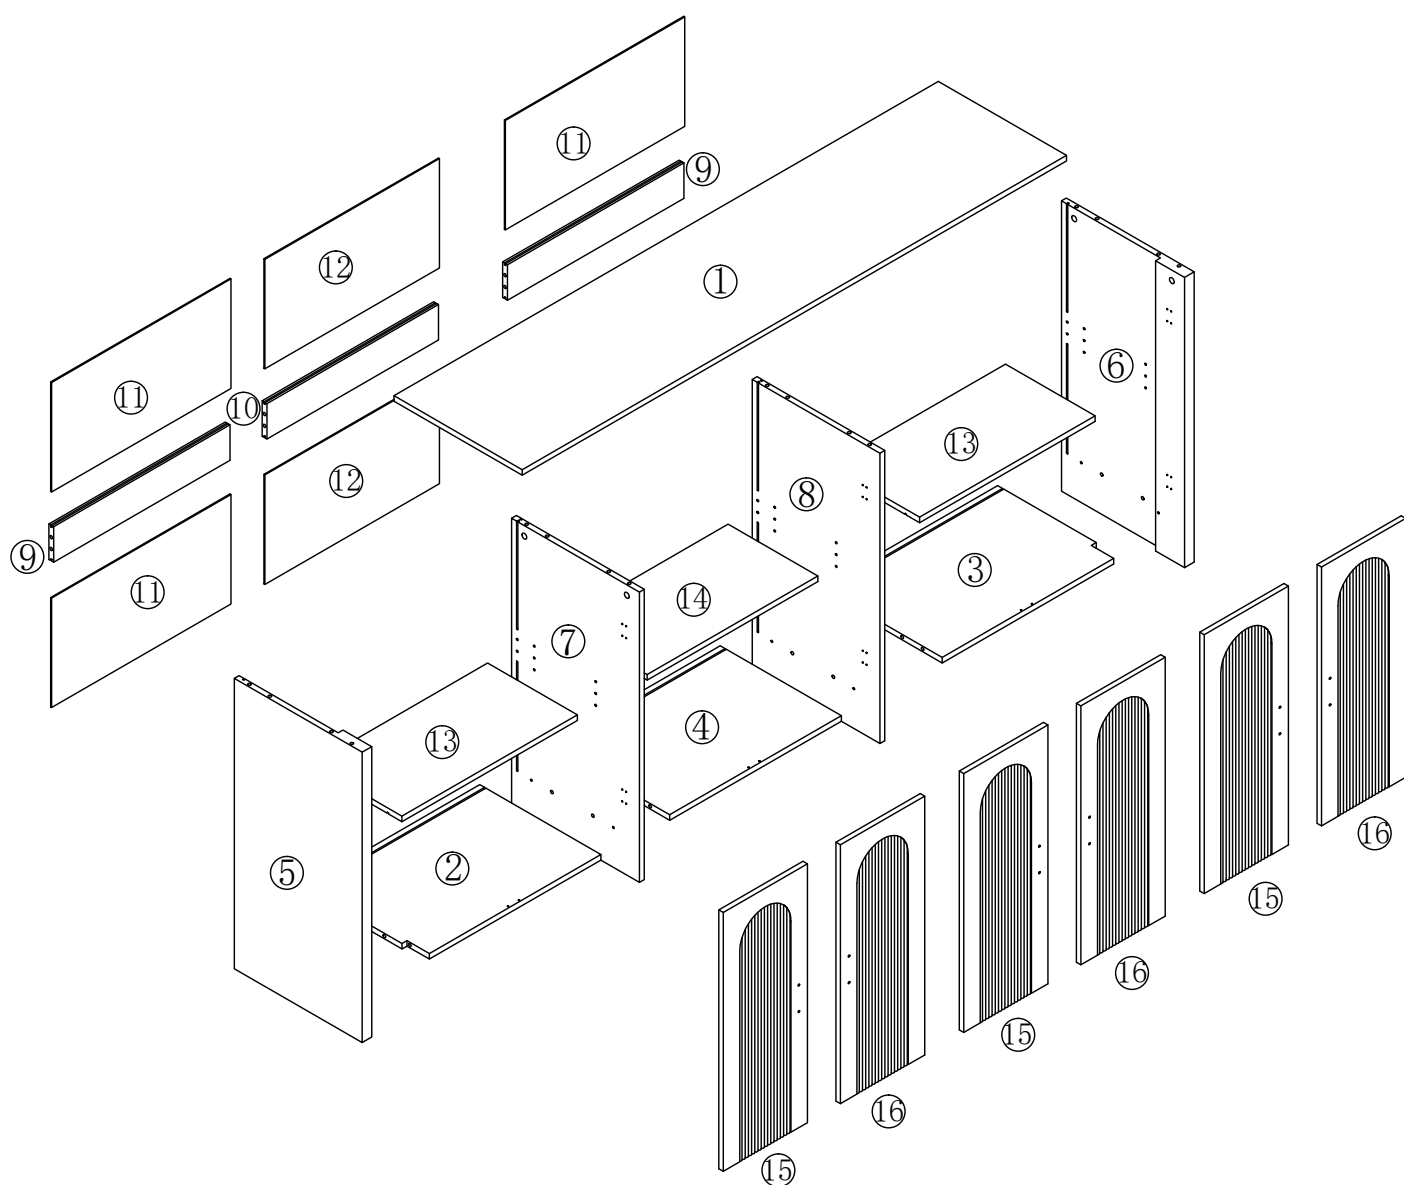


Step 1

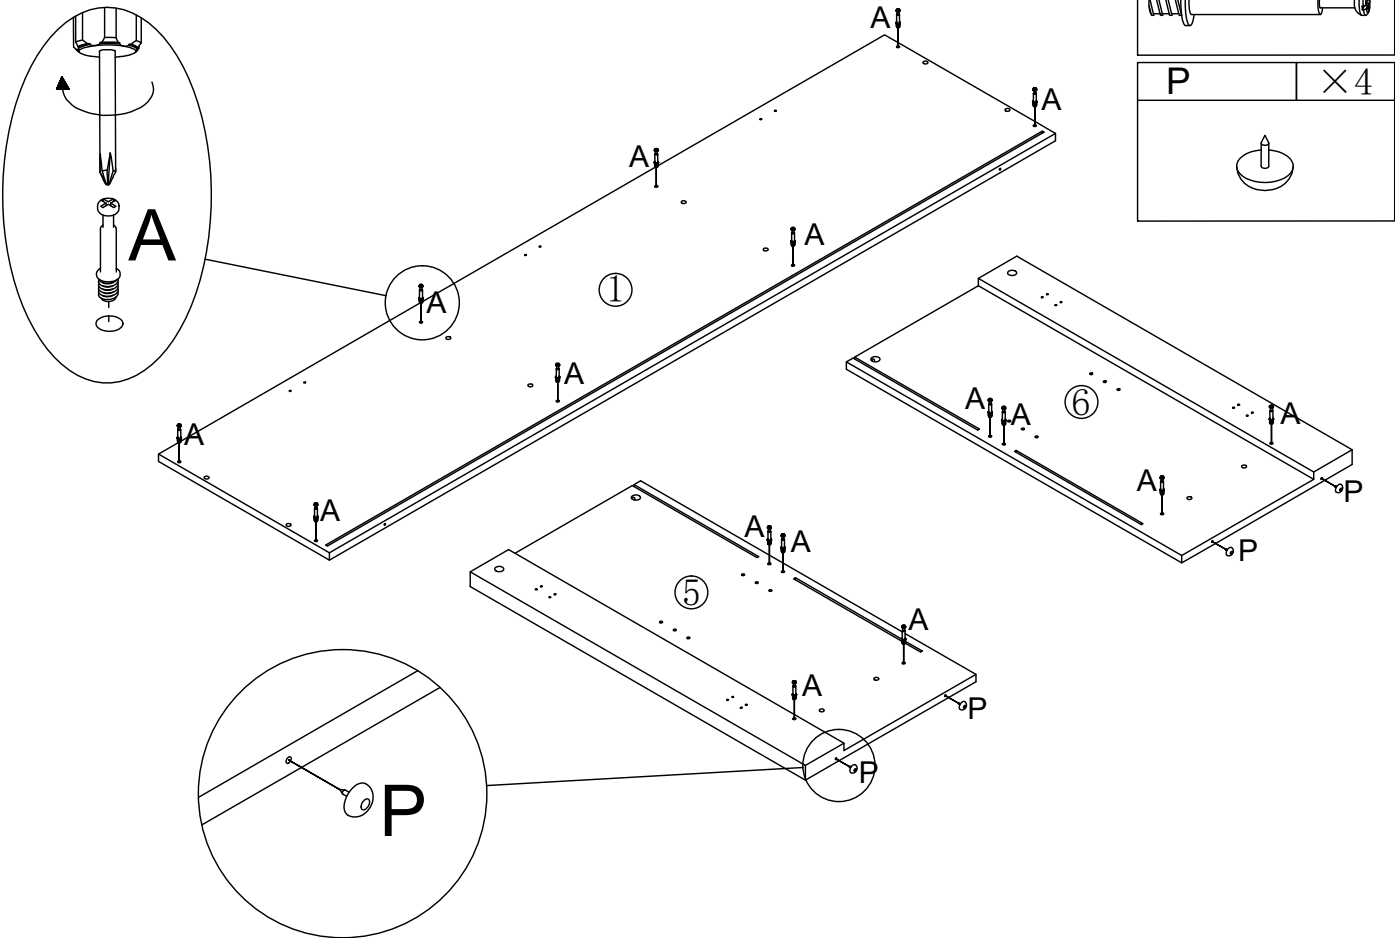



Step 2

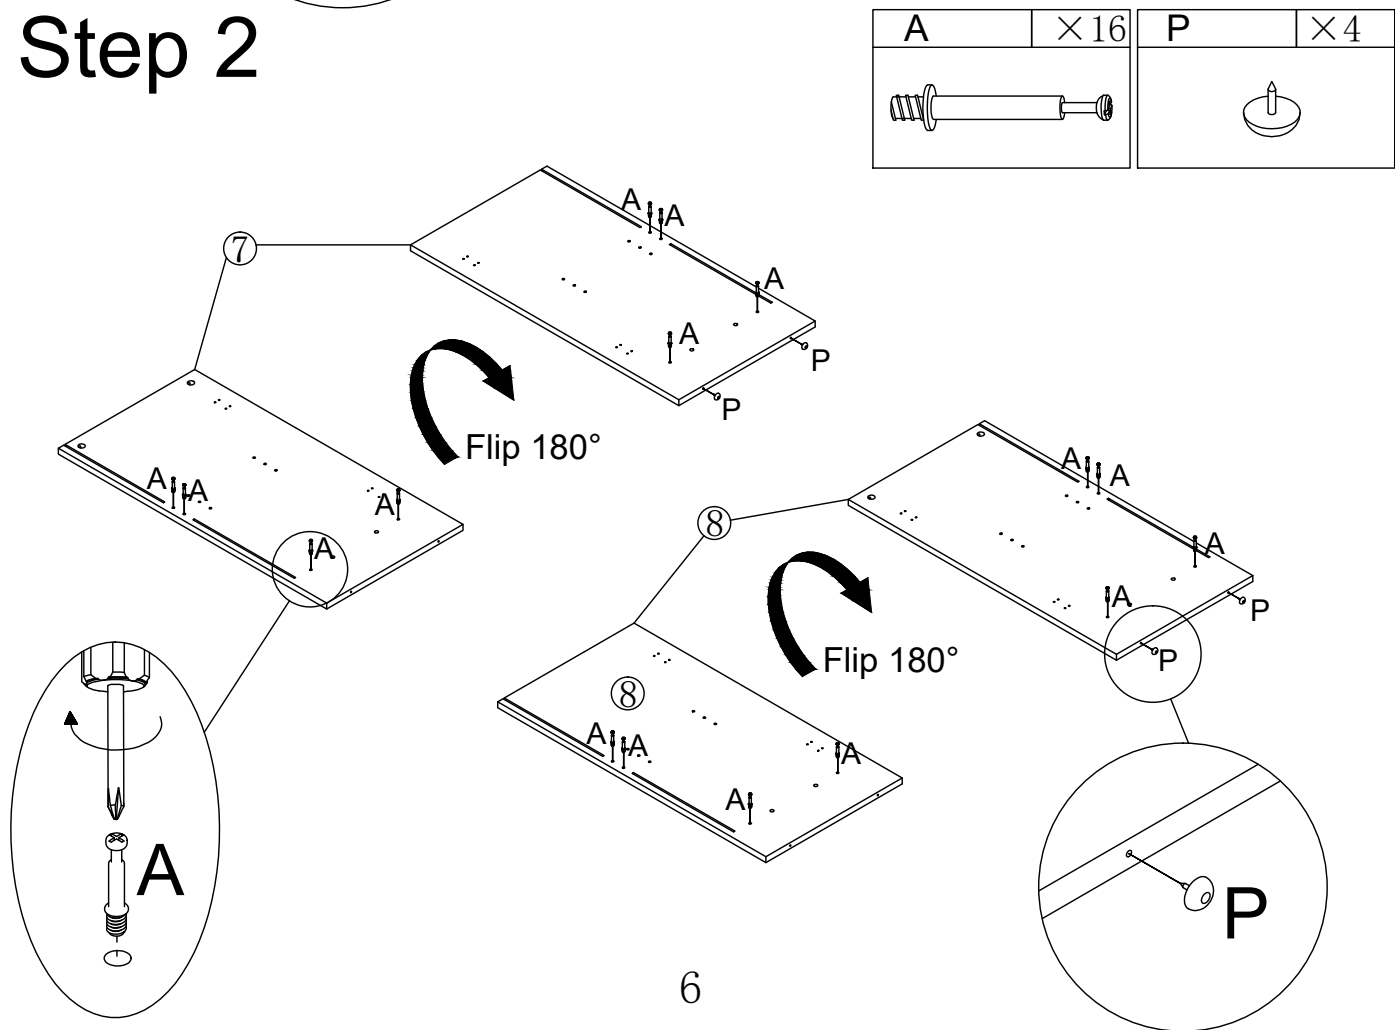


Step 3


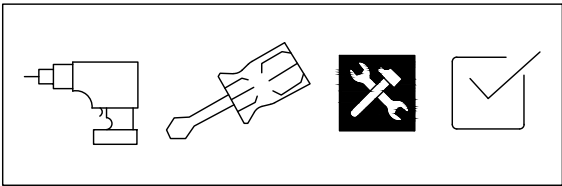


F	×12	I	×6
			

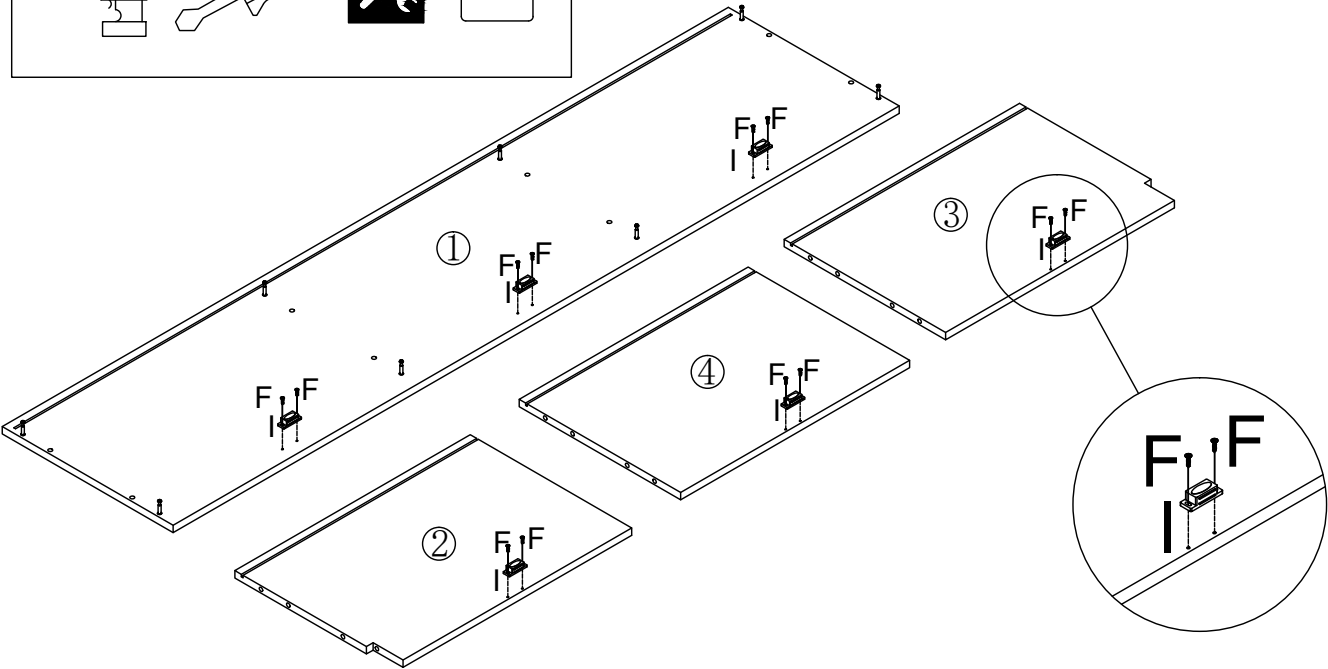


Step 4


B	×4	C	×2
			
		N	×2
			

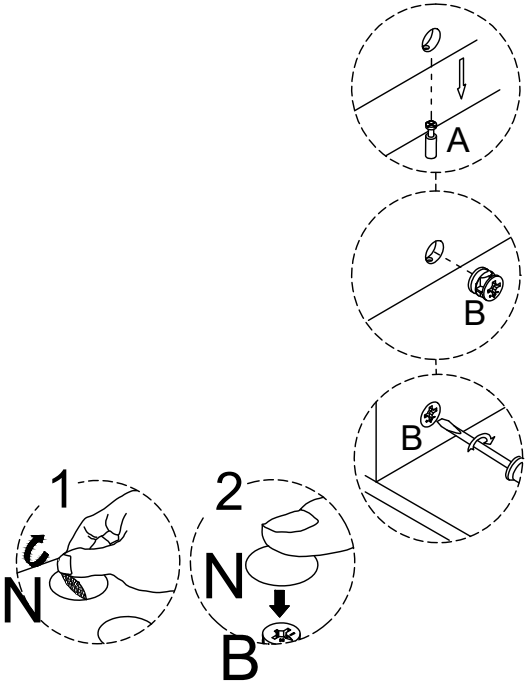
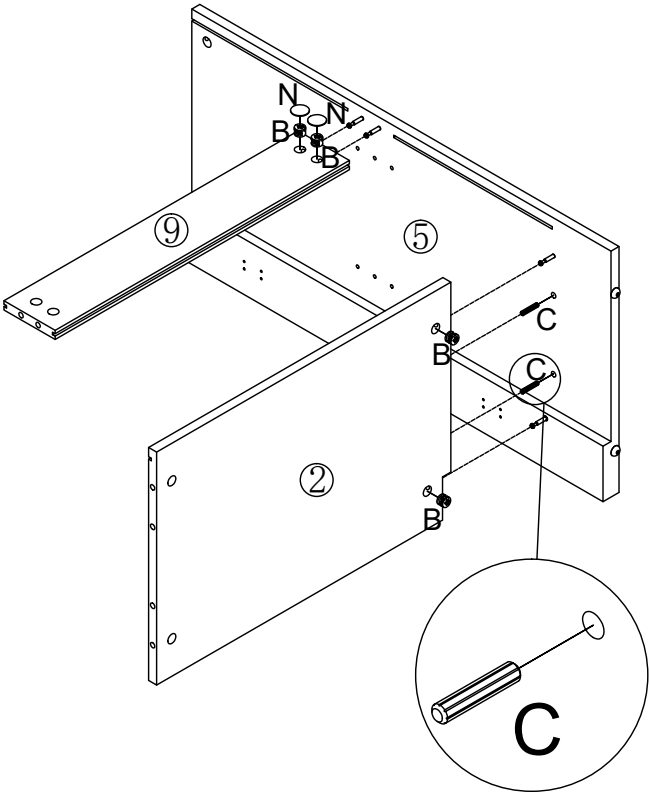





Step 5

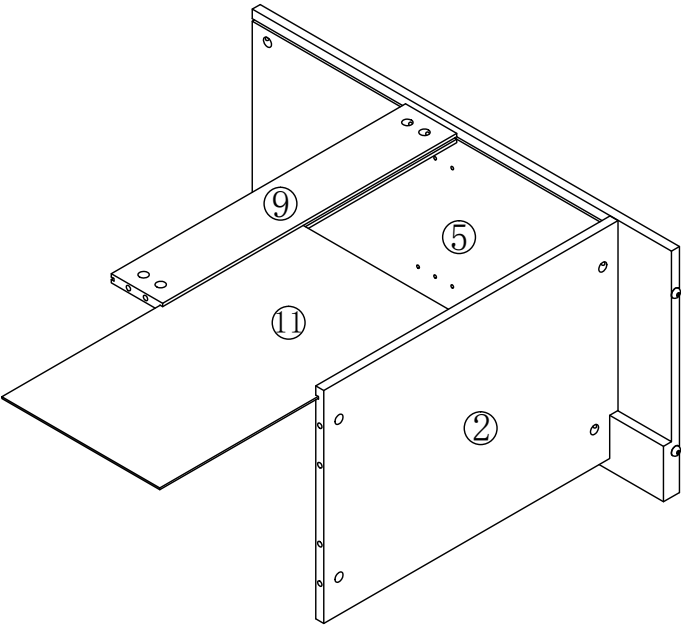


Step 6

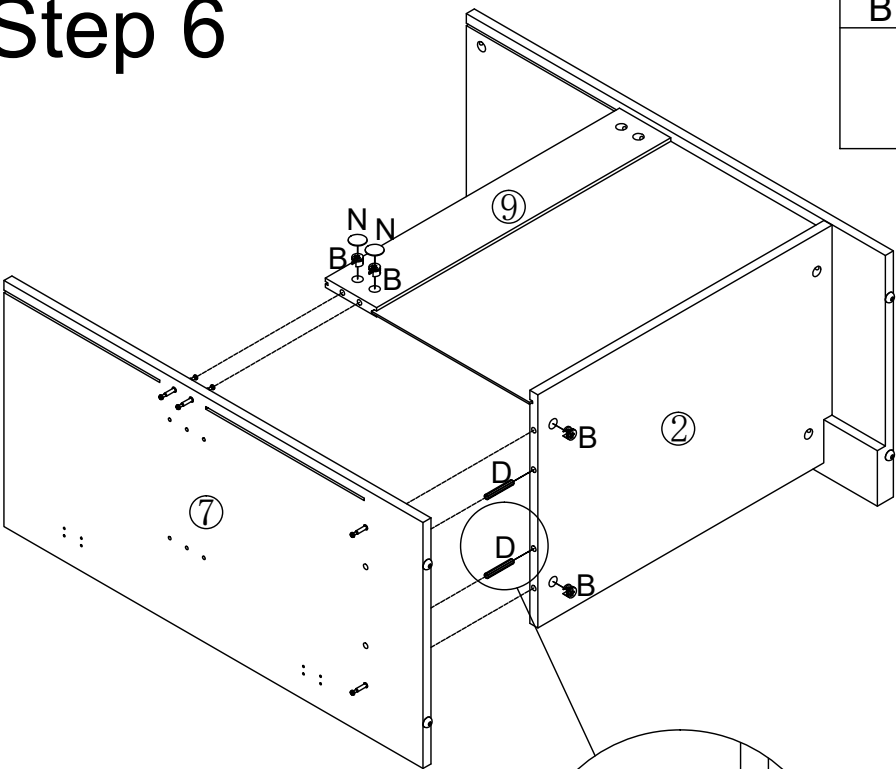


B	×4	D	×2
			
		N	×2
			

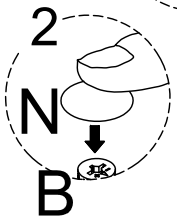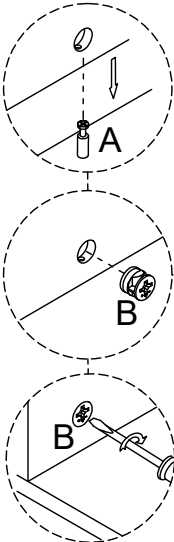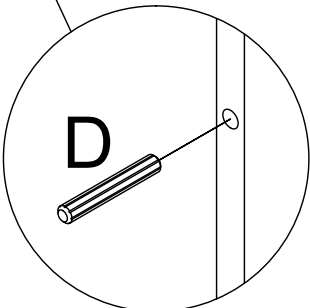


Step 7



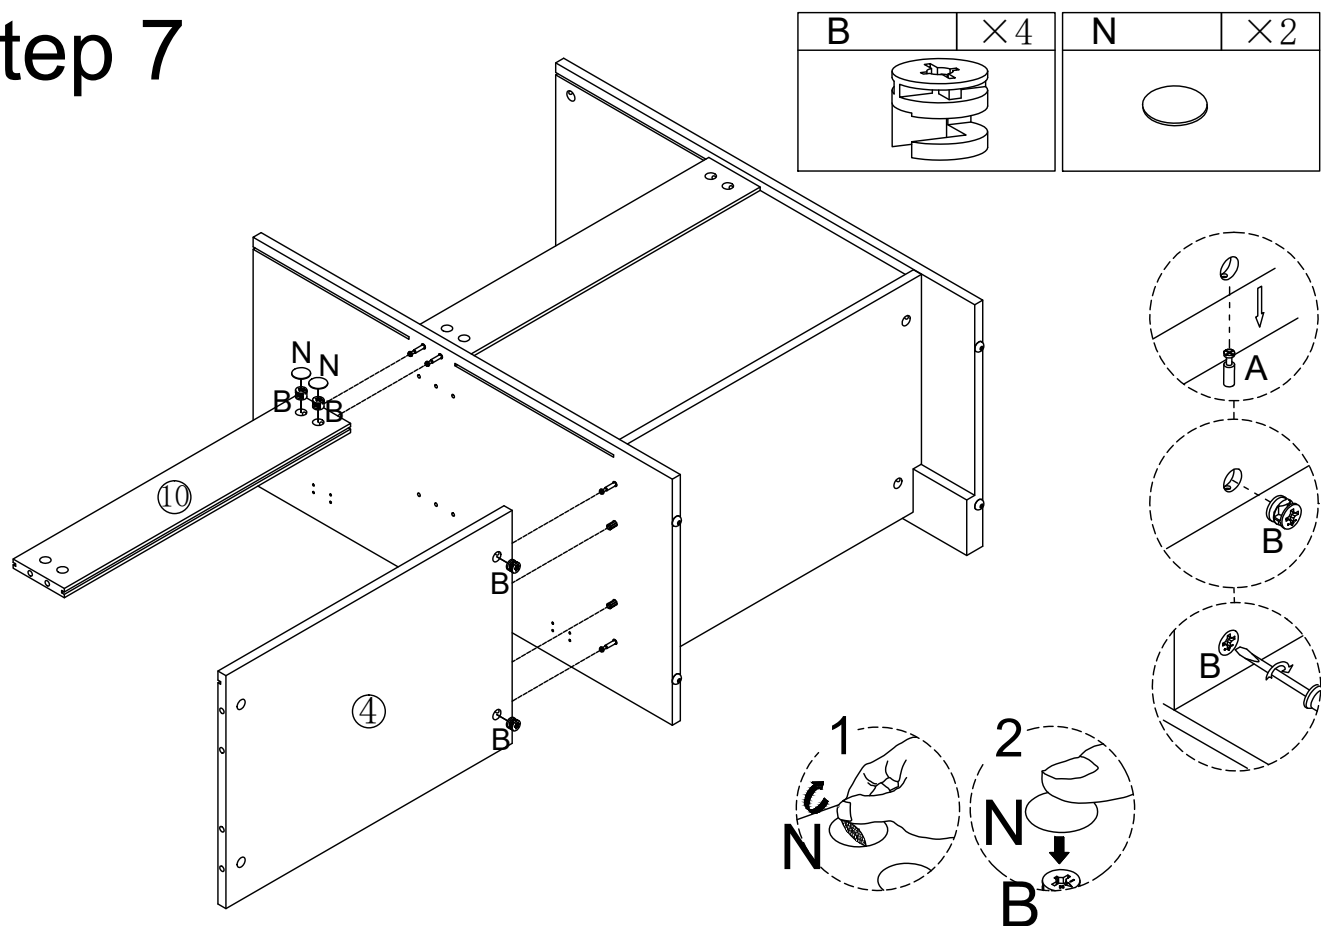


Step 8

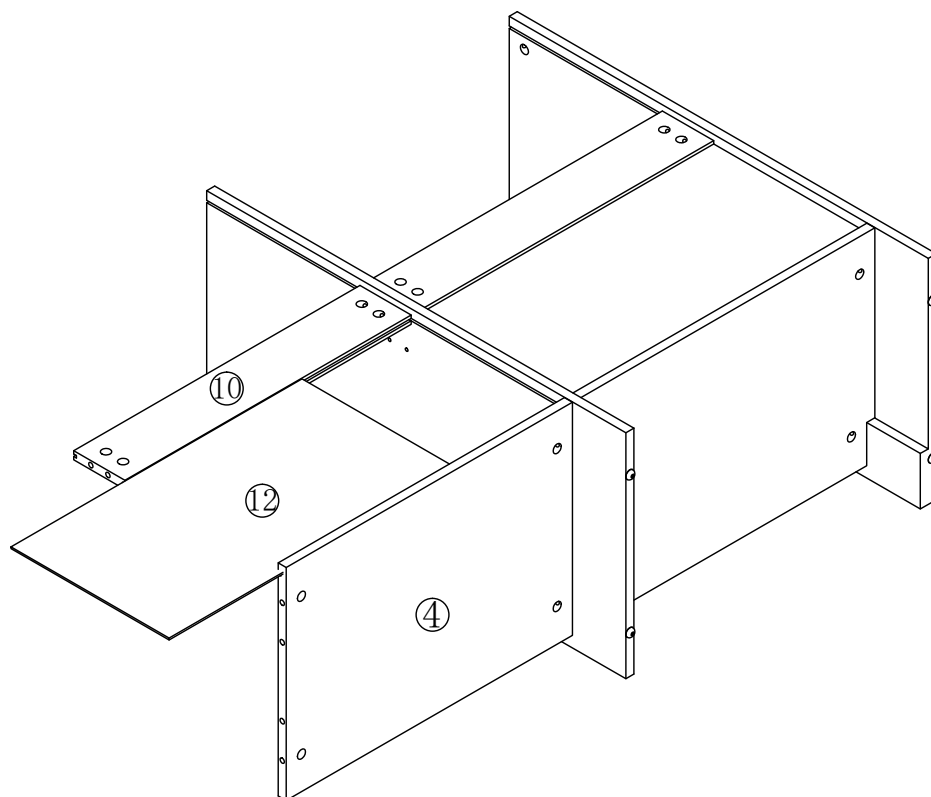




Step 9

B	×4	D	×2
			
		N	×2
			

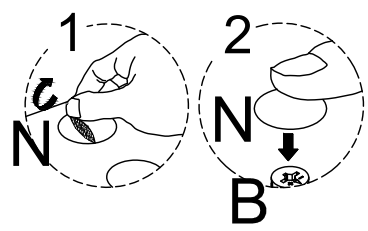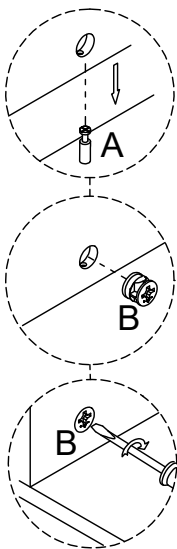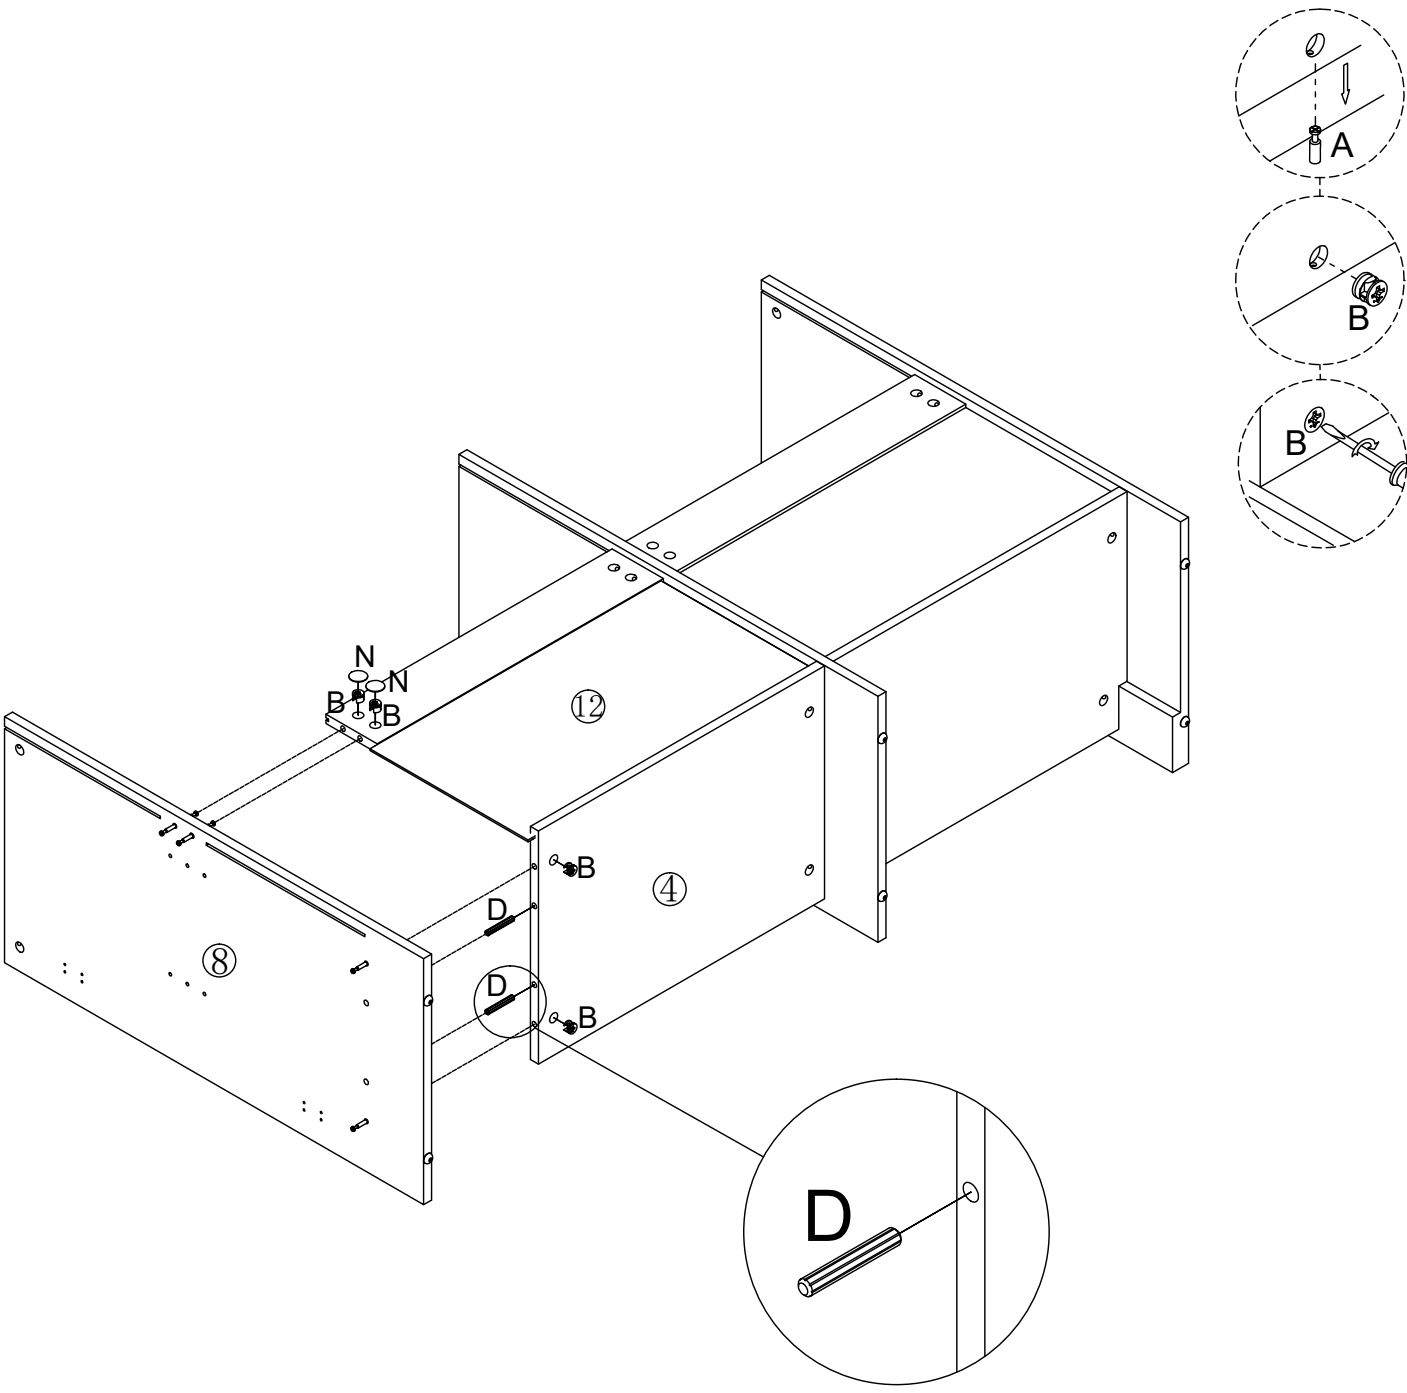


Step 10


B	×4	N	×2
			

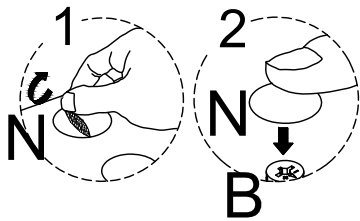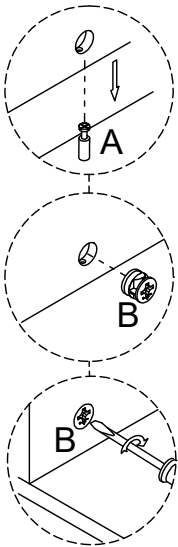
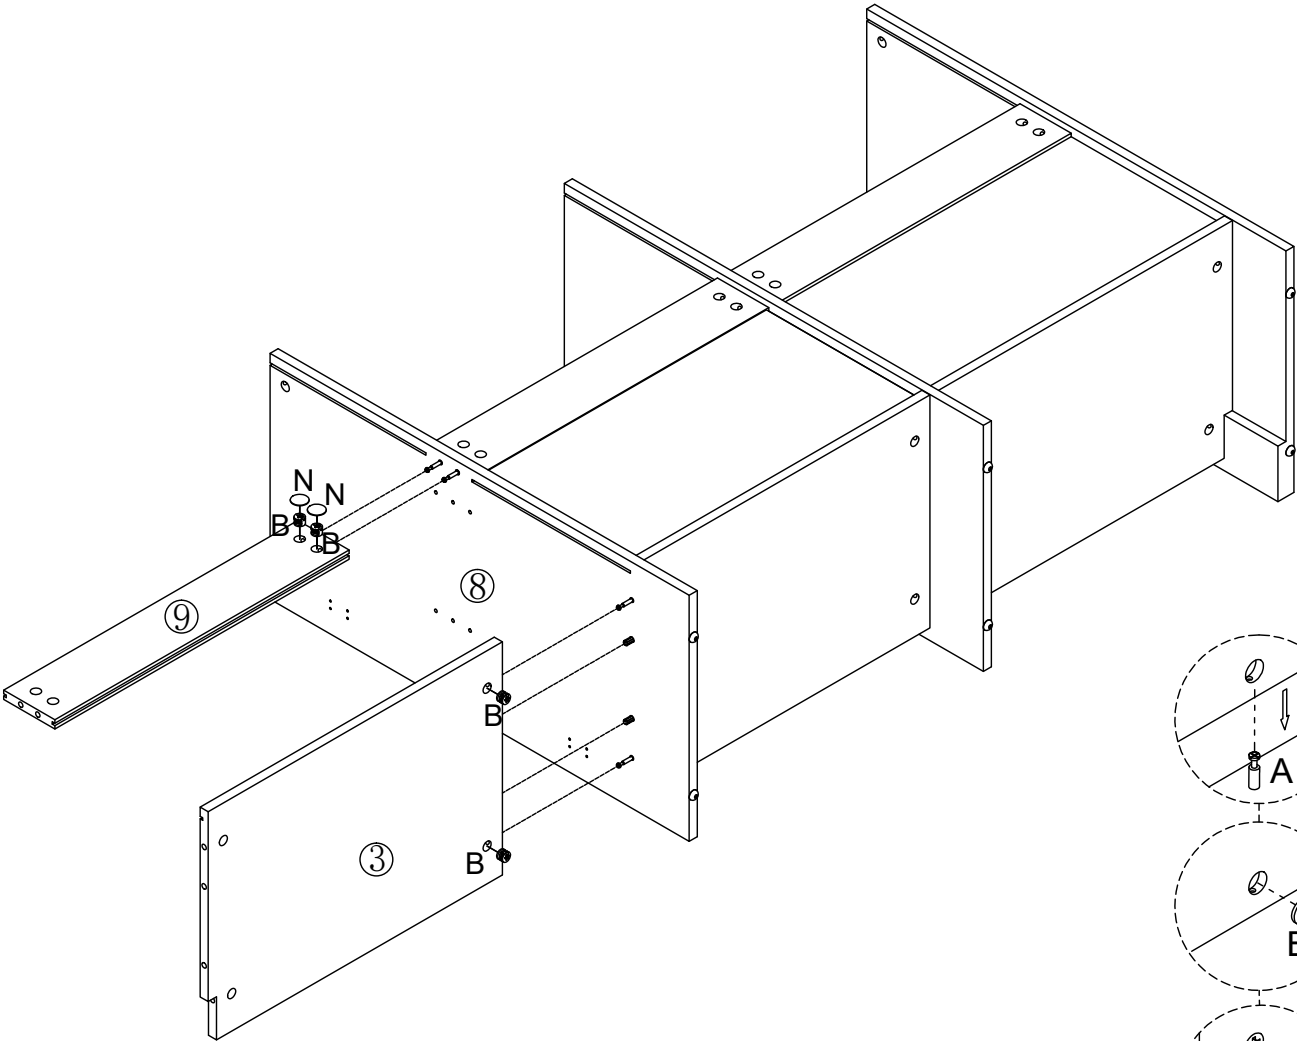





Step 11

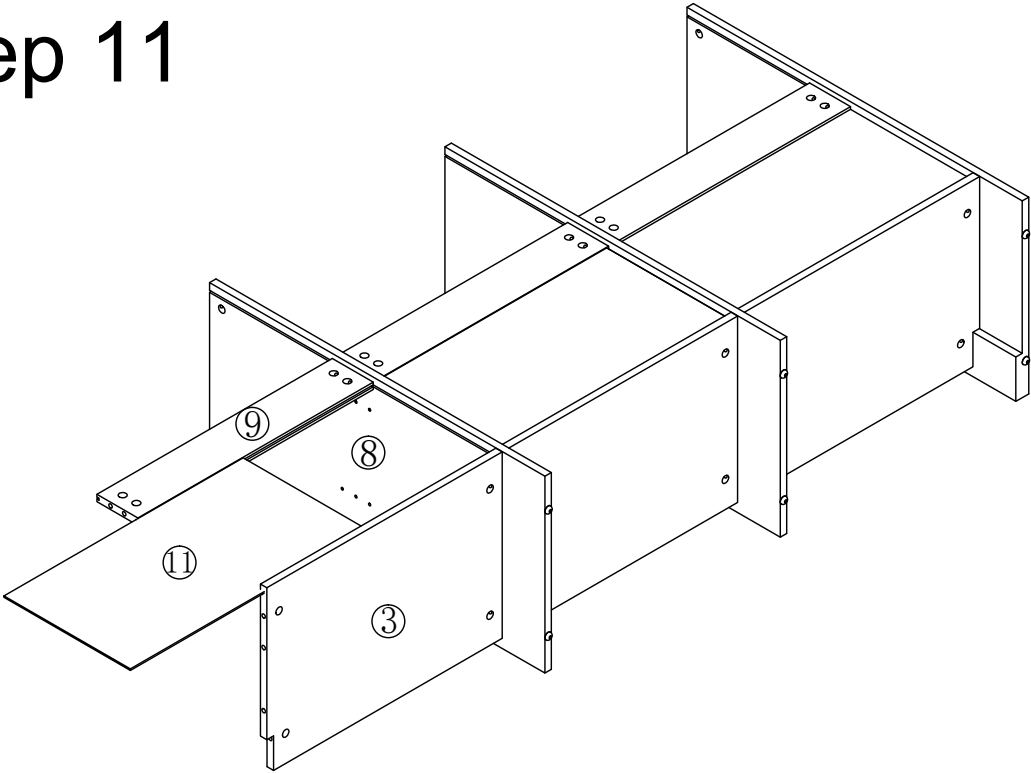


Step 12

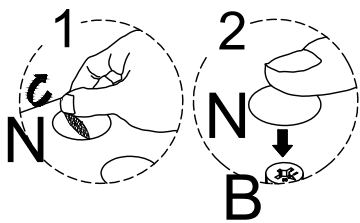



B	×4	C	×2
			
		N	×2
			

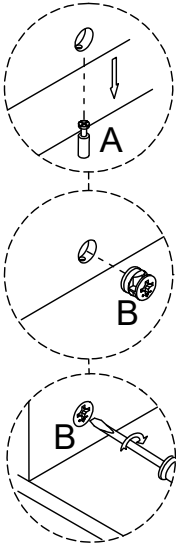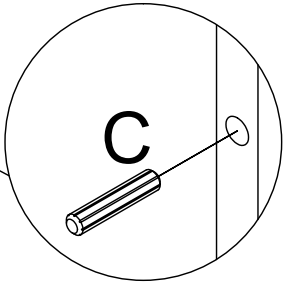
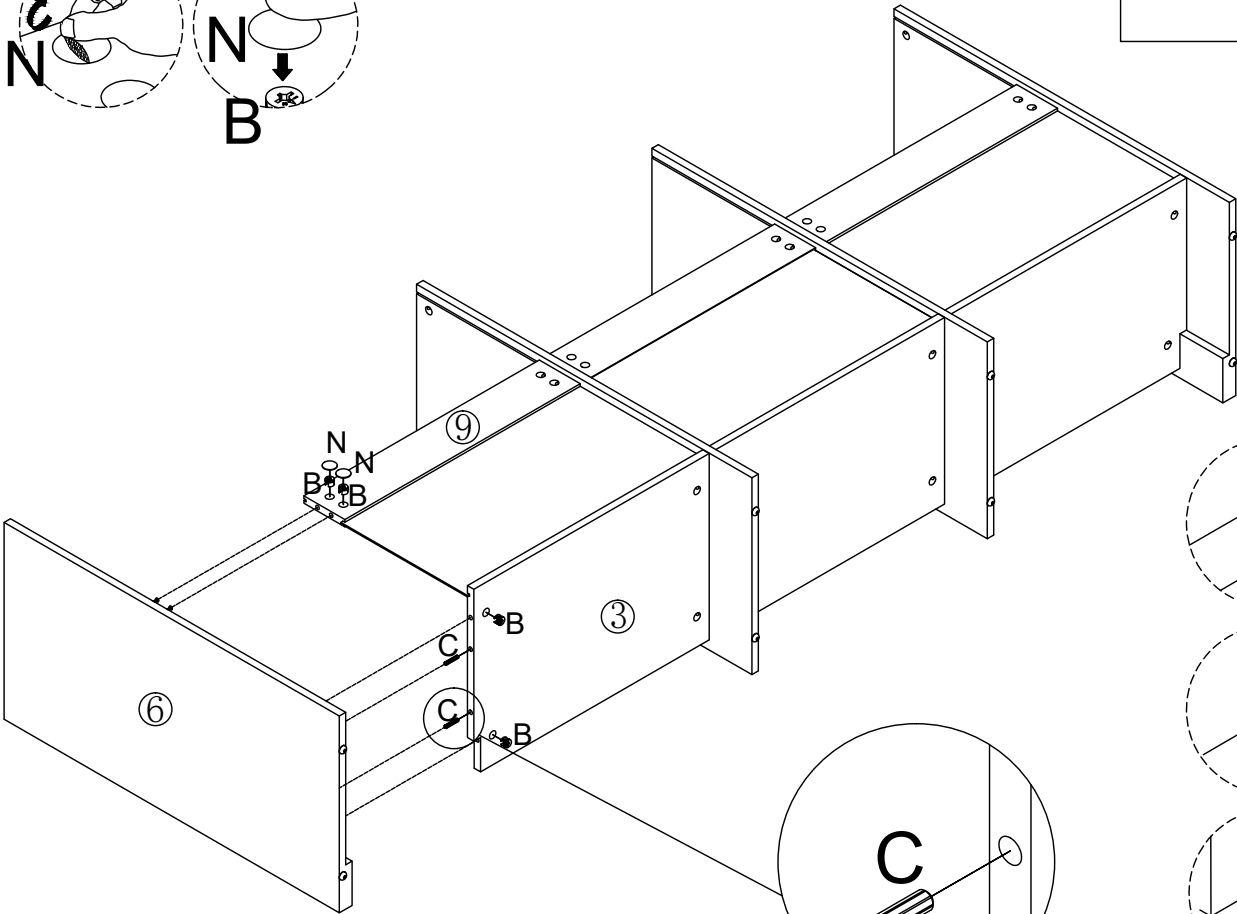


Step 13



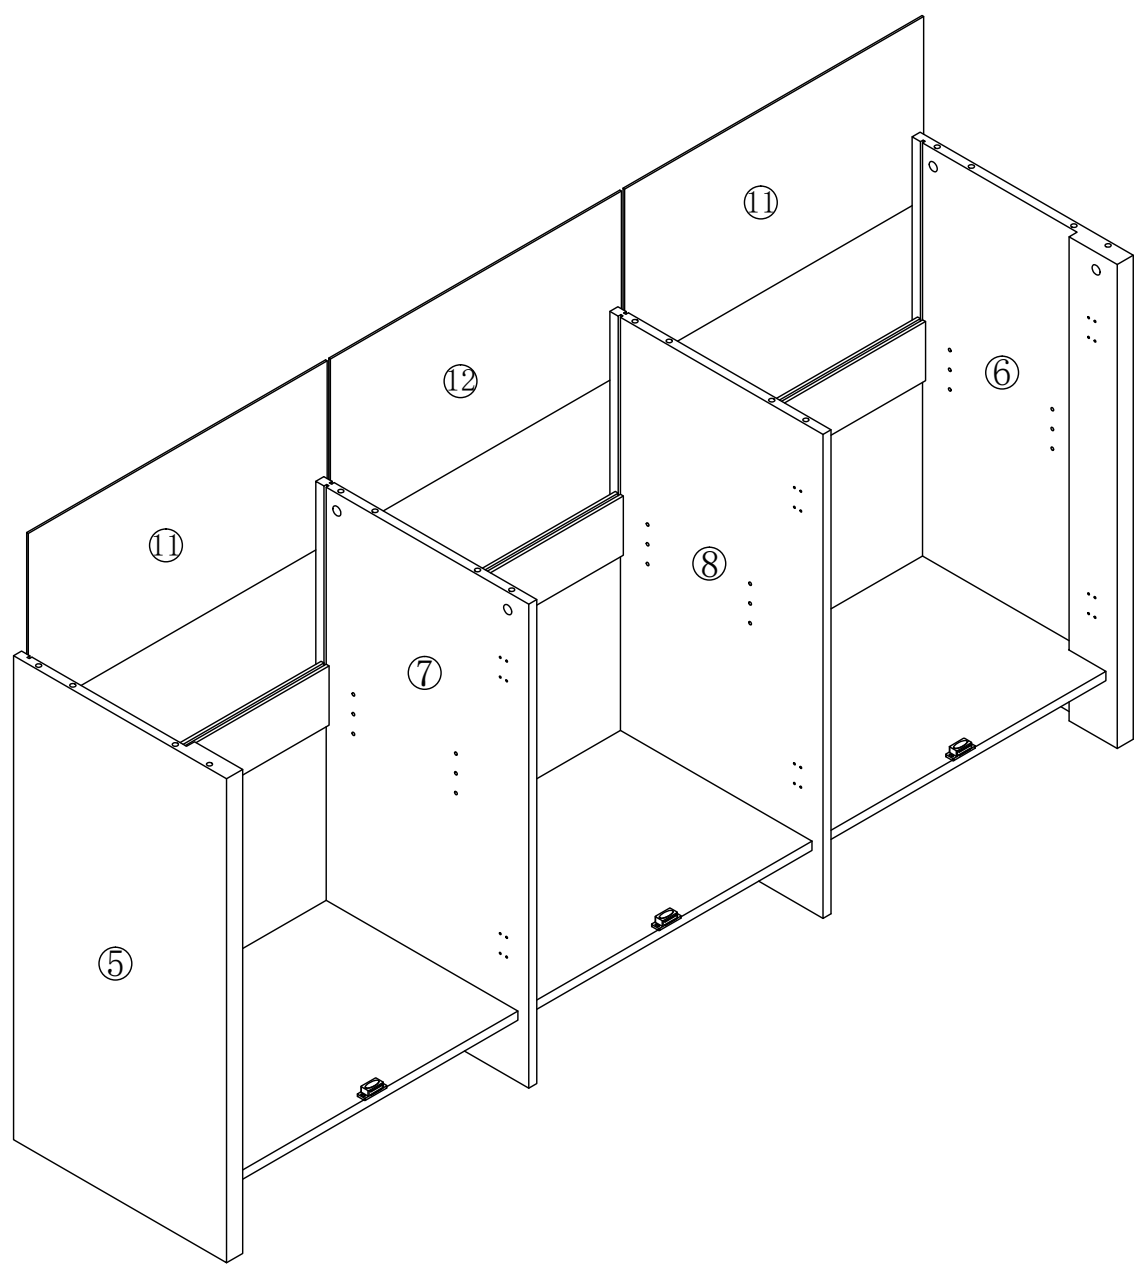




Step 14

B	×8	C	×8
			
		N	×8
			

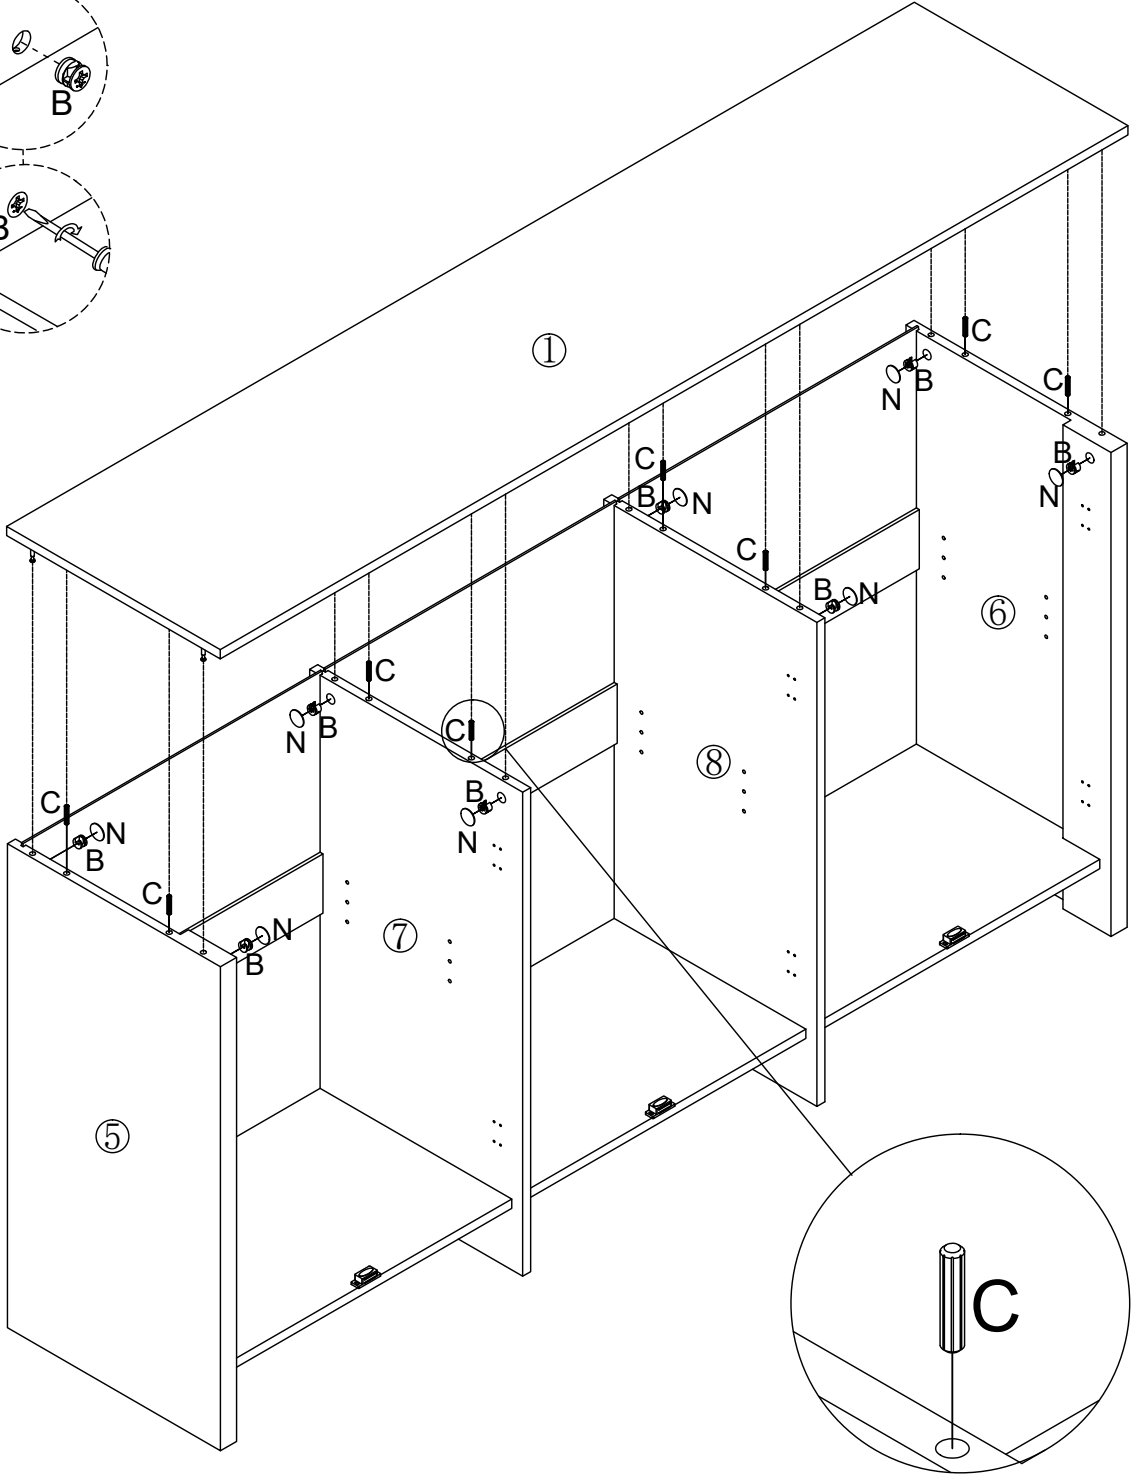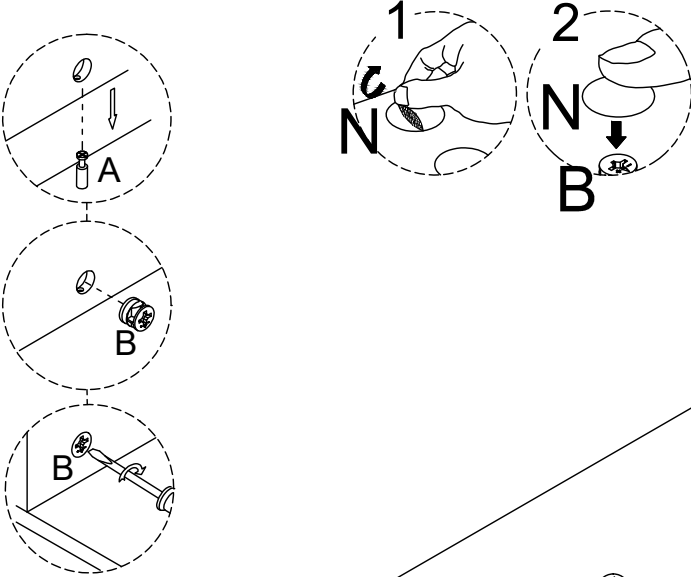


Step 15

E	×24	H	×2	L	×2
					
				Q	×24
					

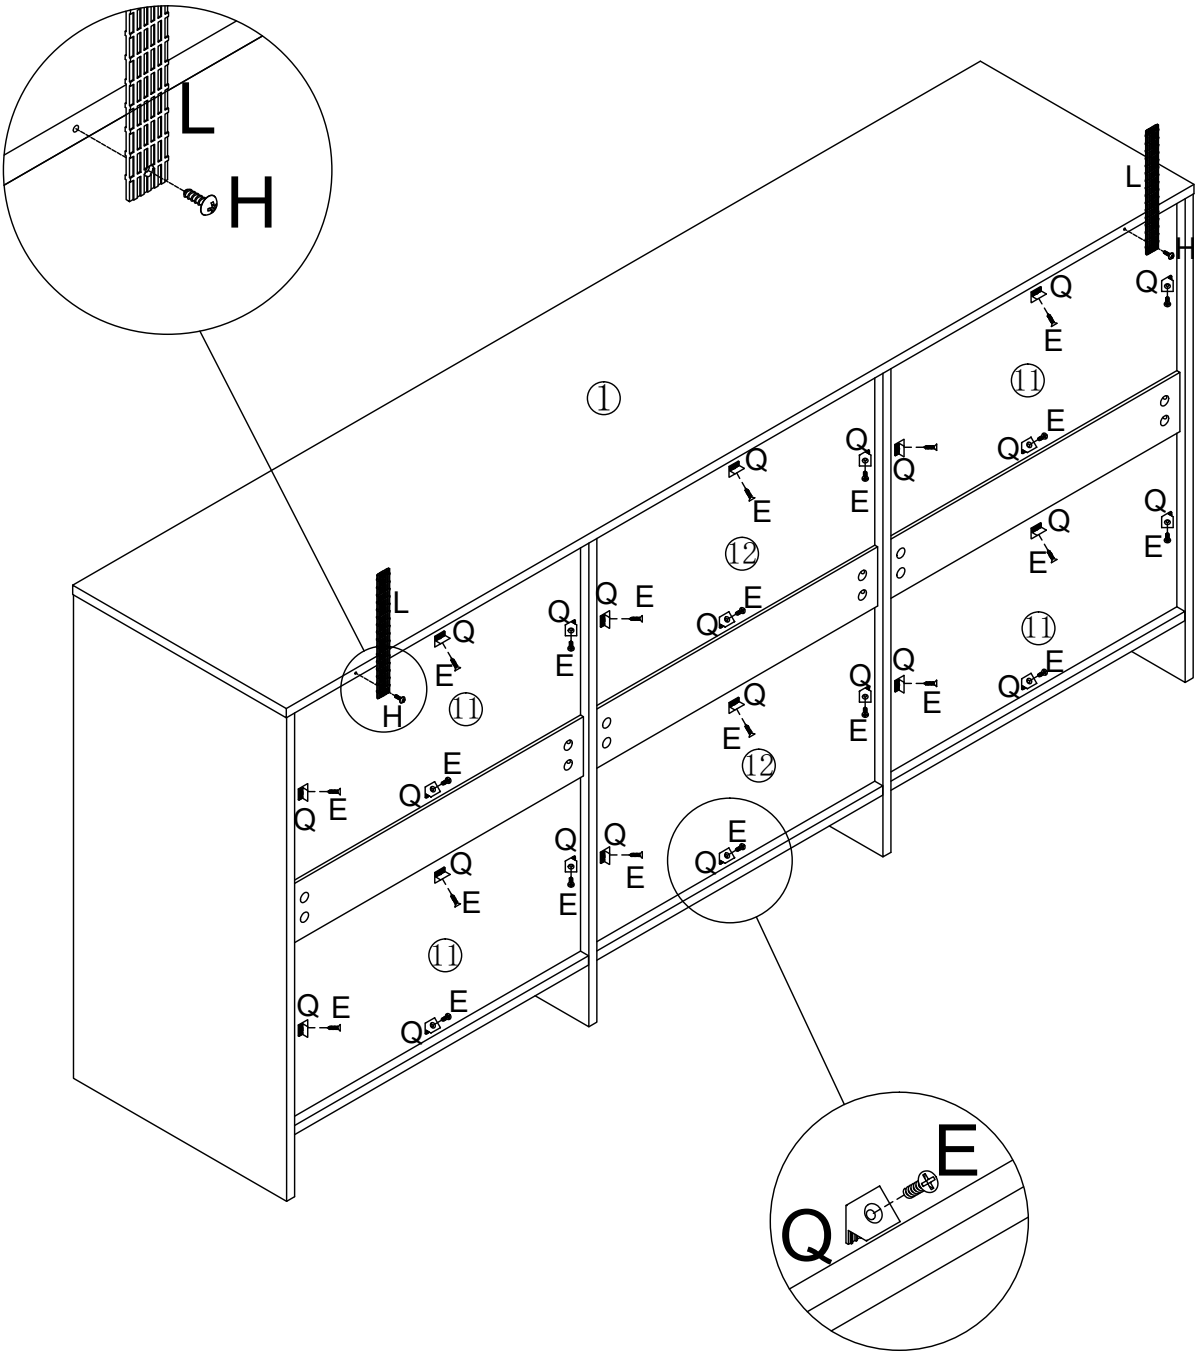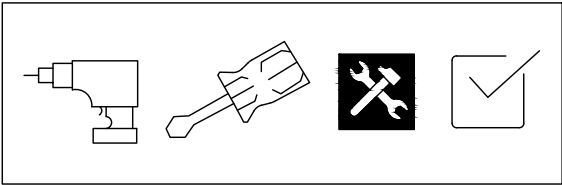


Step 16


S	×12
	

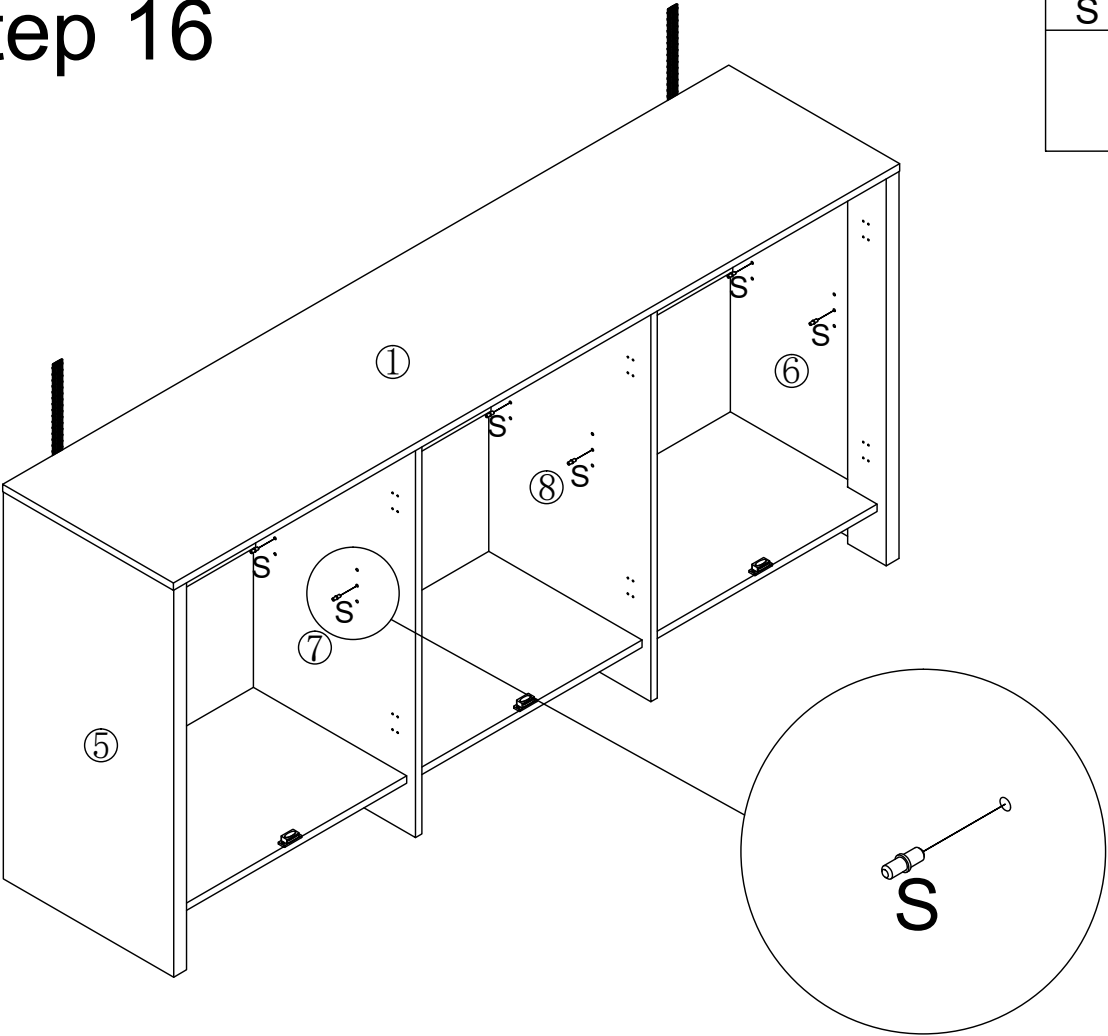



Step 17

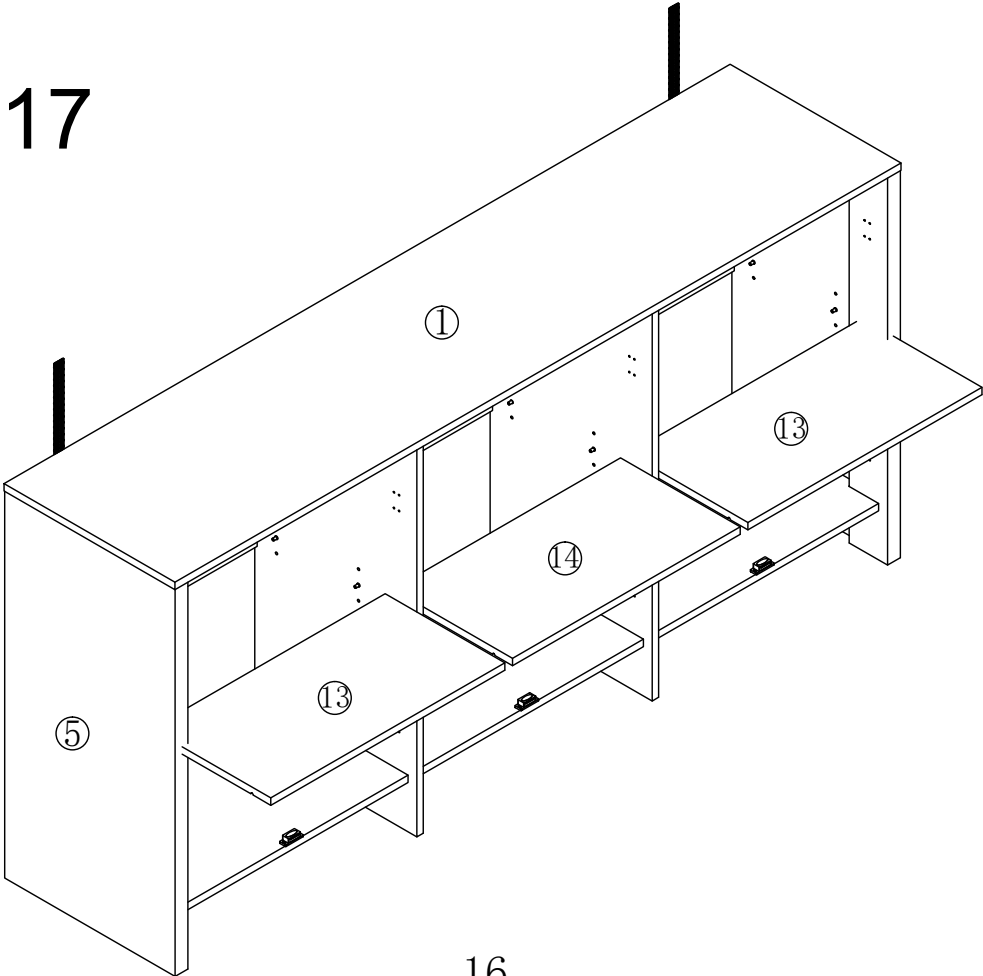


Step 18

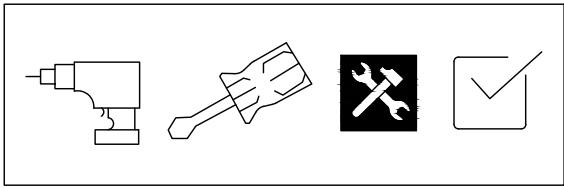

E	×24	J	×6	K	×12
					
F	×12	O	×12	R	×12
					


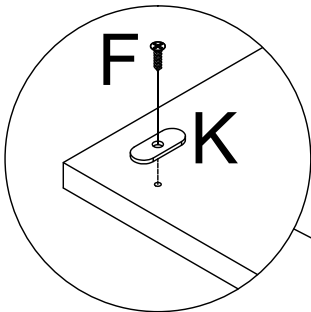


Please note the dimensions of screw E and screw F in this step.

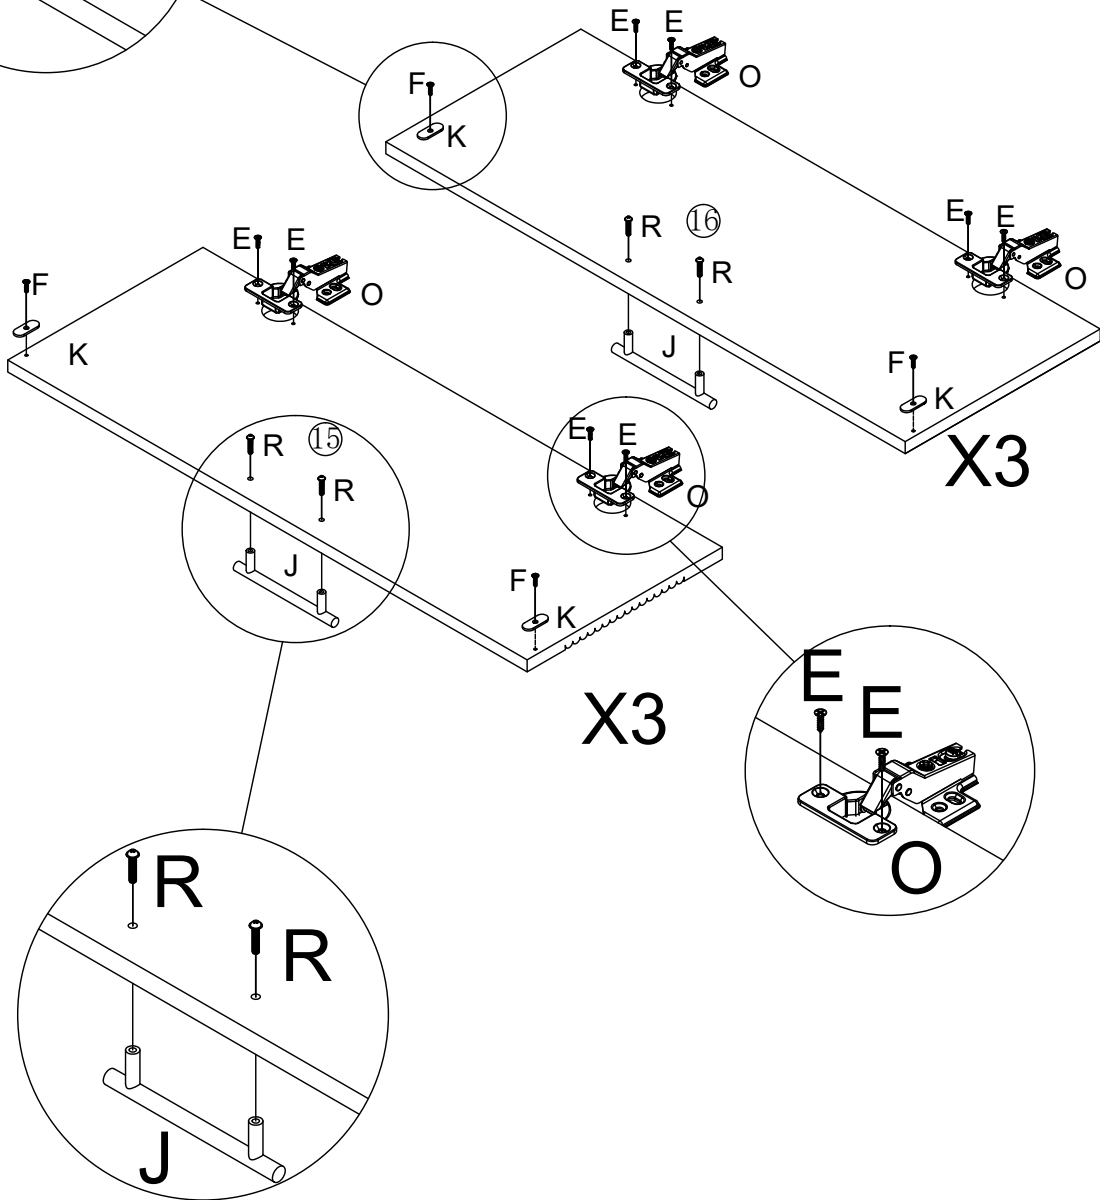


Step 19


E	×24
	

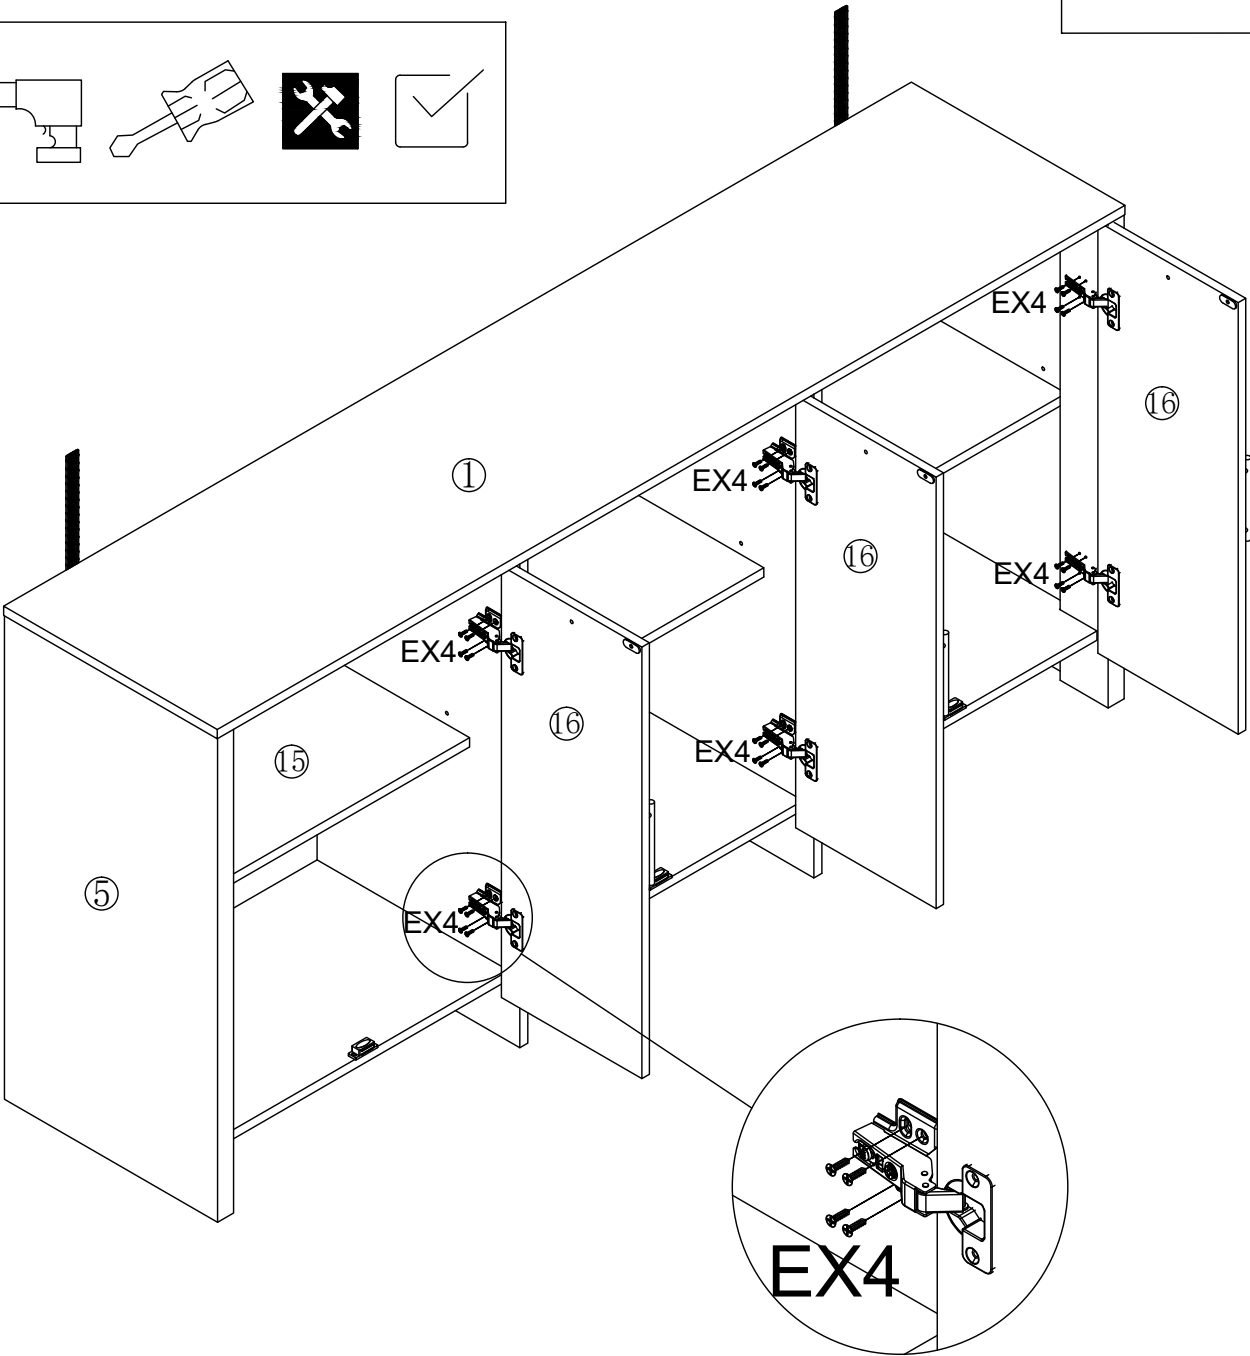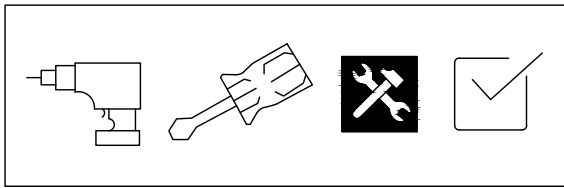


How do I get the two doors to align flat by adjusting the hinges?

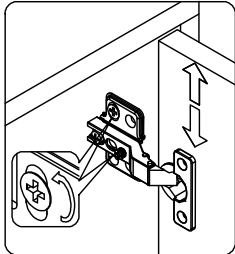


1. Adjust the screws shown in Figure 1 to adjust the door up and down.

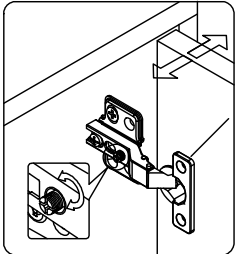

2. Adjust the screws shown in Figure 2 and pull the door back and forth so that it can be opened smoothly.

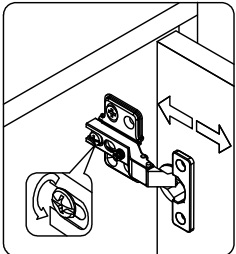



3. Adjust the screws shown in Figure 3 to adjust the door left and right to the right position.

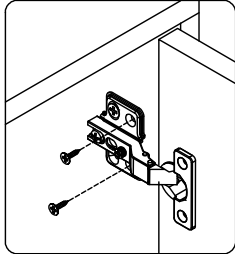


4. After the adjustment is complete, install the remaining two screws to secure the door in place.

Step 20


E	×24
	

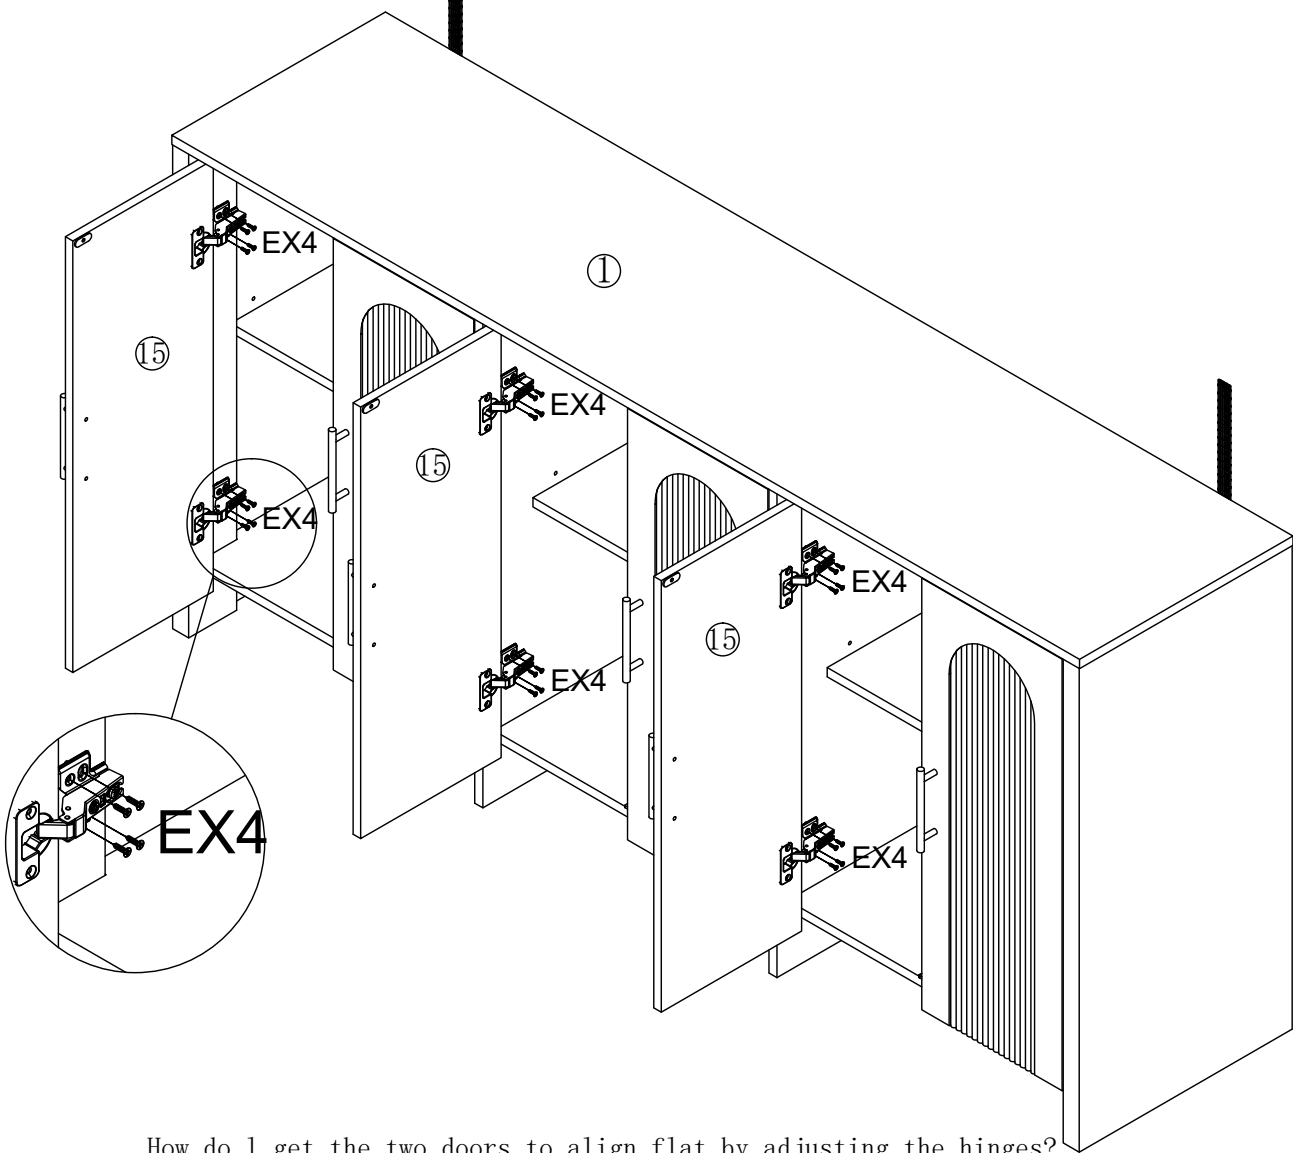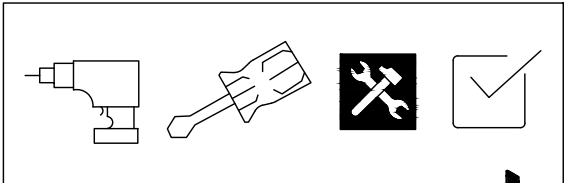


How do I get the two doors to align flat by adjusting the hinges?

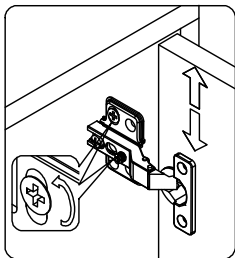


1. Adjust the screws shown in Figure 1 to adjust the door up and down.

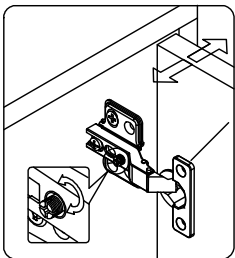

2. Adjust the screws shown in Figure 2 and pull the door back and forth so that it can be opened smoothly.

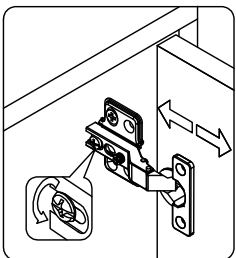

3. Adjust the screws shown in Figure 3 to adjust the door left and right to the right position.

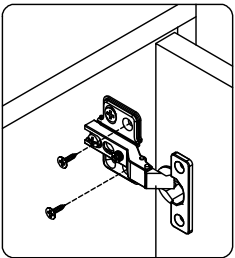

4. After the adjustment is complete, install the remaining two screws to secure the door in place.

Step 22

G	×2	M	×2
