

80281 DR ASSEMBLY INSTRUCTION

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

IMPORTANT : PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

"DO NOT OVERTIGHT ANY HARDWARE"

WARNING : SMALL PARTS AND HARDWARE NOT FOR CHILDREN UNDER 3 YEARS. ADULT ASSEMBLY REQUIRED.

TABLE OF CONTENTS

HARDWARES LIST

PAGE 2

PARTS LIST

PAGE 3 - 4

PARTS' LOCATION

PAGE 5

ASSEMBLY STEPS DRESSER

PAGE 6 - 12

ASSEMBLY STEP DRAWER


PAGE 13 - 17

ASSEMBLY COMPLETED


PAGE 18

ASSEMBLY TOOLS REQUIRED


1. Screwdriver (not provide)



2. Hammer (not provide)






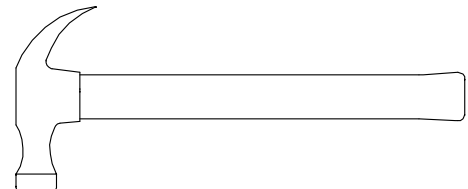


Skip the power trip this time.

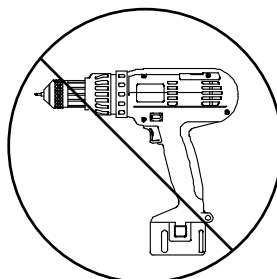











80281 DR ASSEMBLY INSTRUCTION

HARDWARES LIST

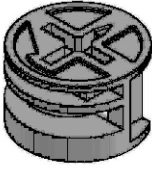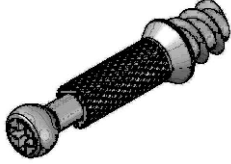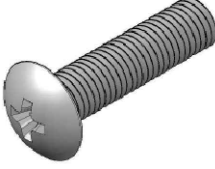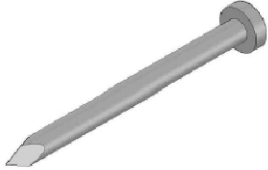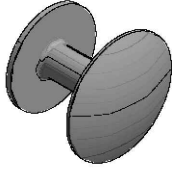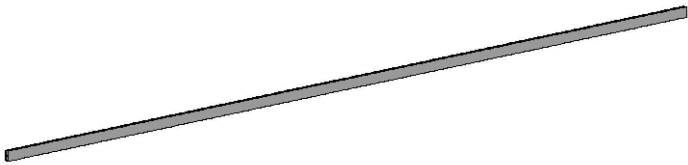ITEM	DESCRIPTION	DRAWING	QTY
A	MINIFIX CAM LOCK		56 PCS
B	MINIFIX CAM BOLT		56 PCS
C	WOOD DOWEL (M6 x 25MM)		54 PCS
D	TRUSS M-SCREW (18MM)		12 PCS
E	6/8" NAIL		34 PCS
F	HANDLE		12 PCS
G	PLASTIC STRIP (H SHAPE)		1 PC





80281 DR ASSEMBLY INSTRUCTION

PARTS LIST

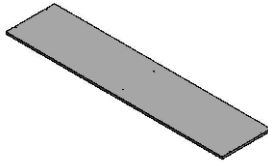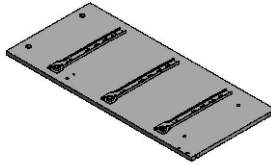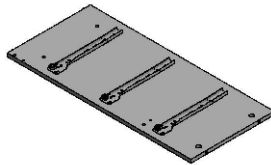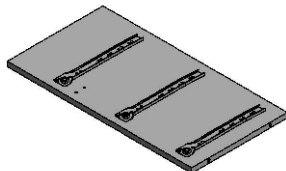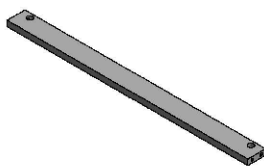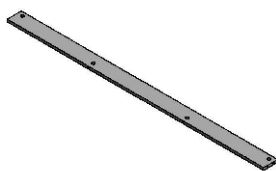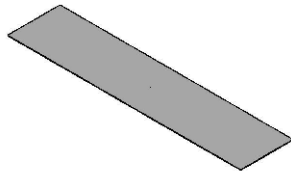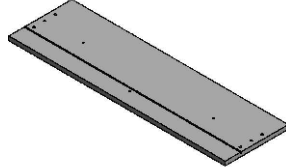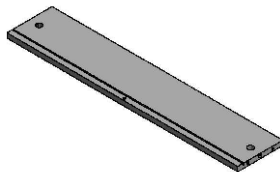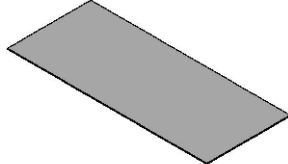ITEM	DESCRIPTION	DRAWING	QTY
D1	TOP PANEL		1 PC
D2	LEFT PANEL		1 PC
D3	RIGHT PANEL		1 PC
D4	CENTER PANEL		1 PC
D5	SUPPORT RAIL		2 PCS
D6	BOTTOM SUPPORT		1 PC
D8	BACK PANEL		2 PCS
D9	DRAWER HEAD		6 PCS
D10	DRAWER BACK PANEL		6 PCS
D11	DRAWER BOTTOM PANEL		6 PCS

80281 DR ASSEMBLY INSTRUCTION


PARTS LIST

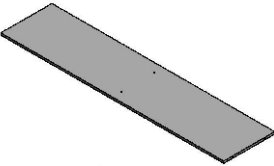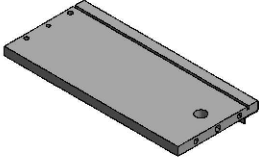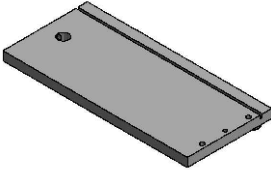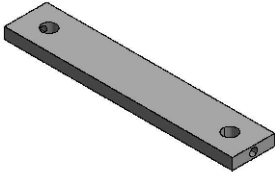ITEM	DESCRIPTION	DRAWING	QTY
D12	BOTTOPM PANEL		1 PC
19	DRAWER LEFT PANEL		6 PCS
20	DRAWER RIGHT PANEL		6 PCS
21	DRAWER SUPPORT BOTTOM RAIL		6 PCS


80281 DR ASSEMBLY INSTRUCTION

PARTS ' LOCATION

DRESSER x 1 PC

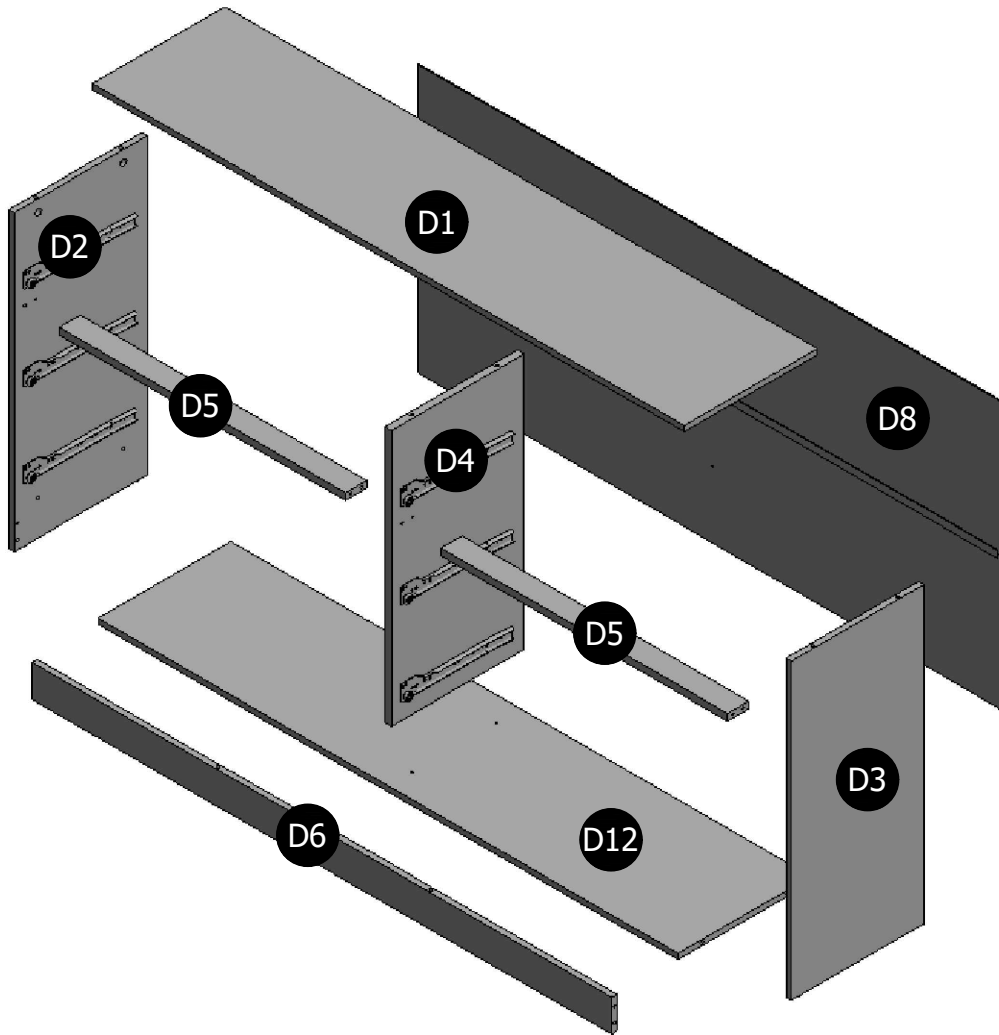


DRAWER x 6 PCS

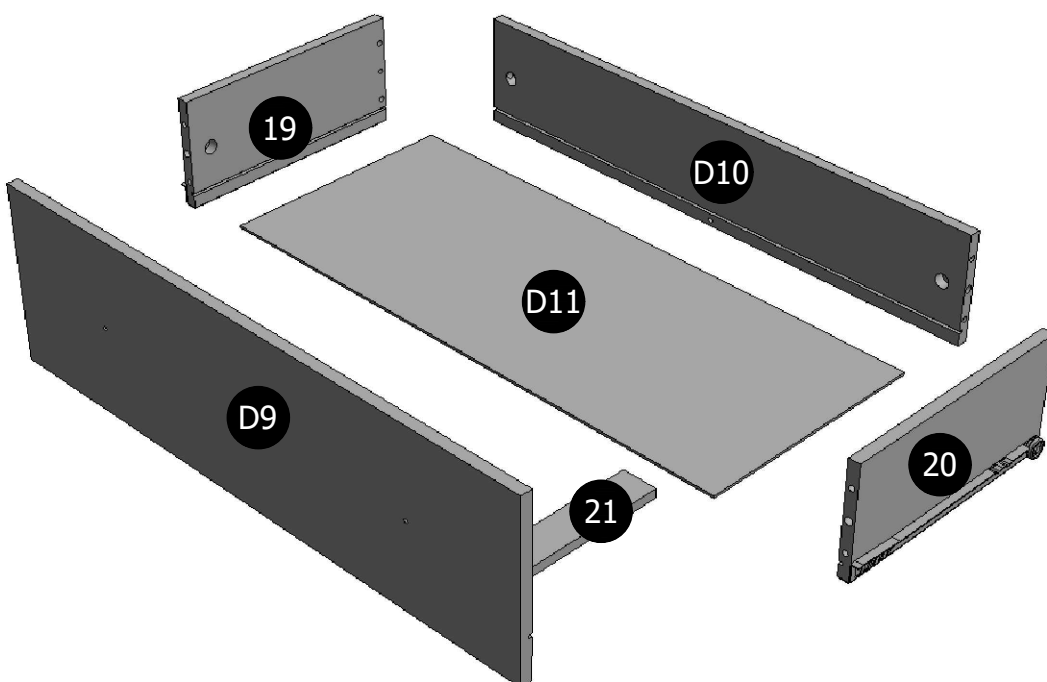


80281 DR ASSEMBLY INSTRUCTION

ASSEMBLY STEPS

STEP 1

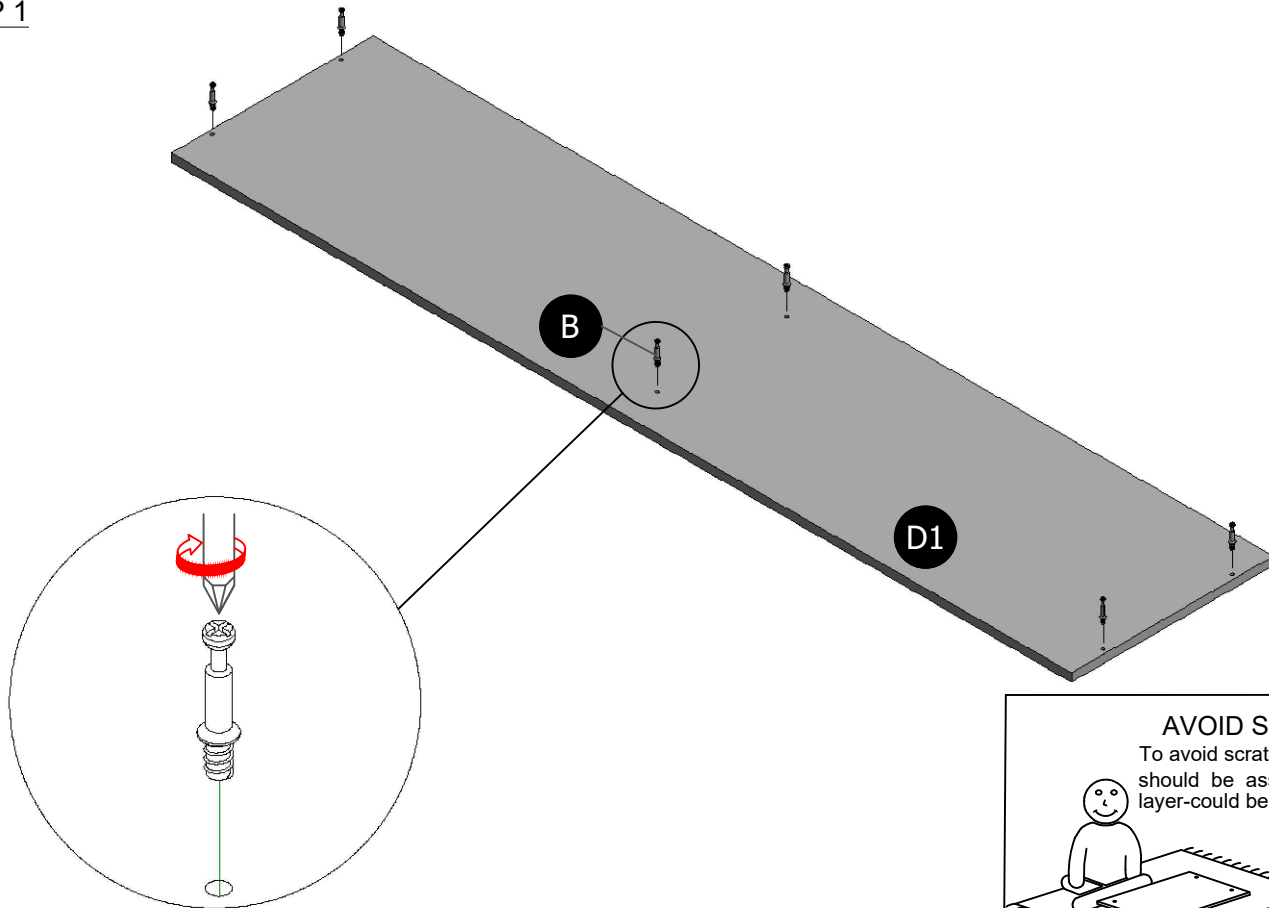


STEP 2

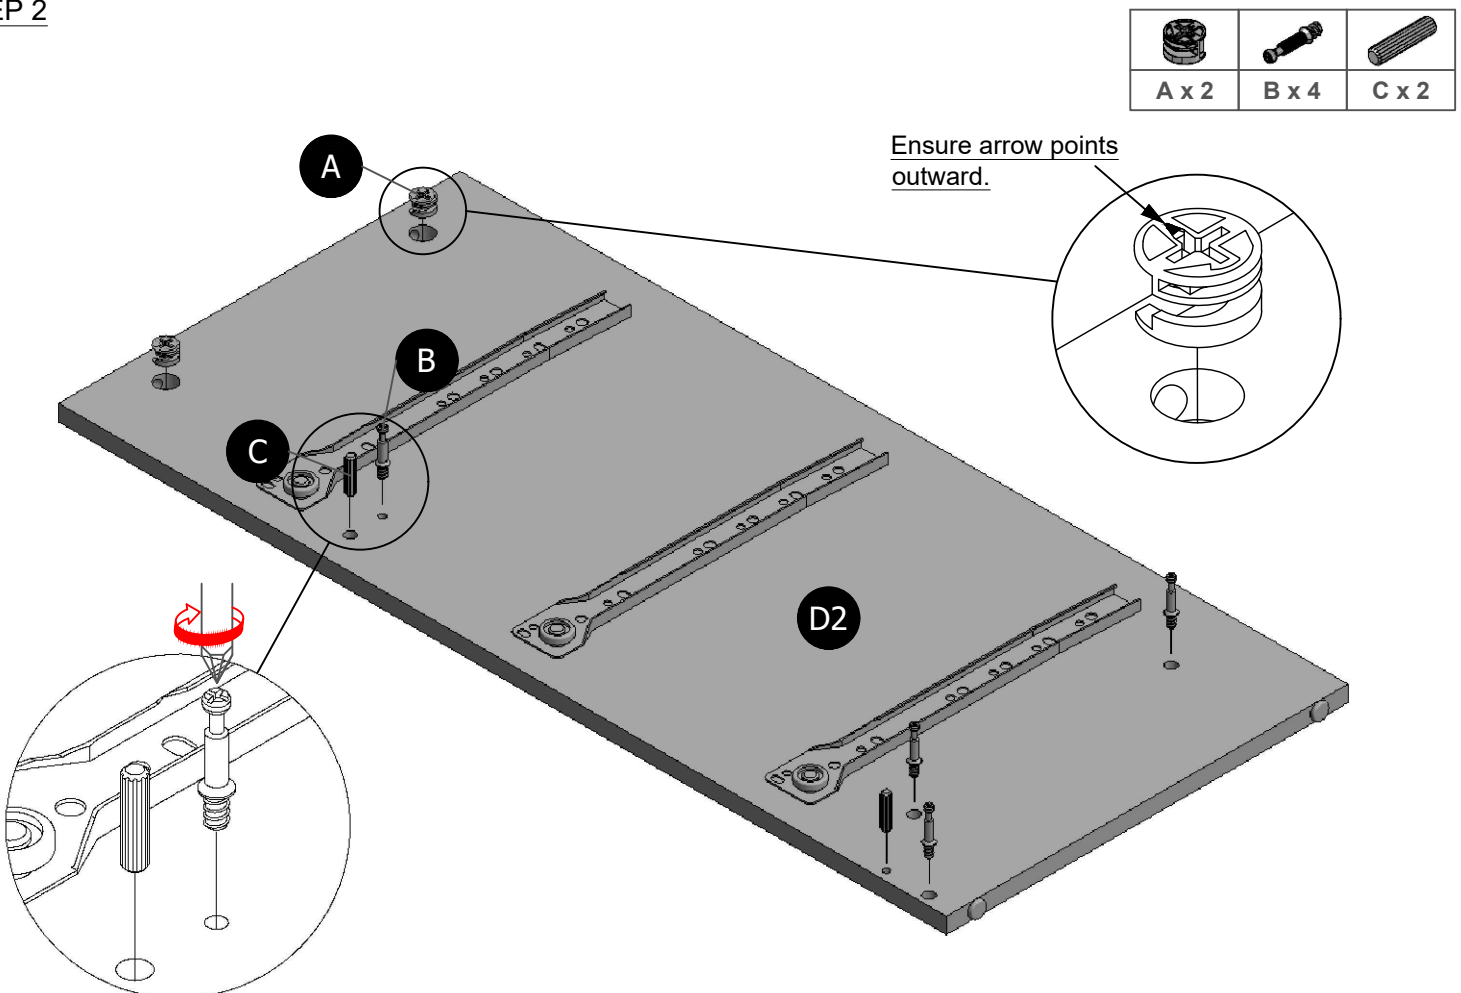


80281 DR ASSEMBLY INSTRUCTION

STEP 3

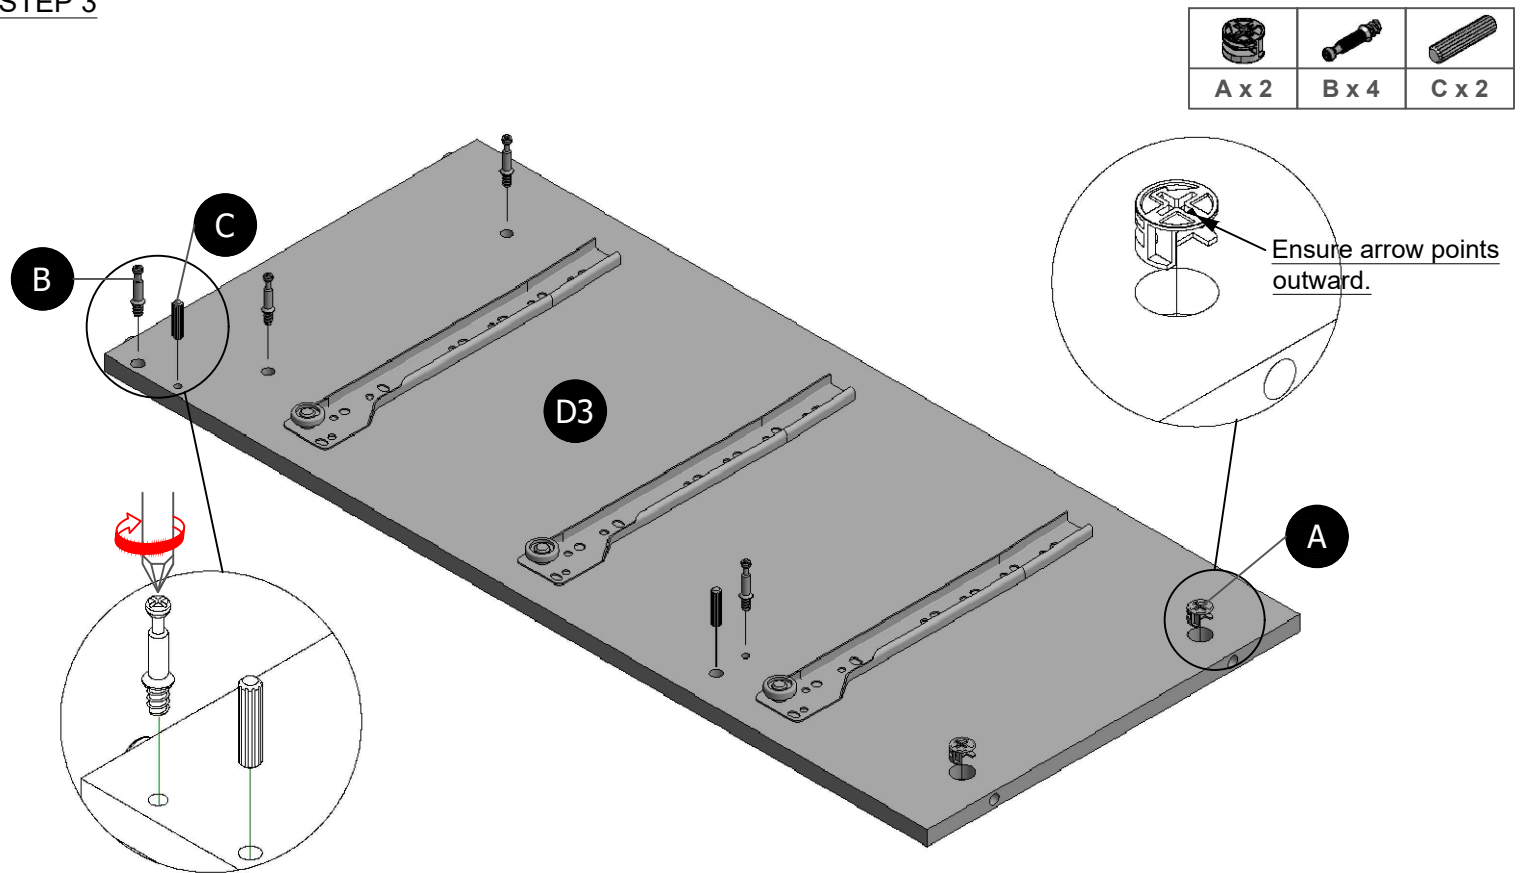


STEP 4

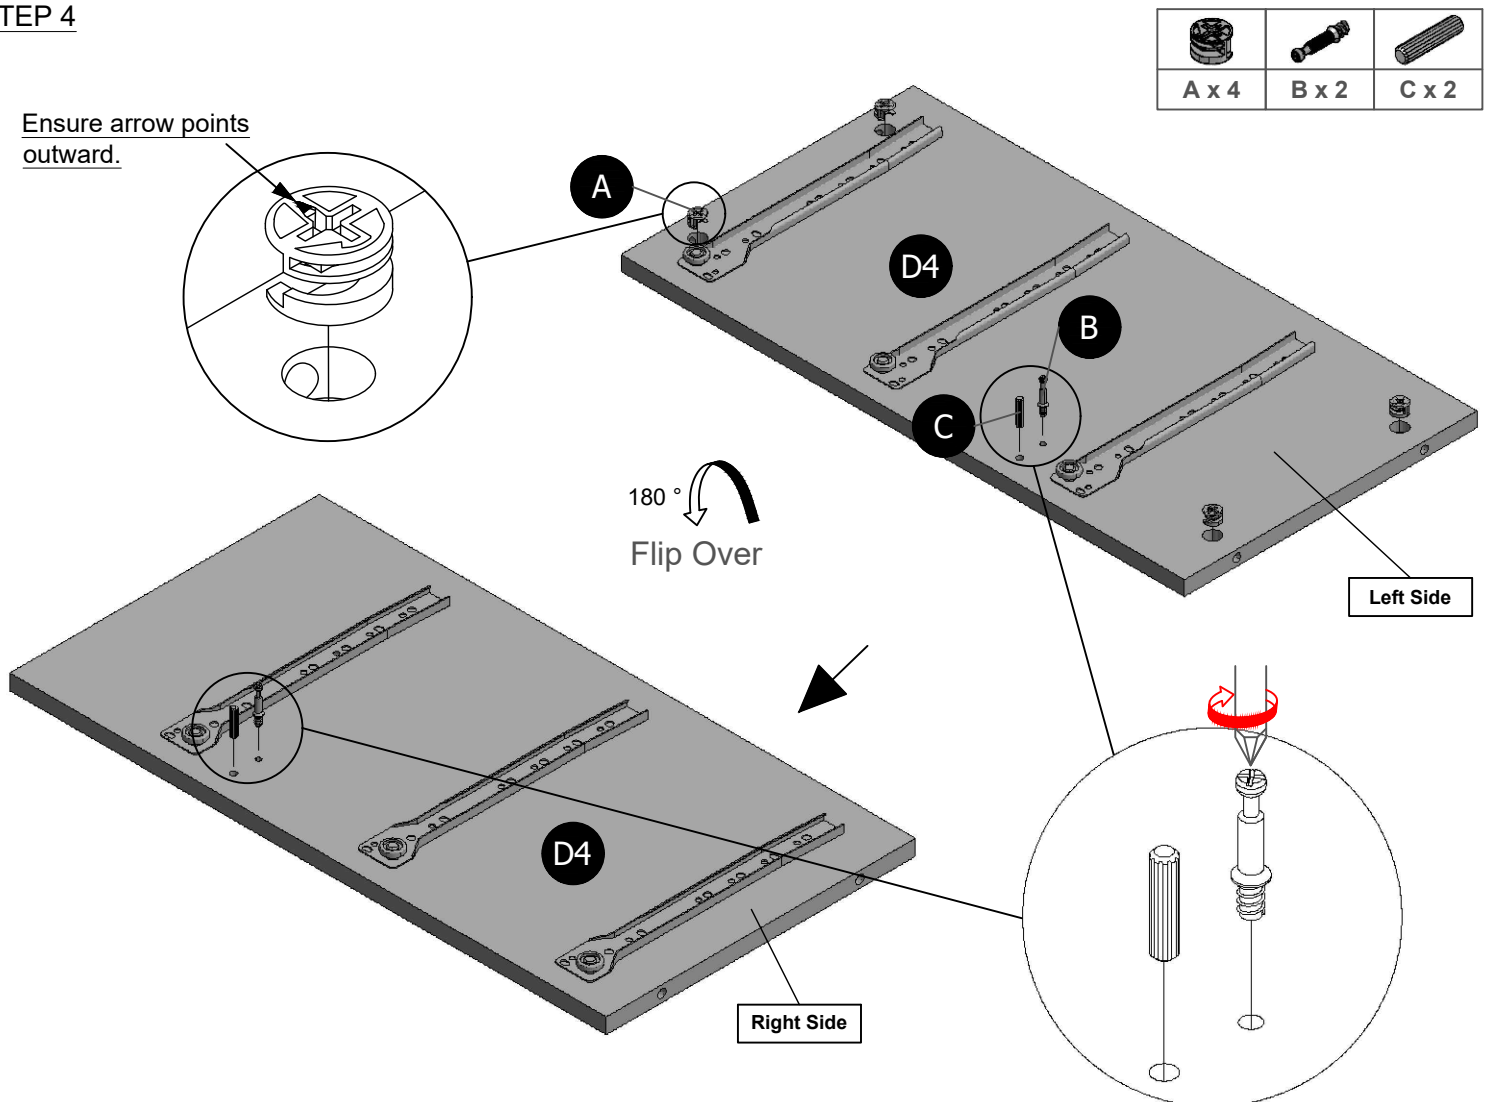


80281 DR ASSEMBLY INSTRUCTION

STEP 5


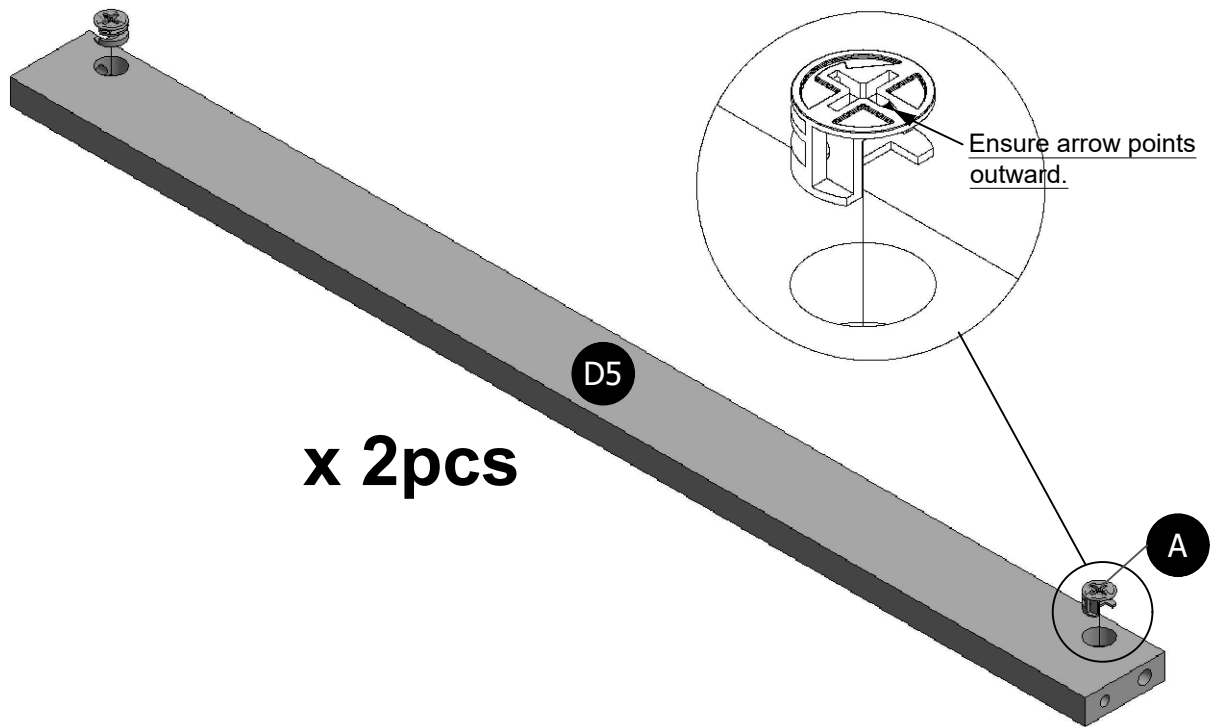


STEP 6

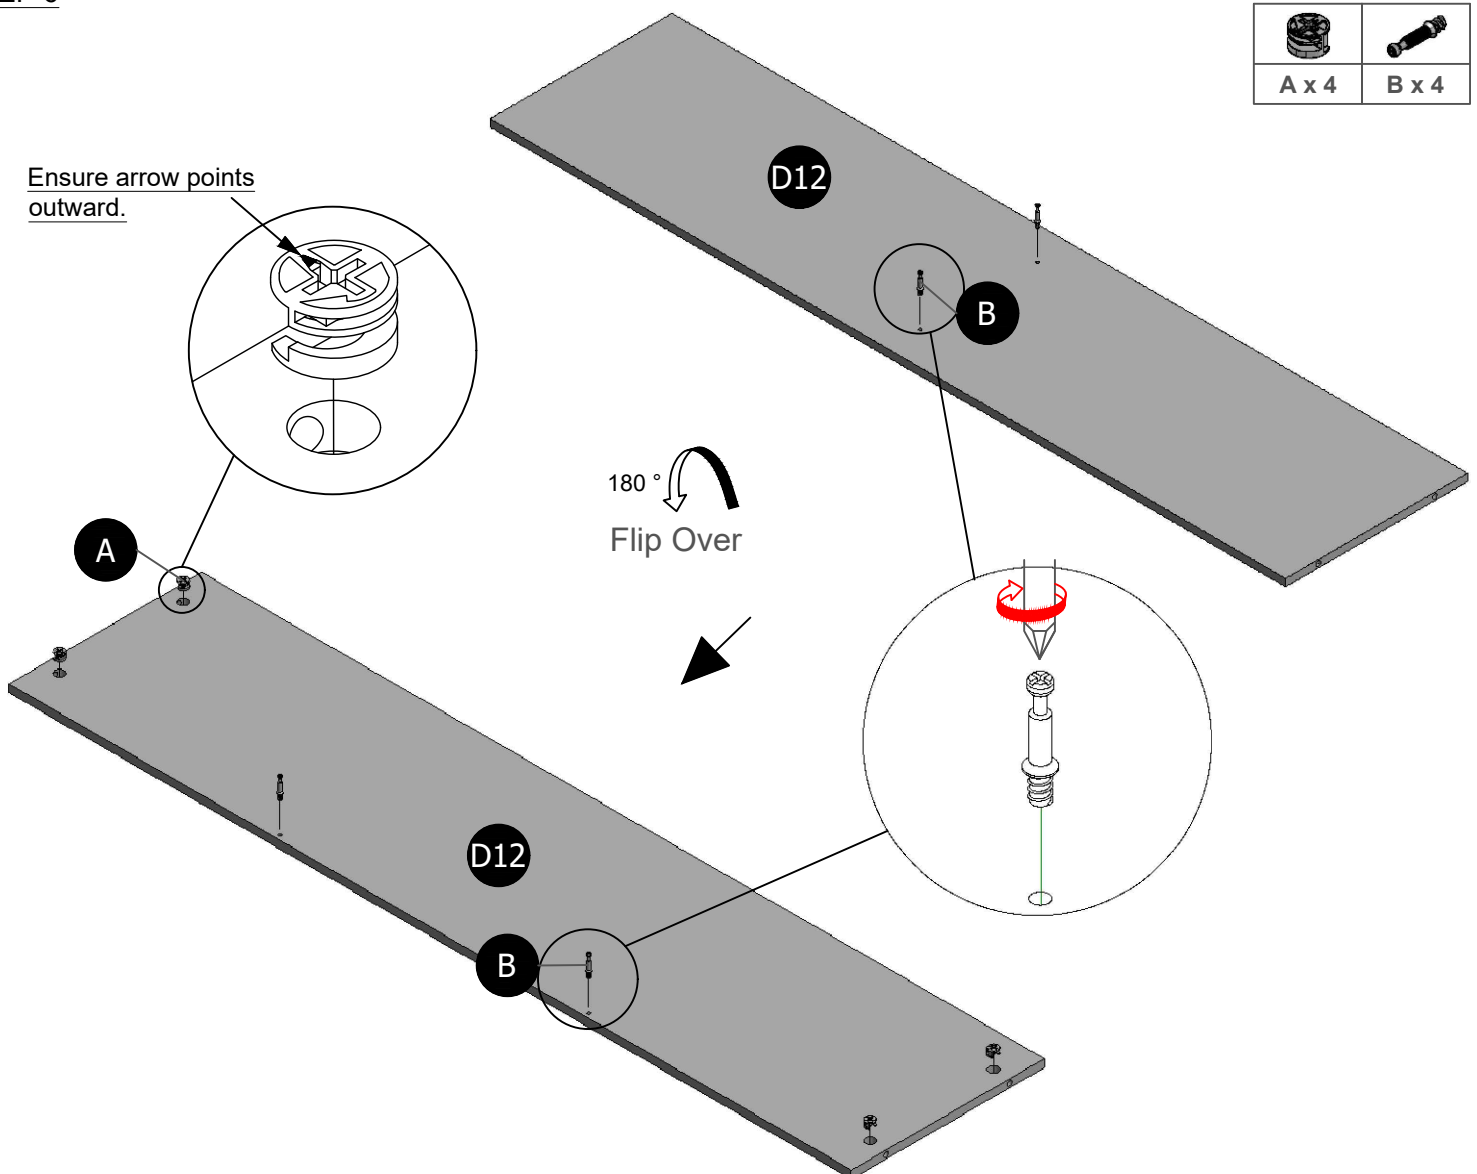


80281 DR ASSEMBLY INSTRUCTION

STEP 7

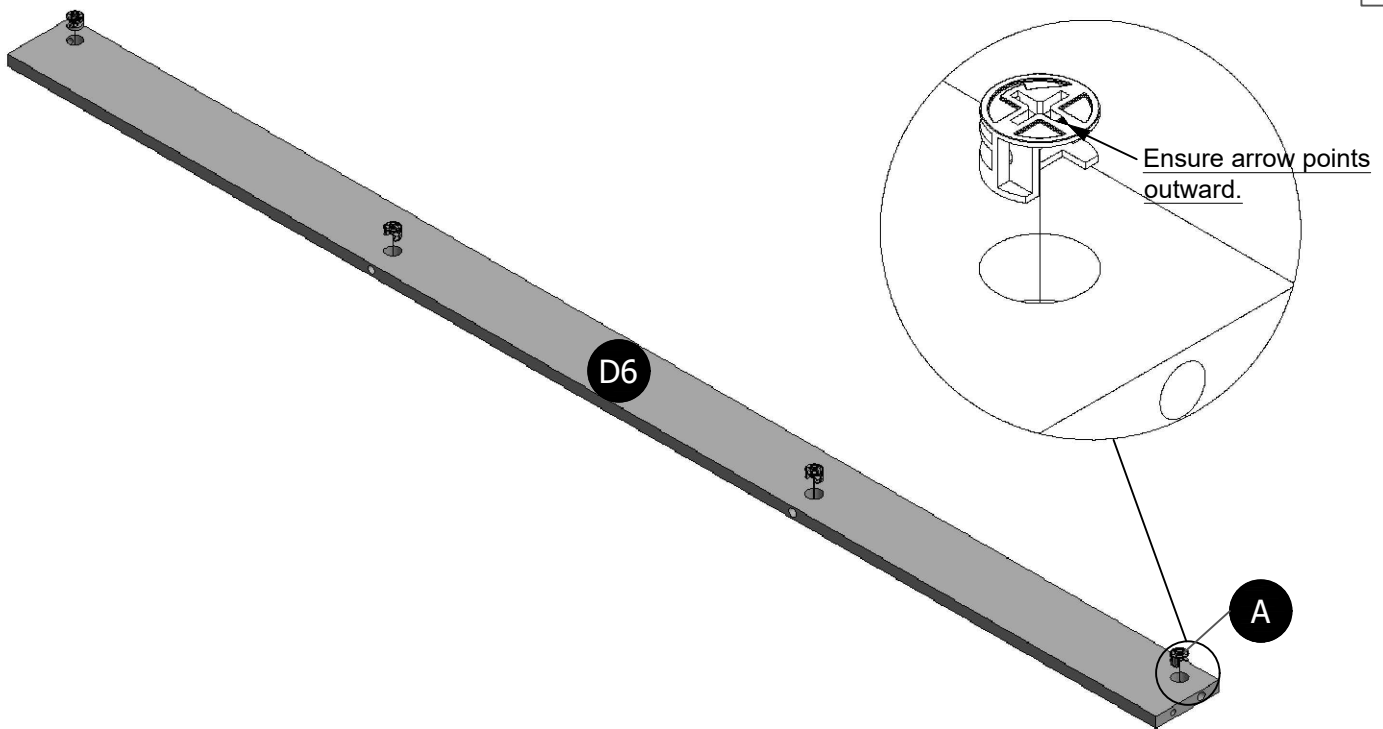

STEP 8


Combine (D6) into (D12). Then tighten 2pcs (A) as shown.

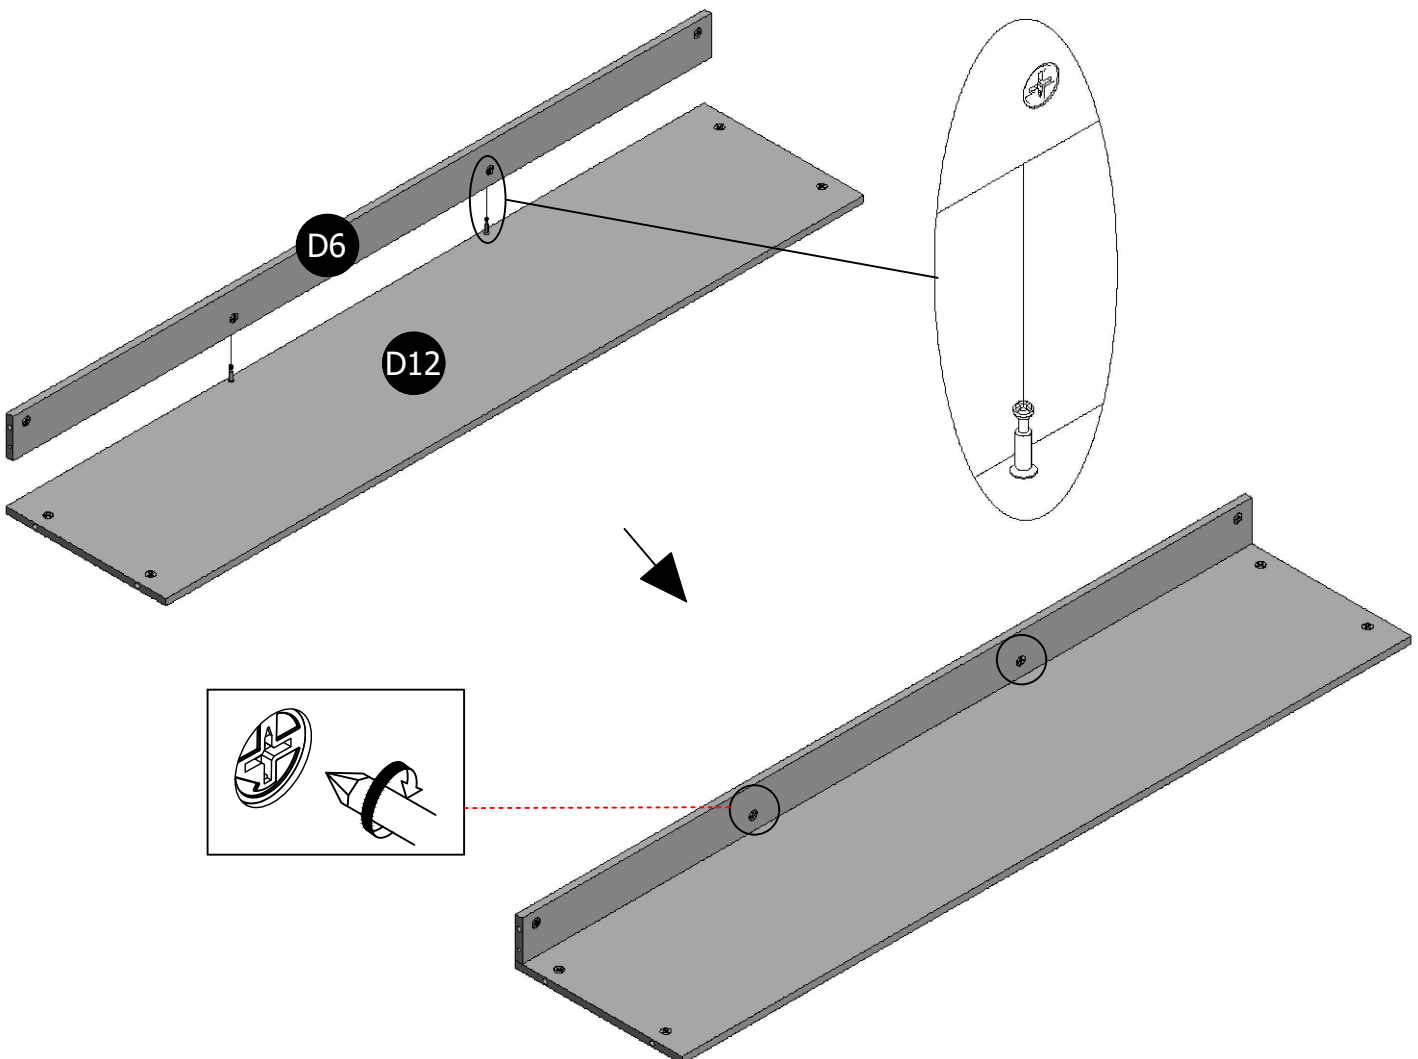

80281 DR ASSEMBLY INSTRUCTION


STEP 9

Combine (D4) into (D12). Then tighten 2pcs (A) as shown.

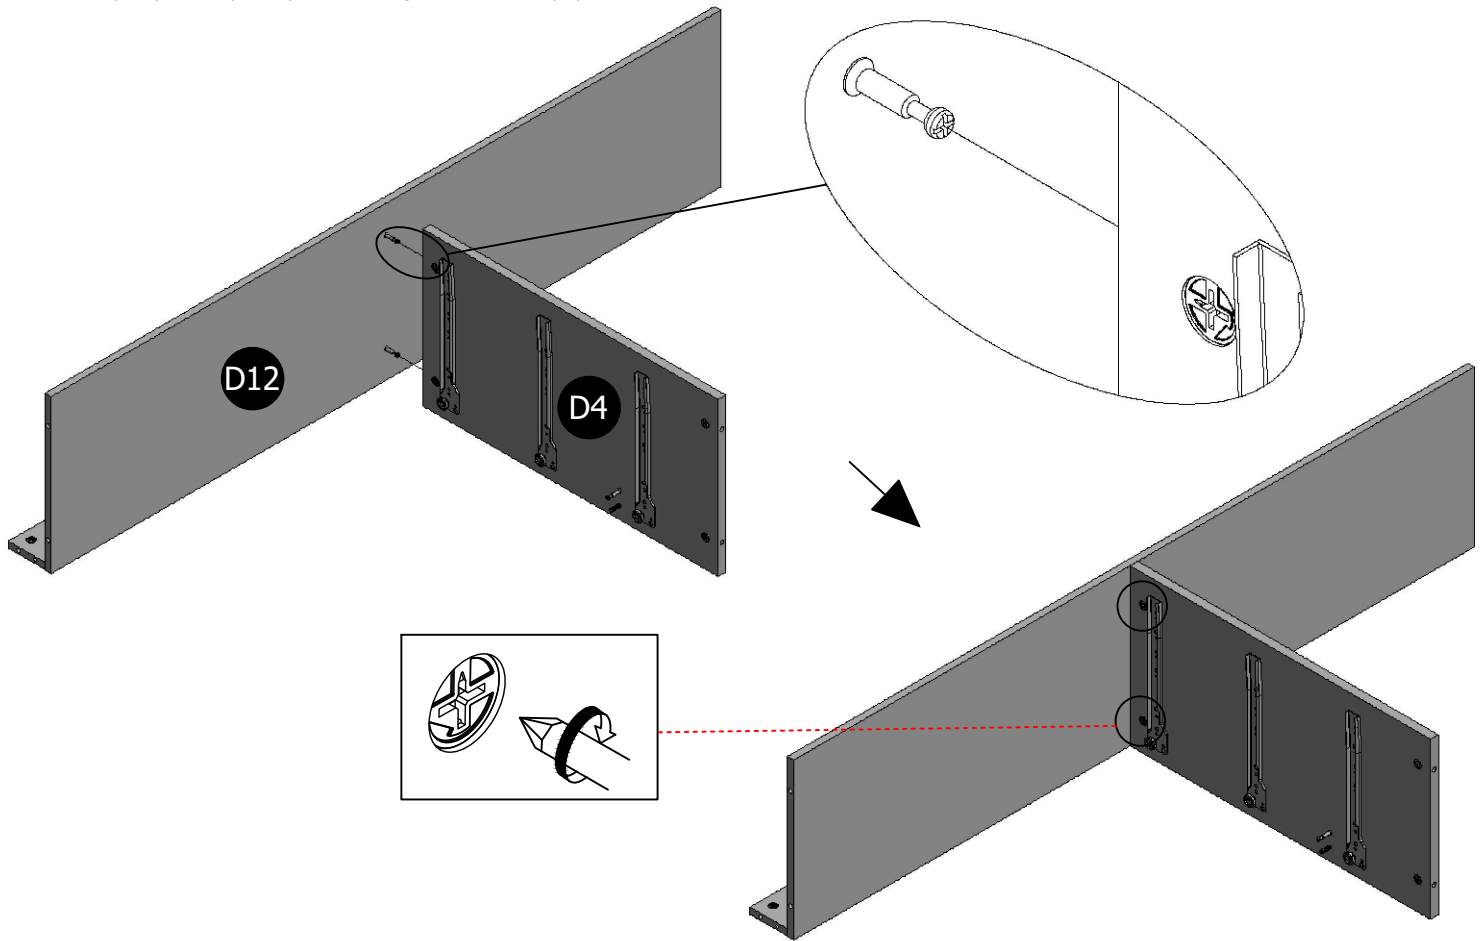

STEP 10

Combine the (D5) into the (D4) , then tighten 2pcs (A) as shown.

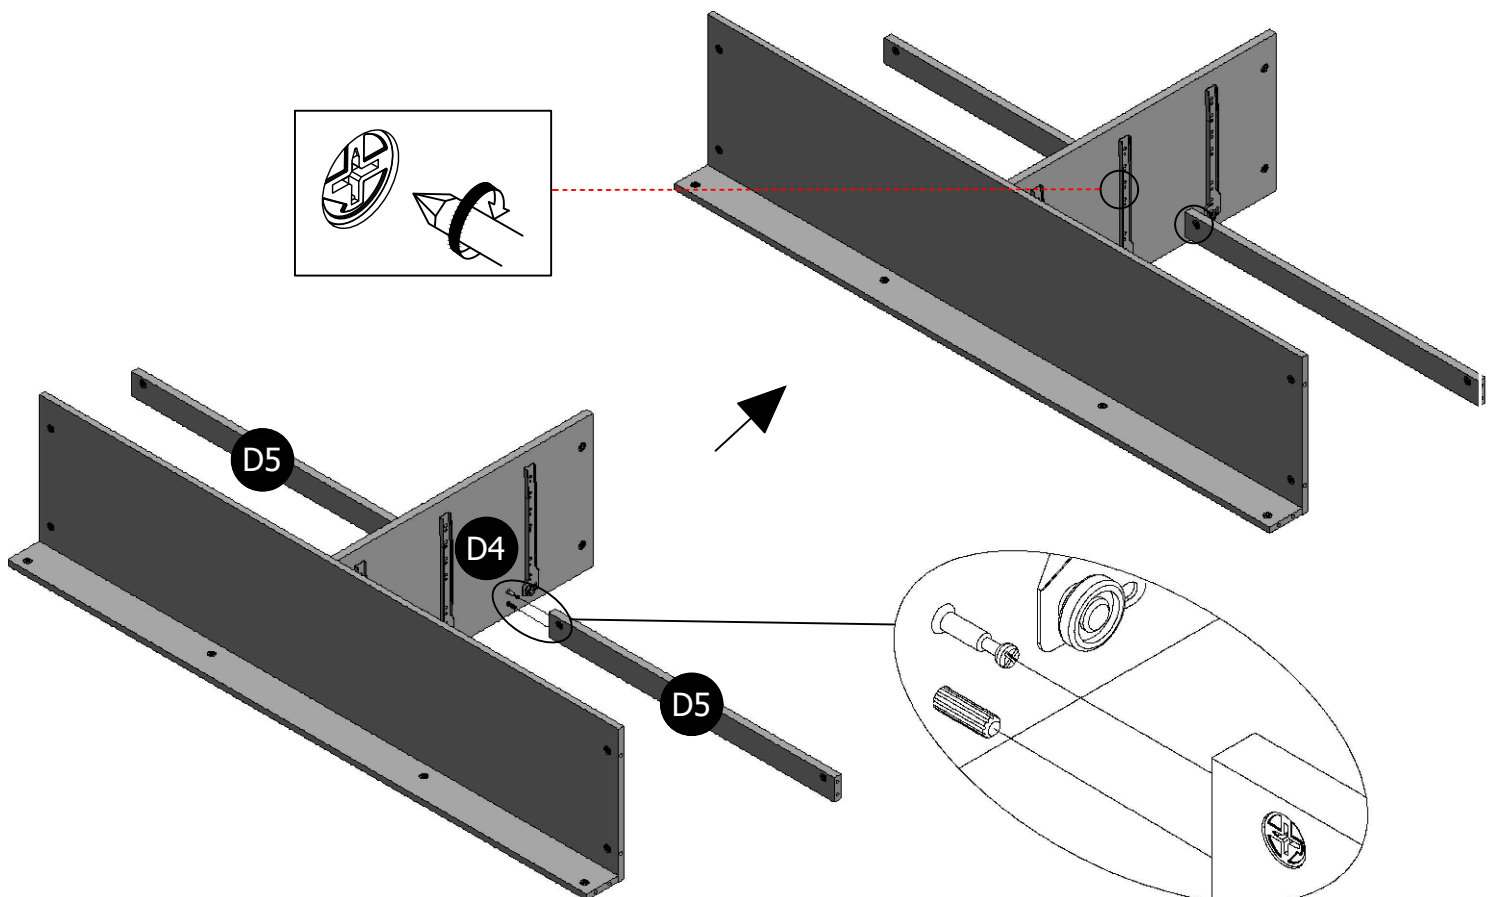


80281 DR ASSEMBLY INSTRUCTION

STEP 11

Combine the (D2) & (D3) into (D12), (D6) & (D5). Then tighten 8pcs (A) as shown.


****This step require additional support from a second person.**

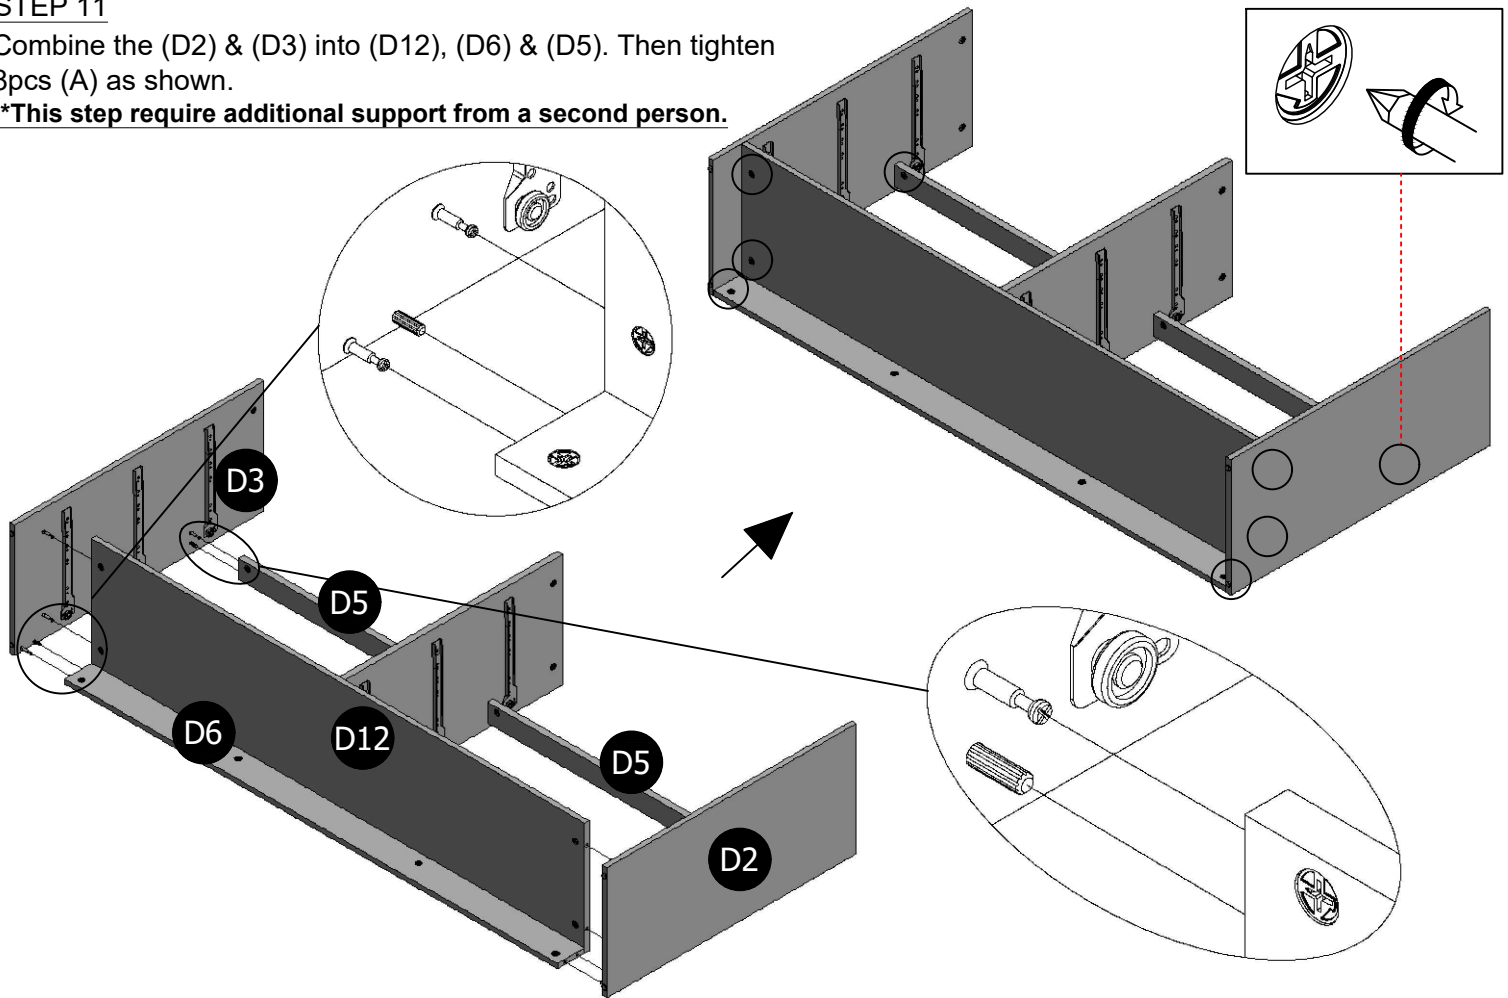

STEP 12

Combine the (D1) into (D2),(D3) & (D4). Then tighten 6pcs (A) as shown.


****This step require additional support from a second person.**

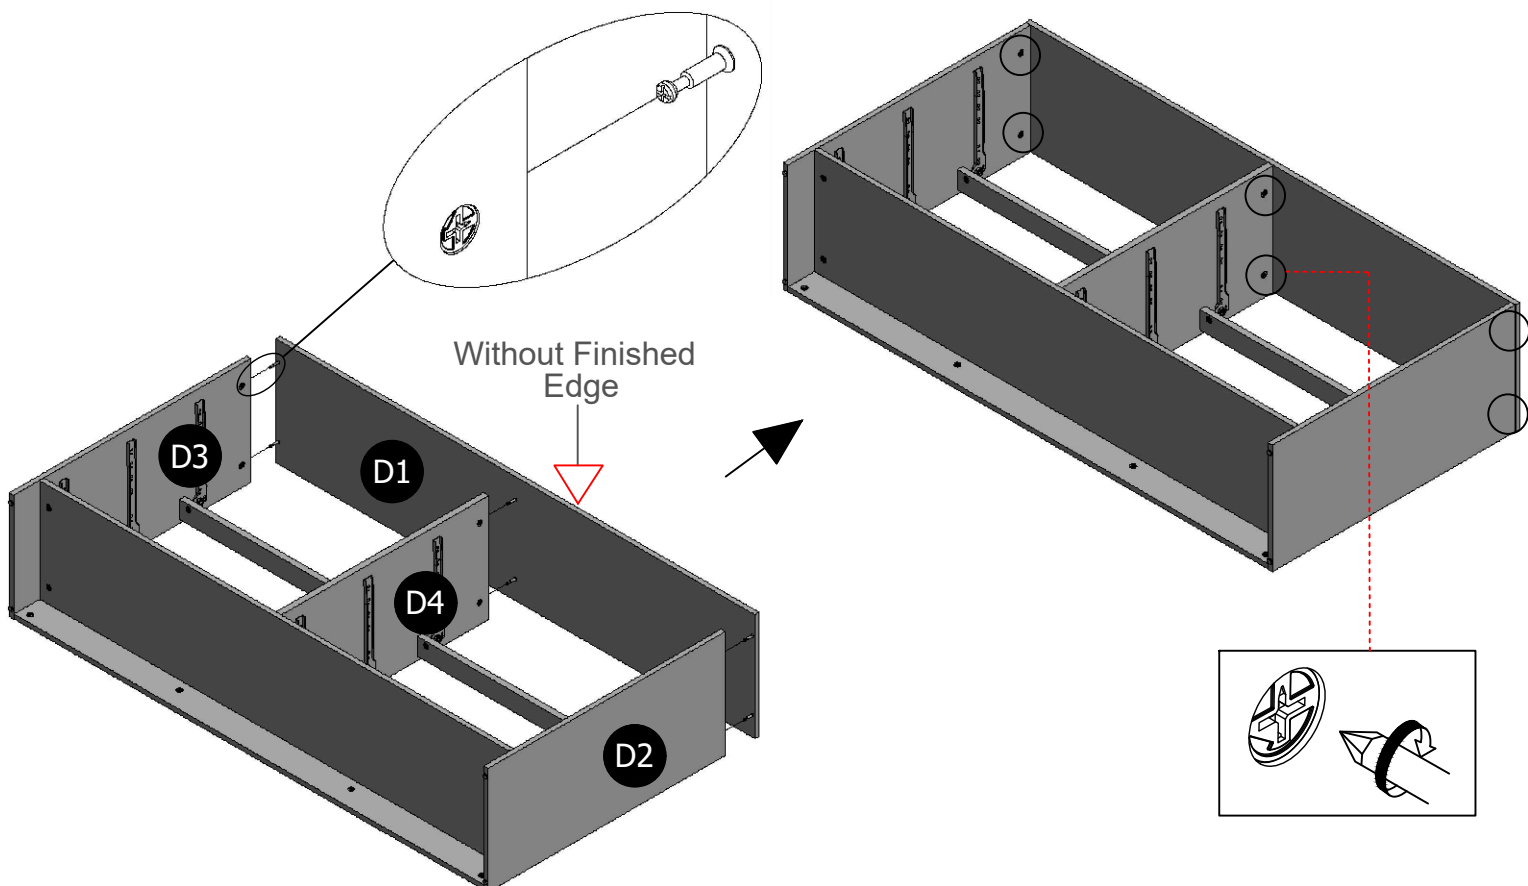

80281 DR ASSEMBLY INSTRUCTION



STEP 13

Insert the (D8) into the (G) as shown. Direction of the side with colored paper must be the same.

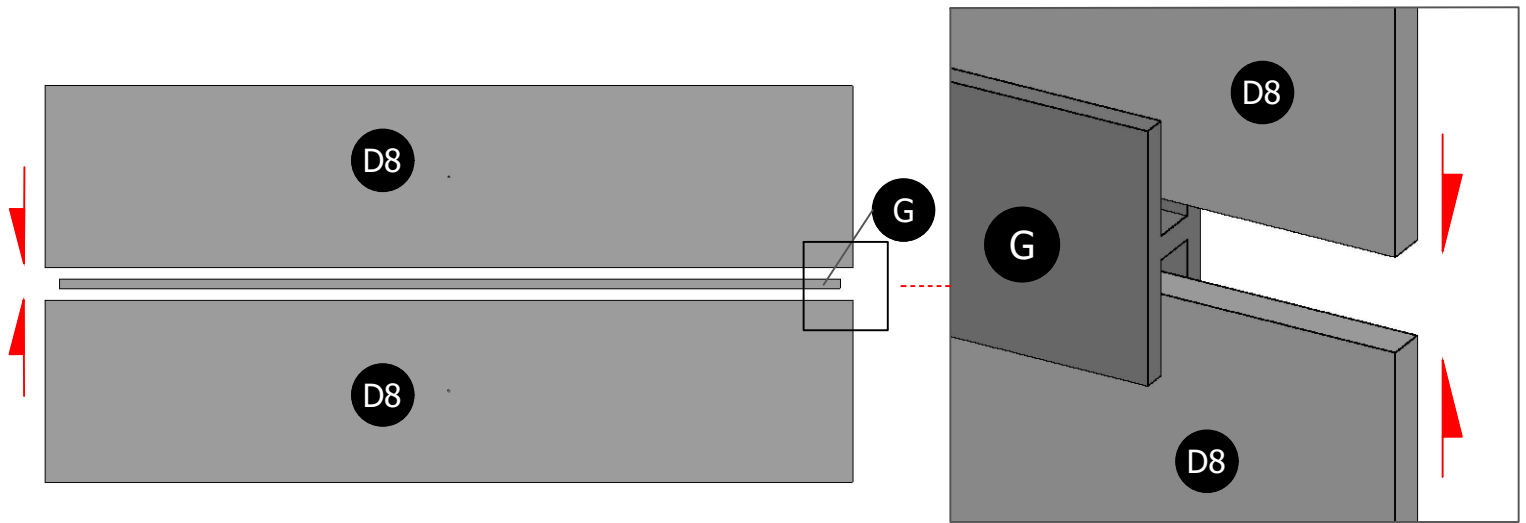



STEP 14

Secure the (D8) to the frame using 34pcs (E) as shown. Colored paper face to outside.

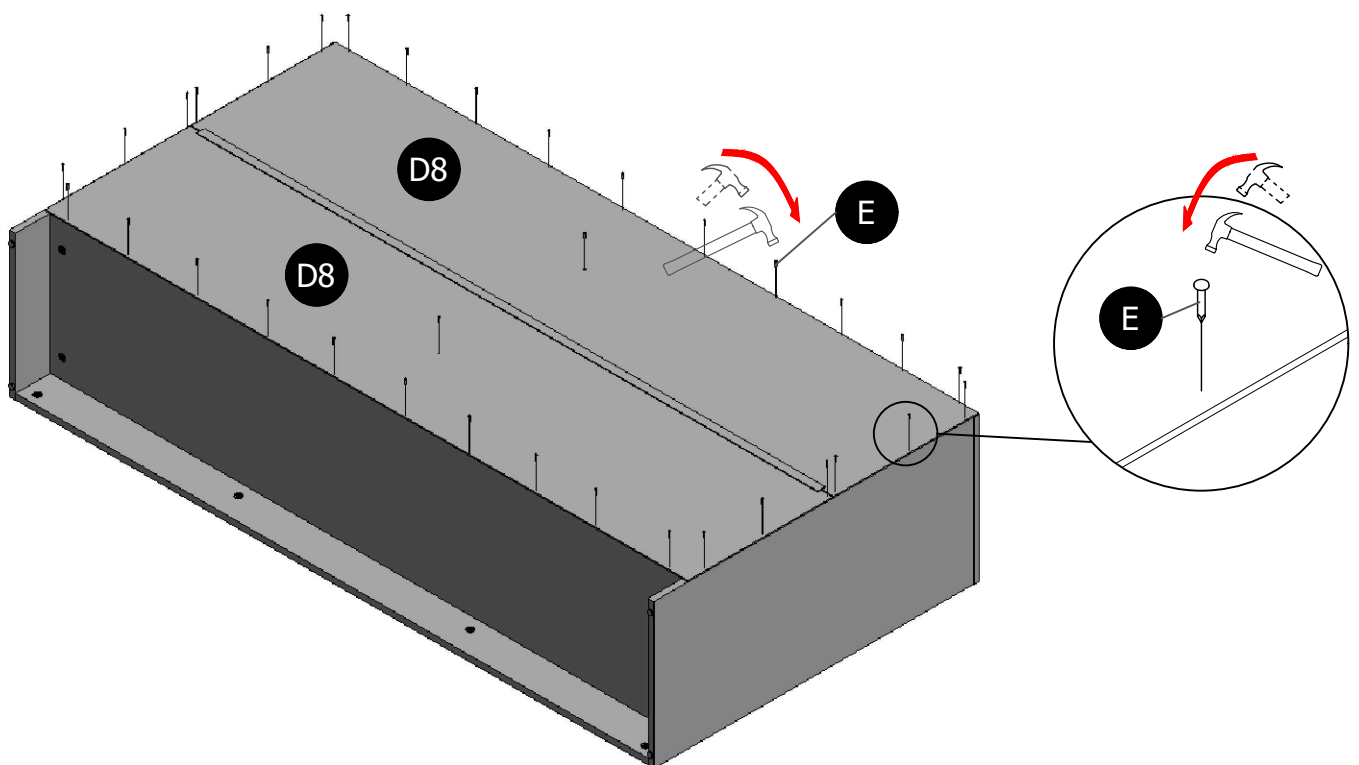



80281 DR ASSEMBLY INSTRUCTION

STEP 15

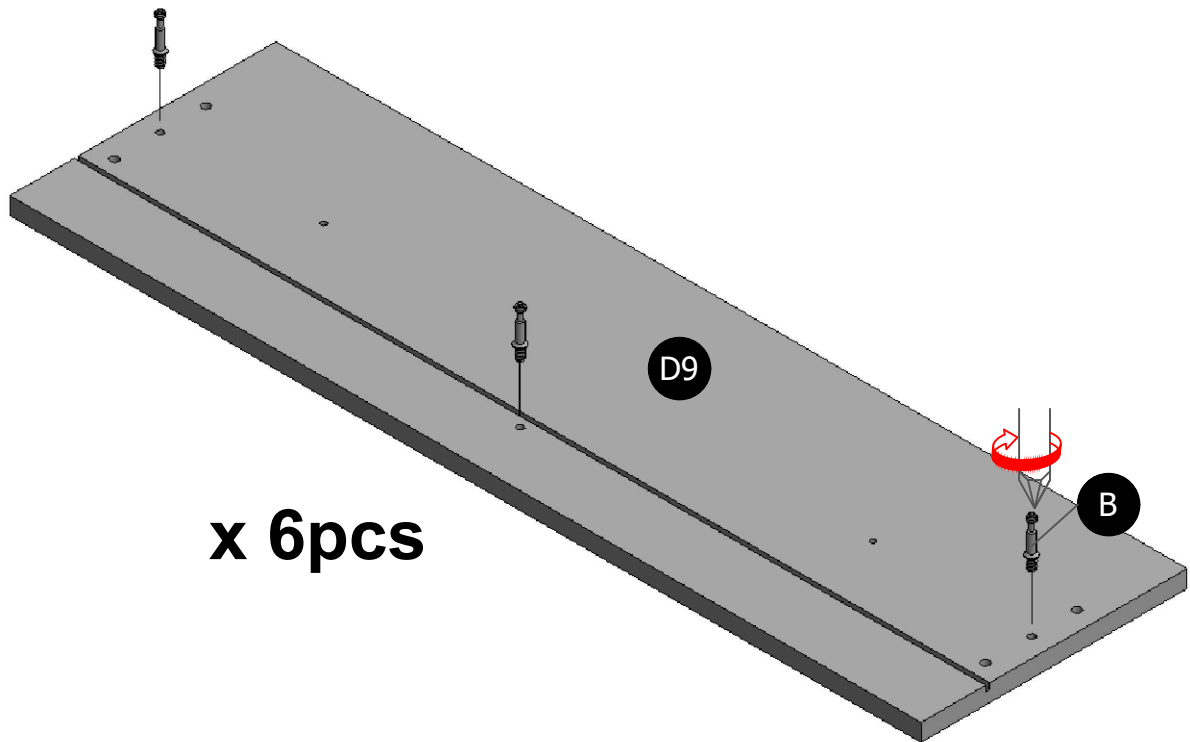


STEP 16

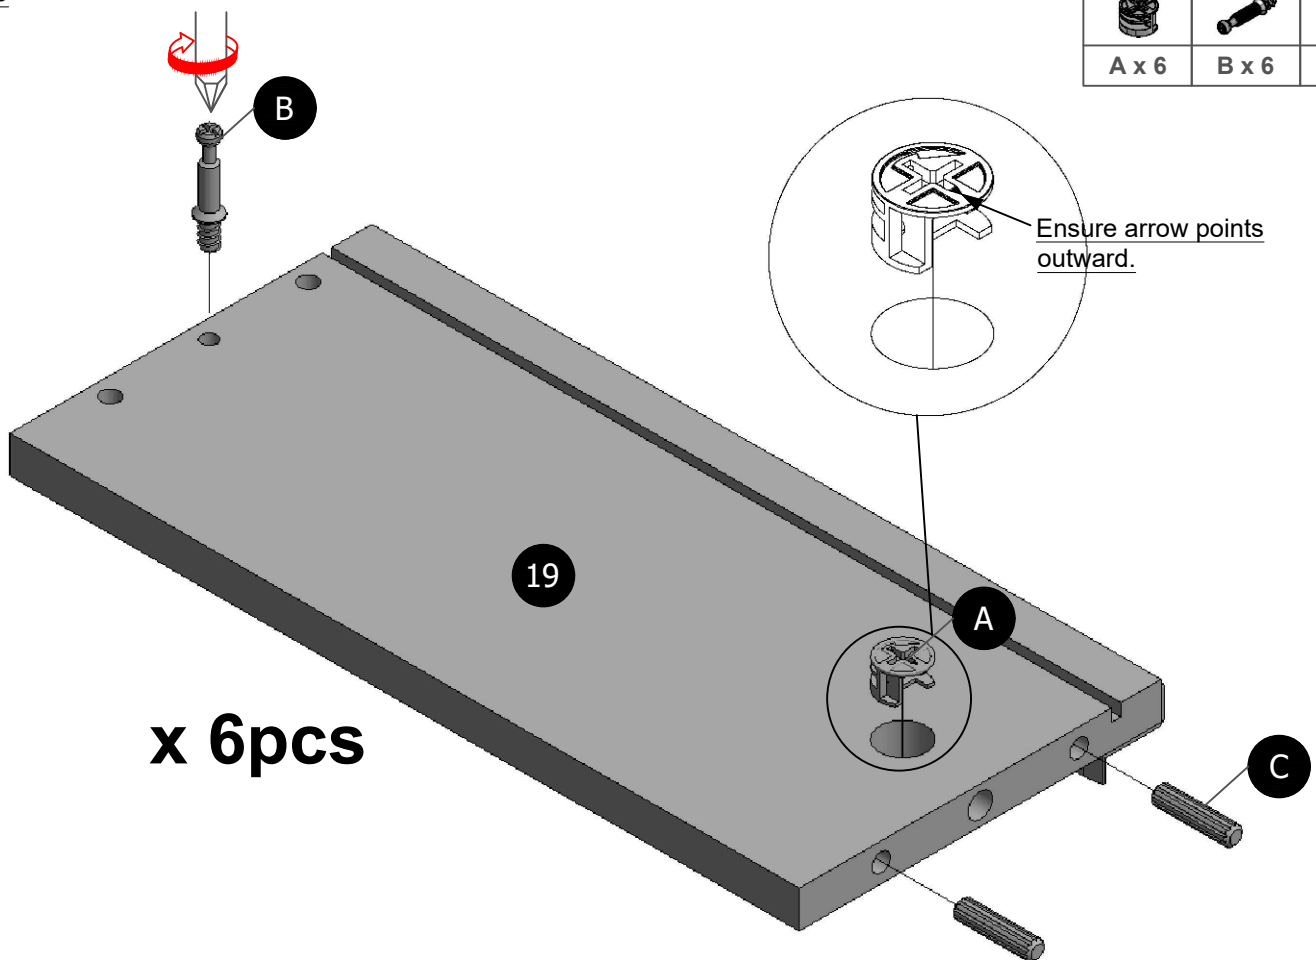


80281 DR ASSEMBLY INSTRUCTION

STEP 17


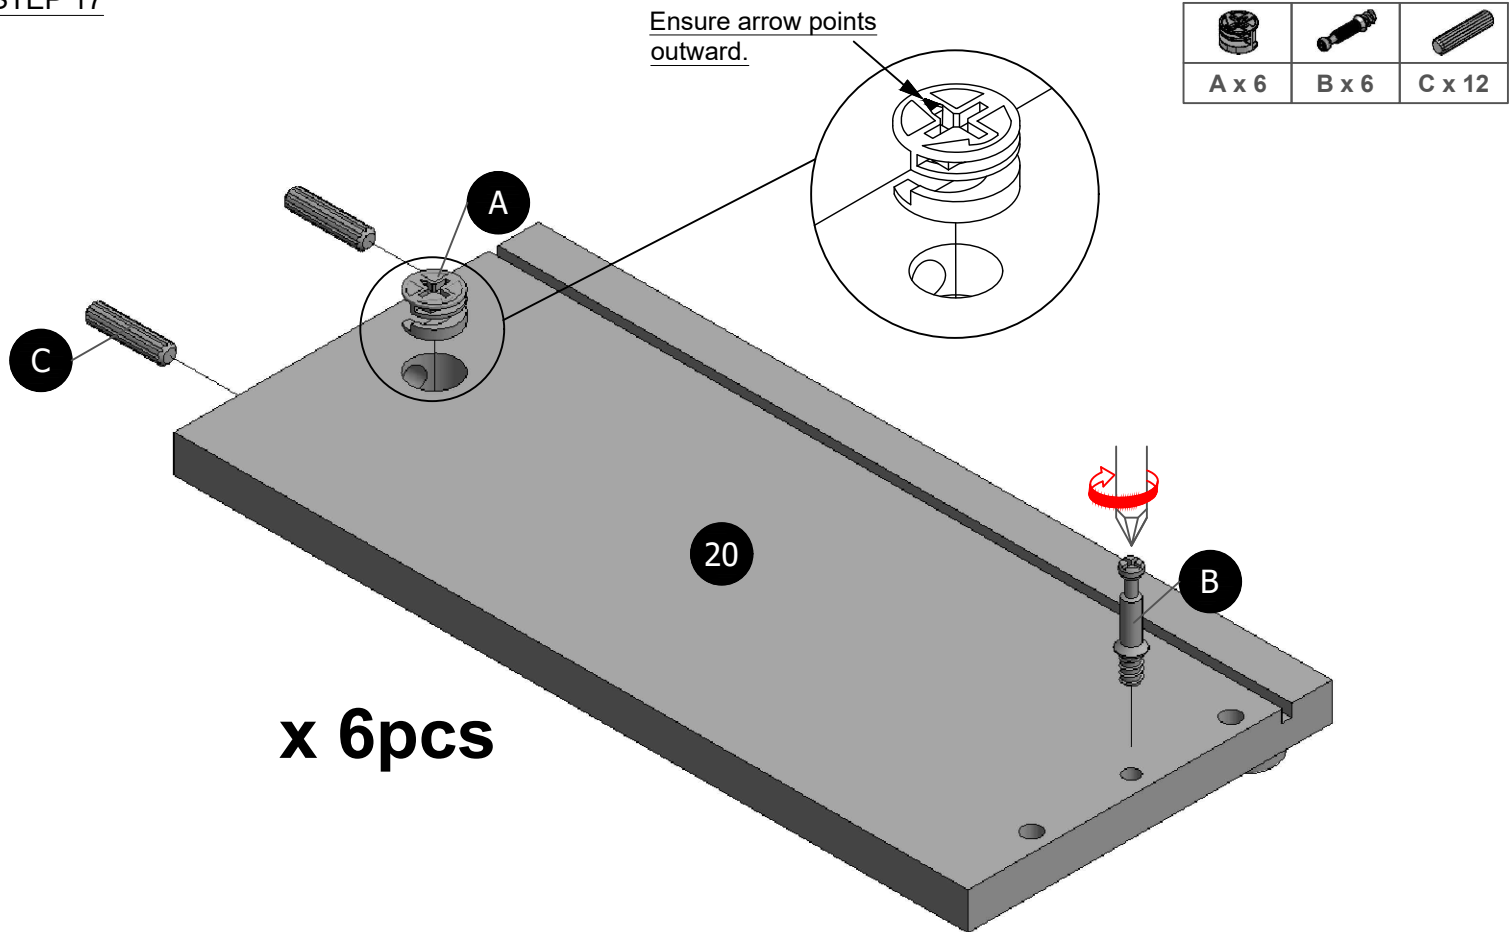


STEP 18

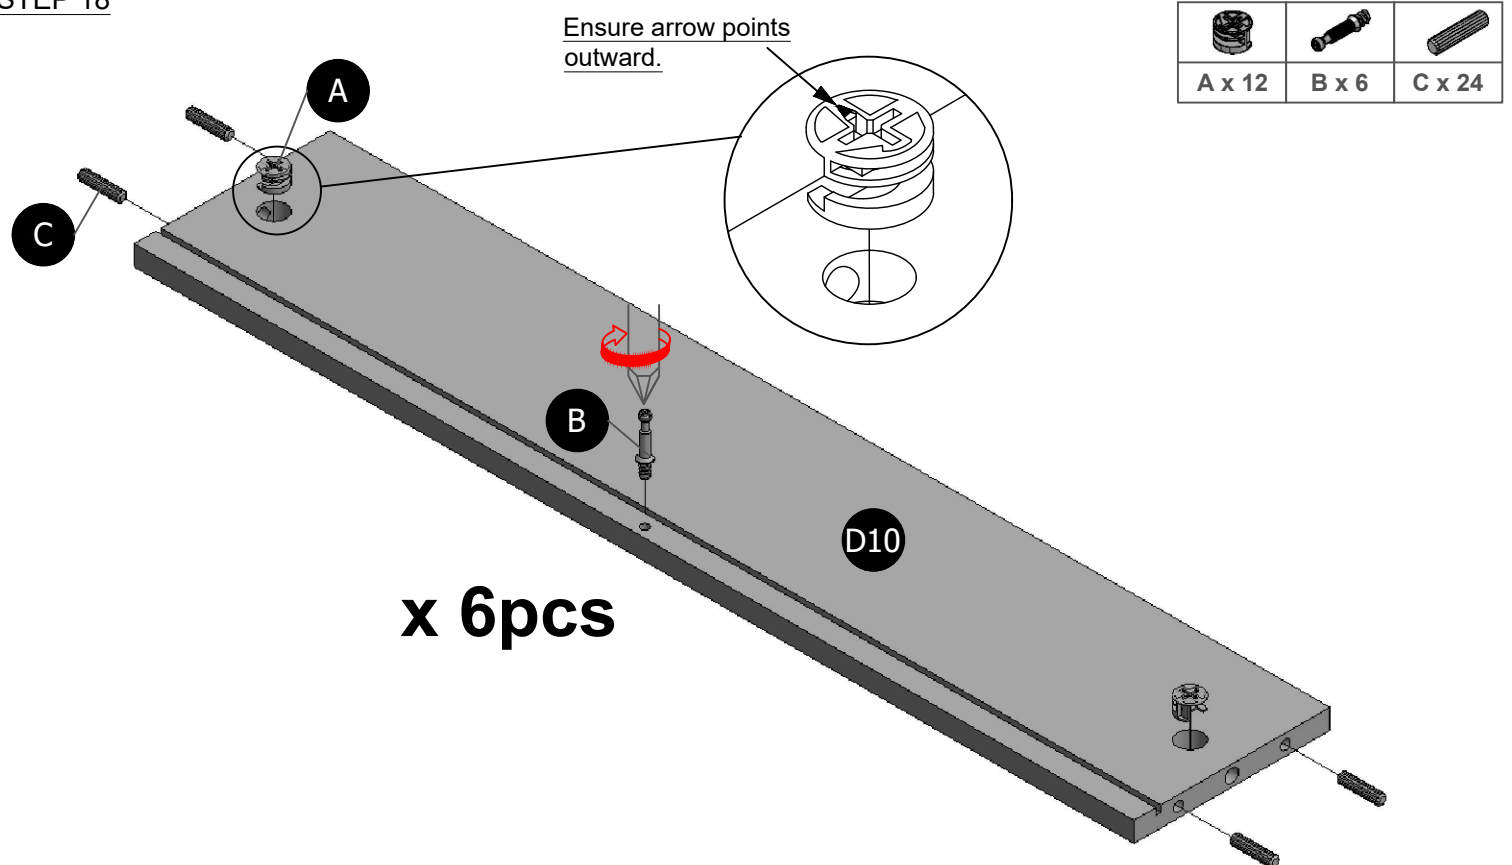



80281 DR ASSEMBLY INSTRUCTION

STEP 19

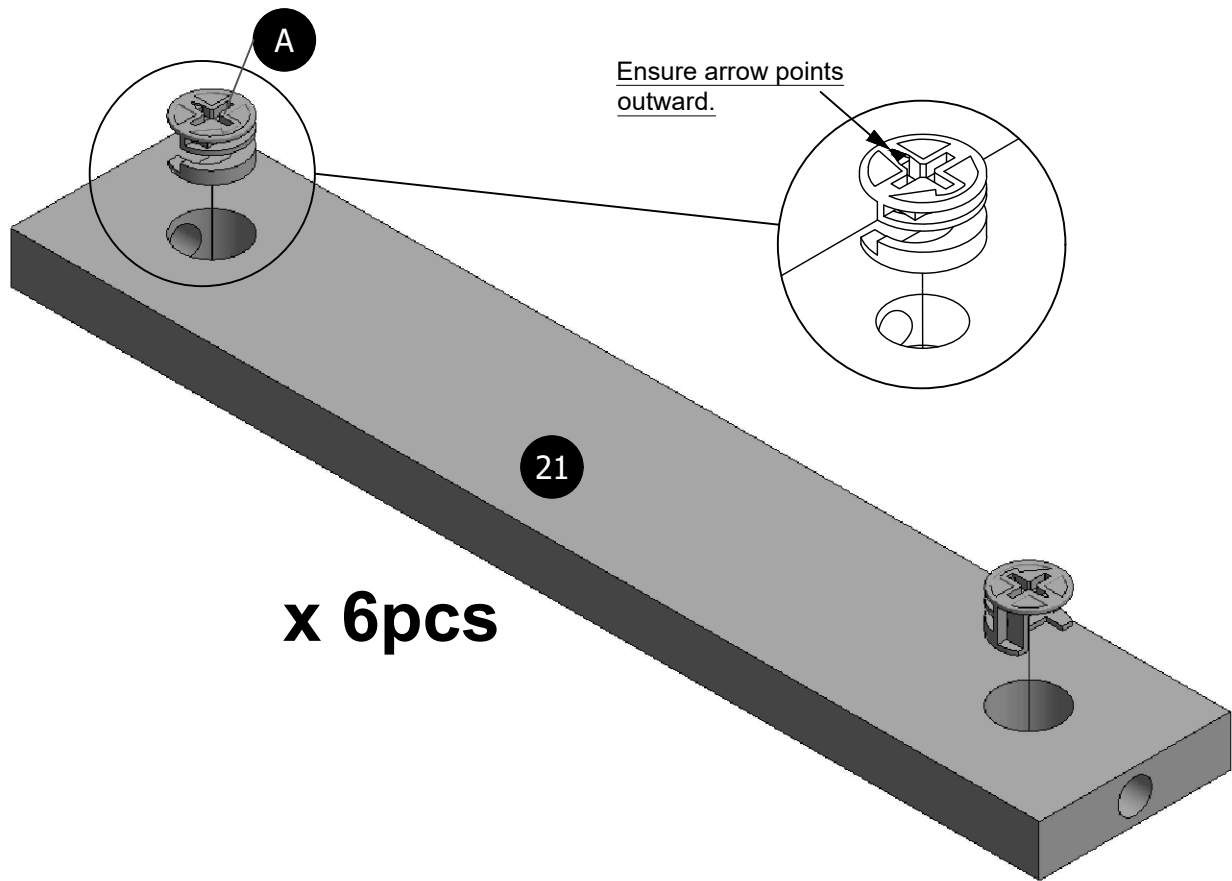

STEP 20


Combine (19) & (20) into (D10), then tighten 2pcs (A) as shown.

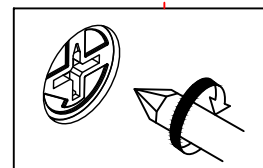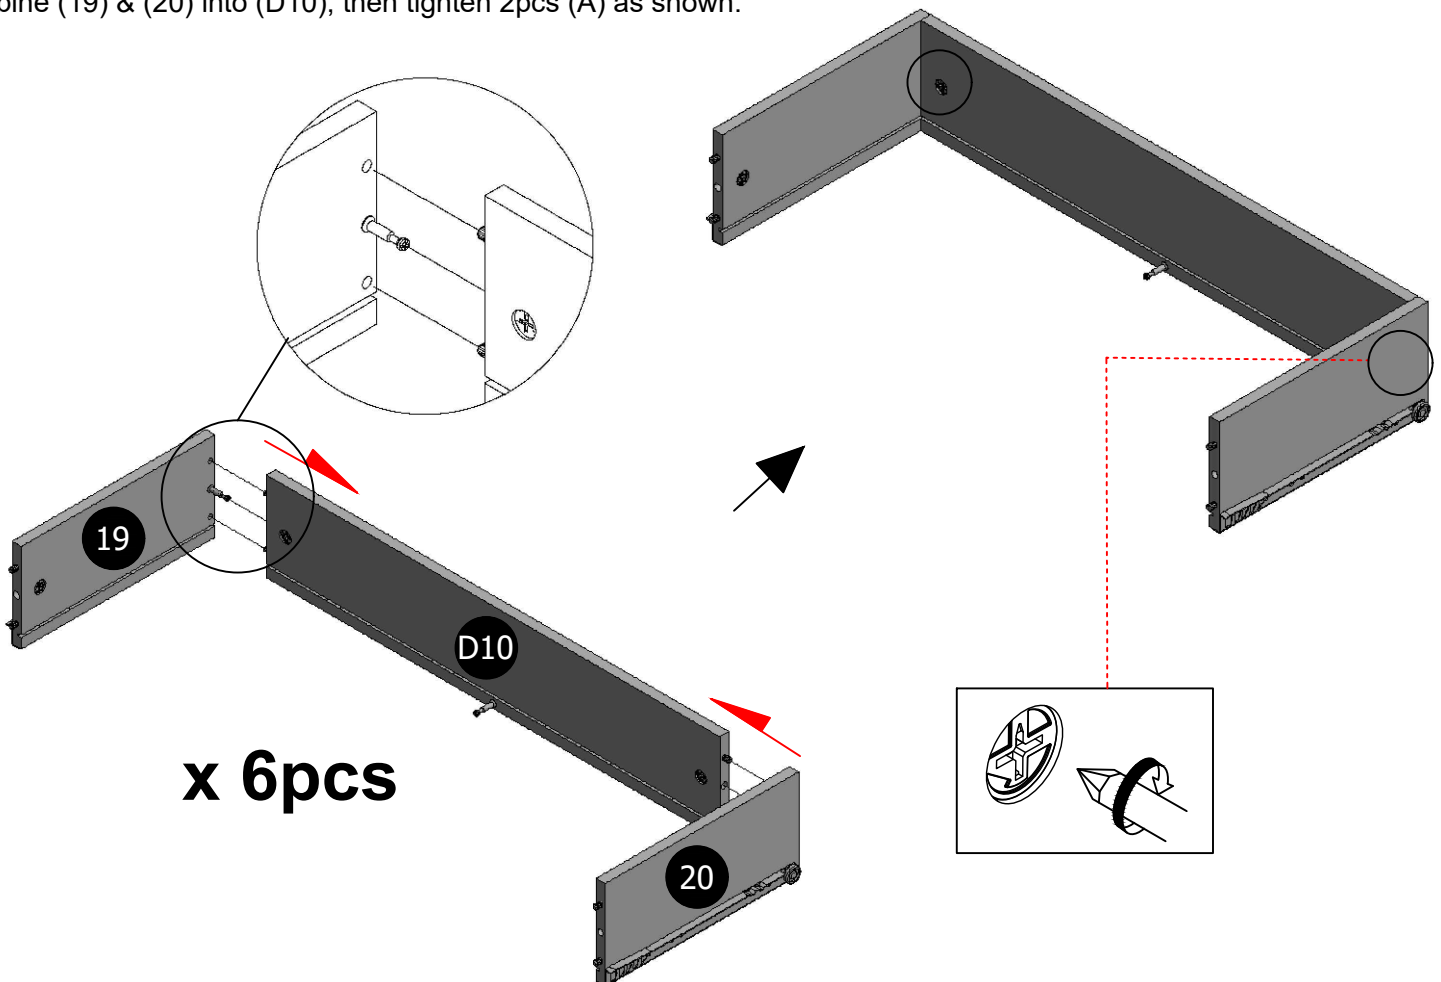

80281 DR ASSEMBLY INSTRUCTION


STEP 21

Insert (D11) into the drawer groove as shown.

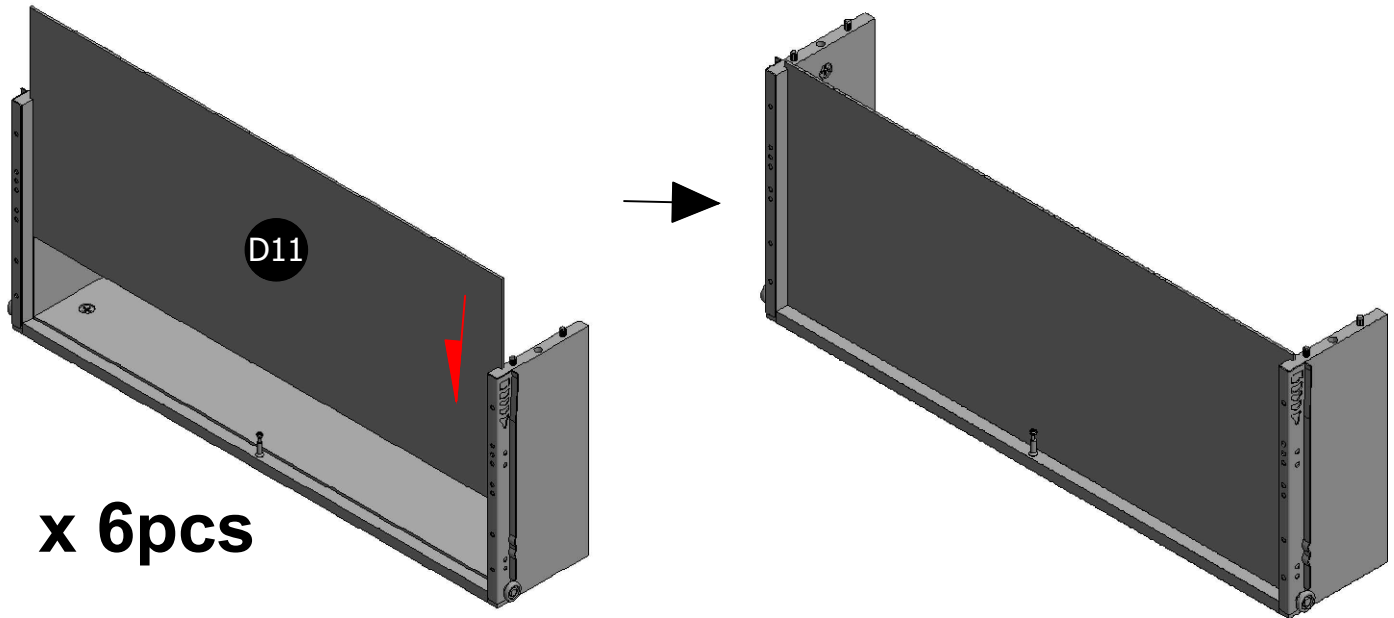

STEP 22


Insert (21) into the (D10) , then tighten 1pc (A) as shown.

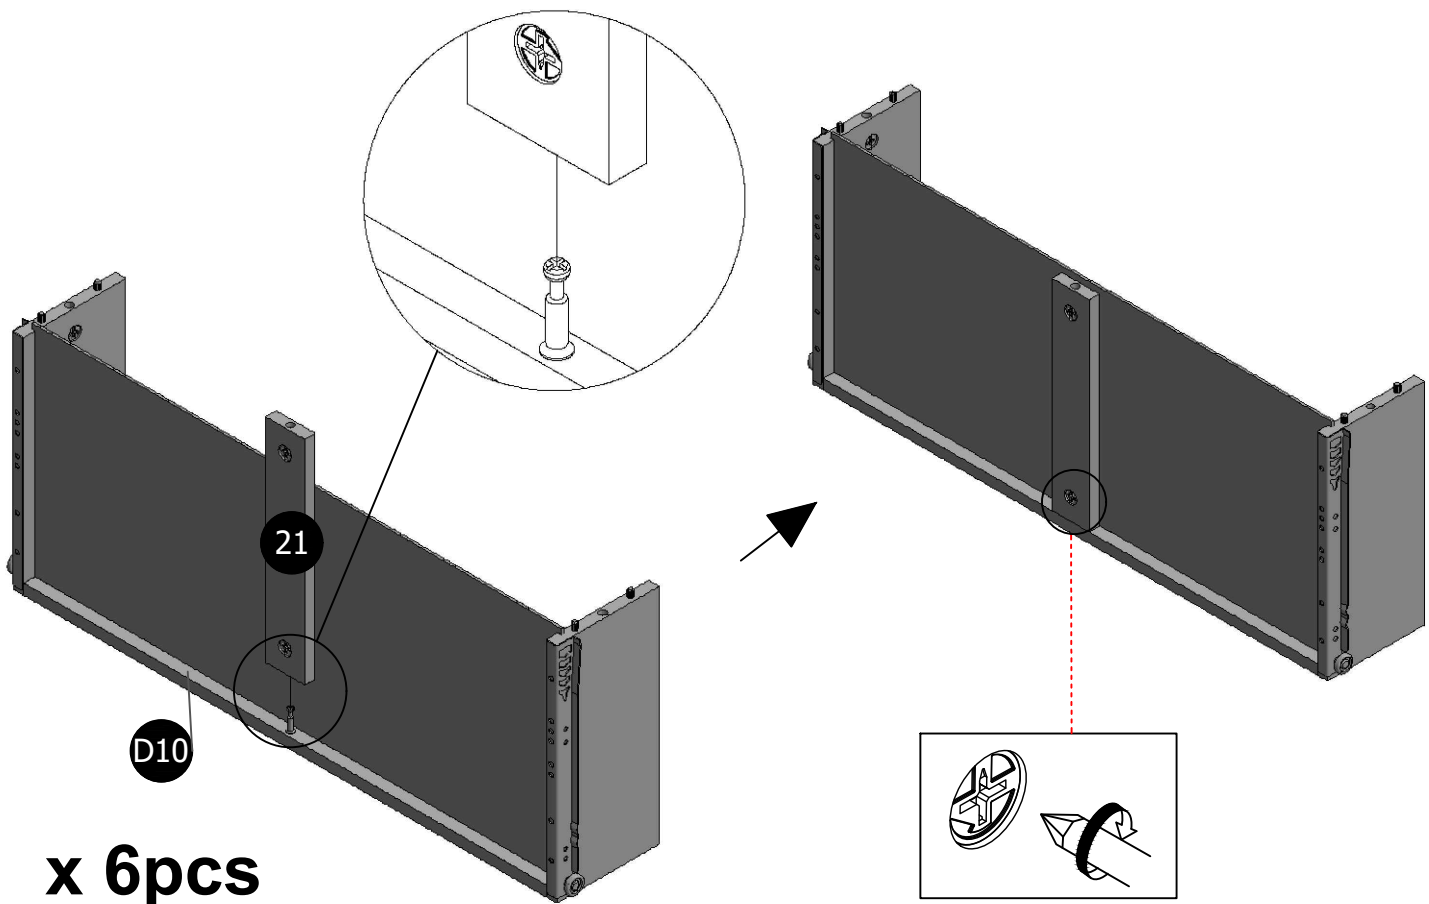

80281 DR ASSEMBLY INSTRUCTION

STEP 23



Combine the (D9) into the drawer frame, then tighten 3pcs (A) as shown.

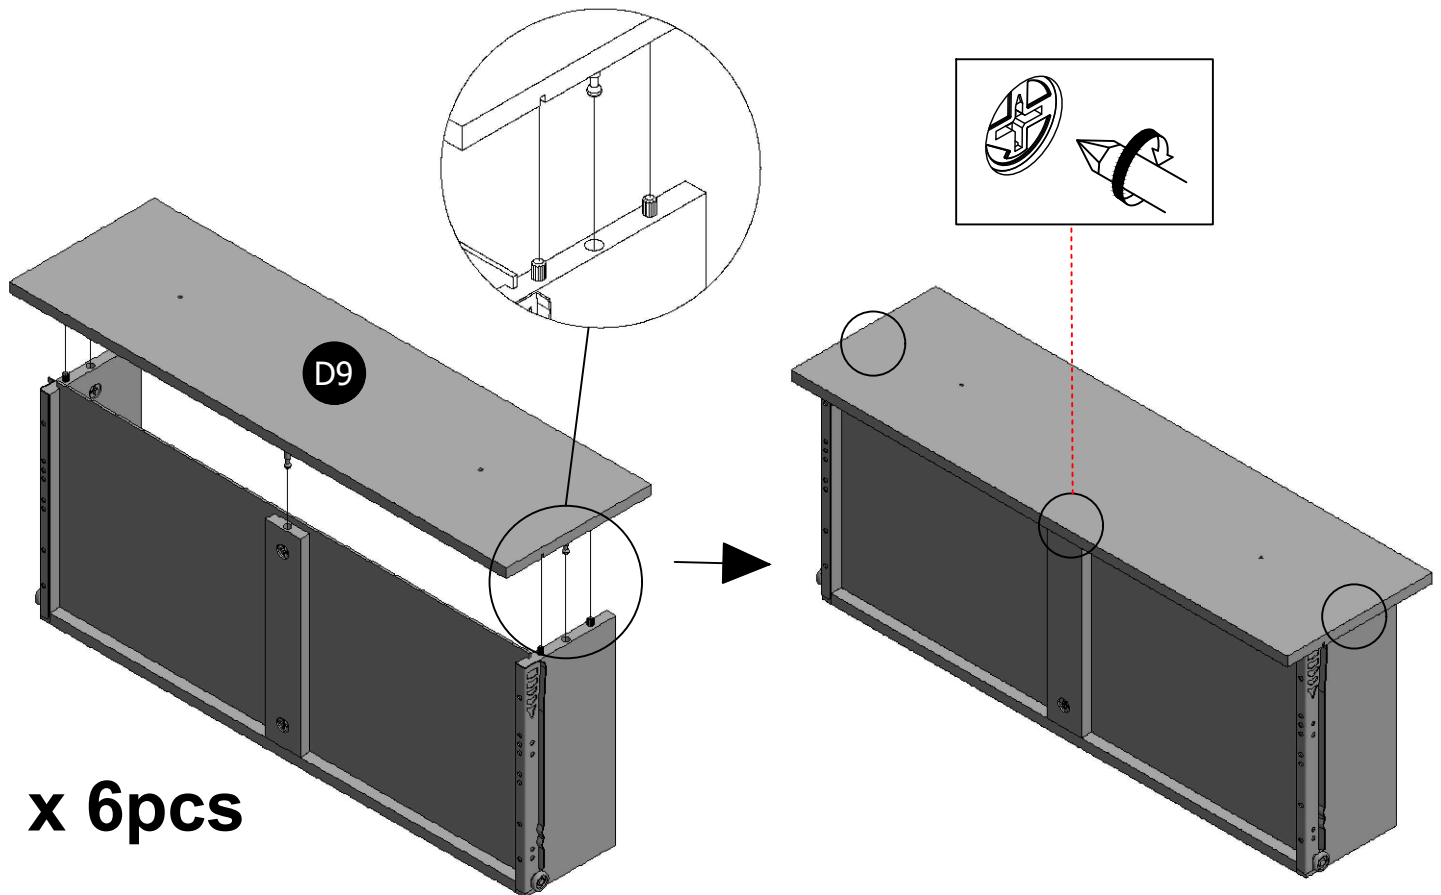


x 6pcs

STEP 24

Secure (F) to the drawer head using (D) as shown.

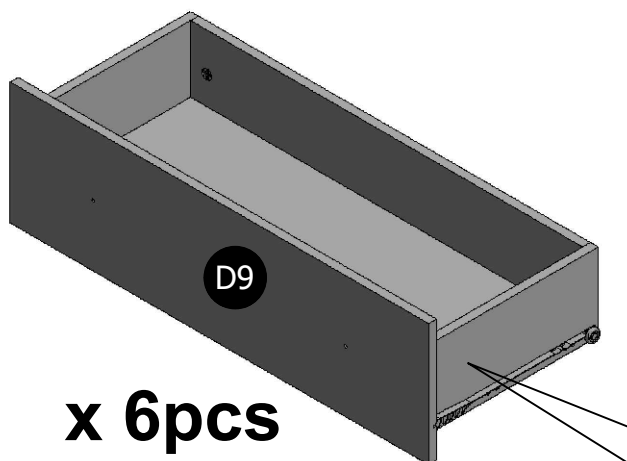


x 6pcs

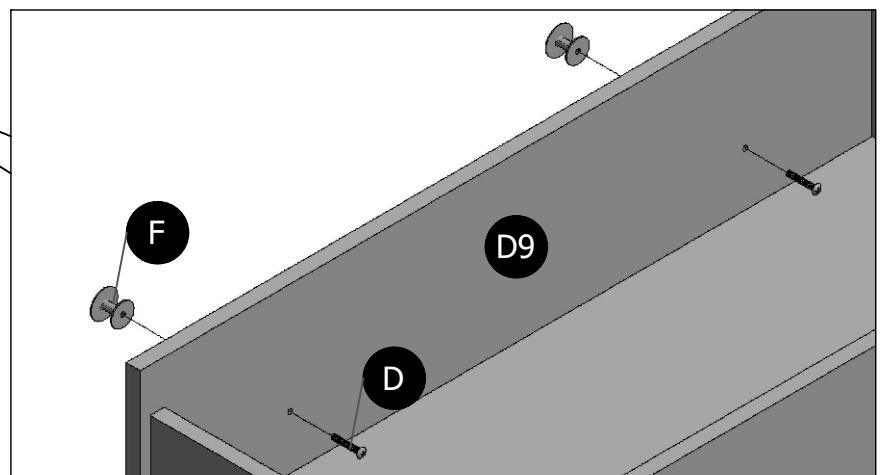


80281 DR ASSEMBLY INSTRUCTION

STEP 25

Align the position then push the drawer to inside exactly by your hand.

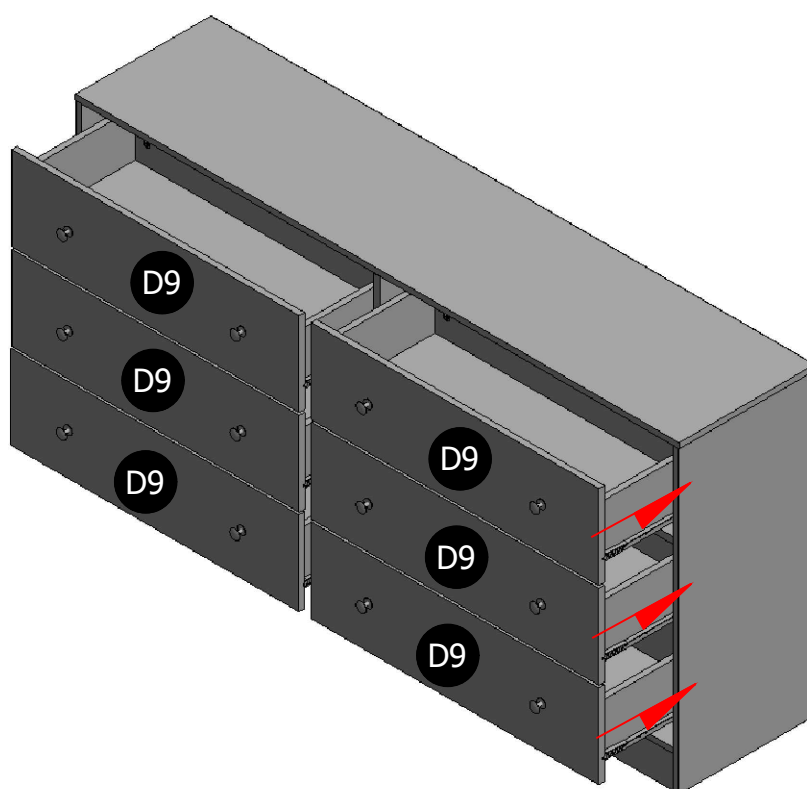

STEP 26

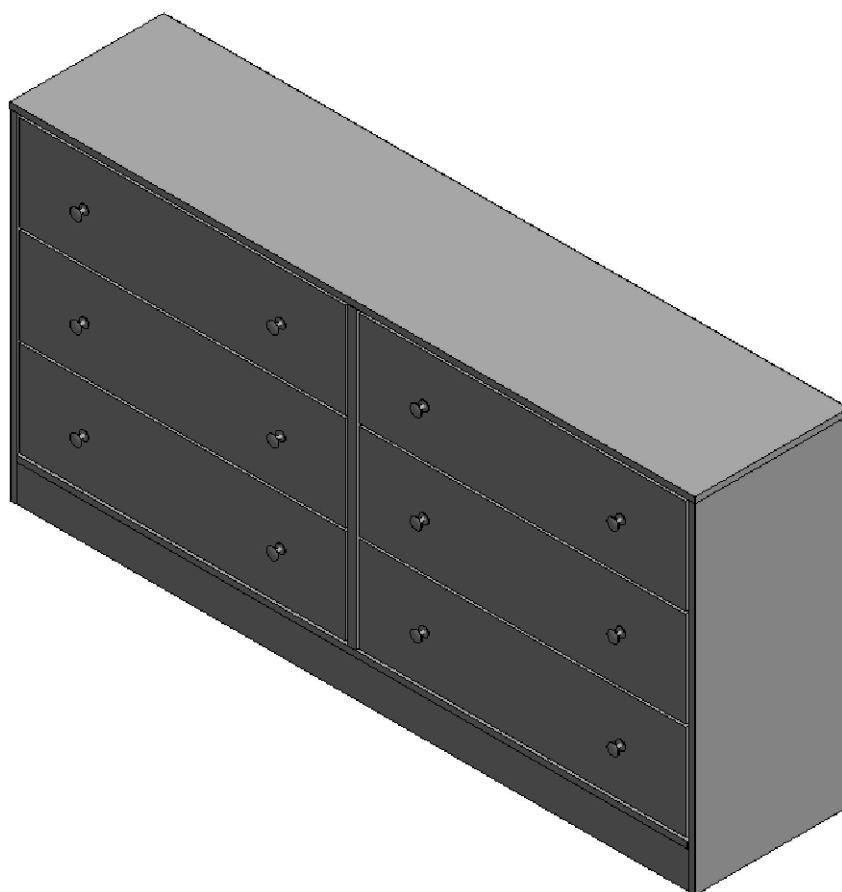

ASSEMBLY COMPLETED