


ASSEMBLY INSTRUCTION

ITEM NO.: REXY1012

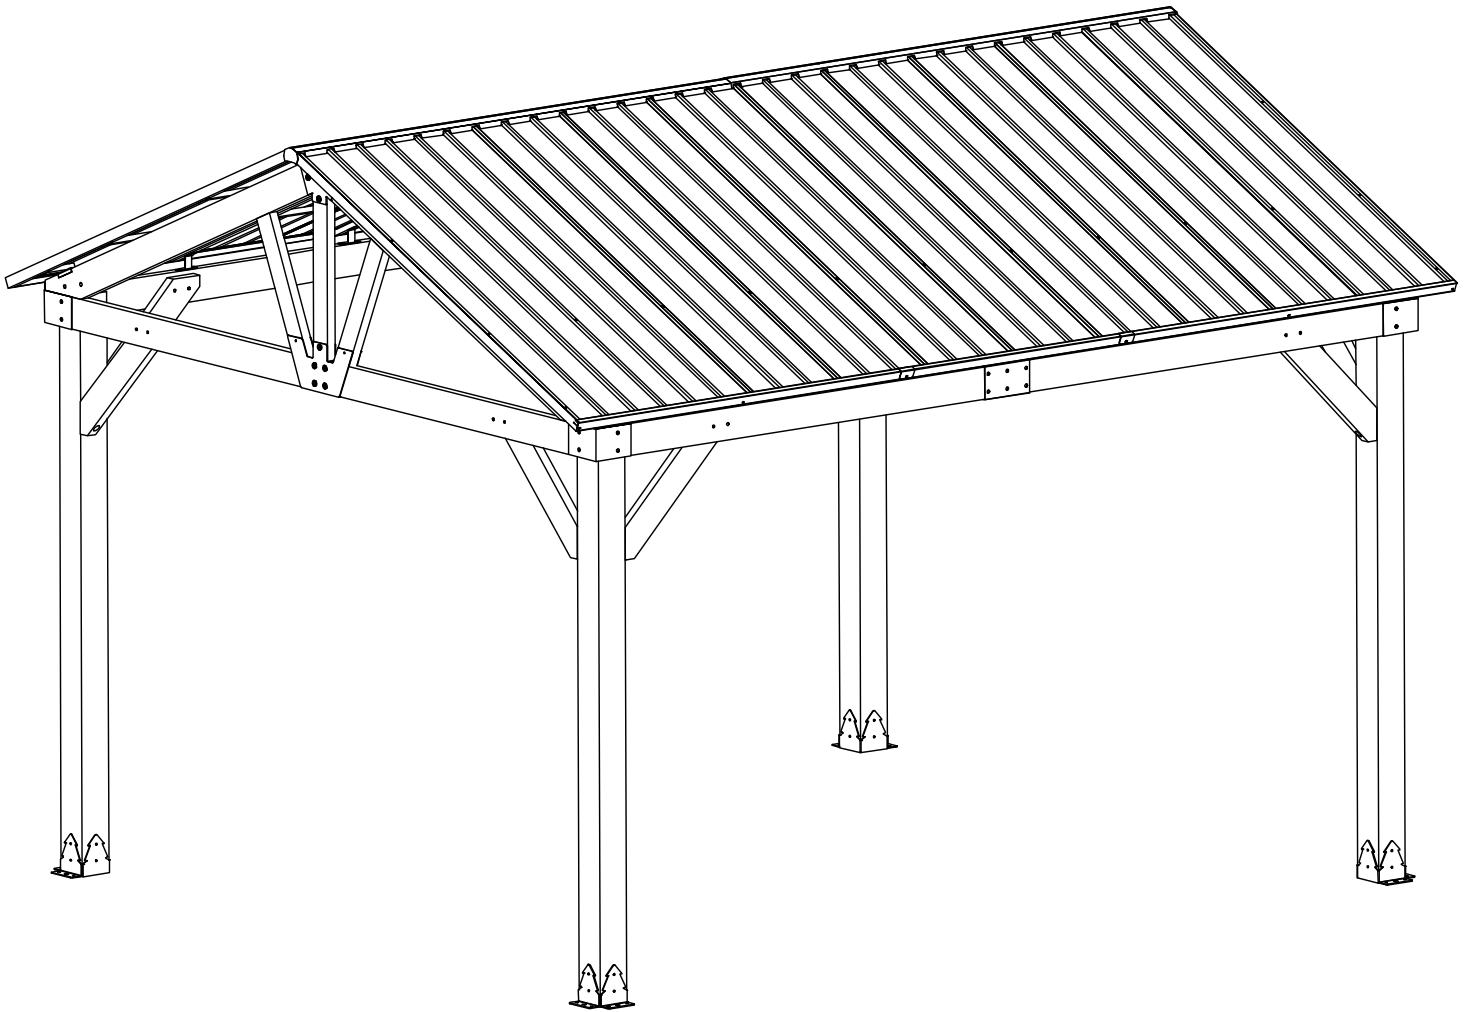

Before You Start

Please read all instruction carefully.

Retain instructions for future reference.

Separate and count all parts and Hardware.

Read through each step carefully and follow the proper order.

Keep all small parts and packaging materials for this product .

Tools Required For Assembly



1. It required two or more people to complete assembly.




2. You will need one stepladder.




3. You may need to wear protective gloves.



4. A safety hat is recommended.



5. Use the hex keys in the box.







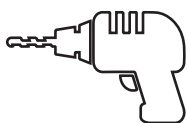









6. Please use a screwdriver. For ease of construction, you may need to use a drill.



7. Please do not tighten screws fully prior to complete assembly.




10X12

Item no	Qty	Reference Image
01	4	 1515mm 2/4 BOX
02	4	 1714mm 1/4 BOX
04	8	 4/4 BOX
05	4	 1/4 BOX:2PCS 2/4 BOX:2PCS
07	4	 3/4 BOX
08	4	 3/4 BOX
09	2	 3/4 BOX



Item no	Qty	Reference Image	3/4 BOX
A1	2		
B1	2		
C1	4		
D1	8		
D2	2		
D3	2		
H16	2		
H17	2		
H18	2		
K28	4		
K29	4		
K30	2		
P1	1		

3/4 BOX					
Item no	Qty	Reference Image	Item no	Qty	Reference Image
M1	4		N1	2	
Z1	8		Z2	2	
Z3	4		Z4	4	
X1	8		X2	8	
X3	4		X4	4	
Q2	2		R1	2	
R2	2		R3	4	


Item no	Qty	Description	Reference Image	3/4 BOX
AA	8	M8X145		
BB	52+4	M5X30		
CC	8	M10X80		
DD	8	M6X70		
FF	36+2	M8X25		
GG	4+1	M6		
HH	16	M8X60		
II	4	M6X70		
JJ	16+2	M5X20		
KK	4+1	M5X140		
LL	12+1	M6X45		
MM	20+1			
EE	8+2	M6X25		
TT	120+10	M6x15		
UU	16	6X200		
Y1	1	M6		
Y2	1	M6		
Y3	2	M10		
Y4	2	M8		
Y5	2	M8		
Y6	2	M6		
Y7	1	M6		
Y8	1	M8		

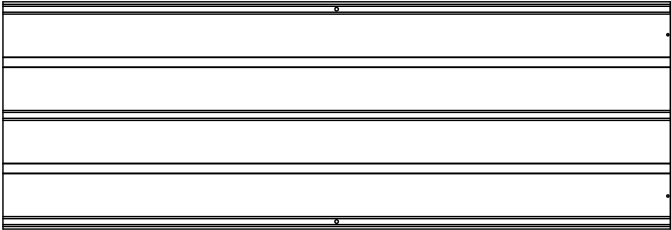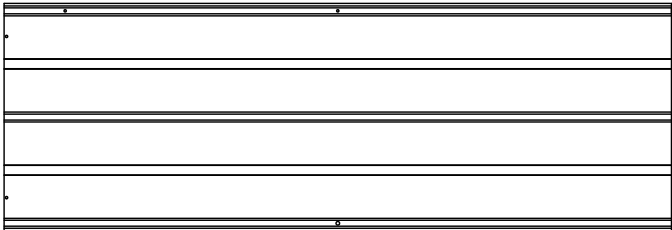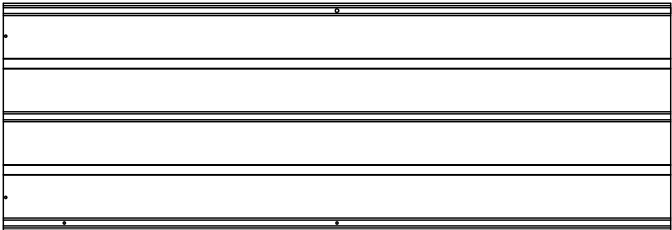T39	10		4/4 BOX
T40	2		
T41	2		


STEP. 1

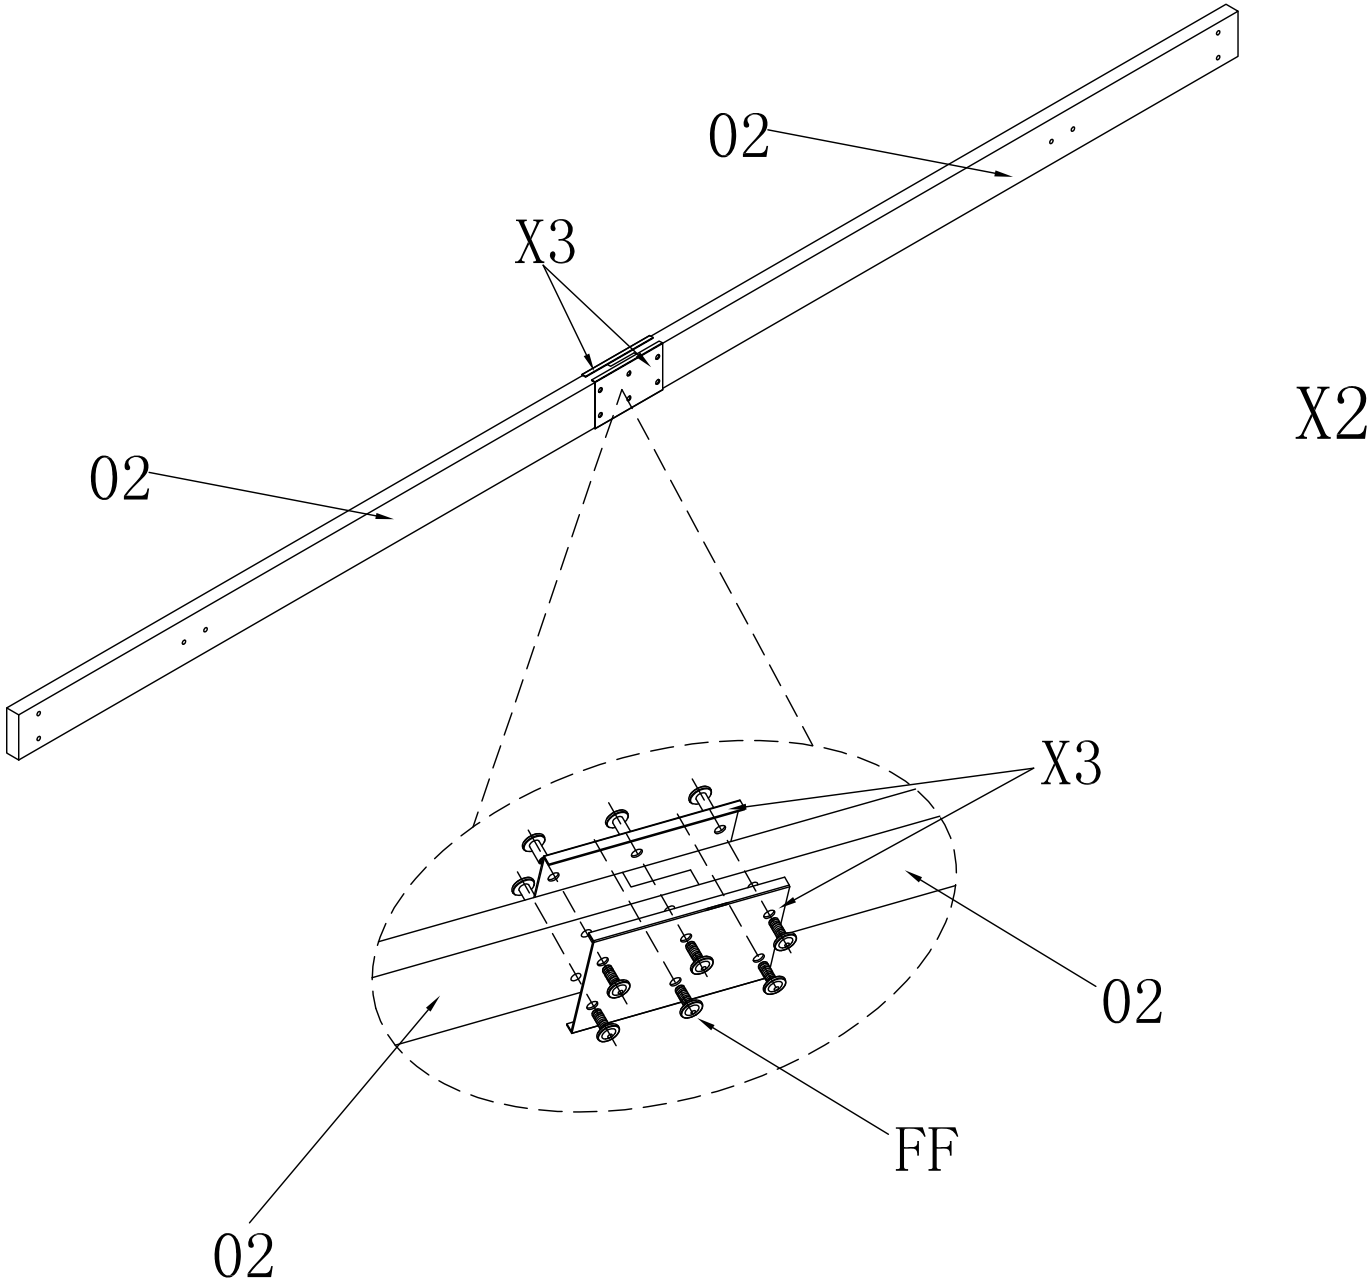

② 4X

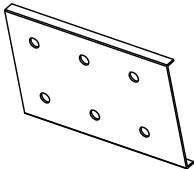




③ 4X




M8*25





ⓕ 12X

STEP. 2

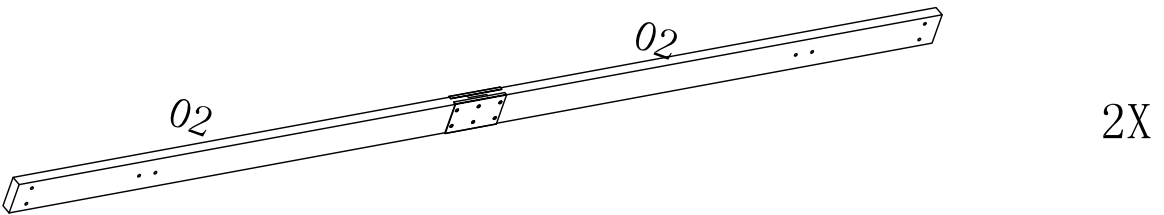
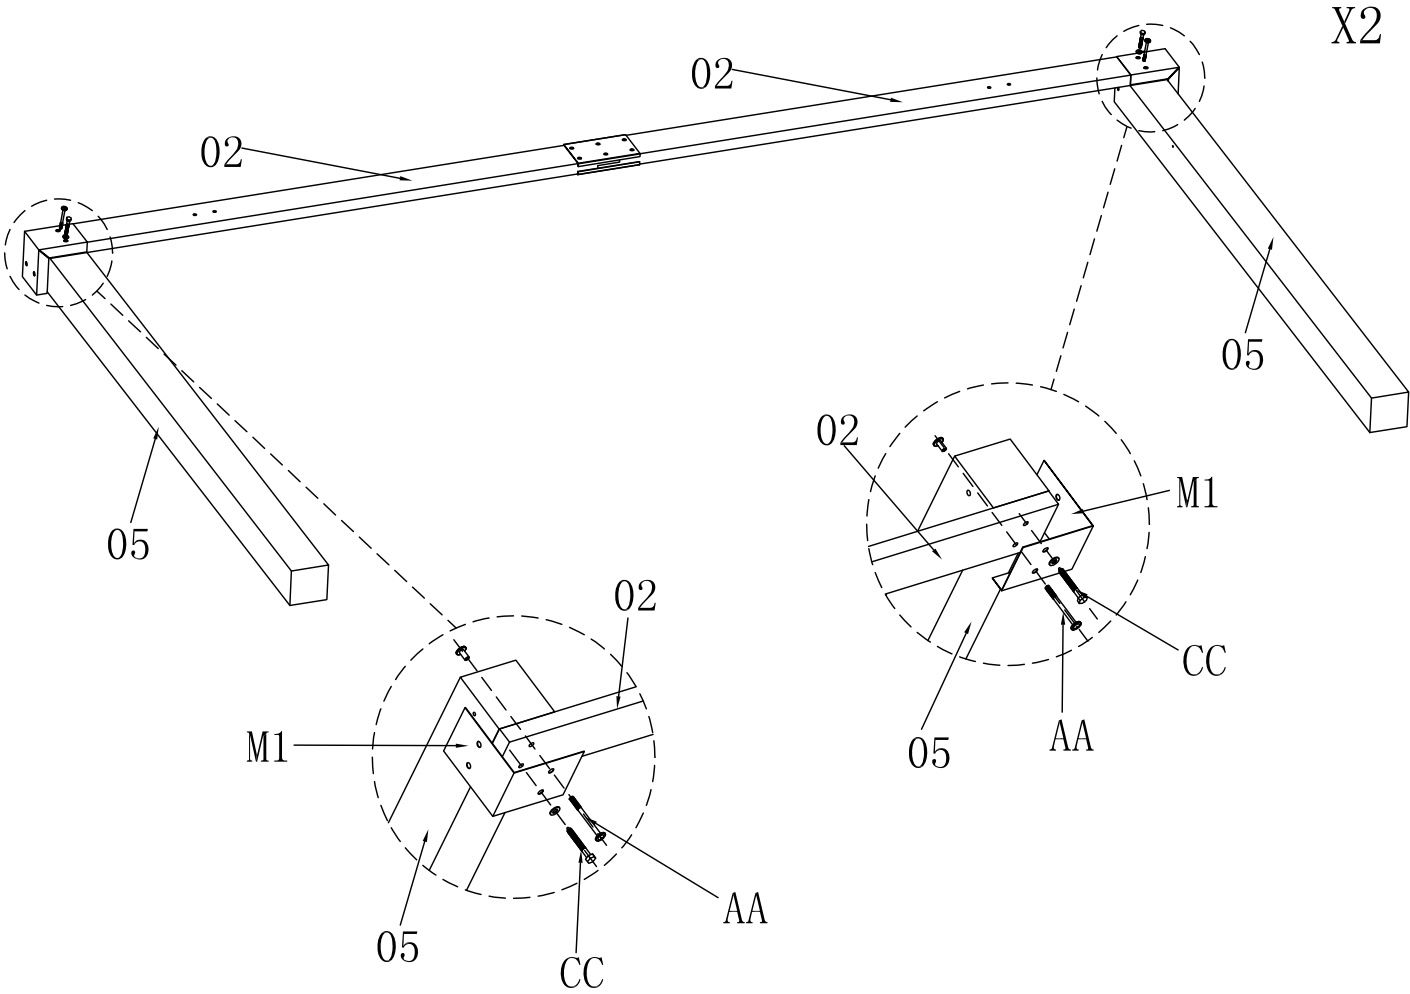


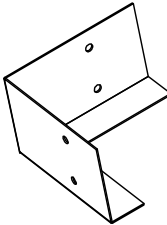 M8X145 AA 4X	 M10*80 CC 4X	 M1 4X
---	---	--


STEP. 3

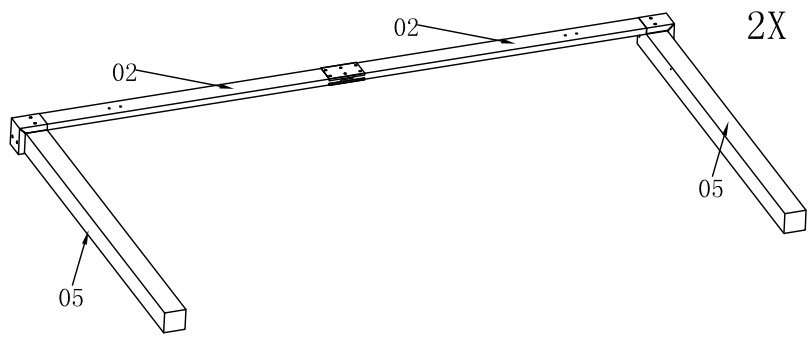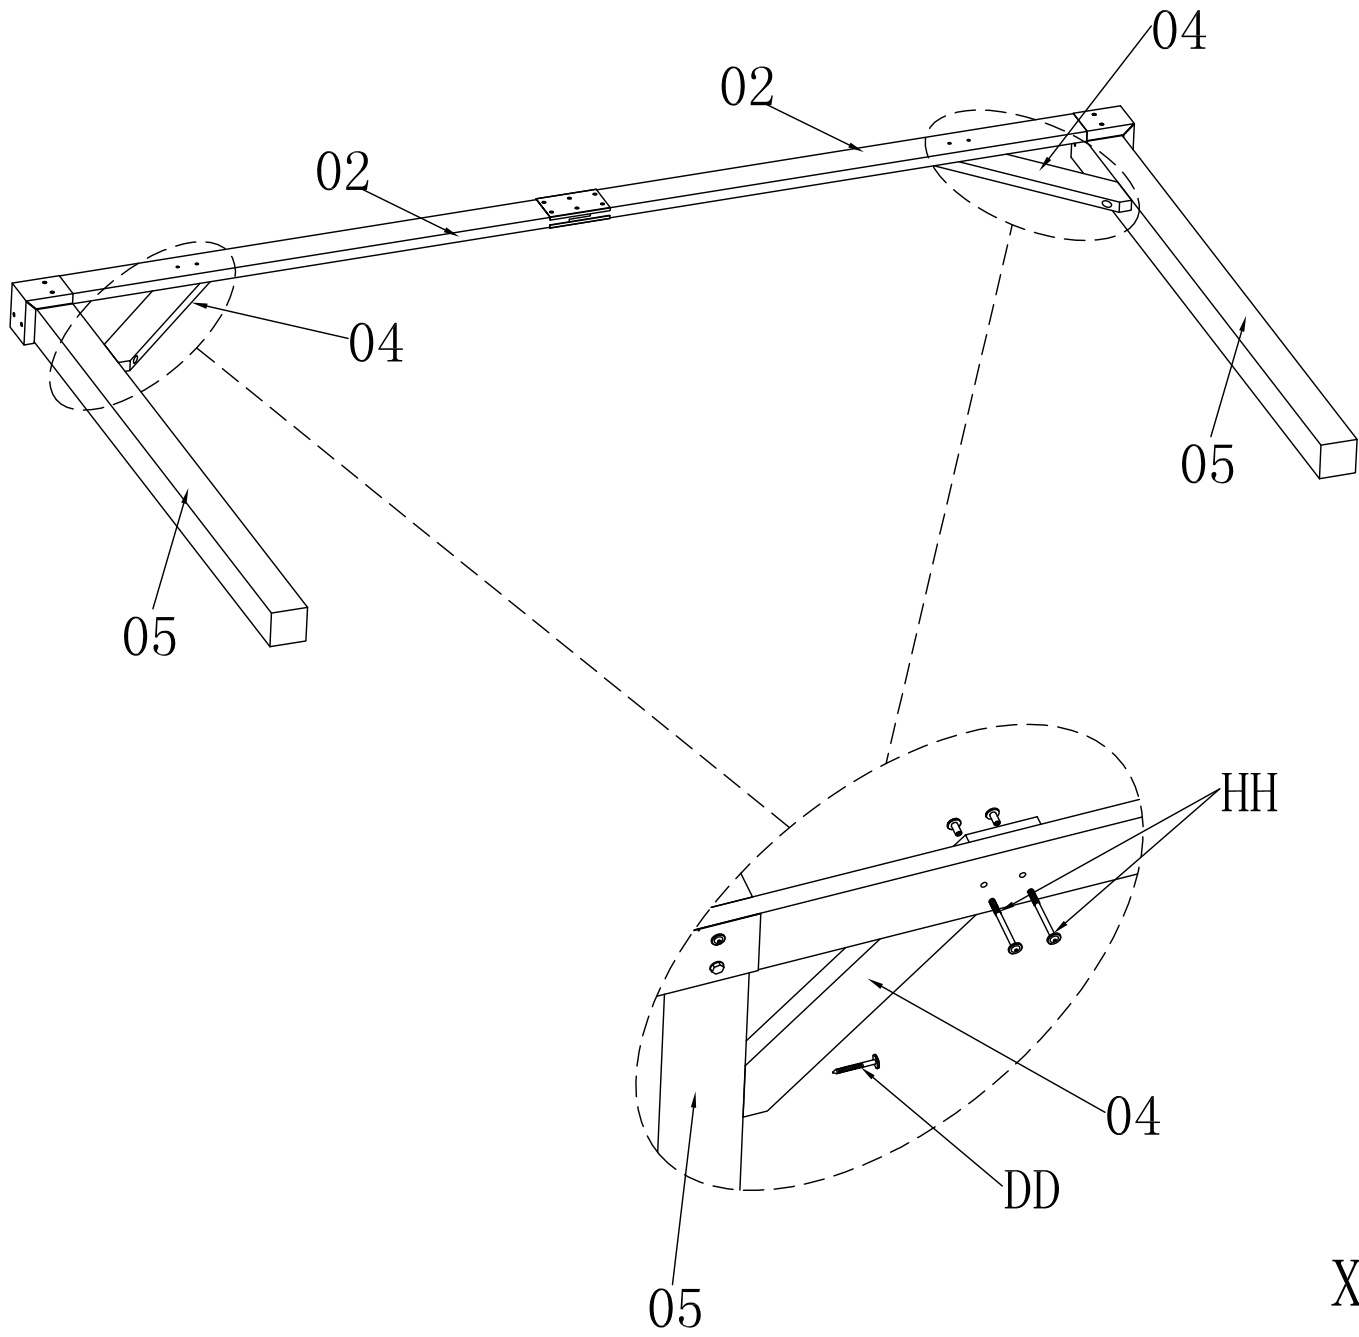


STEP. 4

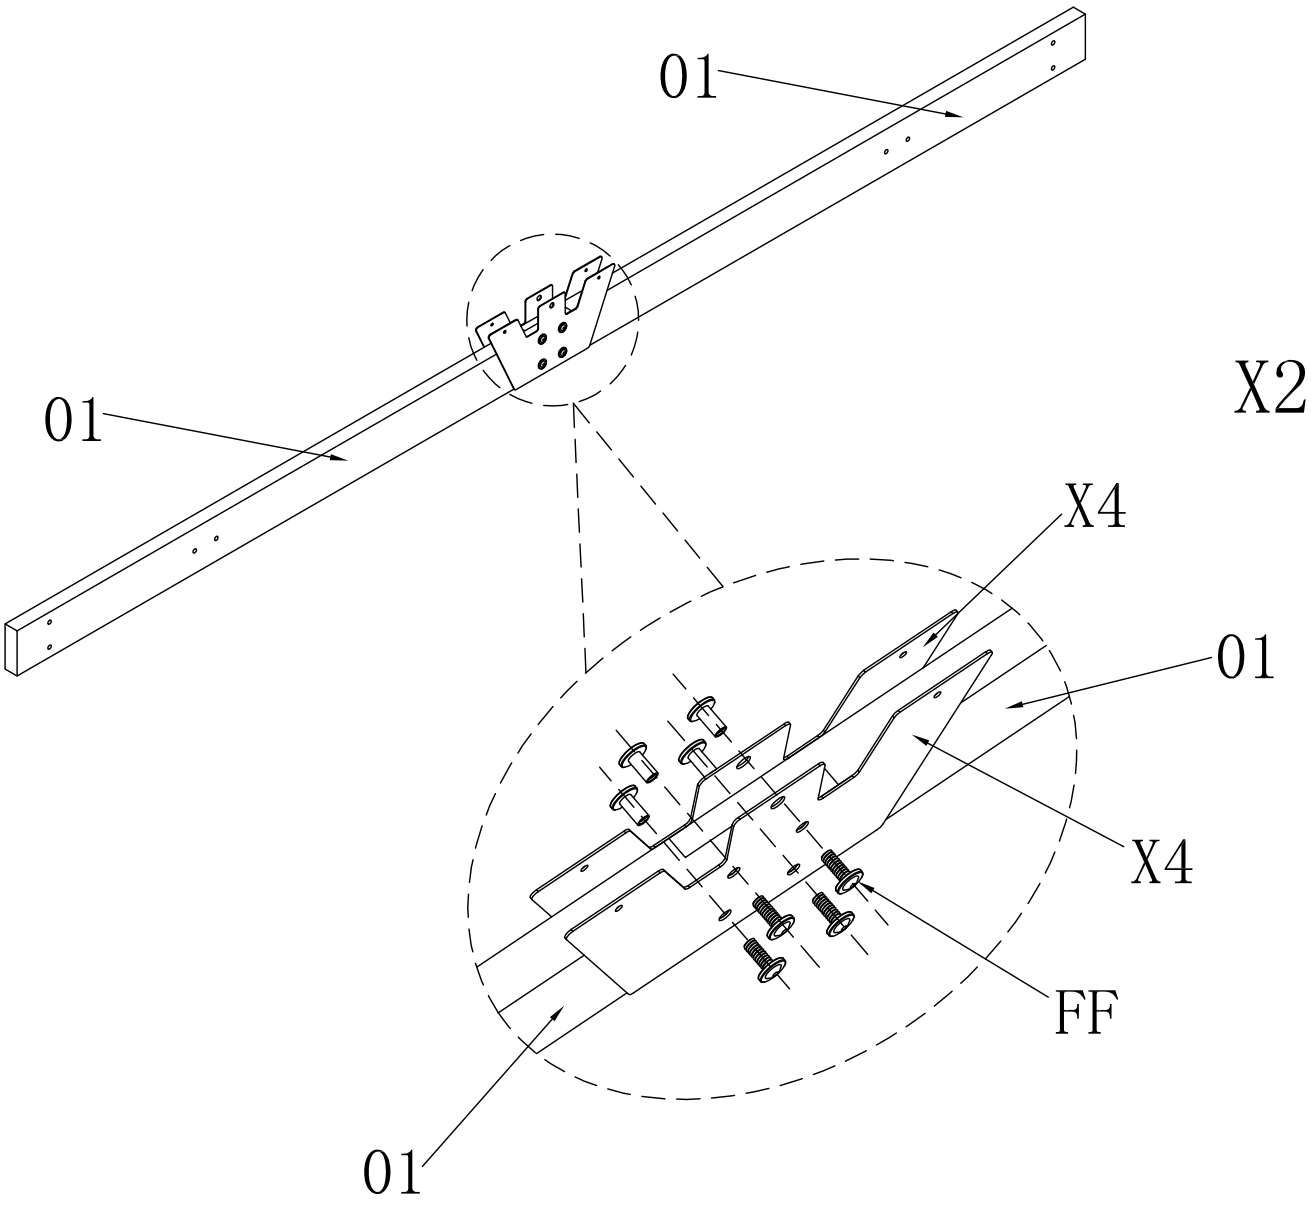

① 4X

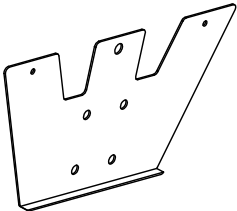



④ 4X




M8*25

⑦ 8X

STEP. 5

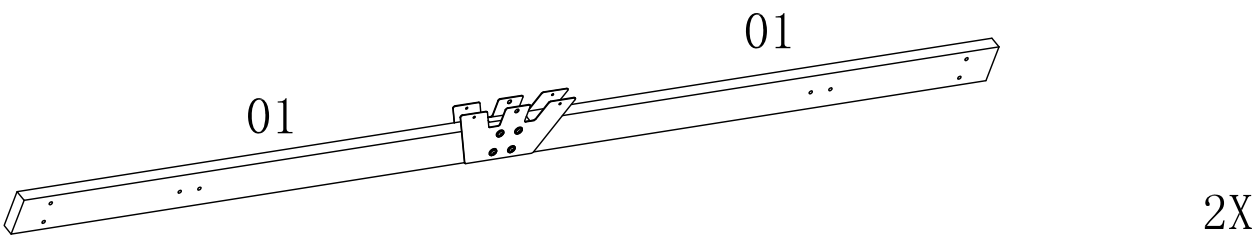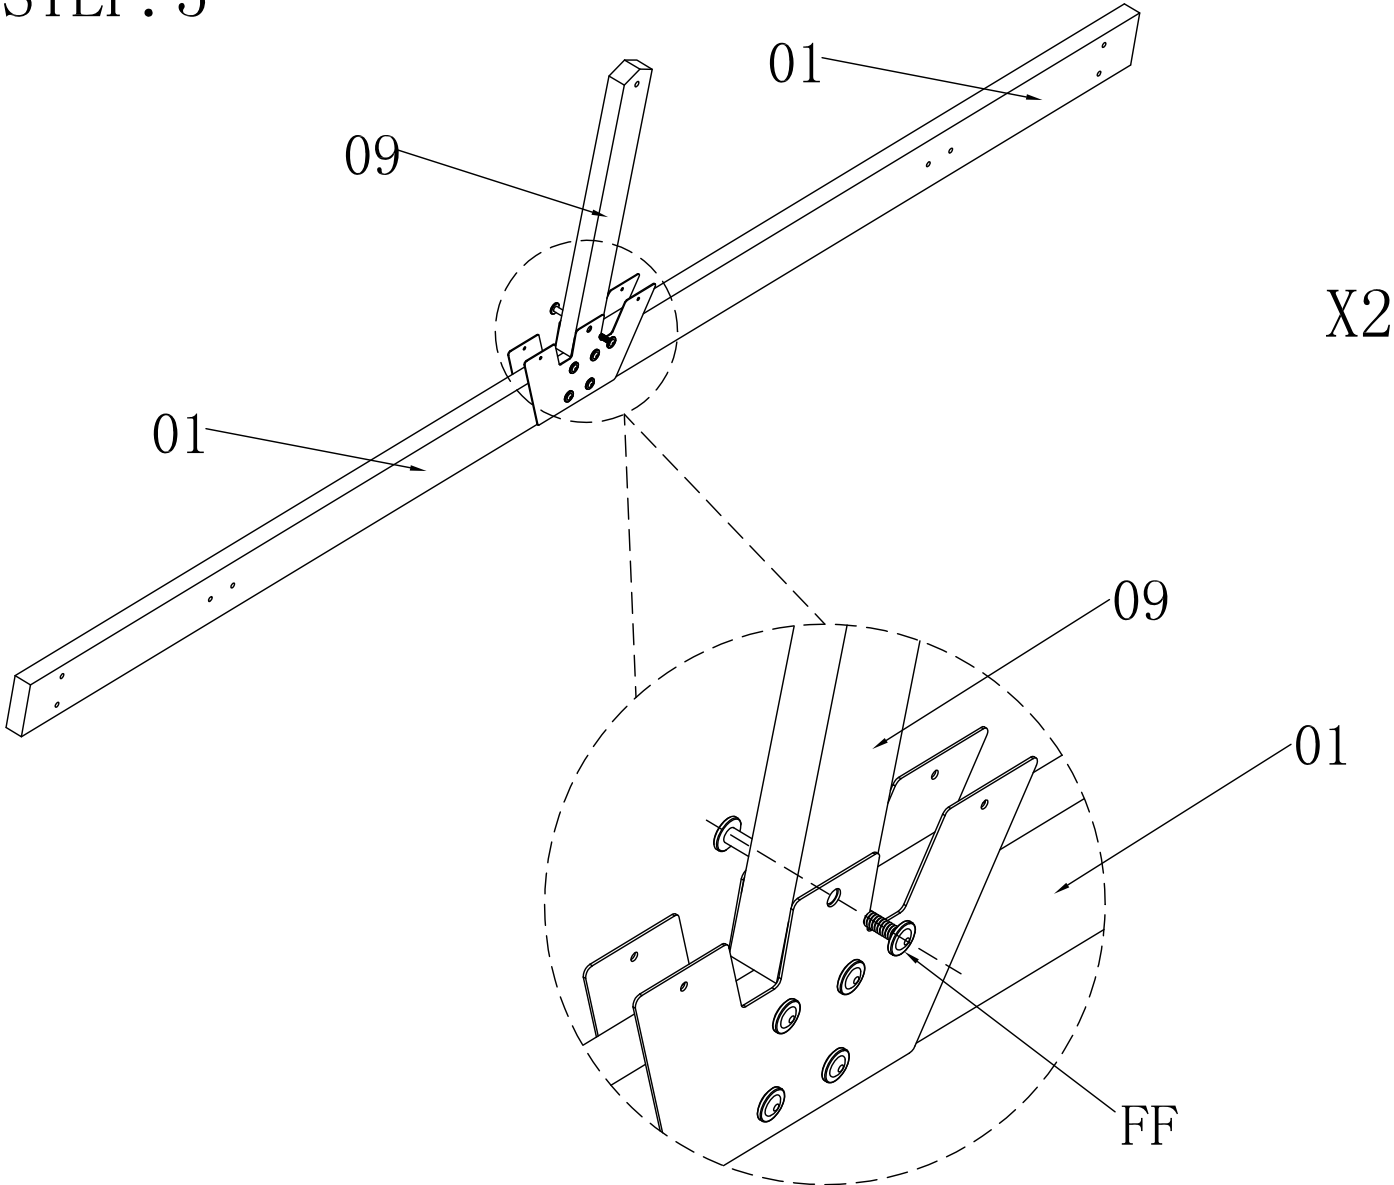


09 2X








M8*25




FF 2X

STEP. 6

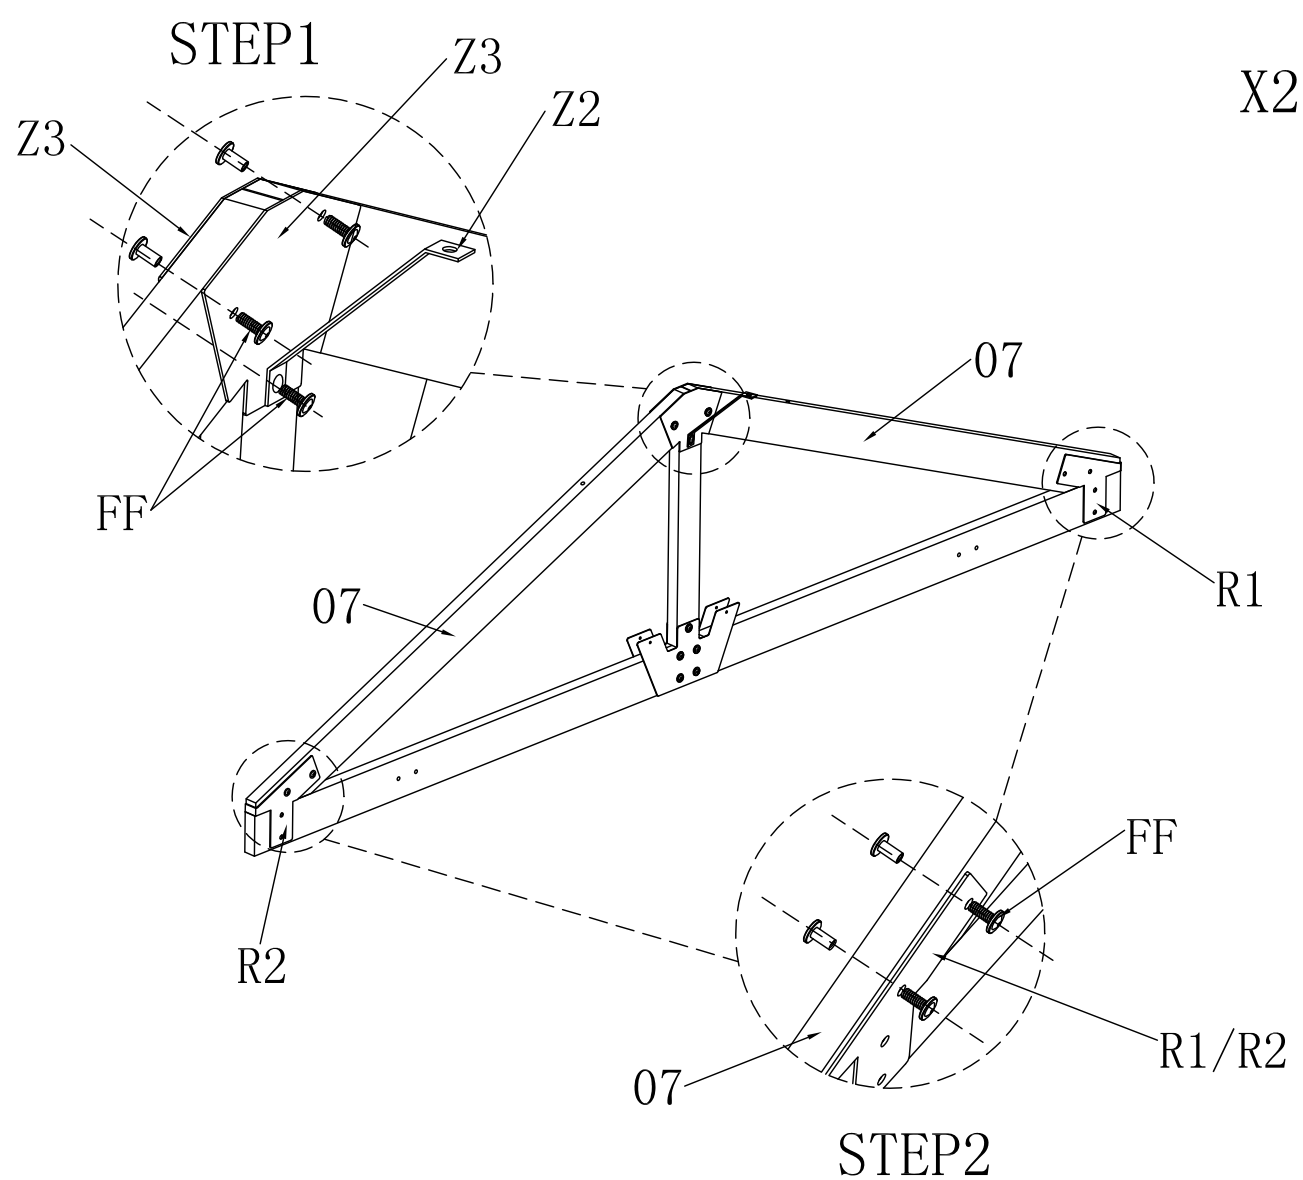


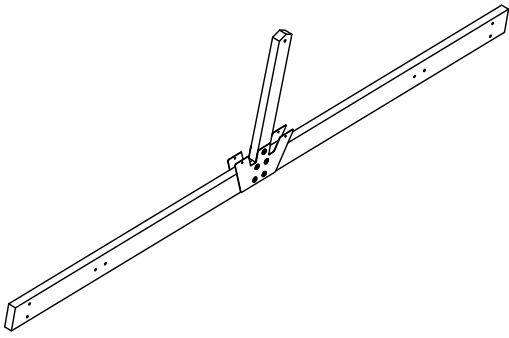 2X		 ⑦ 4X	
		 ② 2X	
 ③ 4X	 ① 2X	 ② 2X	 M8*25 ④ 14X

STEP. 7

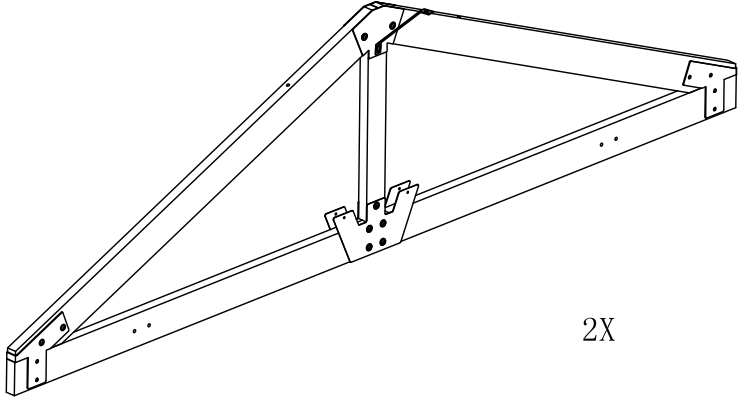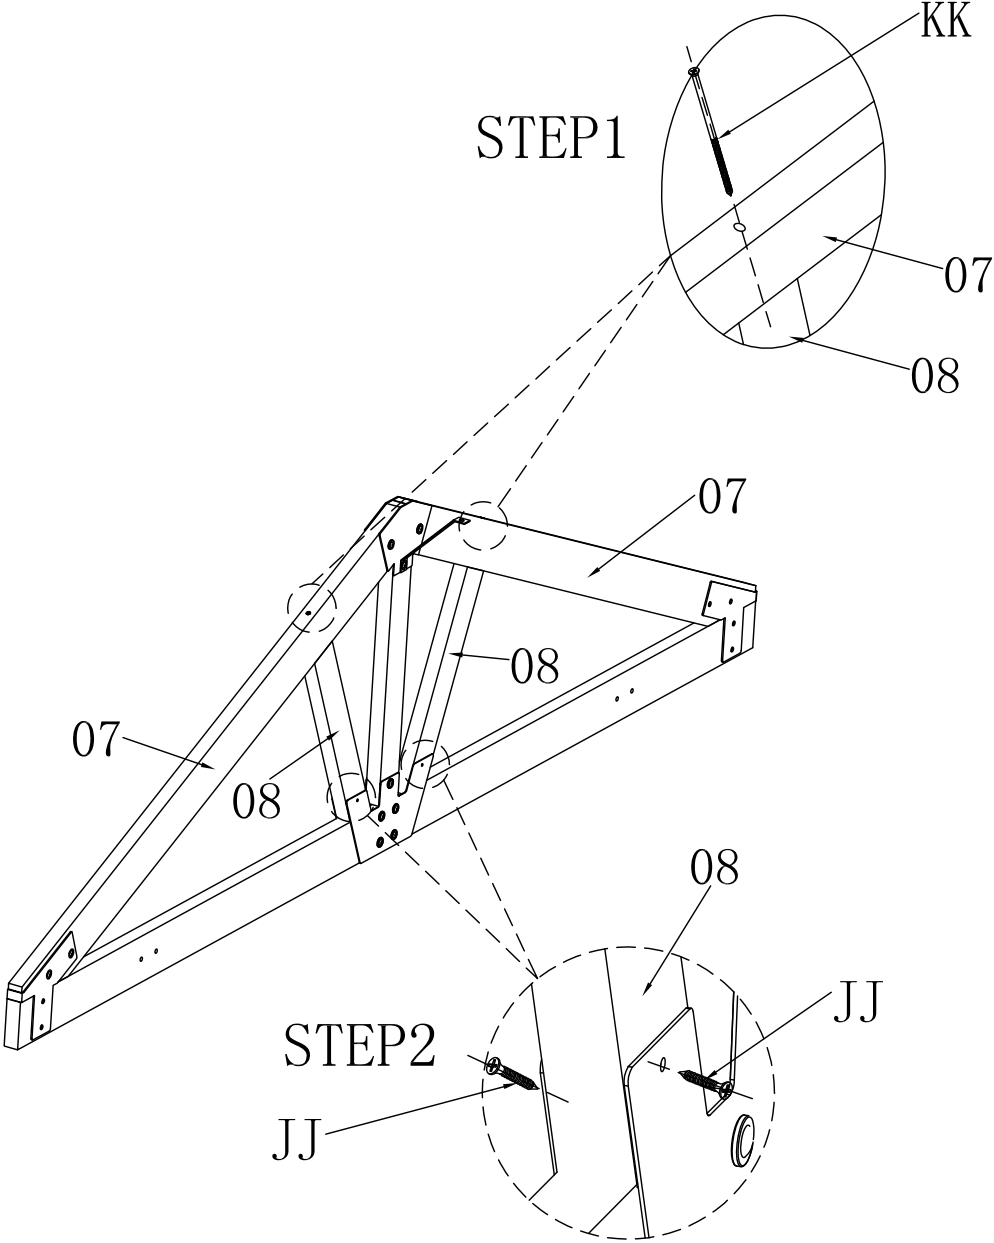


⑧ 4X



ⓐ 8X


M5X20




ⓑ 4X

M5X140


STEP. 8

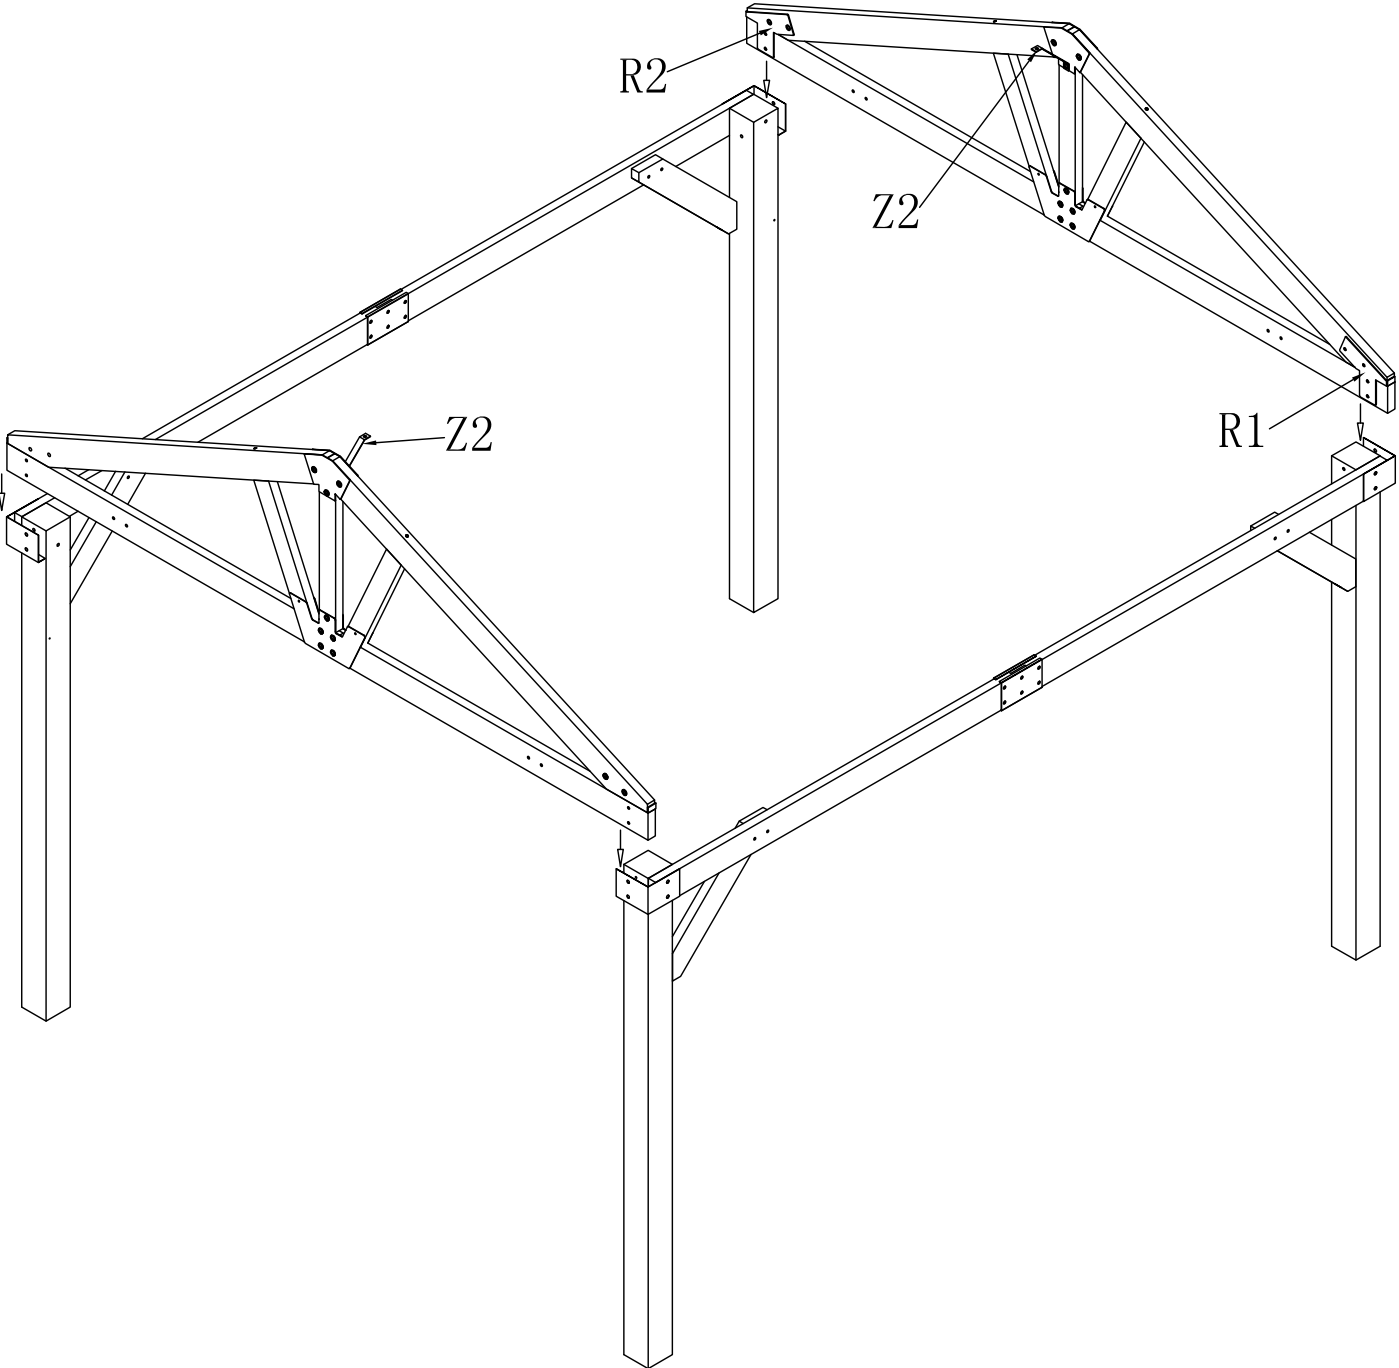



STEP. 9

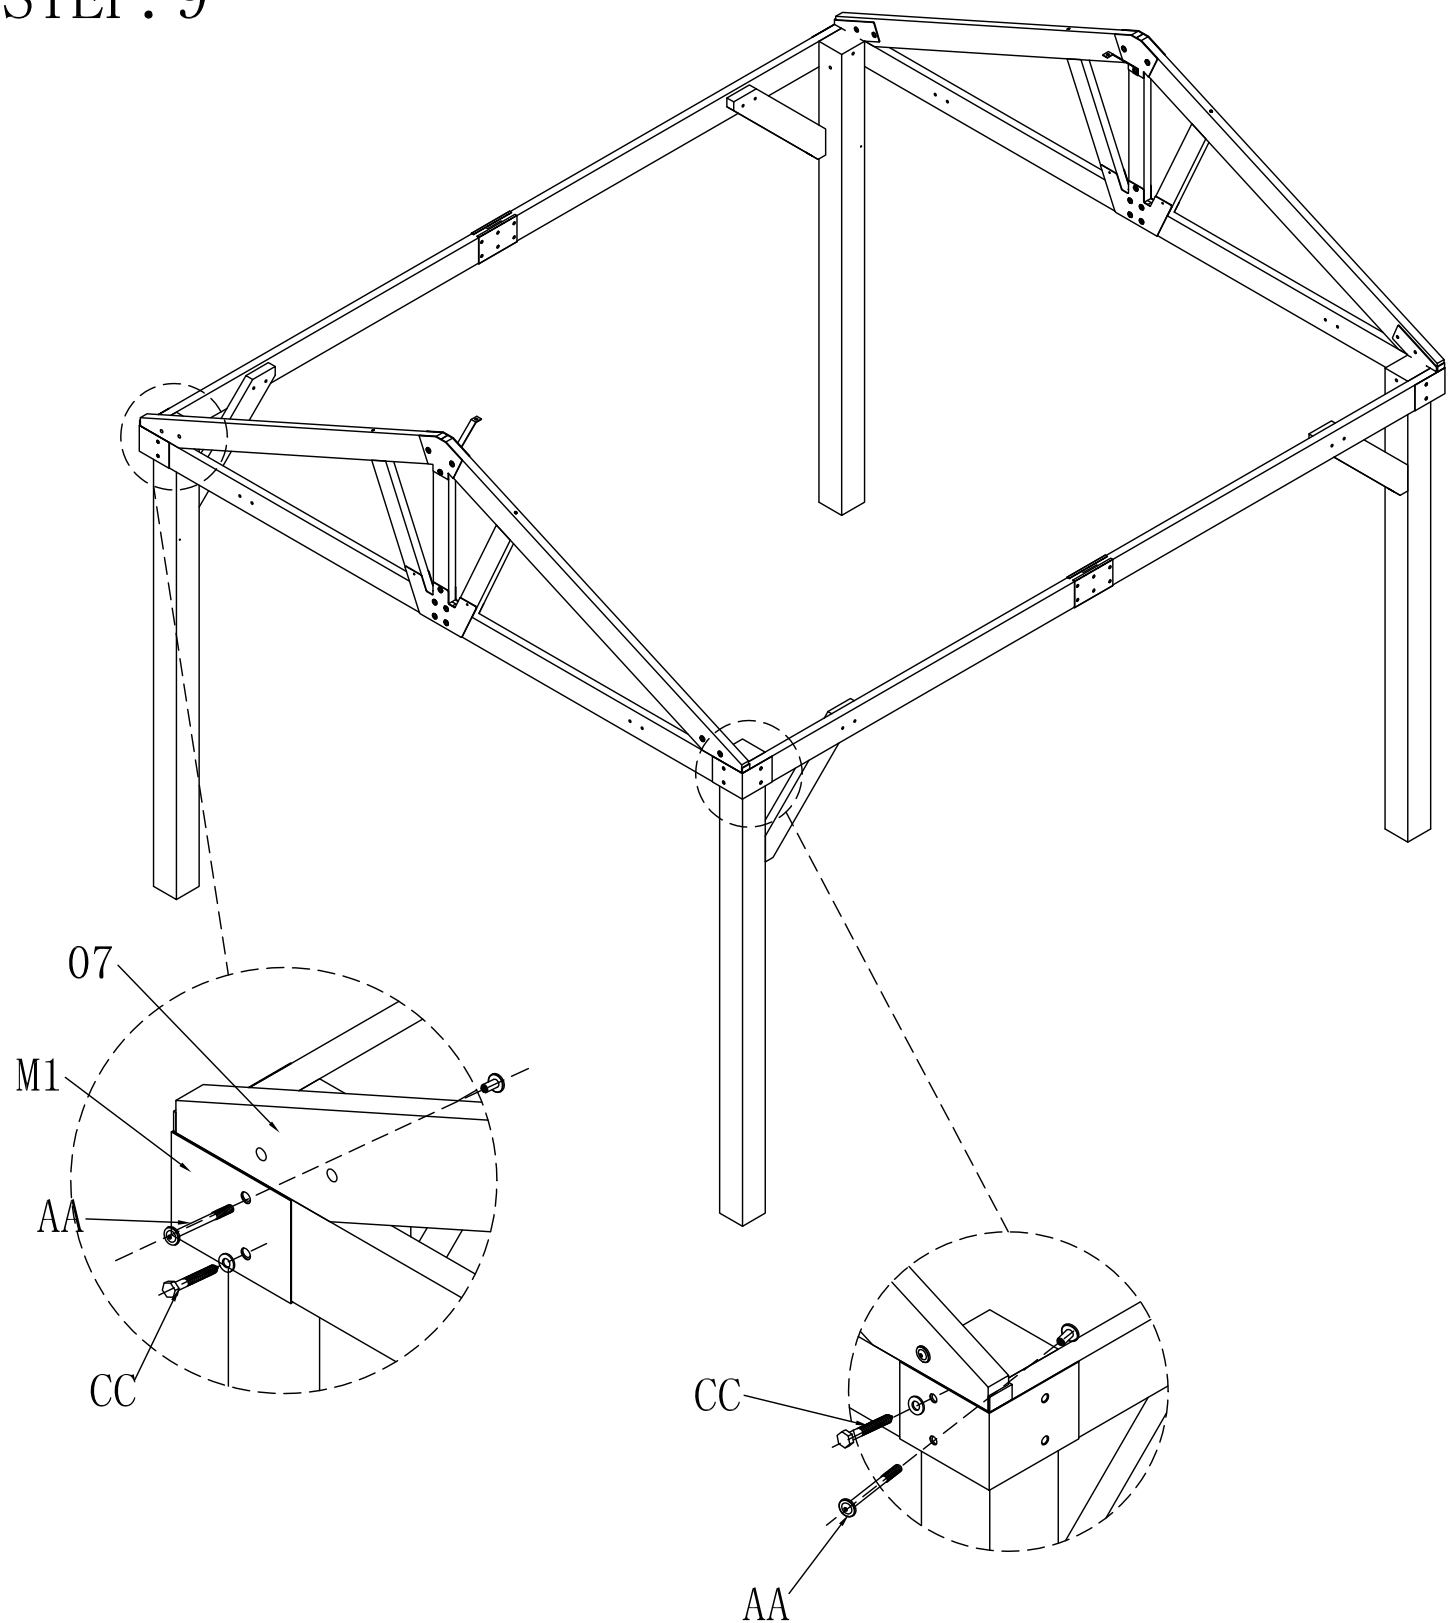


 M8X145 (AA) 4X

 M10*80 (CC) 4X

STEP. 10

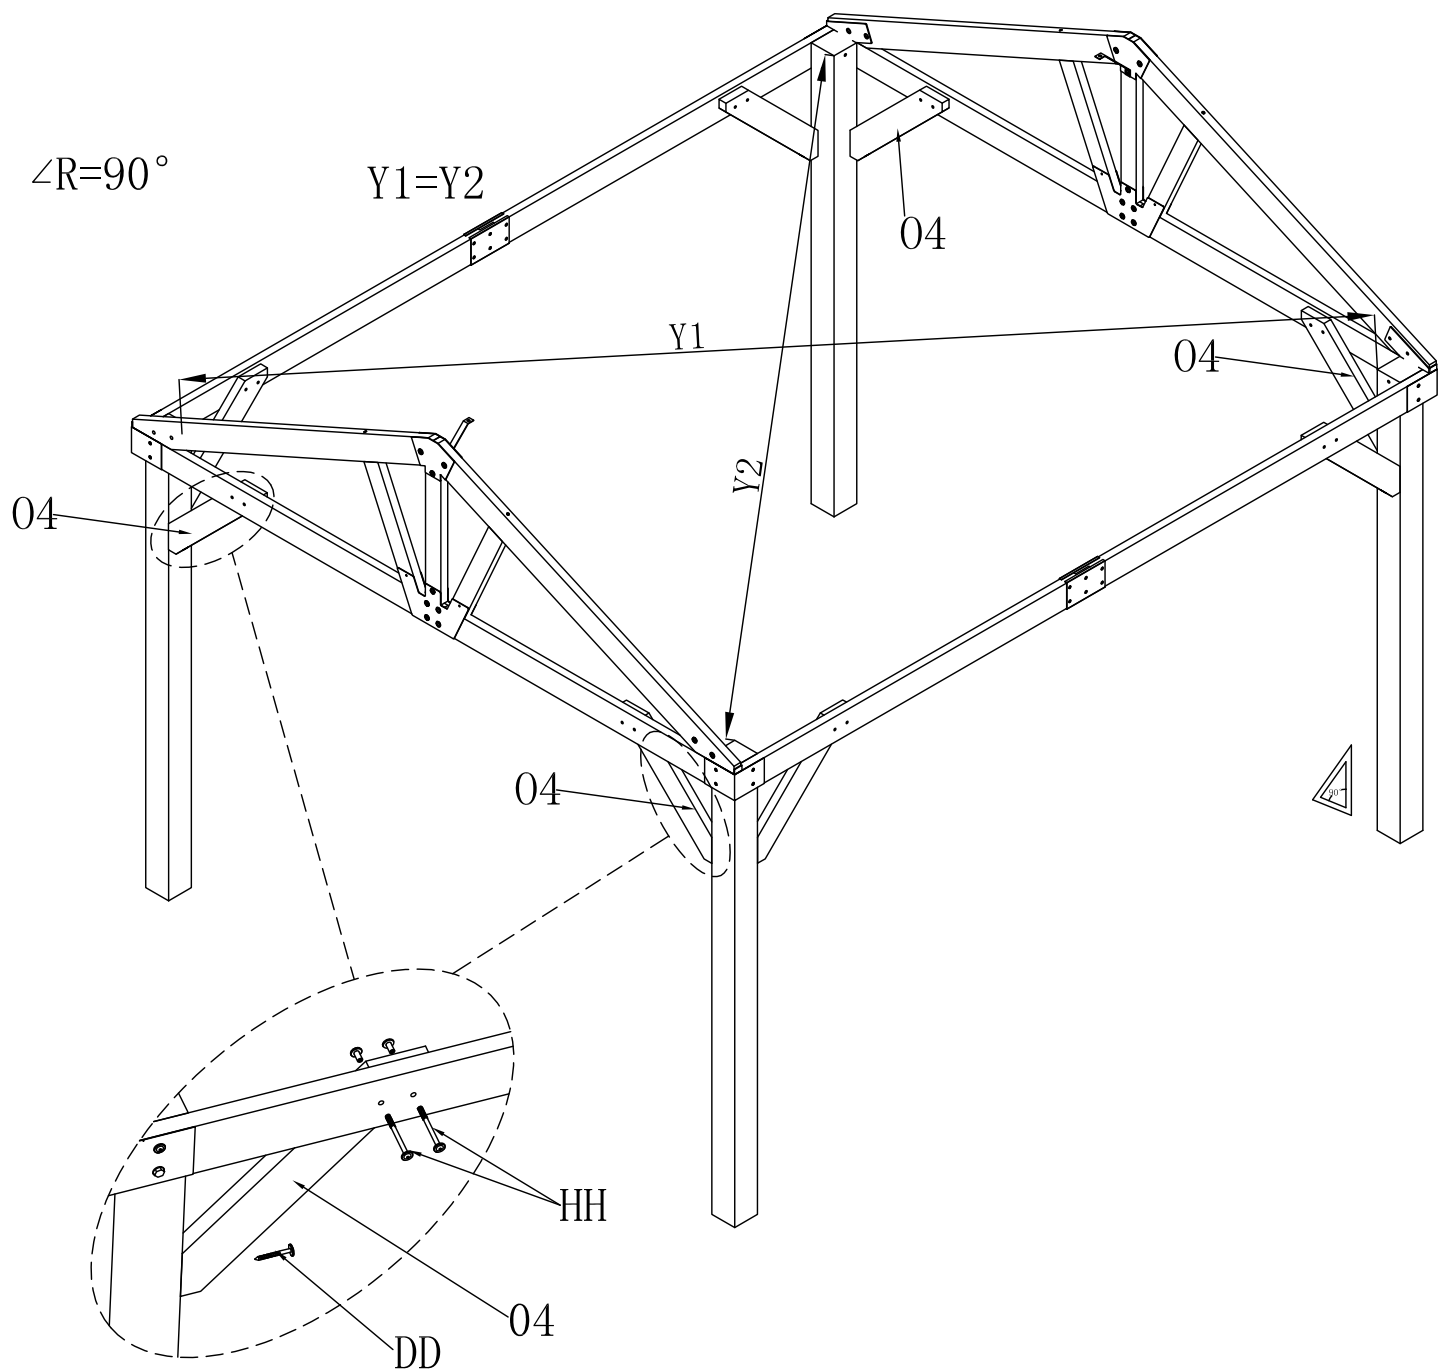

④ 4X



M6*70



ⓓ 4X



M8X60

ⓓ 8X


STEP. 11

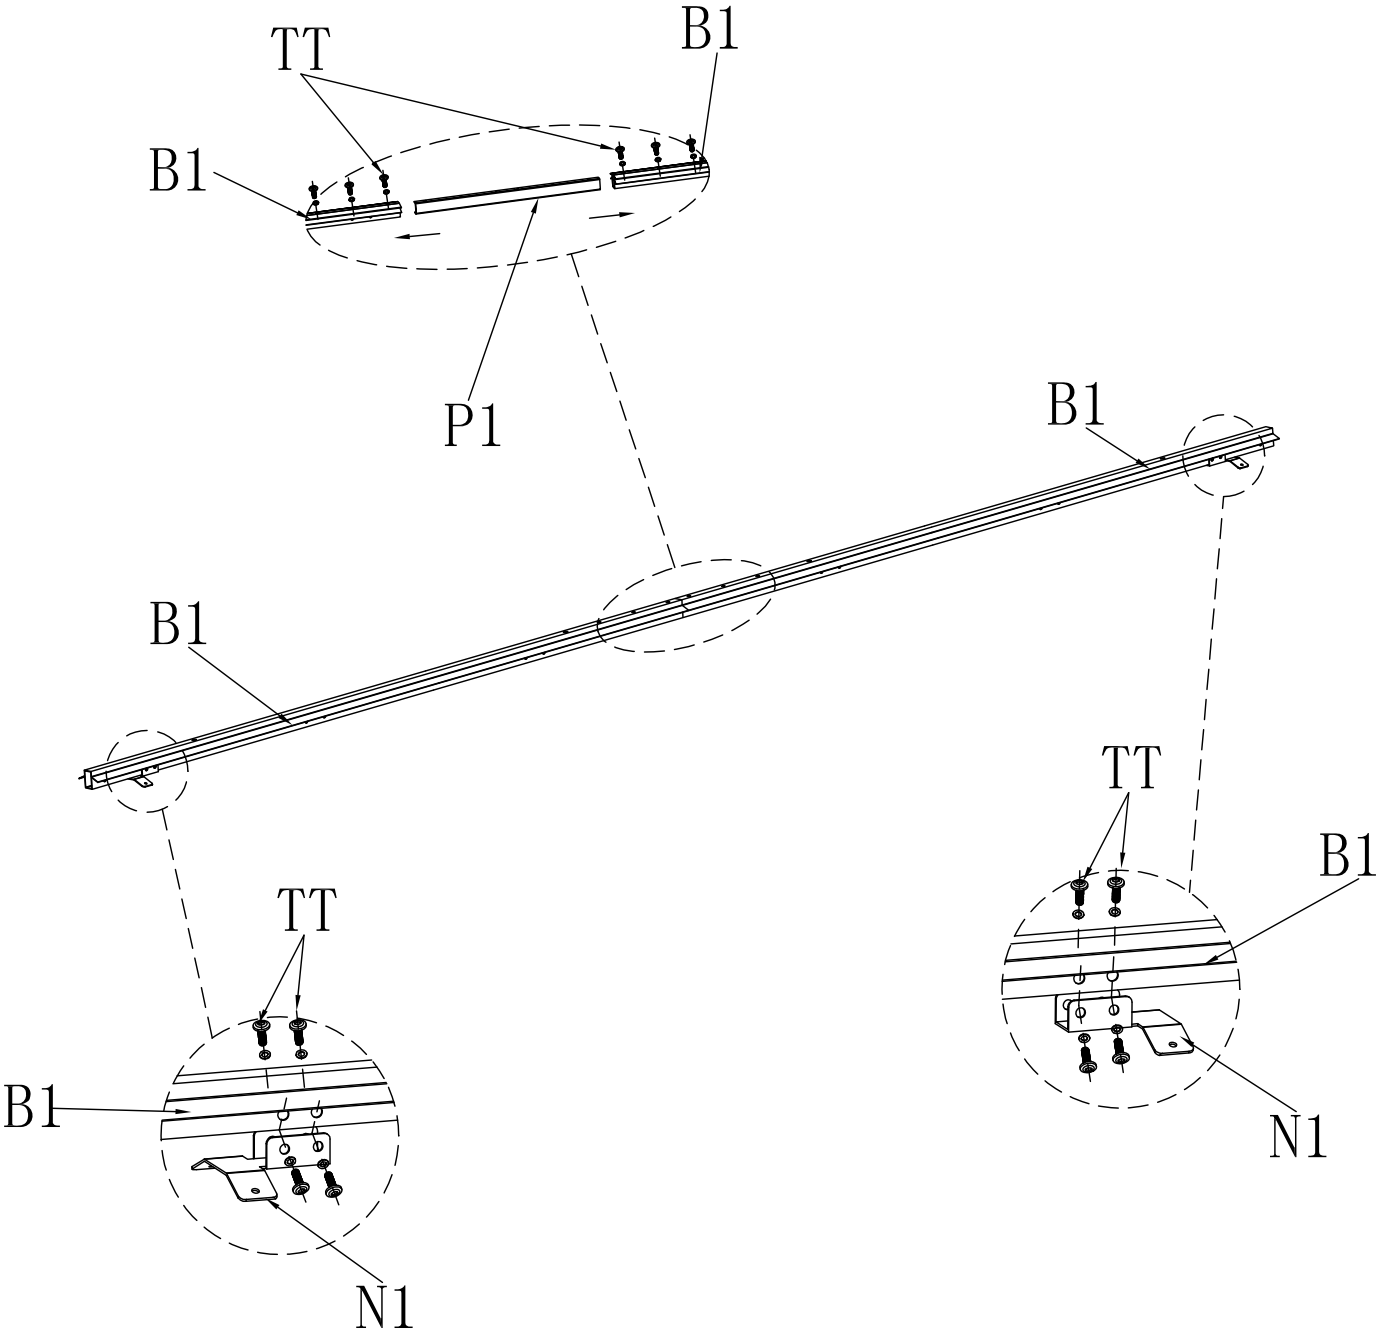

Ⓟ 2X



Ⓟ 1X




Ⓟ 2X



M6X15

Ⓟ 14X

STEP. 12

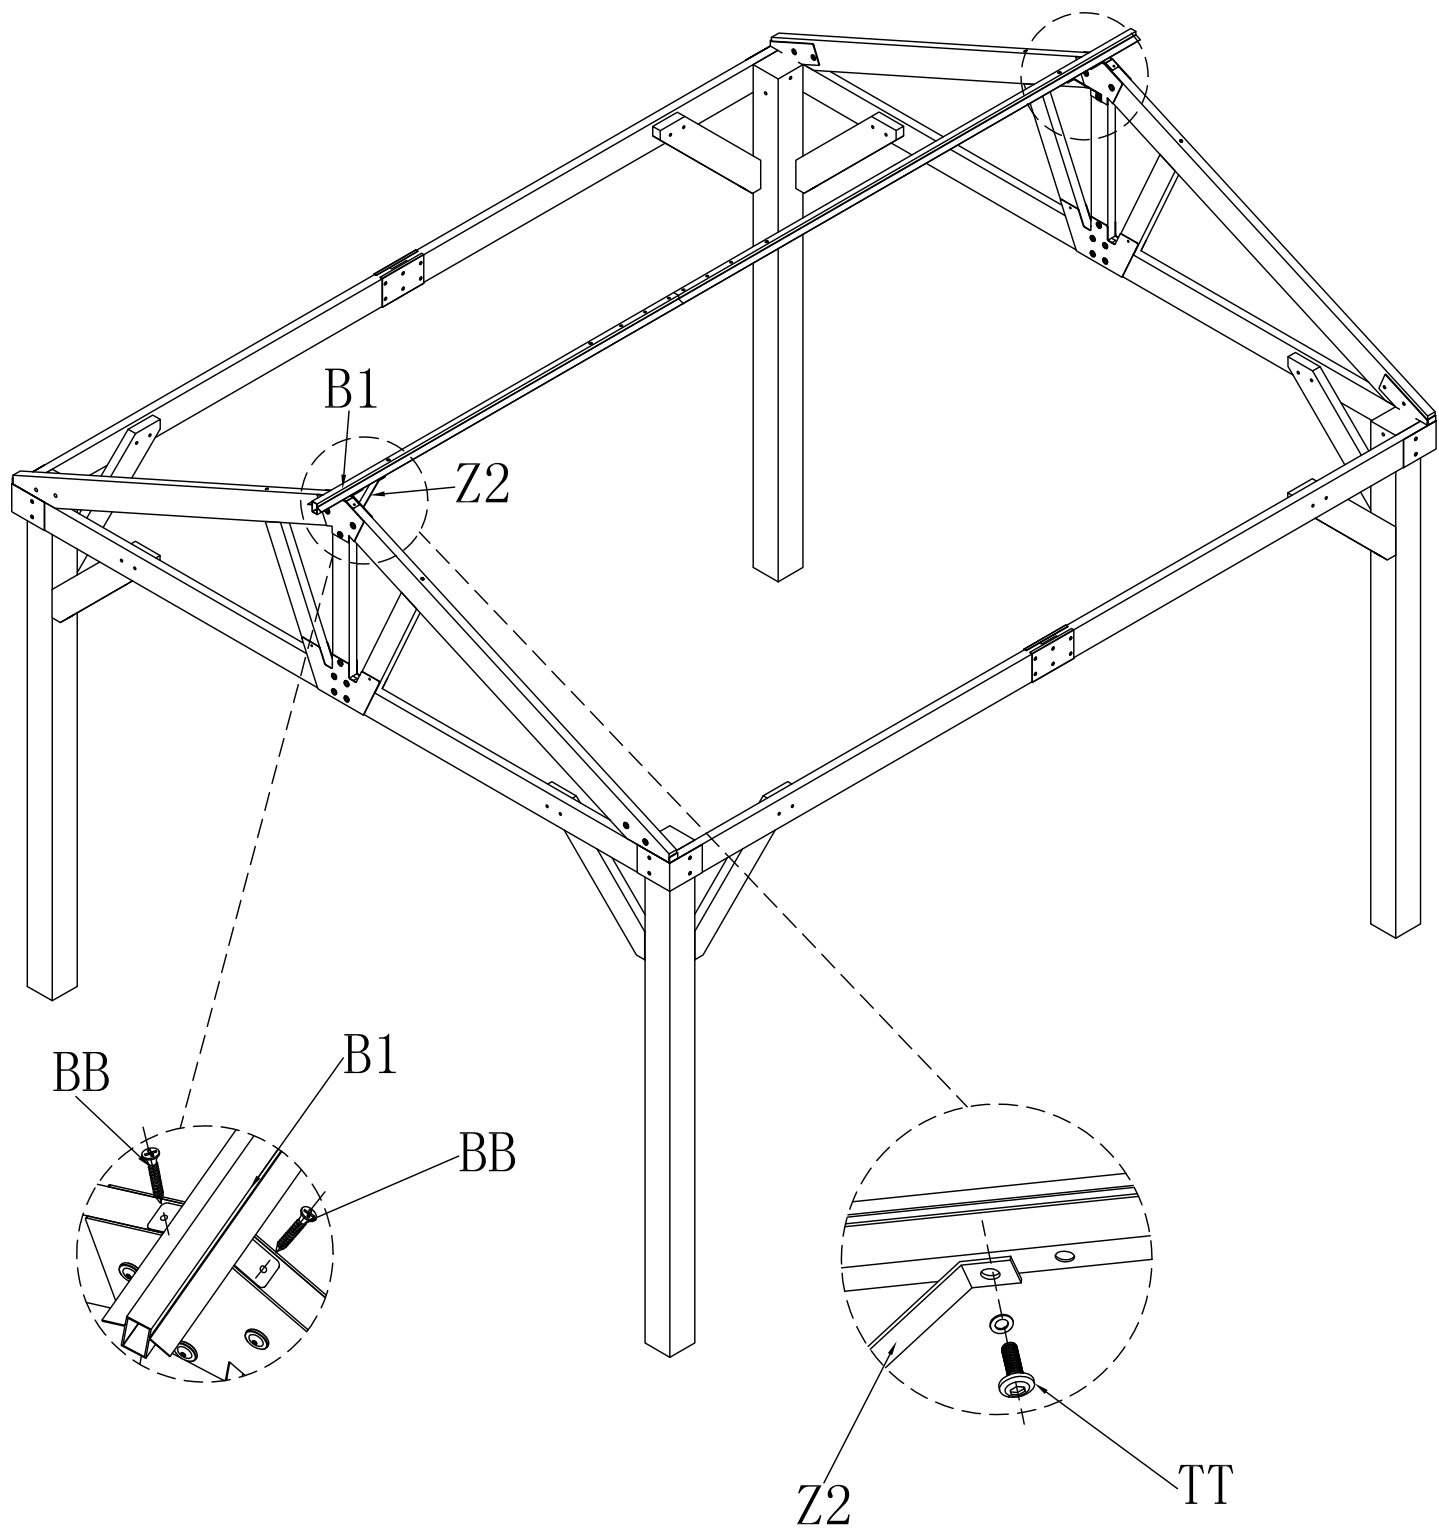




M5X30

Ⓟ 4X


M6X15

Ⓟ 2X

STEP. 13

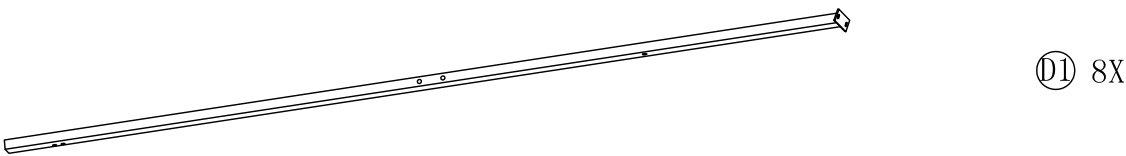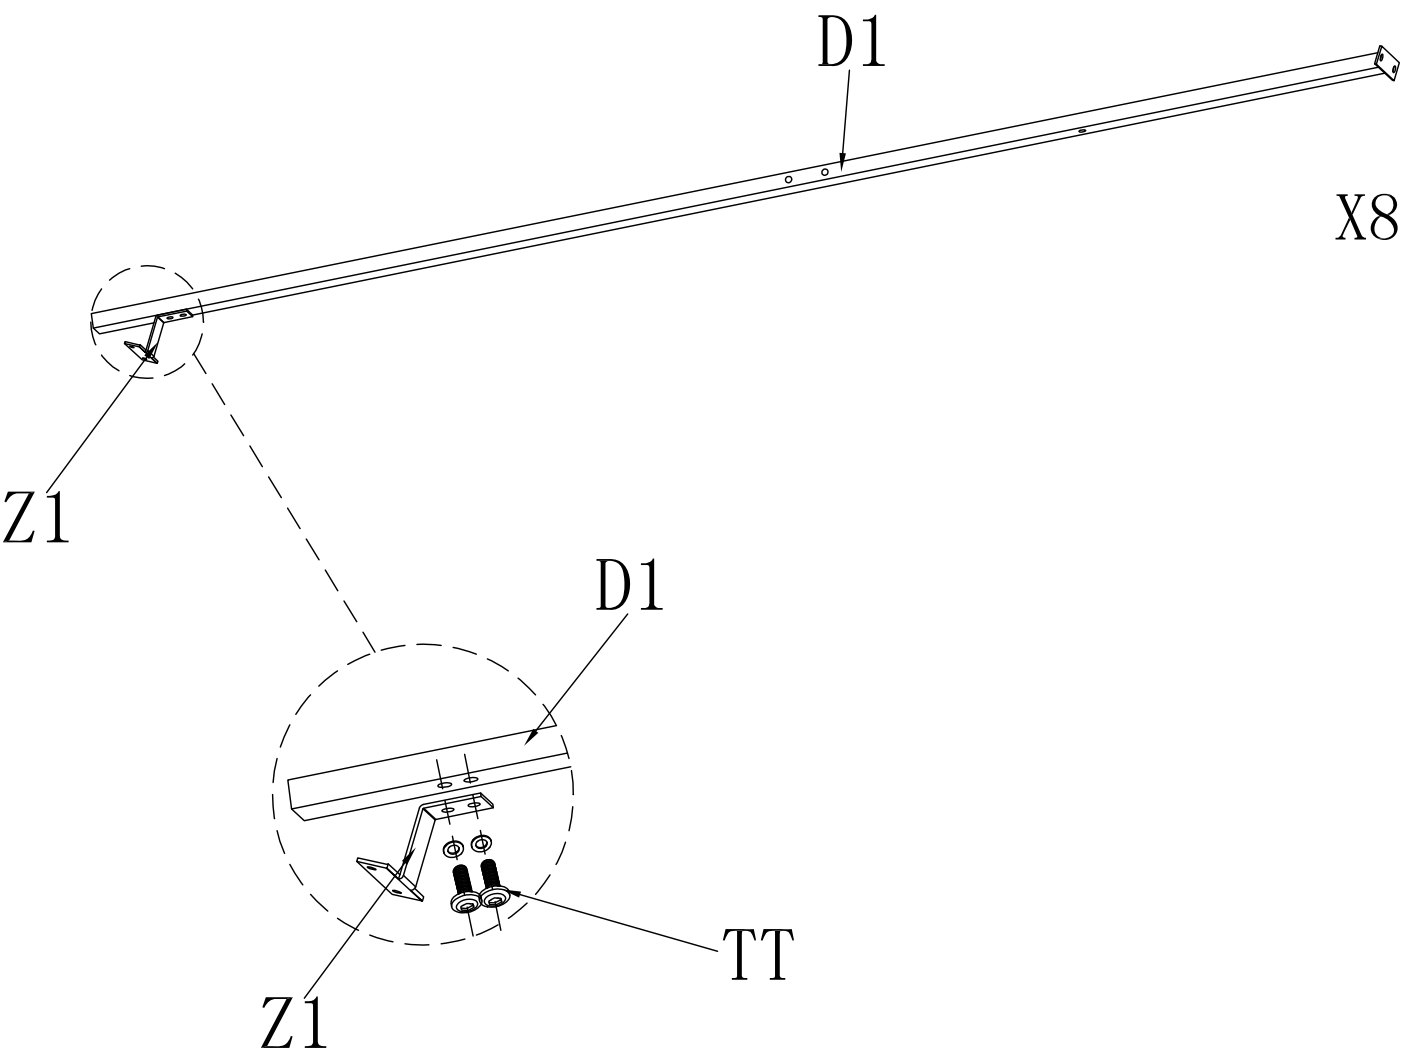



(Z1) 8X



(TT) 16X

M6X15

STEP. 14

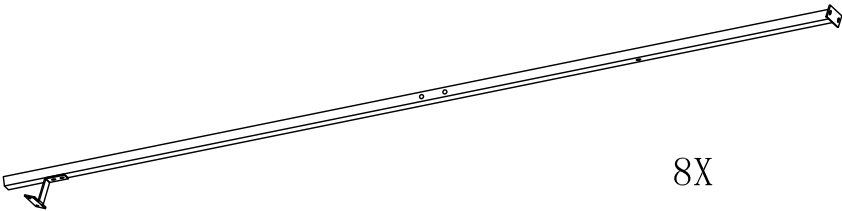
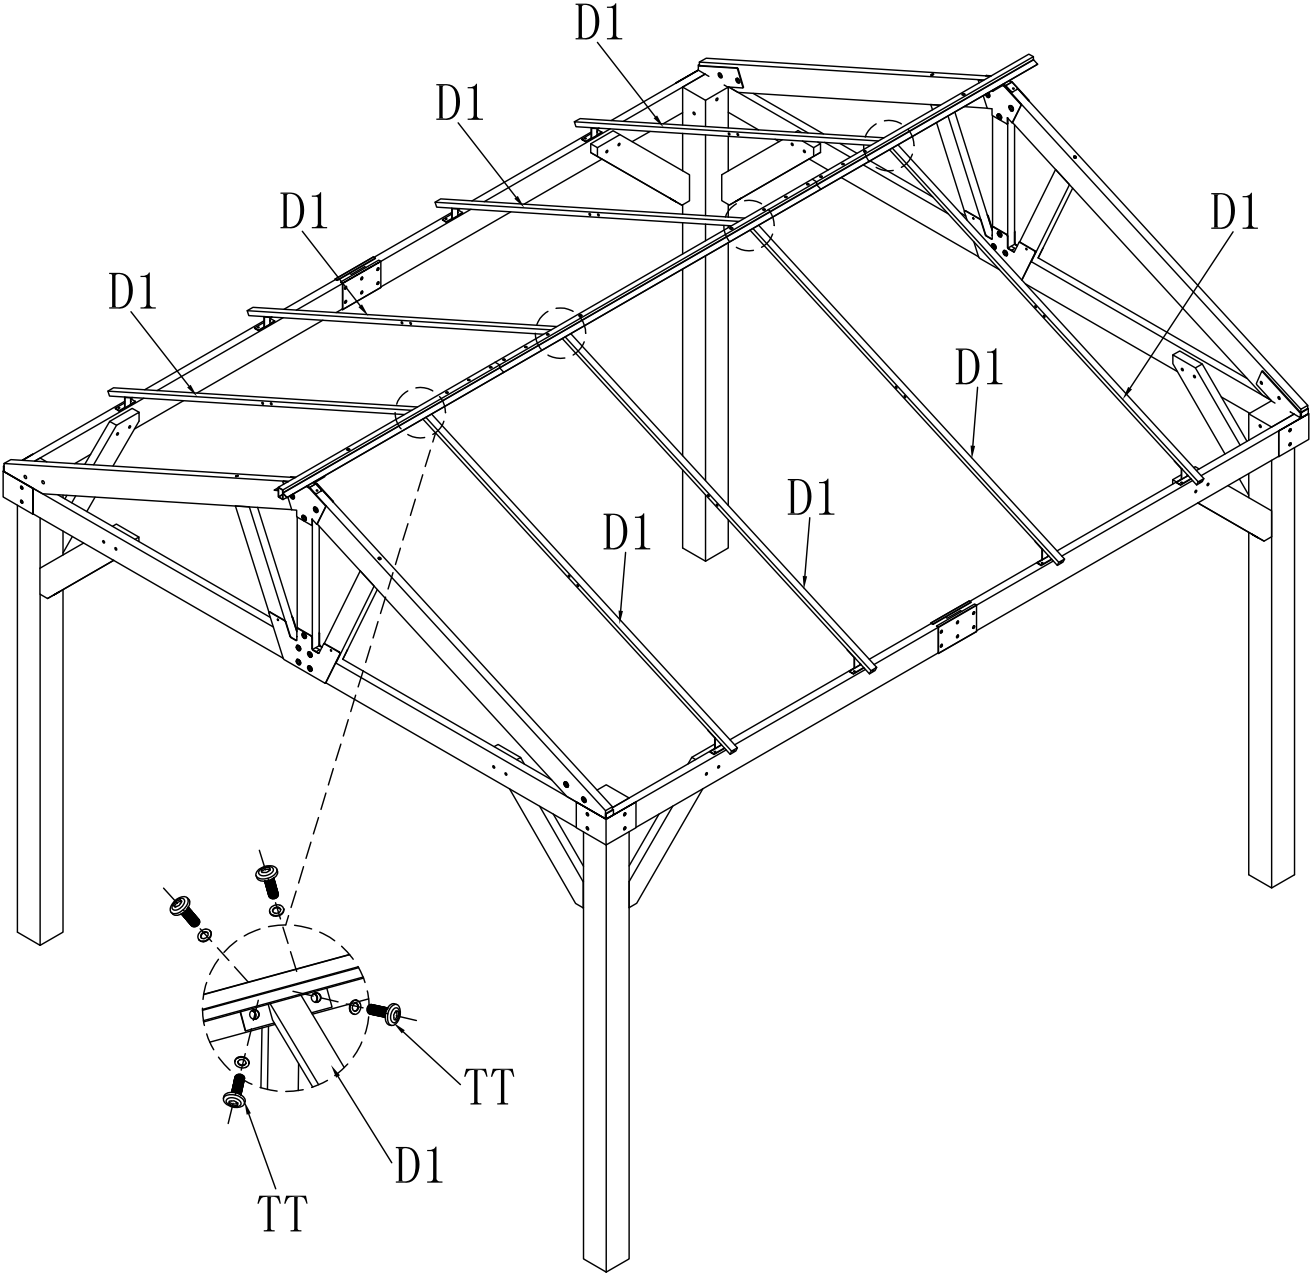


8X



ⓧ 16X


STEP. 15

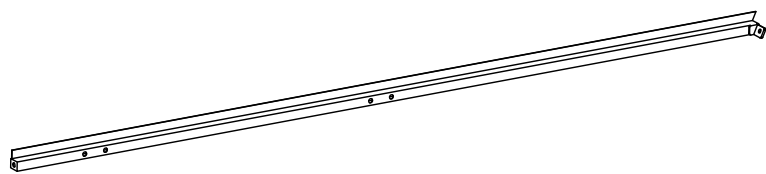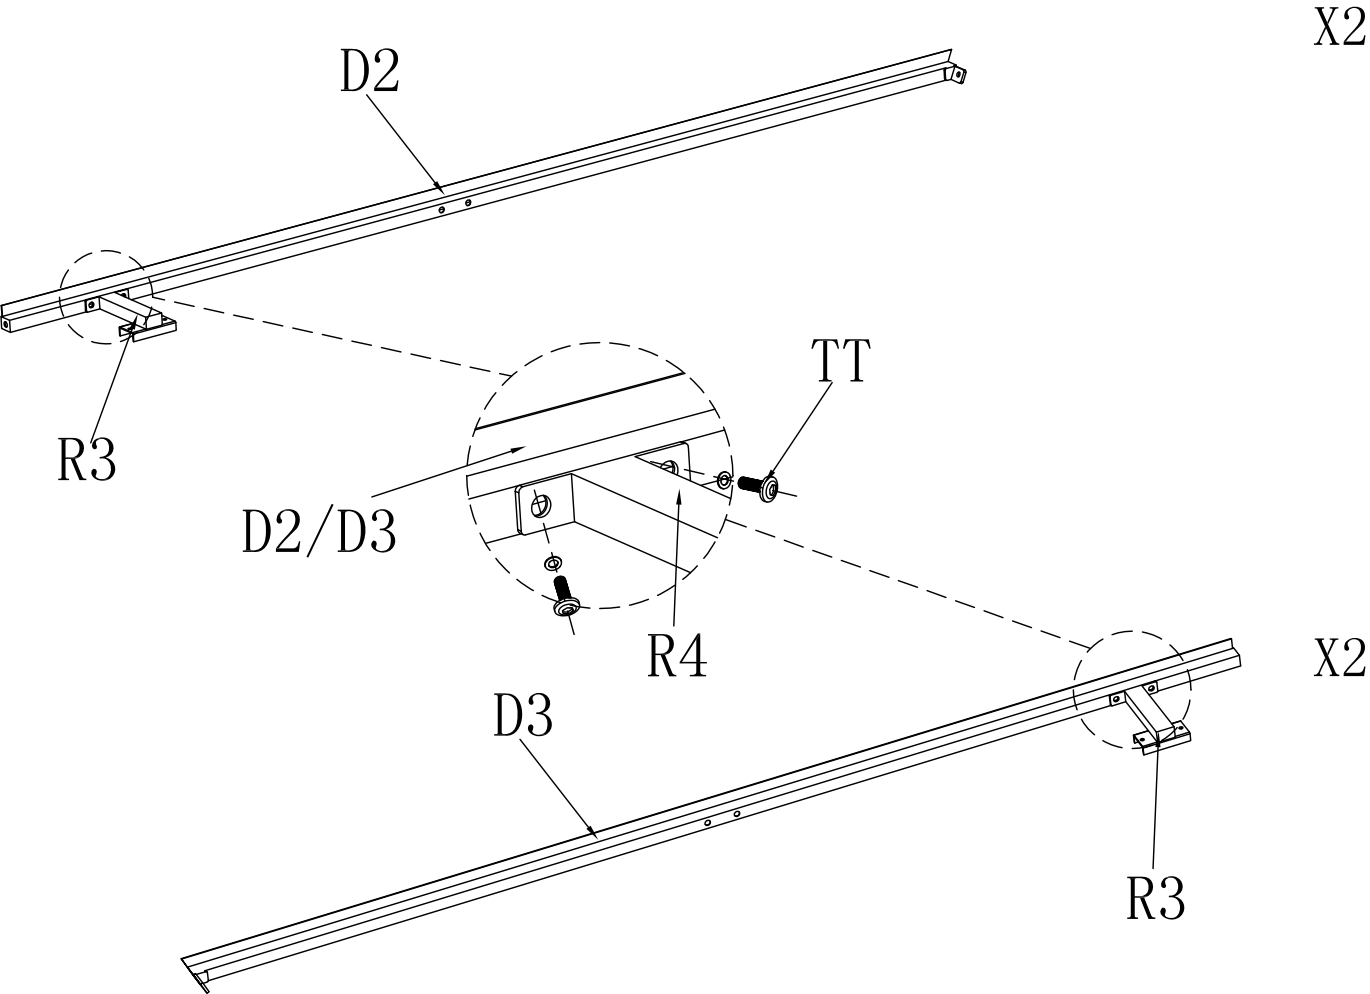


ⓓ2 2X



ⓉⓉ 8X


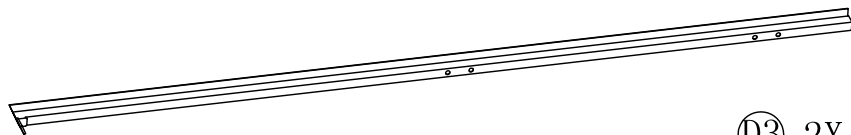


ⓓ3 2X




Ⓡ3 4X

STEP. 16

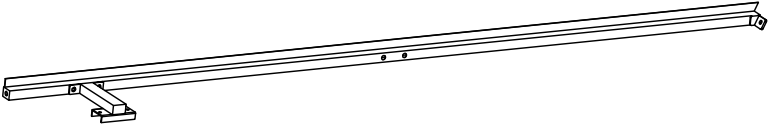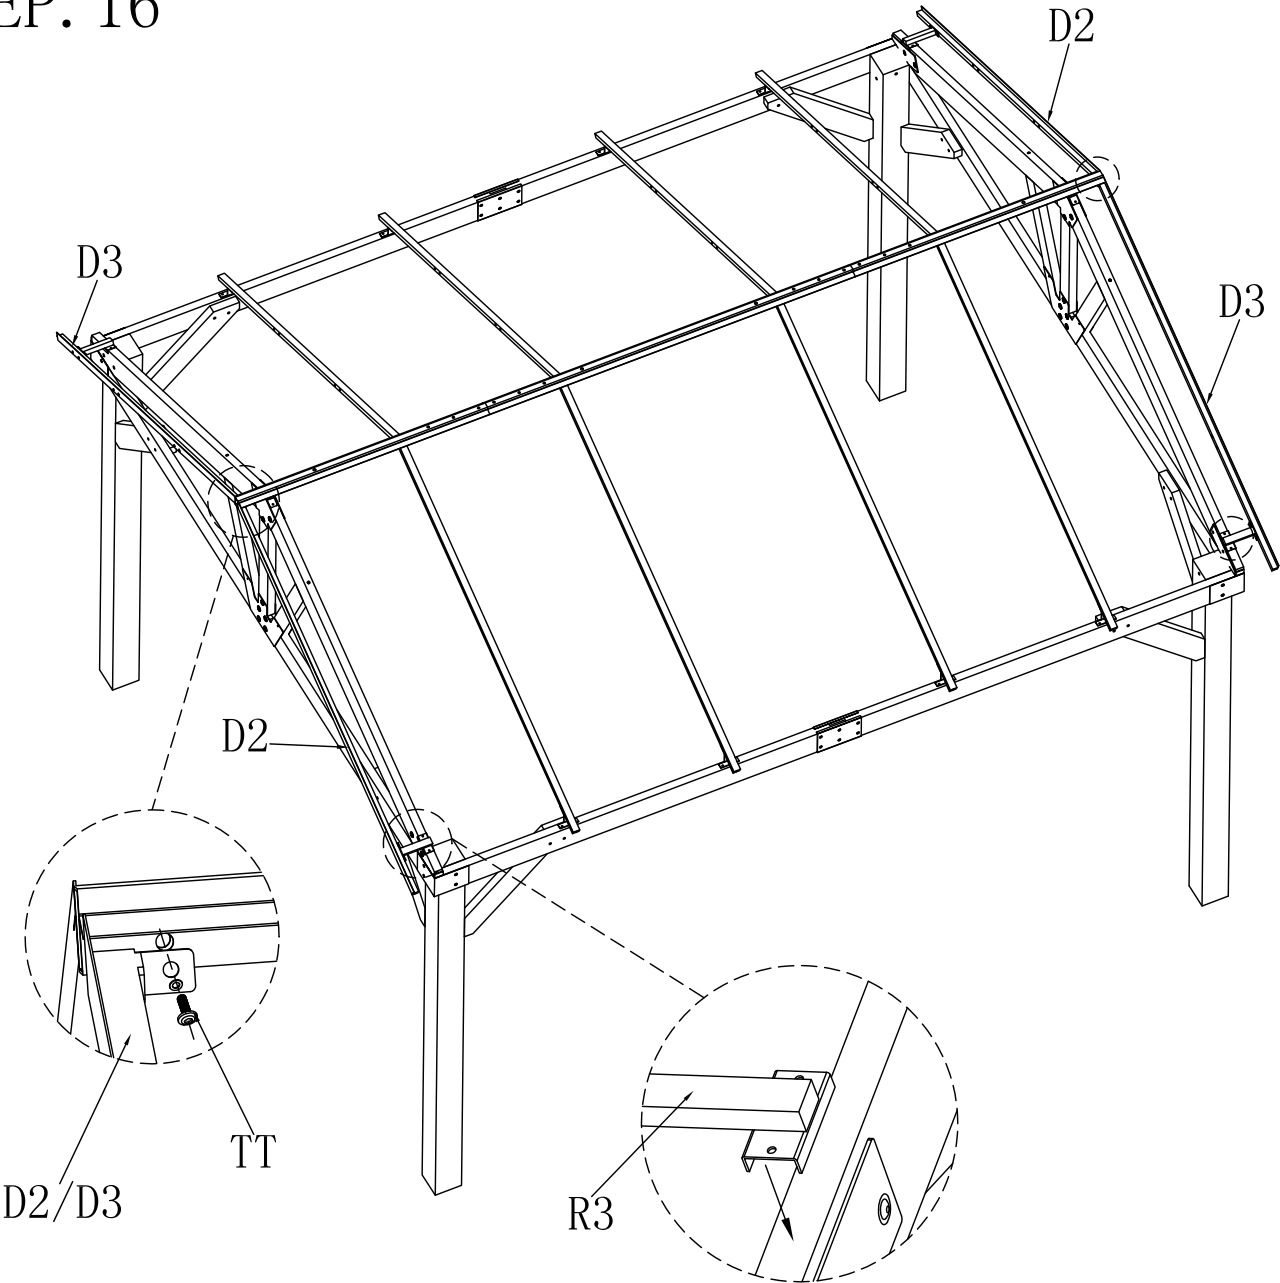

2X

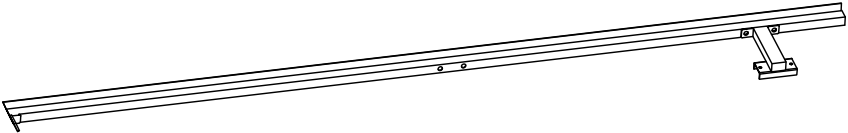

2X





M6X15





TT 4X

STEP. 17



K28 and K29 Note the direction of the arrow.

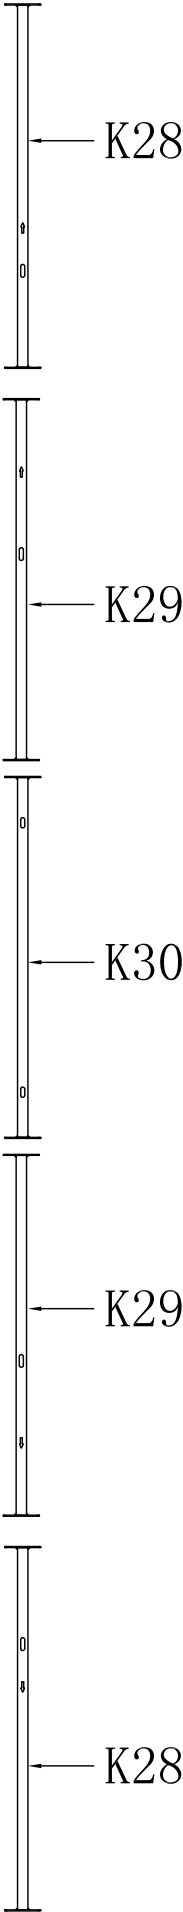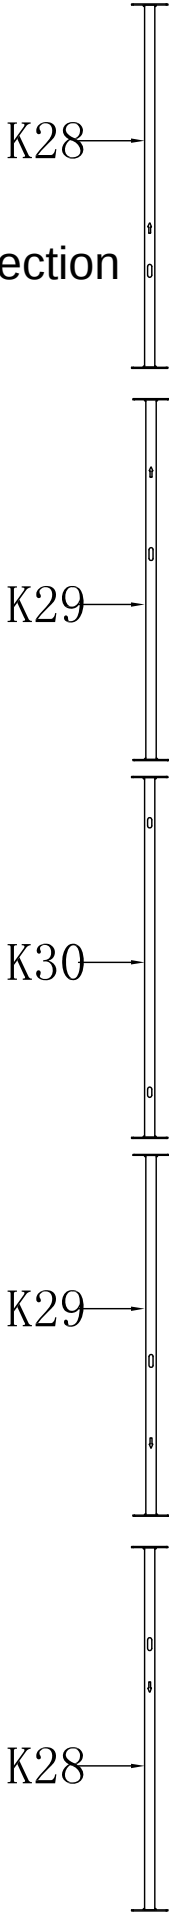

STEP. 18

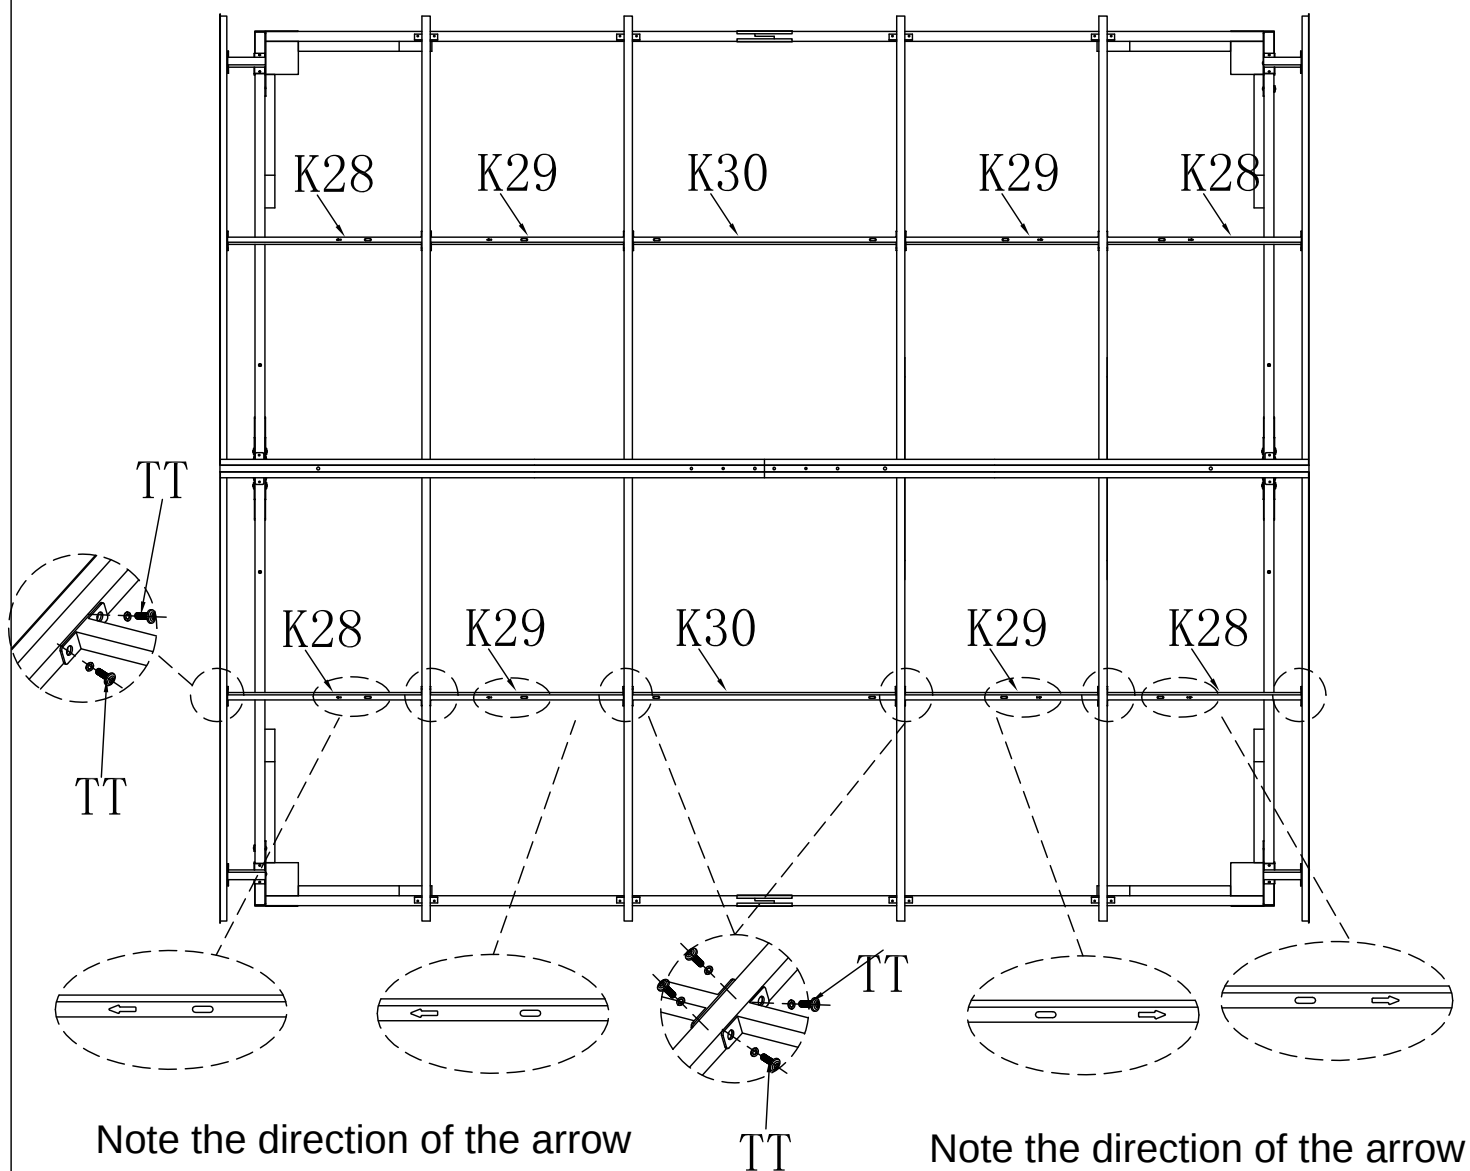

STEP. 19

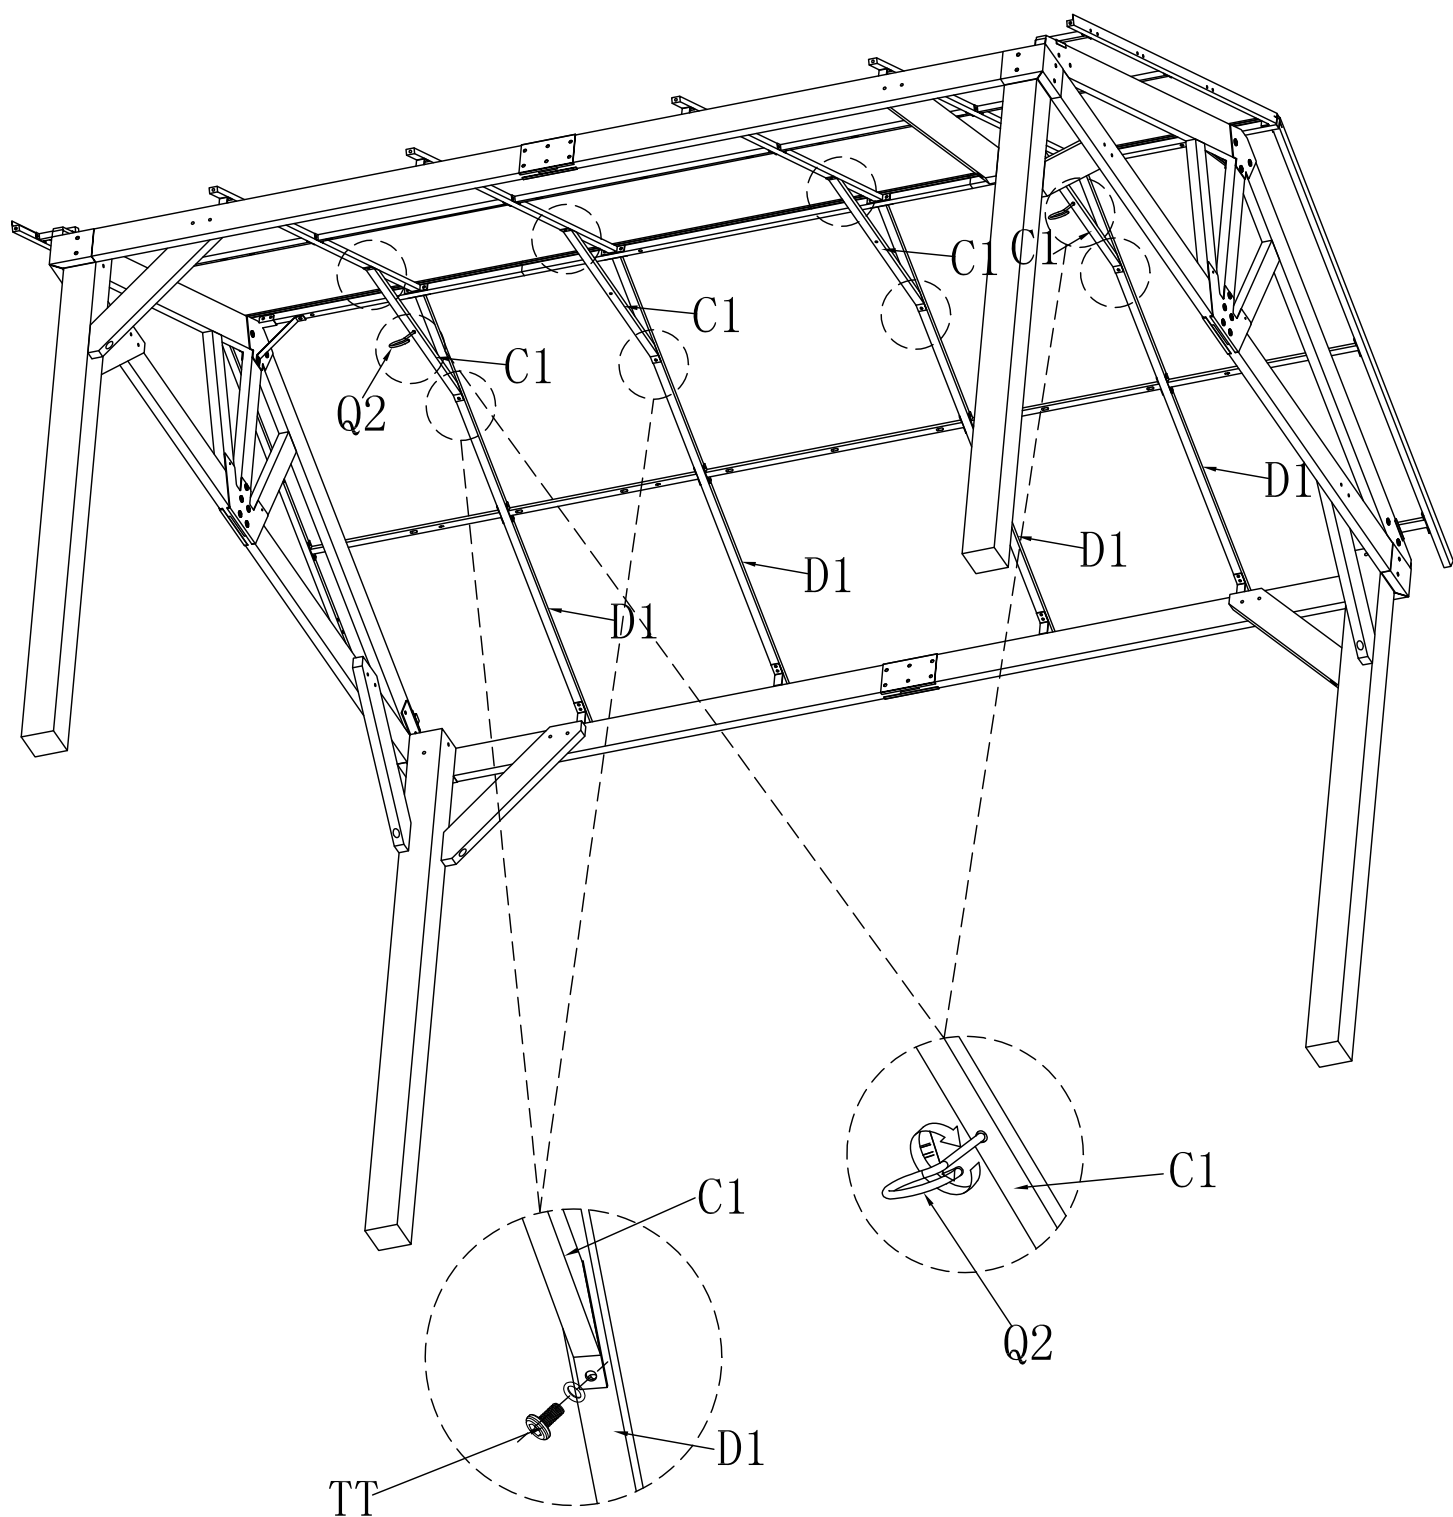

Ⓒ1 4X





M6X15

Ⓙ 8X




Ⓚ2 2X

STEP. 20

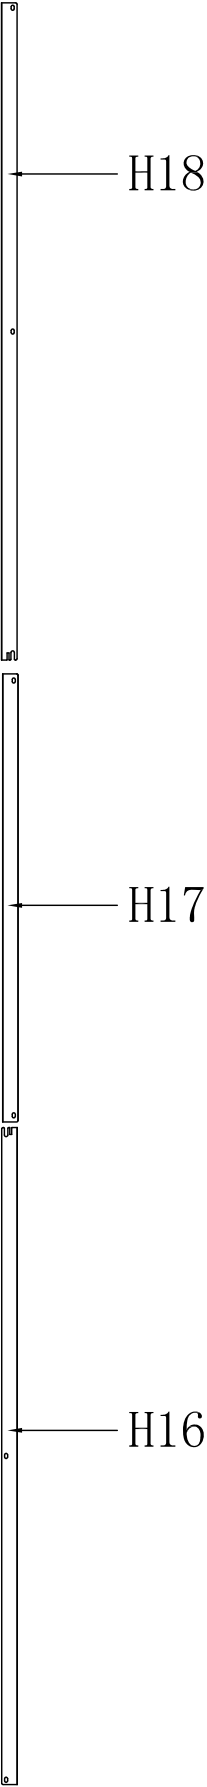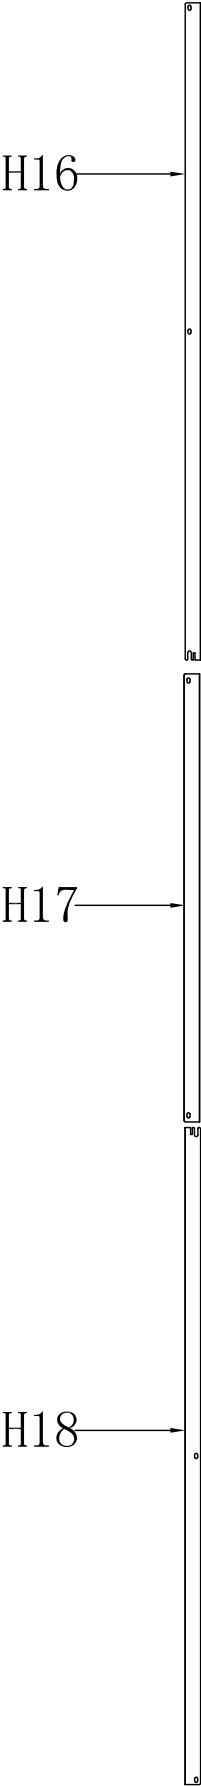


STEP. 21

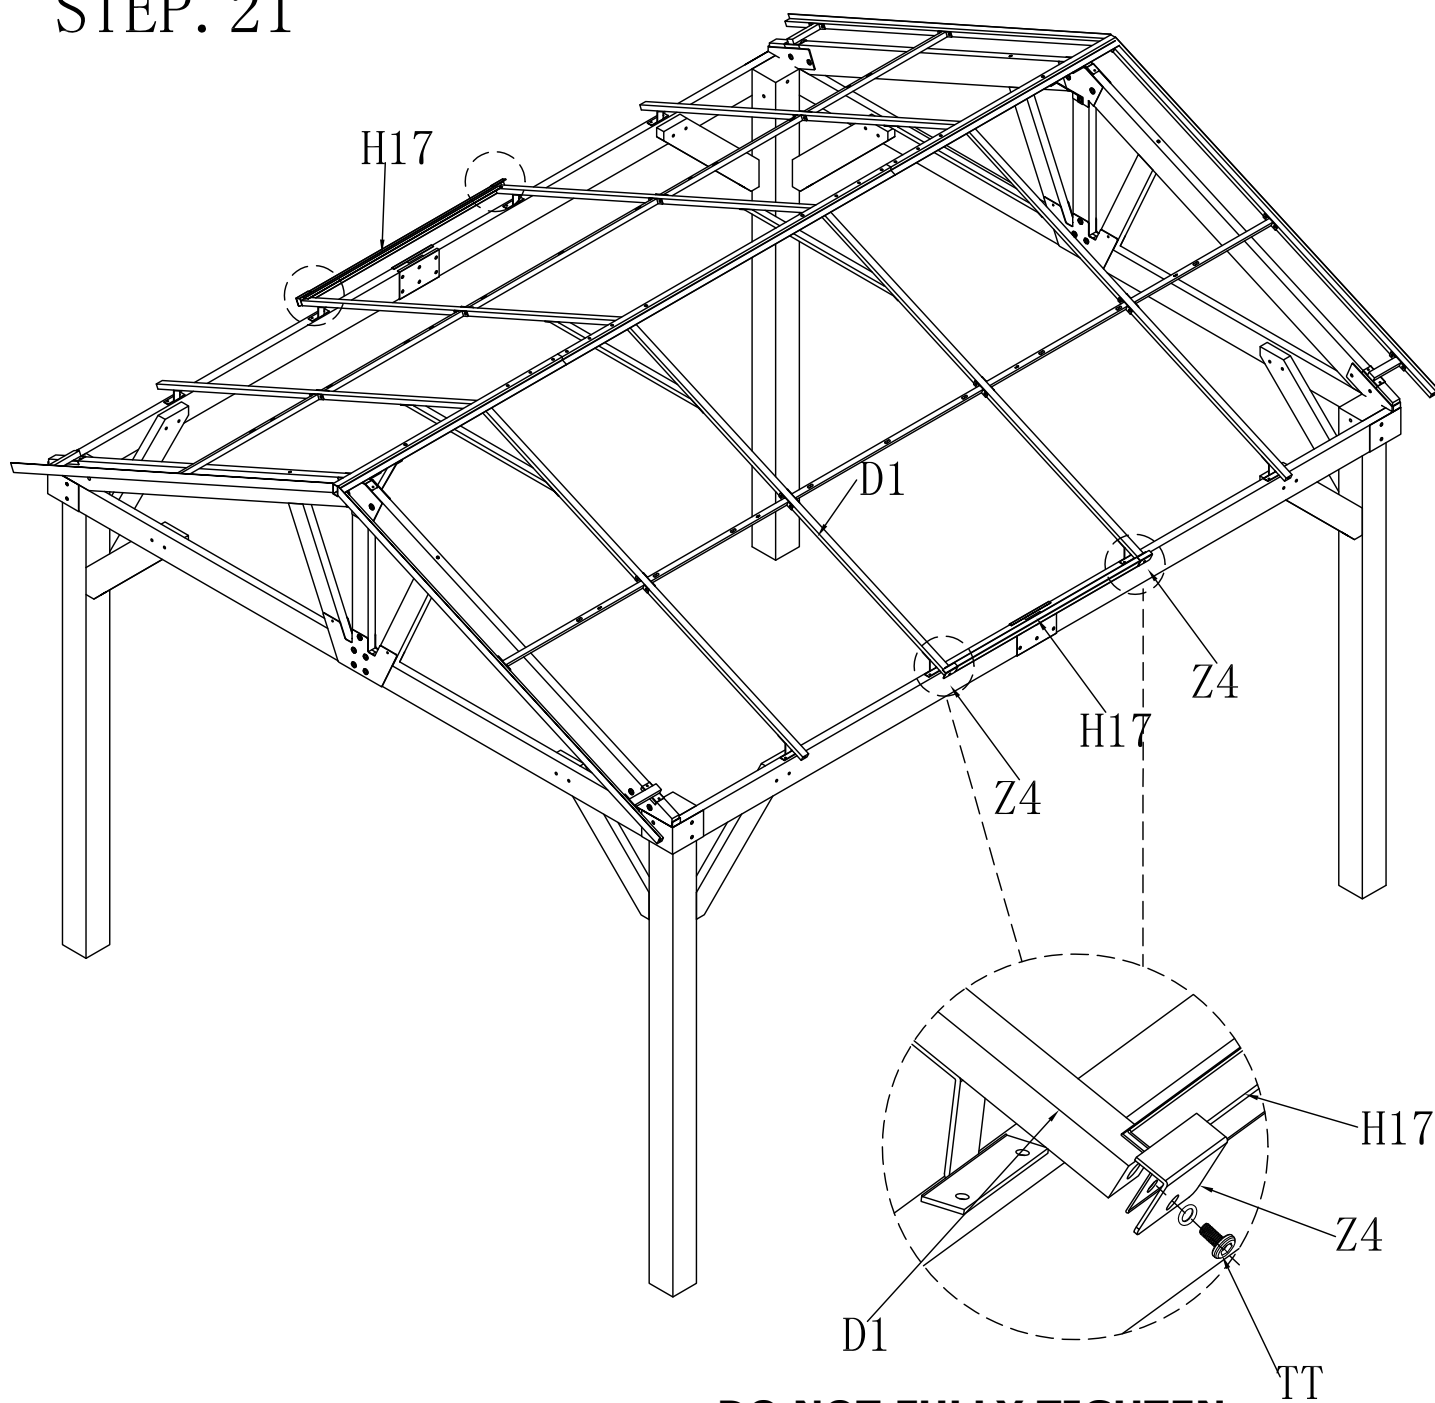

DO NOT FULLY TIGHTEN.



(H17) 2X




(Z4) 4X




(TT) 4X

M6X15

STEP. 22

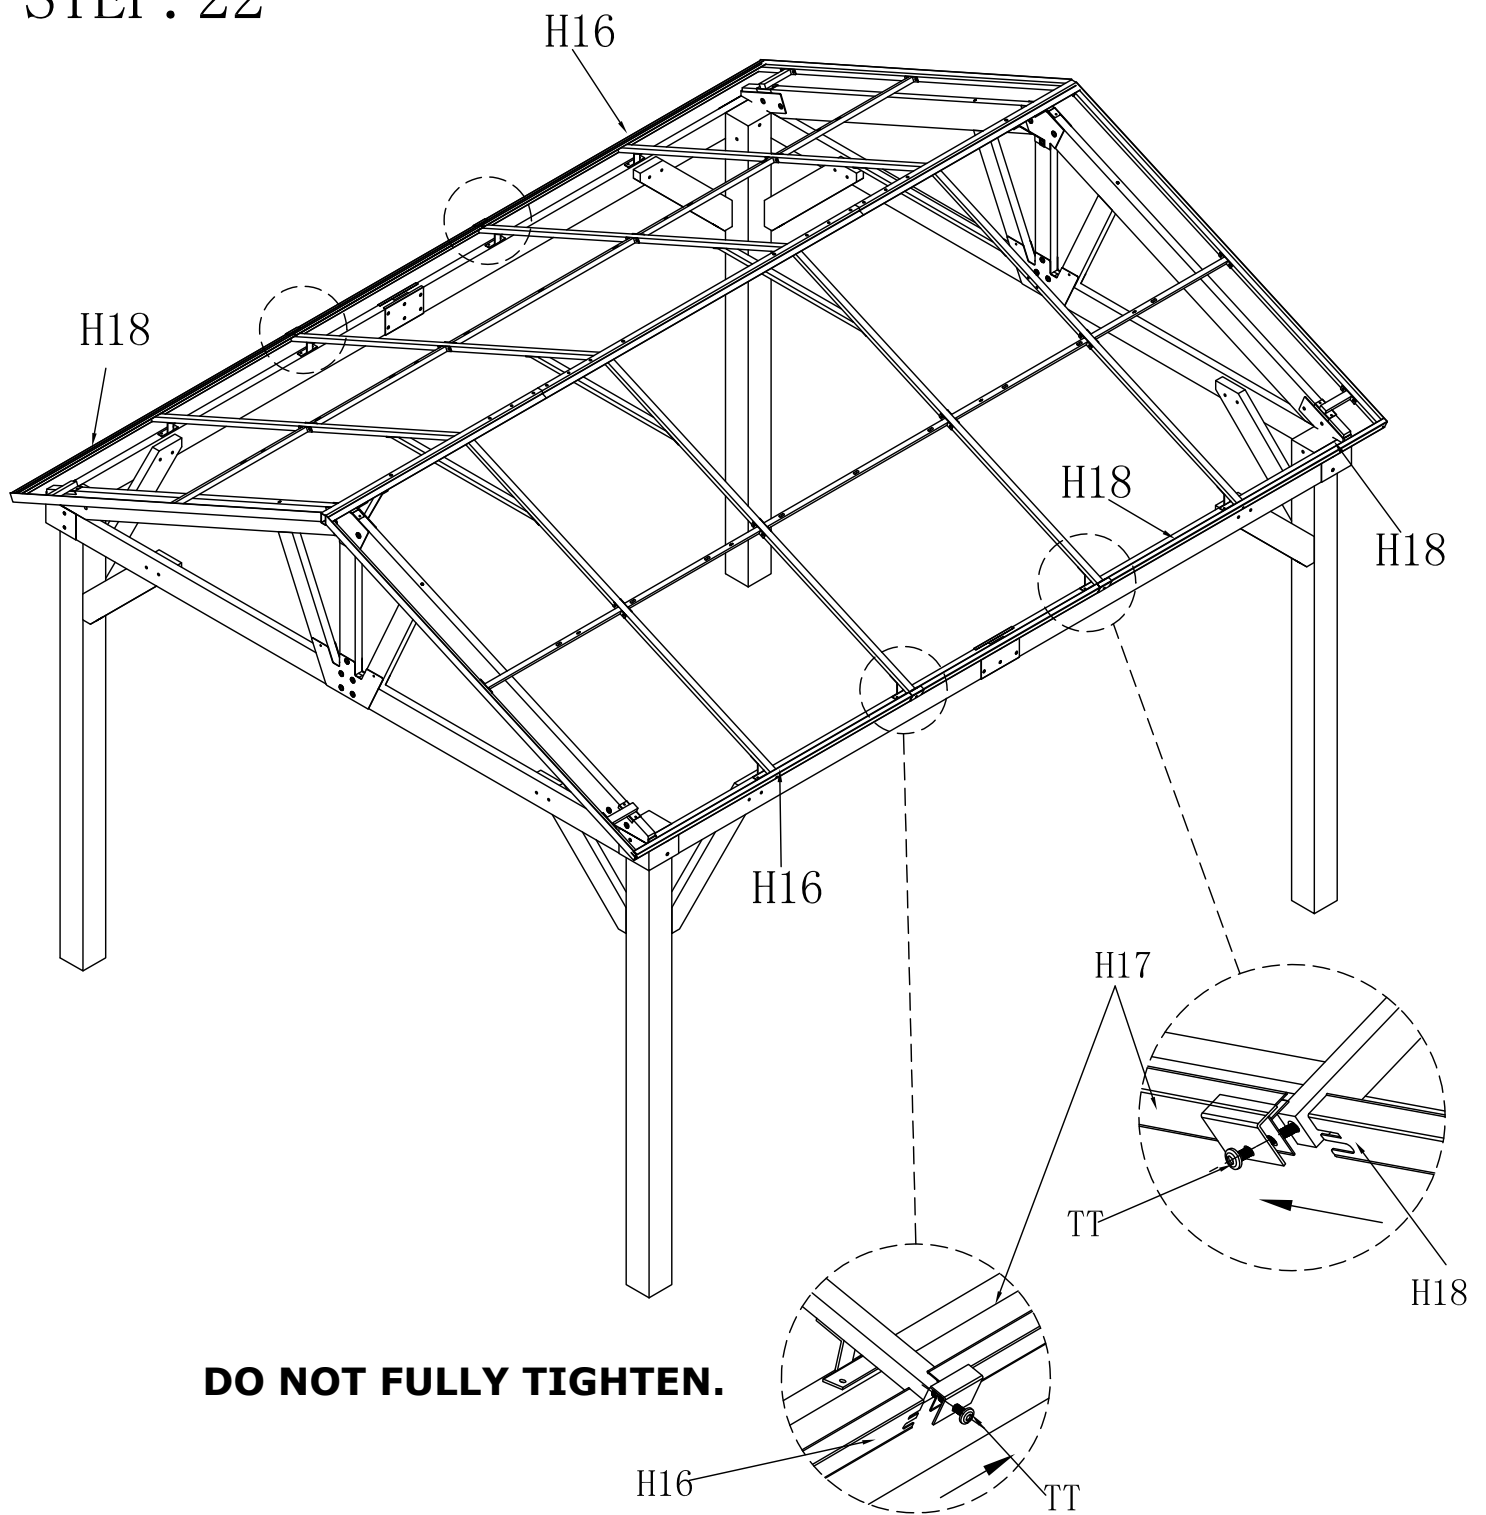


(H16) 2X



(H18) 2X


STEP. 23

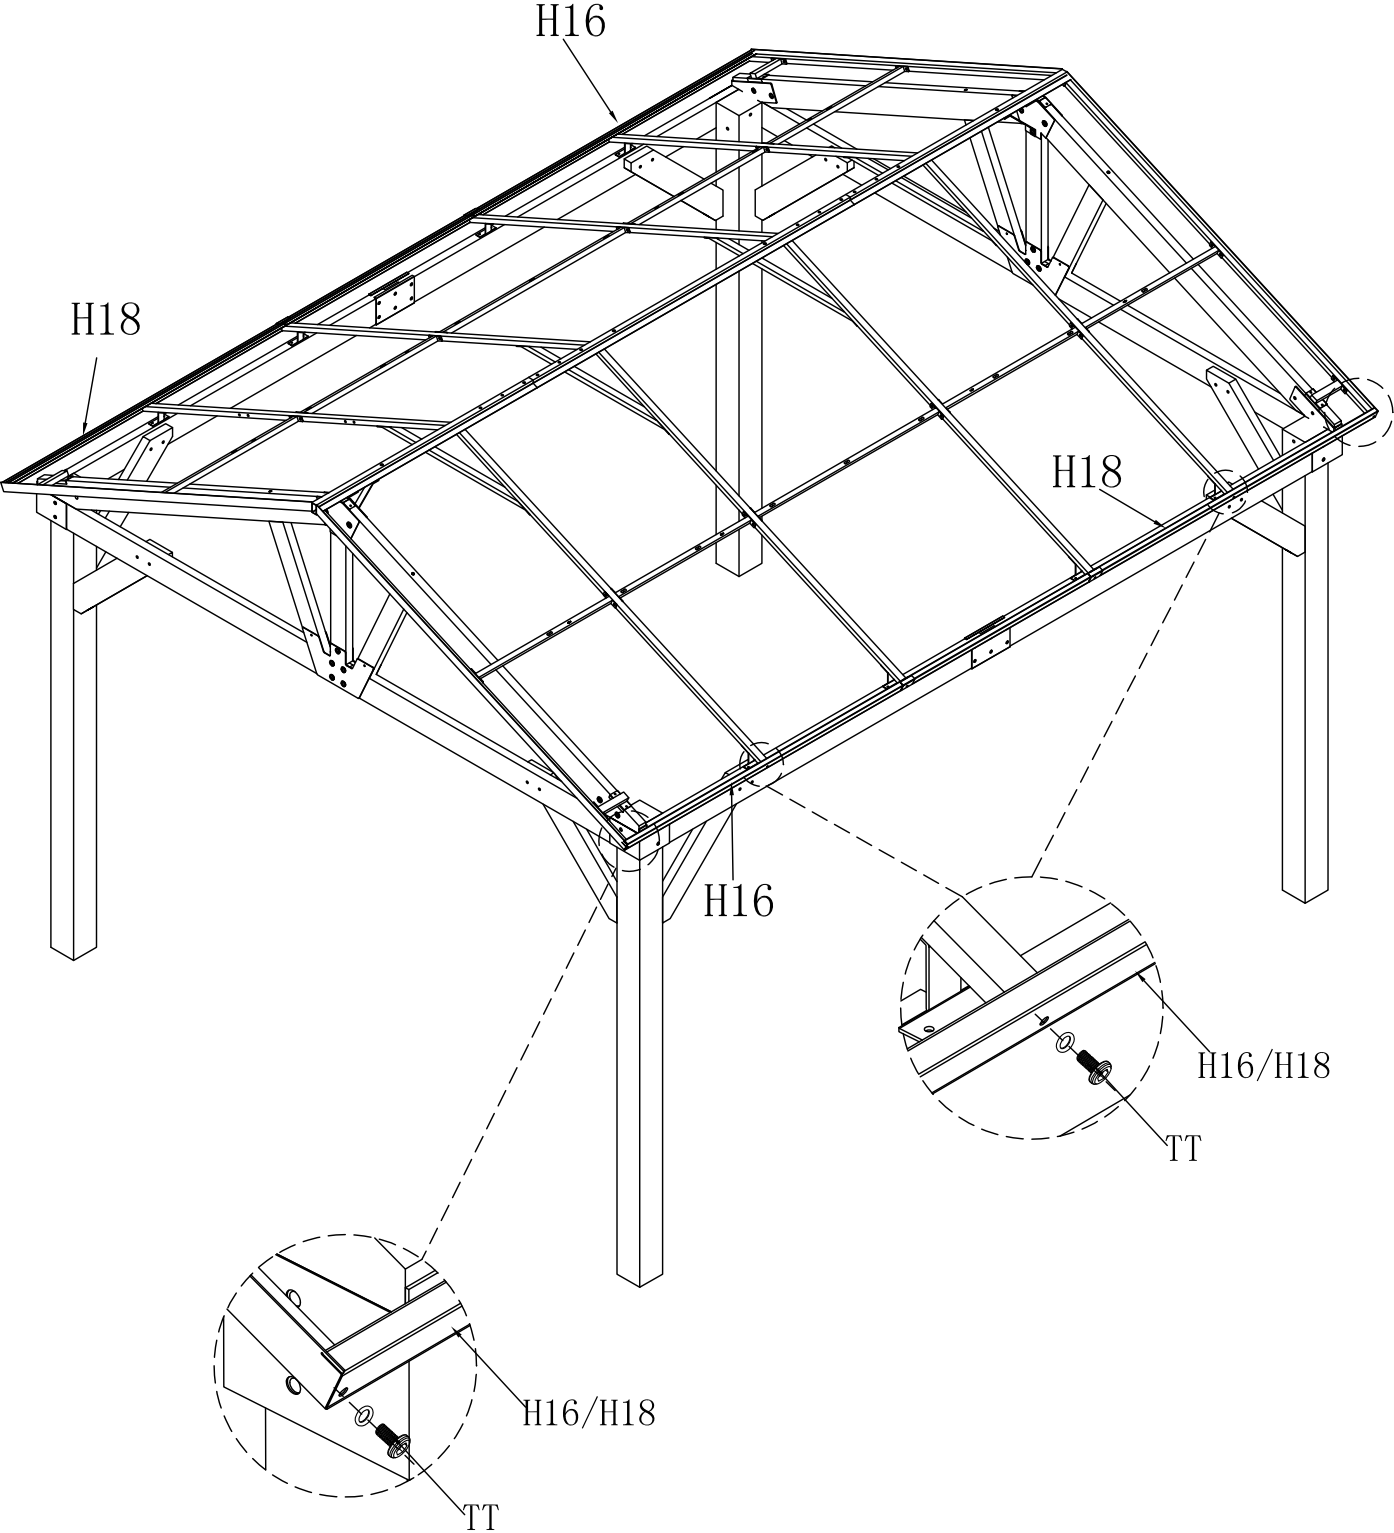


M6X15

 8X

STEP. 24

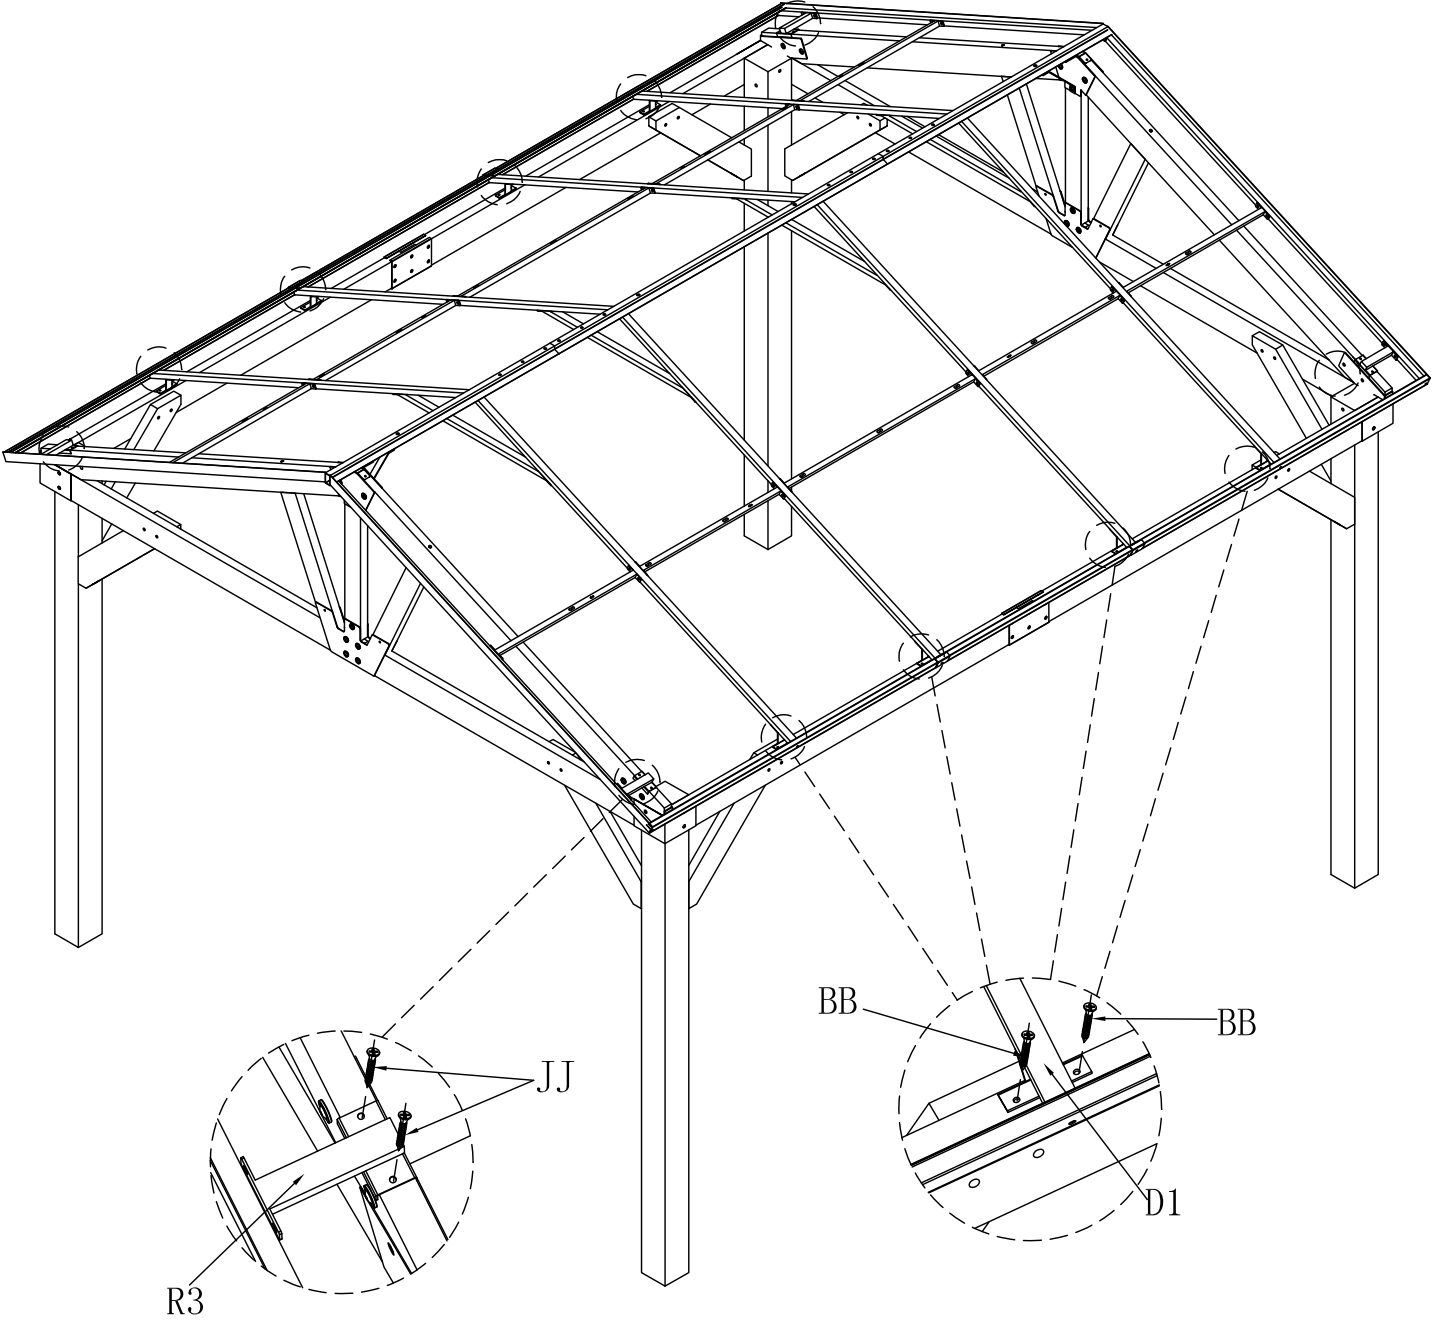

M5X20


Ⓝ 8X





M5X30

Ⓝ 16X

STEP. 25

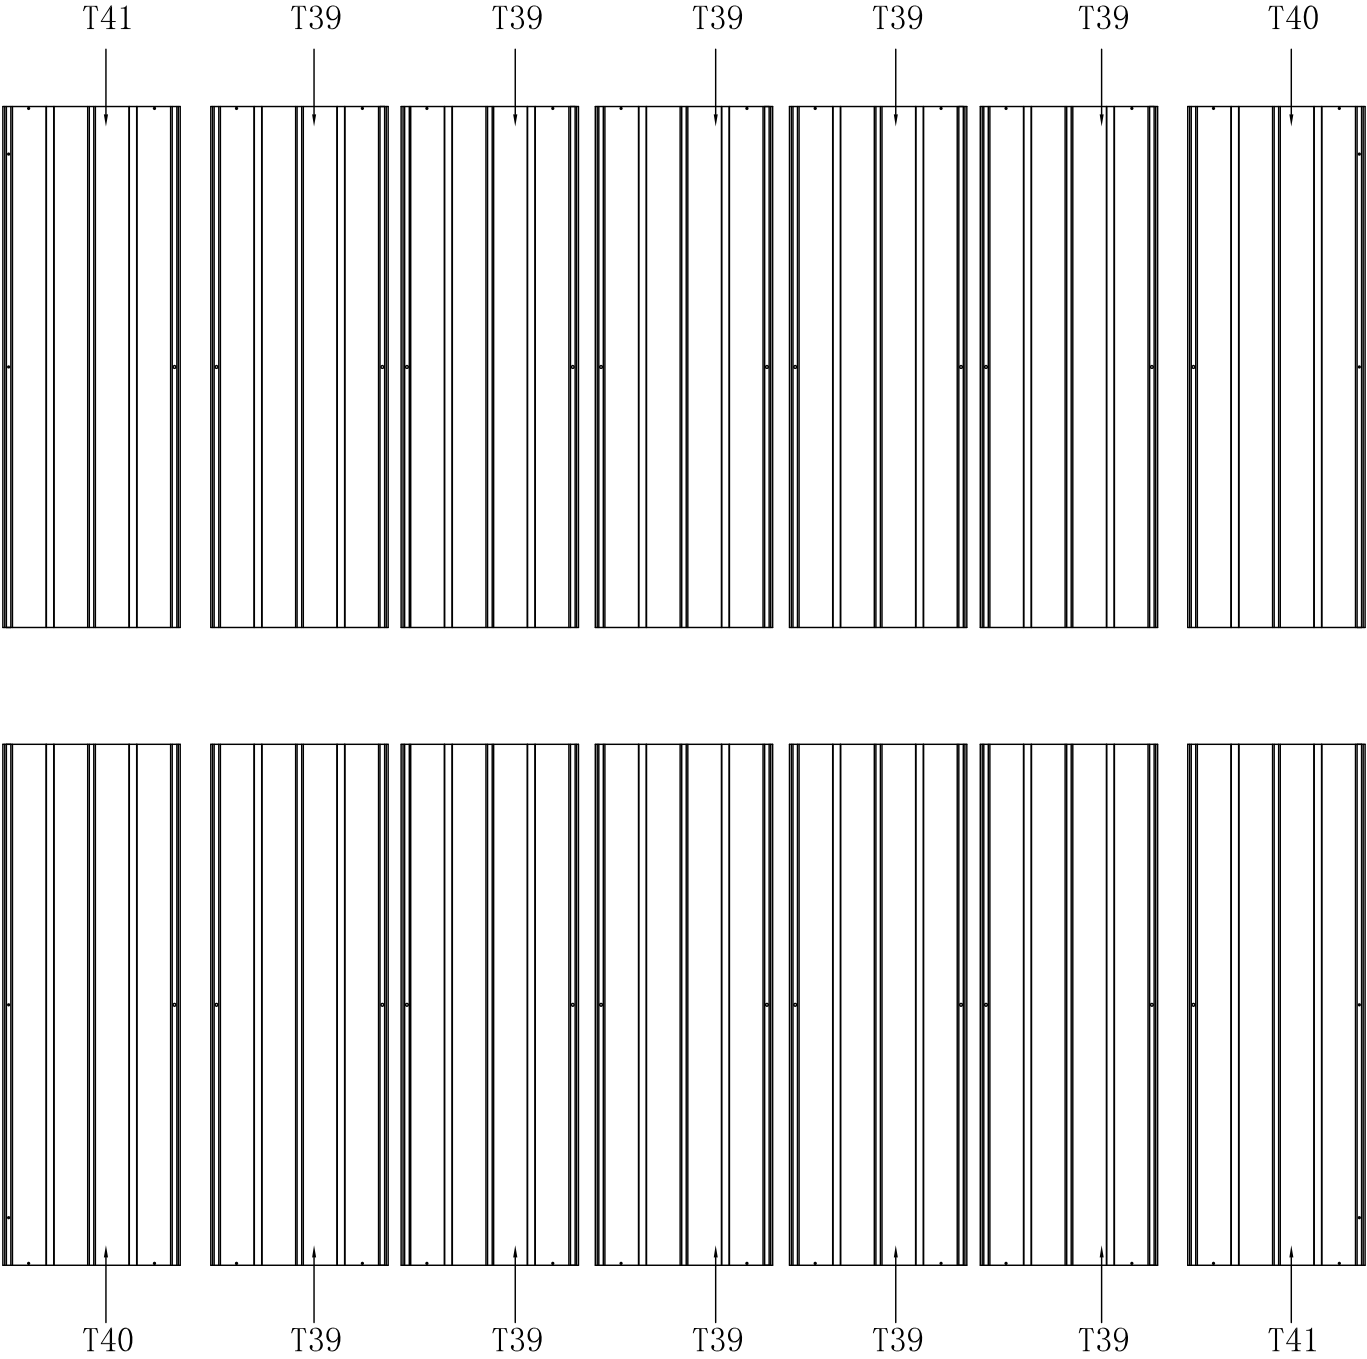


STEP. 26

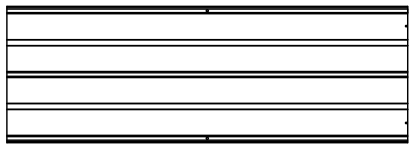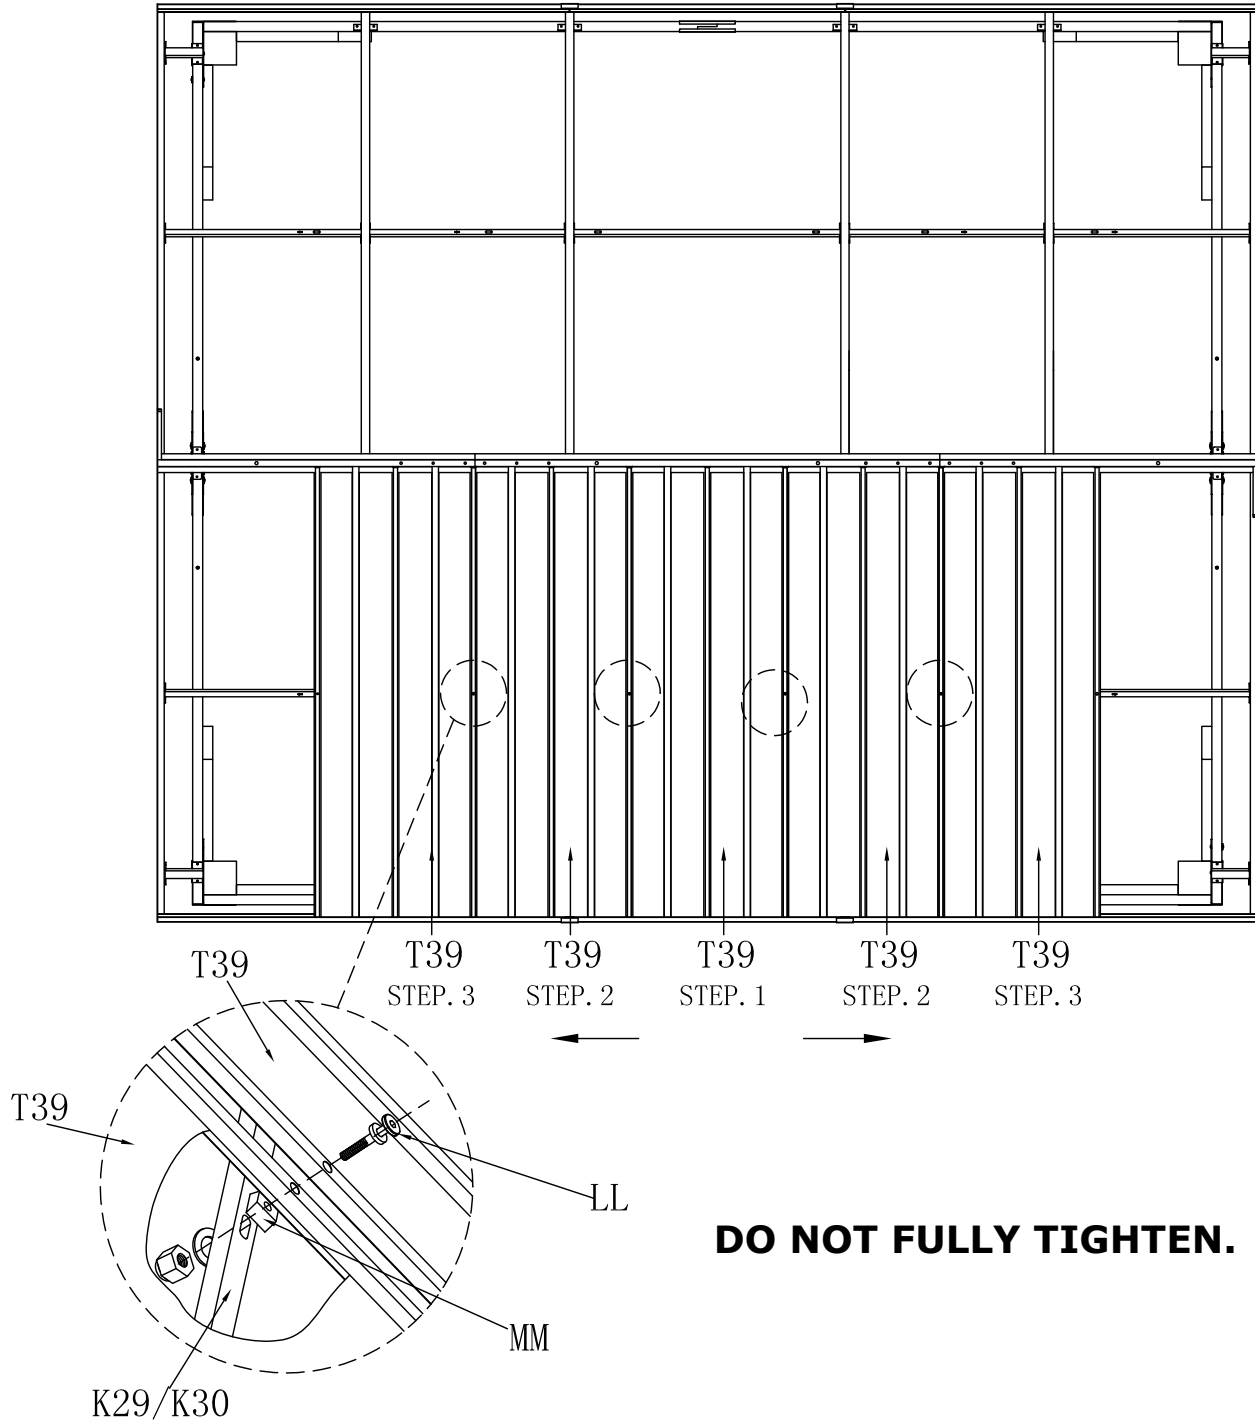

T39 5X




M6X45 LL 4X





MM 4X


STEP. 27

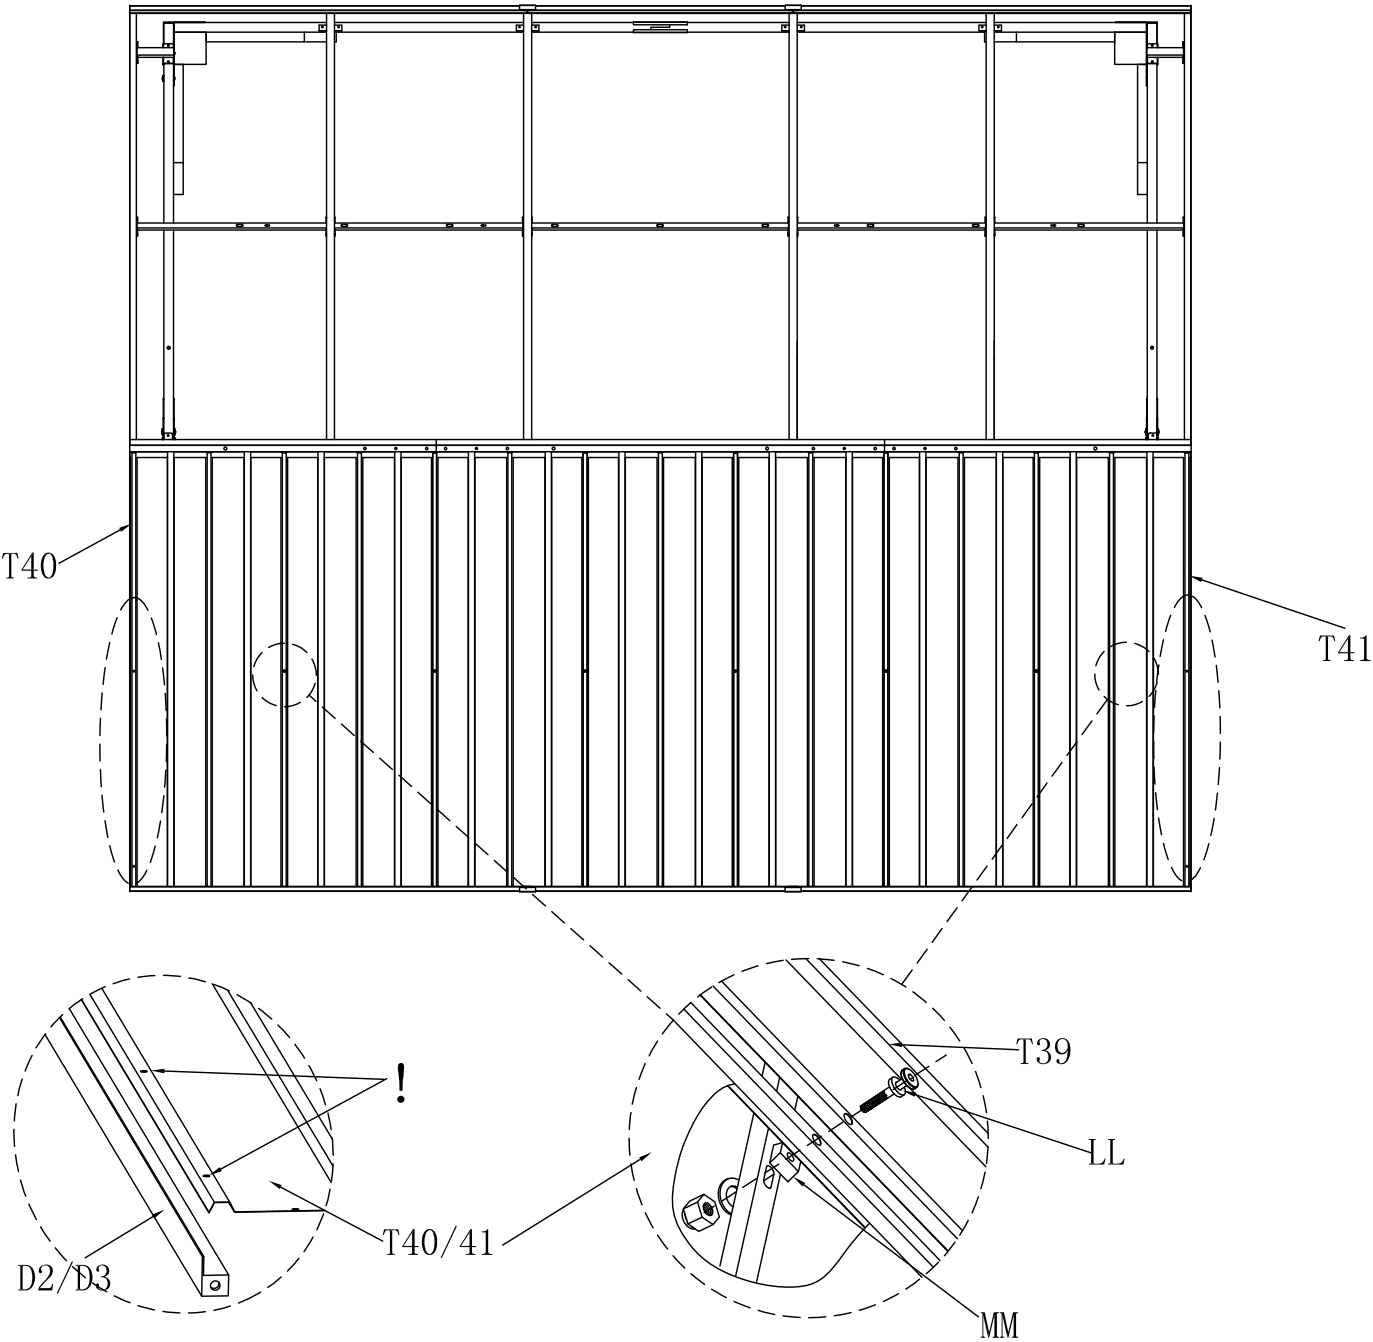


DO NOT FULLY TIGHTEN.

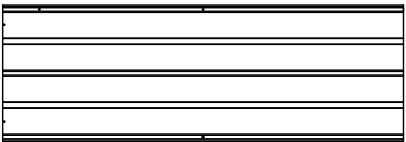 T40 1X	 M6X45 LL 2X
 T41 1X	 MM 2X

STEP. 28

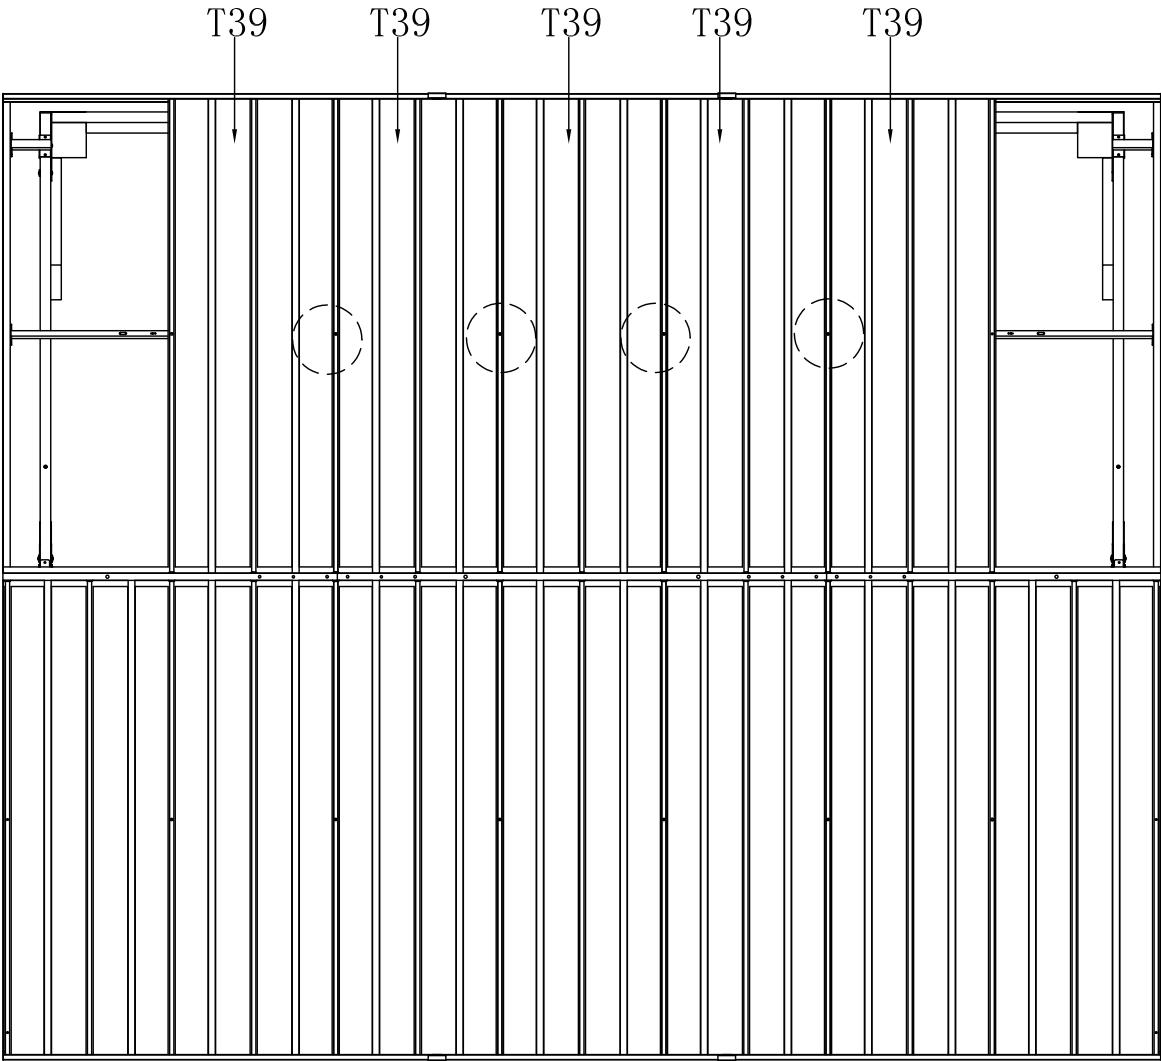


DO NOT FULLY TIGHTEN.

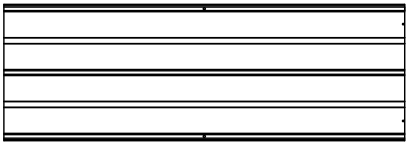

(T39) 5X




M6X45 (LL) 4X






(MM) 4X


STEP. 29

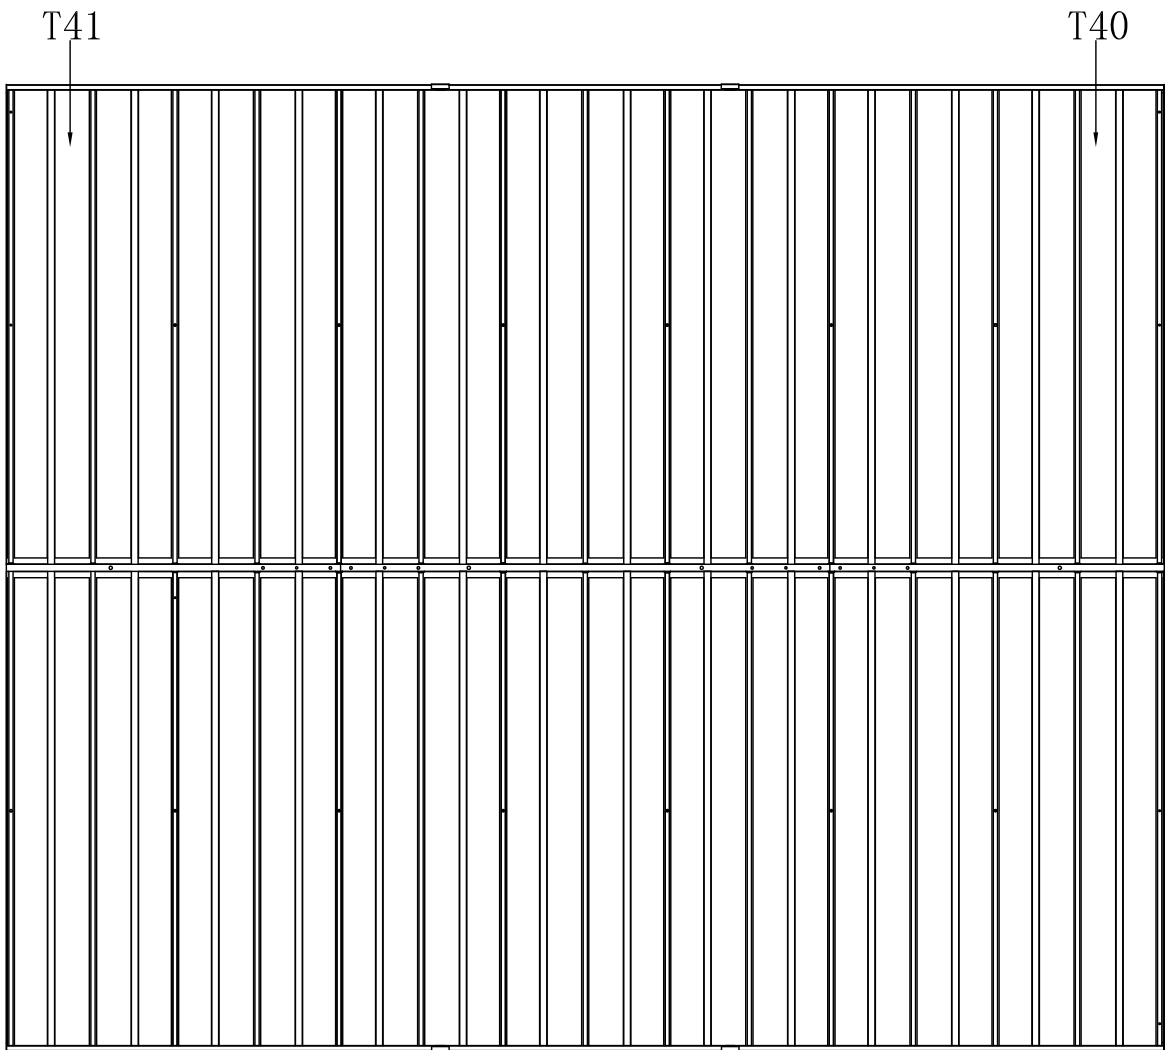


DO NOT FULLY TIGHTEN.

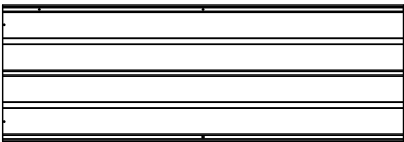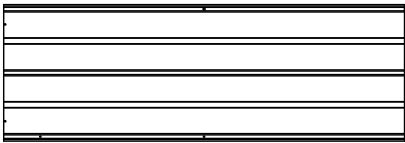	T40 1X	 M6X45 LL 2X
	T41 1X	 MM 2X

STEP. 30

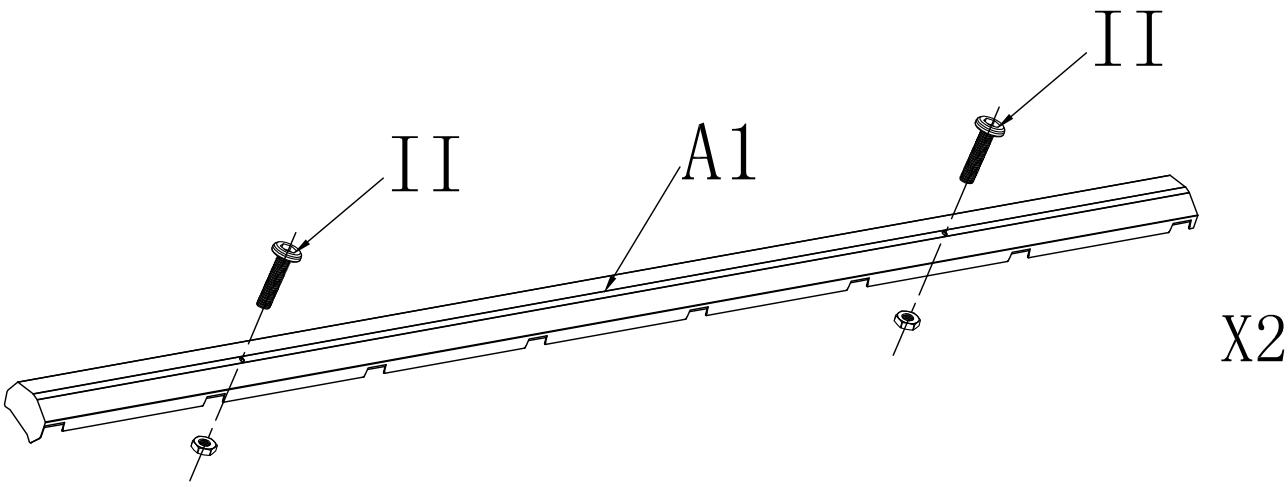

Screw II is fixed to A1

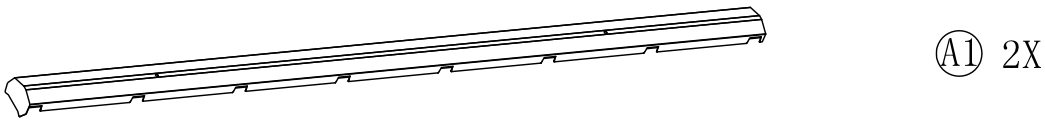


M6X70


II 4X

A1 2X



STEP. 31

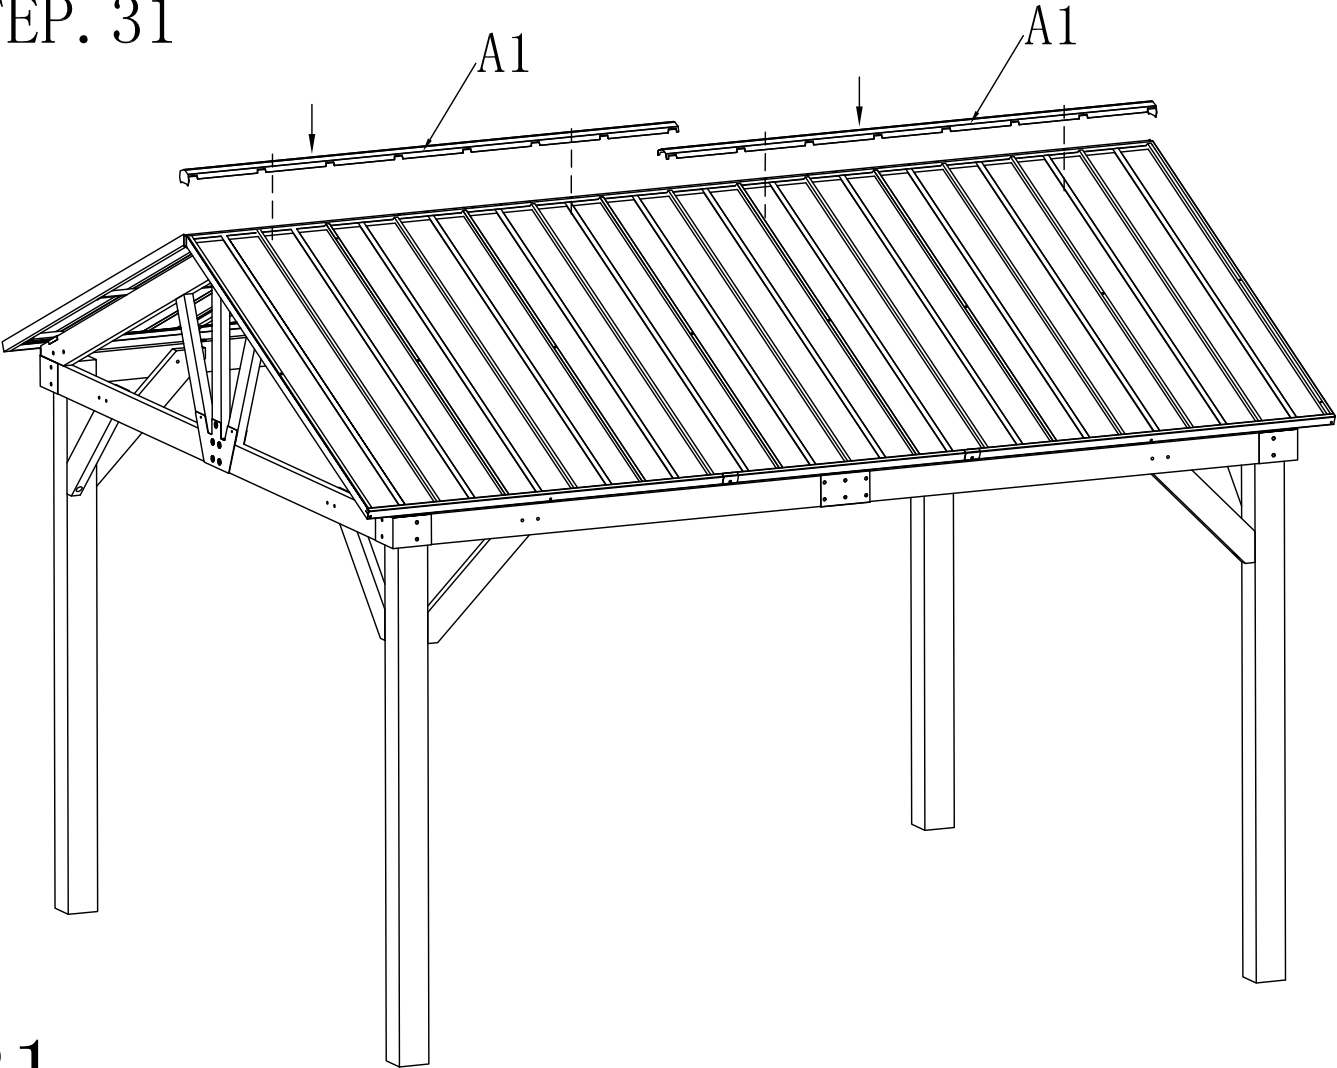

B1

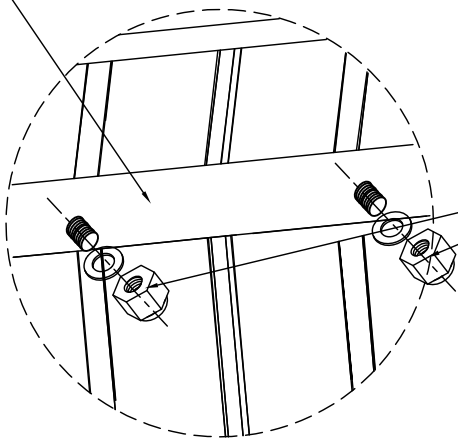


GG

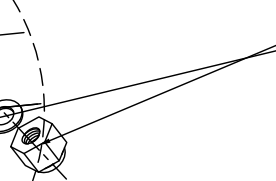

(A1) 2X


⊙ ⊞ GG 4X

STEP. 32

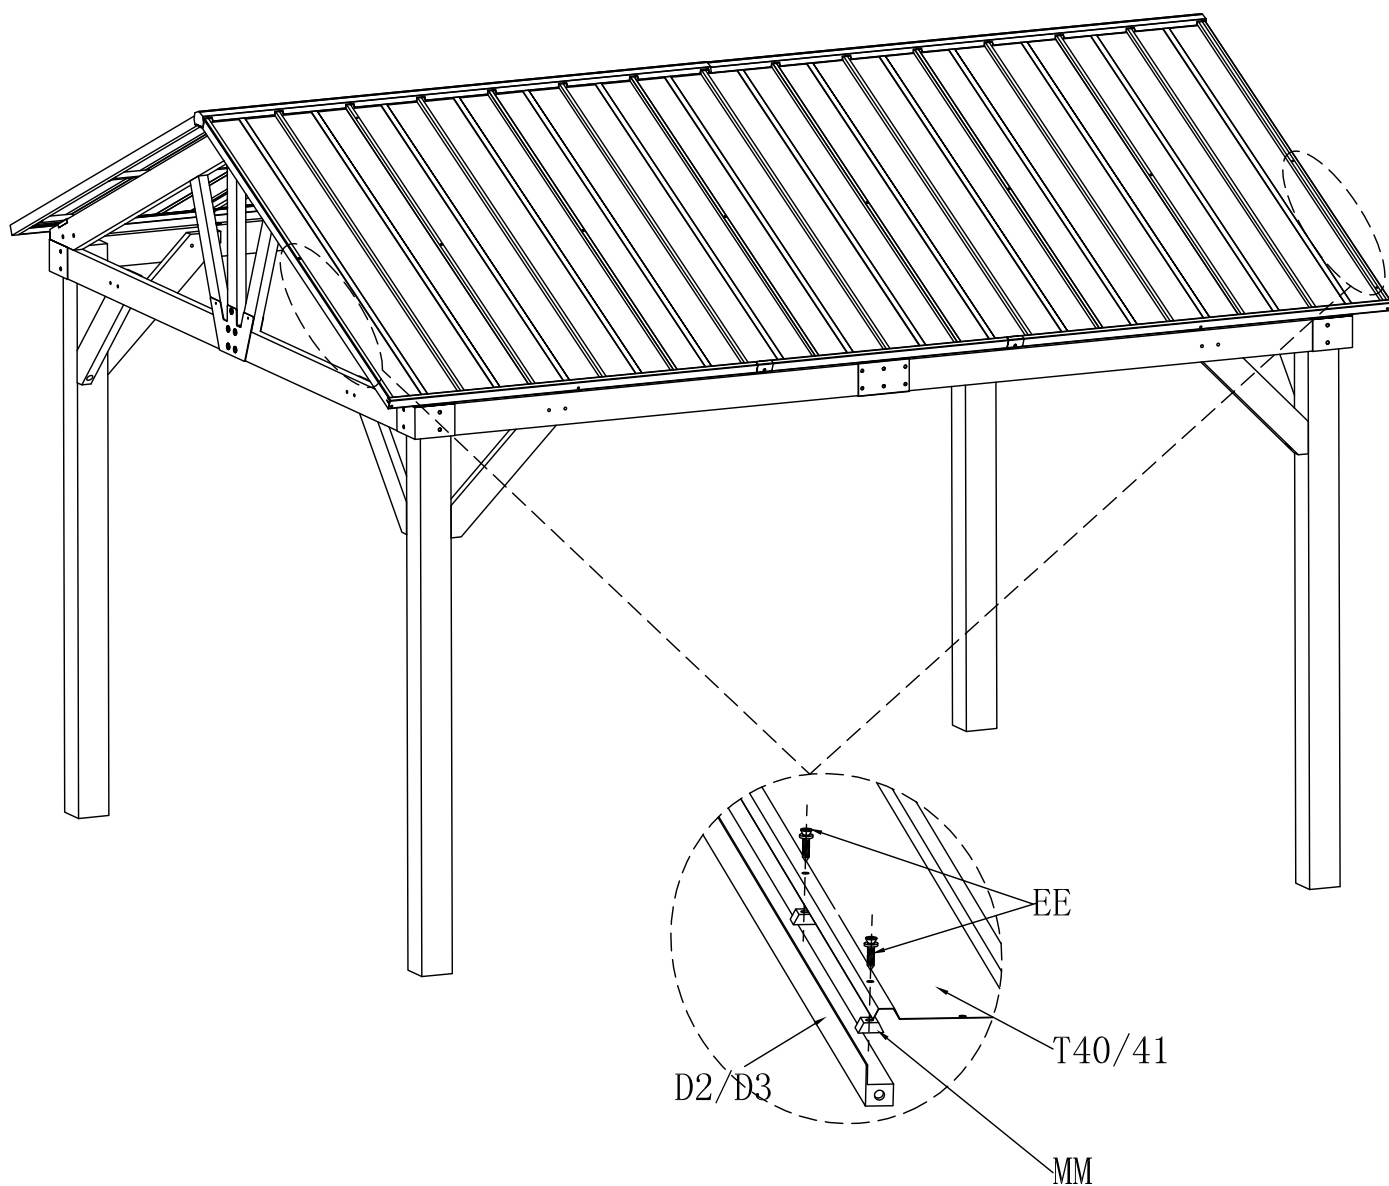


MM is inserted into the D2/D3 plane from the inside.

**Adjust alignments and NOW
TIGHTEN ALL SCREWS .**




ⓂⓂ 8X



M6X25

ⓔⓔ 8X

STEP. 33

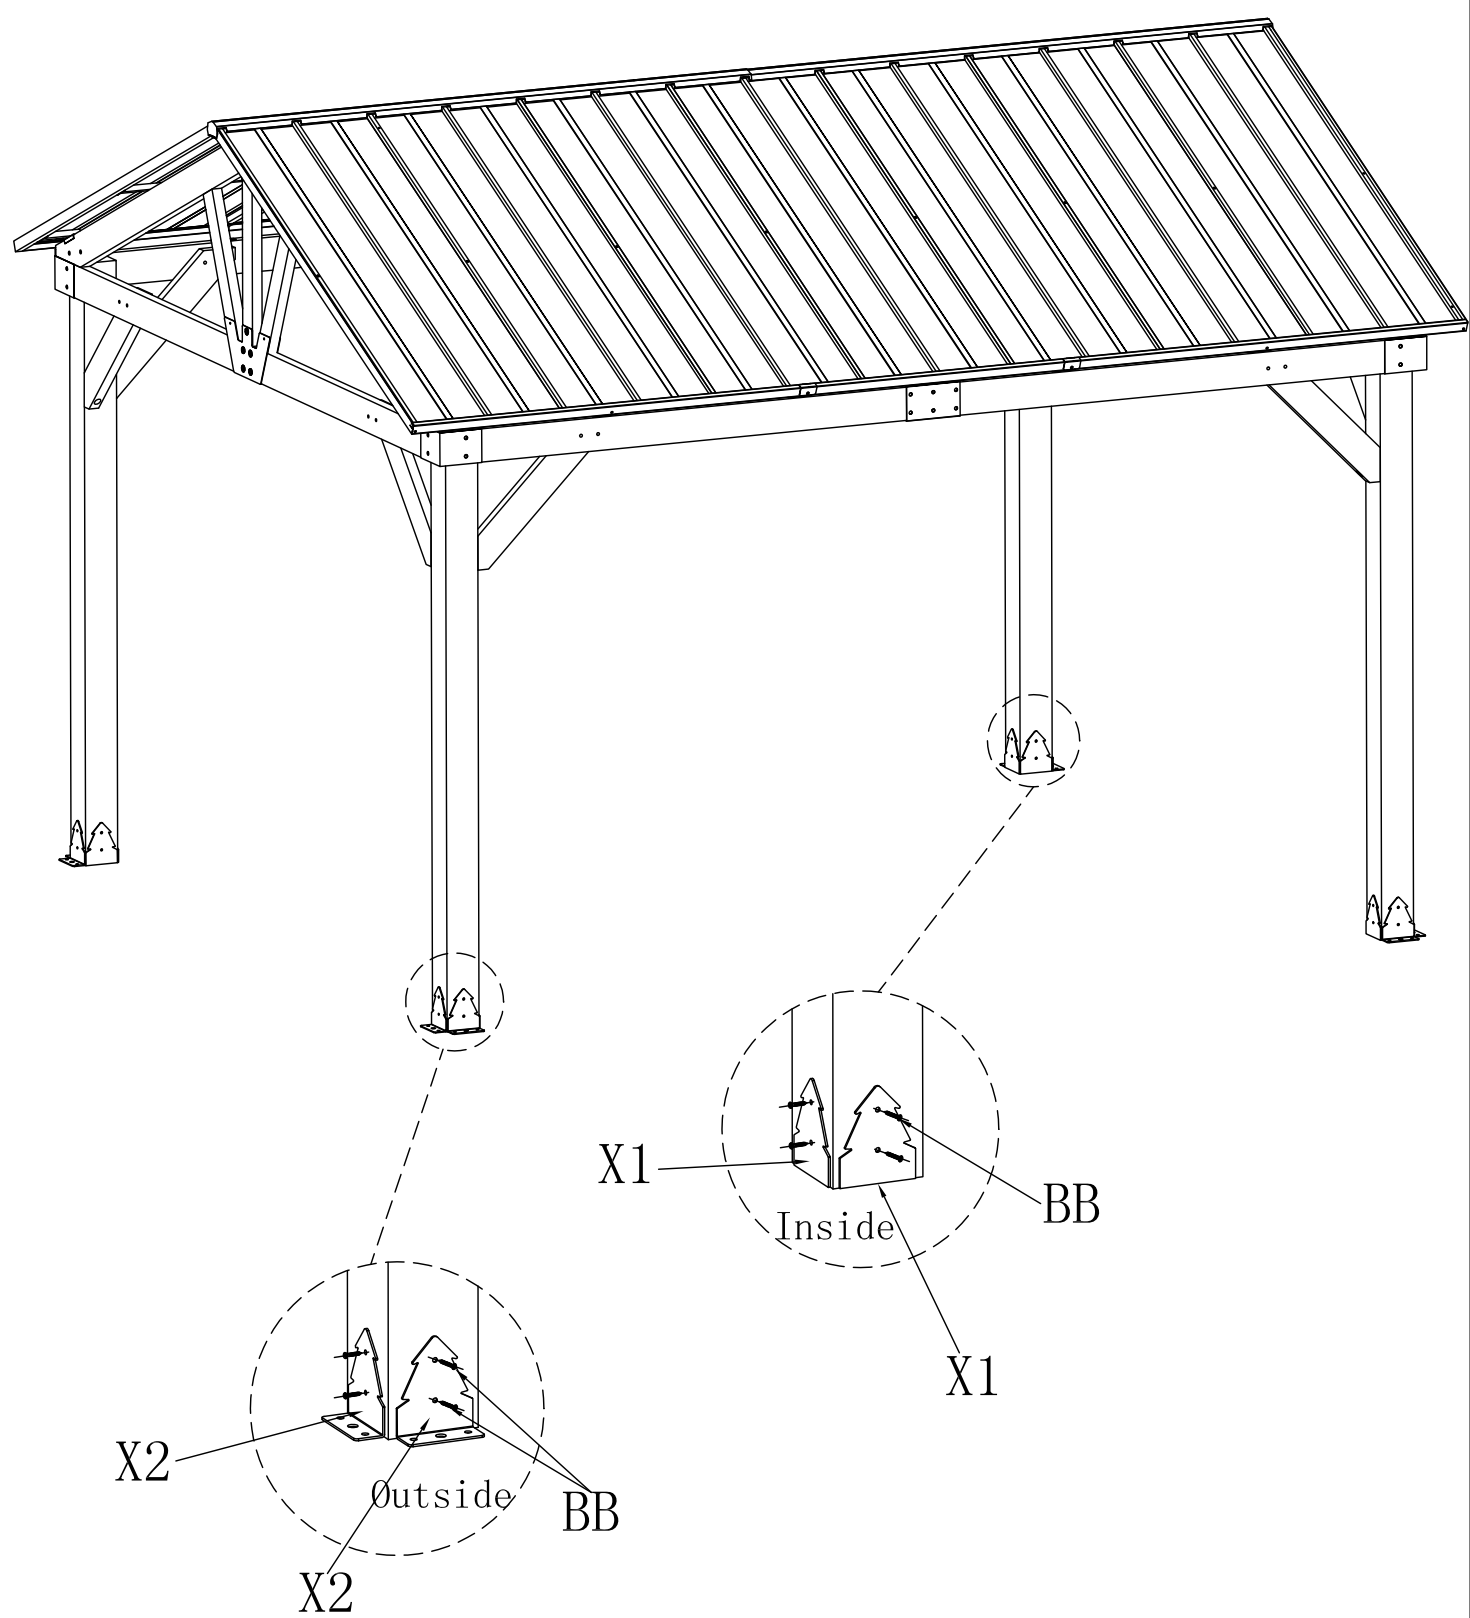

(X1) 8X





(X2) 8X



M5X30

(BB) 32X

STEP. 34

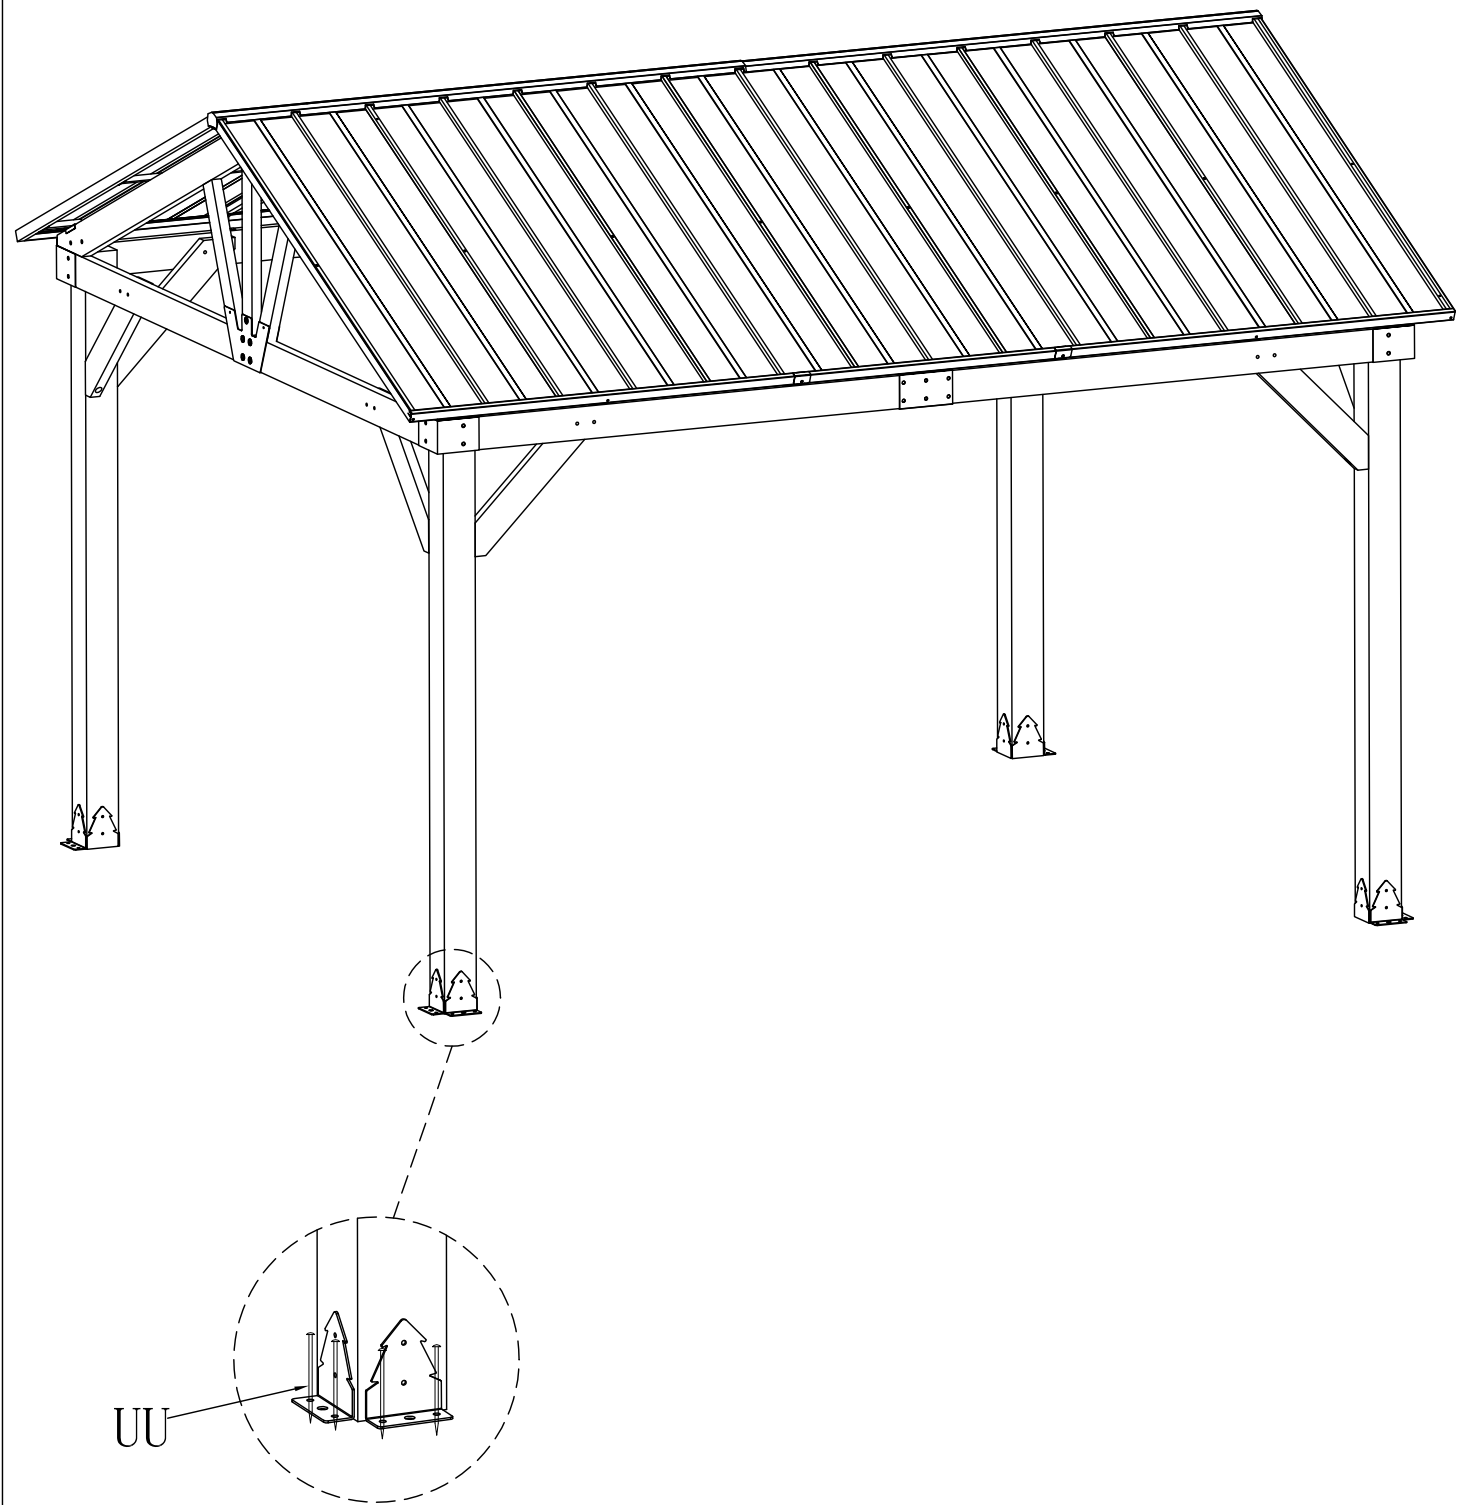

16X