


Modern Shoe Cabinet

Assembly Instruction

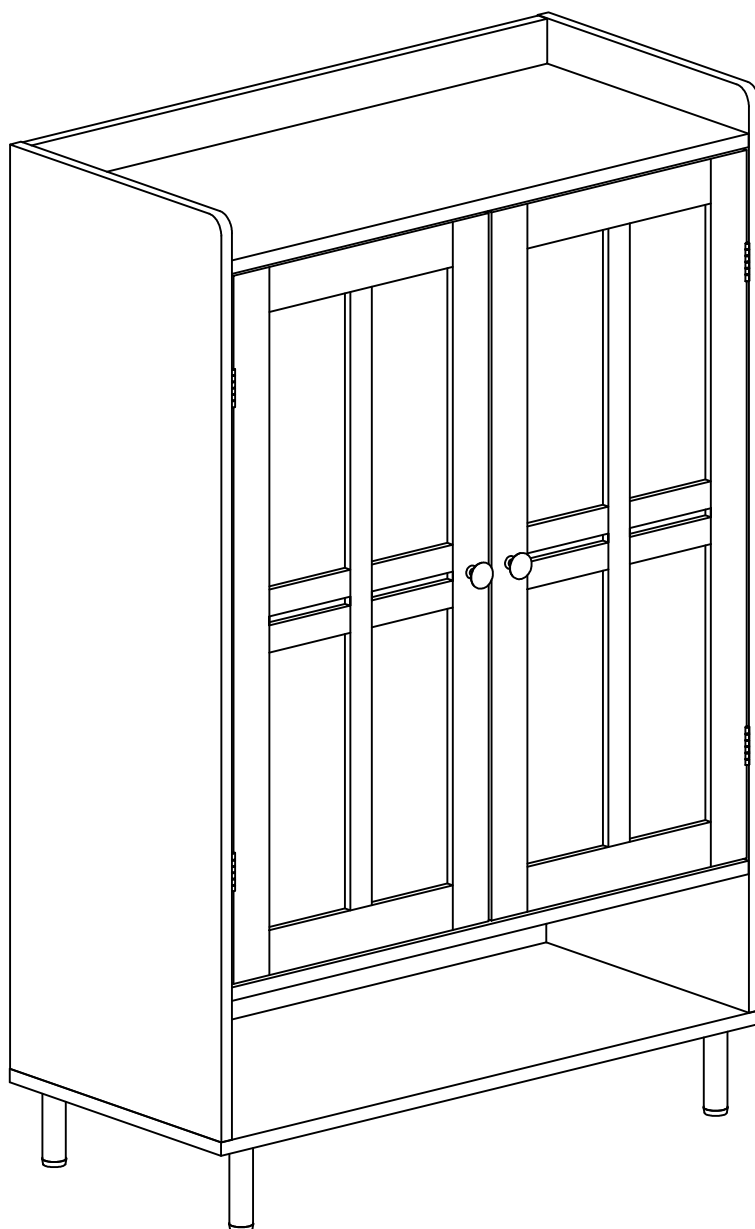

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.


PRECAUTIONS

1. There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.
2. Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
3. The main components of the product is relatively heavy. Please pay attention to safety during installation.
4. The product is not stable during installation. Please do not move it randomly before it is completely installed.
5. If you have any questions during installation, please contact the customer service in time.


***PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.**

***IF YOU NEED FURTHER ASSISTANCE, PLEASE CONTACT THE CUSTOMER SERVICE ONLINE.**


Parts List



① 1pc




② 1pc



③ 1pc



④ 1pc



⑤ 1pc



⑥ 1pc




⑦ 3pcs



⑧ 1pc



⑨ 2pcs

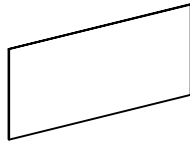

⑩ 3pcs


















⑪ 2pcs






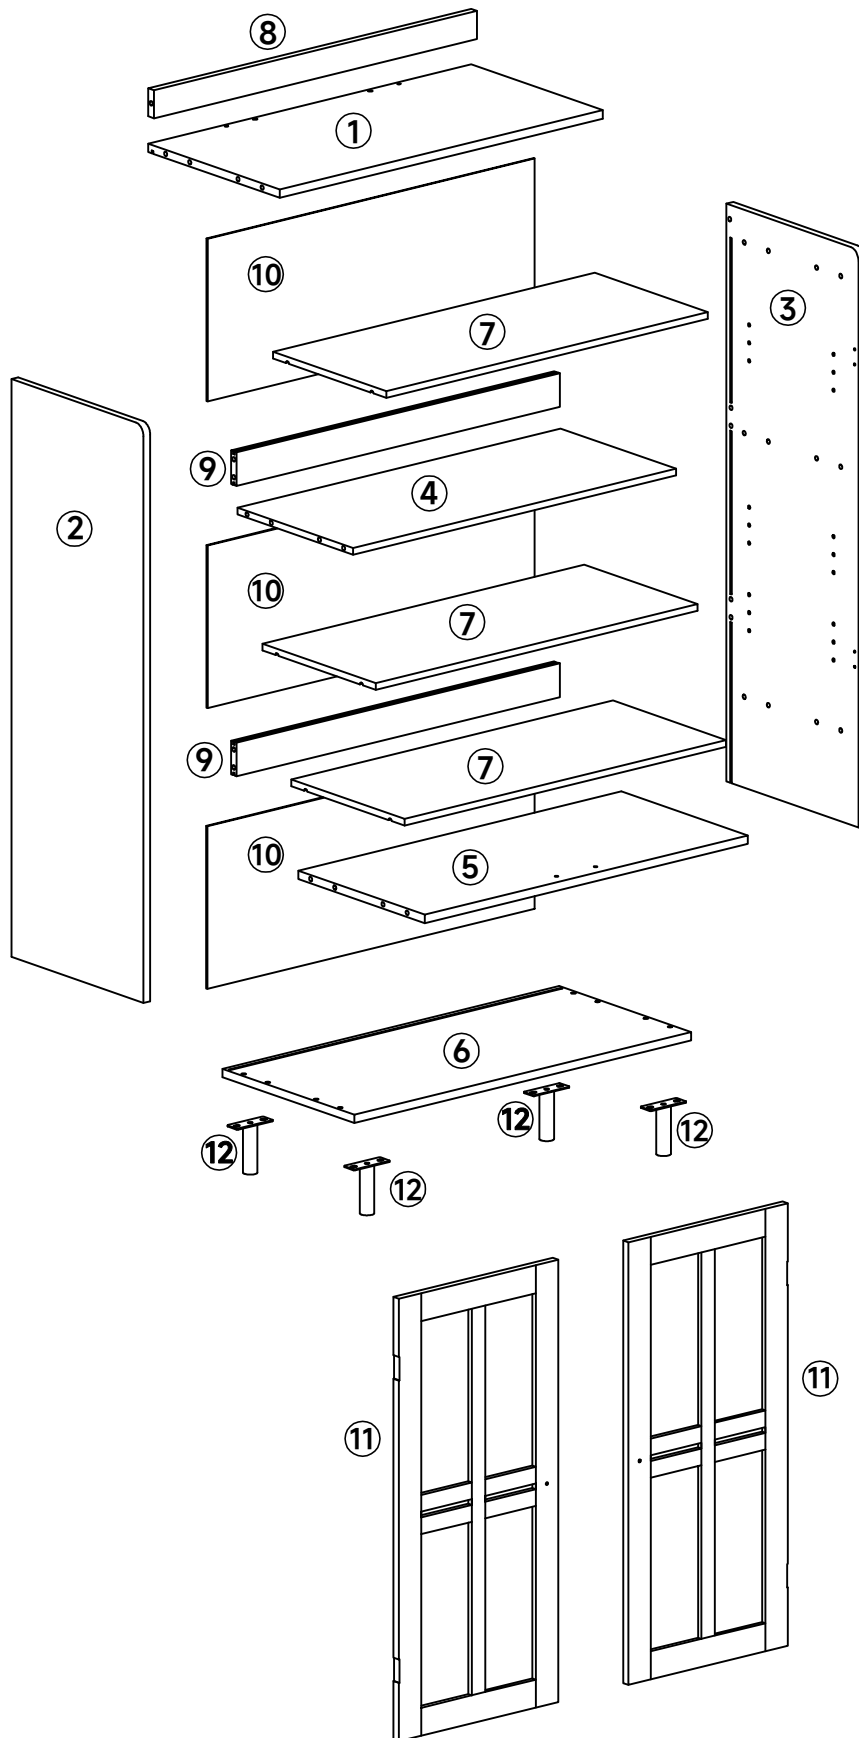
⑫ 4pcs

Hardware List

A	X24	B	X20	C	X4	D	X18	E	X4	F	X1	G	X38	H	X2
															
Ø6X35mm		Ø15X12mm		Ø15X10mm		Ø8X30mm		Ø7X47mm				3.5X14mm		Ø4X35mm	


I	X2	J	X2	K	X4	L	X2	M	X4	N	X12	O	X8	P	X4
															
		M4X18mm		45X12mm		96X20X14mm		L42mm				M6X12mm			

Q	X8	R	X2	S	X2
					




Installation of Cams and Pins


Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

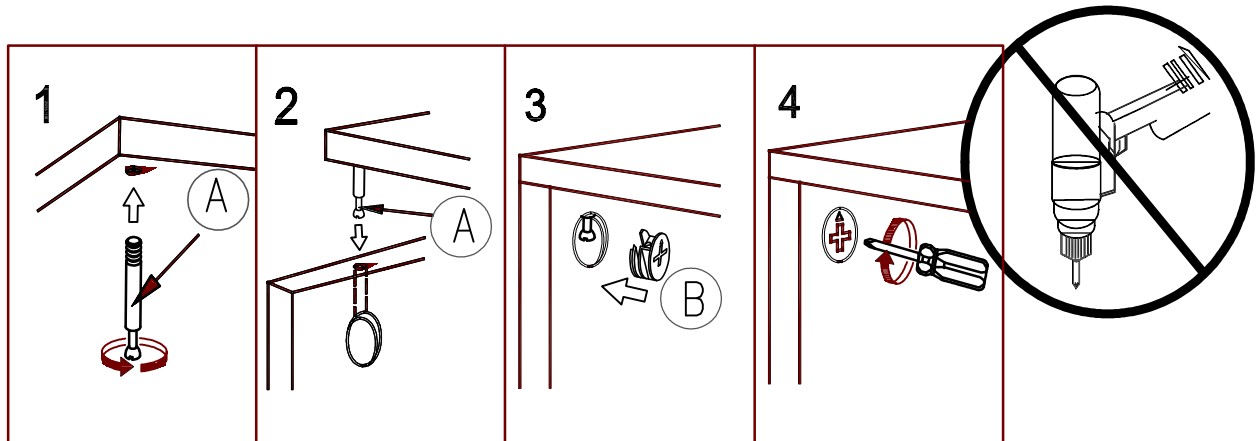





Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

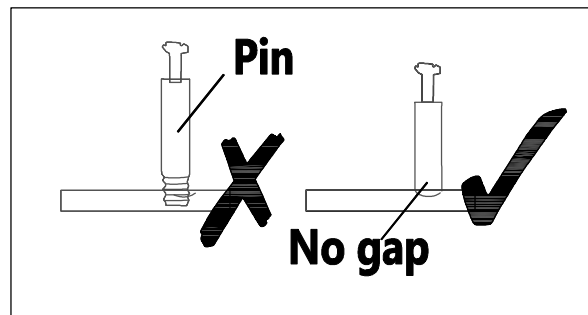

STEP 1



AX24

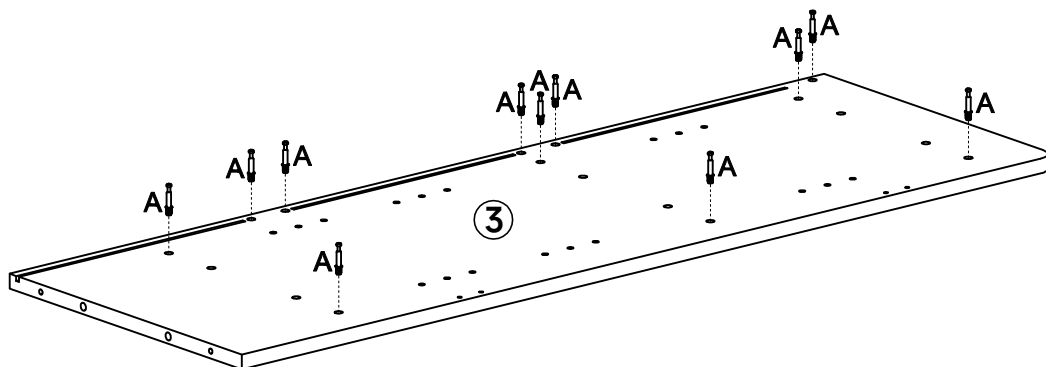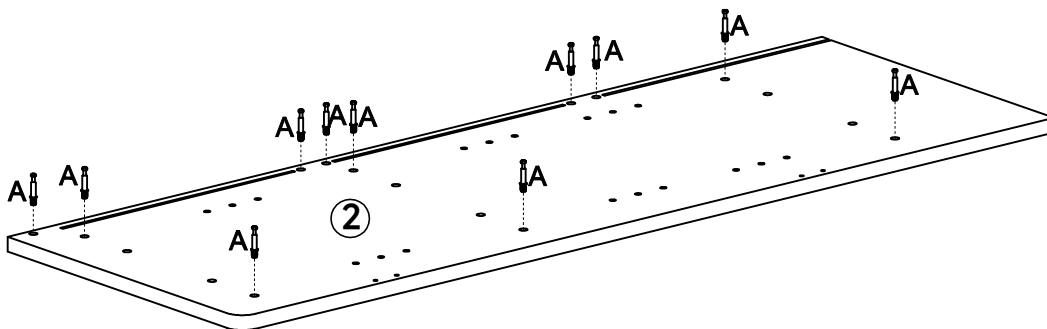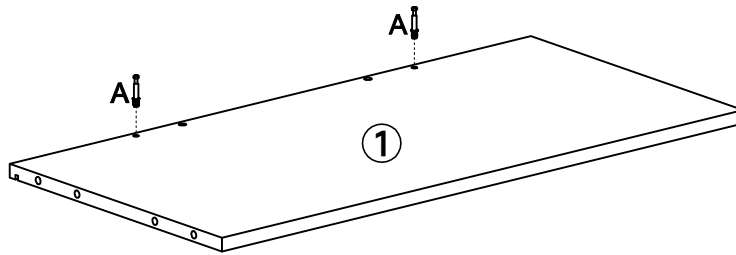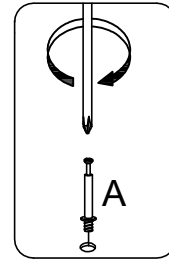



STEP 2



GX4



LX2

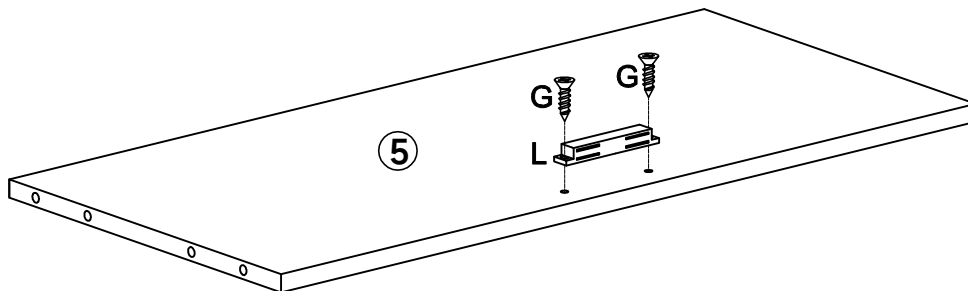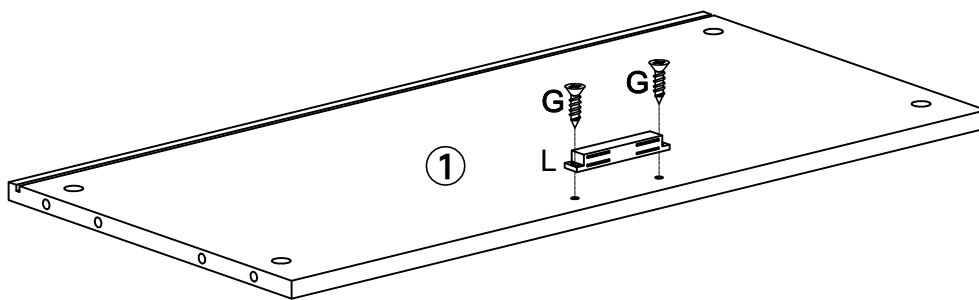


STEP 3





BX5




DX4

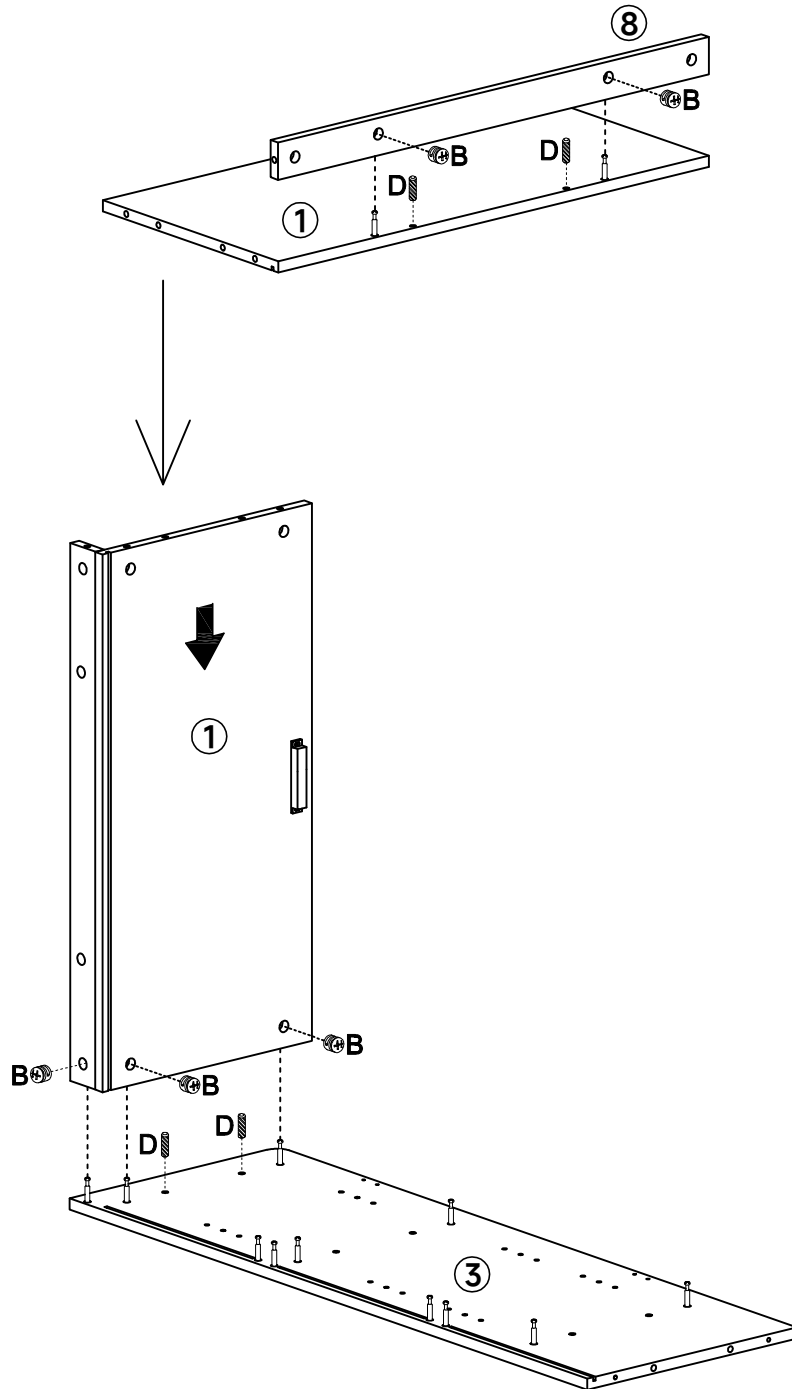


STEP 4

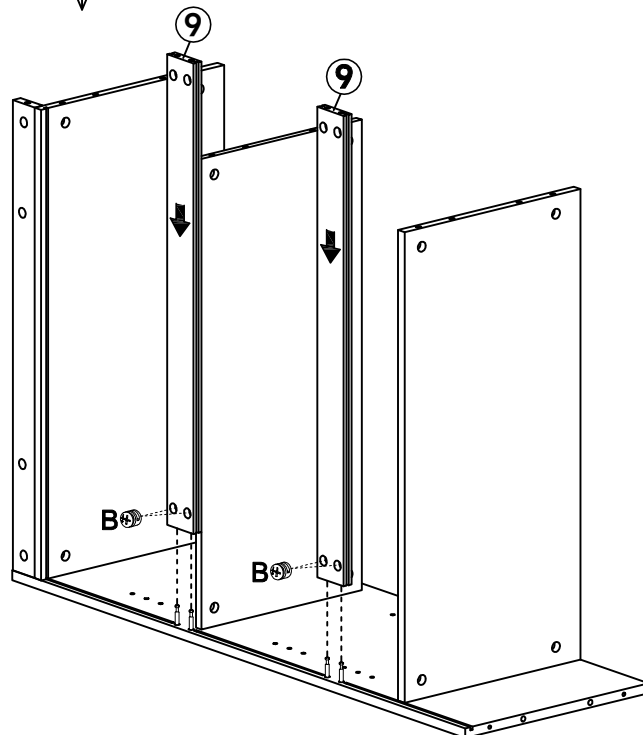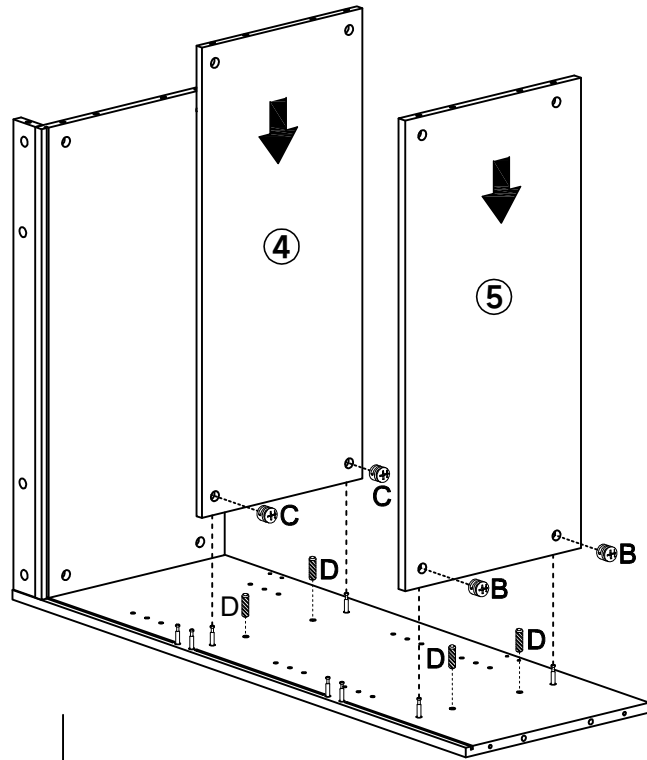**BX6****CX2****DX4**


STEP 5

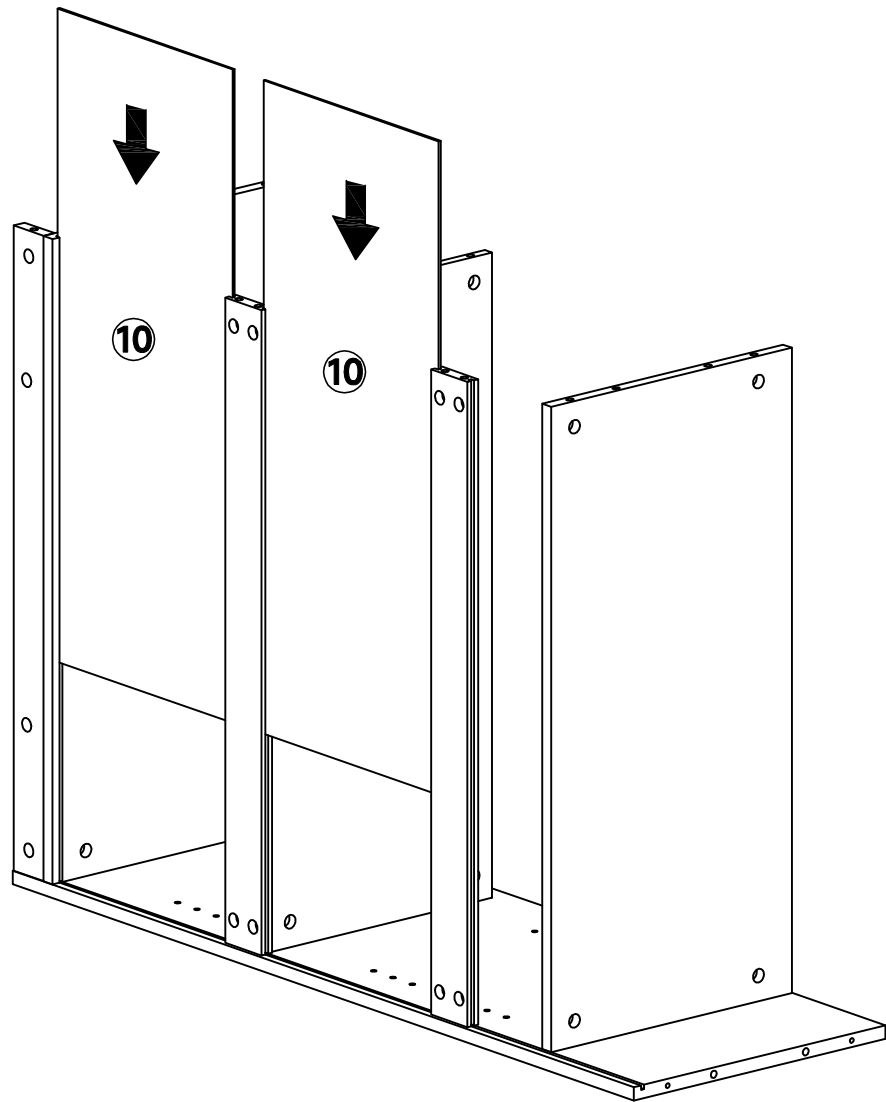

STEP 6

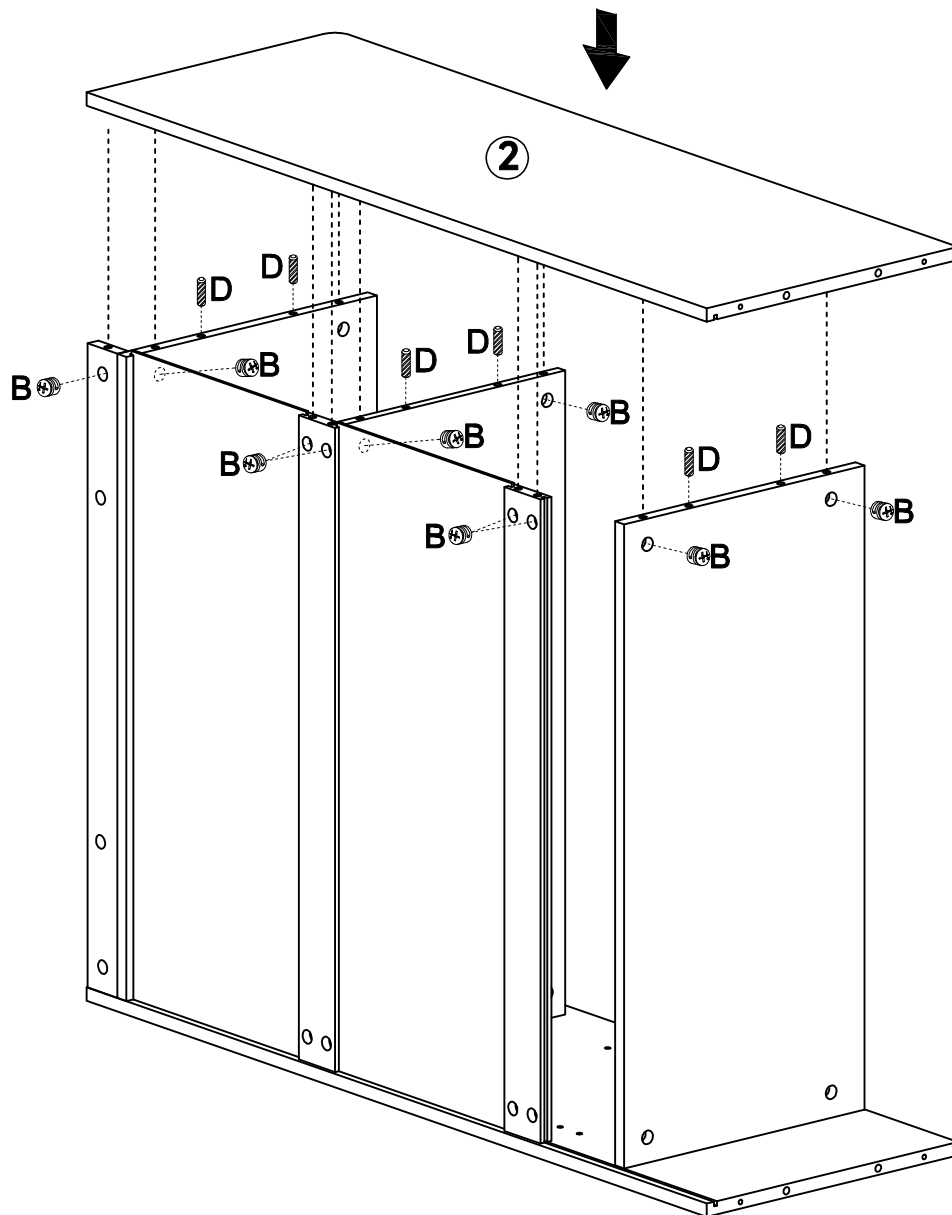**BX9****CX2****DX6**


STEP 7

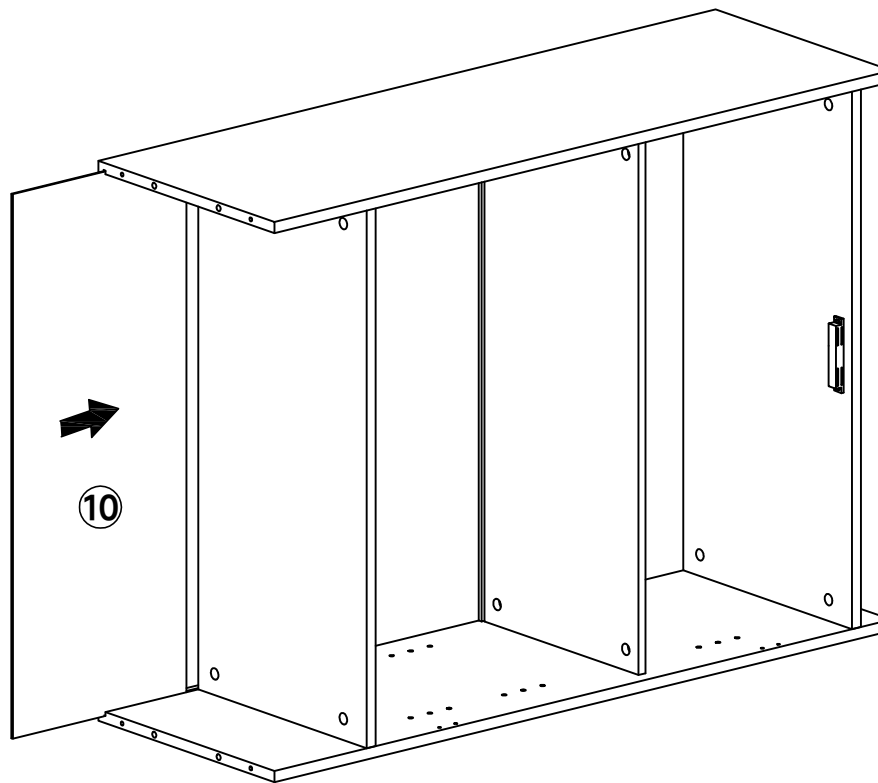


STEP 8




DX4



EX4

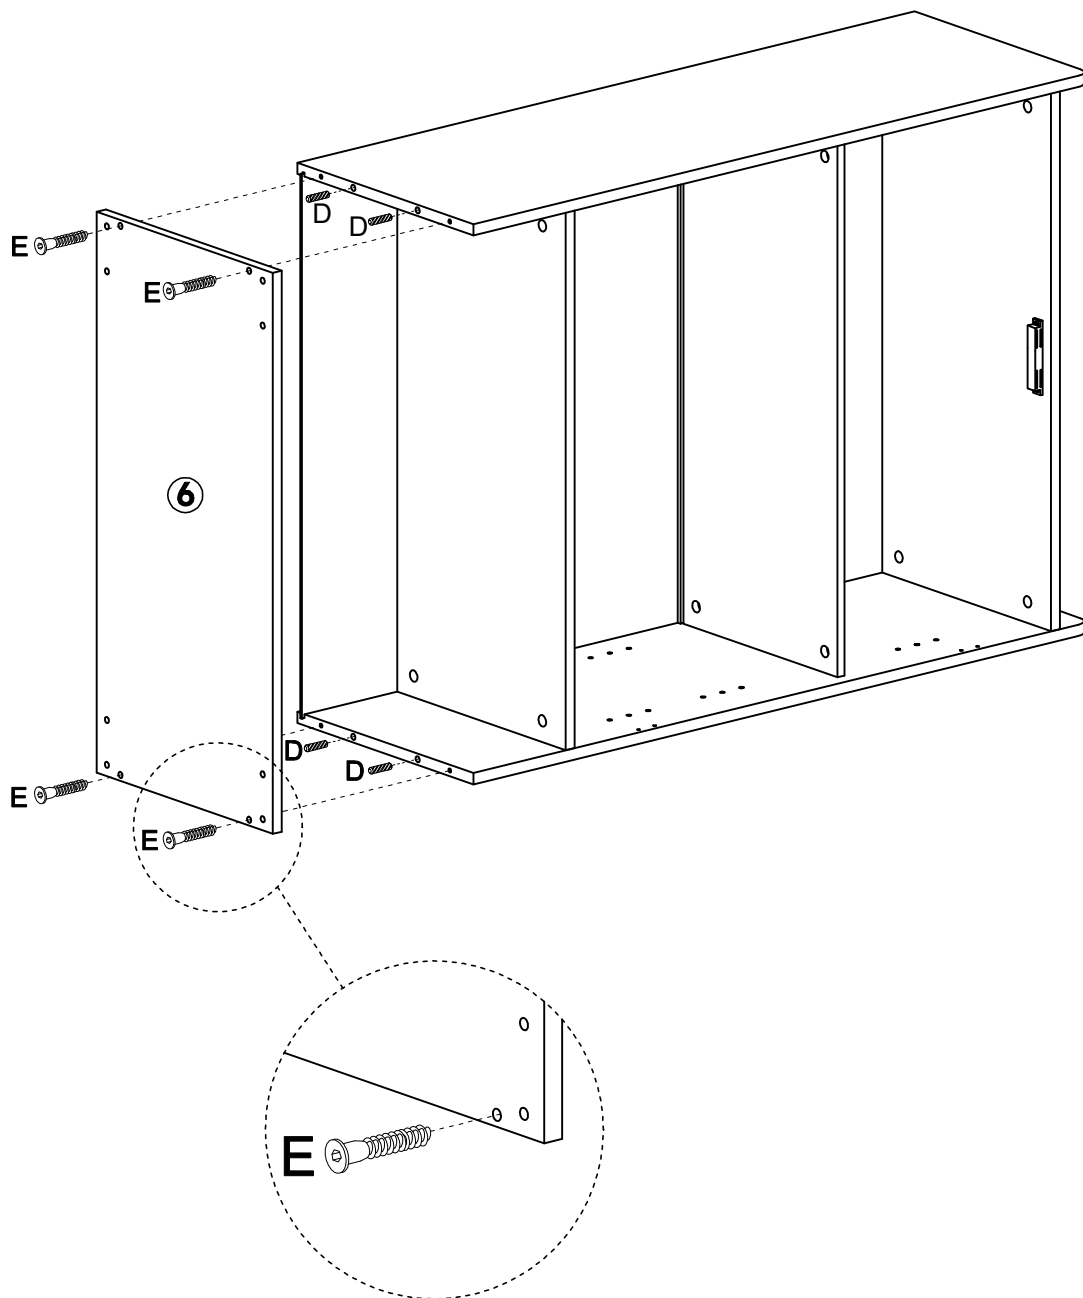



STEP 9



OX8




PX4

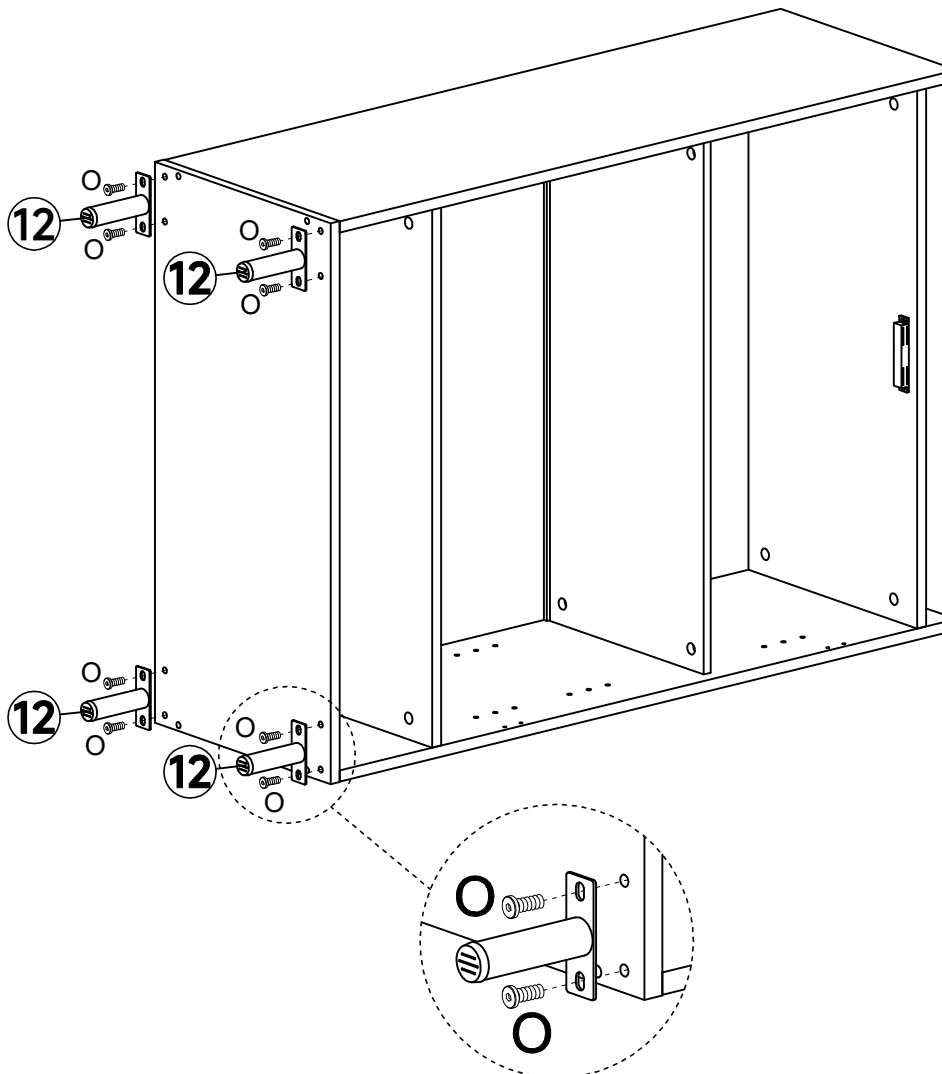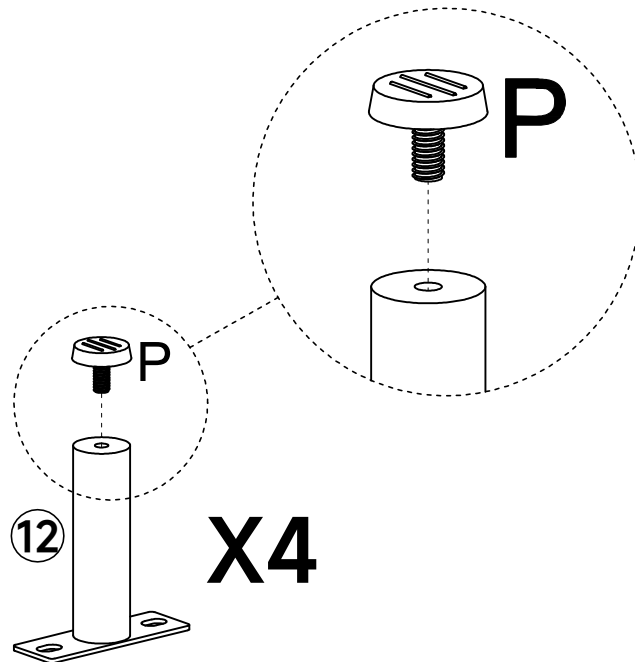


STEP 10





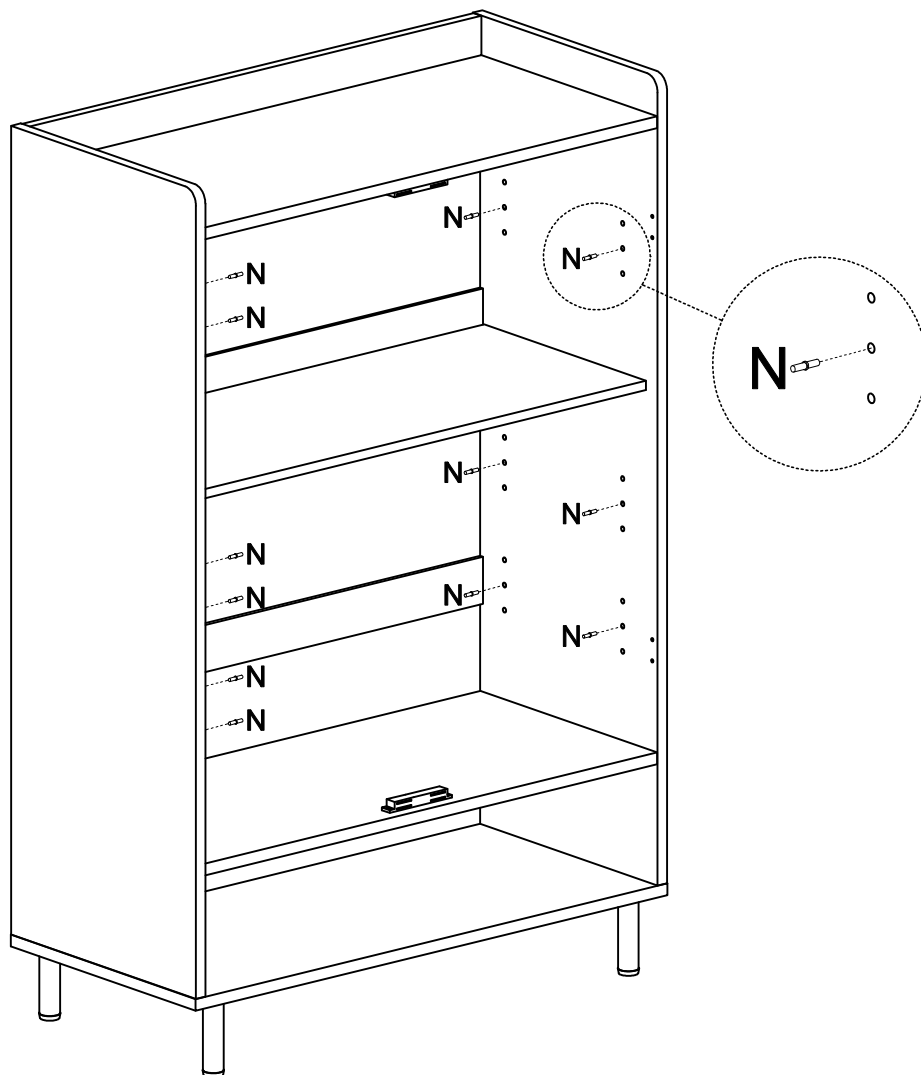


NX12

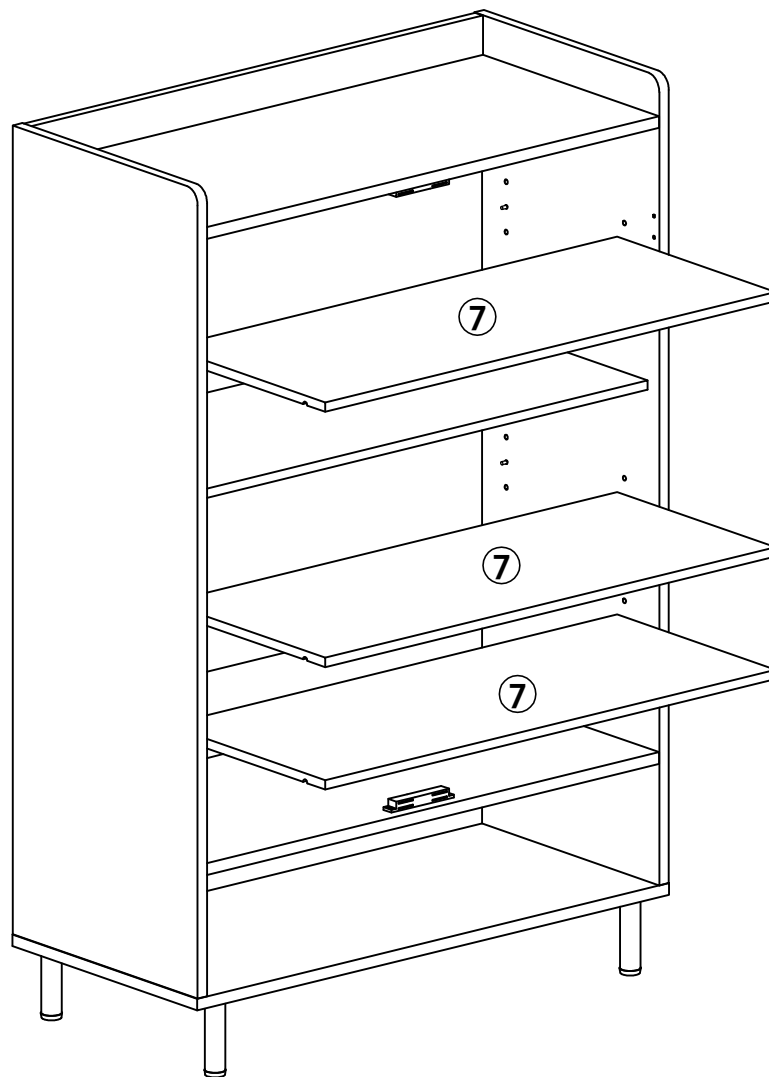


STEP 11



STEP 12


	GX16
	KX4
	MX4
	IX2
	JX2

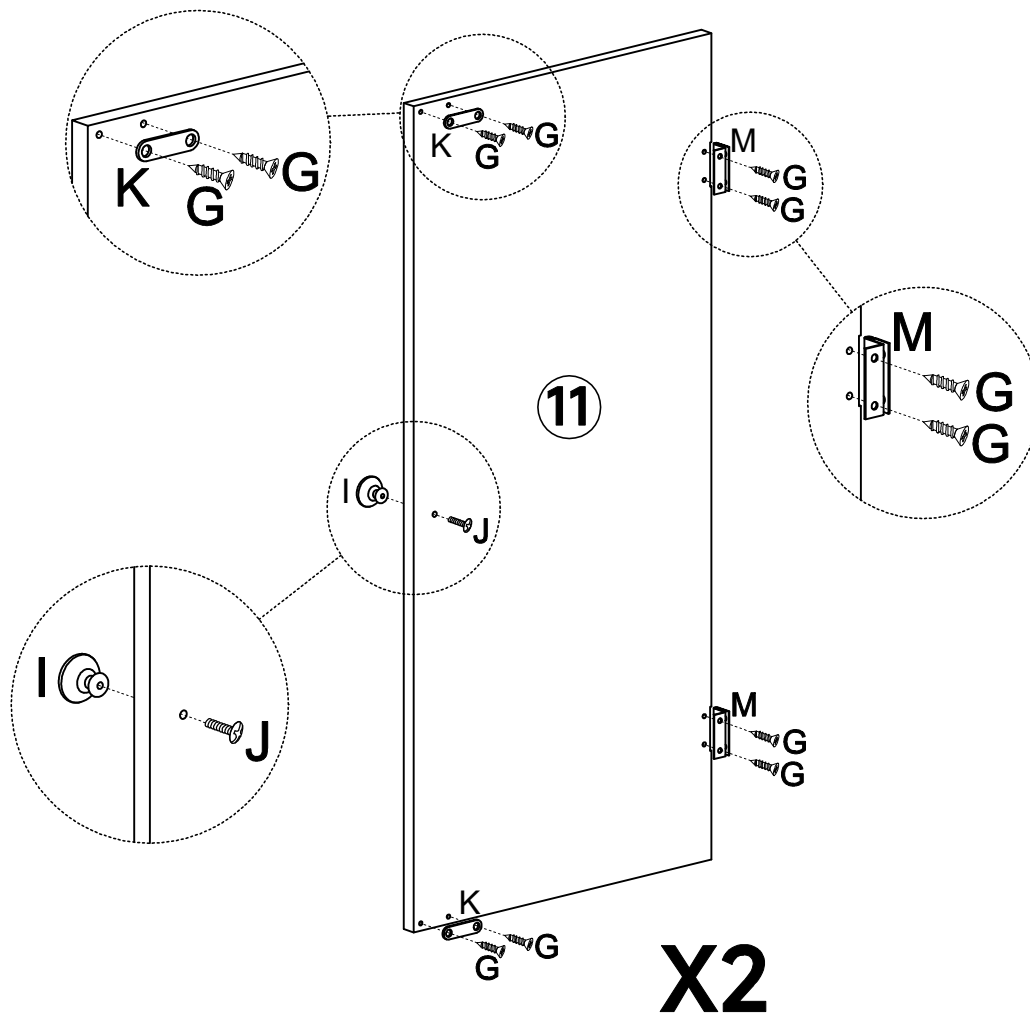

STEP 13




GX4

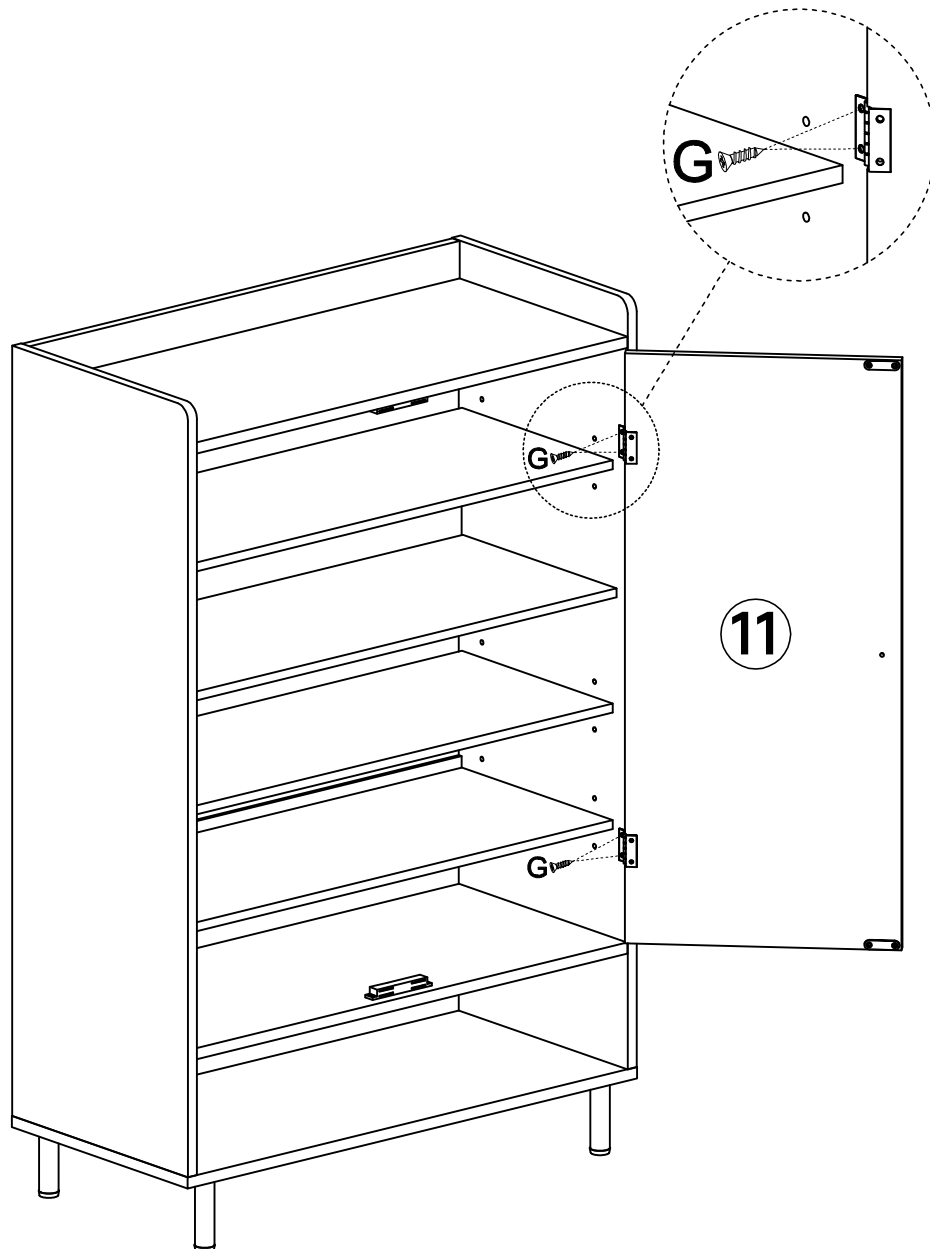

STEP 14



GX4

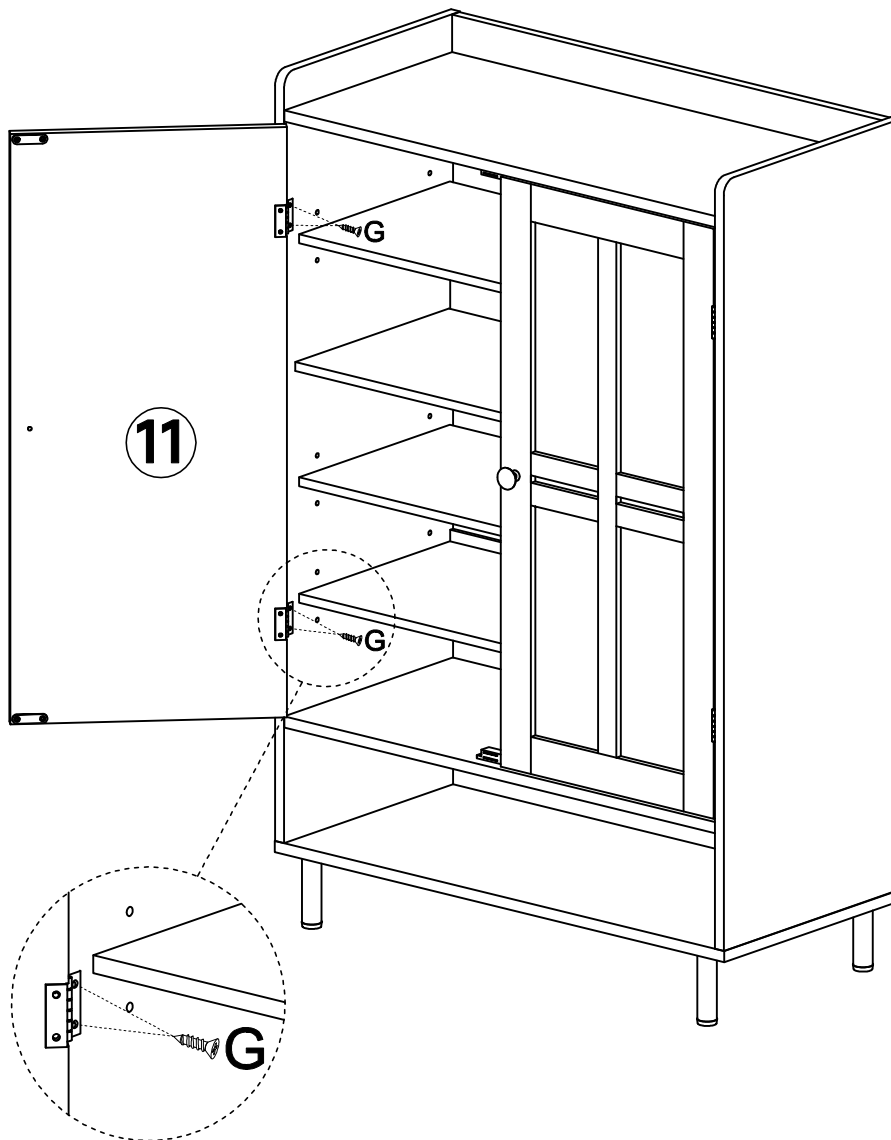

STEP 15




GX10



QX8




SX2

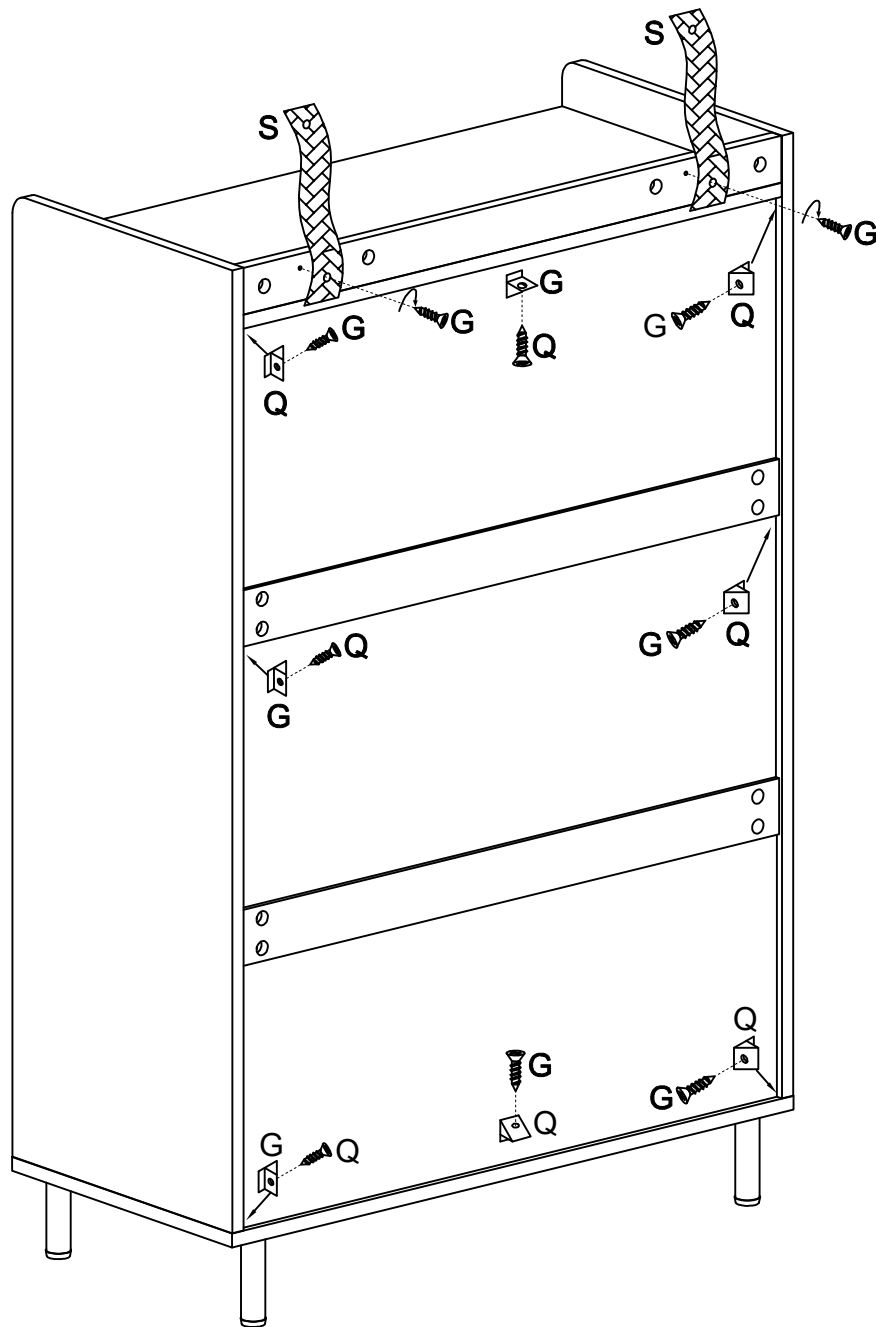

STEP 16



HX2



RX2

