
SKU:S022

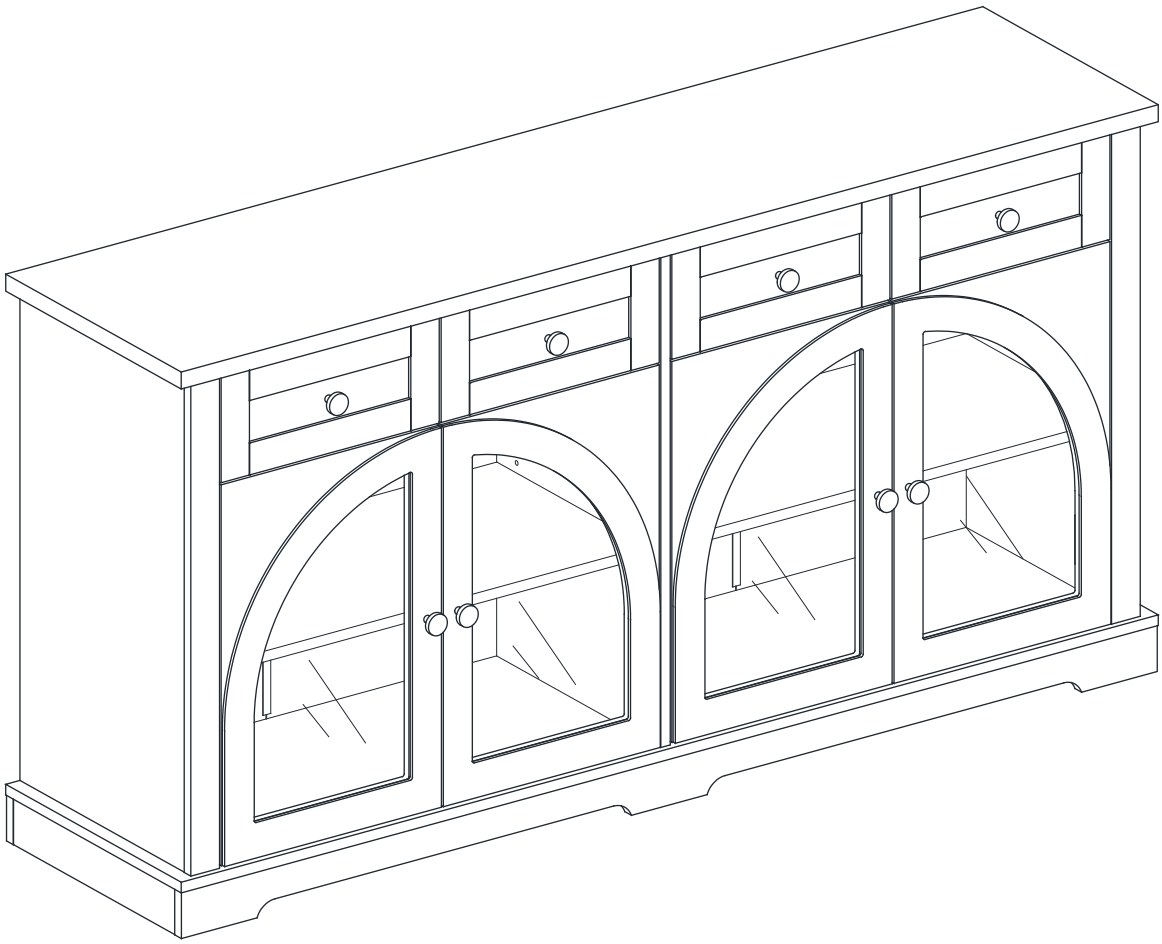


WARNING




This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.


1.Note:This is not clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.
2.All cabinets come with TRO,stainless steel or our "L-Bracket"when shipped.


SKU:S022

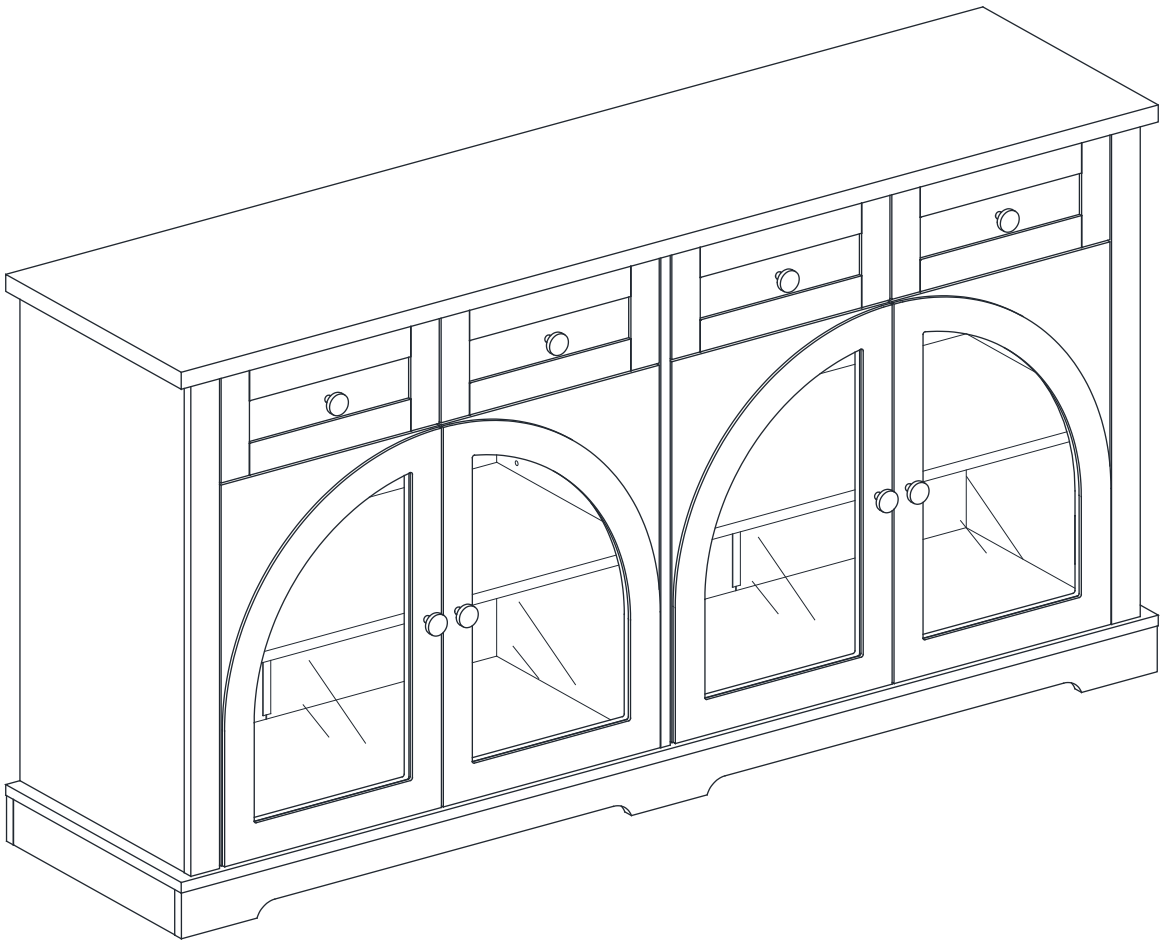

















Part List

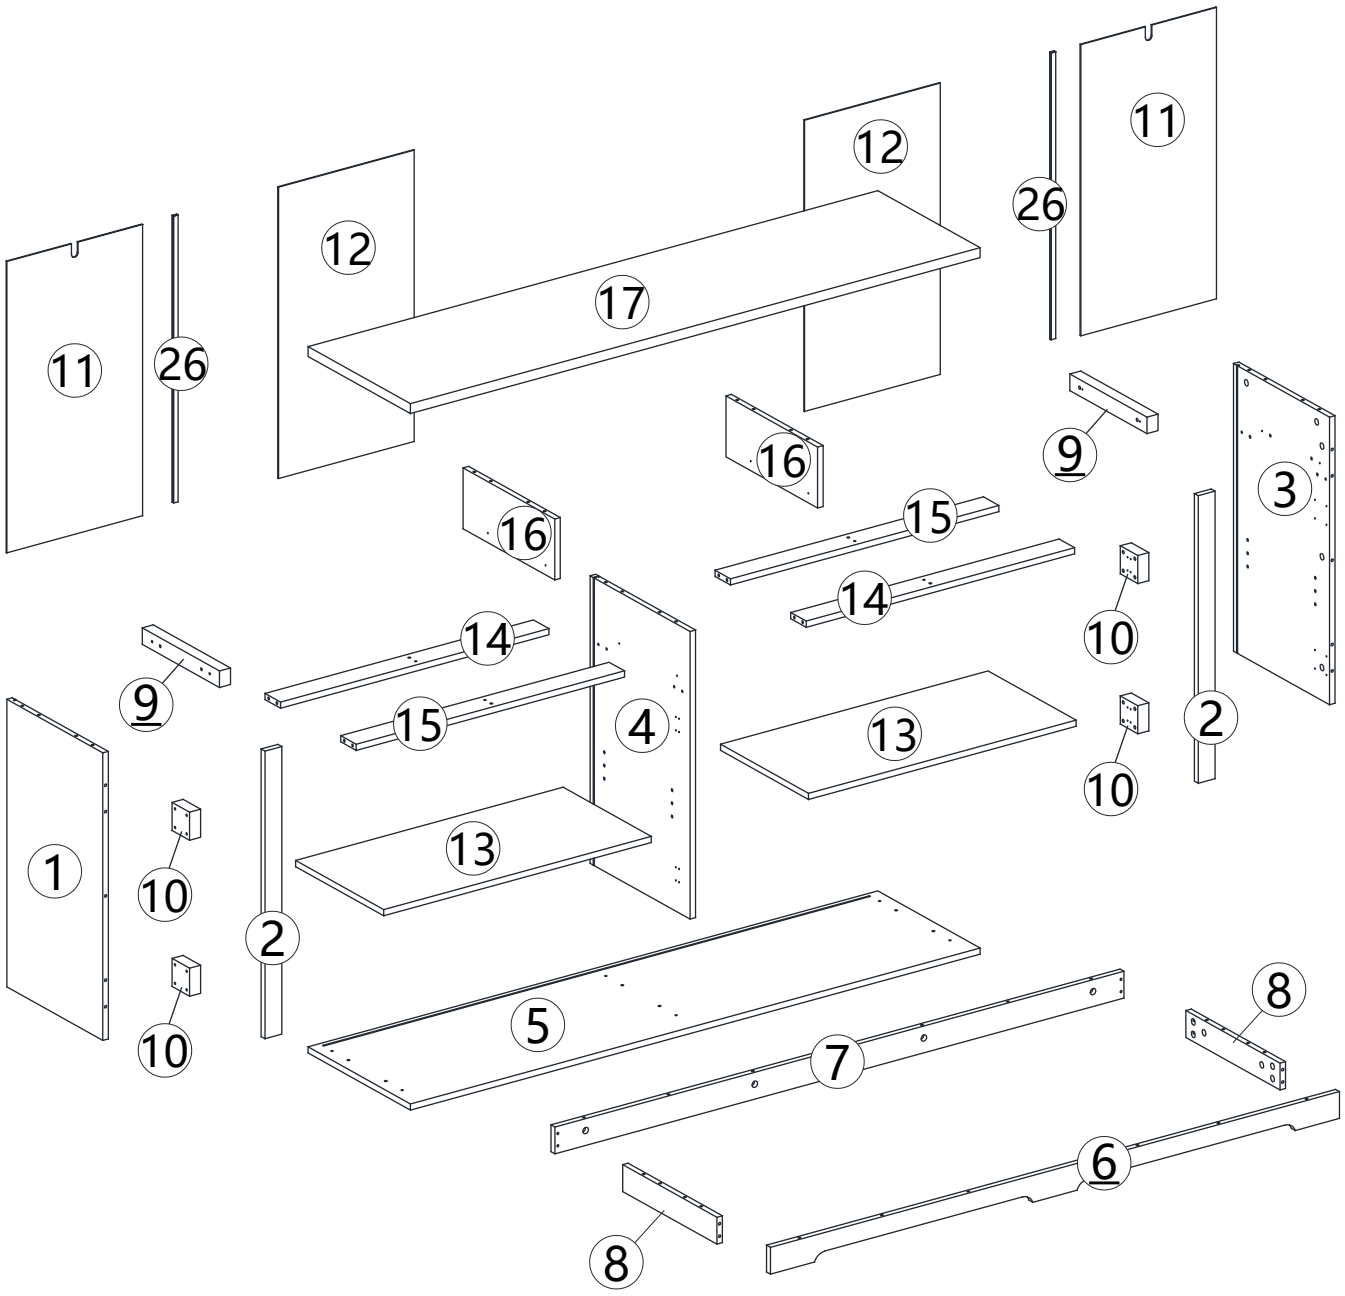
11
26
12
12
17
16
16
9
15
14
10
3
2
14
9
15
4
13
10
2
1
10
13
10
2
5
7
8
8
6








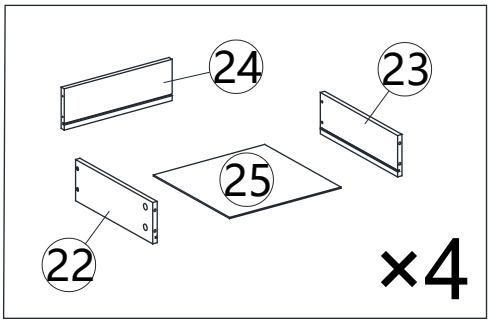

24
23
25
22
×4



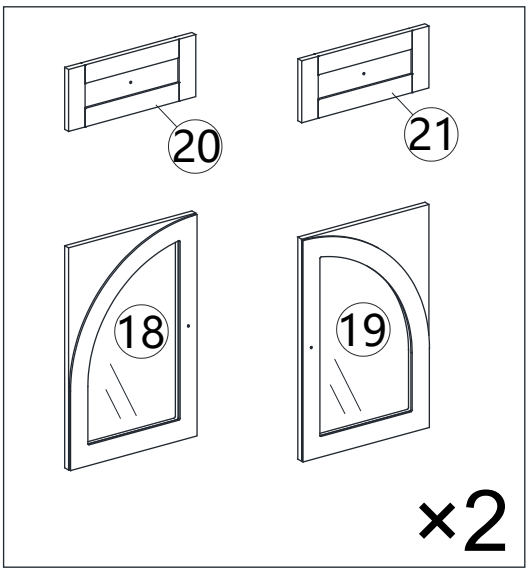

20
21
18
19
×2





Box A

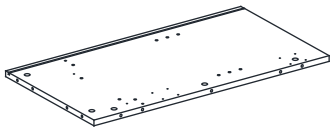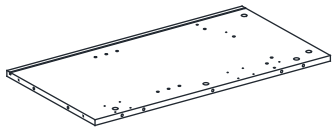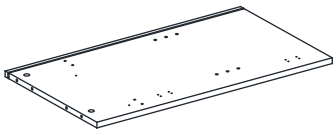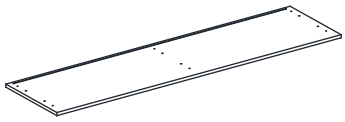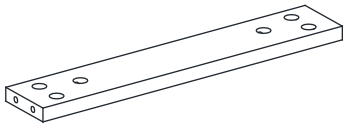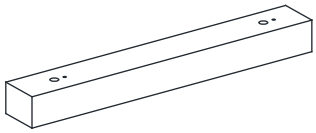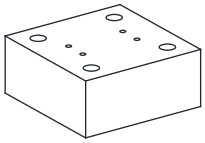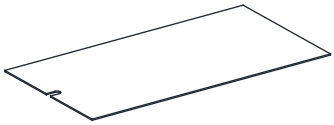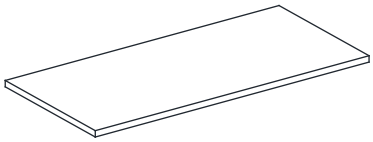
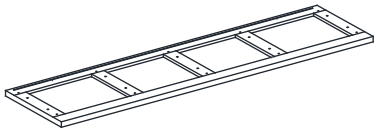
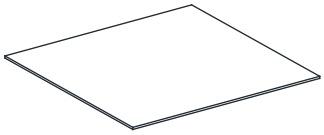
1  ×1PC	2  ×2PCS	3  ×1PC
4  ×1PC	5  ×1PC	6  ×1PC
7  ×1PC	8  ×2PCS	9  ×2PCS
10  ×4PCS	11  ×2PCS	12  ×2PCS
13  ×2PCS	14  ×2PCS	15  ×2PCS
17  ×1PC	25  ×4PCS	26  ×2PCS




Box B

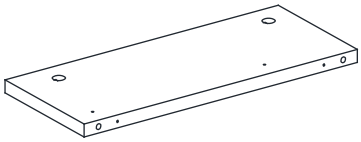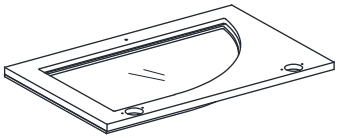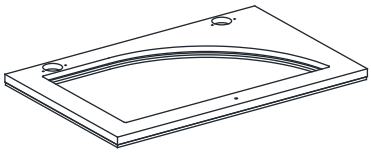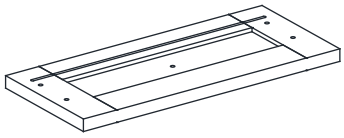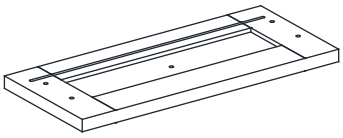
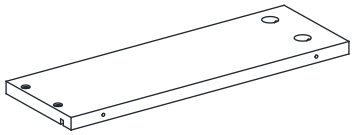
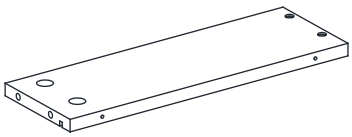
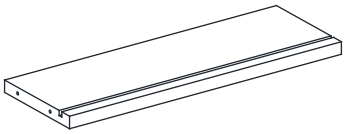
16  ×2PCS	18  ×2PCS	19  ×2PCS
20  ×2PCS	21  ×2PCS	22  ×4PCS
23  ×4PCS	24  ×4PCS	

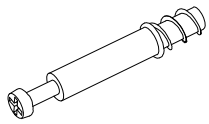A	×64	B	×64	C	×40	D	×32
							
Ø6*35mm		Ø15*10mm		Ø6*30mm		Ø7*3.5*12mm	

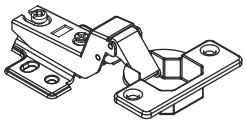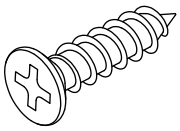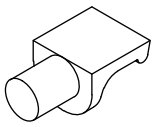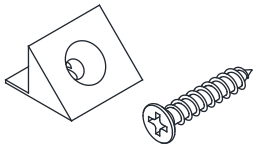
E	×8	F	×48	G	×8	H	×16
							
		Ø7.2*3.5*14mm				Ø3*16mm	

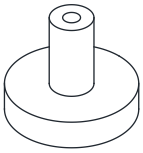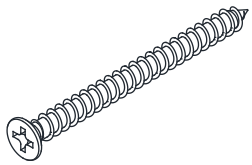
I	×8	J	×4	K	×4	L	×10
							
		M4*10mm		M4*25mm		Ø4*40mm	

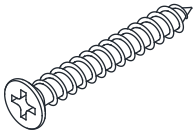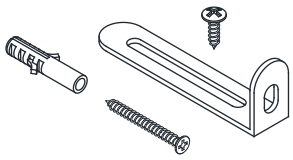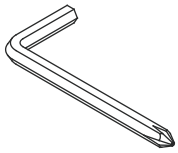
M	×36	N	×10	O	×2	P	×1
							
Ø4*30mm		40*12*3mm				S4	

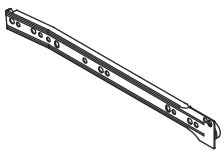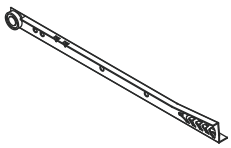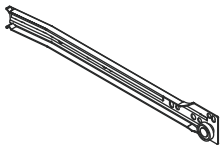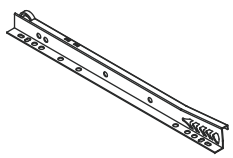CL	×4	DL	×4	CR	×4	DR	×4
							
300mm		300mm		300mm		300mm	


Step 1

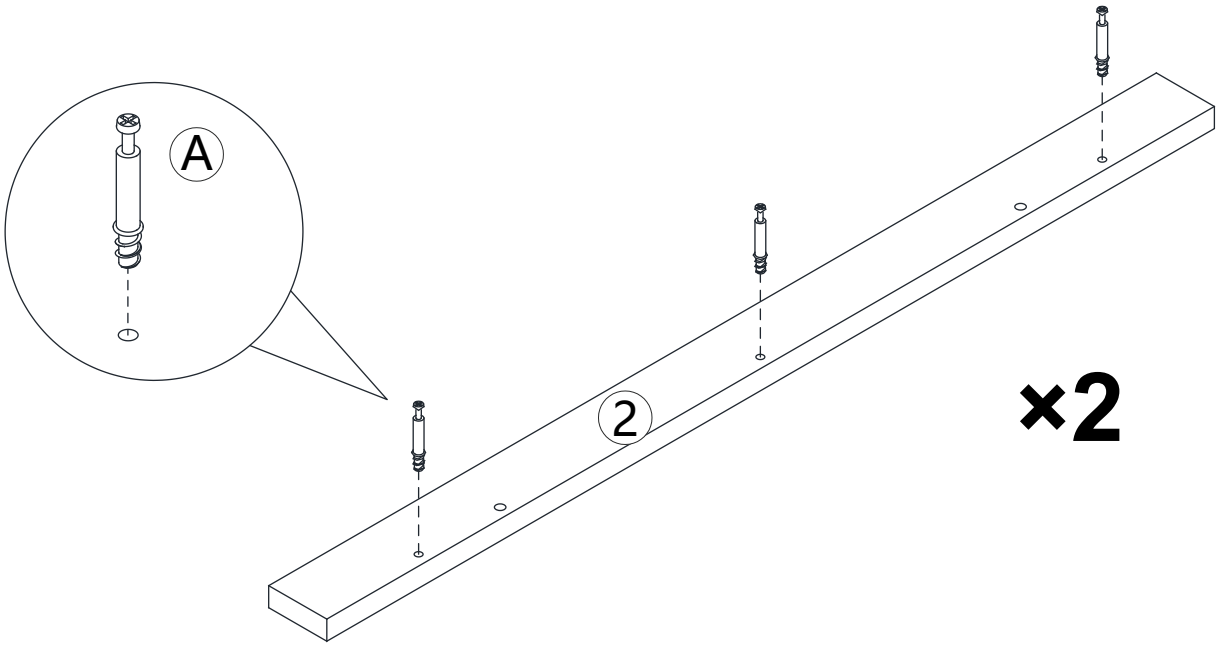


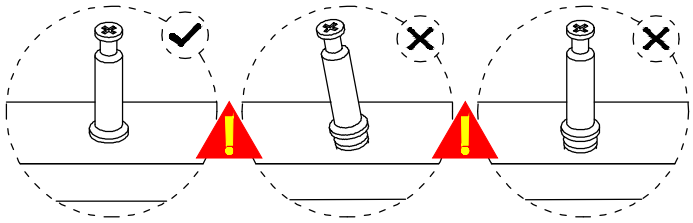


A	×6
	
Ø6*35mm	

Step 2

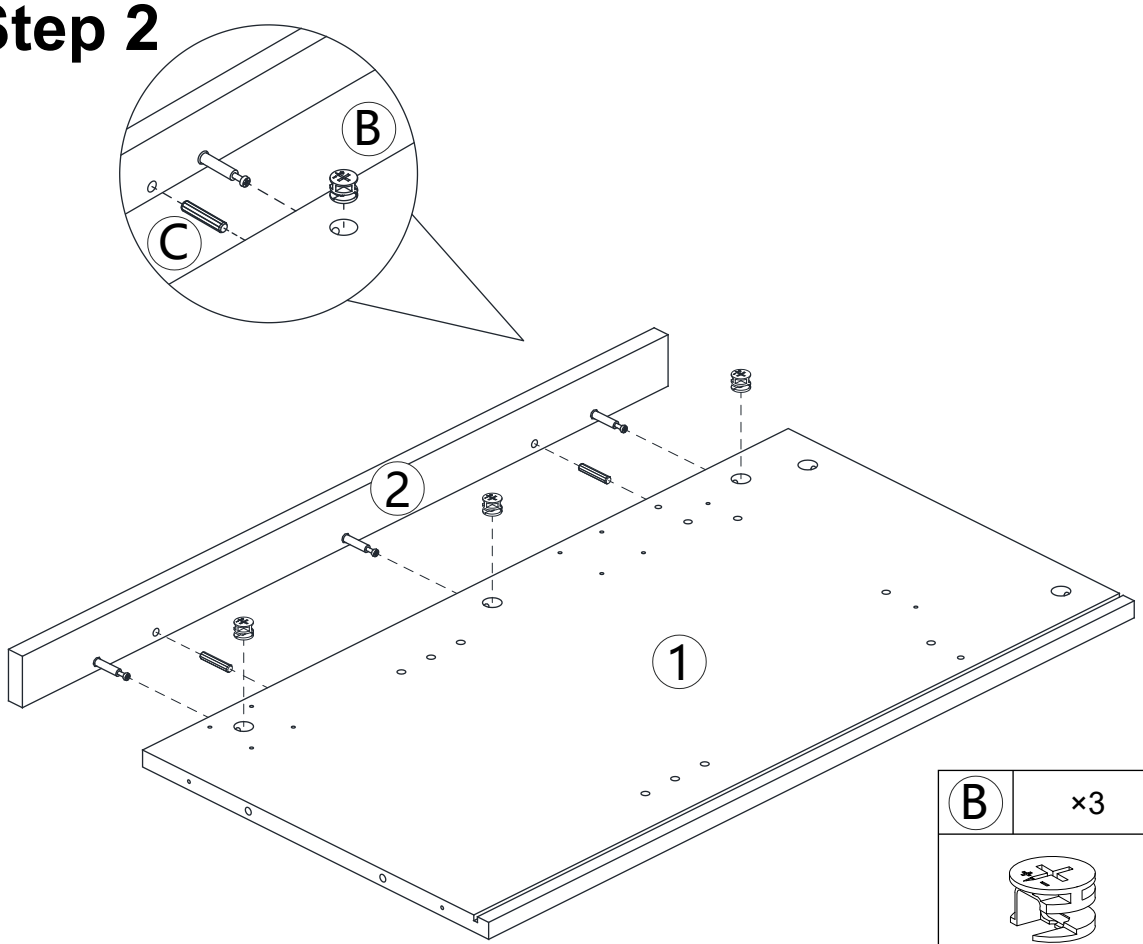


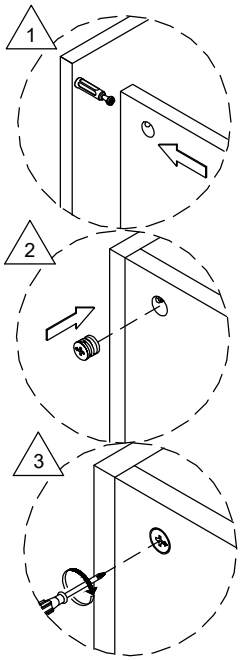



B	×3
Ø15*10mm	

C	×2
	
Ø6*30mm	


Step 3

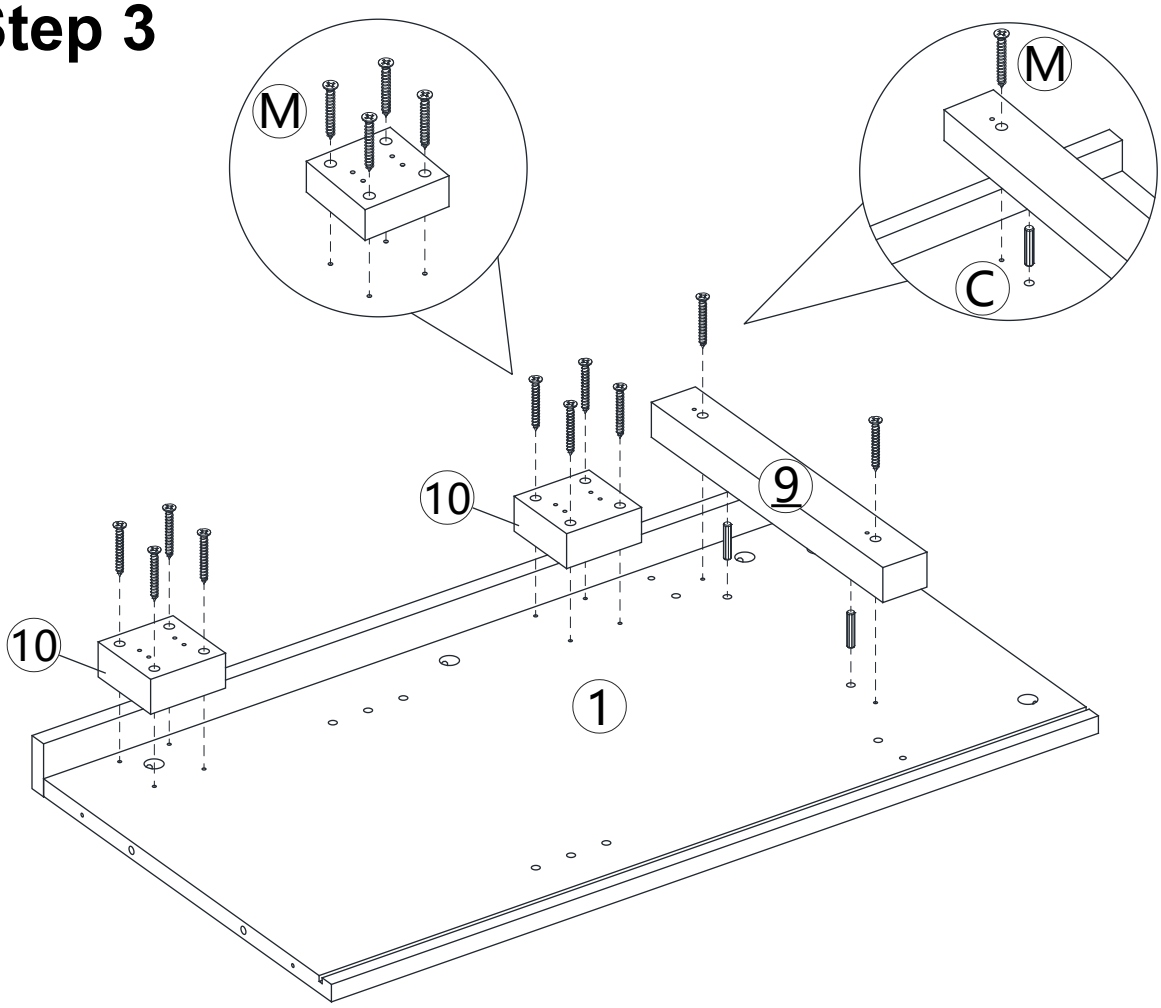



C	×2
	
Ø6*30mm	

M	×10
	
4*30mm	


Step 4

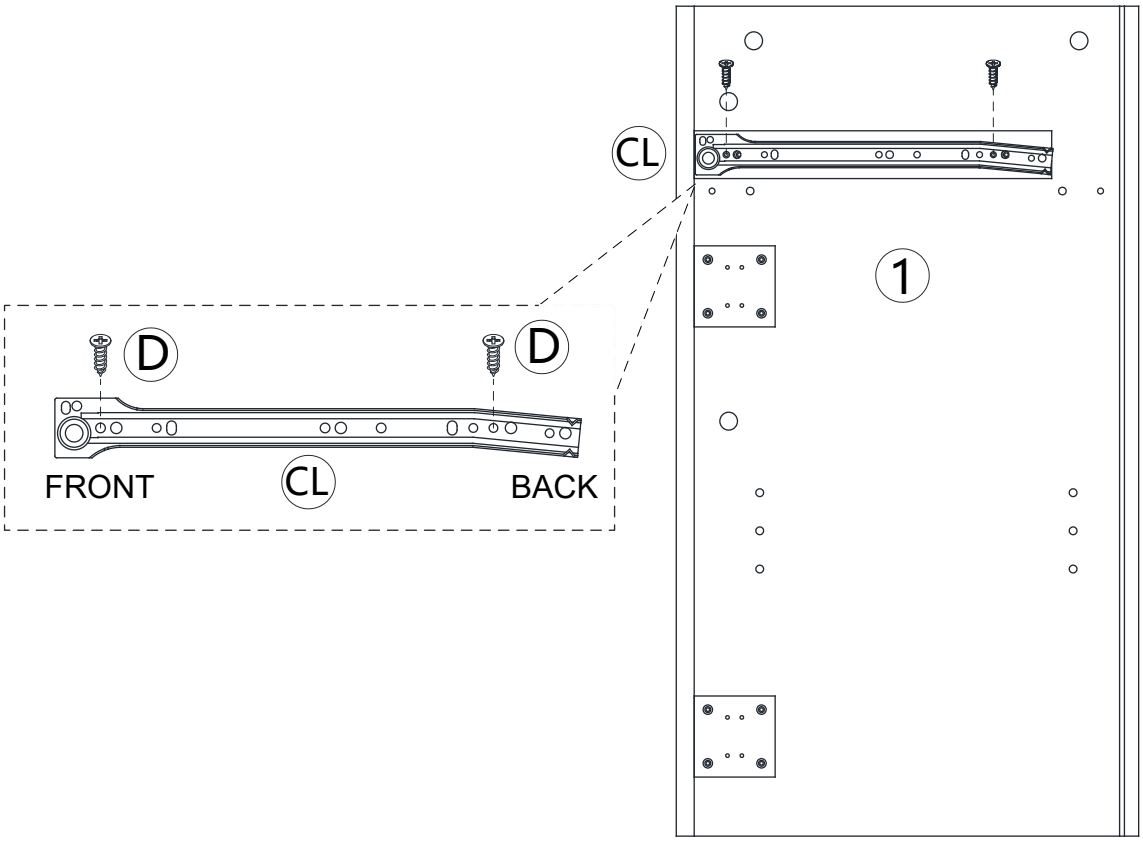


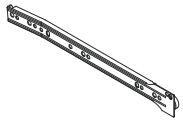
CL	×1
	
300mm	

D	×2
	
7*3.5*12mm	


Step 5

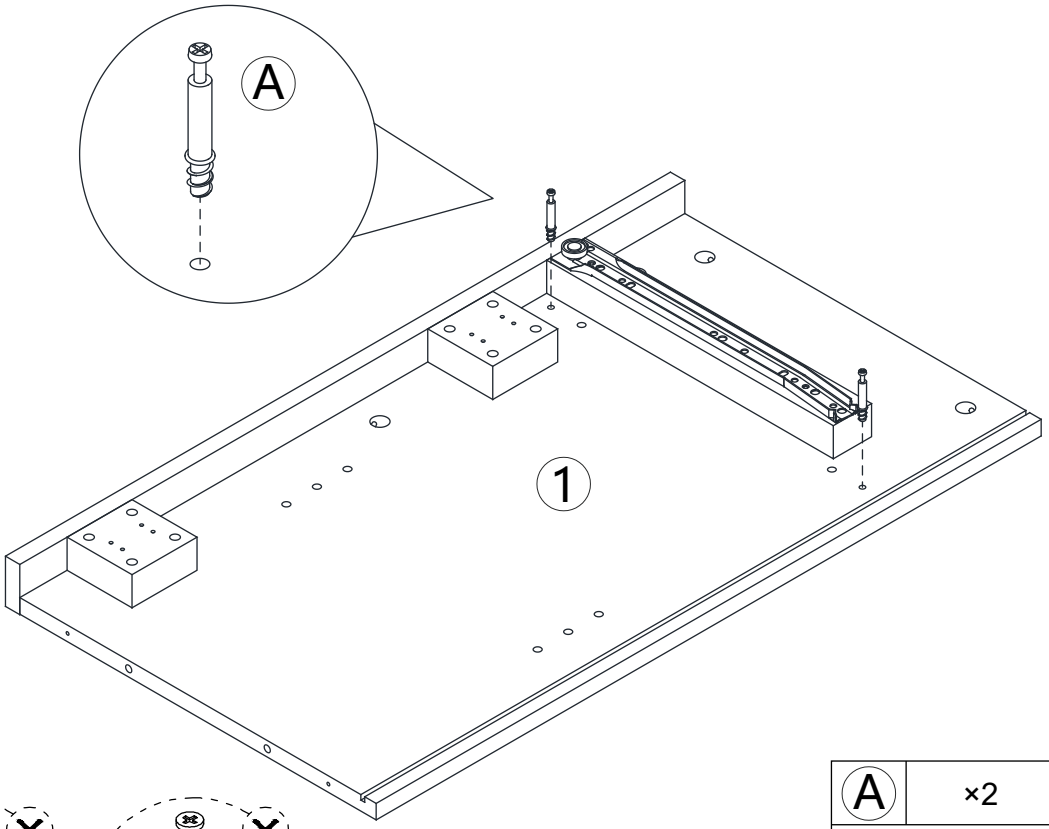


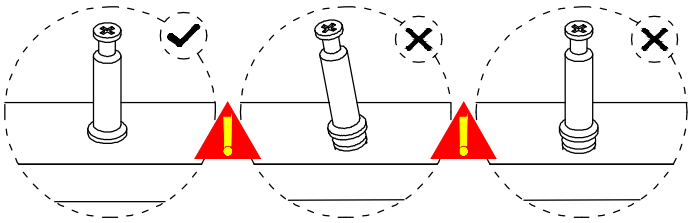


A	×2
	
Ø6*35mm	


Step 6

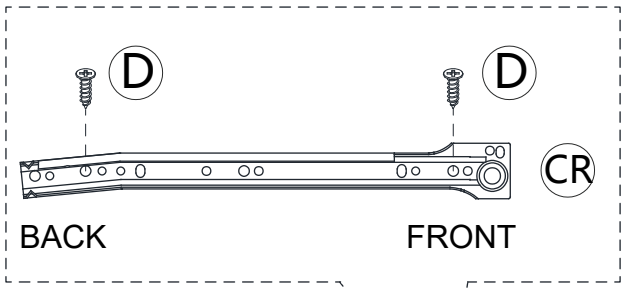


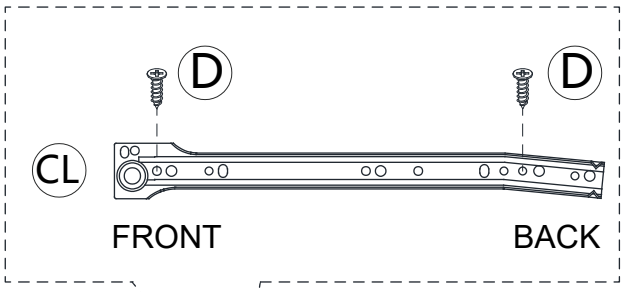


×2

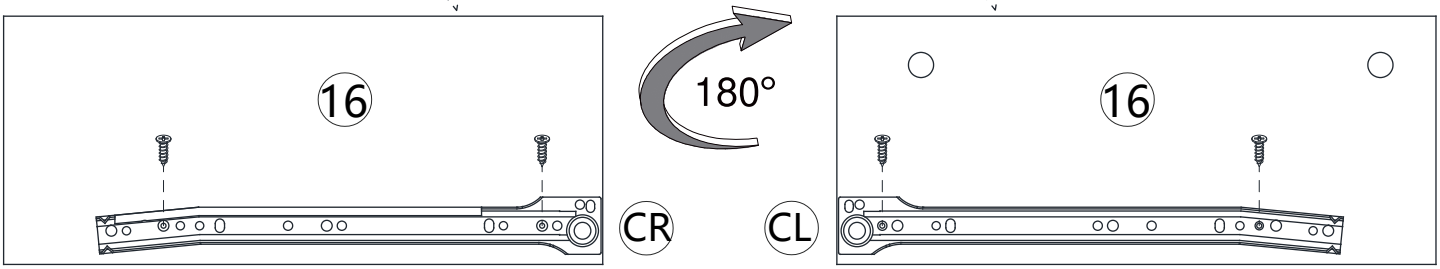


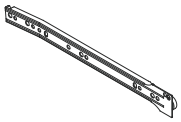
CL	×2
	
300mm	

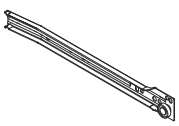
CR	×2
	
300mm	

D	×8
	
7*3.5*12mm	


Step 7

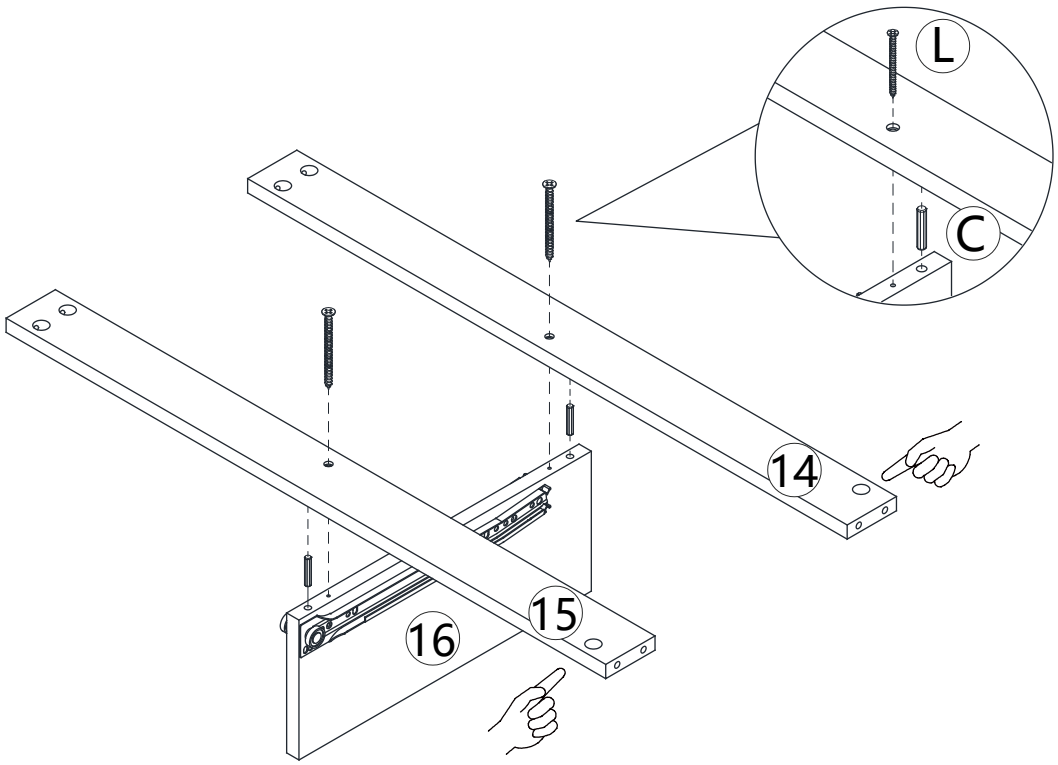


C	×2
	
Ø6*30mm	

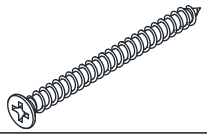
L	×2
	
Ø4*40mm	

Step 8

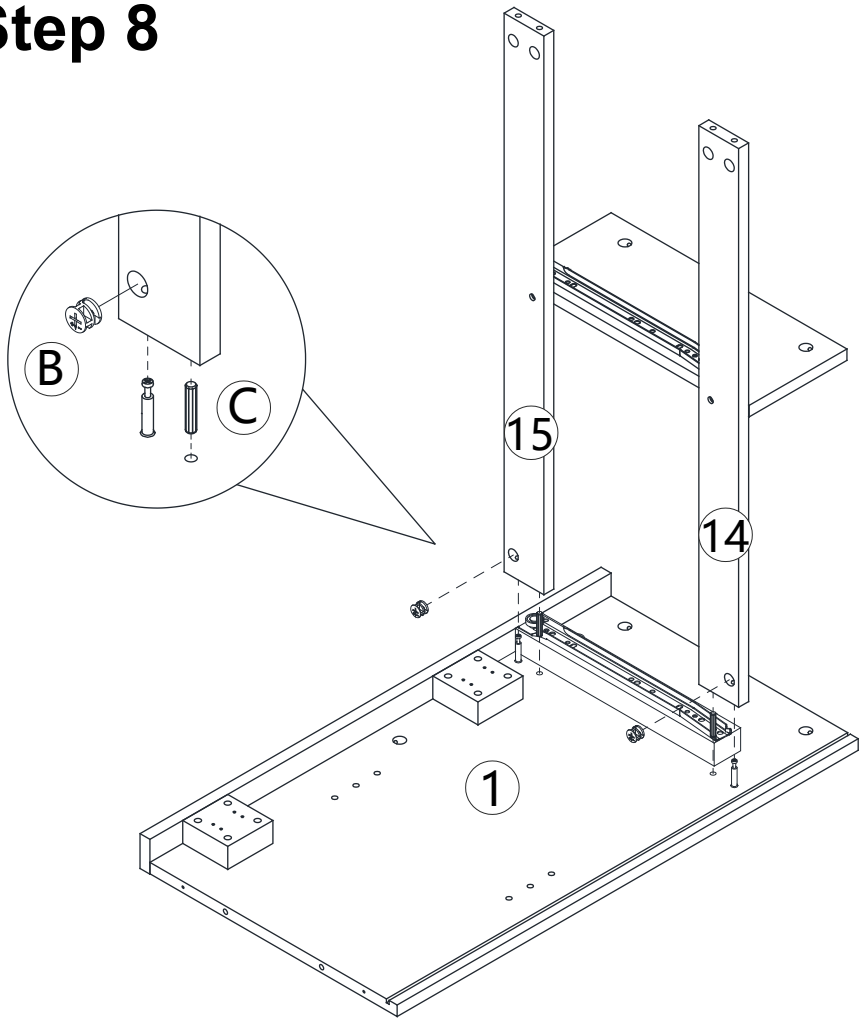


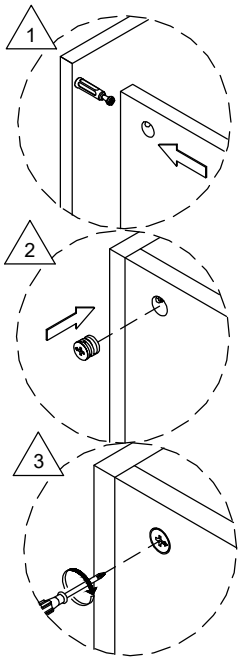

B	×2
	
Ø15*10mm	


C	×2
	
Ø6*30mm	


Step 9

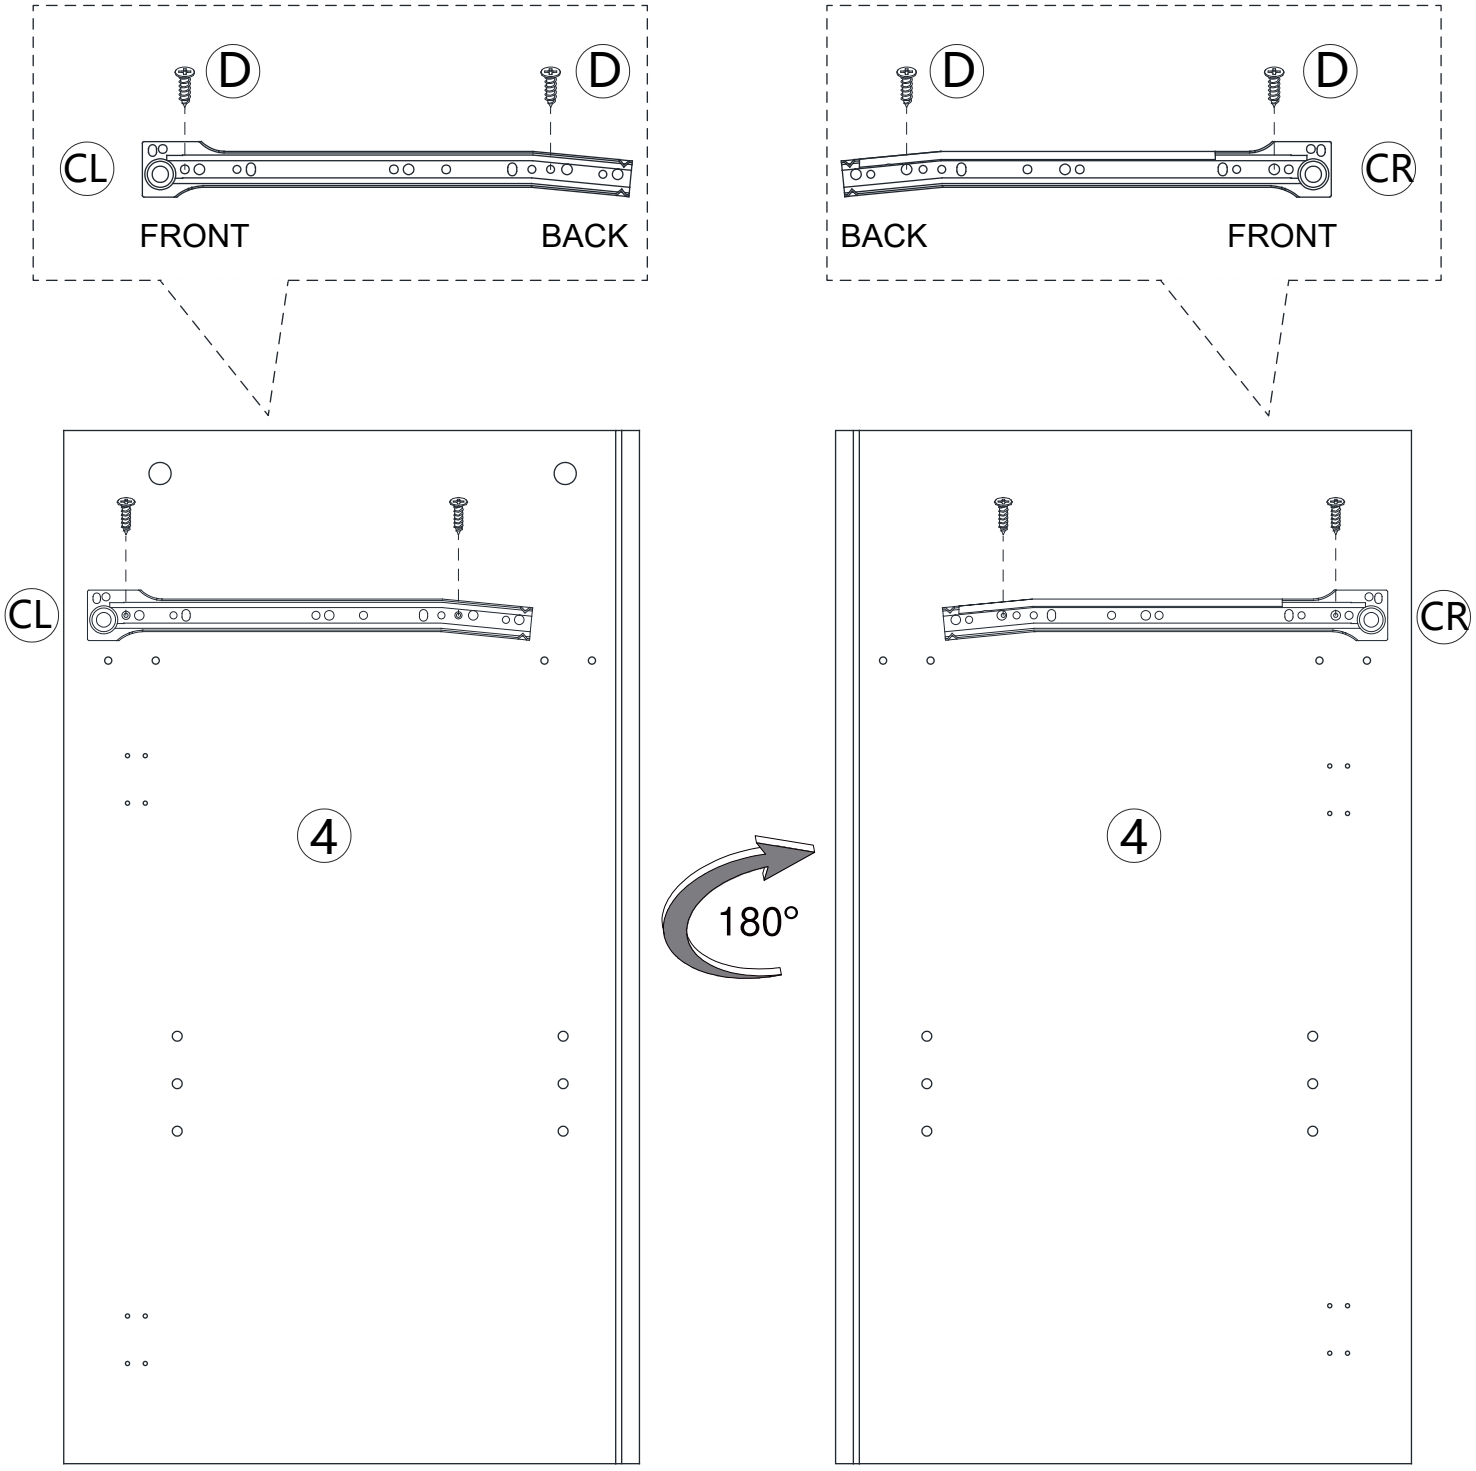


CL	×1	CR	×1	D	×4
300mm		300mm		7*3.5*12mm	


Step 10

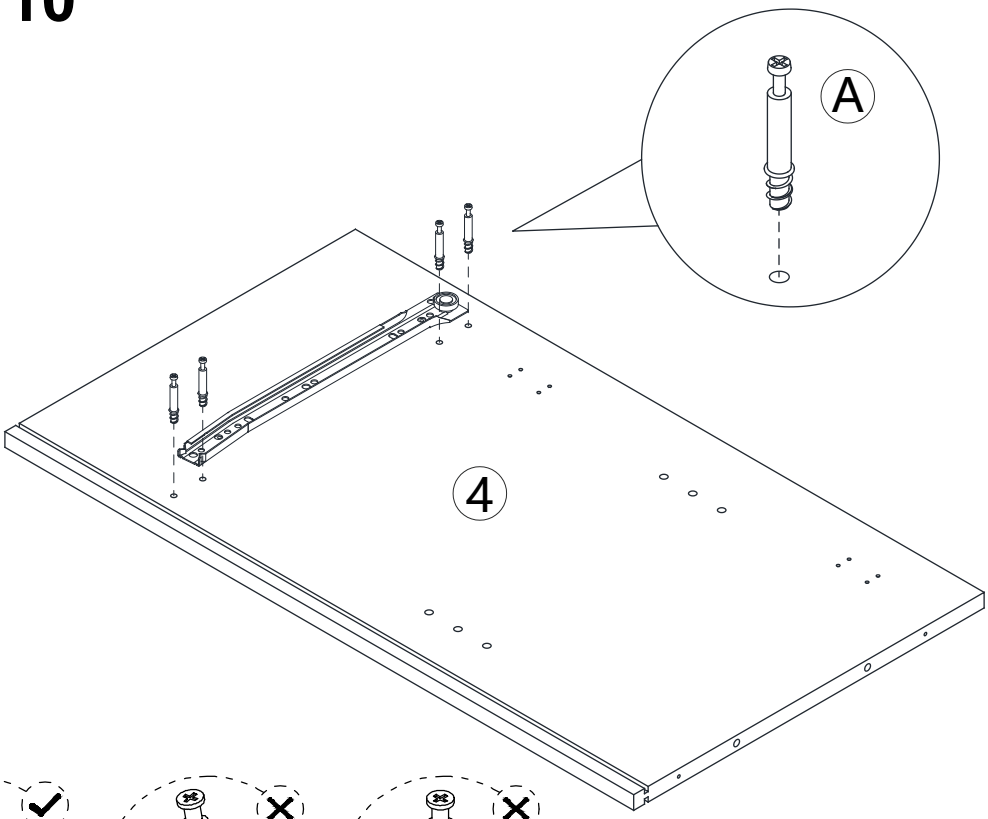


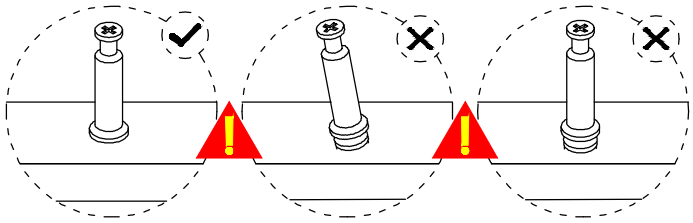

A	×4
	
Ø6*35mm	


Step 11

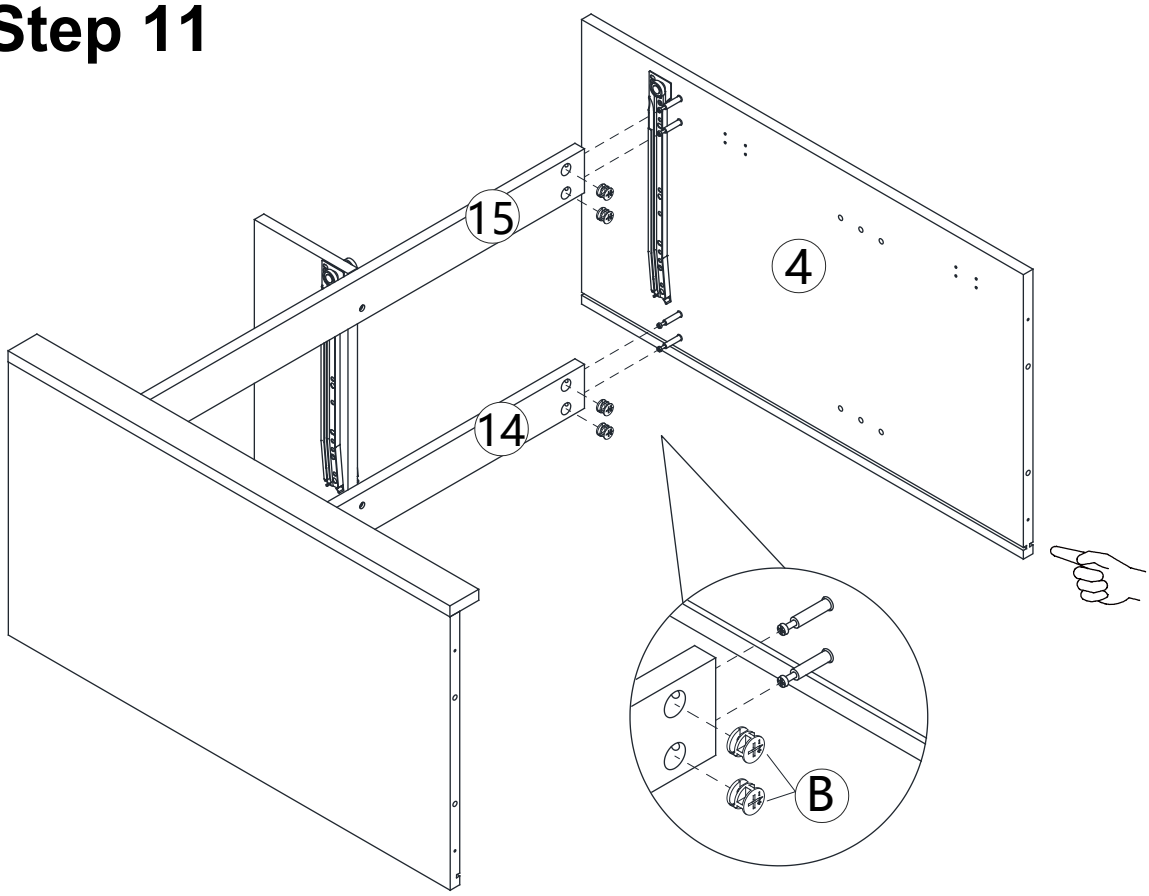


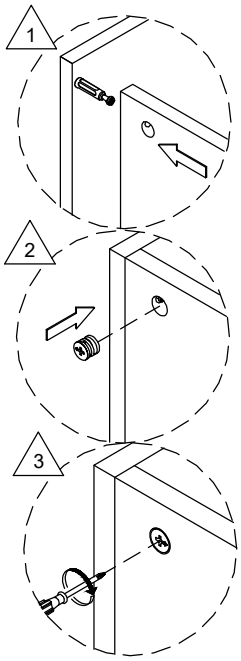


B	×4
	
Ø15*10mm	

Step 12

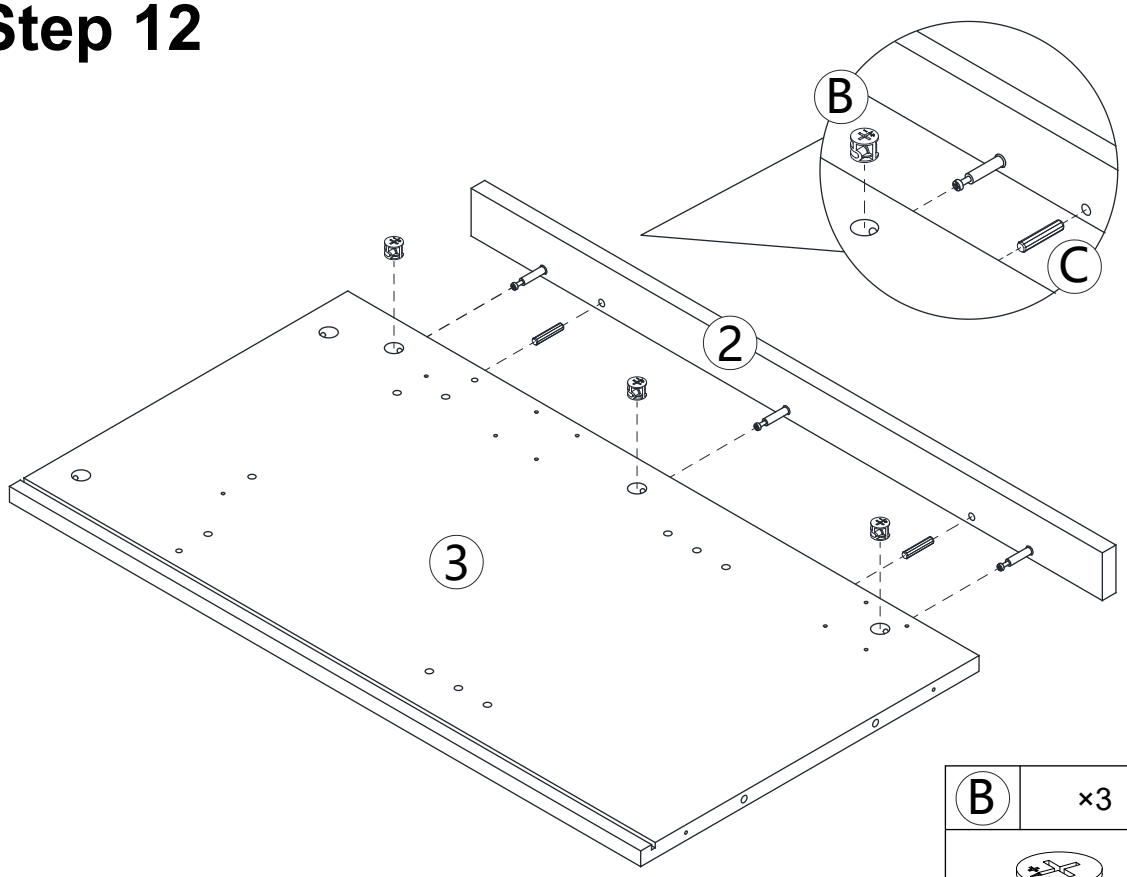


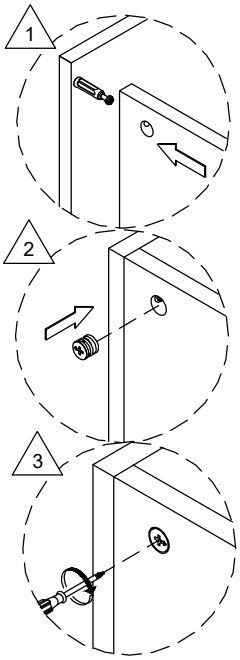



B	×3
	
Ø15*10mm	

C	×2
	
Ø6*30mm	


Step 13

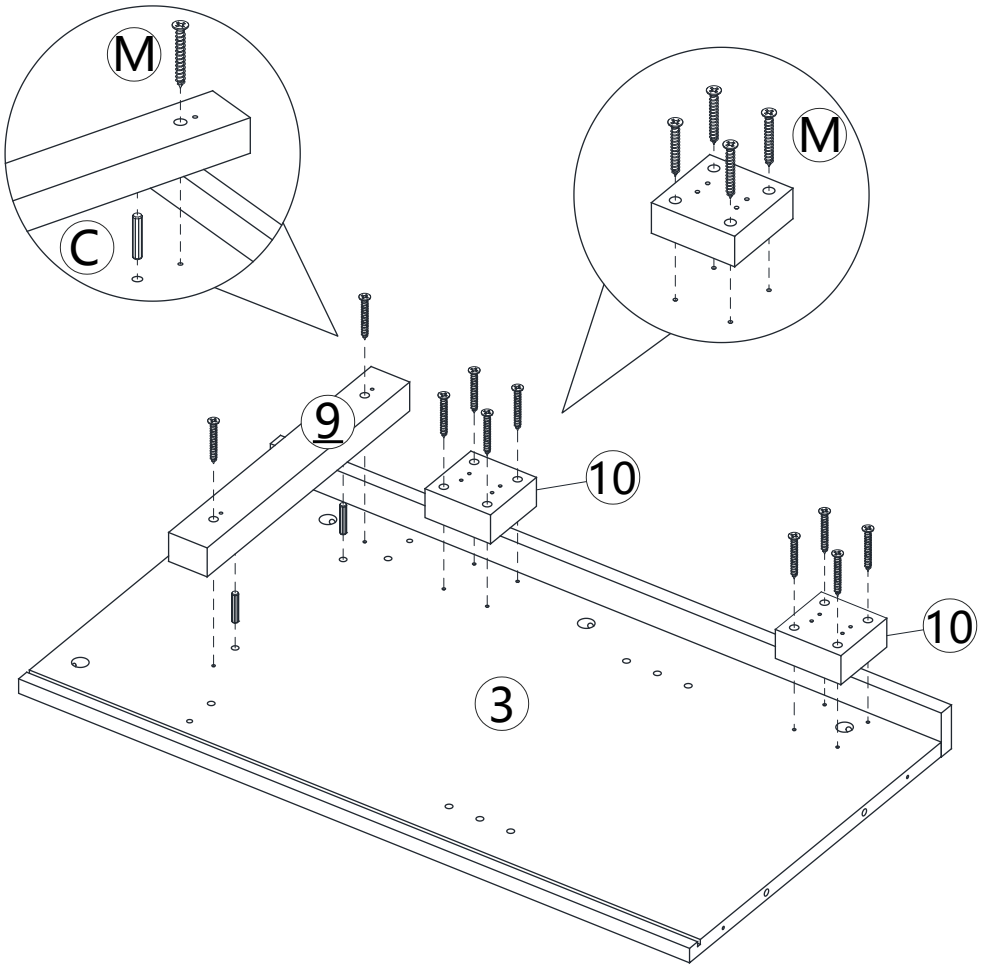



C	×2
	
Ø6*30mm	


M	×10
	
4*30mm	

Step 14

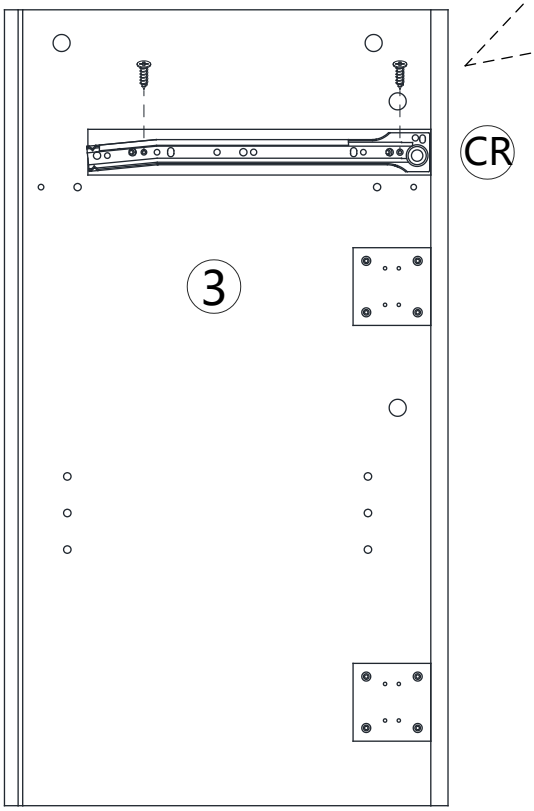


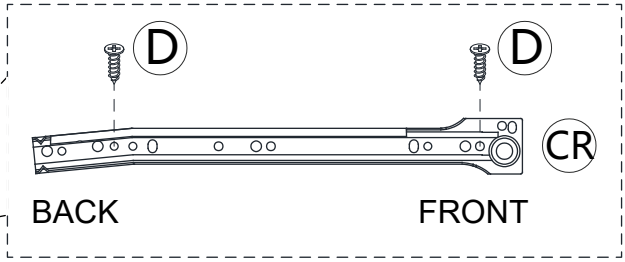


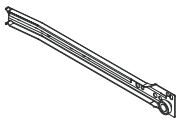
CR	×1
	
300mm	

D	×2
	
7*3.5*12mm	


Step 15

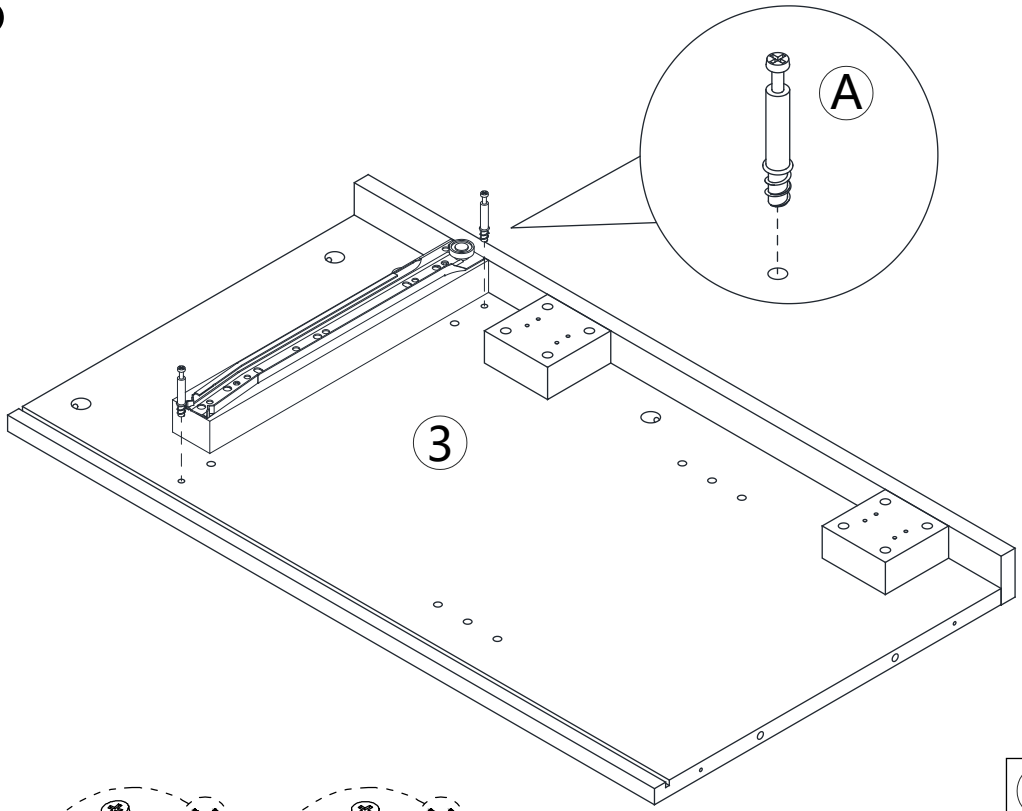


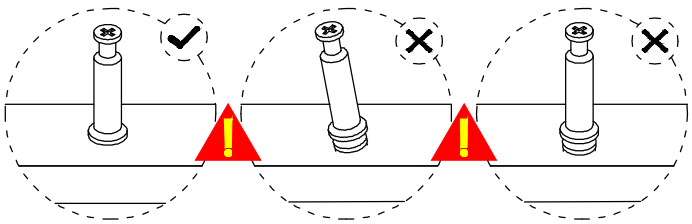


A	×2
	
Ø6*35mm	


Step 16

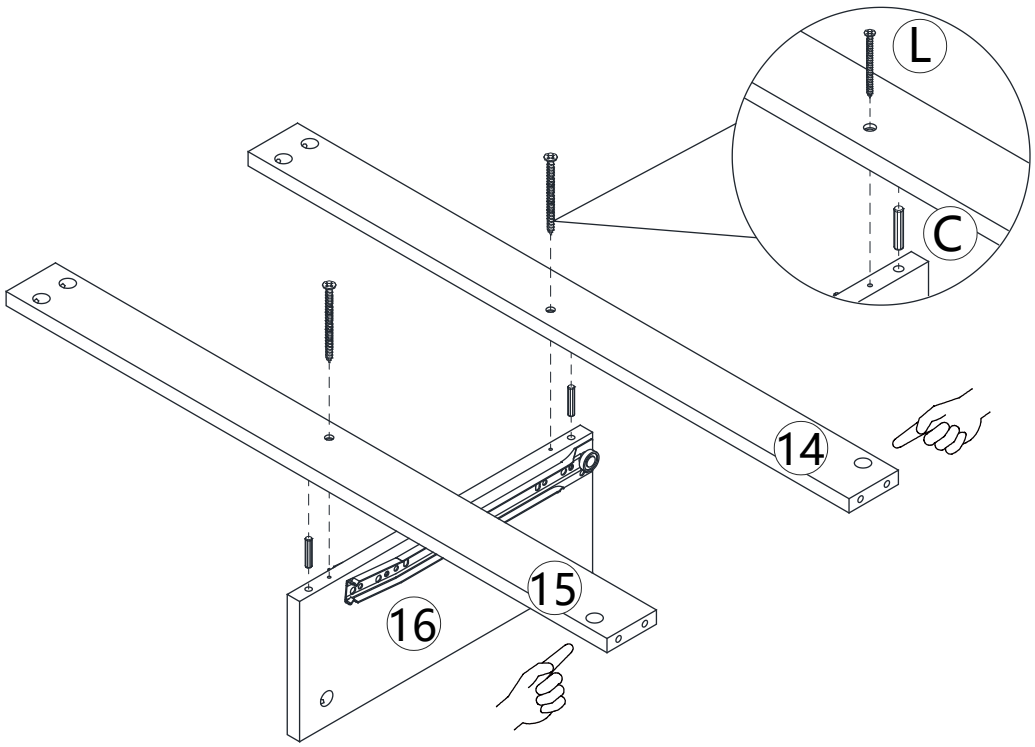


C	×2
	
Ø6*30mm	

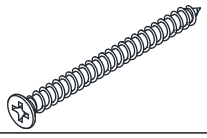
L	×2
	
Ø4*40mm	

Step 17

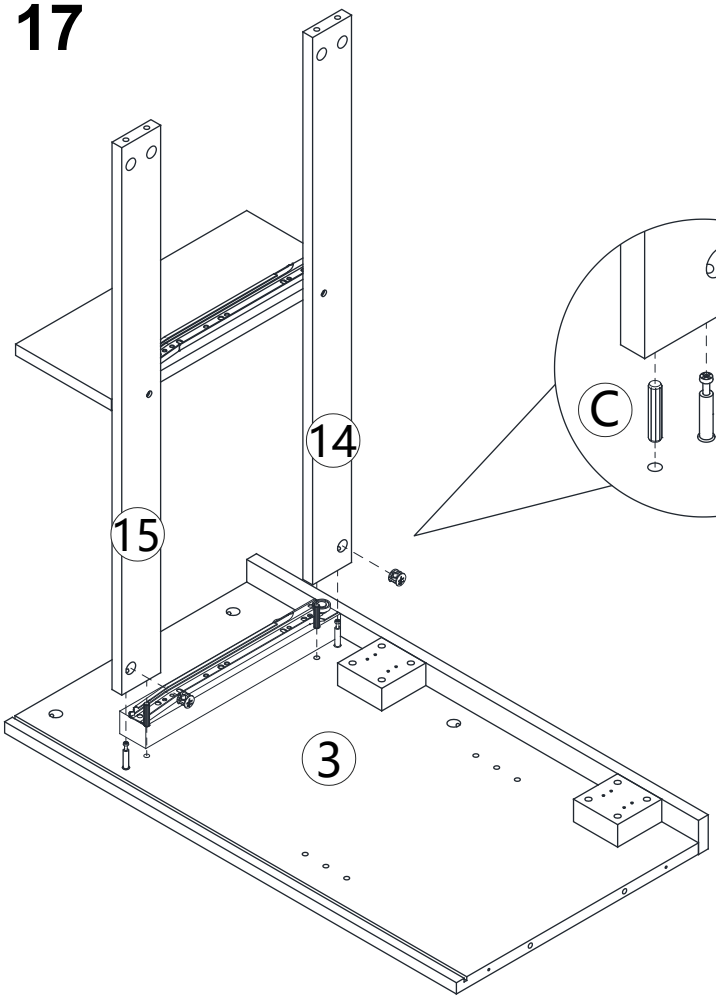


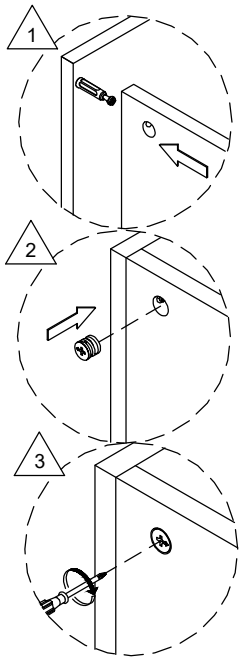



B	×2
	
Ø15*10mm	


C	×2
	
Ø6*30mm	

Step 18

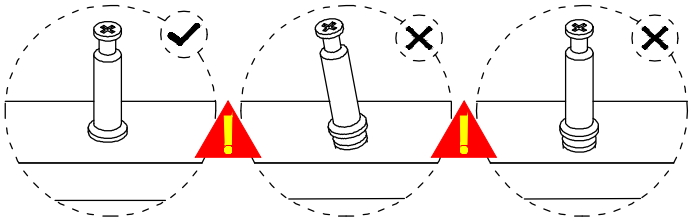


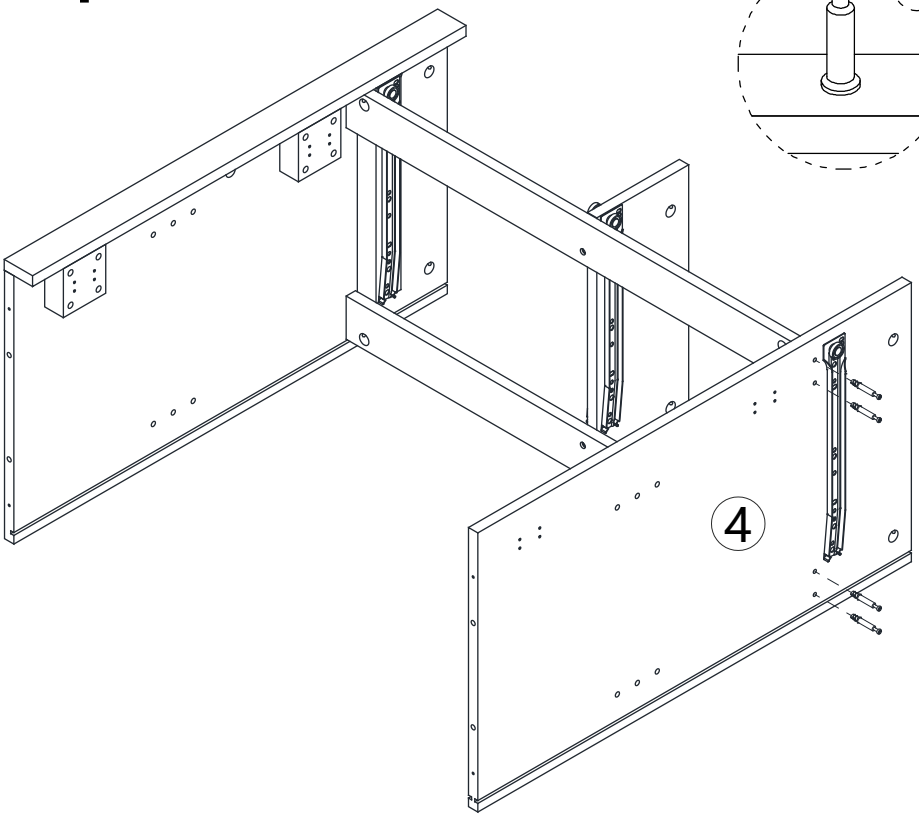


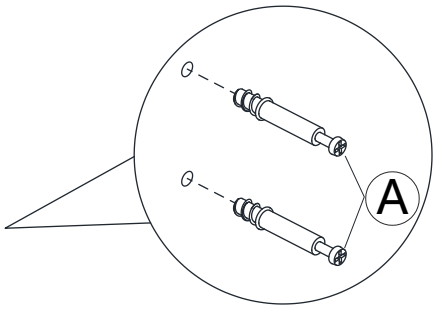

A	×4
	
Ø6*35mm	


Step 19

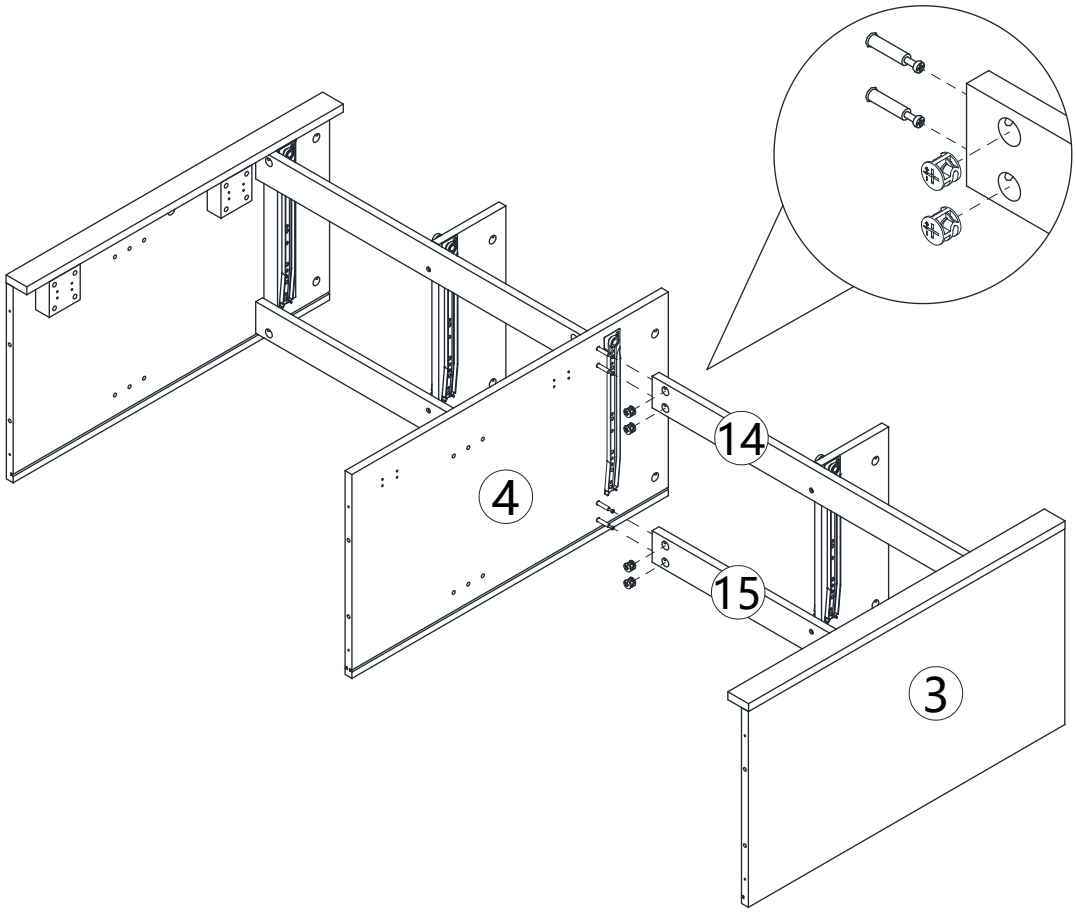


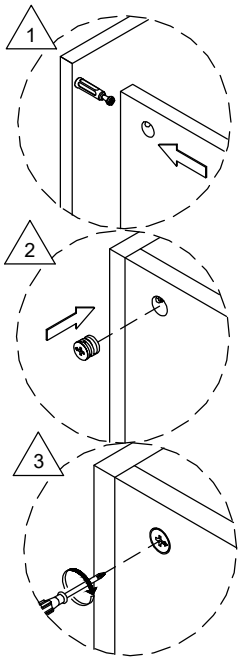


B	×4
	
Ø15*10mm	


Step 20

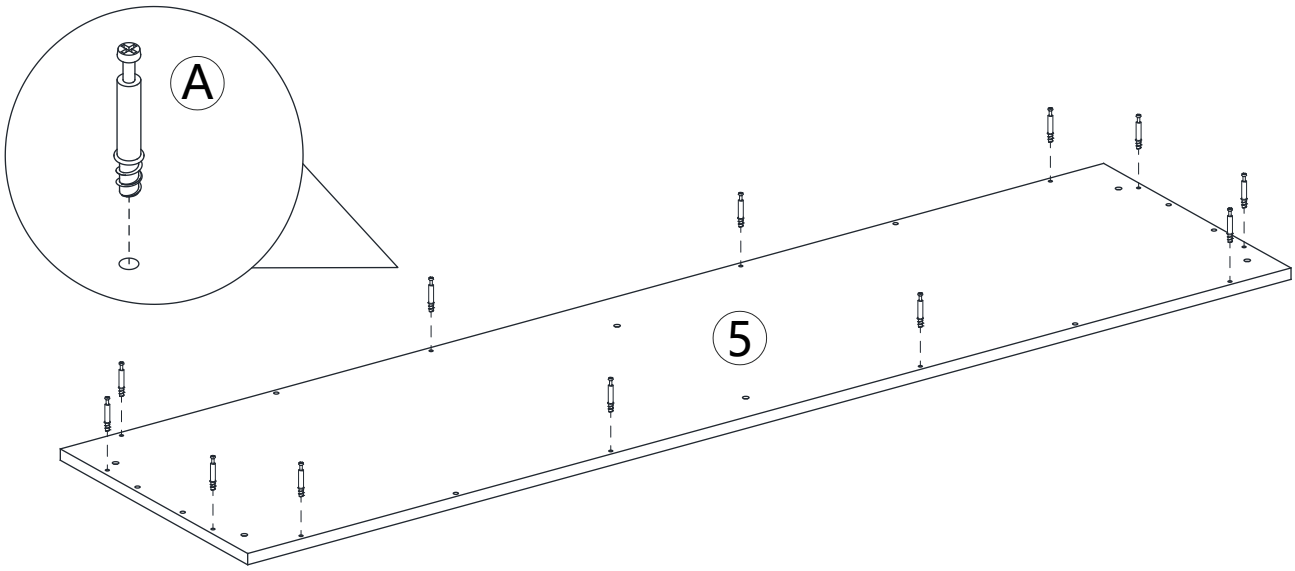

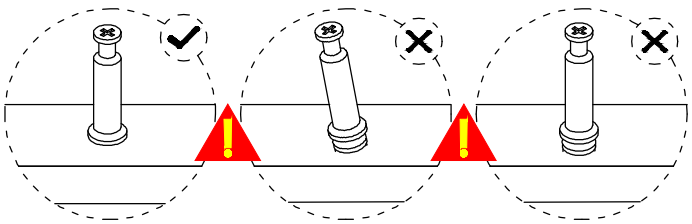



A	×12
	
Ø6*35mm	


Step 21

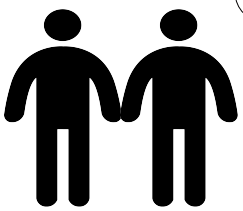


Two people are needed to install it

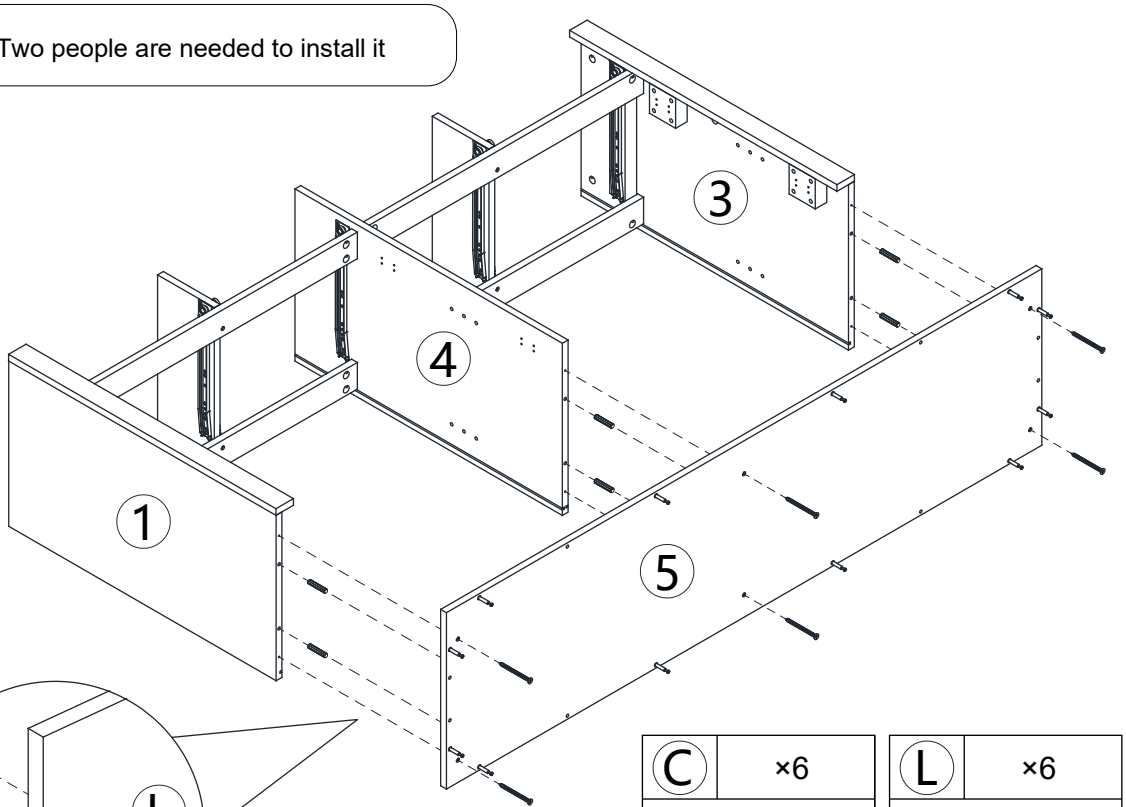


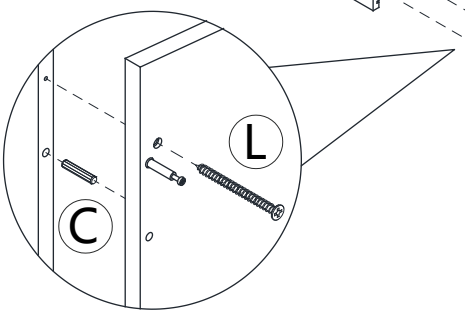



C	×6
	
Ø6*30mm	

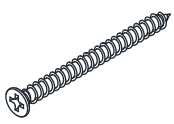L	×6
	
Ø4*40mm	


Step 22

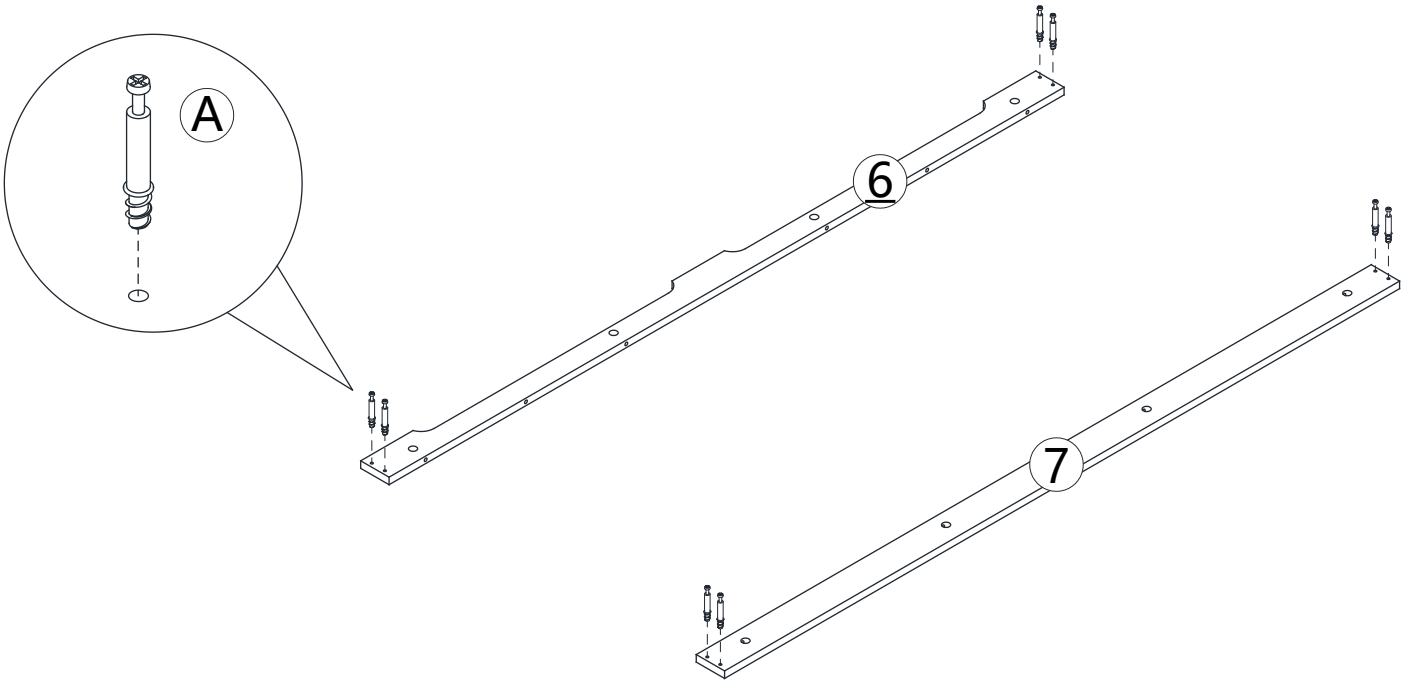


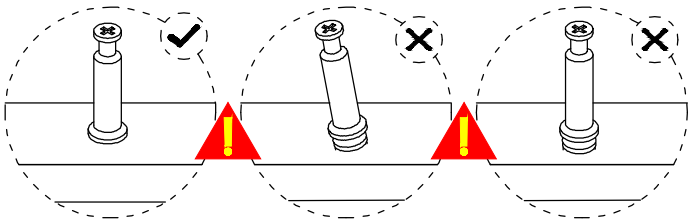

A	×8
	
Ø6*35mm	

Step 23

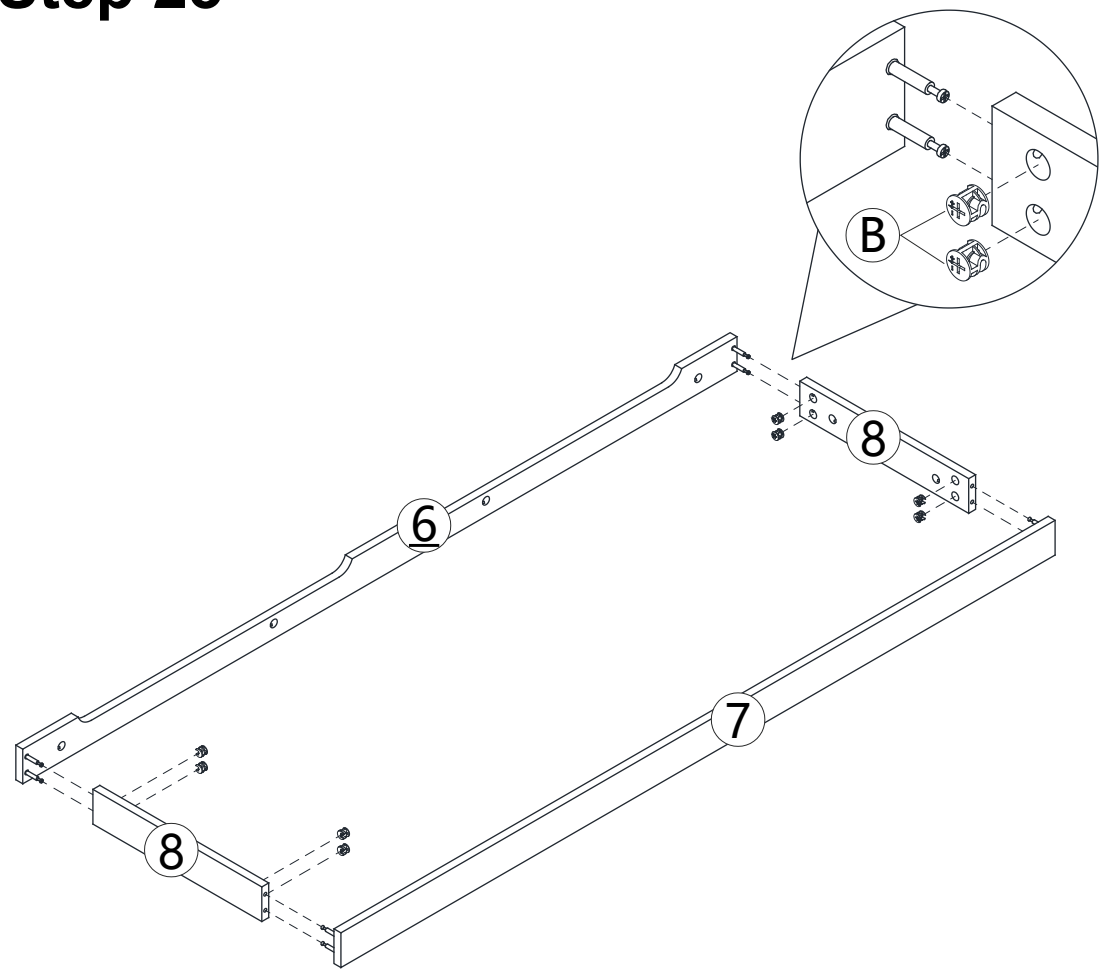

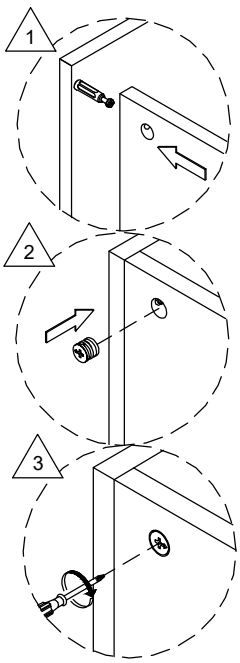

B	×8
	
Ø15*10mm	


Step 24

Step 1




Note: Please remove the protective film before installation

Step 2

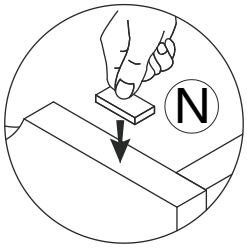


Note: Stick the felt pad to the bottom of the leg post.

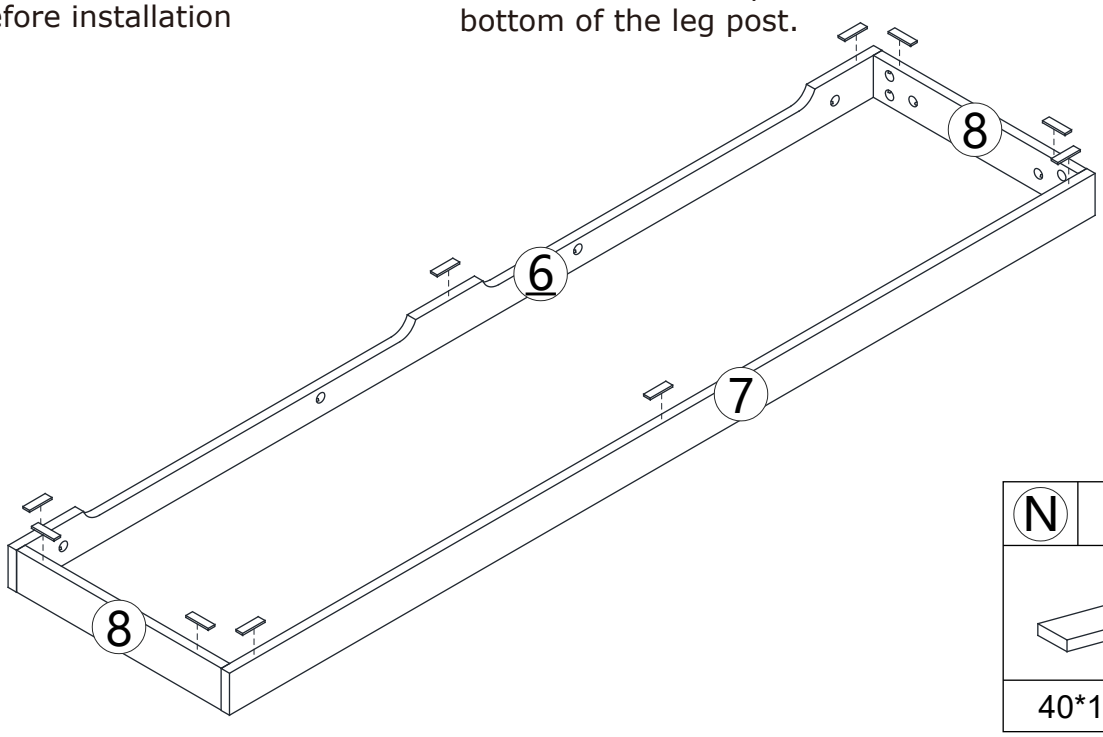



N	×10
	
40*12*3mm	

Step 25

Two people are needed to install it

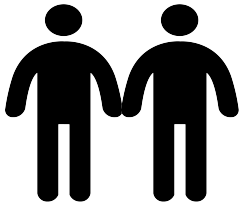

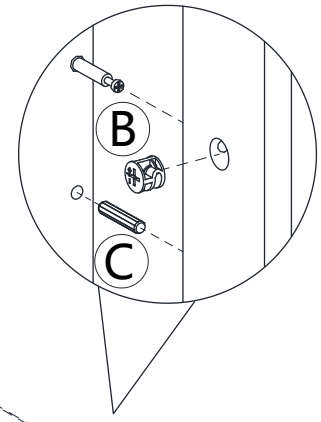


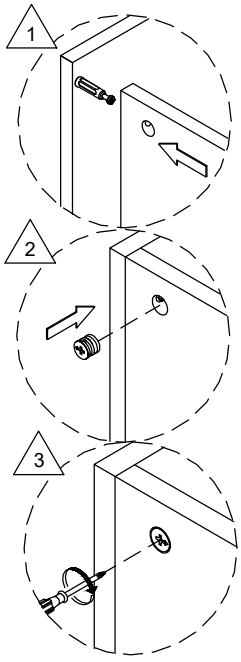


C	×8
Ø6*30mm	

B	×12
	
Ø15*10mm	


Step 26

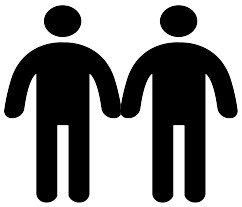


Two people are needed to install it

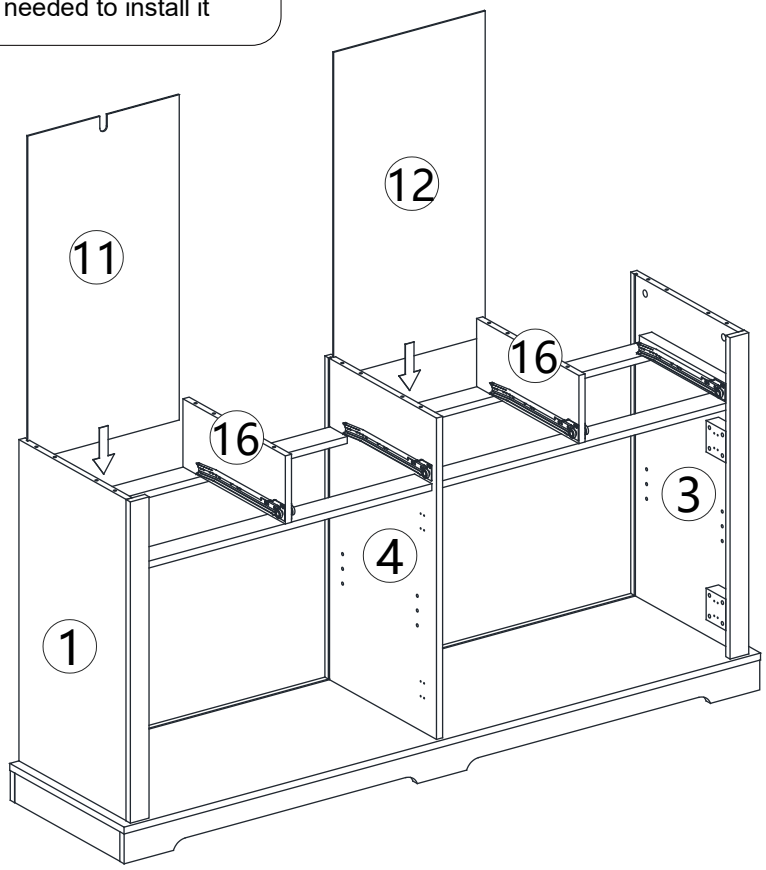

Step 27

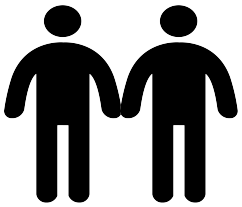


Two people are needed to install it

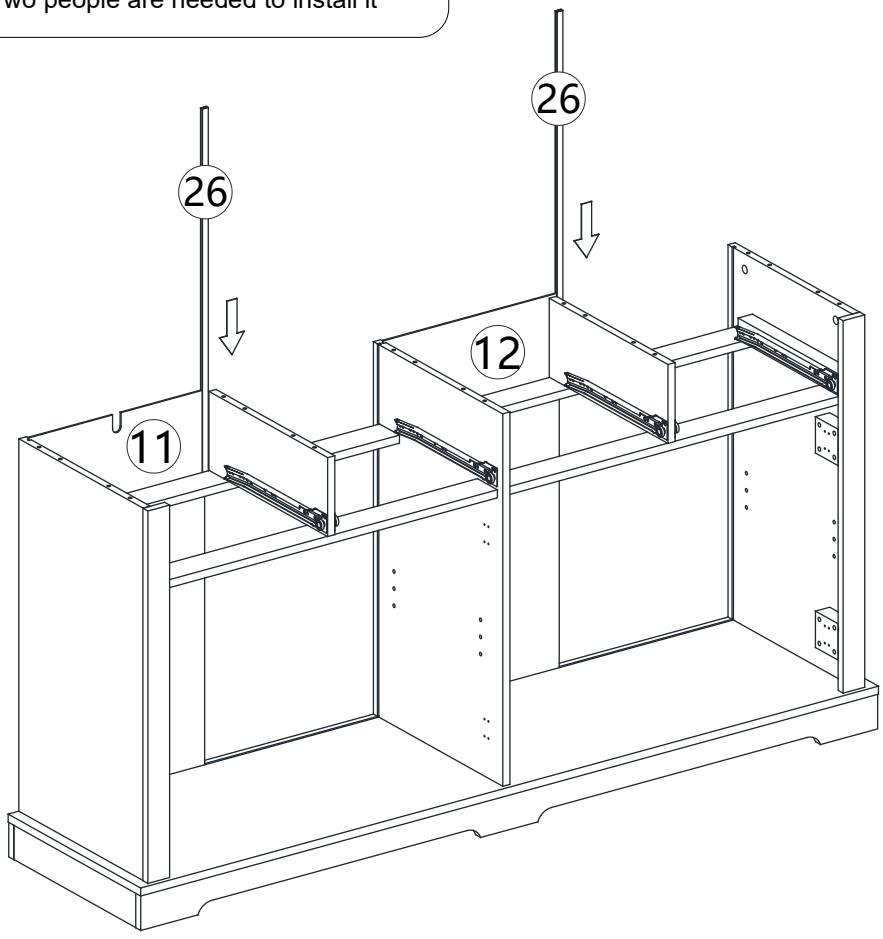


Step 28

Two people are needed to install it

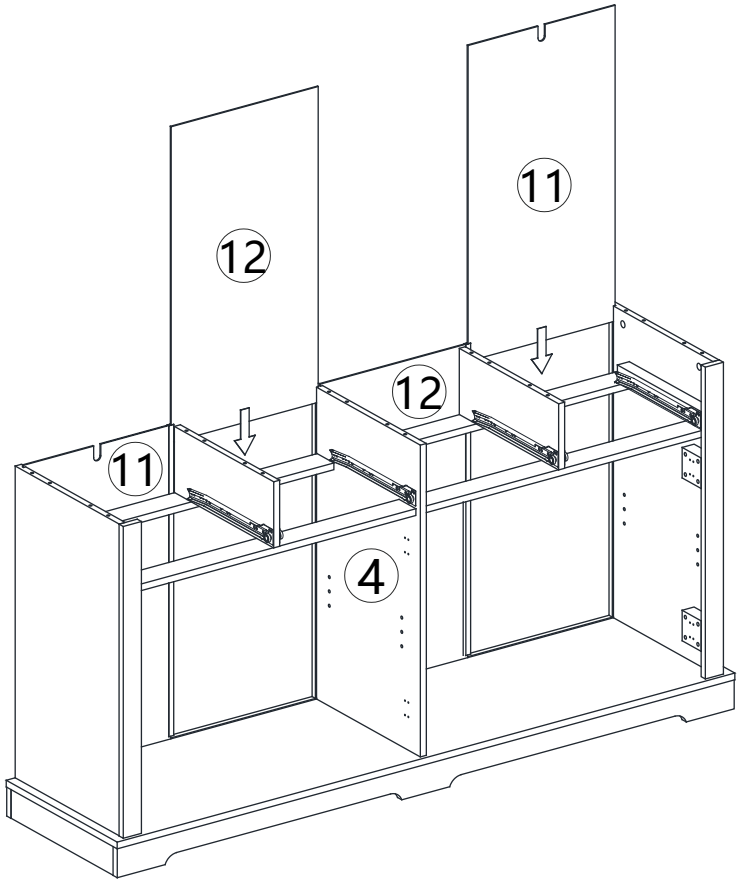


Step 29

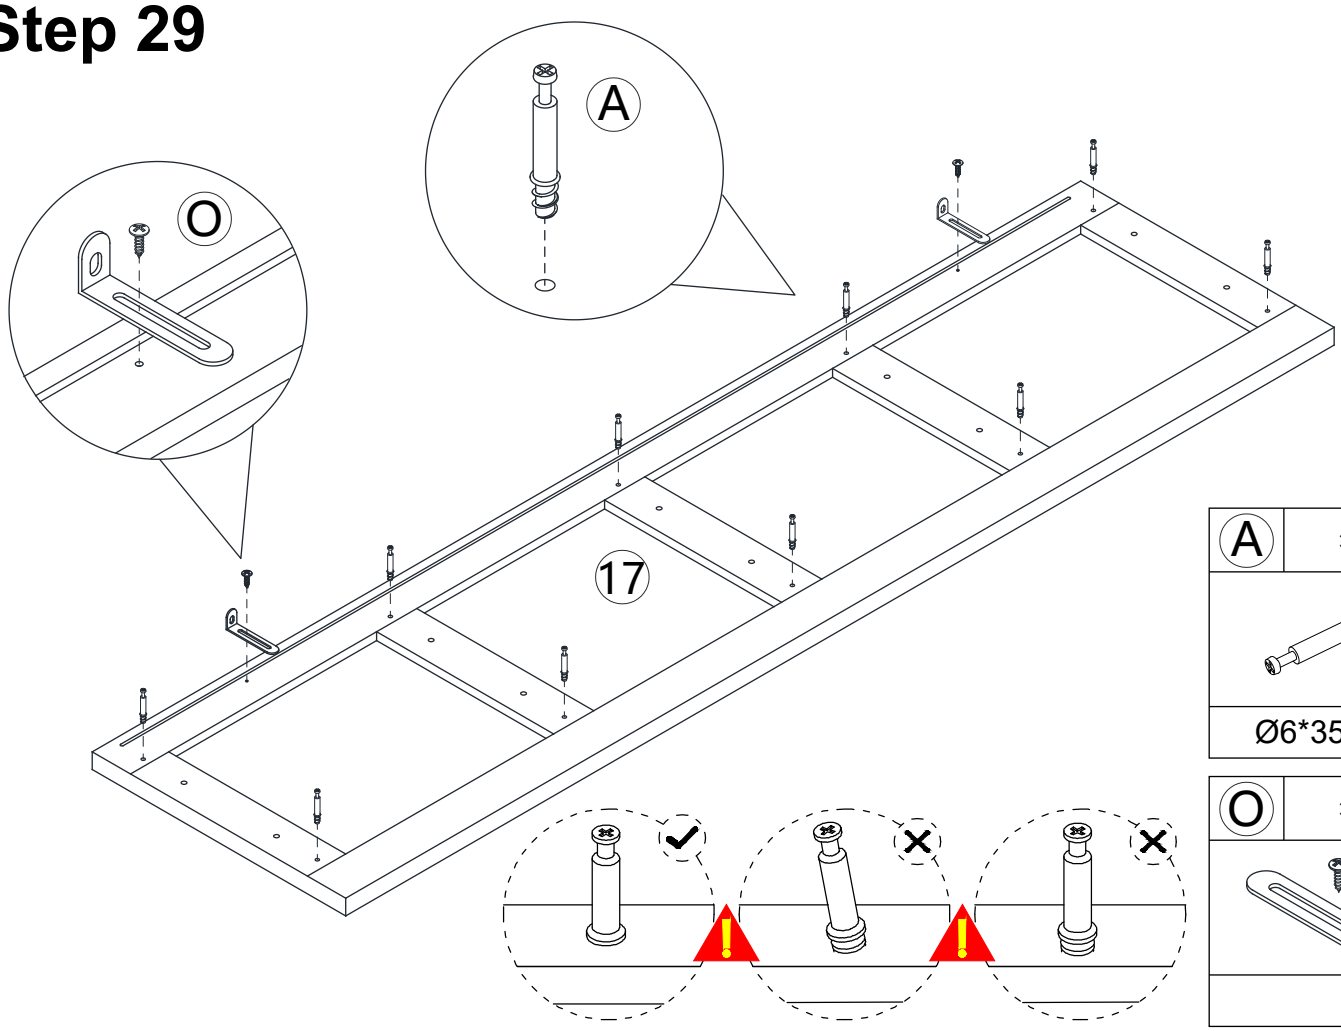



A	×10
Ø6*35mm	


O	×2

Step 30

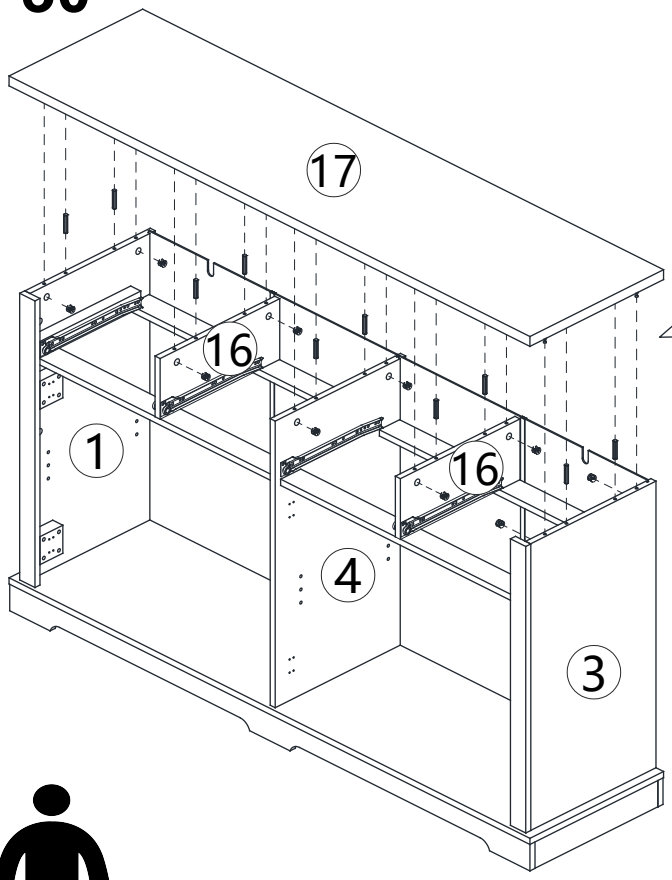


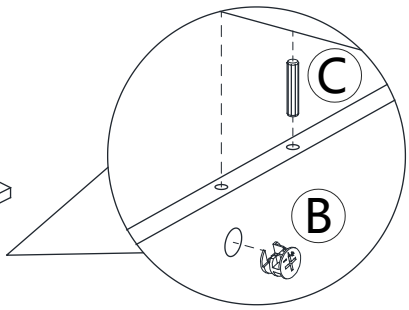

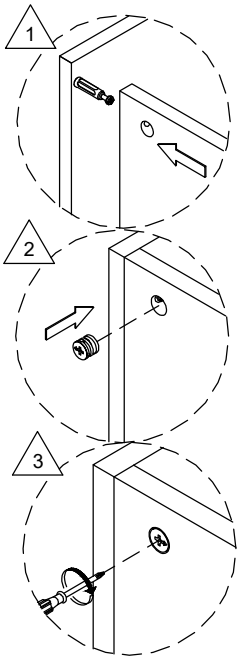

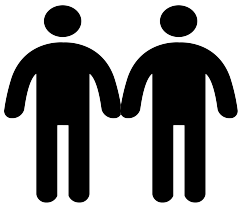



Two people are needed to install it


C	×10
	
Ø6*30mm	

B	×10
	
Ø15*10mm	


Step 31

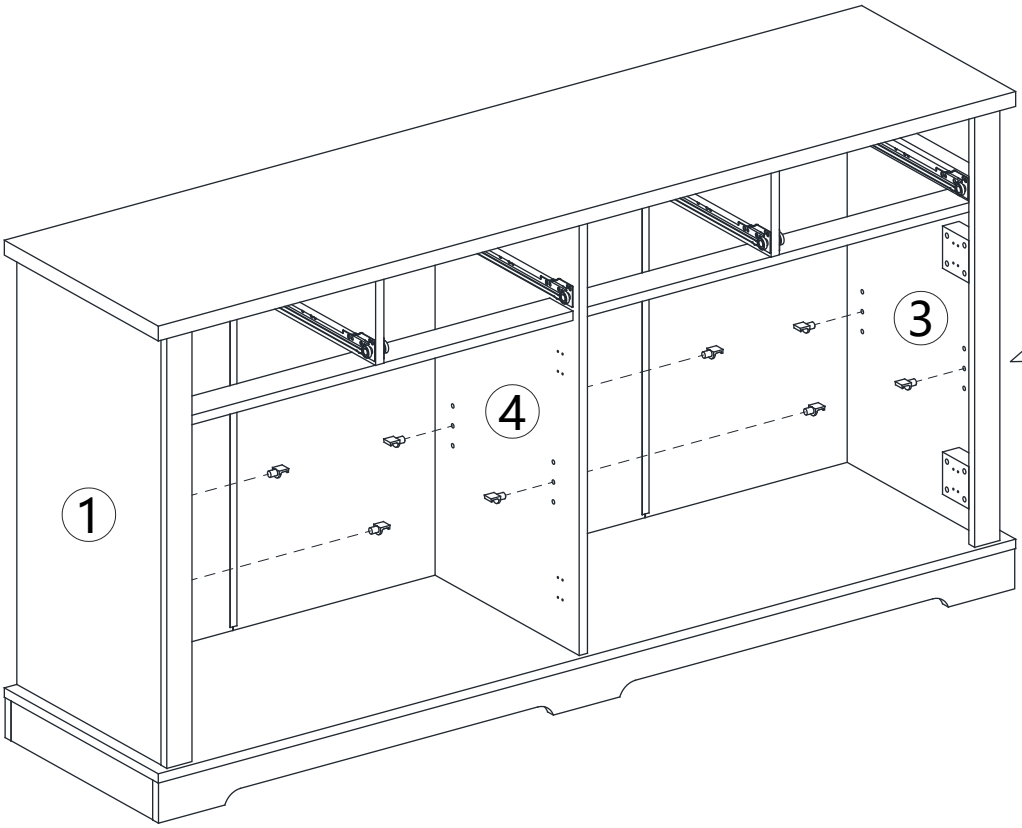

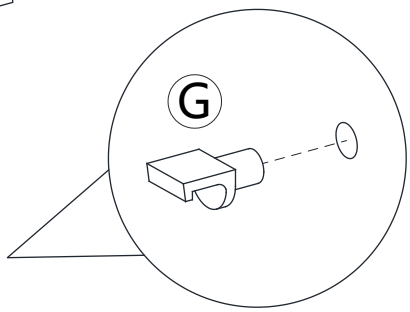


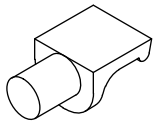
G	×8
	


Step 32

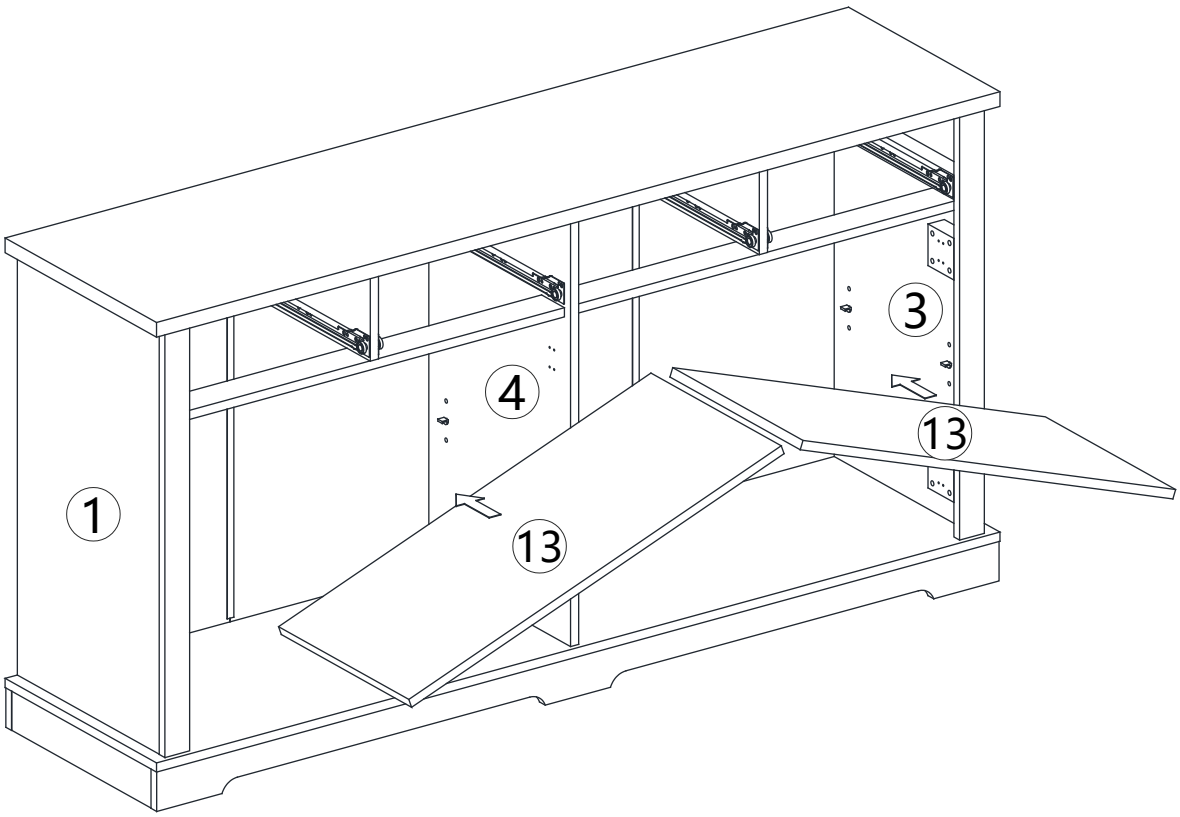



Step 33

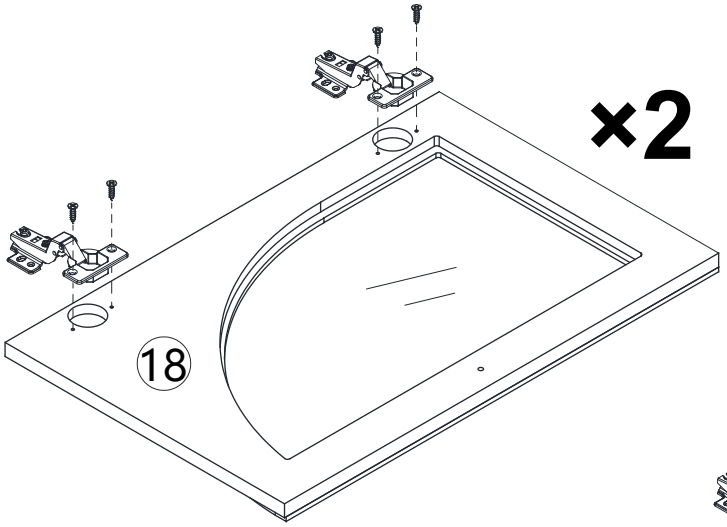

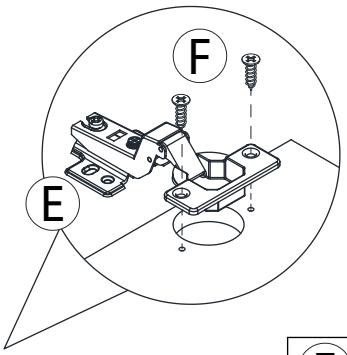


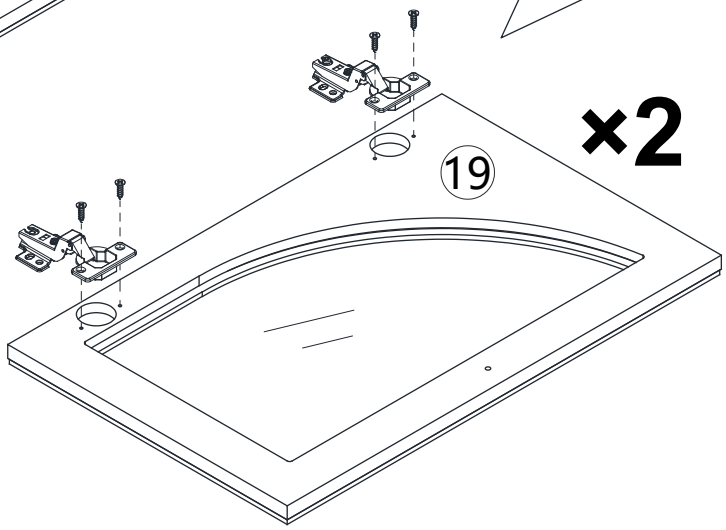


E	×8
	


F	×16
	
Ø7.2*3.5*14mm	


Step 34

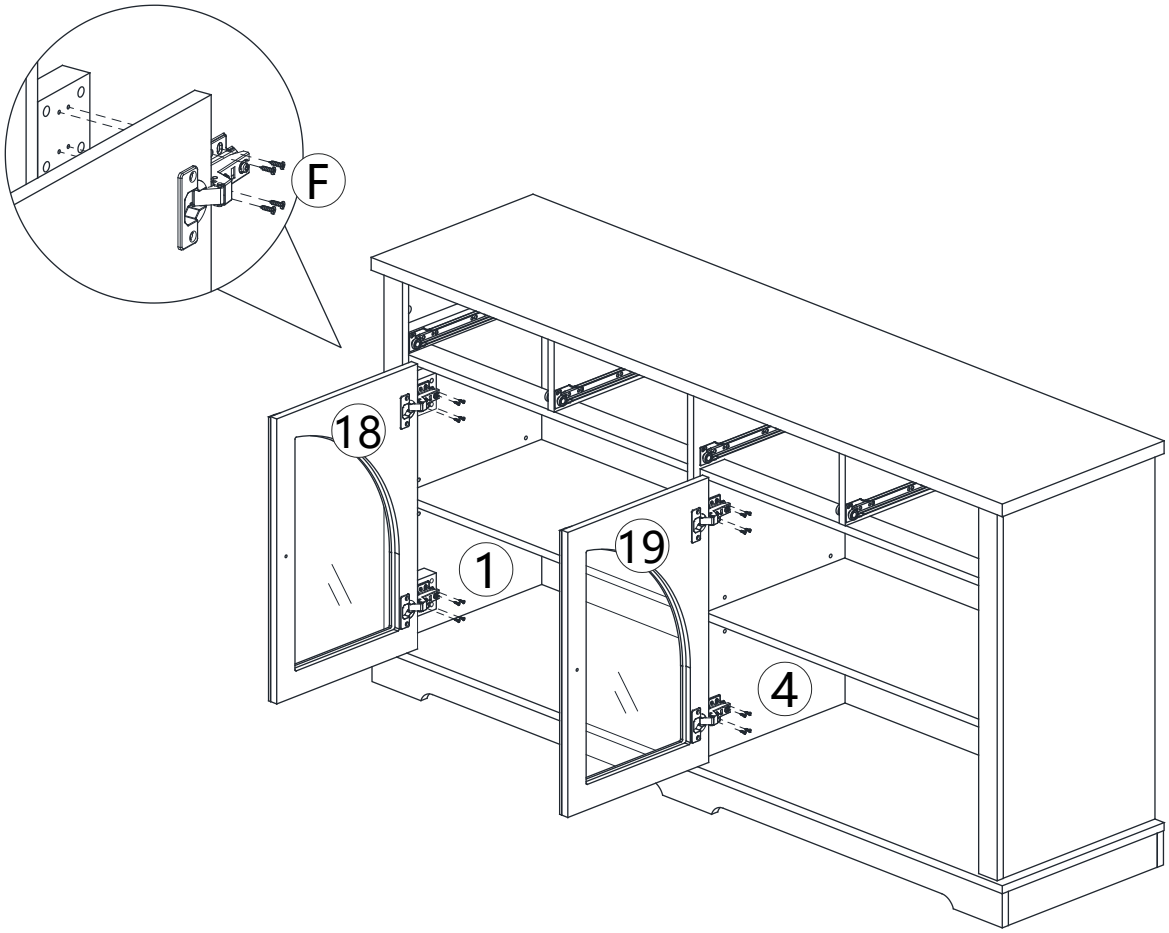

F	×16
	
Ø7.2*3.5*14mm	


Step 35

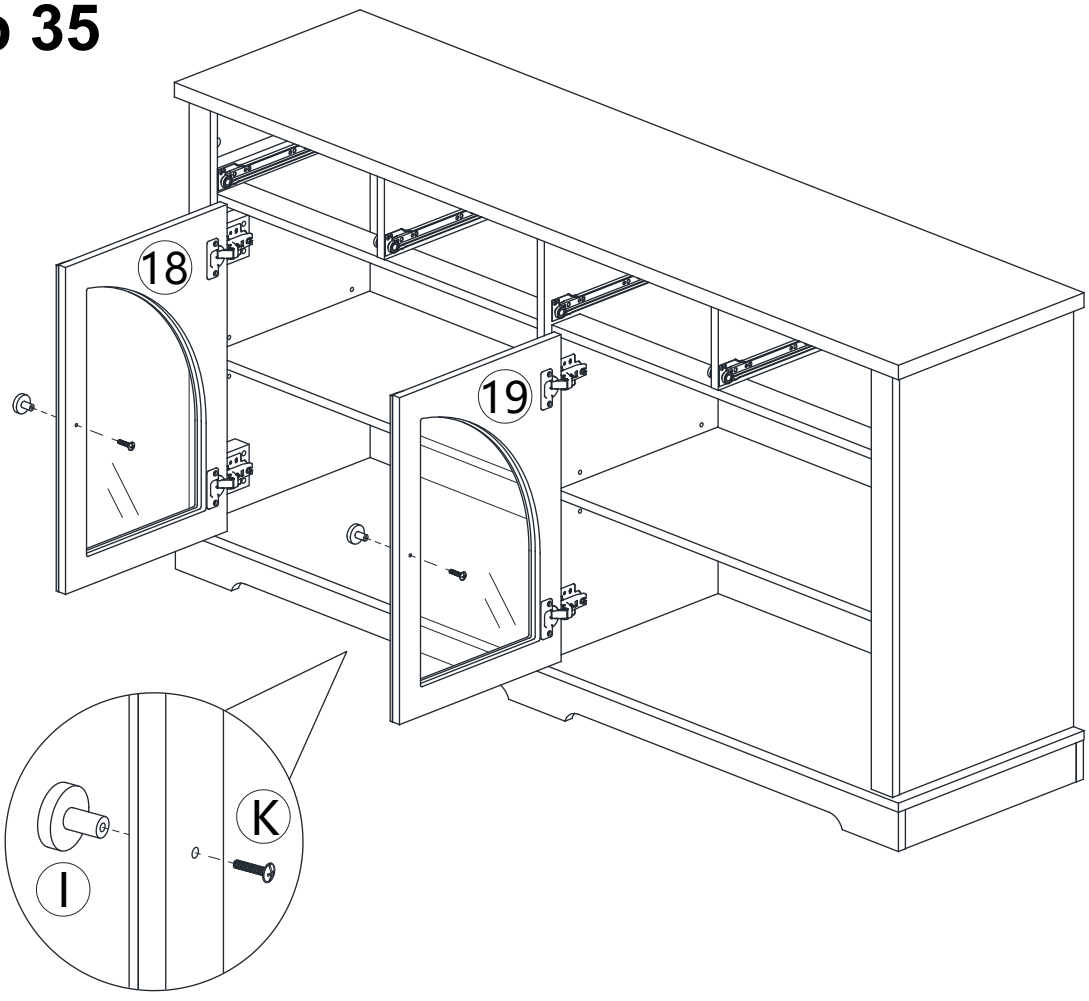

I	×2
	


K	×2
	
M4*25mm	


Step 36

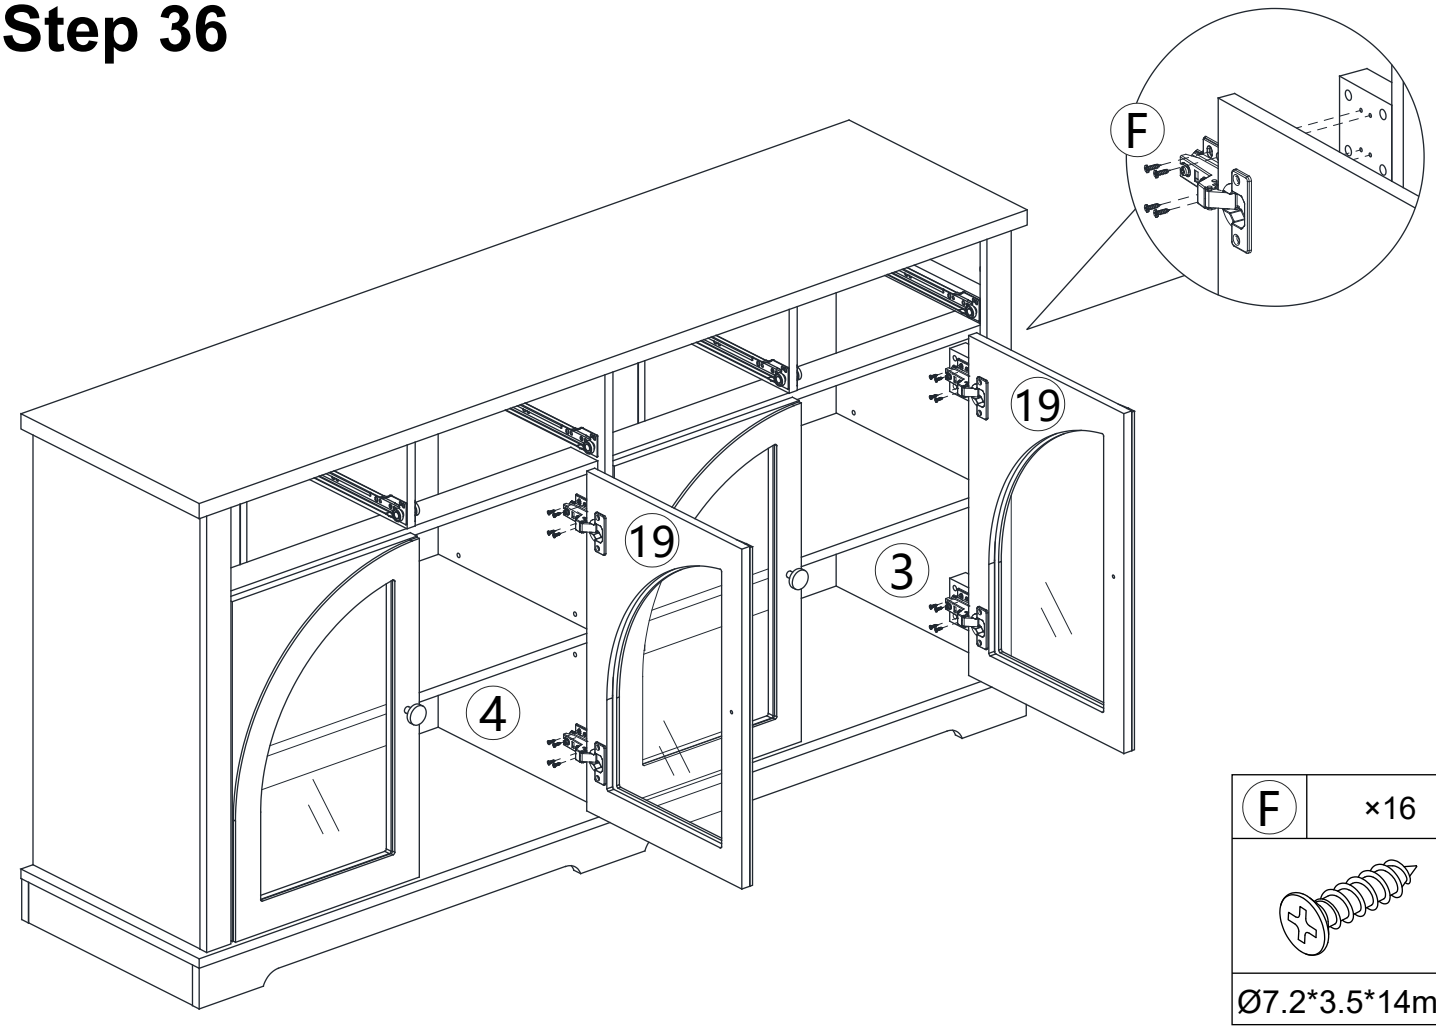

F	×16
Ø7.2*3.5*14mm	


Step 37

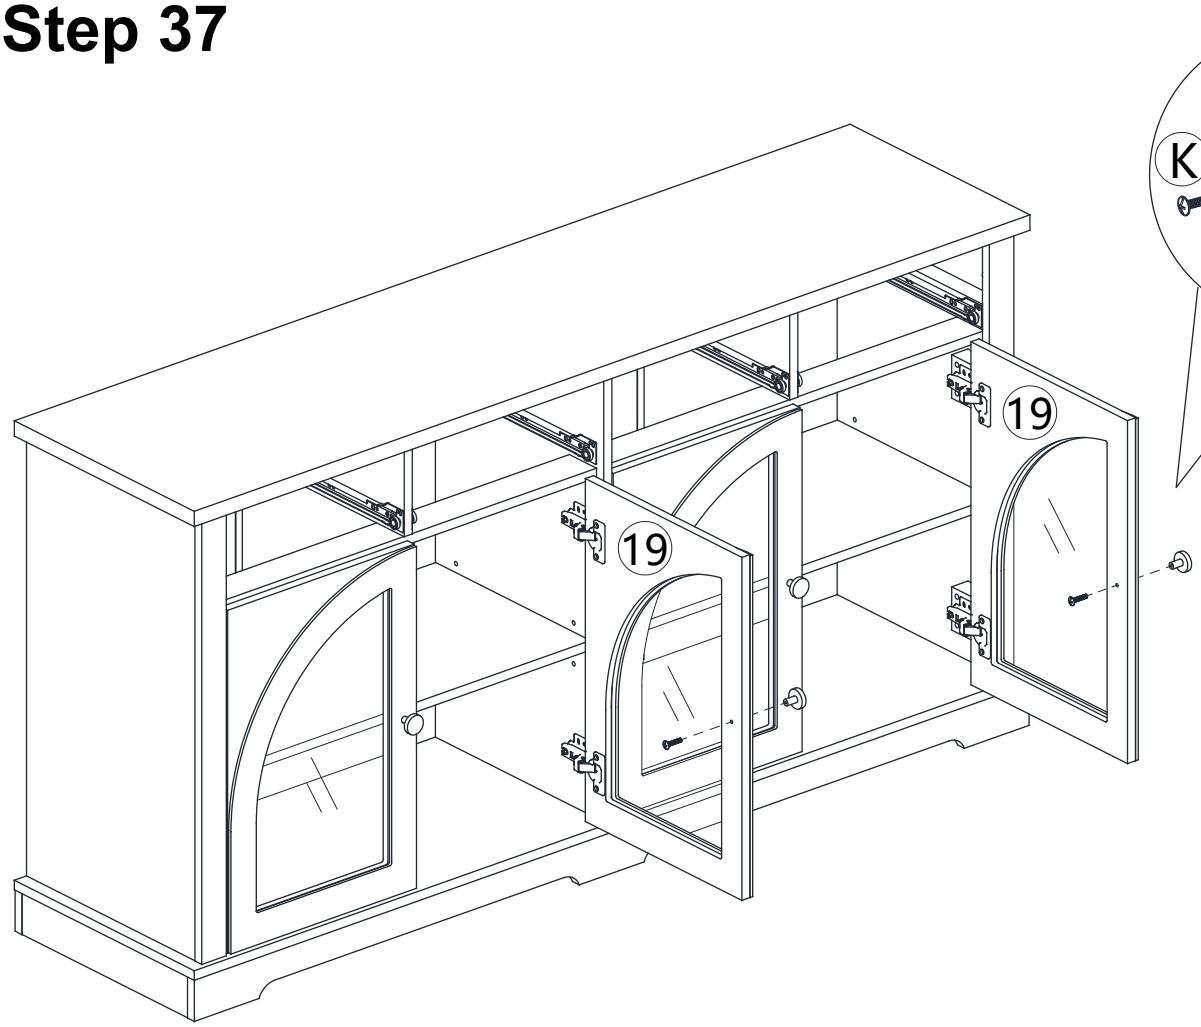



I	×2
	

K	×2
	
M4*25mm	


Step 38

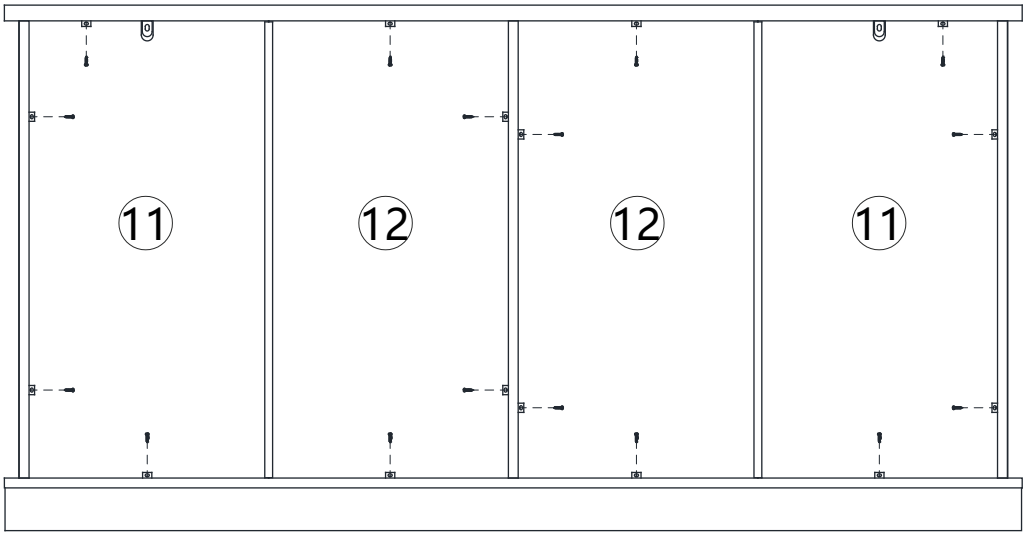


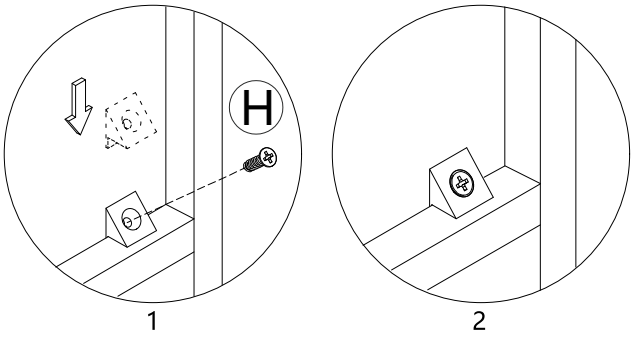


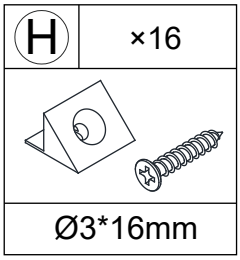

Step 39

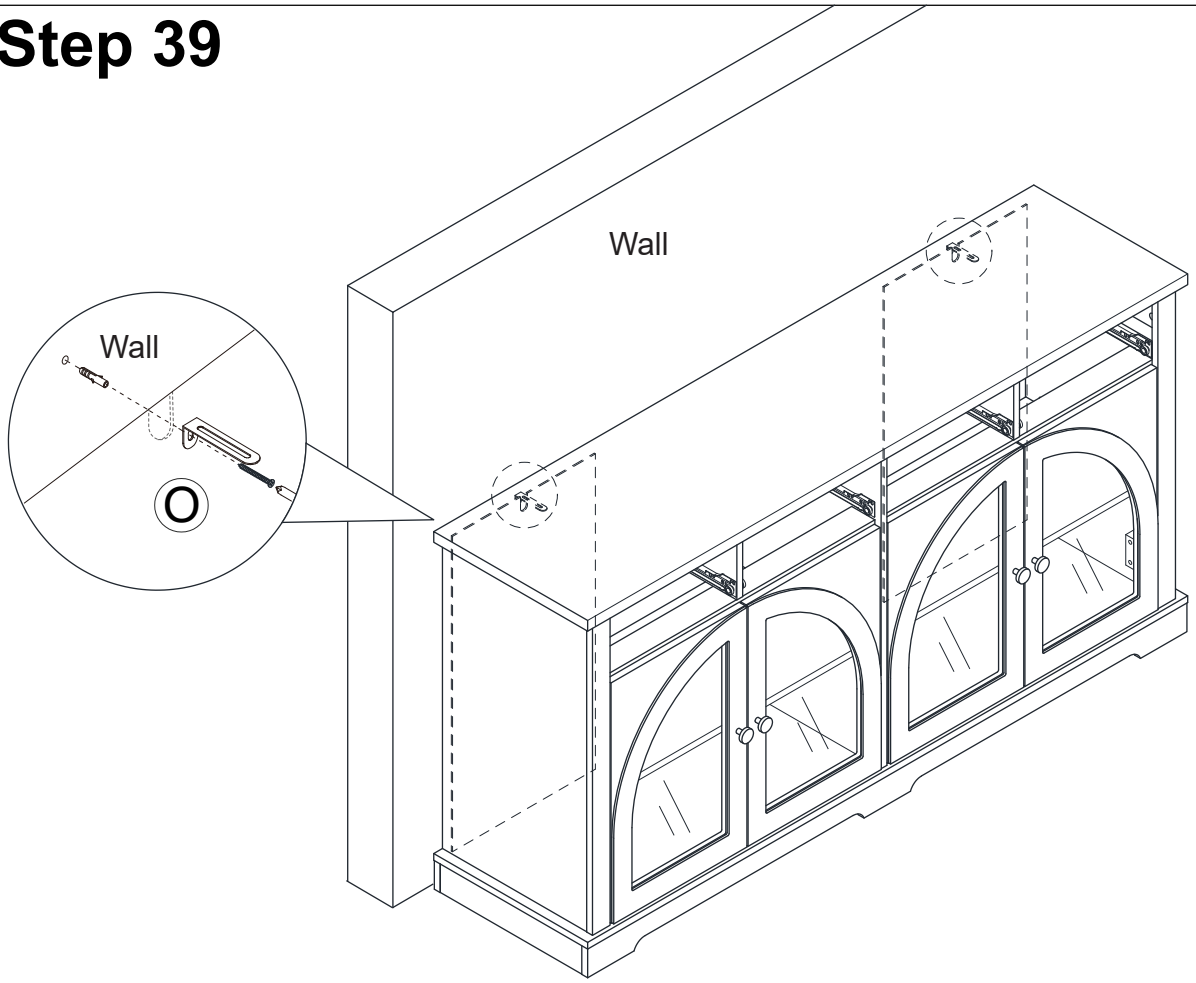

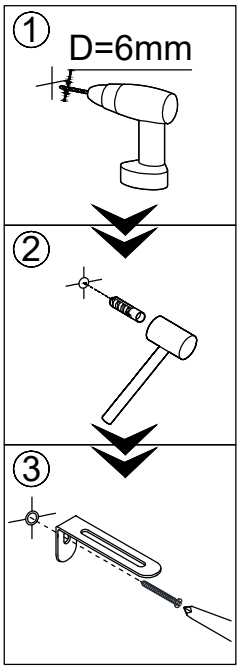

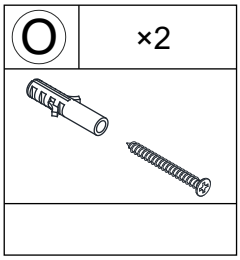


Assembly Steps

HOW TO ADJUST THE HINGES TO ALIGN THE DOORS IF NEEDED.

STEP 1


Open the door.

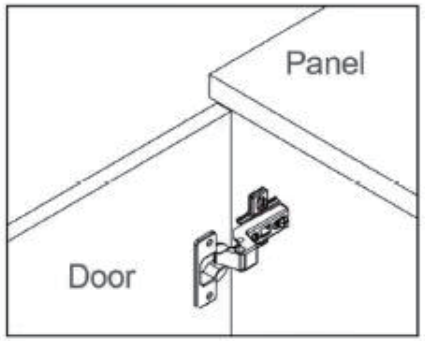

STEP 2


Adjust the door panelsupward or downward

1.

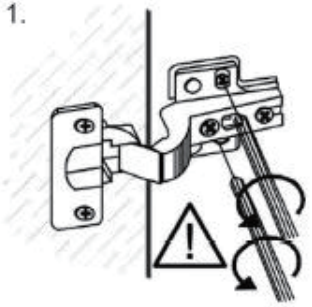


Unscrew 2 screws in round holes loosen 2 screws in oval holes a bit.

2.

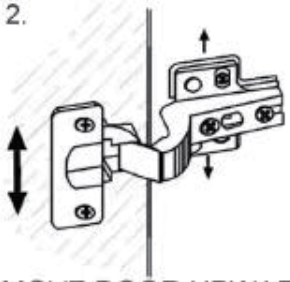

MOVE DOOR UPWARD OR DOWNWARD

3.

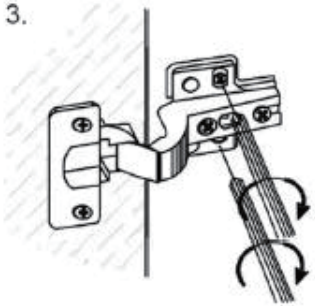


Tighten 2 screws in oval holes. Screw in 2 screws in round holes

STEP 3


Adjust the flush between door panel and side panel

1.

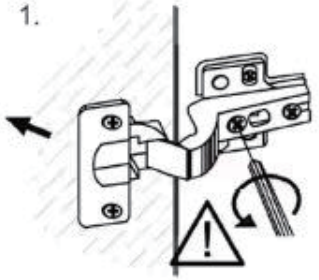


MOVE DOOR OUTWARD by turning this screw counter-clockwise

2.

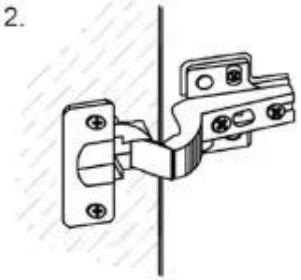

KEEP DOOR IN RIGHT POSITION

3.

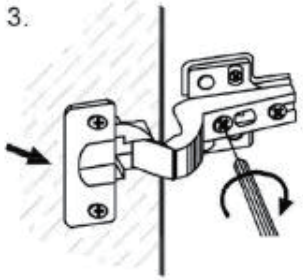


MOVE DOOR OUTWARD by turning this screw clockwise

STEP 4


Adjust the Gap beteen door panel and side panel

1.

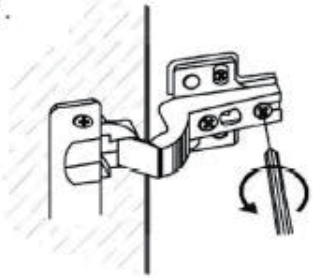


Loosen this screw a bit.

2.

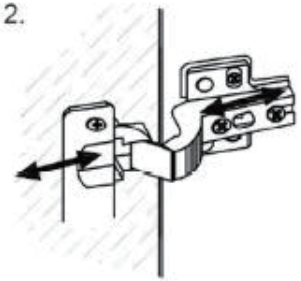


MOVE DOOR BACK OR FORTH

3.

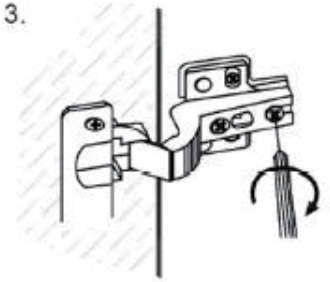


Re-tighten this screw.


Step 40

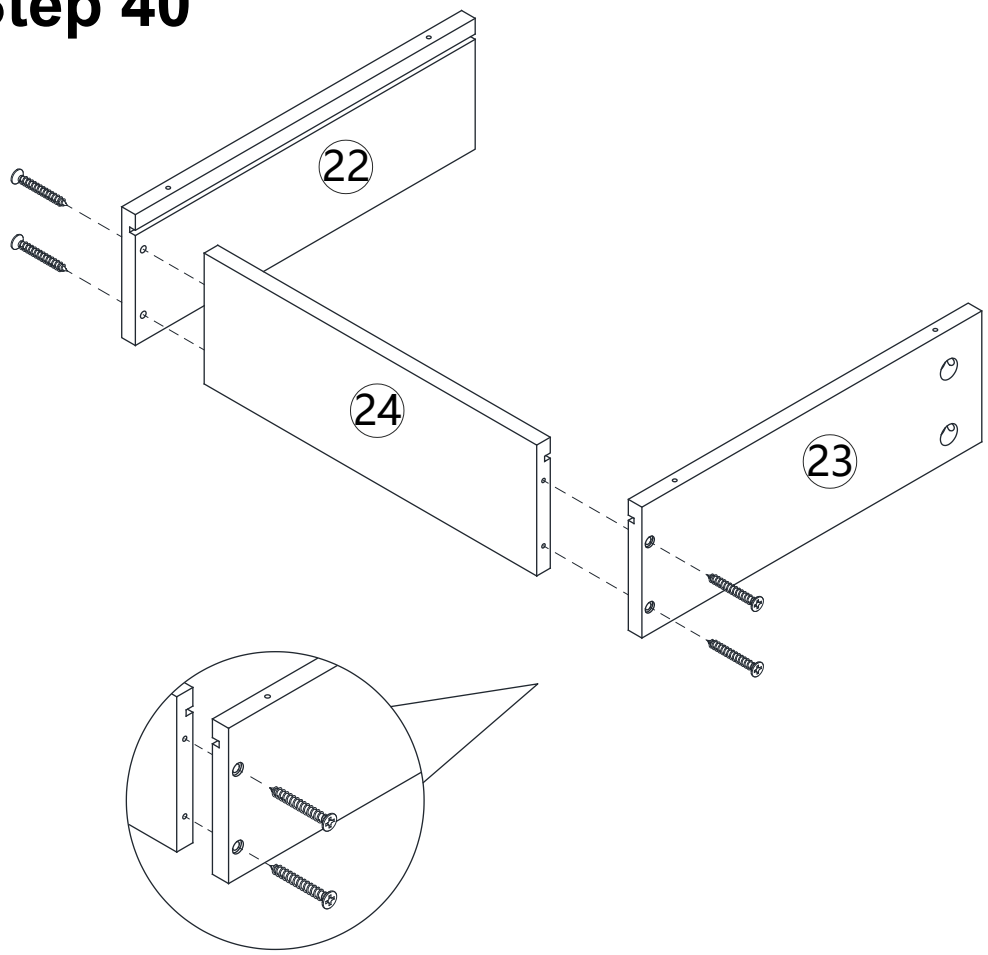

×4


M	×16
	
Ø4*30mm	


Step 41

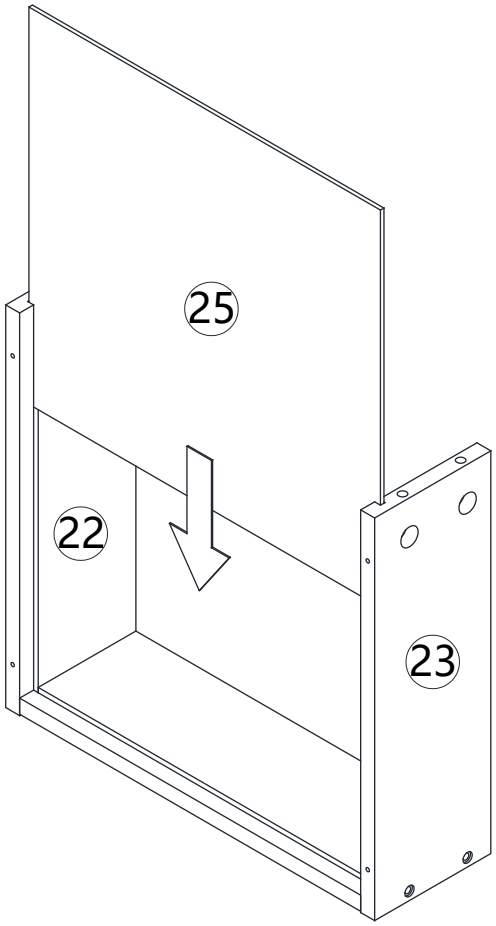


×4


Step 42

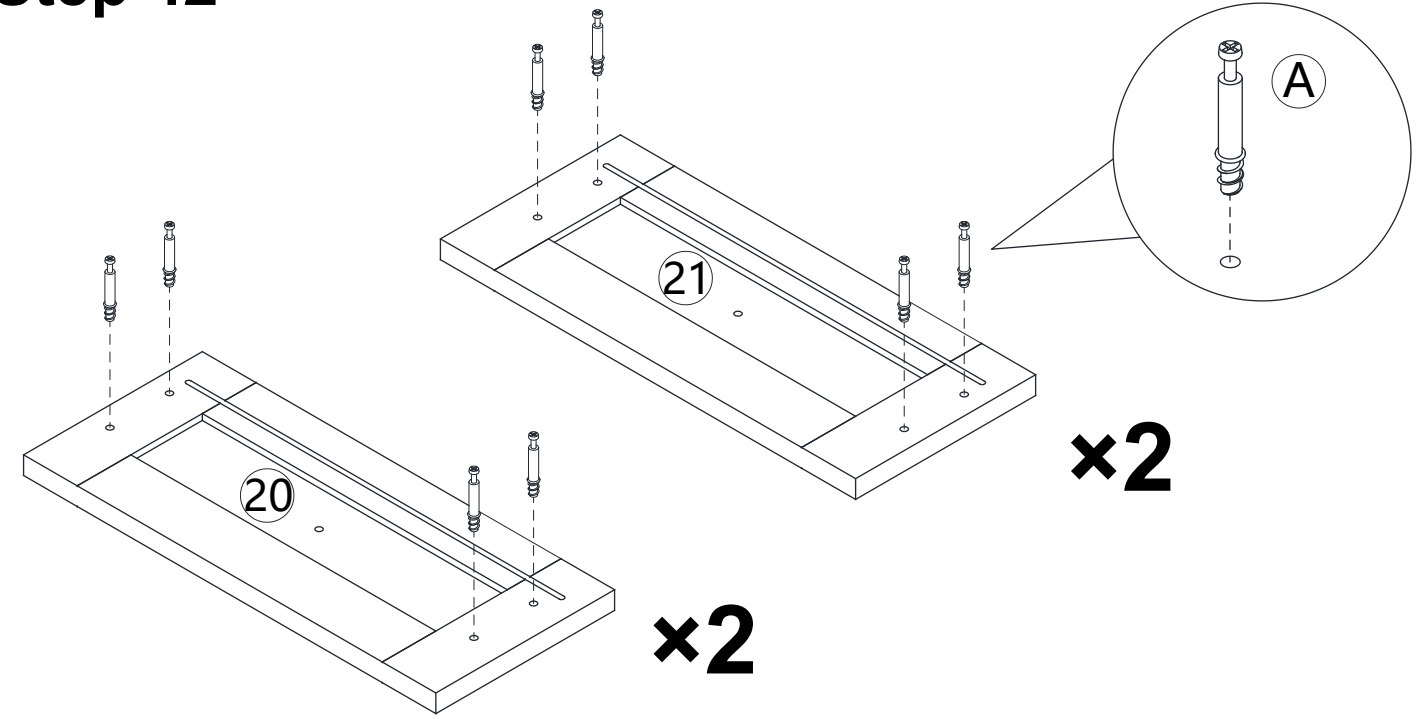


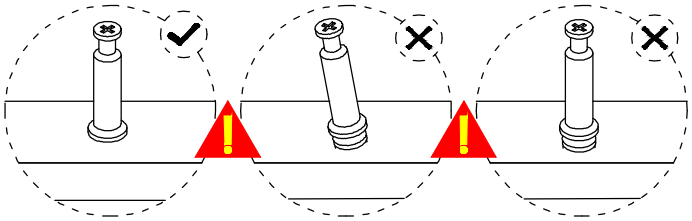


A	×16
	
Ø6*35mm	


Step 43

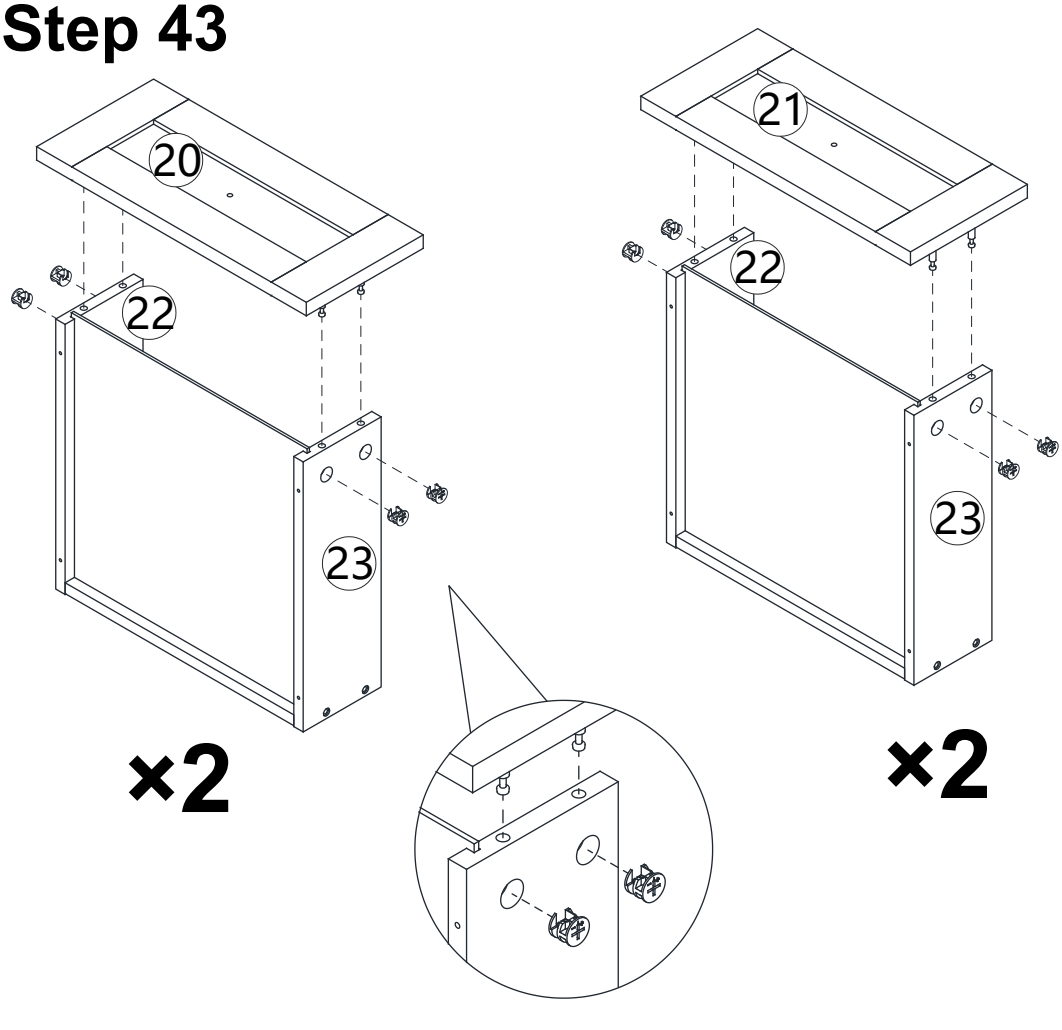


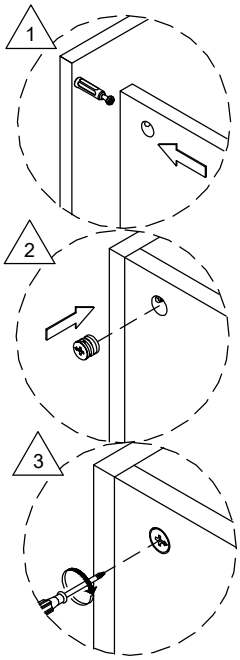


B	×16
	
Ø15*10mm	

Step 44

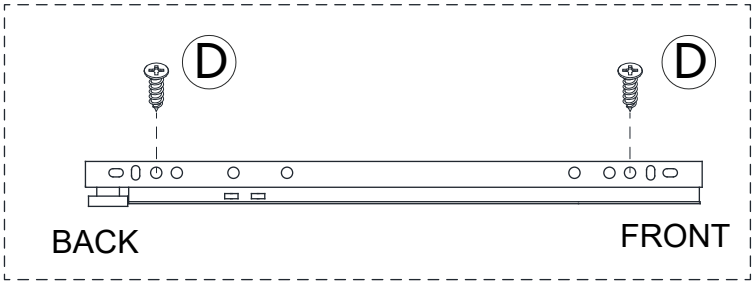


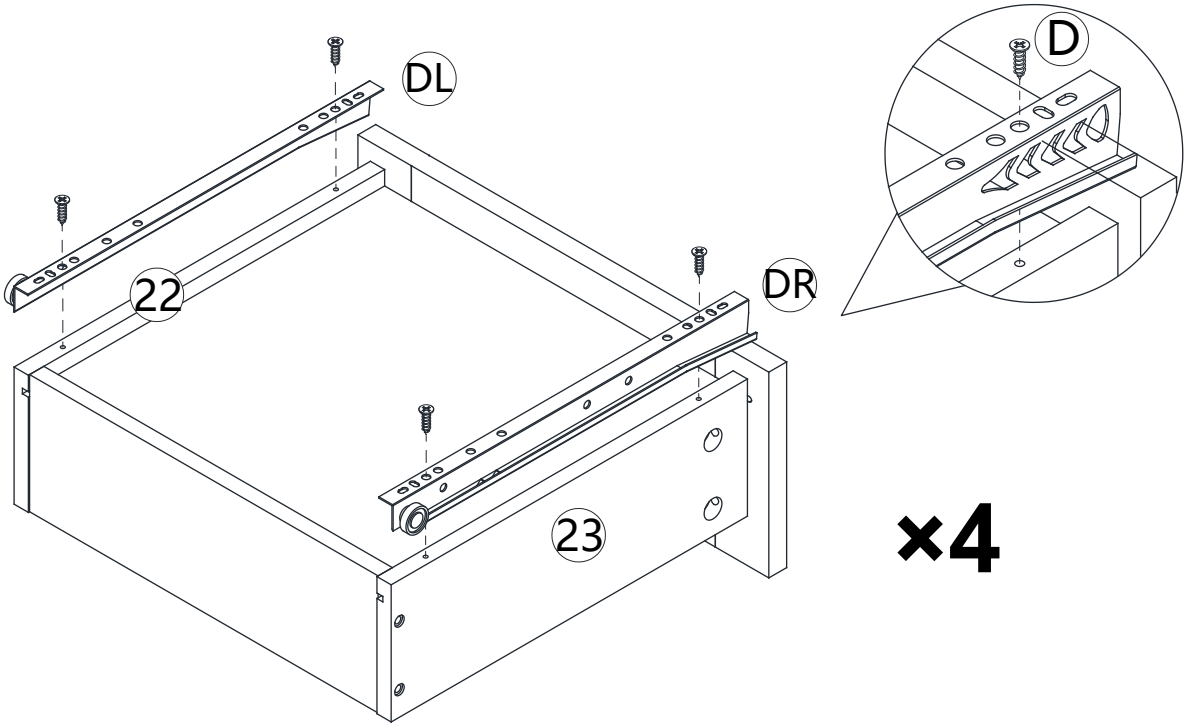


×4

D	×16
	
Ø7*3.5*12mm	

DL	×4
	
300mm	

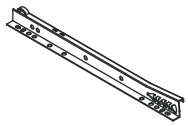
DR	×4
	
300mm	

Step 45

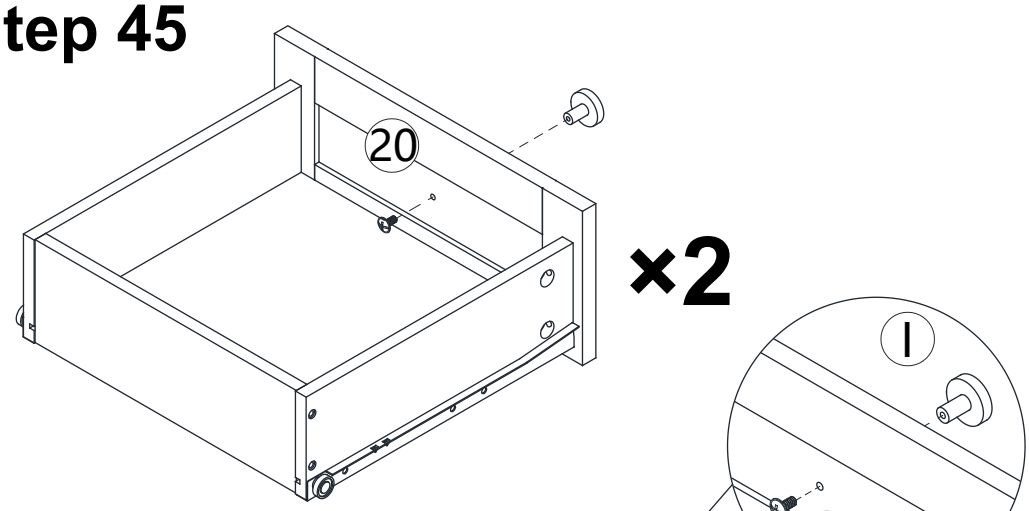


×2


×2


I	×4
	

J	×4
	
M4*10mm	

Step 46

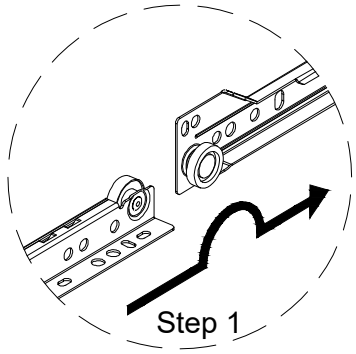

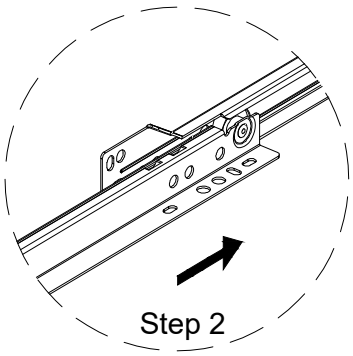

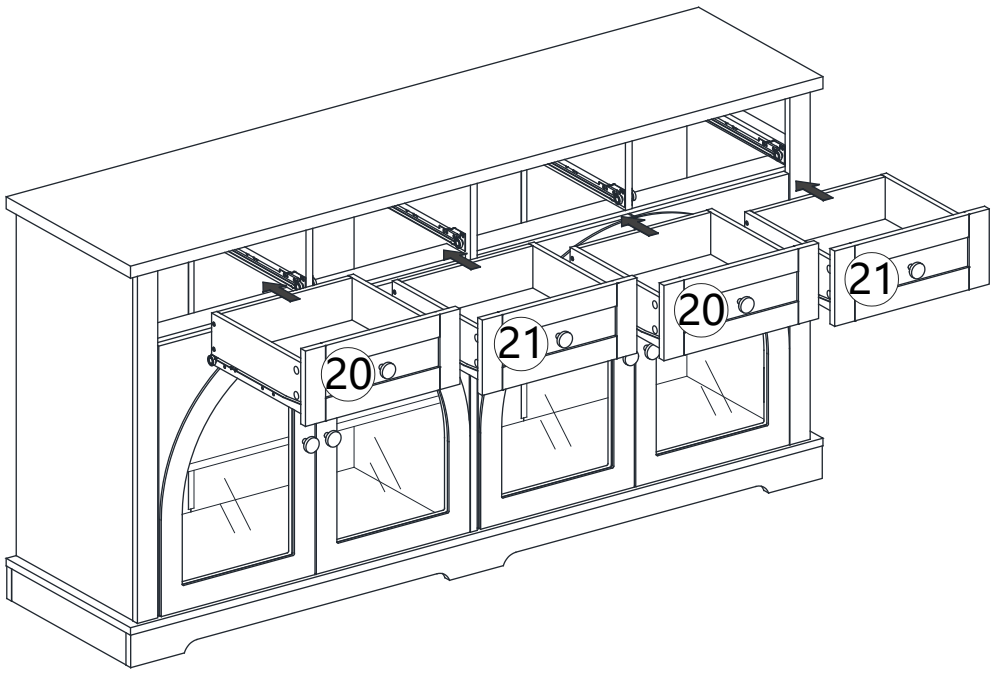

COMPLETE

