



■ ASSEMBLY INSTRUCTIONS

- Cabinet

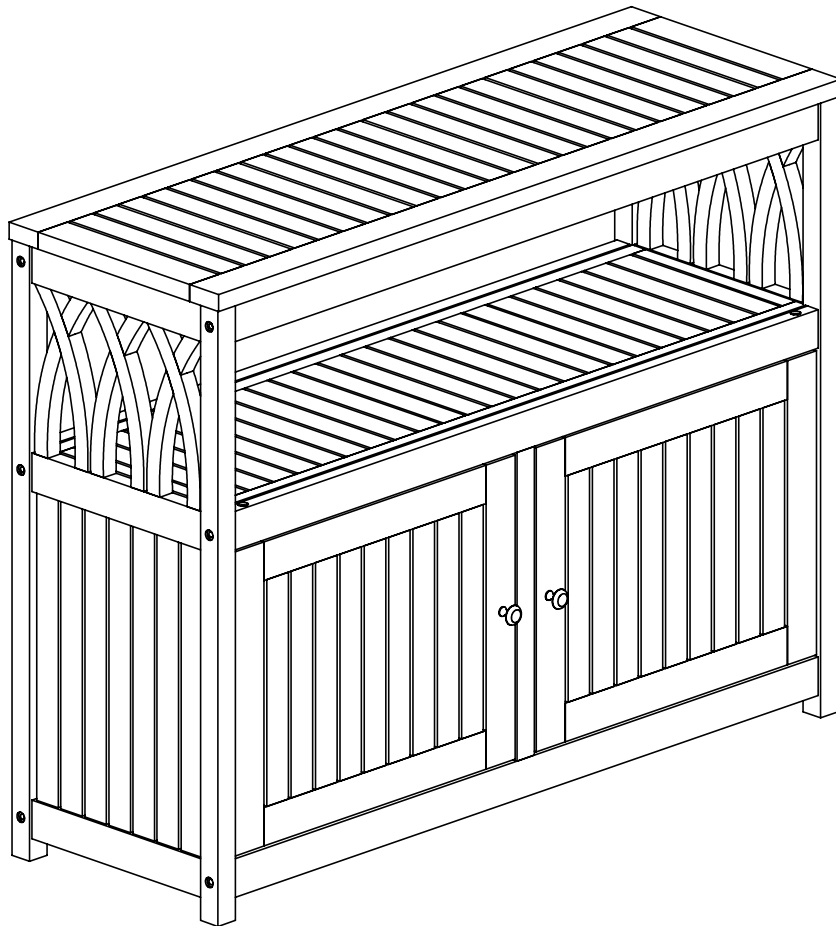

Parts

Check and make sure you get the components on the list, contact us for any missing

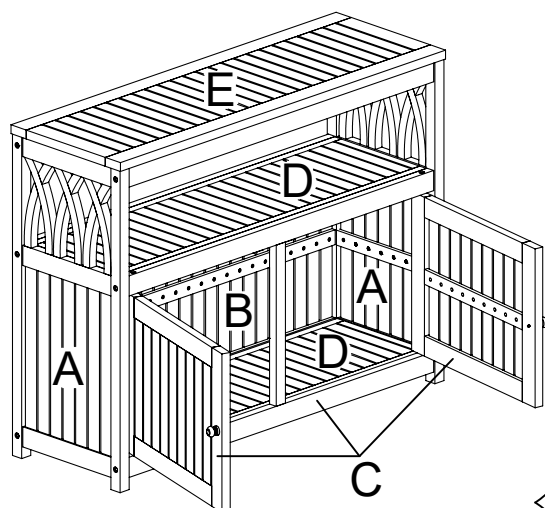

• Cabinet


A : Side

2 Pcs




B : Back

1 Pc

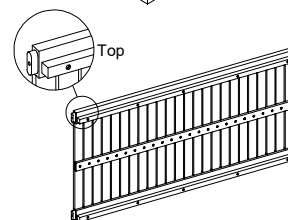


C : Front

1 Pc

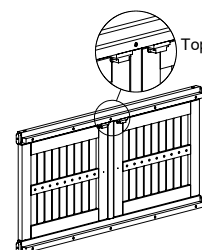


D : Floor

2 Pcs

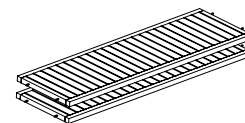

E : Top

1 Pc

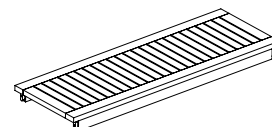

1 : Screw M6 x 50mm

12 Pcs




2 : Screw M6 x 25mm

4 Pcs



3 : Knob

2 Pc



4 : Allen key - Screwdriver

1 Pc




5 : Allen key


1 Pc




Installation step

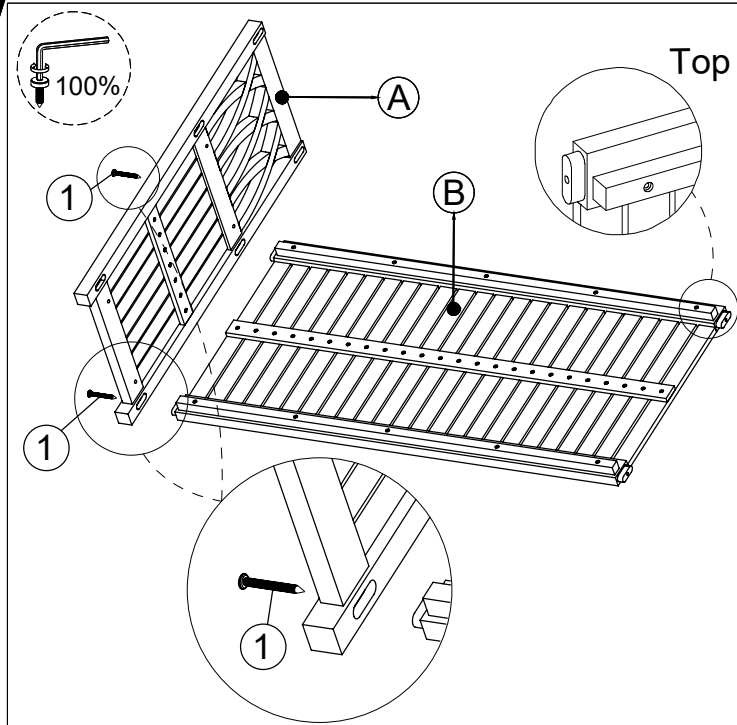


Step 1: Connect Side (A) & Back (B), tighten Screw (1) with Allen Key (5).

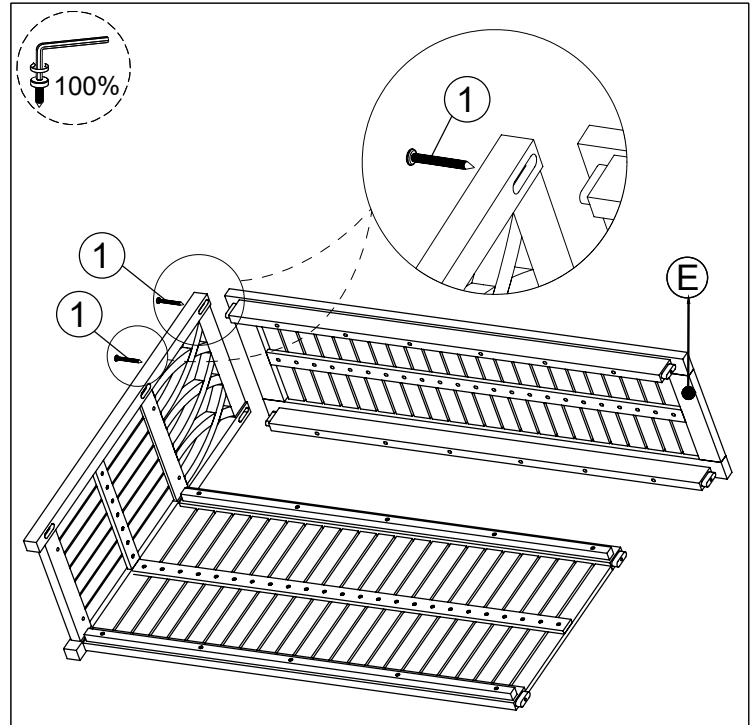

Step 2: Connect The Part from Step 1 & Top (E), tighten Screw (1) with Allen Key (5).

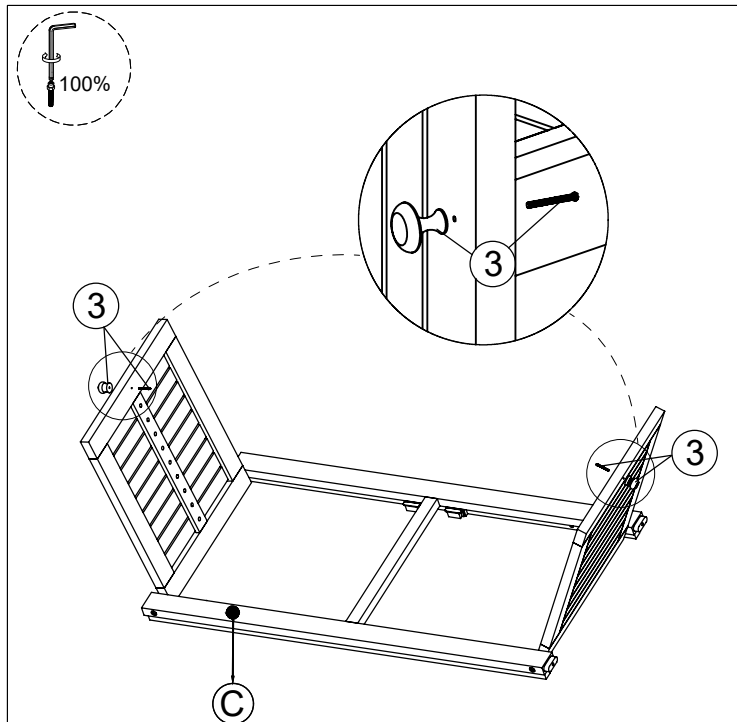


Step 3: Open cabinet door Front (C), tighten Knob (3) with Allen key - Screwdriver (4).

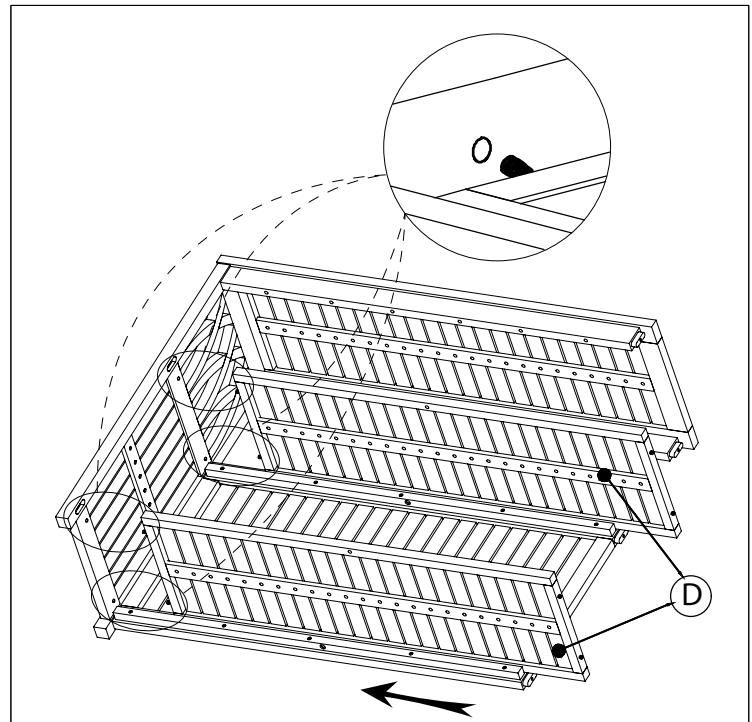


Step 4: Connect The Part from Step 2 & Floor (D) from the side and line them up with the wooden dowels.


Assembly steps

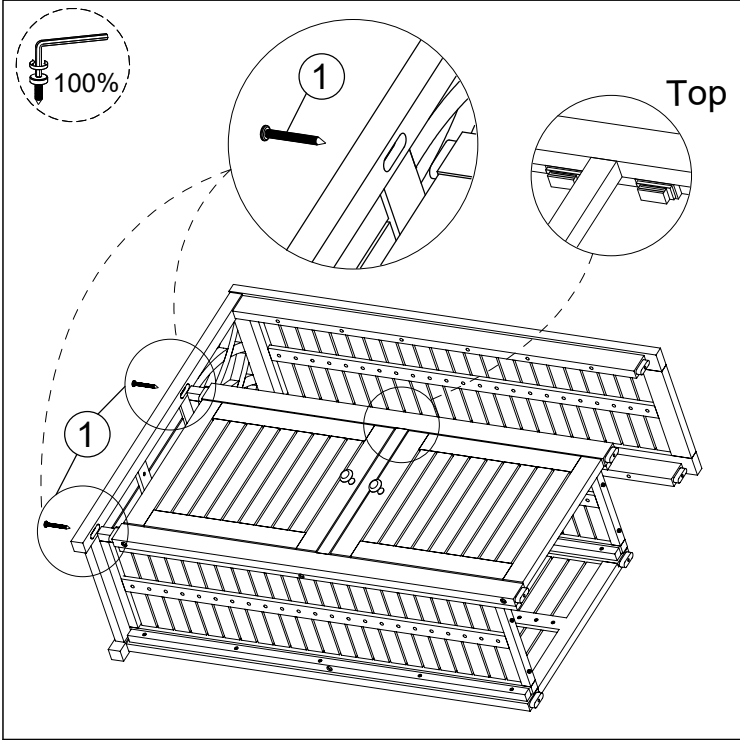

Step 5: Connect The Part from Step 3 & The Part from Step 4, tighten Screw (1) with Allen Key (5).

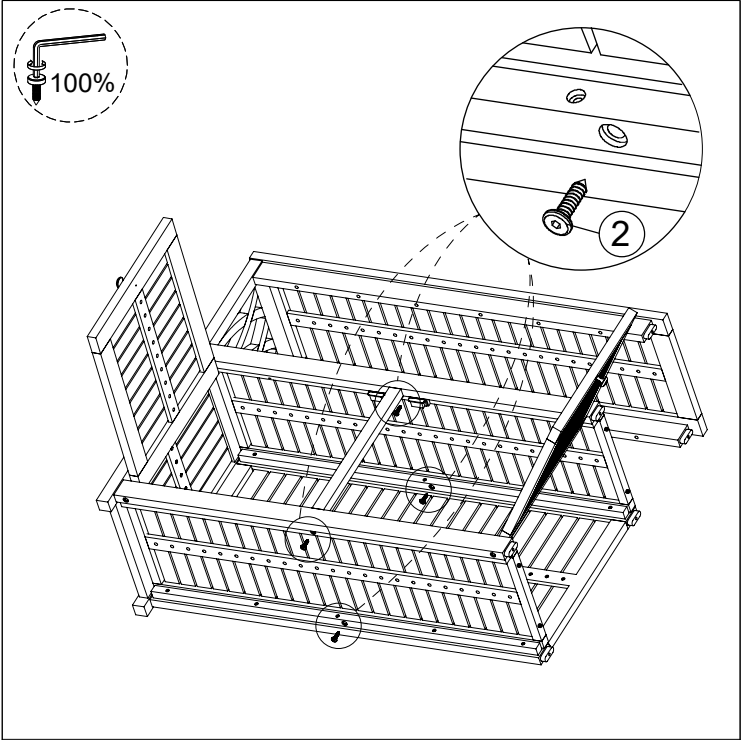

Step 6: Connect The Part from Step 5 open the door tighten Screw (2) with Allen Key (5)

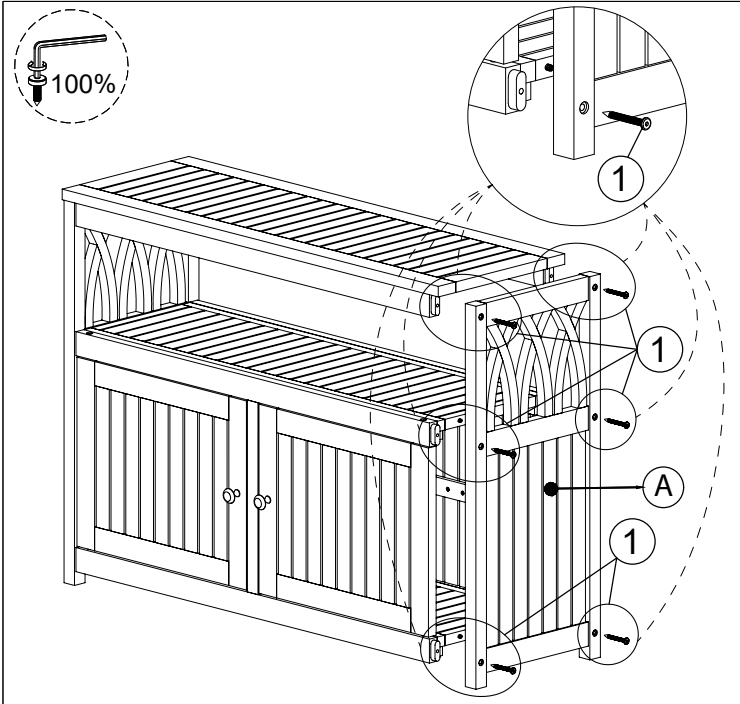

Step 7: Connect The Part from Step 6 & Side (A) and line them up with the wooden dowels Floor (D), tighten Screw (1) with Allen Key (5).



Finish