

ARTWOOD 80"

BATHROOM VANITY SET


SKU: ARTWOOD80QZ-WT

ARTWOOD80QZ-NB

ARTWOOD80QZ-TG

Colors/Finishes: White, Navy Blue, Titanium Grey

Nominal Dimension:80W*22D*35H inches

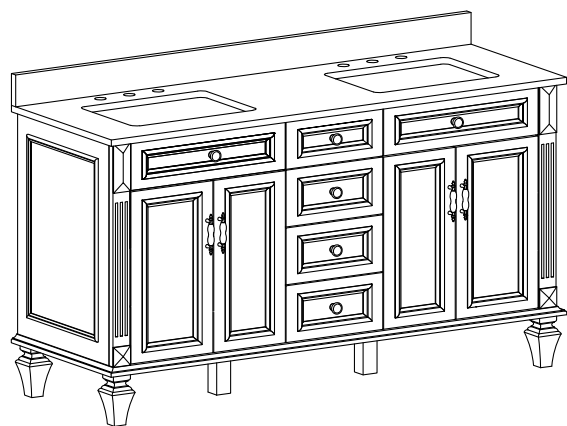


Contents

80"Vanity.....PAGE2

80"Vanity Top.....PAGE3

Vanity Installation.....PAGE4

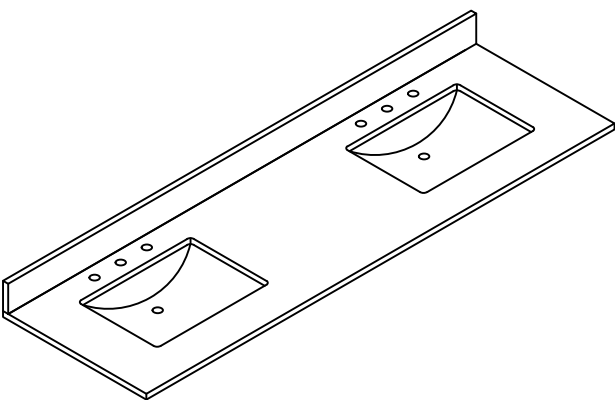

VANITY FEATURES:

- 1.Material: Solid poplar wood frame, high-quality veneer plywood.
- 2.Doors: 4 soft-close doors, Austria BLUM Soft-close hinges system.
- 3.Drawers: 4 soft-close drawers, DTC concealed soft-close sliders.
- 4.Hardware: Metal alloy with decorative porcelain
- 5.Installation Type: Freestanding
- 6.Built-in Adjusters: Adjustable height levelers
- 7.Vanity Top: High-quality quartz with two undermount sinks
- 8.Assemble required: No
- 9.Vanity top Included: Yes
- 10.Mirror Included: Optional
- 11.Medicine Cabinet Included: Optional

VANITY TOP FEATURES:

- 1.Material: Highly resilient, nonporous, scratch-and stain-resistant quartz.
- 2.Top Color: Carrara white
- 3.Sink: 2*20"undermount rectangle sink
- 4.Faucet Holes: Top pre-drilled for 8"widspread faucet holes
- 5.Sink Certified: CUPC certified
- 6.Backsplash: 4"backsplash included
- 7.Faucet Included: No
- 8.Nominal Dimension(W*D*H): 80W*22D*0.79H inches

ARTWOOD 80"


BATHROOM VANITY SET

SKU: ARTWOOD80QZ-WT

ARTWOOD80QZ-NB

ARTWOOD80QZ-TG


PRODUCT DIAGRAMS:

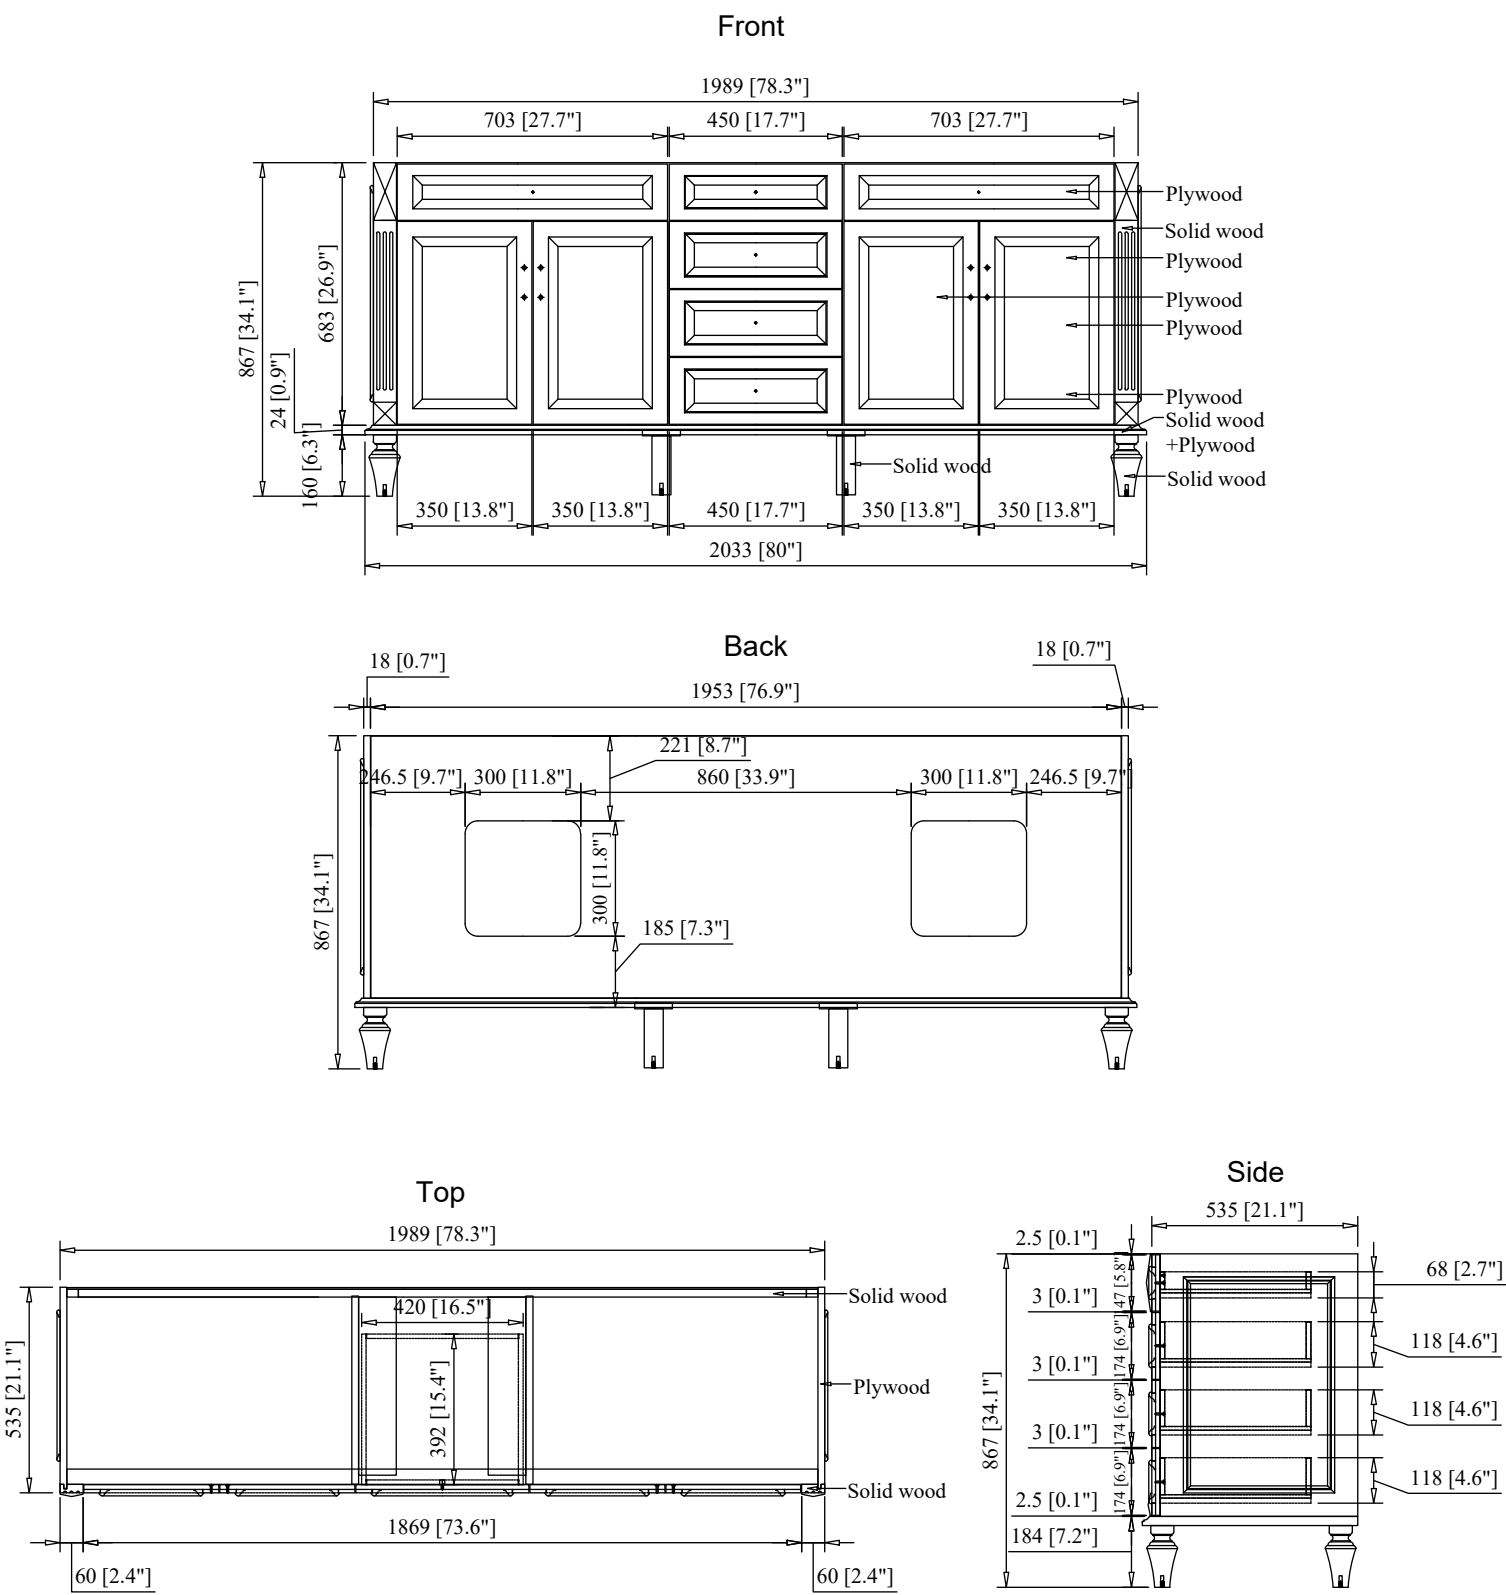


ARTWOOD 80"

VANITY TOP

With rectangular undermount sink

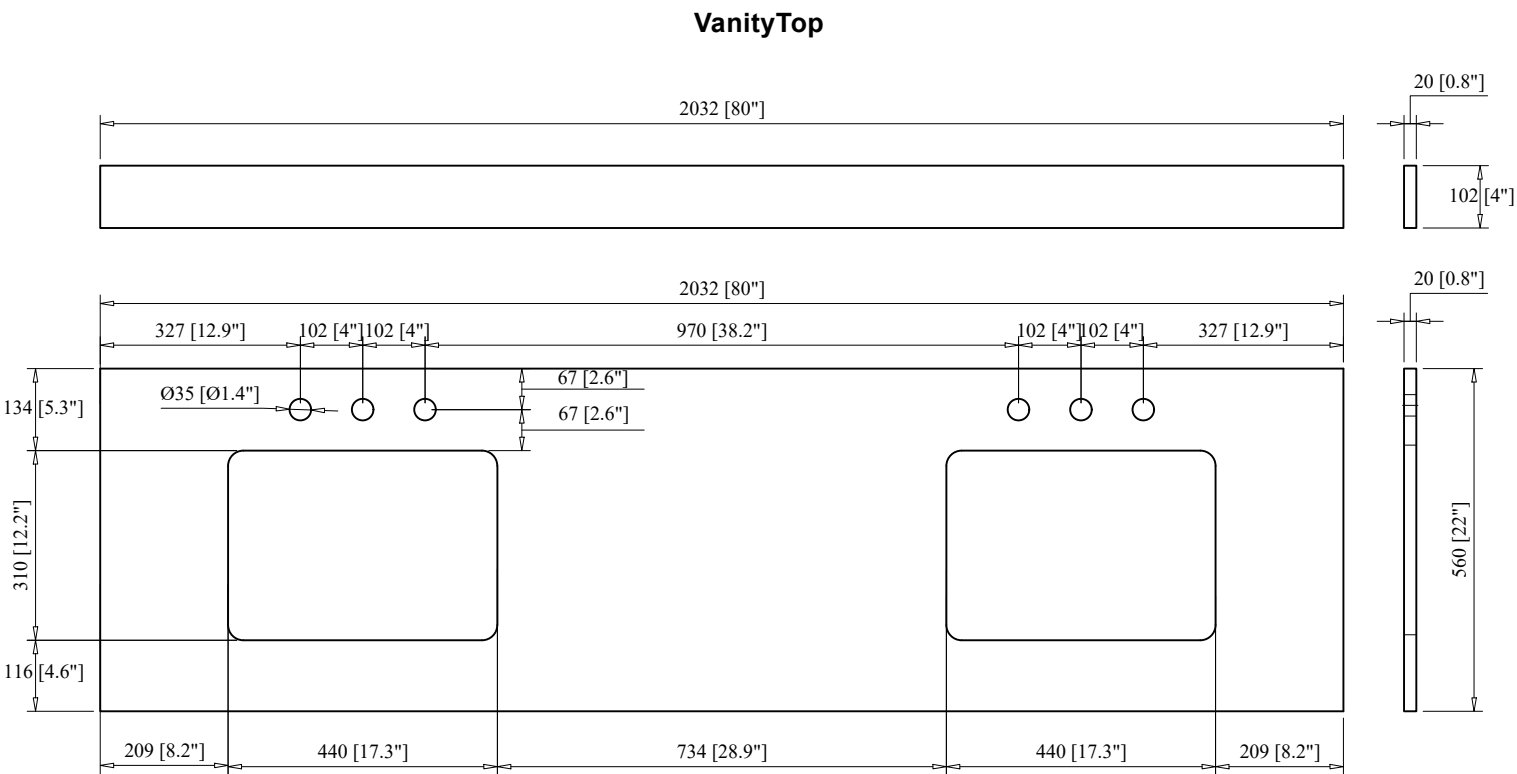

Undermount Sink

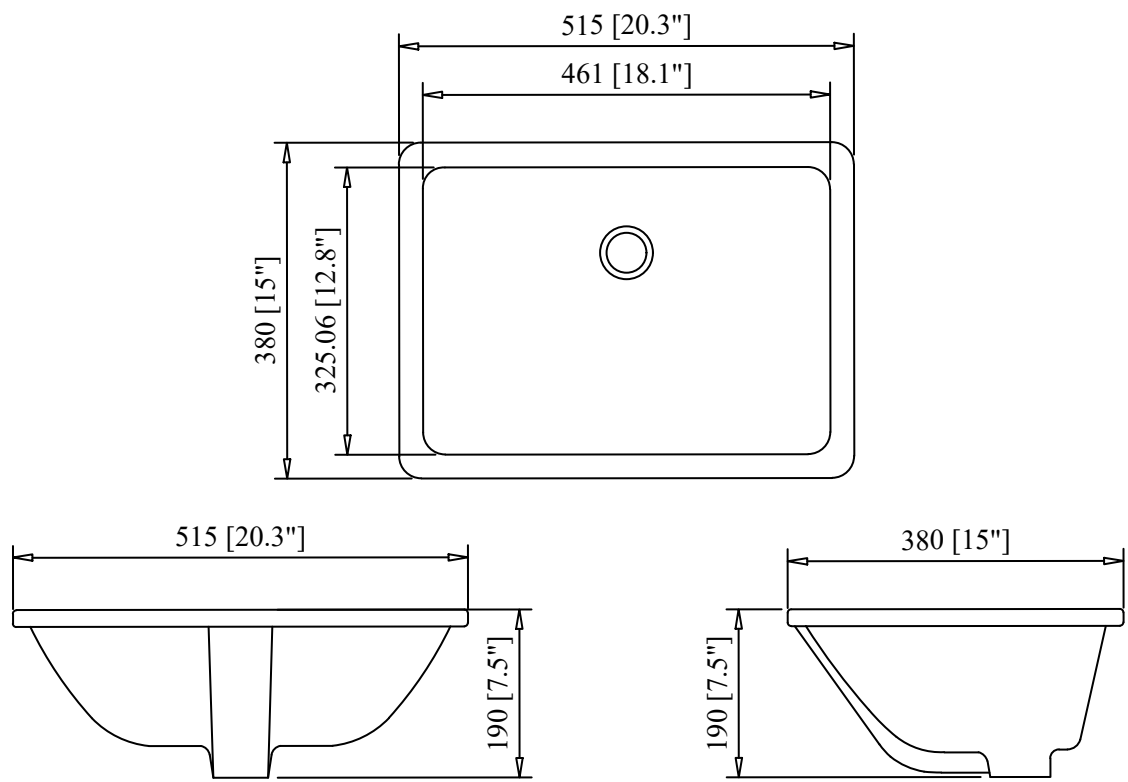

Vanity Installation

SUGGESTED TOOLS AND MATERIALS:



Sealant



Tape Measure




Safety Glasses

INSTALLATION INSTRUCTLONS


We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing .We accept no liability for any damage to the floor,plumbing, vanity cabinet,sink,counter top,or personal injury during installation.

1

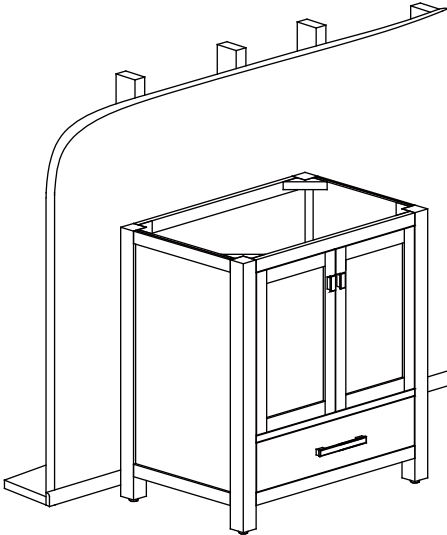


Remove vanity from box and examine vanity for any defects or damage.Carefully place vanity against wall.

2

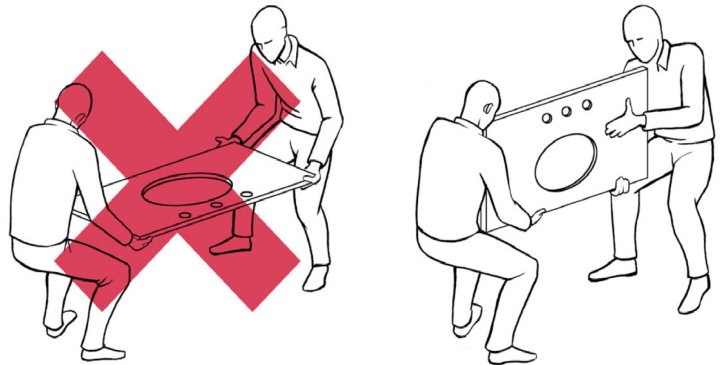


Always use a two man crew,a single person crew is much more likely to break or chip the stone top.

3

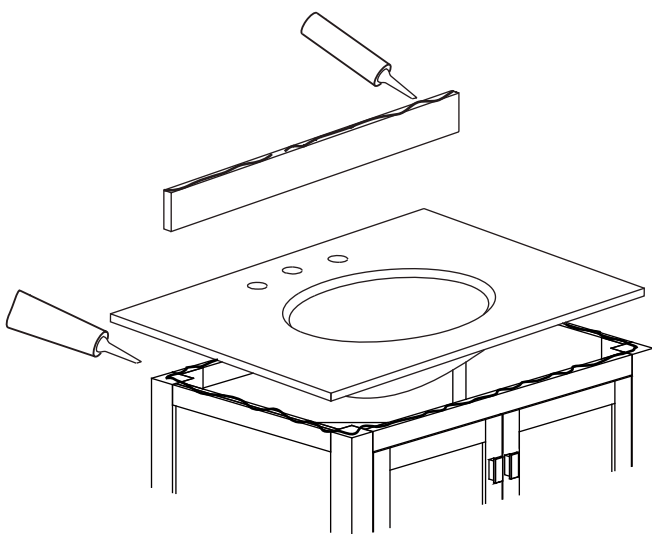

Apply bead of quality sealant evenly along the bottom of backsplash and the top of the vanity.

4

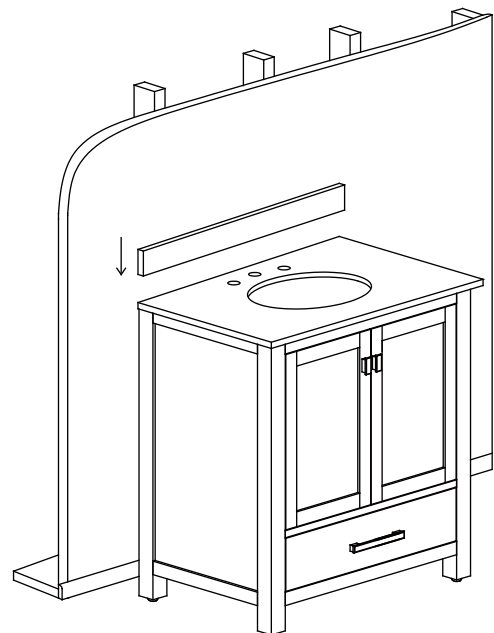

Finally,place the bottom side of back splash with sealant onto the counter top and check alignment of back splash.