



Assembling Instruction


Parts Included

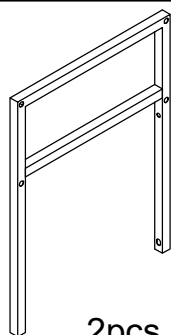


2pcs
A

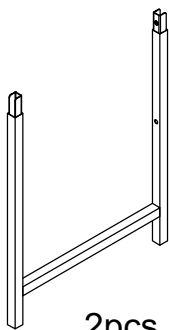

2pcs
B

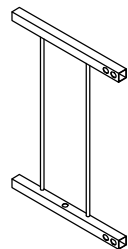


1pc
C

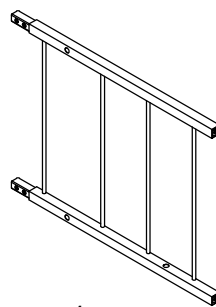


1pc
D




2pcs
E



2pcs
F

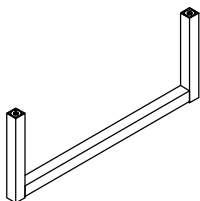


1pc
G

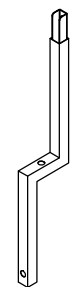


2pcs
H




2pcs
I

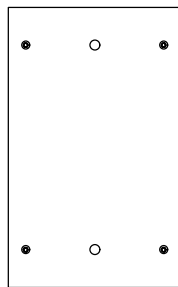


1pc
J

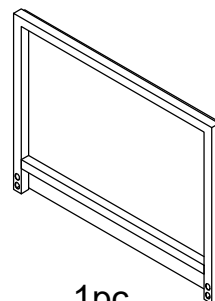


1pc
K

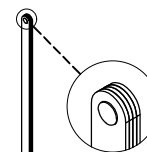


1pc
L

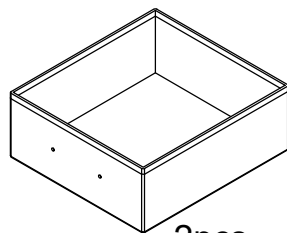


2pcs
M

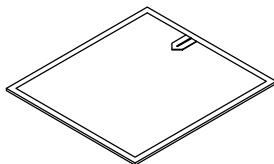


2pcs
N

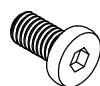

18pcs
①

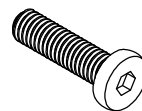


28pcs
②

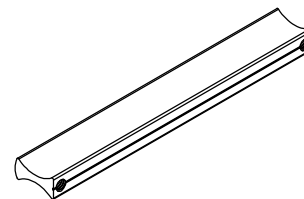


2pcs
③




5pcs
④

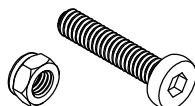


5pcs
⑤

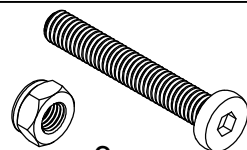


3pcs
⑥

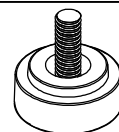


4pcs
⑦

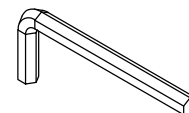


1pc
⑧

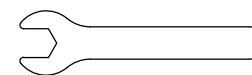

1pc
⑨

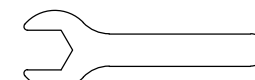


1pc
⑩

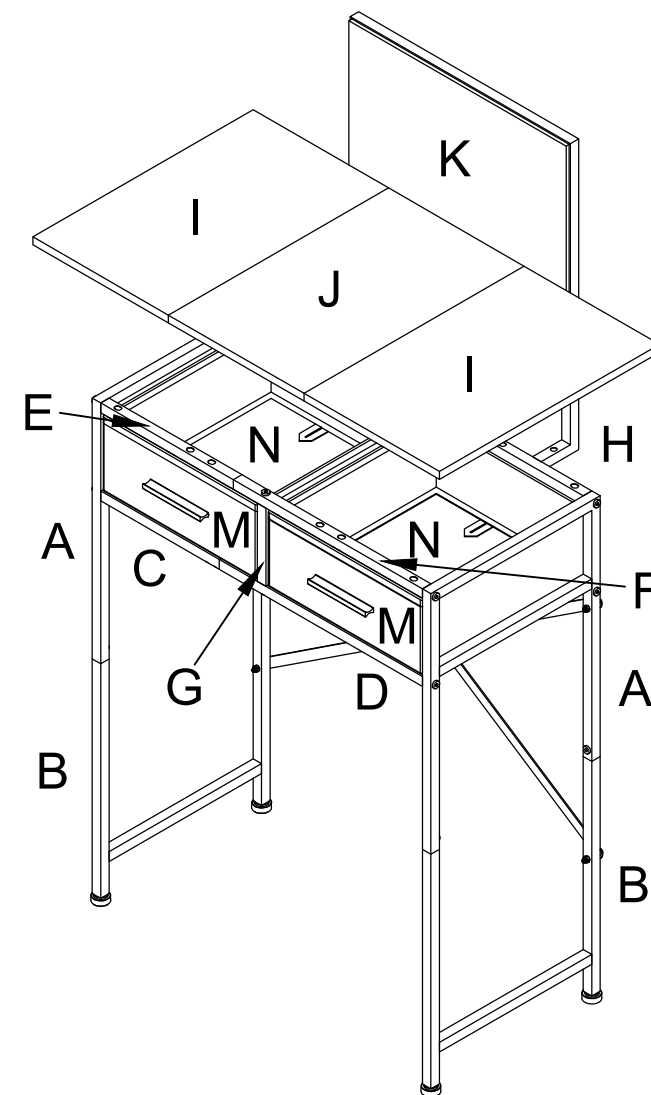


1. Attach the adjusting foot ⑦ to the bottom of B, connect A and B and lock them with screw ①.
Please note that A and B tubes with holes on the side are on the same side.

X2

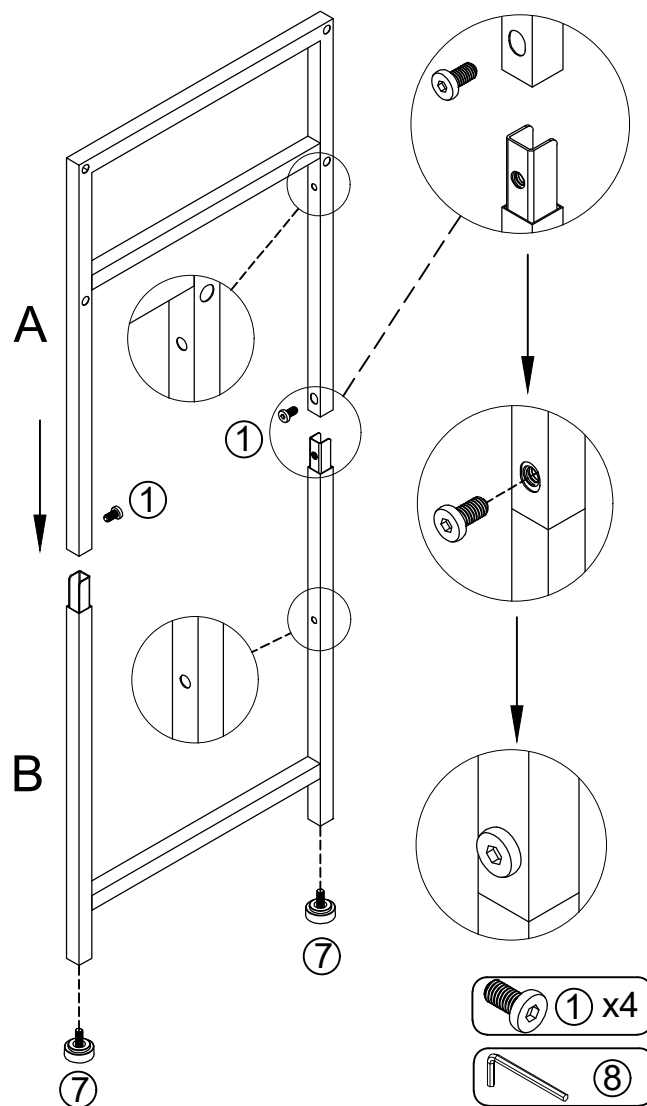


2. Connect C and D and lock them with screw ①.

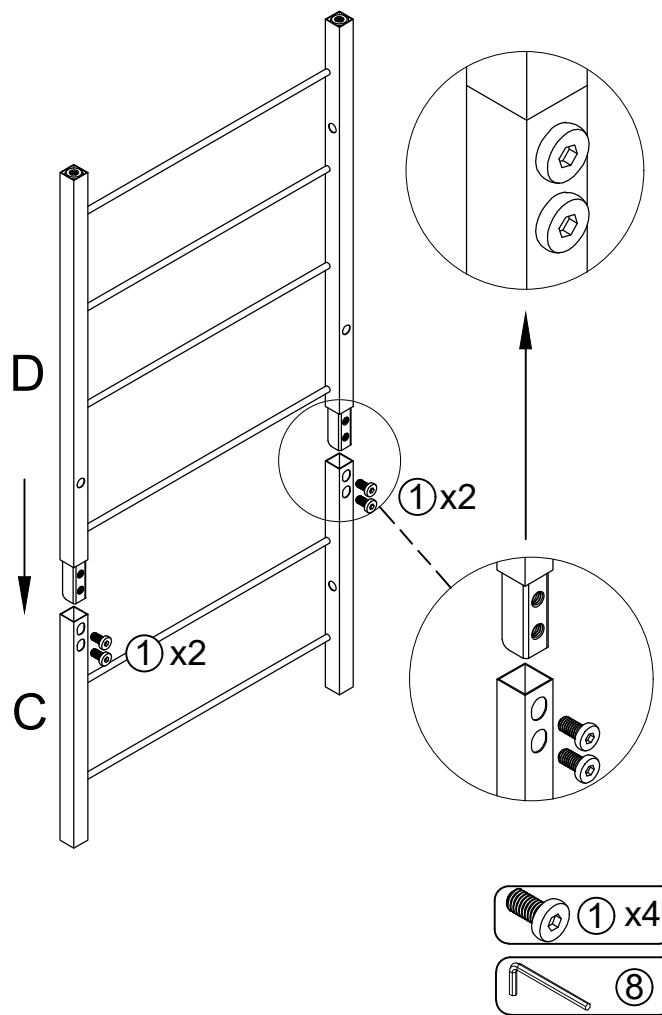


3. Connect E and F and lock them with screw ①.


X2

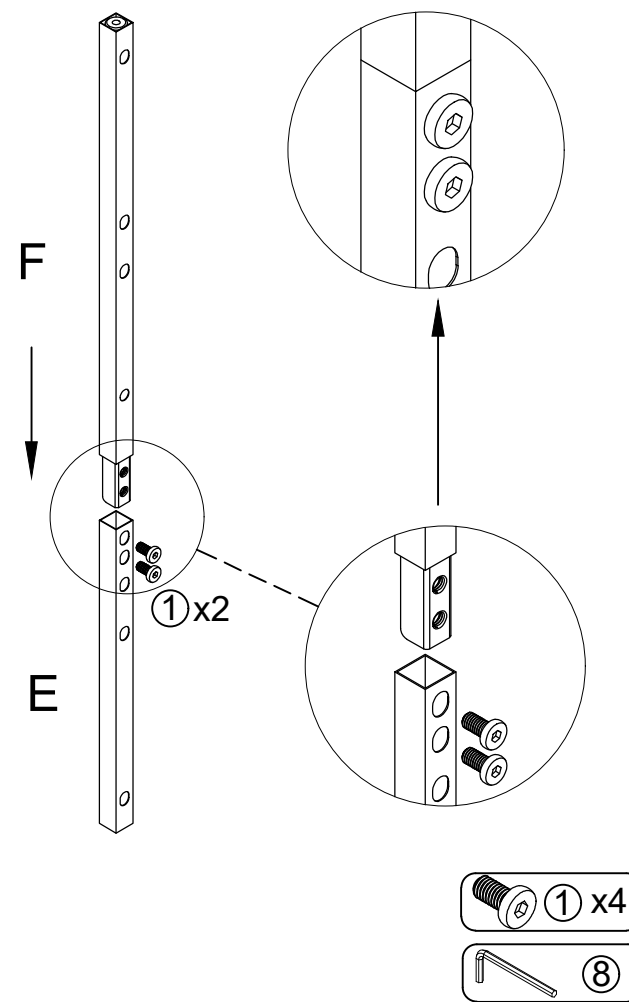


4.Lock CD and EF on G with screw ②. Do not lock the screws completely in this step.
Please note that the screws for CD and EF are on the underside.

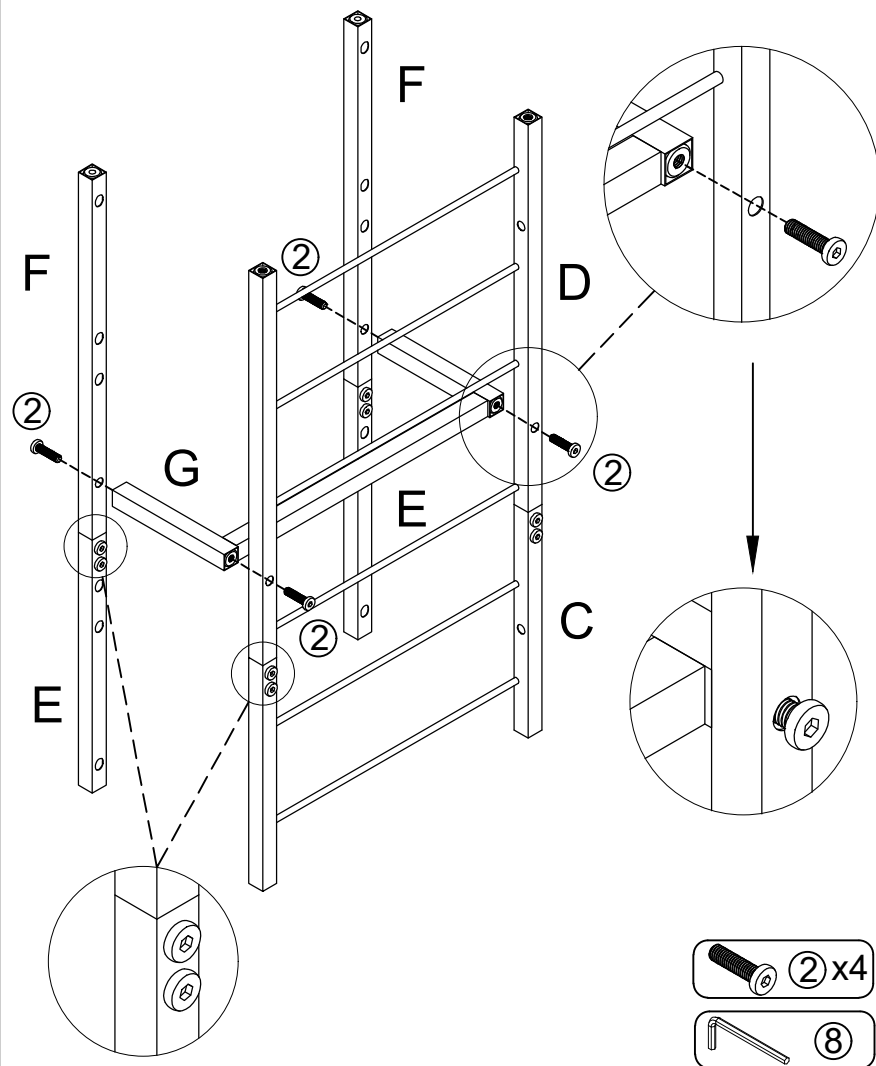



5.Assemble AB and CDEFG with screw ②. Do not lock the screws completely yet.
Please note that the holes in the tube AB are facing upwards, and the holes in the tube CD are also facing upwards.

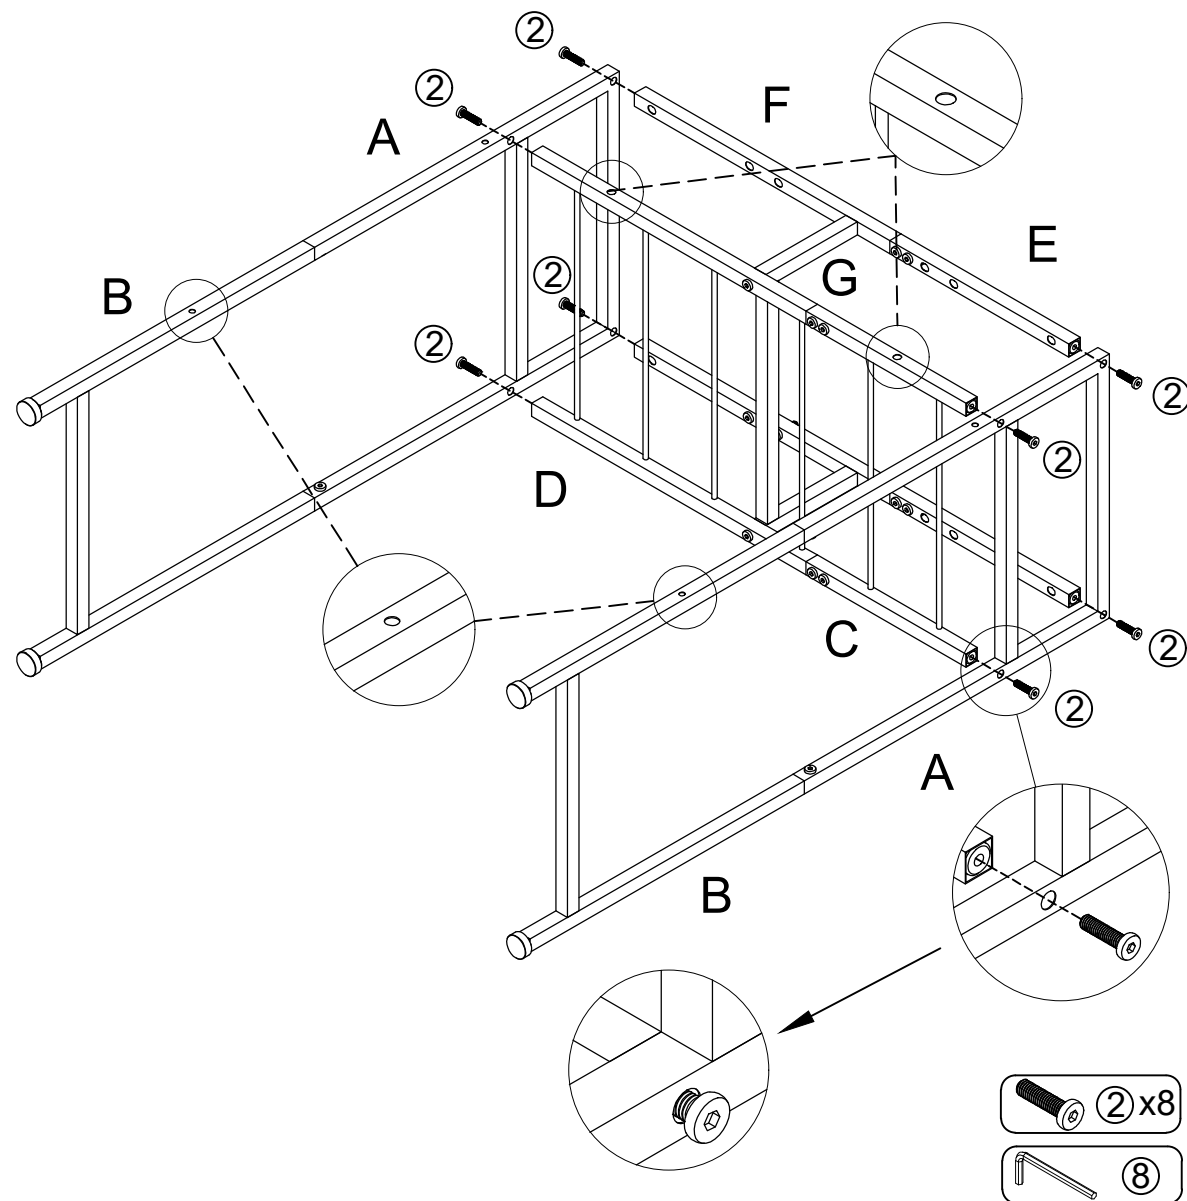

6. Unfold L as shown in the figure.

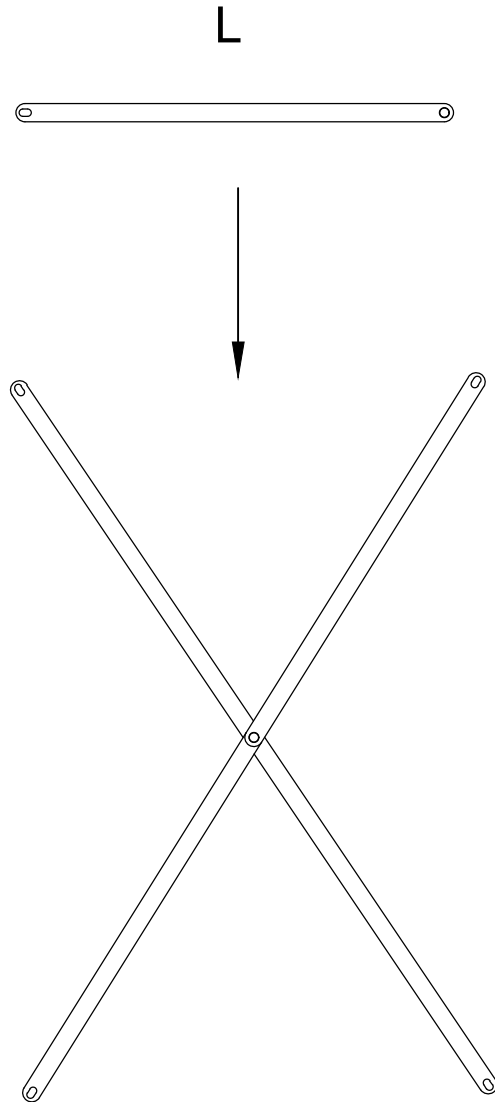


7. Use screw ⑤ to lock L to the shelf, and then lock it after all the screws are in place. Lock the screws in steps 4 and 5.

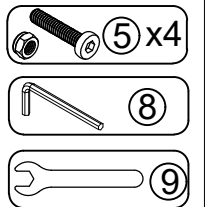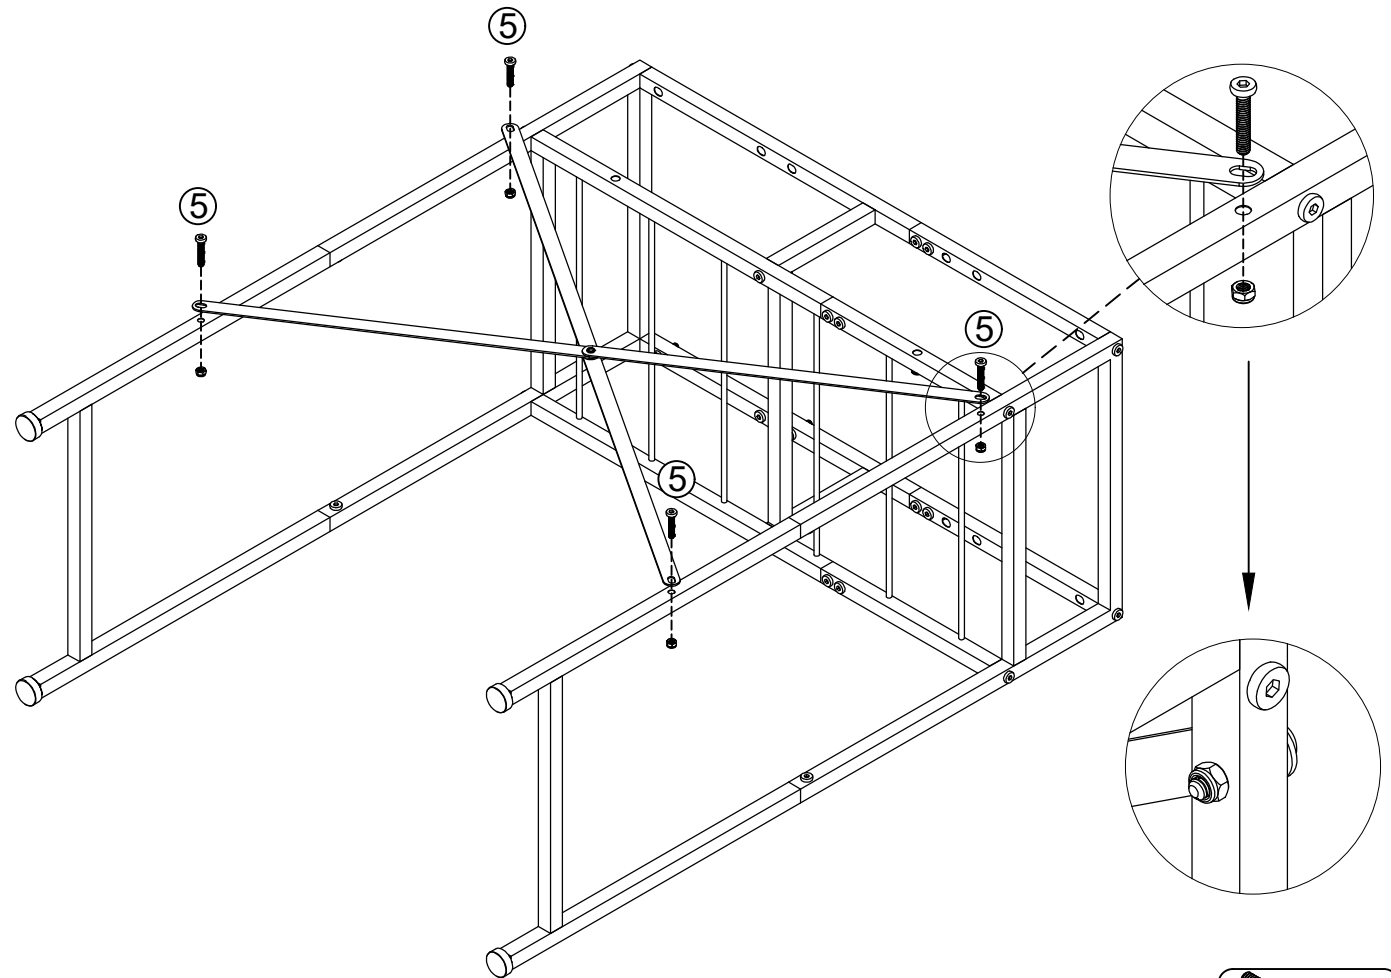


8.Lock the boards I and J to the tube EF with screws ②. Wait until all the screws are installed before locking.

Please note that minimise the gap at the board splices before locking.

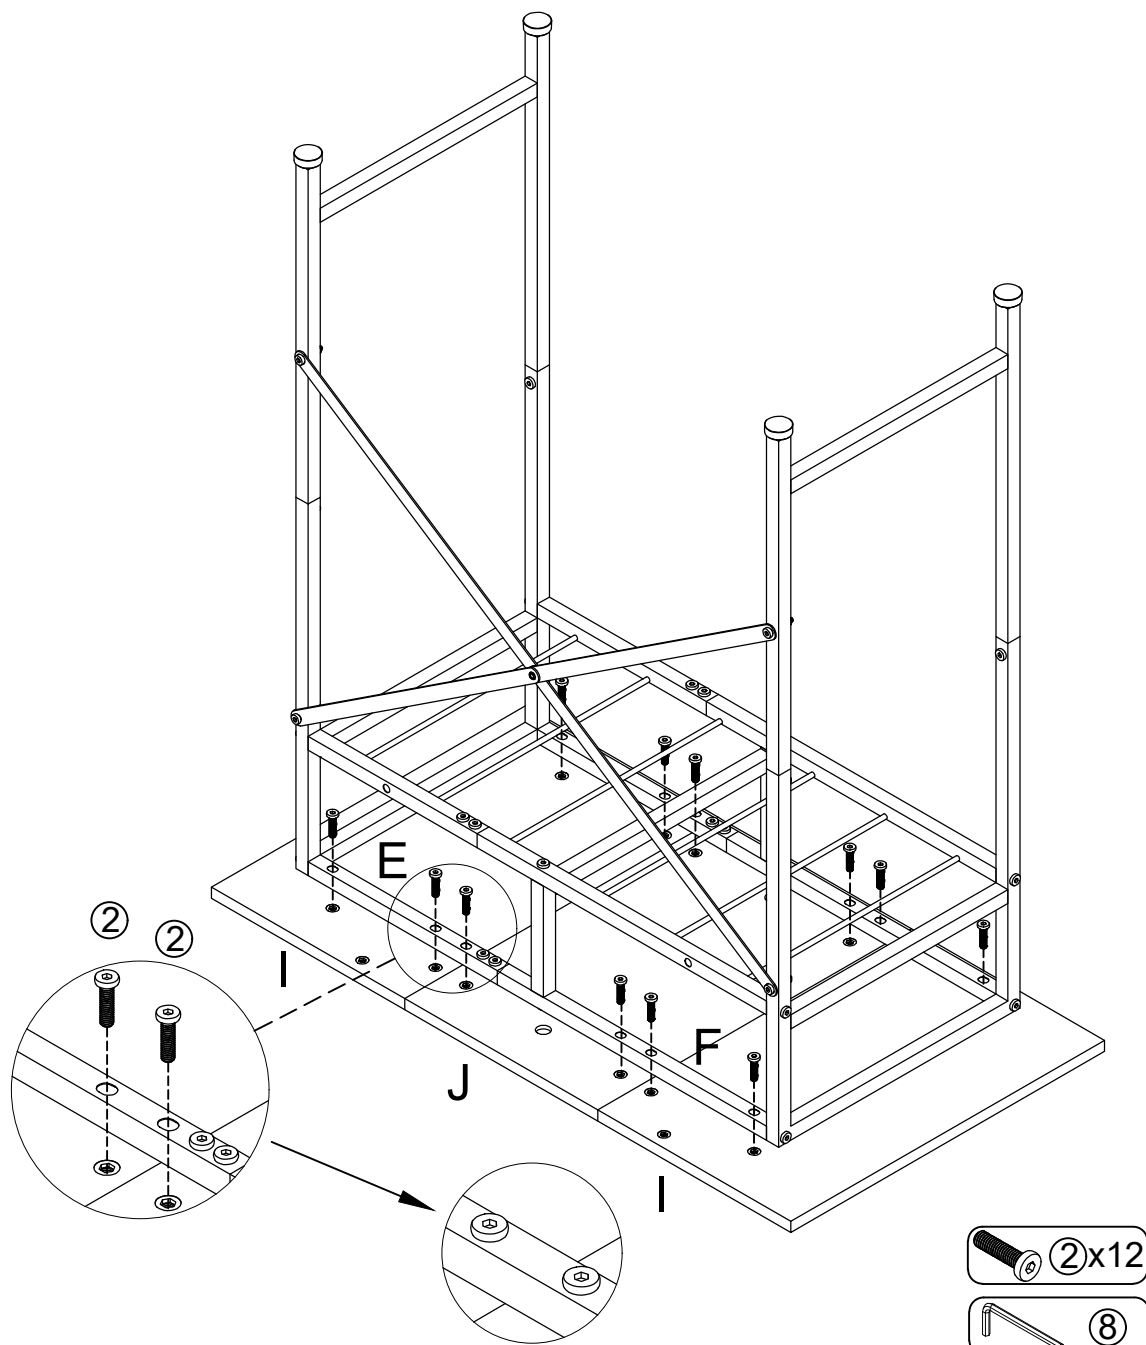

9.Assemble H, K, and lock them with screw ①.


Please note that be careful when installing to avoid damage to the mirror.

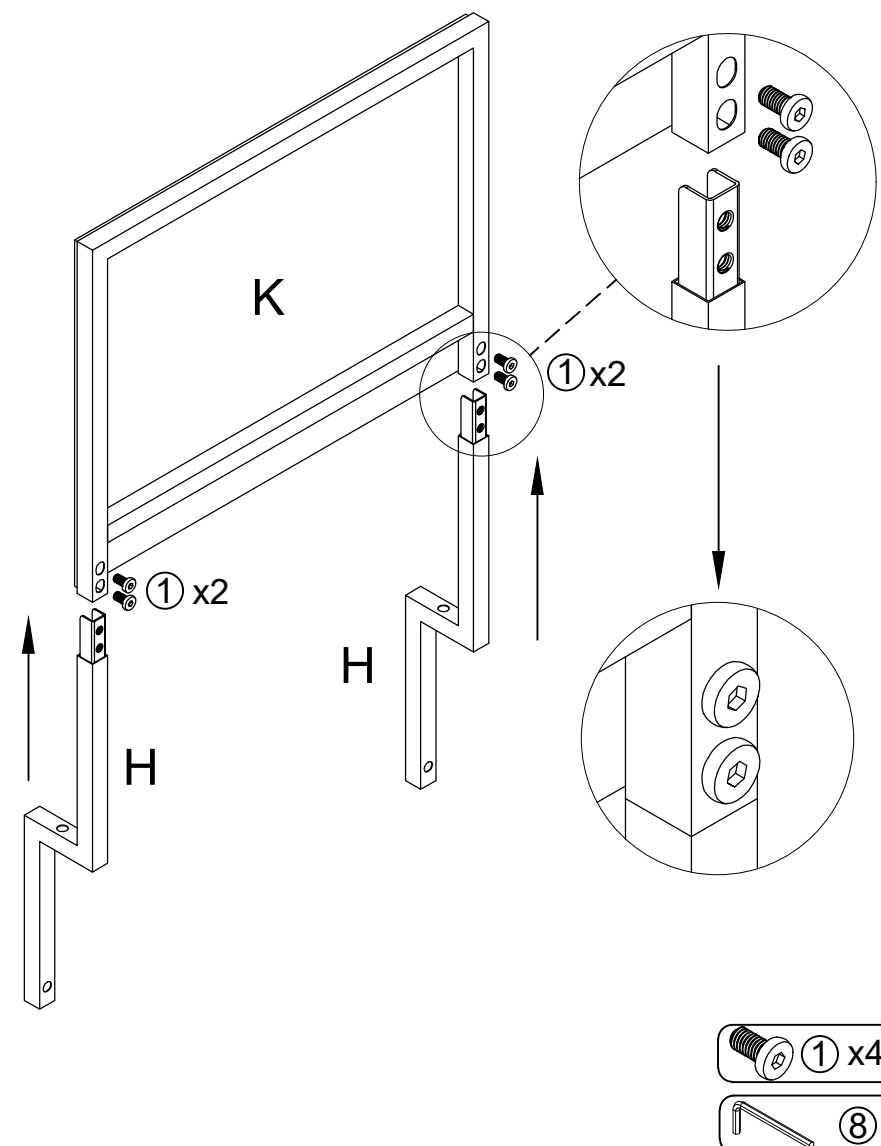

10. Two people are recommended for this step. One person holds the HK and the other locks the screws.


10.1 Lock the HK to the tube CD with screw ⑥;

10.2 Lock the HK to the board I with screw ②.

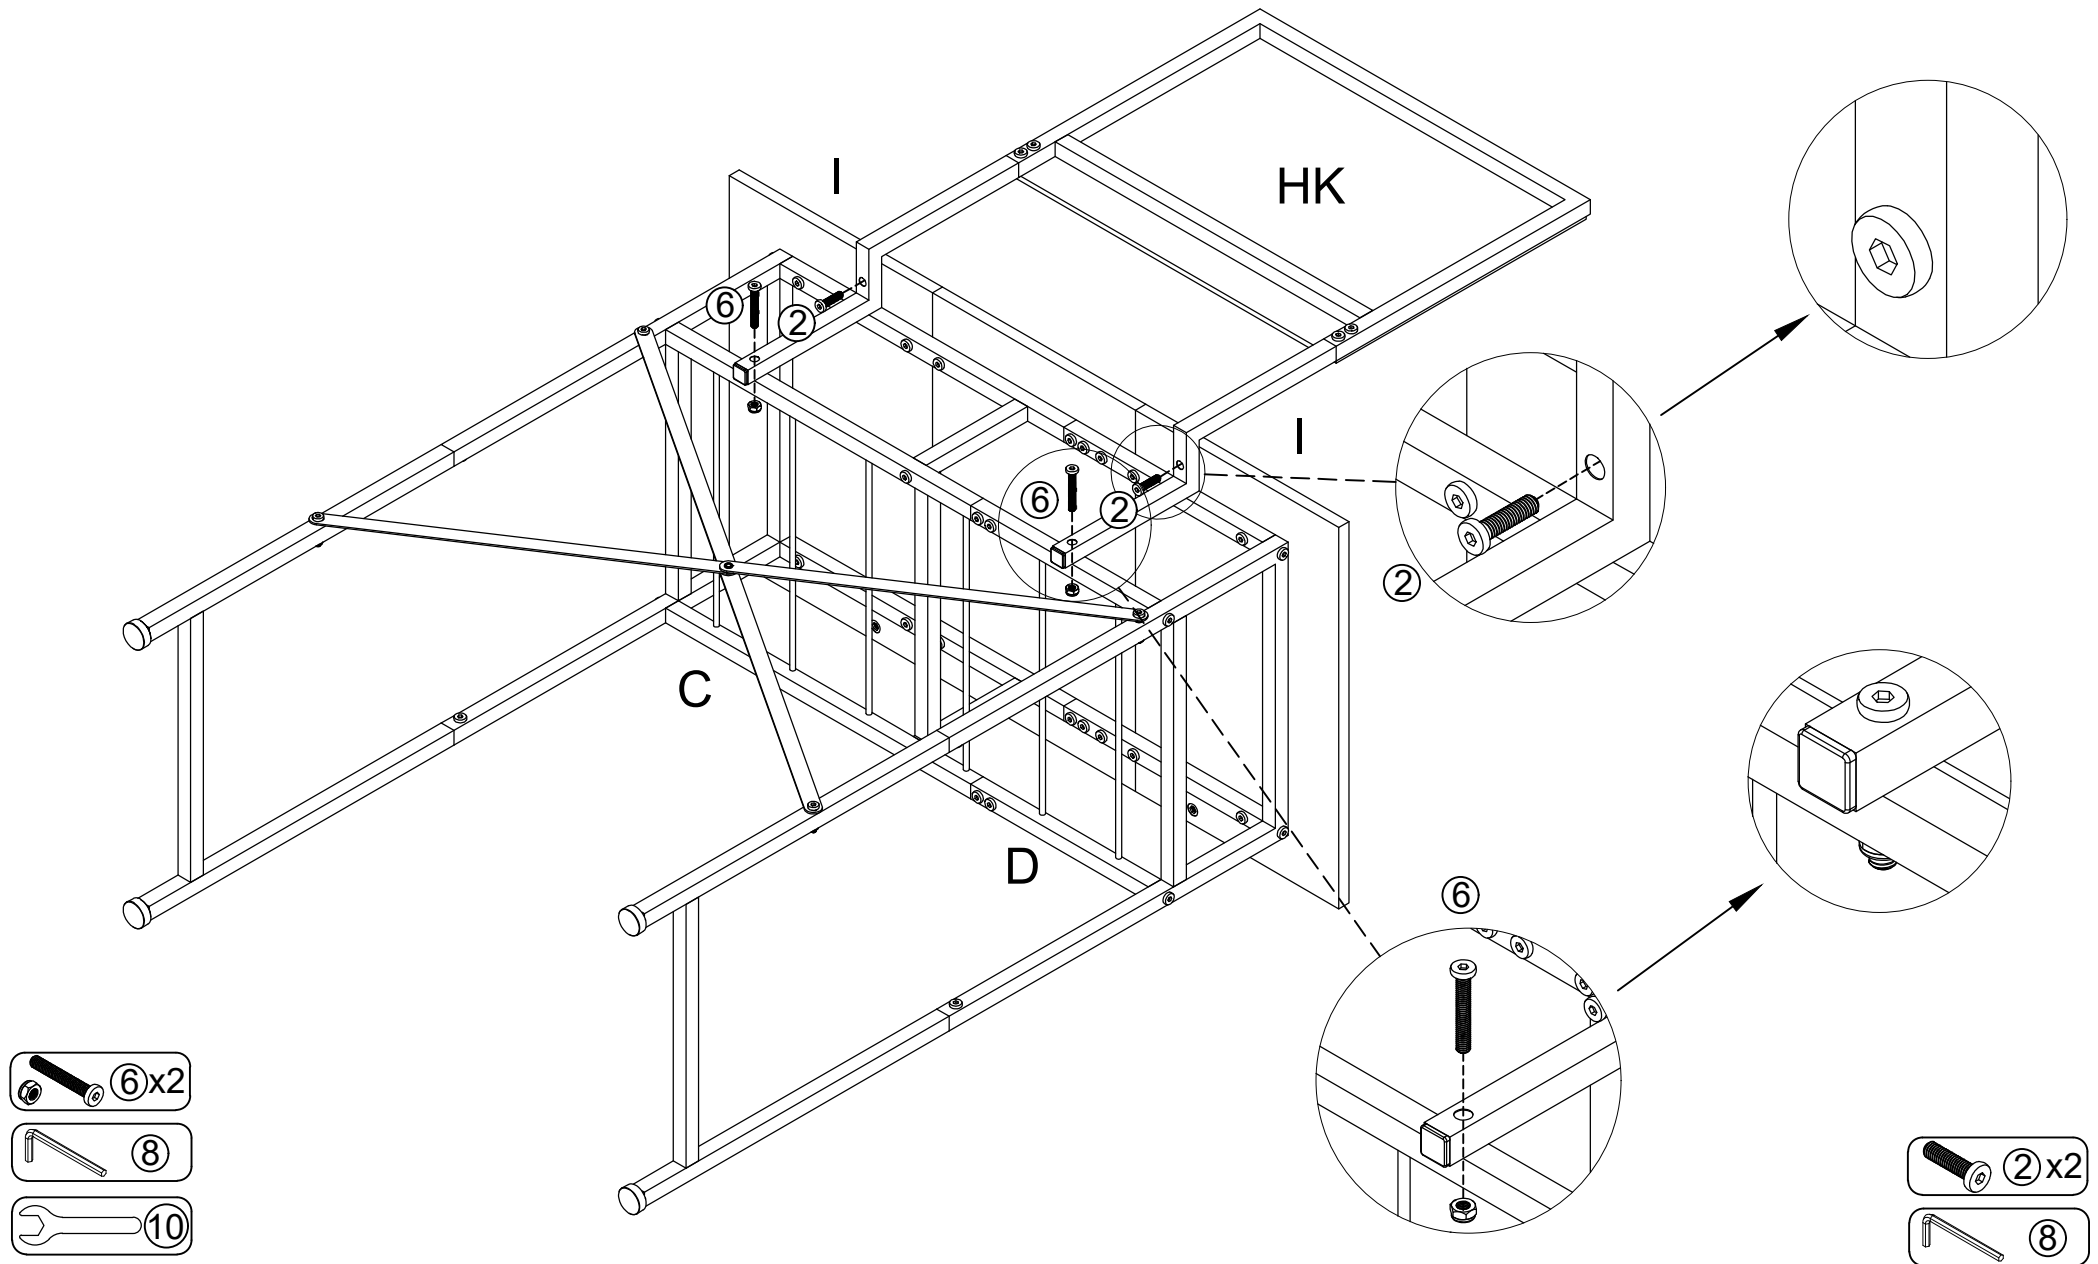



11.Place N inside M.

X2

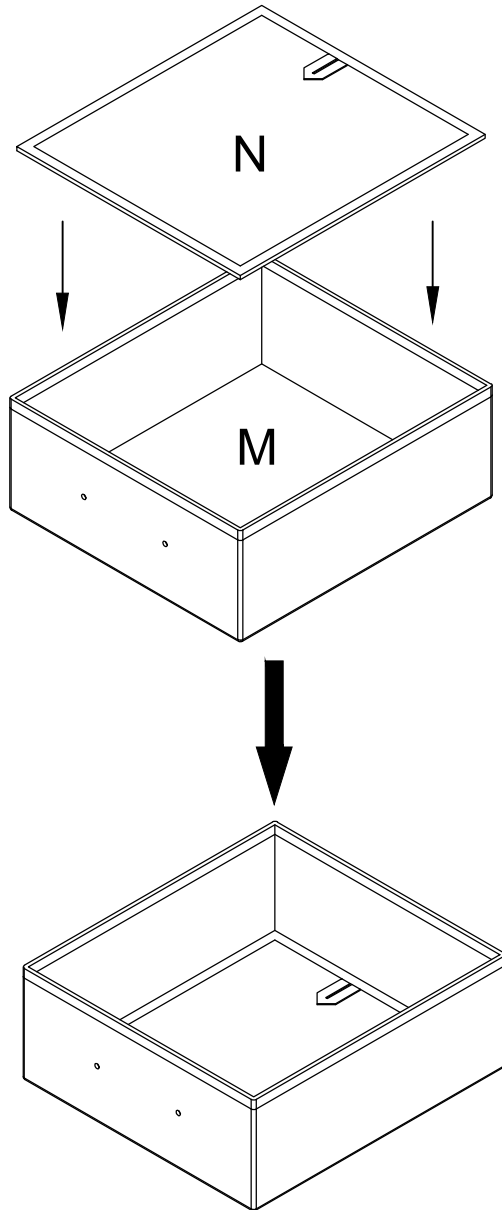


12.Lock handle ③ to drawer M with screw ④.
(Phillips screwdriver required)

X2

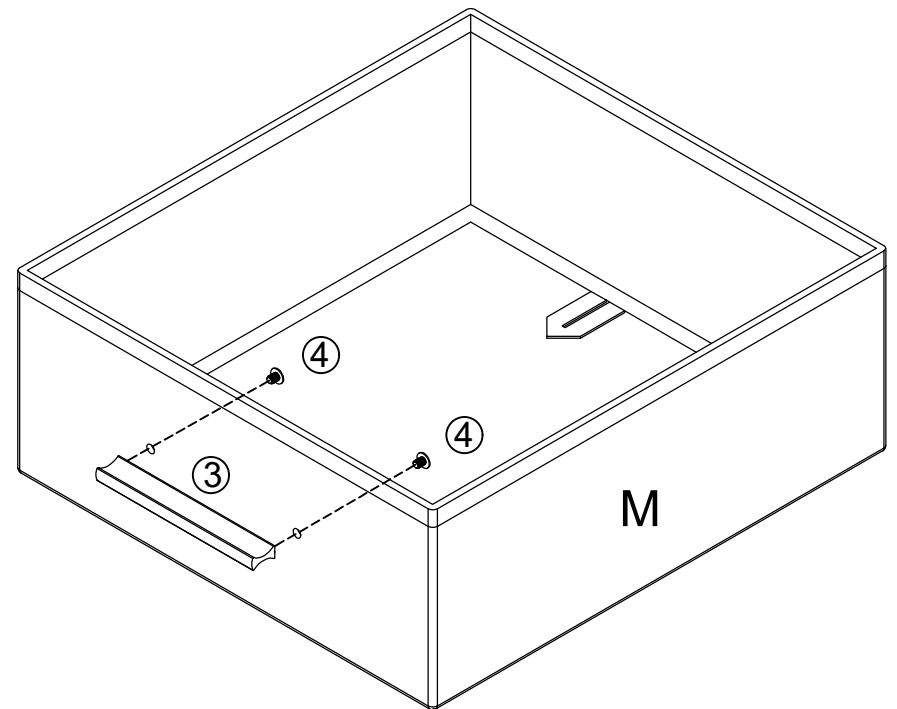

13. Fit the drawer MN into the shelf.

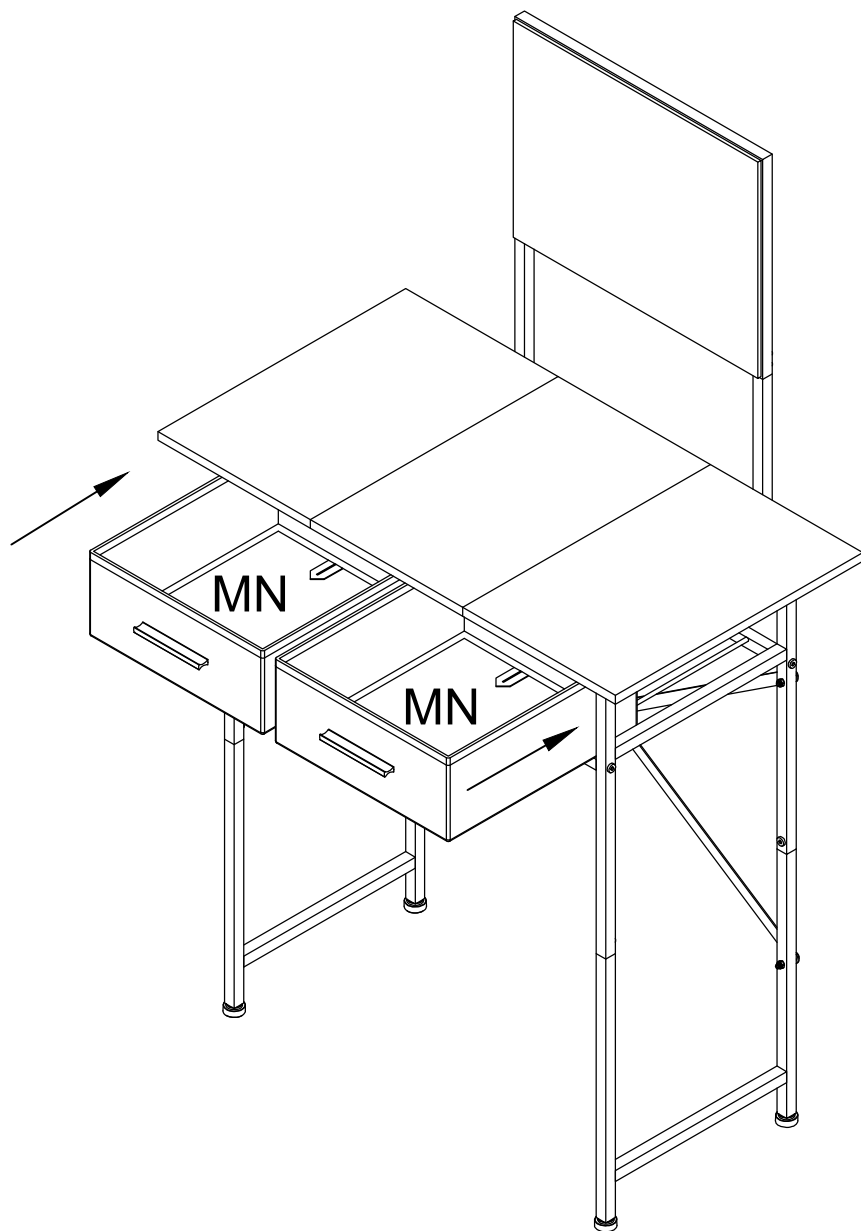

14. Installation is complete.
If the shelf is uneven in height, you can adjust the adjustable feet to keep it flat.

