

INSTALLATION MANUAL





Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

-  Please read all instructions carefully .
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.




Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

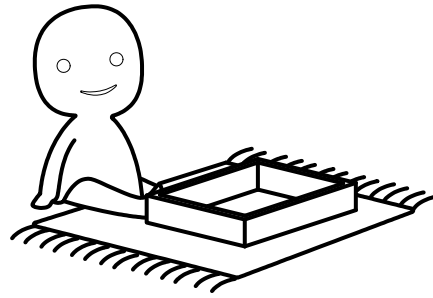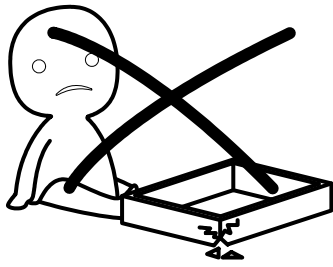

AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

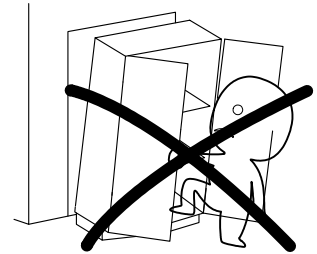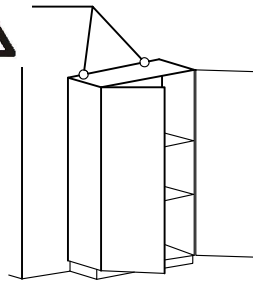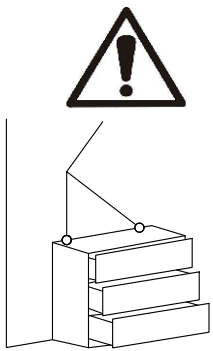

ANTI-TOPPLE WARNING !

Overtured furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw be retightened 2 weeks after assembly and once every 3 months in order to assure stability throughout the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

Completed Assembly

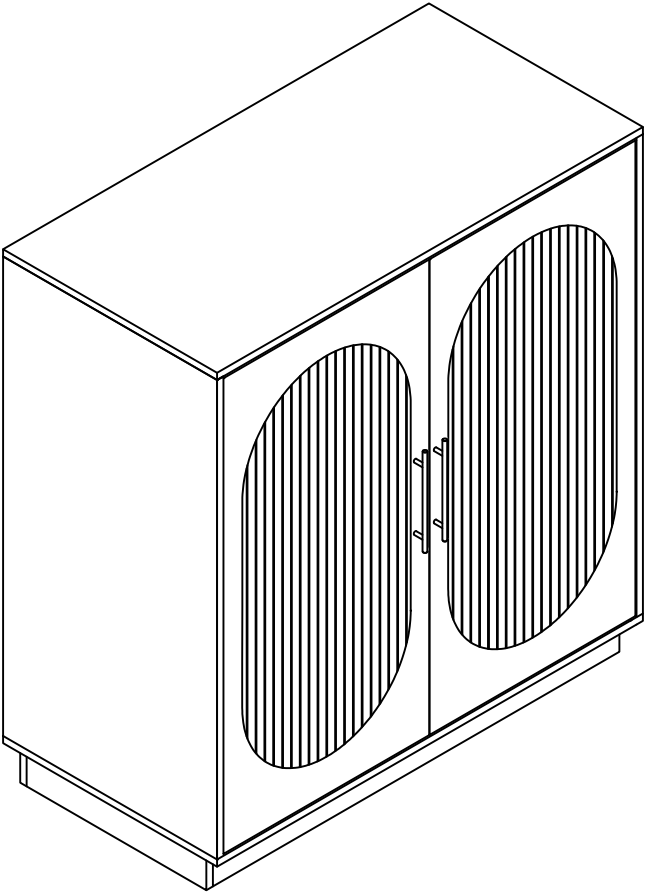

Parts Description

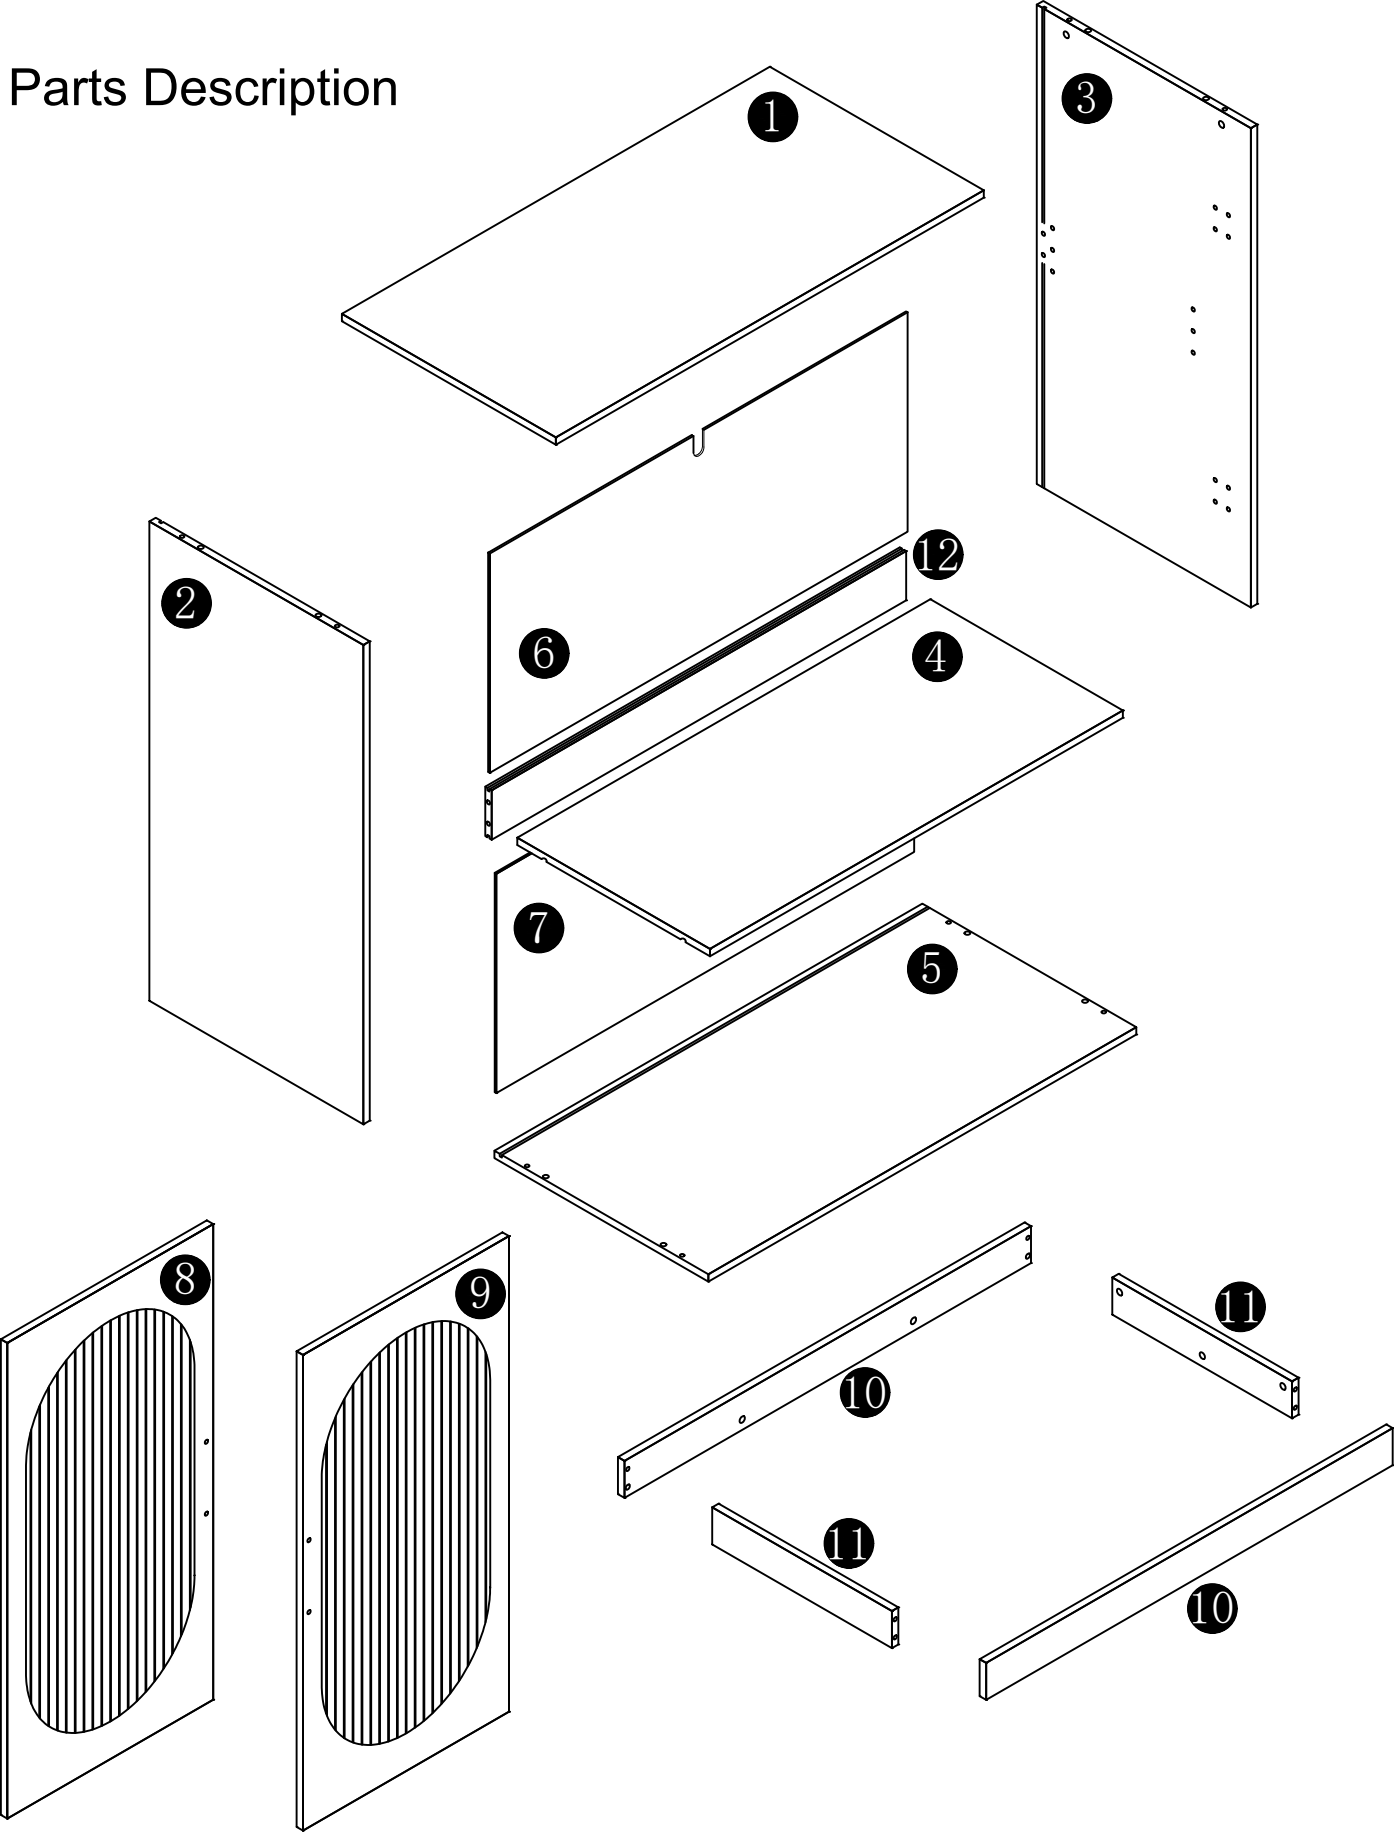

x18

A 3D perspective drawing of a cylindrical object, possibly a container or a component. The top surface is circular and features a central cross-shaped cutout. The side of the cylinder is covered in vertical lines, suggesting a ribbed or textured surface. The bottom edge is slightly irregular, showing some internal structure or a break in the surface.

x18

x12

x4

x24

 x^2

x2

x4

x4

x1

x1

x4

x1

 x^2

A technical drawing of a mechanical assembly. It features a base plate with two circular holes. A vertical pin is inserted through one of the holes. A lever arm is pivoted on this pin. The lever arm has a curved end with a small rectangular protrusion. Another component, possibly a spring or a guide, is shown interacting with the lever arm.

x4

An isometric drawing of a mechanical component. It features a main rectangular block with a smaller rectangular base attached to its front. On the right side of the main block, there are two parallel horizontal slots. A handle, shaped like a U-shaped bracket, is attached to the front of the base.

x1

A diagram of a beam with a fulcrum in the middle. The beam is tilted upwards on the right side, indicating that the right side is heavier or has a greater moment.

 x^2

x1



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock





CAM BOLT





CAM LOCK

Cam Bolt

Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

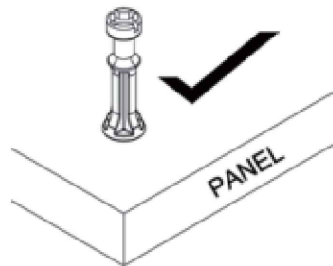
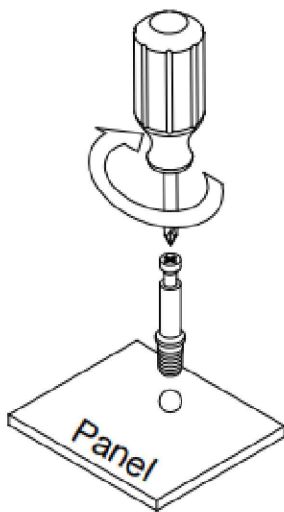


Shoulder is flushed
(on the same level)
with the panel.

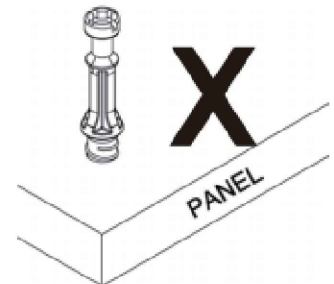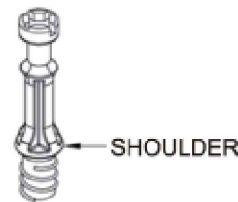

Shoulder is
above the panel.



CAM-LOCK
Align the arrow on the Cam-lock to the
Cam-bolt head and insert the Cam-lock.

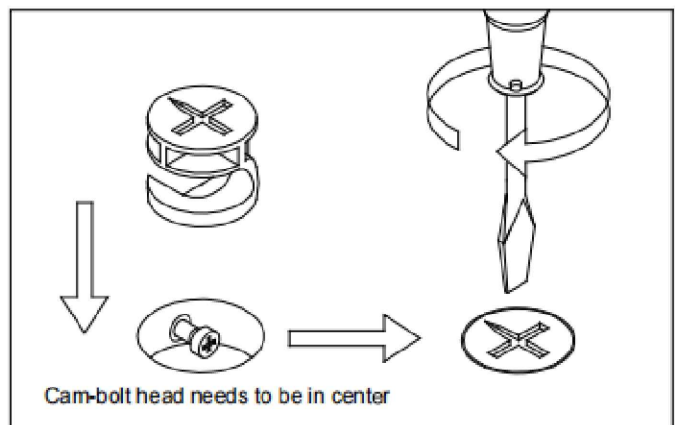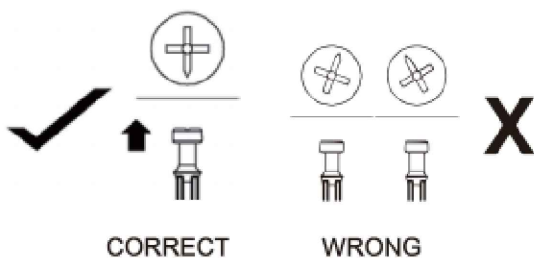

Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.


Step 1

Hardware Needed		
A		X4

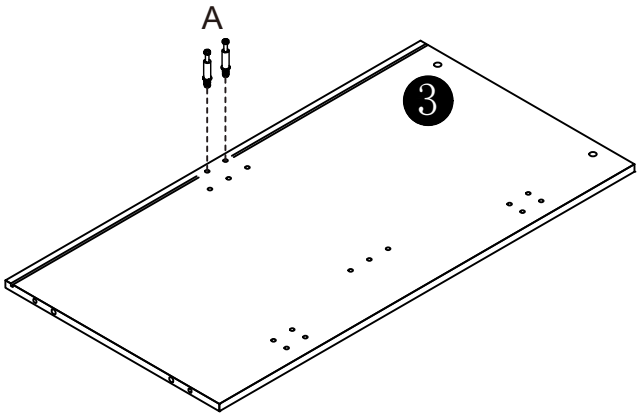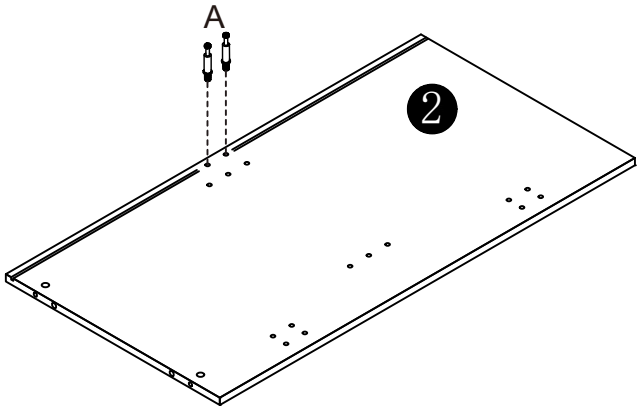


Step 2


Hardware Needed		
B		X4

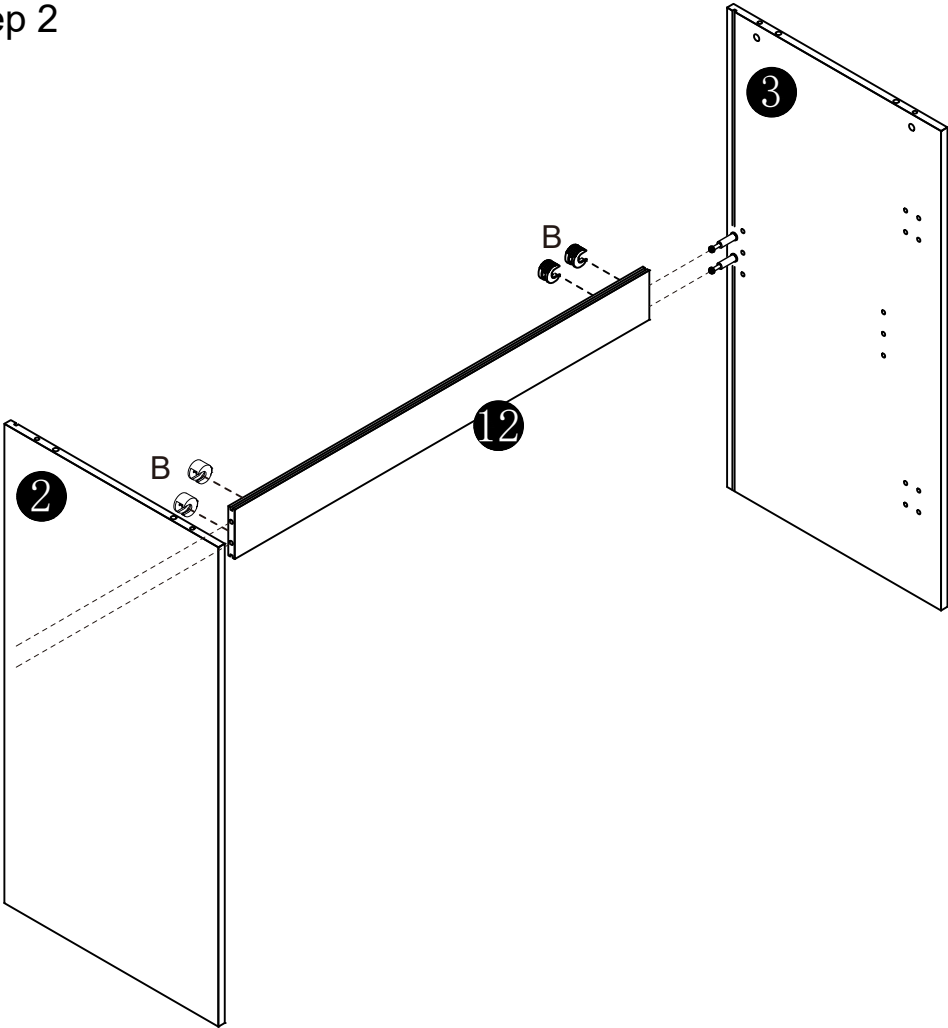

Step 3

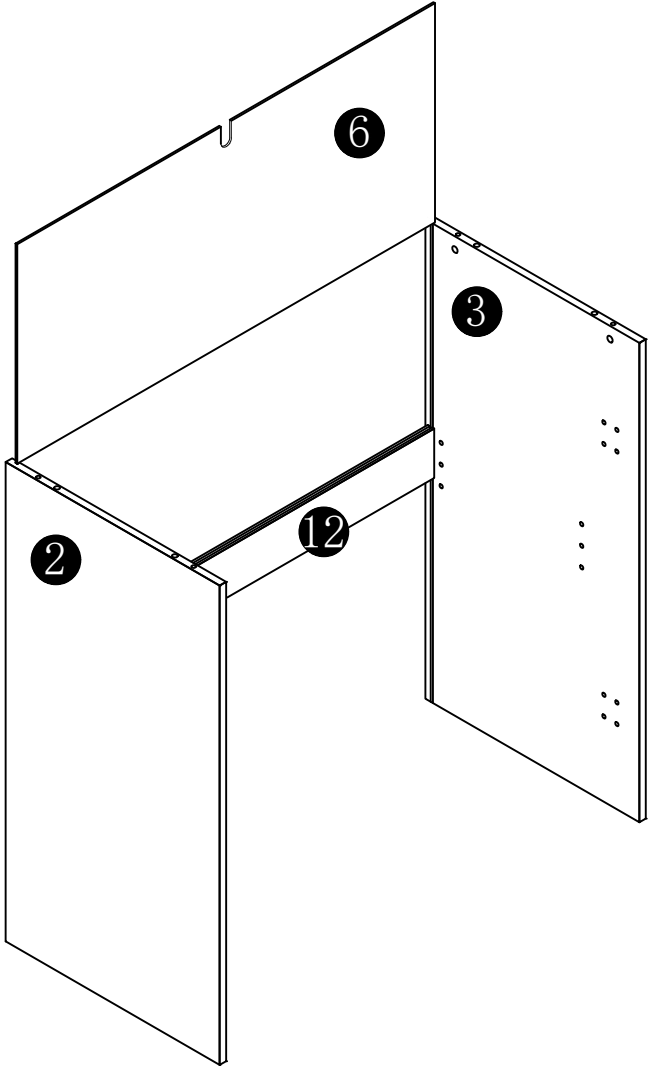


Step 4

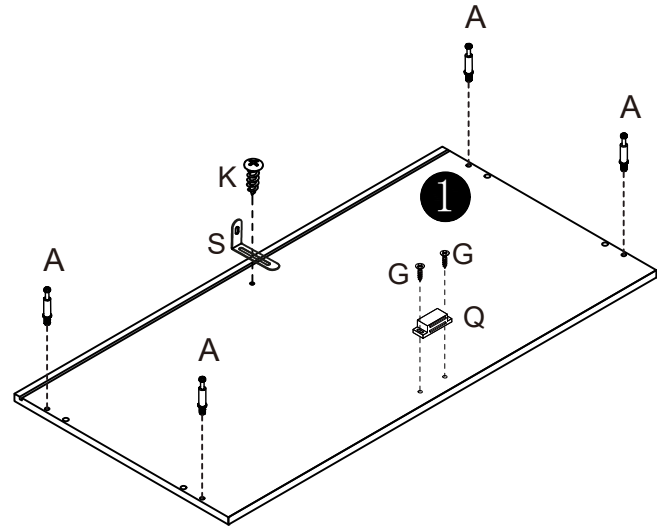

Hardware Needed		
A		X4
S		X1
K		X1
G		X2
Q		X1


Step 5

Tip: The groove of the back plate of the No. 1 plate corresponds to the No. 6 plate.

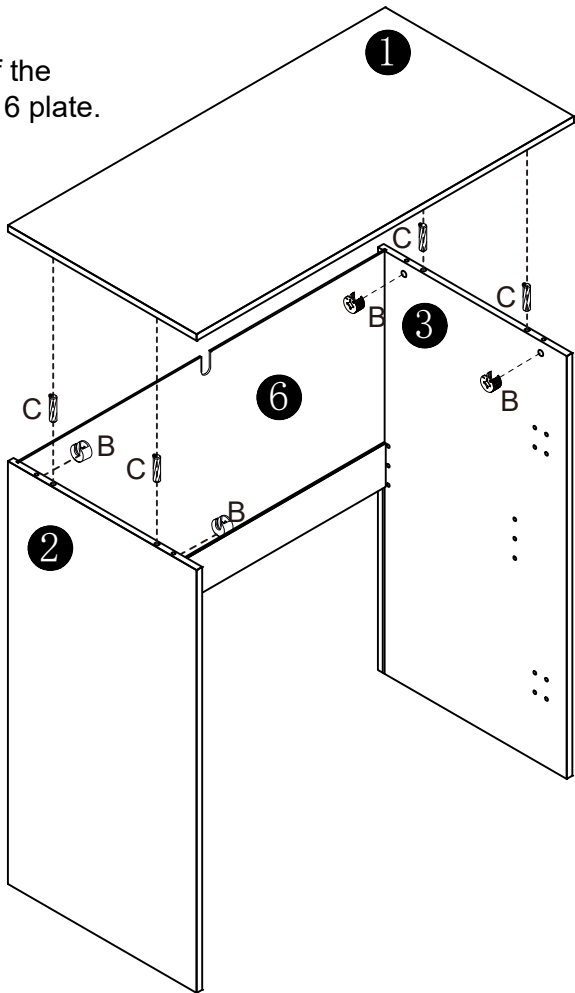


Hardware Needed		
B		X4
C		X4

Step 6

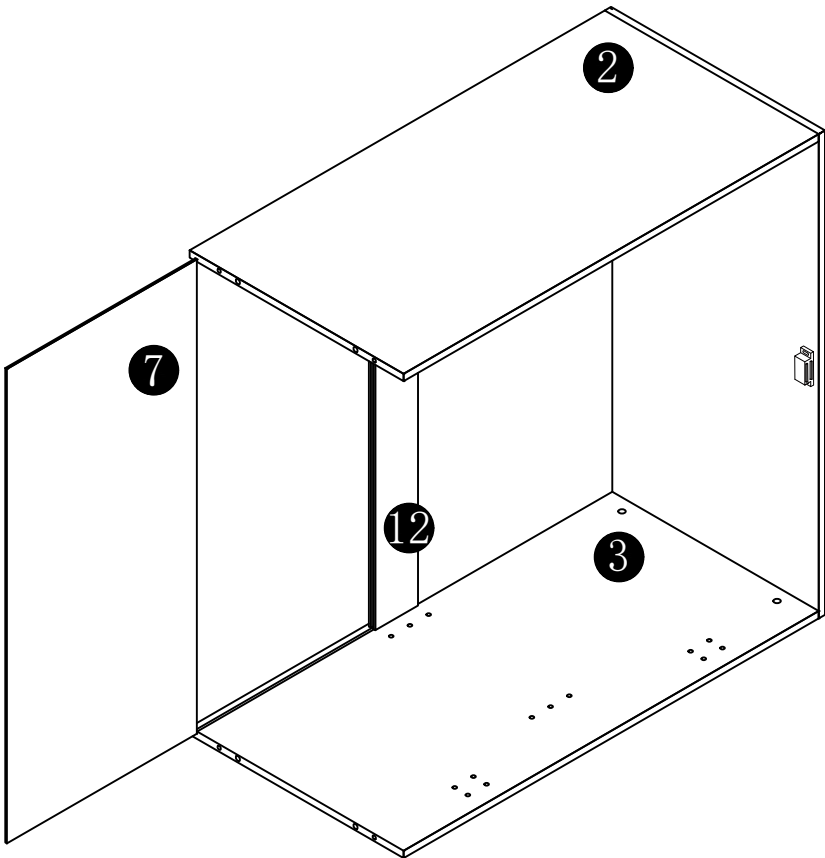


Step 7

Hardware Needed		
A		X6

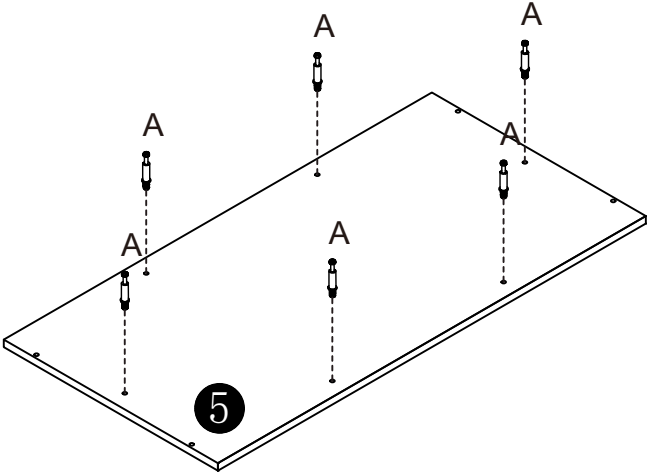


Step 8


Hardware Needed		
C		X4
D		X4

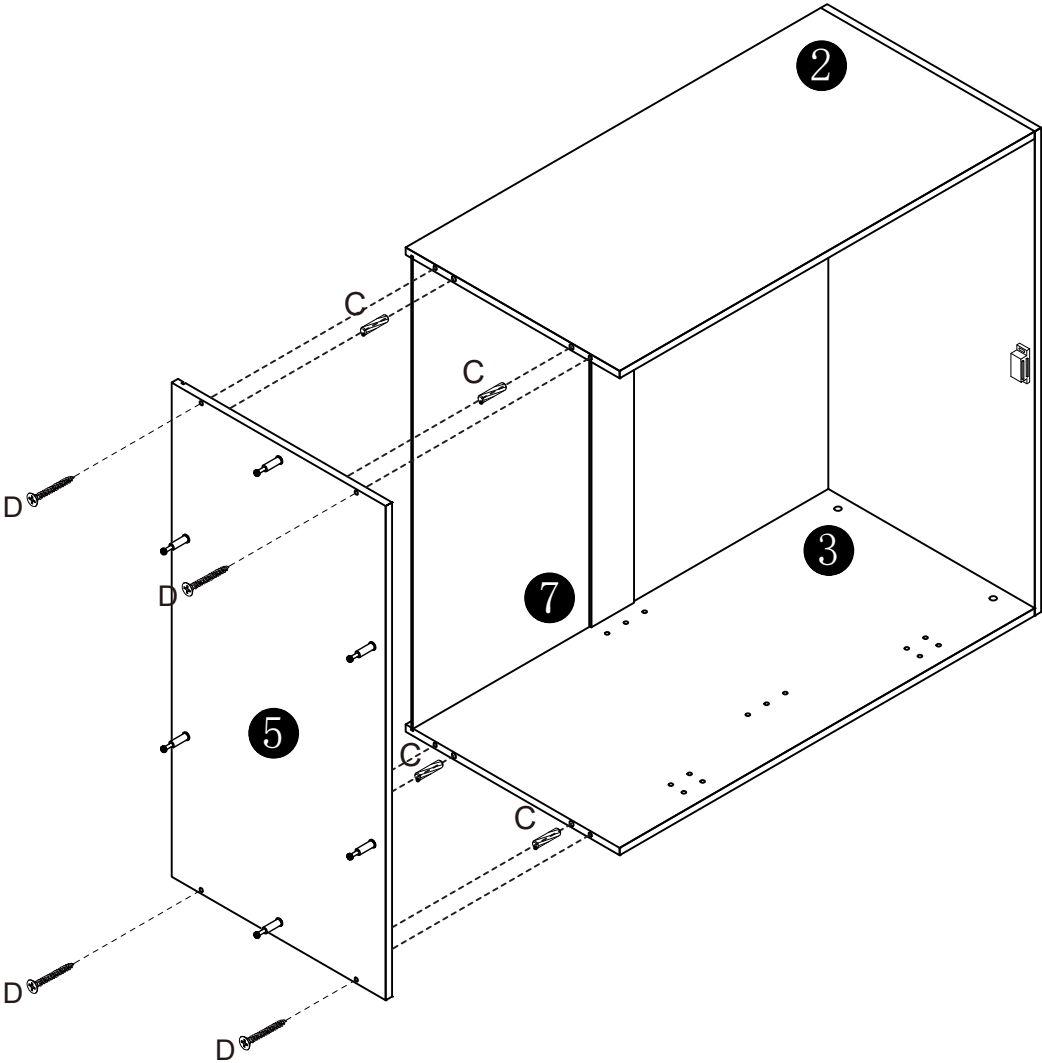


Step 9

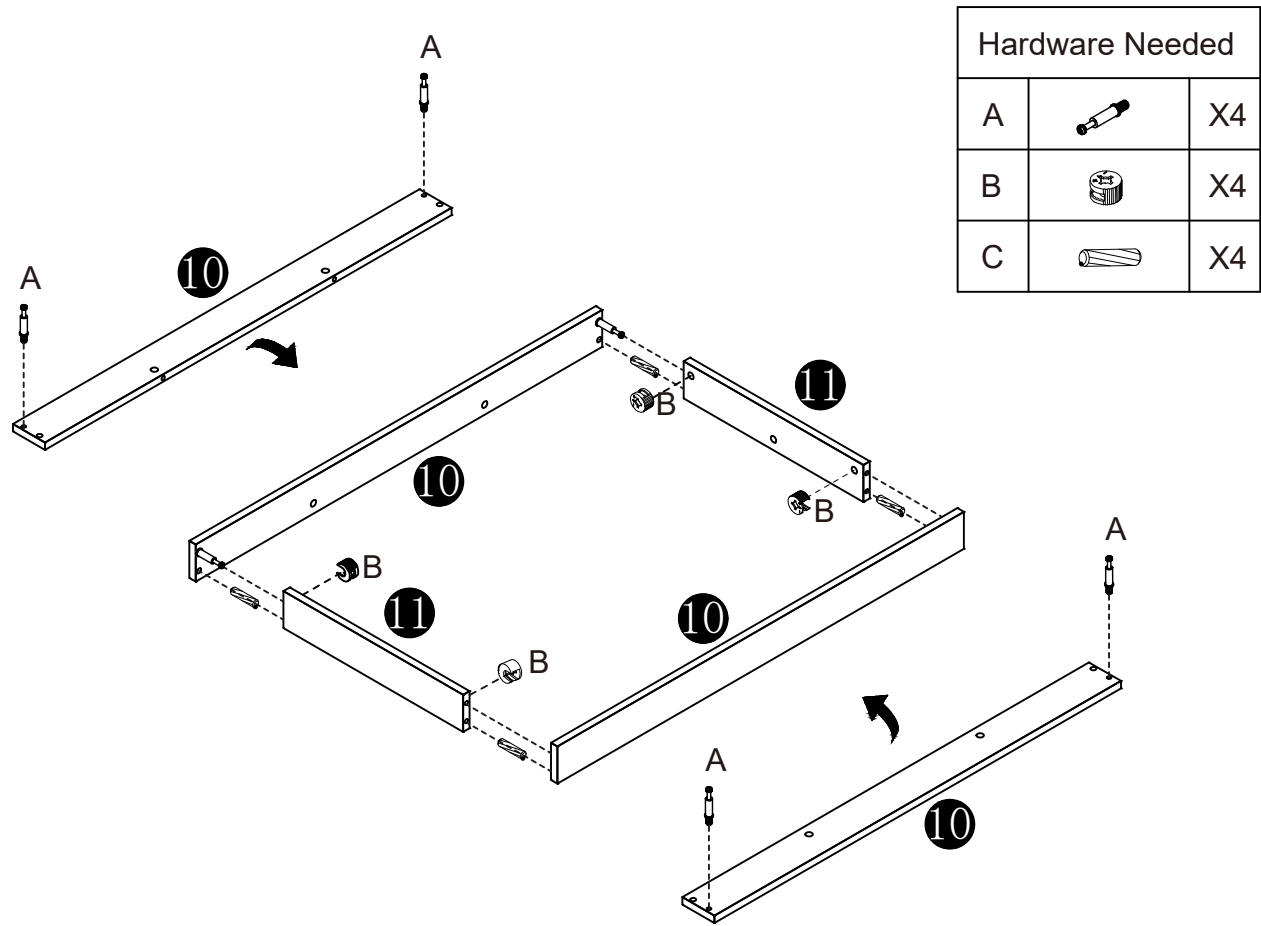

Step 10

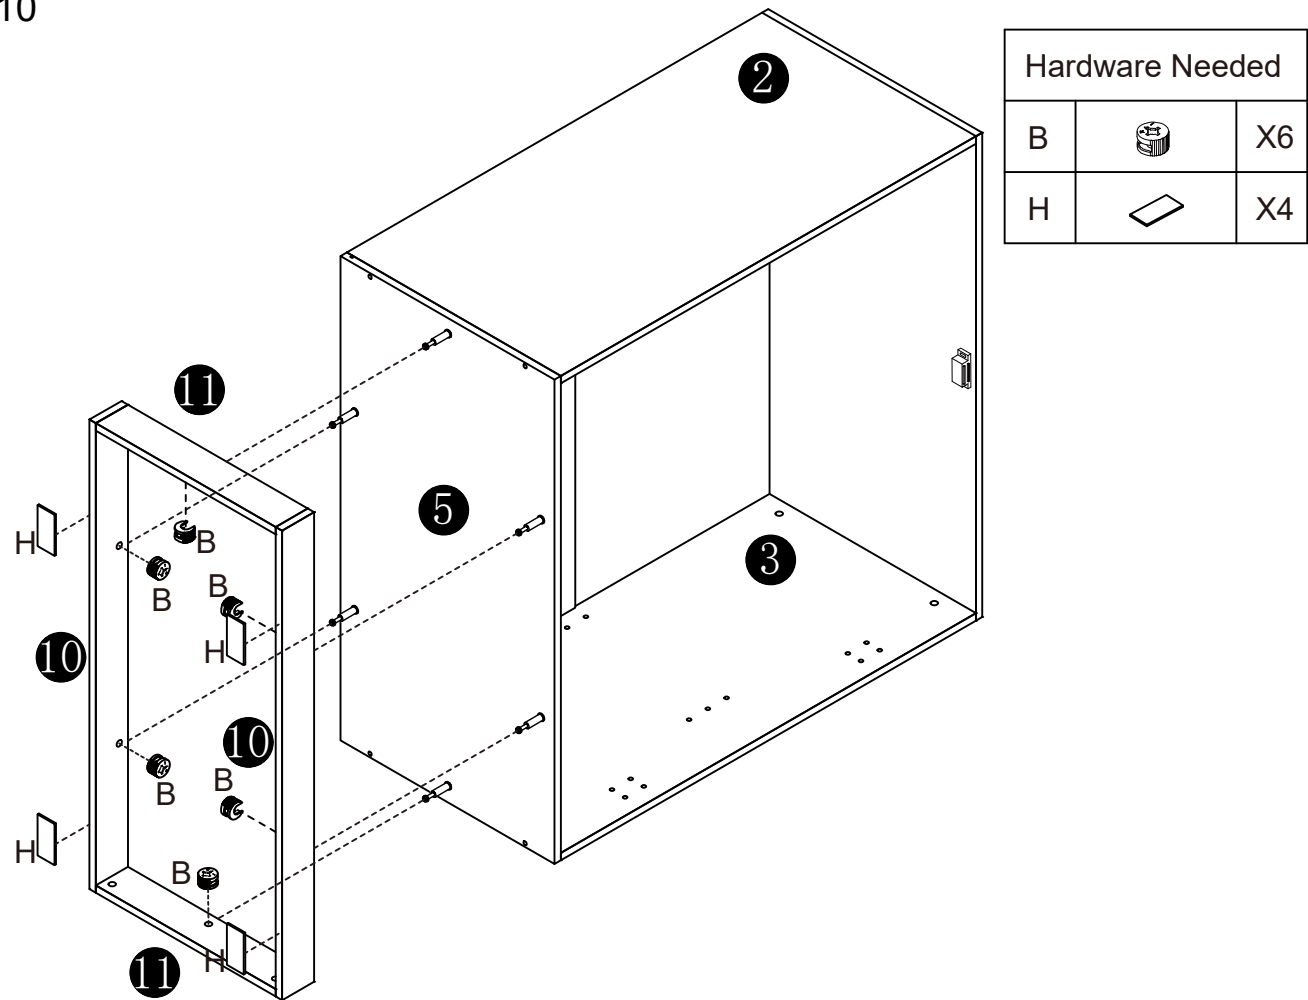


Step 11

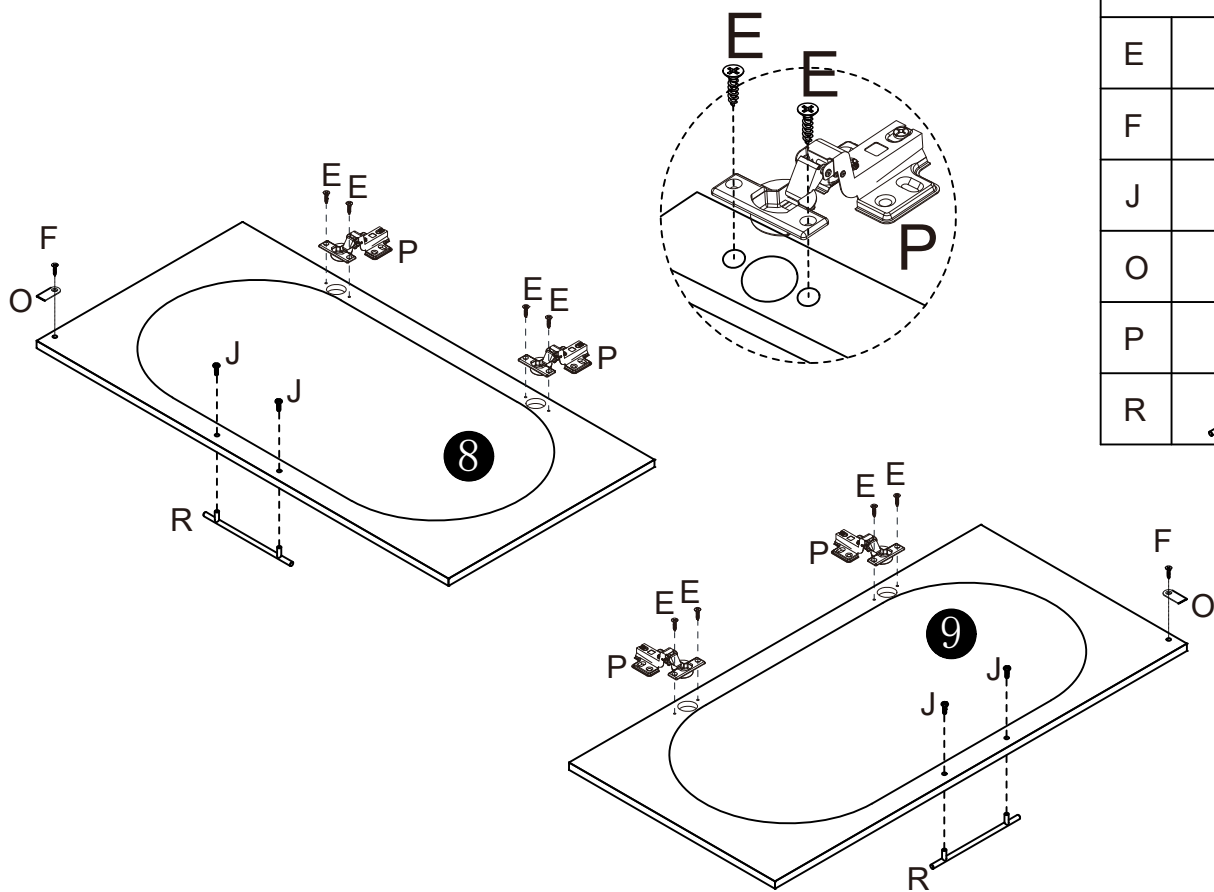


Hardware Needed		
E		X8
F		X2
J		X4
O		X2
P		X4
R		X2

Step 12

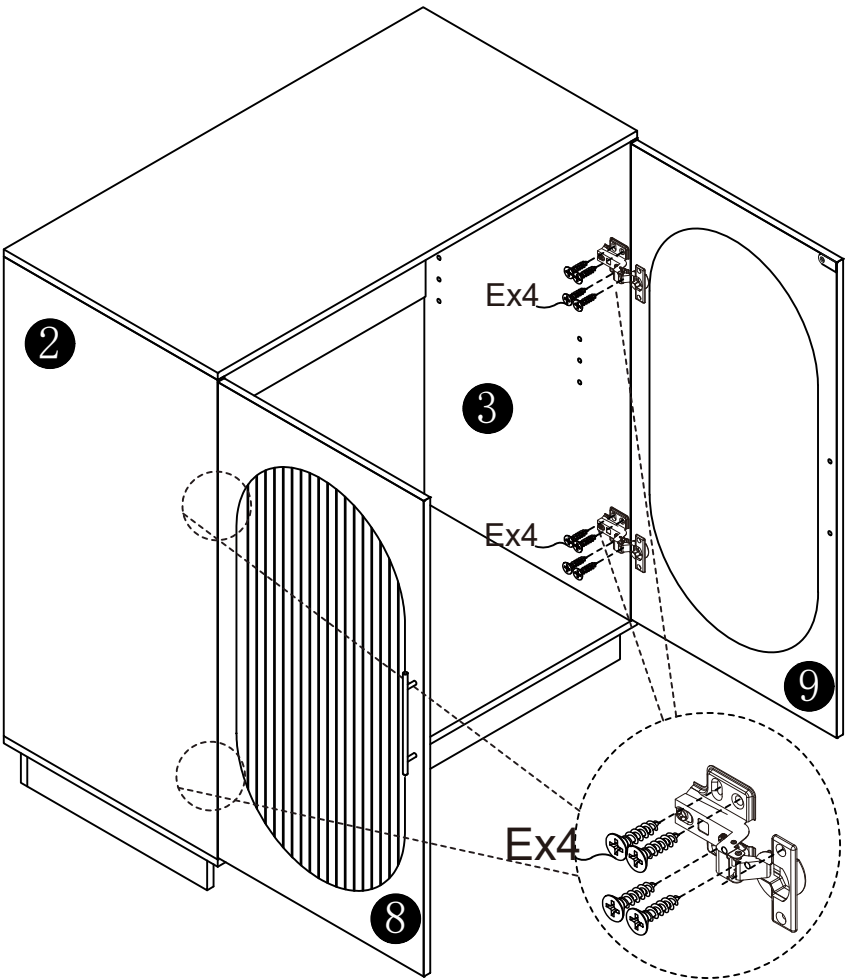


Hardware Needed		
E		X16


Example

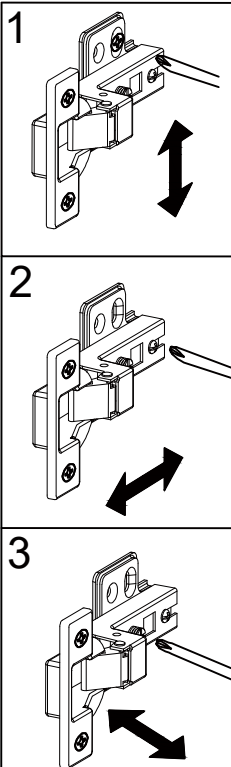


Step 13

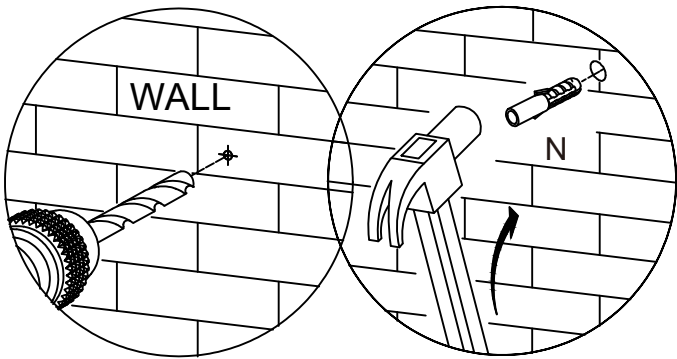

Hardware Needed		
L		X1
N		X1

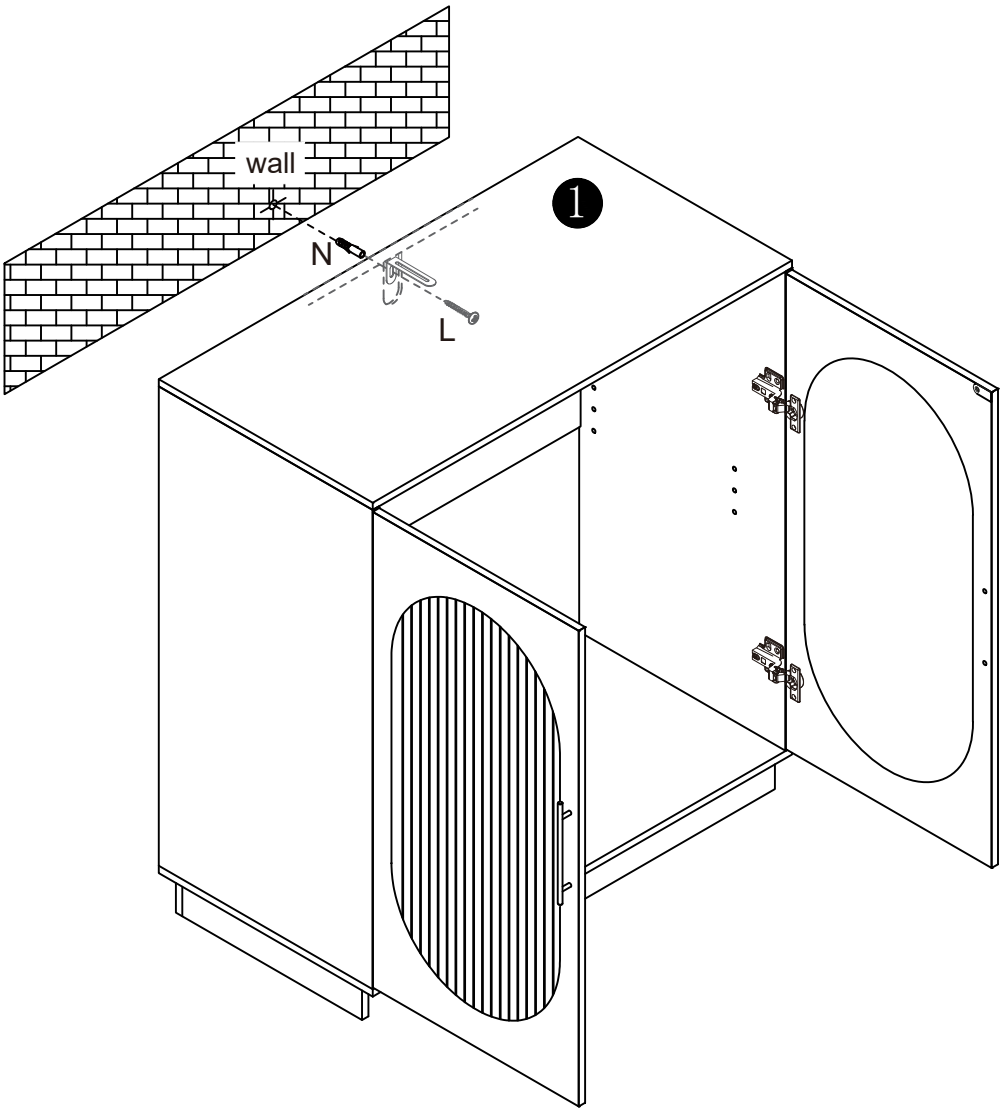

Step 14

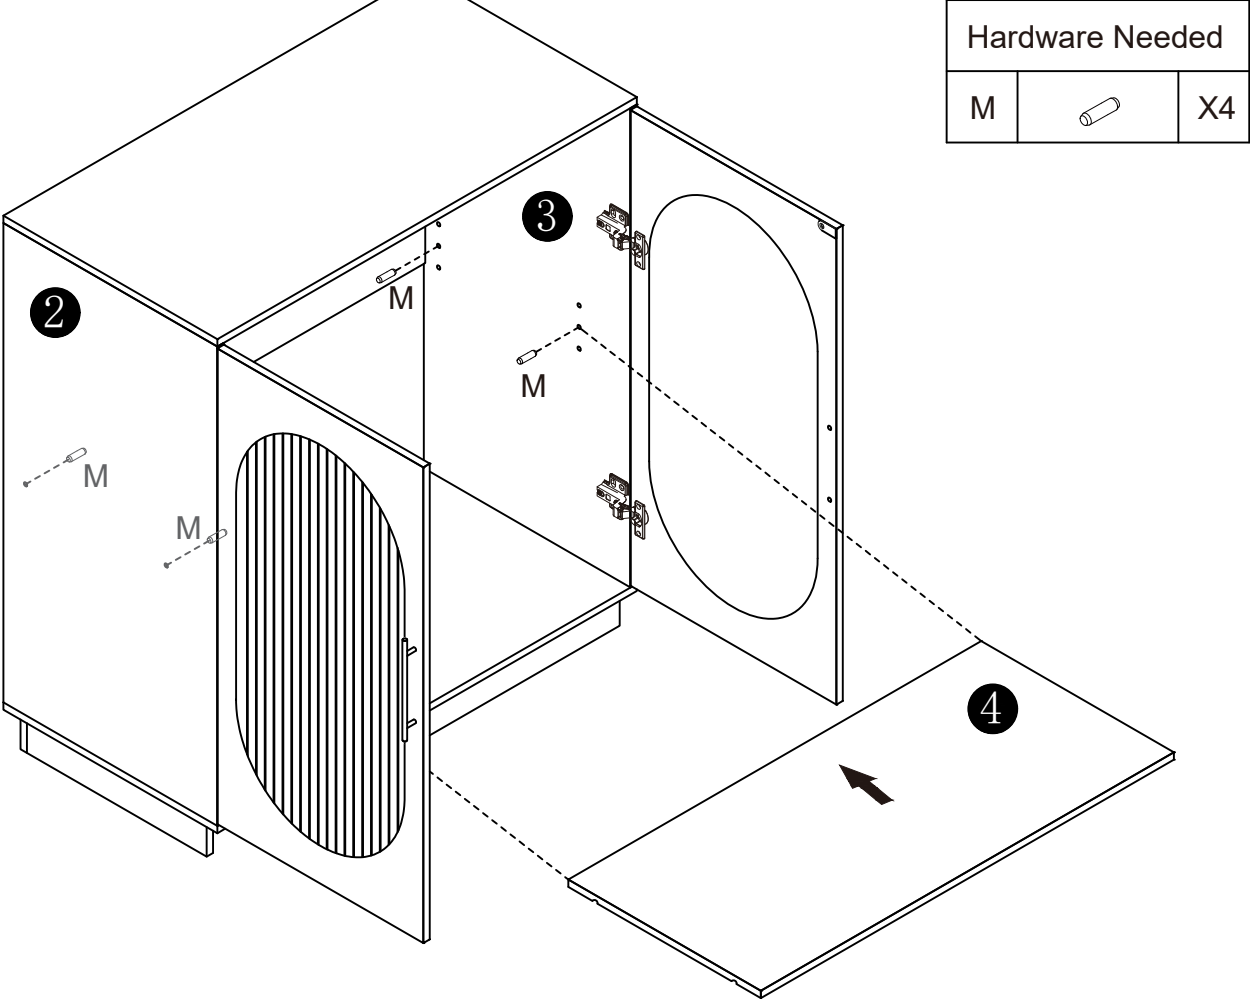

Step 15

