


CleanVent installation instructions

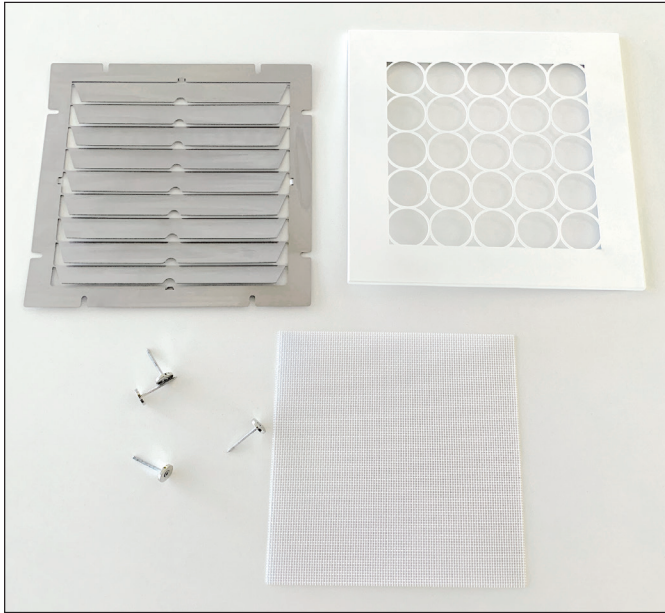

What is included:

- Inner Baffle
- Cover Screen
- CleanVent Designer Cover
- 4-6 magnets with self tapping screws.

What is needed to install:

- Pencil for marking
- Phillips Head Screwdriver
- Cordless Drill
- Cordless Drill Phillips Head 3/32" Drill Bit



1. Remove old vent.



2. Repair any damage to ceiling and vent box.




3. Mark for magnet holes. There will be 4 to 6 magnets to be installed. Magnets can be installed in any of the 4 corner slots.



4. Drill pilot holes with 3/32" drill bit where you marked. You should not drill all the way through the metal part of the vent box.



5. Screw in magnets part way after they (self tap) into the metal part of the vent box.

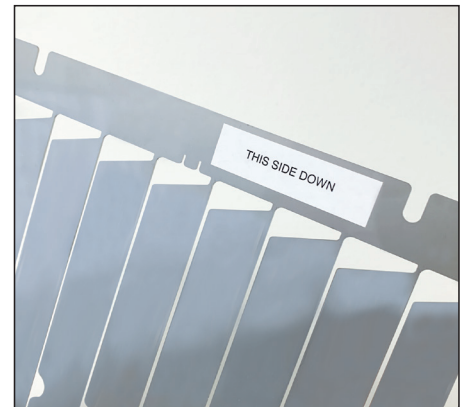

6. Hold inner baffle marked this side down facing you. Push vent baffles down away from you.