





SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE



DO NOT USE KNIFE


ASSEMBLY INSTRUCTION

DESCRIPTION : 2 DOORS SHOE CABINET


HARDWARE

A	B	C	D	E	F	G	H	I	J
									
WOOD DOWEL 8 X 25 1X8	CB SCREW M3.5X16MM 1X32	CSK CAP WOOD M6X50MM 1X4	NAIL 5/8 1X20	L KEY 1X1	F1 F2 F3 MINIFX 5654+5646 4 SETS	MINIFX CAP 1X16	PVC SHELF SUPPORT 1X1	2 PIN STOPPER 1X1	HINGES 5/8 4 SETS
									5038 PVC LEG 1X4


PART LIST

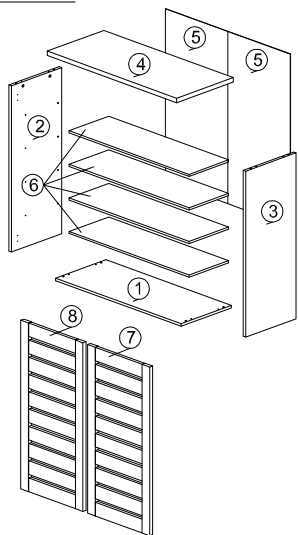


STEP 1

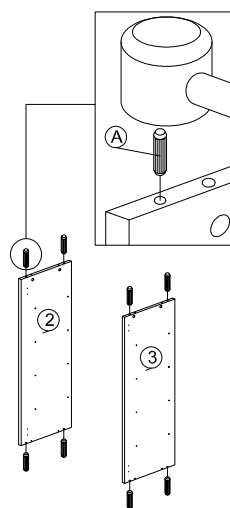


STEP 2

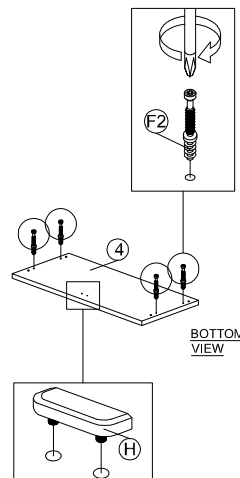


STEP 3

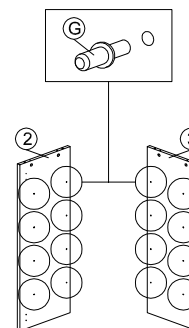


STEP 4

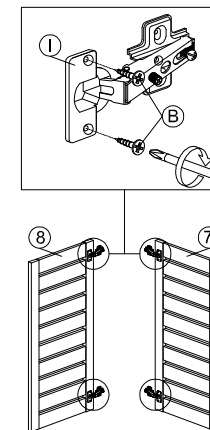


STEP 5

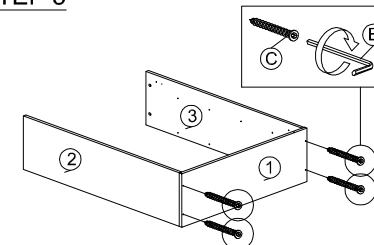


STEP 6

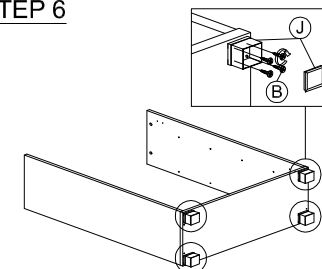


STEP 7

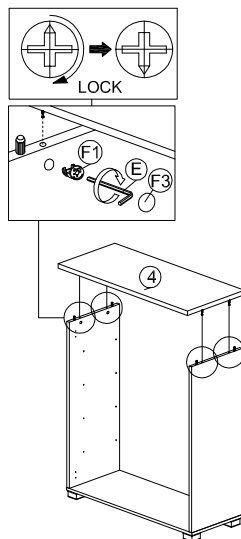


STEP 8

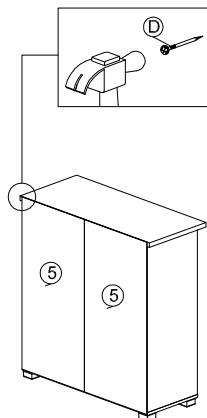

STEP 9

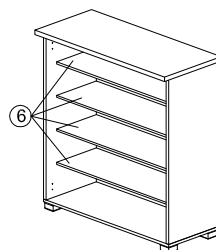

STEP 10

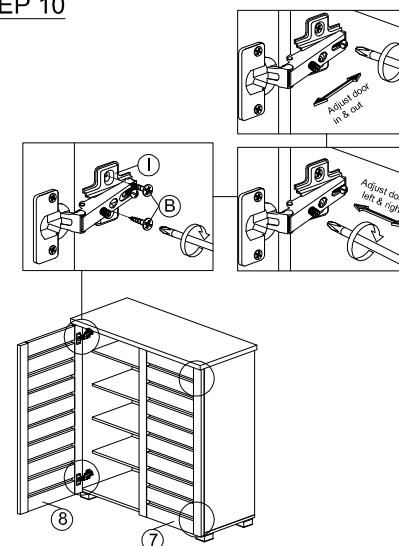

COMPLETED

