


PARTS LIST:

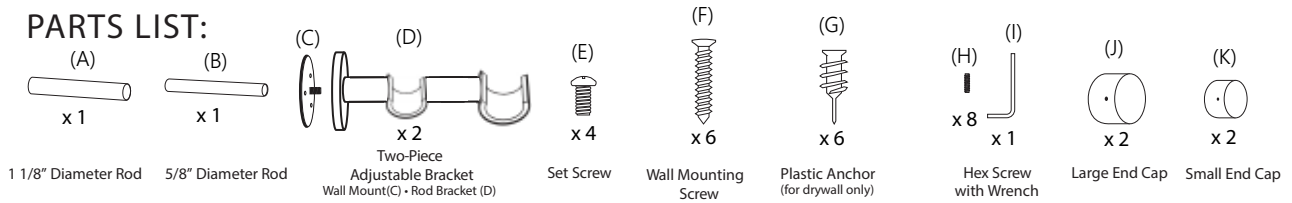

INSTALLATION:







- Determine the placement of the rod on the wall. Reference the Installation Diagram on the reverse side.
- Measure and mark the bracket locations above the window frame. Use a level to ensure the rod will be level on the wall.
- Mark the three mounting holes for each bracket on the wall using the Wall Mount (Part-B) as a template.
- Drill three 1/8" diameter pilot holes in the wall for all marked bracket locations.
- For drywall (hollow wall) installation: Screw plastic wall anchors (Part-G) into pilot hole until flush. Do not over tighten.
- For wall stud installation: The plastic wall anchors (Part-G) are not used.
- Attach both Wall Mounts (Part-B) with the mounting stub pointing away from the wall (Fig. 1). Hand tighten all mounting screws (Part-F) using a screwdriver to prevent screw head damage.
- Place Rod Bracket (Part-D) over the Wall Mount (Part-B) and tighten the rear set screws (Part-H) using the allen wrench (Part-I) provided (Fig. 2).
- Install draperies or clip rings on the rod (Part-B) and place the rod in the back rod holder of both brackets mounted on the wall (Fig. 3).
- Install draperies or clip rings on the rod (Part-A) and place the rod in the front rod holder of both brackets mounted on the wall (Fig. 3).
- Center the rods (Part-A & B) in the wall brackets and tighten the set screw (Part-E) with a screwdriver in each of the Rod Brackets (Part-D).
- Attach the end caps (Part-J) to each end of the rod (Part-A) and tighten the set screw (Part-H) with the allen wrench (Part-I) included as shown in Fig. 3.
- Attach the end caps (Part-K) to each end of the rod (Part-B) and tighten the set screw (Part-H) with the allen wrench (Part-I) included as shown in Fig. 3.
- We want to Thank You for your purchase. Please enjoy your new window.

**Parts exceeding the quantity listed may be included in the hardware kit. These extra parts can be discarded after assembly.



Scan QR Code for additional information

TOOLS NEEDED:
NOT INCLUDED

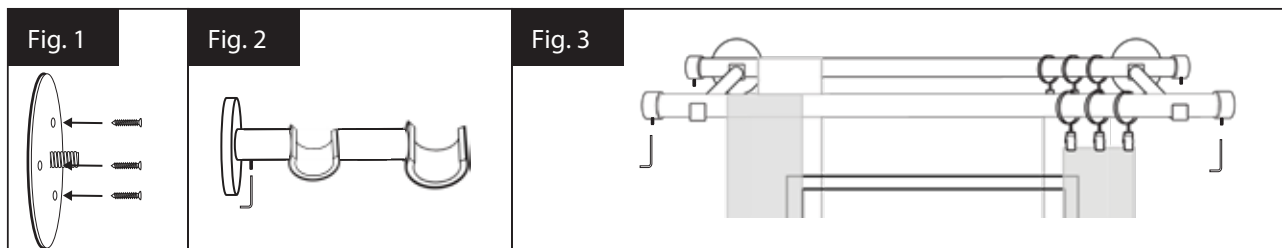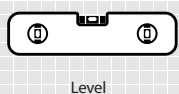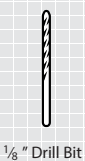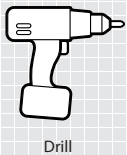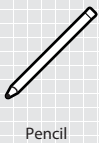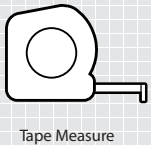



CAMBRIA®

Designer Series

Cambria® Designer Series

INSTALLATION DIAGRAM (3', 3' 6", 4', 4' 6", and 5' double rods)

