
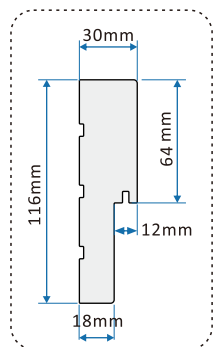
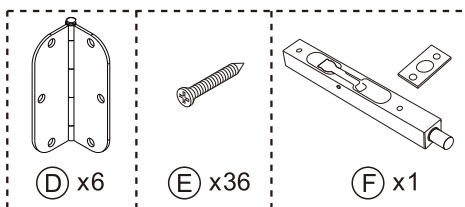


Pre-hung French Door Installation Guide

Includes two 84.02 in legs and a 72.4 in header

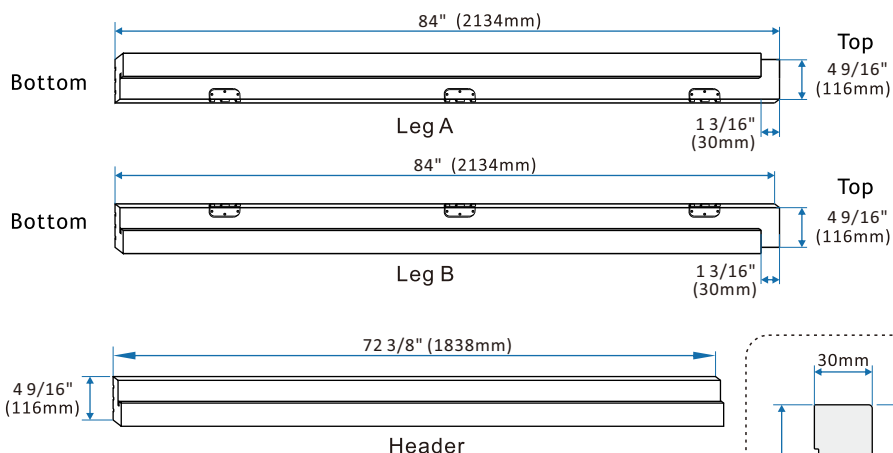

Tools Required


Speed Square



Phillips Screwdriver




Tape Measure

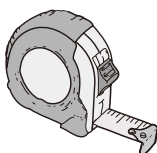


Pencil




Nail Gun

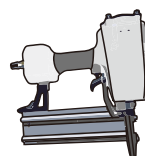


Step ① Attach door to jamb

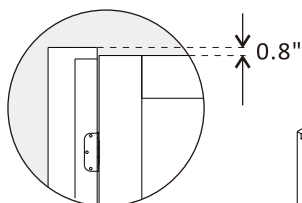




Pro tip: leave 0.8" from top of jamb to top of the door for upper jamb.

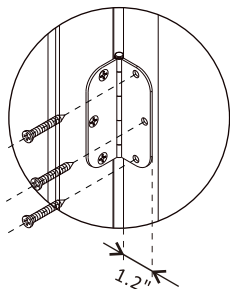

Pro tip: the edge of hinge should be 1.2" from the edge of door for enough room of door swing.

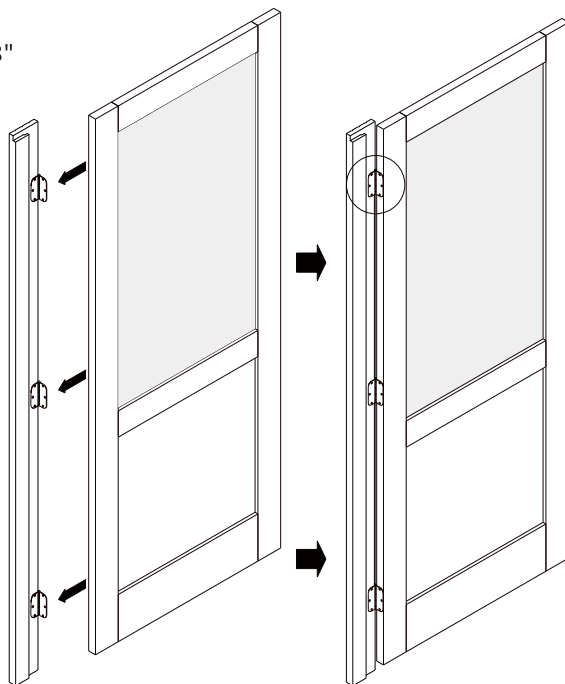



Step ② Remove hinge needle to de-attach door and jamb

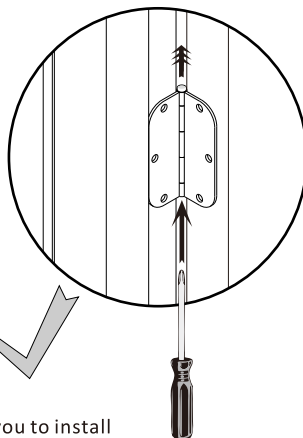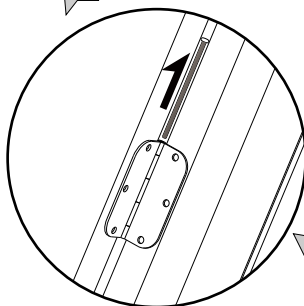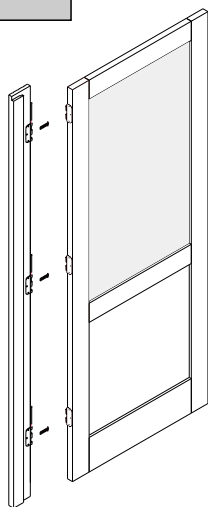

Pro tip: solid door is heavy and we advice you to install jamb alone and then door for safety. It's easy to re-attach door with half hinge back in later step.

Step ③


Assemble door frame with nail gun

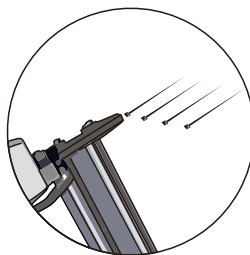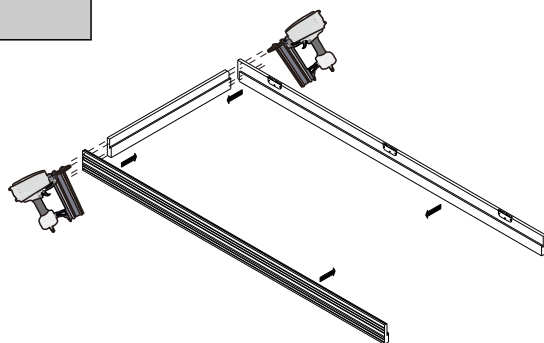


Step ④

Install Jamb to Door Opening


Step 1: Install the jamb

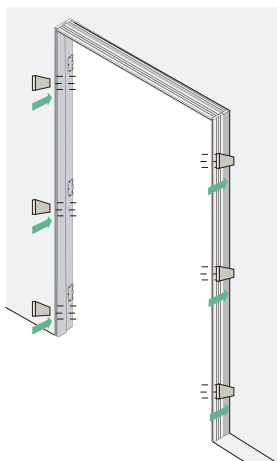

Step 2: Attach the doors

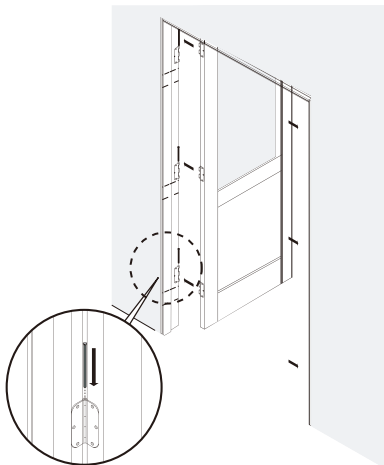

Step 3: Install the fixed door fixator

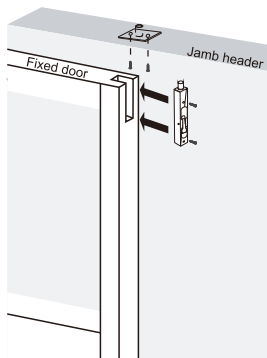

Step 4: Your French Door is ready

