


# ASSEMBLY INSTRUCTIONS

## TWIN LOFT BED WITH CABINET

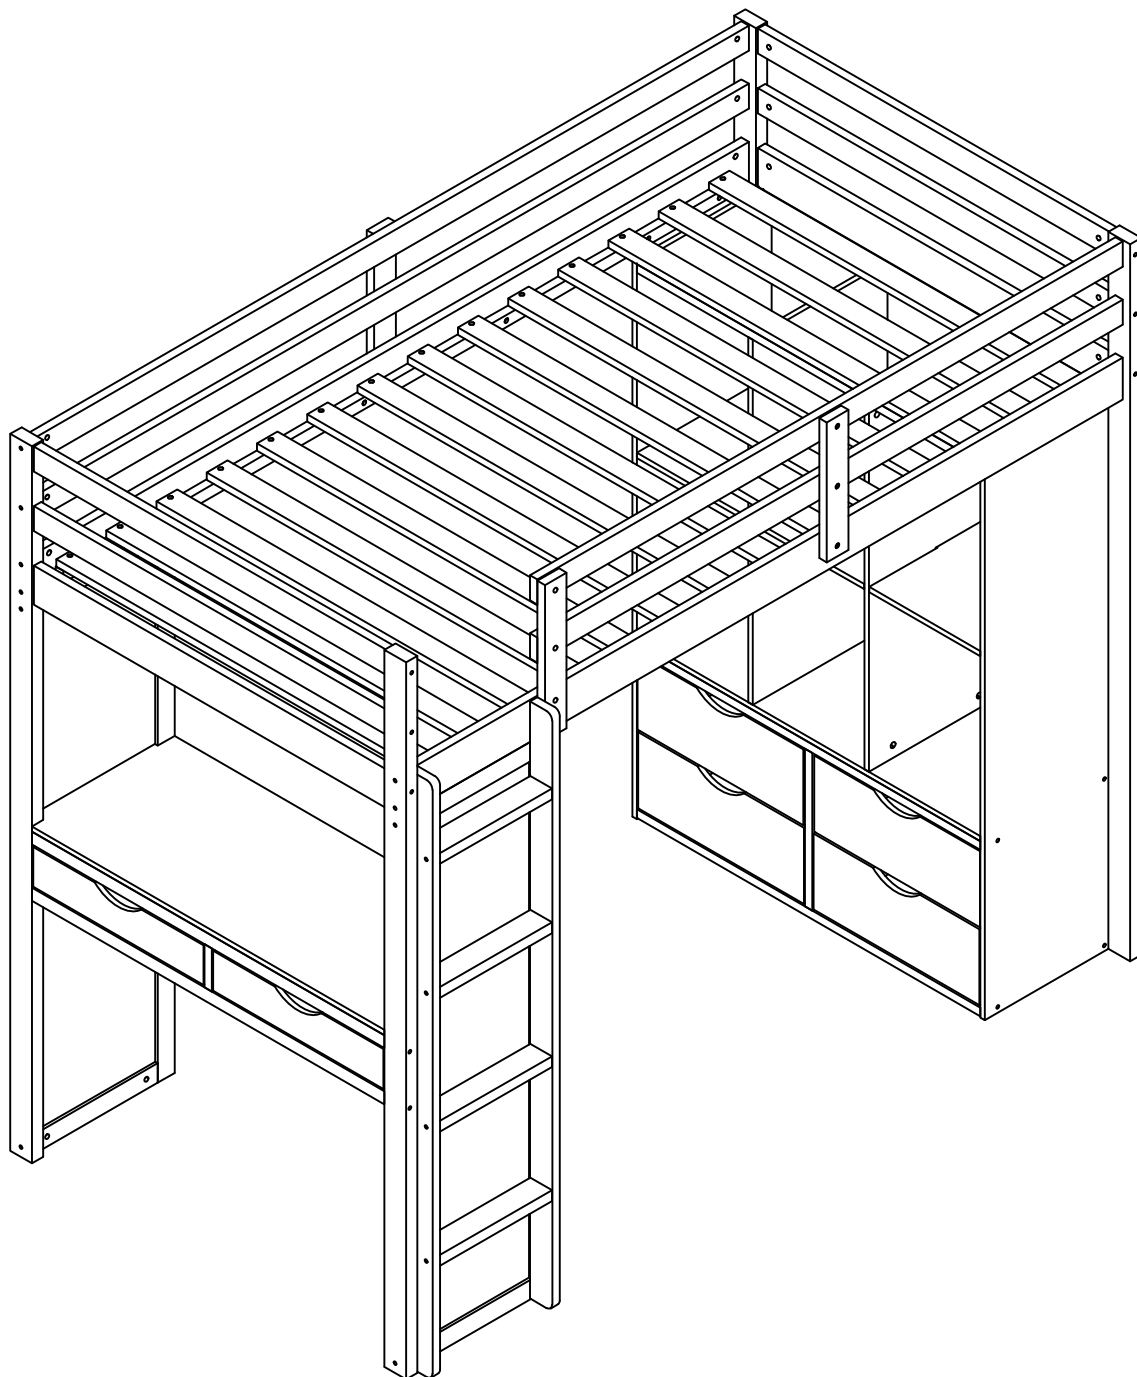

WF317643/WF317644

# ASSEMBLY INSTRUCTIONS



## **SAFETY WARNINGS**




1. This bed is designed for use only mattress (es) meeting the following specifications on the upper bunk, and lower bunk:

**Upper bunk (bunk bed and tribed included)**


Bed Type	Length	Width	Thickness
Twin Standard	74" - 75"	37 $\frac{1}{2}$ " - 38 $\frac{1}{2}$ "	6" max

2. Replacement parts, including additional guardrails, maybe obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE CITY OF INDUSTRY, CA, 91748) dealers
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed.
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails.
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
9. Always use the ladder for entering and leaving the upper bunk.
10. Do not use substitute part. Contact the manufacture or dealer for replacement part.
11. Use of a night light may provide added safety precaution for a child using the upper bunk.
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited.
14. STRANGULATION HAZARD - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
15. Keep these instruction for future reference.
16. Prohibit more than one person on upper bunk
17. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
18. Be certain all staples are out of the box before beginning assembly on the shipping carton.

# ASSEMBLY INSTRUCTIONS








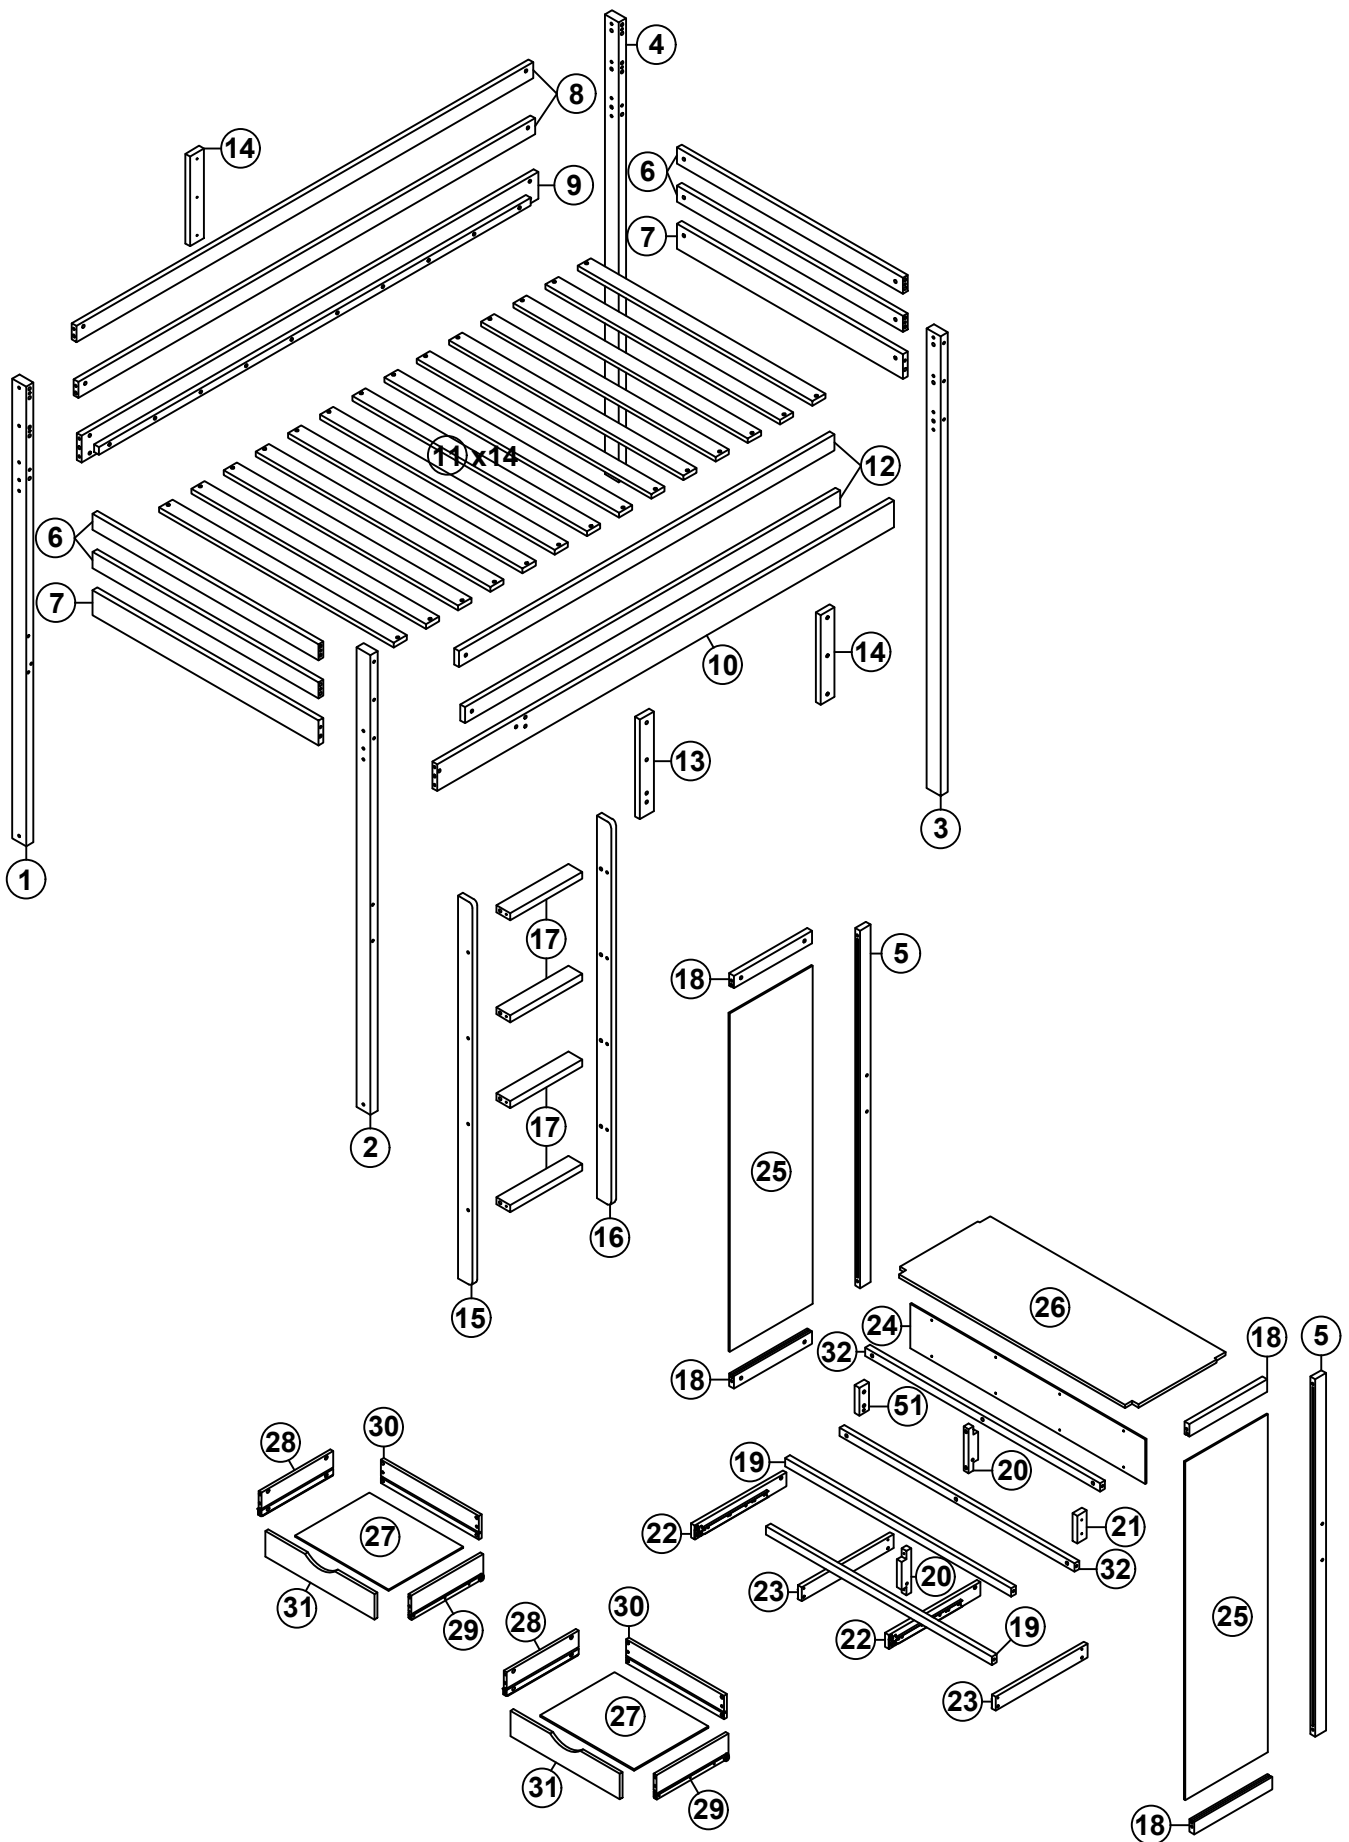




















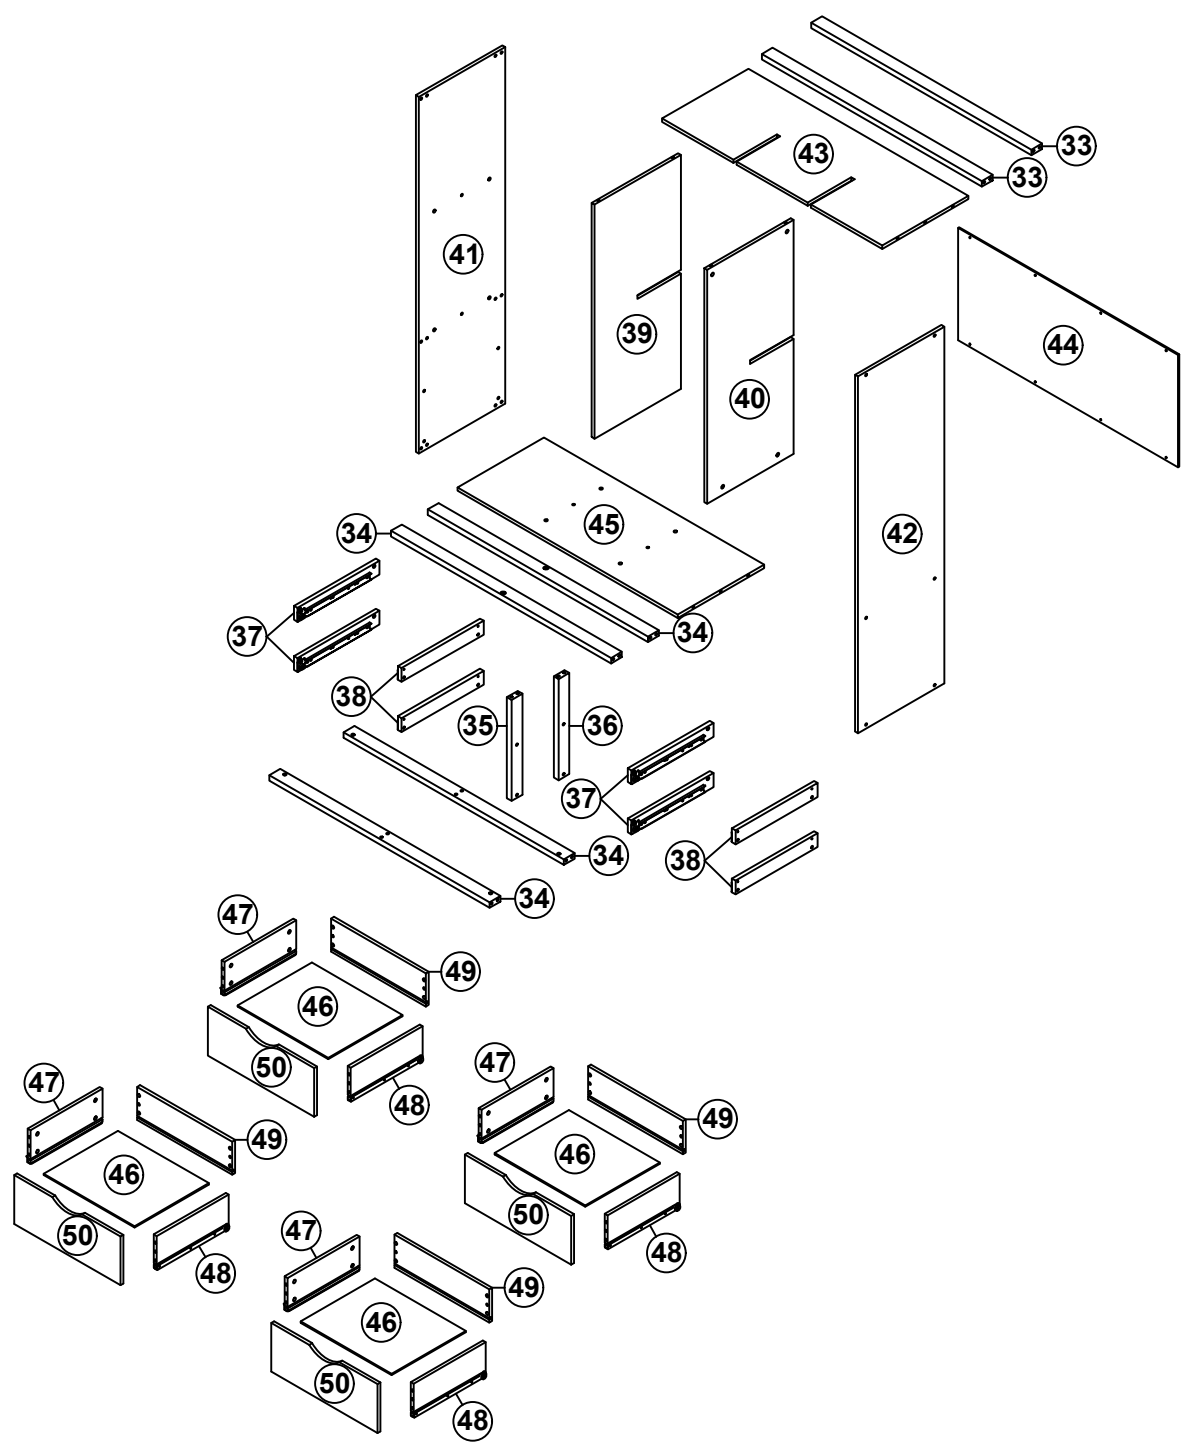
# ASSEMBLY INSTRUCTIONS



























# ASSEMBLY INSTRUCTIONS

## WF317643 (Hardware in this SKU)

<b>1</b>		1pc	<b>15</b>		1pc
<b>2</b>		1pc	<b>16</b>		1pc
<b>3</b>		1pc	<b>17</b>		4pcs
<b>4</b>		1pc	<b>18</b>		4pcs
<b>5</b>		2pcs	<b>19</b>		2pcs
<b>6</b>		4pcs	<b>20</b>		2pcs
<b>7</b>		2pcs	<b>21</b>		1pc
<b>8</b>		2pcs	<b>32</b>		2pcs
<b>9</b>		1pc	<b>33</b>		2pcs
<b>10</b>		1pc	<b>34</b>		4pcs
<b>11</b>		14pcs	<b>35</b>		1pc
<b>12</b>		2pcs	<b>36</b>		1pc
<b>13</b>		1pc	<b>51</b>		1pc
<b>14</b>		2pcs			






















# ASSEMBLY INSTRUCTIONS

WF317644

<b>22</b>	 Drawers panel support	2pcs	<b>39</b>	 Shelves panels	1pc
<b>23</b>	 Drawers panel support	2pcs	<b>40</b>	 Shelves panels	1pc
<b>24</b>	 Table frame panel	1pc	<b>41</b>	 Left side shelves	1pc
<b>25</b>	 Table frame side	2pcs	<b>42</b>	 Right side shelves	1pc
<b>26</b>	 Table top panel	1pc	<b>43</b>	 Shelves top panels	1pc
<b>27</b>	 Bottom drawers panel	2pcs	<b>44</b>	 Back shelves panels	1pc
<b>28</b>	 Left drawers panel	2pcs	<b>45</b>	 Shelves bottom panels	1pc
<b>29</b>	 Right drawers panel	2pcs	<b>46</b>	 Bottom drawers panel	4pcs
<b>30</b>	 Back drawers panel	2pcs	<b>47</b>	 Left drawers panel	4pcs
<b>31</b>	 Front drawers panel	2pcs	<b>48</b>	 Right drawers panel	4pcs
<b>37</b>	 Drawers panel support	4pcs	<b>49</b>	 Back drawers panel	4pcs
<b>38</b>	 Drawers panel support	4pcs	<b>50</b>	 Front drawers panel	4pcs


# ASSEMBLY INSTRUCTIONS


## WF317643 (Hardware in this SKU)

<b>A</b>	Ø4x30		38PCS	<b>L</b>	6.5x60		10PCS
<b>B</b>	Ø4x20		24PCS	<b>M</b>	Ø10x40		38PCS
<b>C</b>	Ø4x15		20PCS	<b>N</b>	Ø8x30		46PCS
<b>D</b>	Ø3.5x12		20PCS	<b>O</b>	Ø8x20		24PCS
<b>E</b>	1/4x110		16PCS	<b>P</b>	4x58		1PC
<b>F</b>	1/4x90		4PCS	<b>Q</b>	Ø 6.5x35		64PCS
<b>G</b>	1/4x75		18PCS	<b>R</b>	Ø12x10		64PCS
<b>H</b>	1/4x60		20PCS	<b>S</b>	15x15x2		10PCS
<b>I</b>	1/4x30		4PCS	<b>T</b>	50x28x2		1PC
<b>K</b>	1/4x35		4PCS	<b>U</b>			1PC
					Phillip head screw Not include		


# ASSEMBLY INSTRUCTIONS

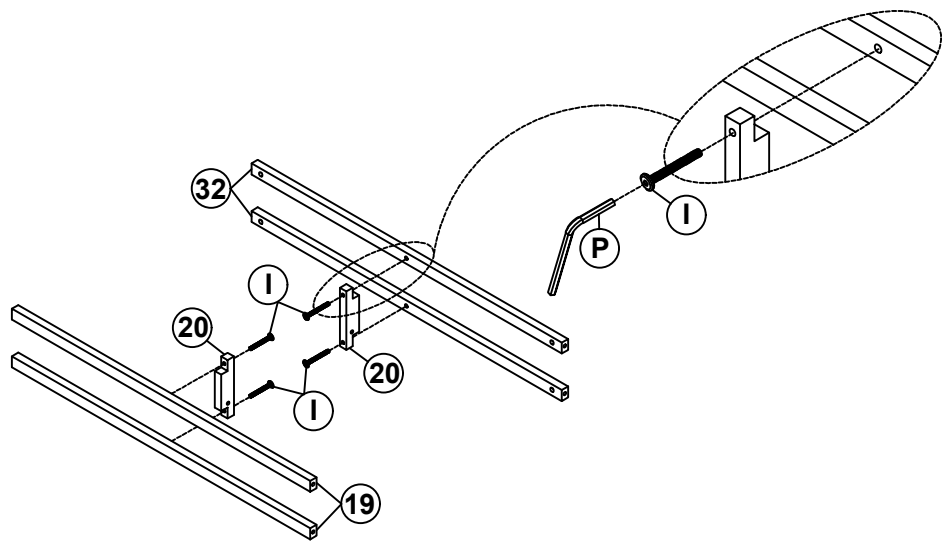


## Step 1



<b>I</b>	1/4x30		4PCS	<b>P</b>	4x58		1PC
----------	--------	---	------	----------	------	---	-----
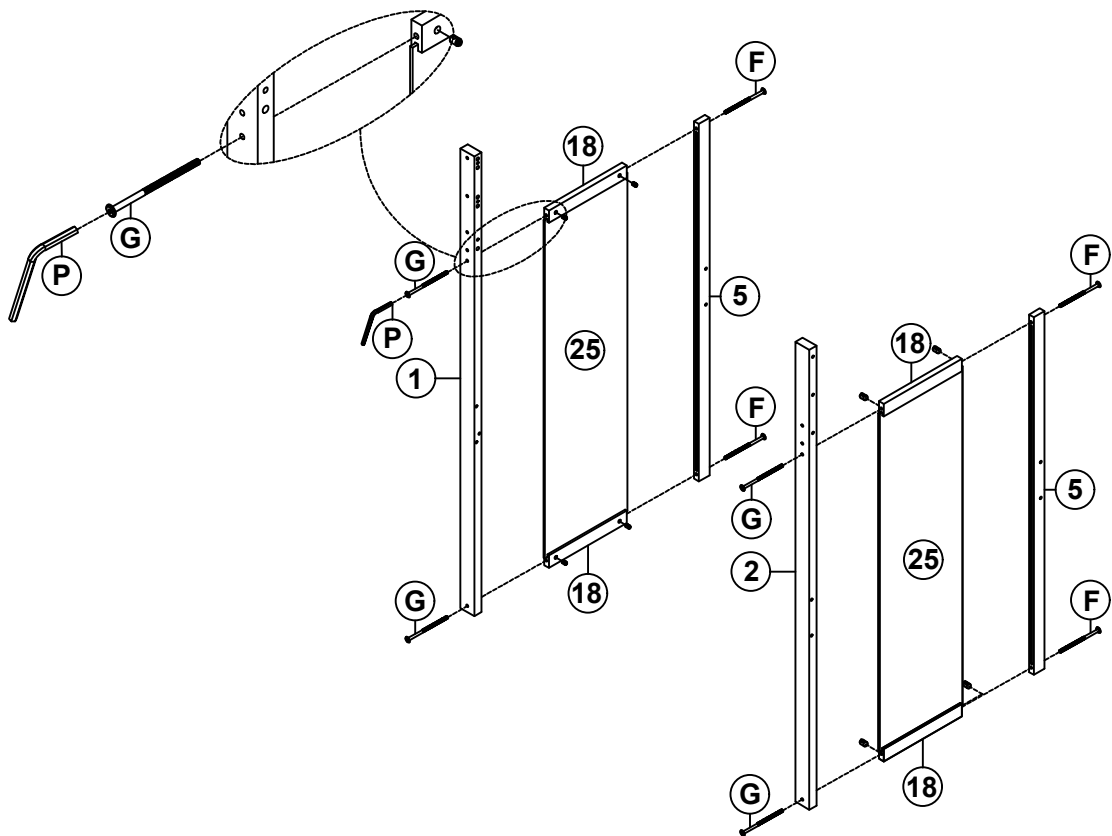
## Step 2








<b>G</b>	1/4x75		4PCS	<b>F</b>	1/4x90		4PCS	<b>P</b>	4x58		1PC
----------	--------	---	------	----------	--------	---	------	----------	------	---	-----

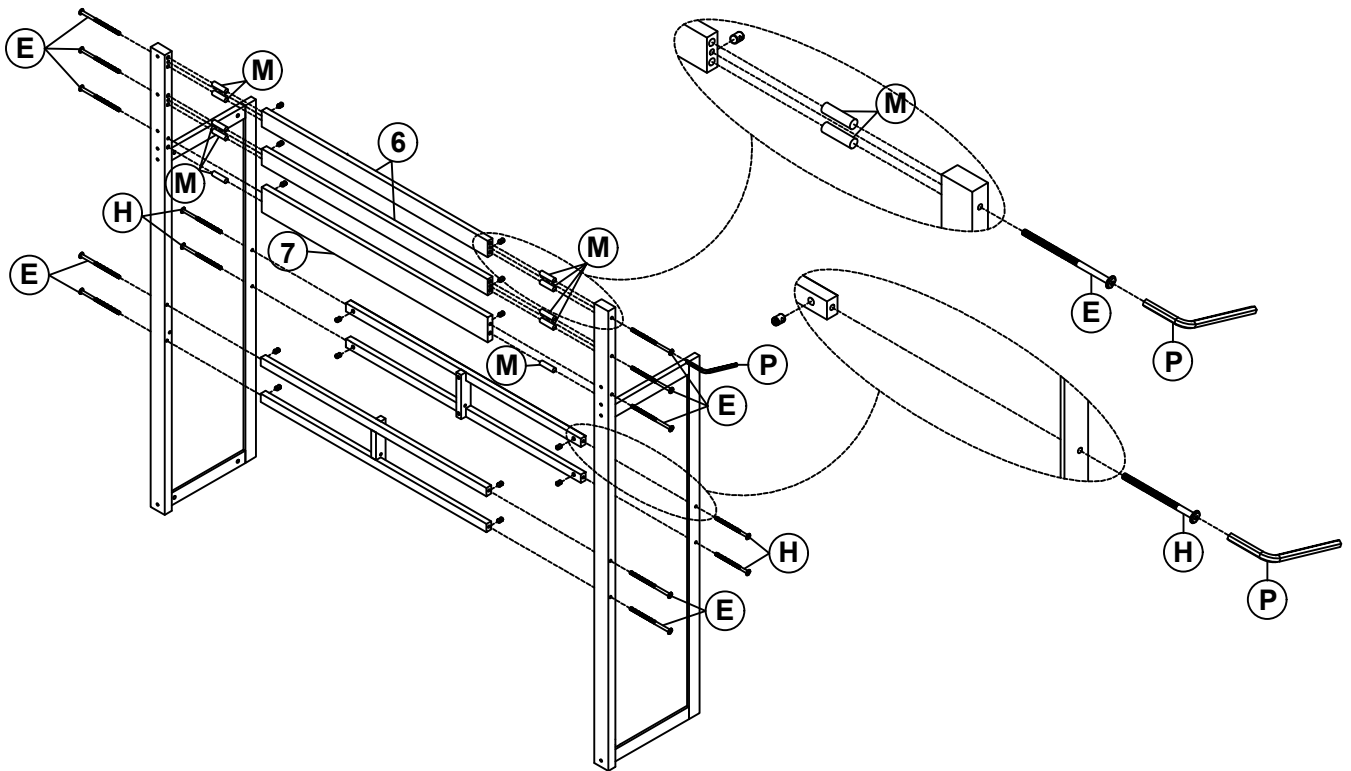


# ASSEMBLY INSTRUCTIONS


## Step 3



<b>E</b>	1/4x110 	10PCS	<b>H</b>	1/4x60 	4PCS
<b>M</b>	Ø10x40 	10PCS	<b>P</b>	4x58 	1PC


## Step 4

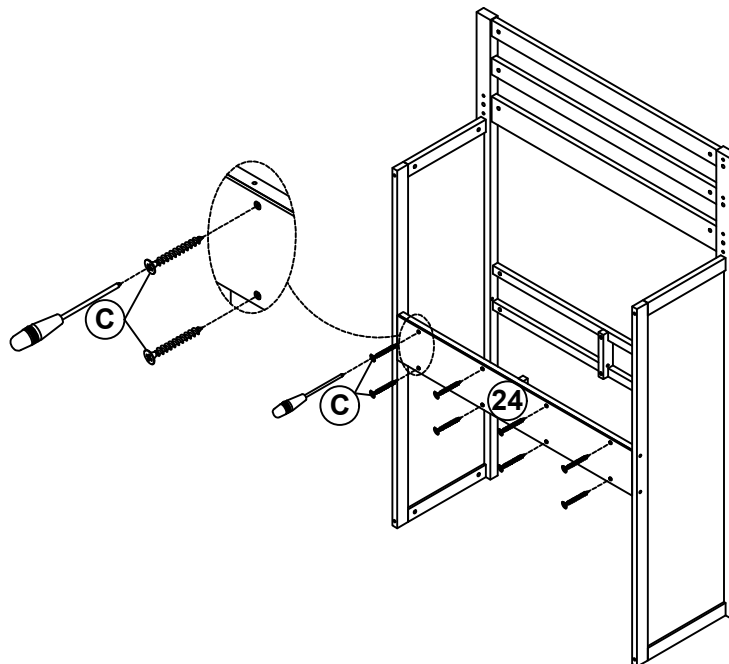

<b>C</b>	Ø4x15 	8PCS
----------	---	------


# ASSEMBLY INSTRUCTIONS

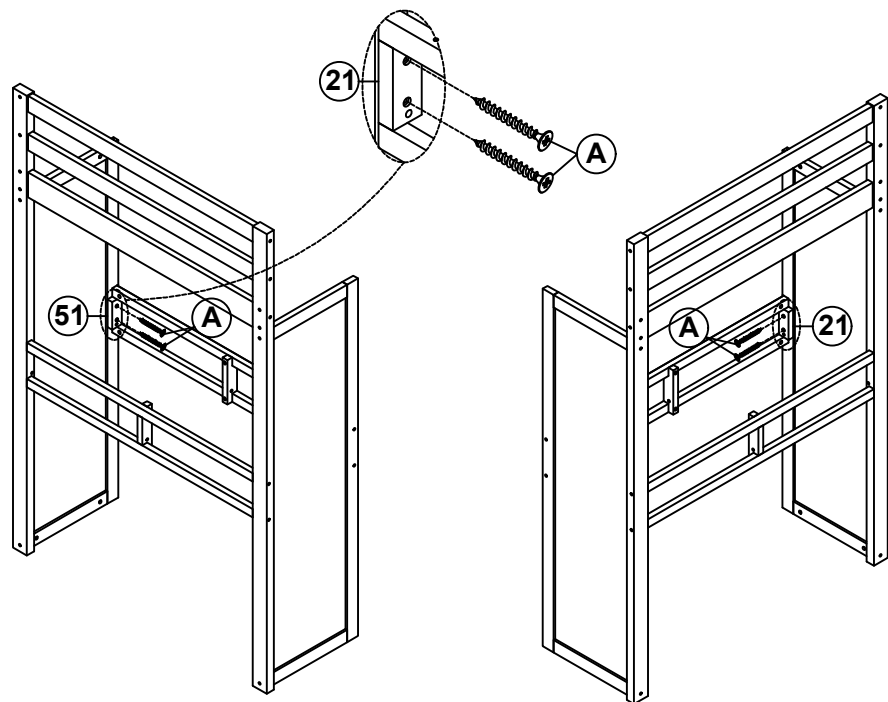

Step 5



**A**    Ø4x30        4PCS

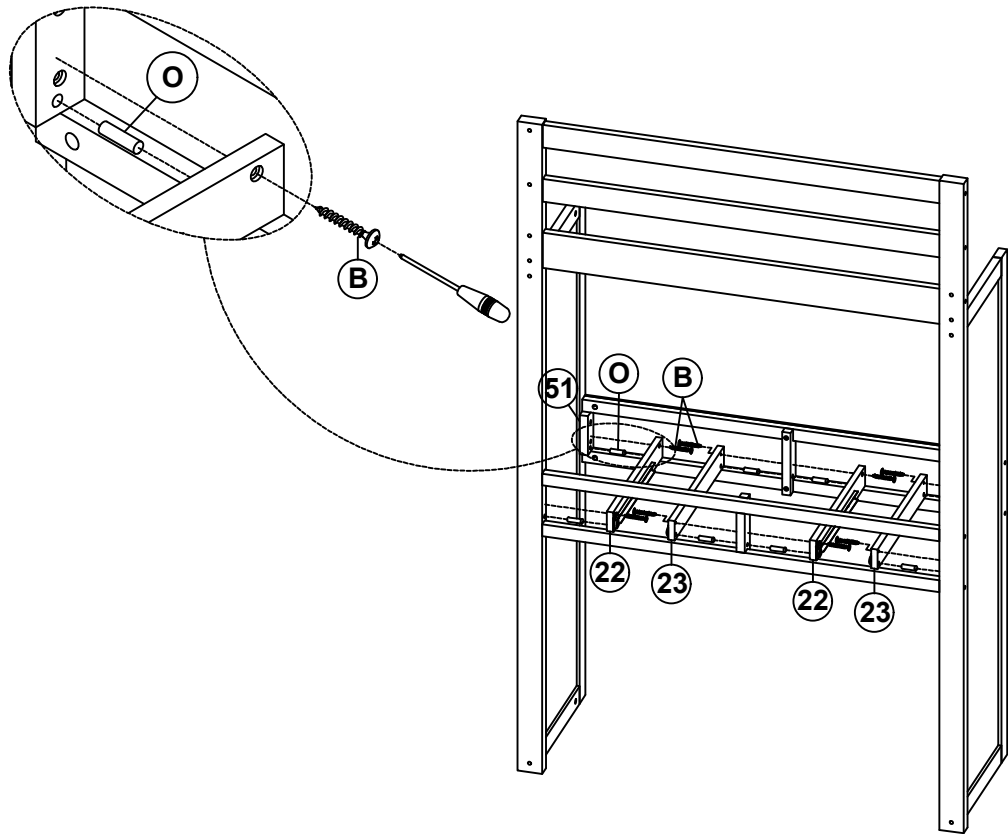
Step 6




**B**    Ø4x20        8PCS    **O**    Ø8x20        8PCS

# ASSEMBLY INSTRUCTIONS


## Step 7

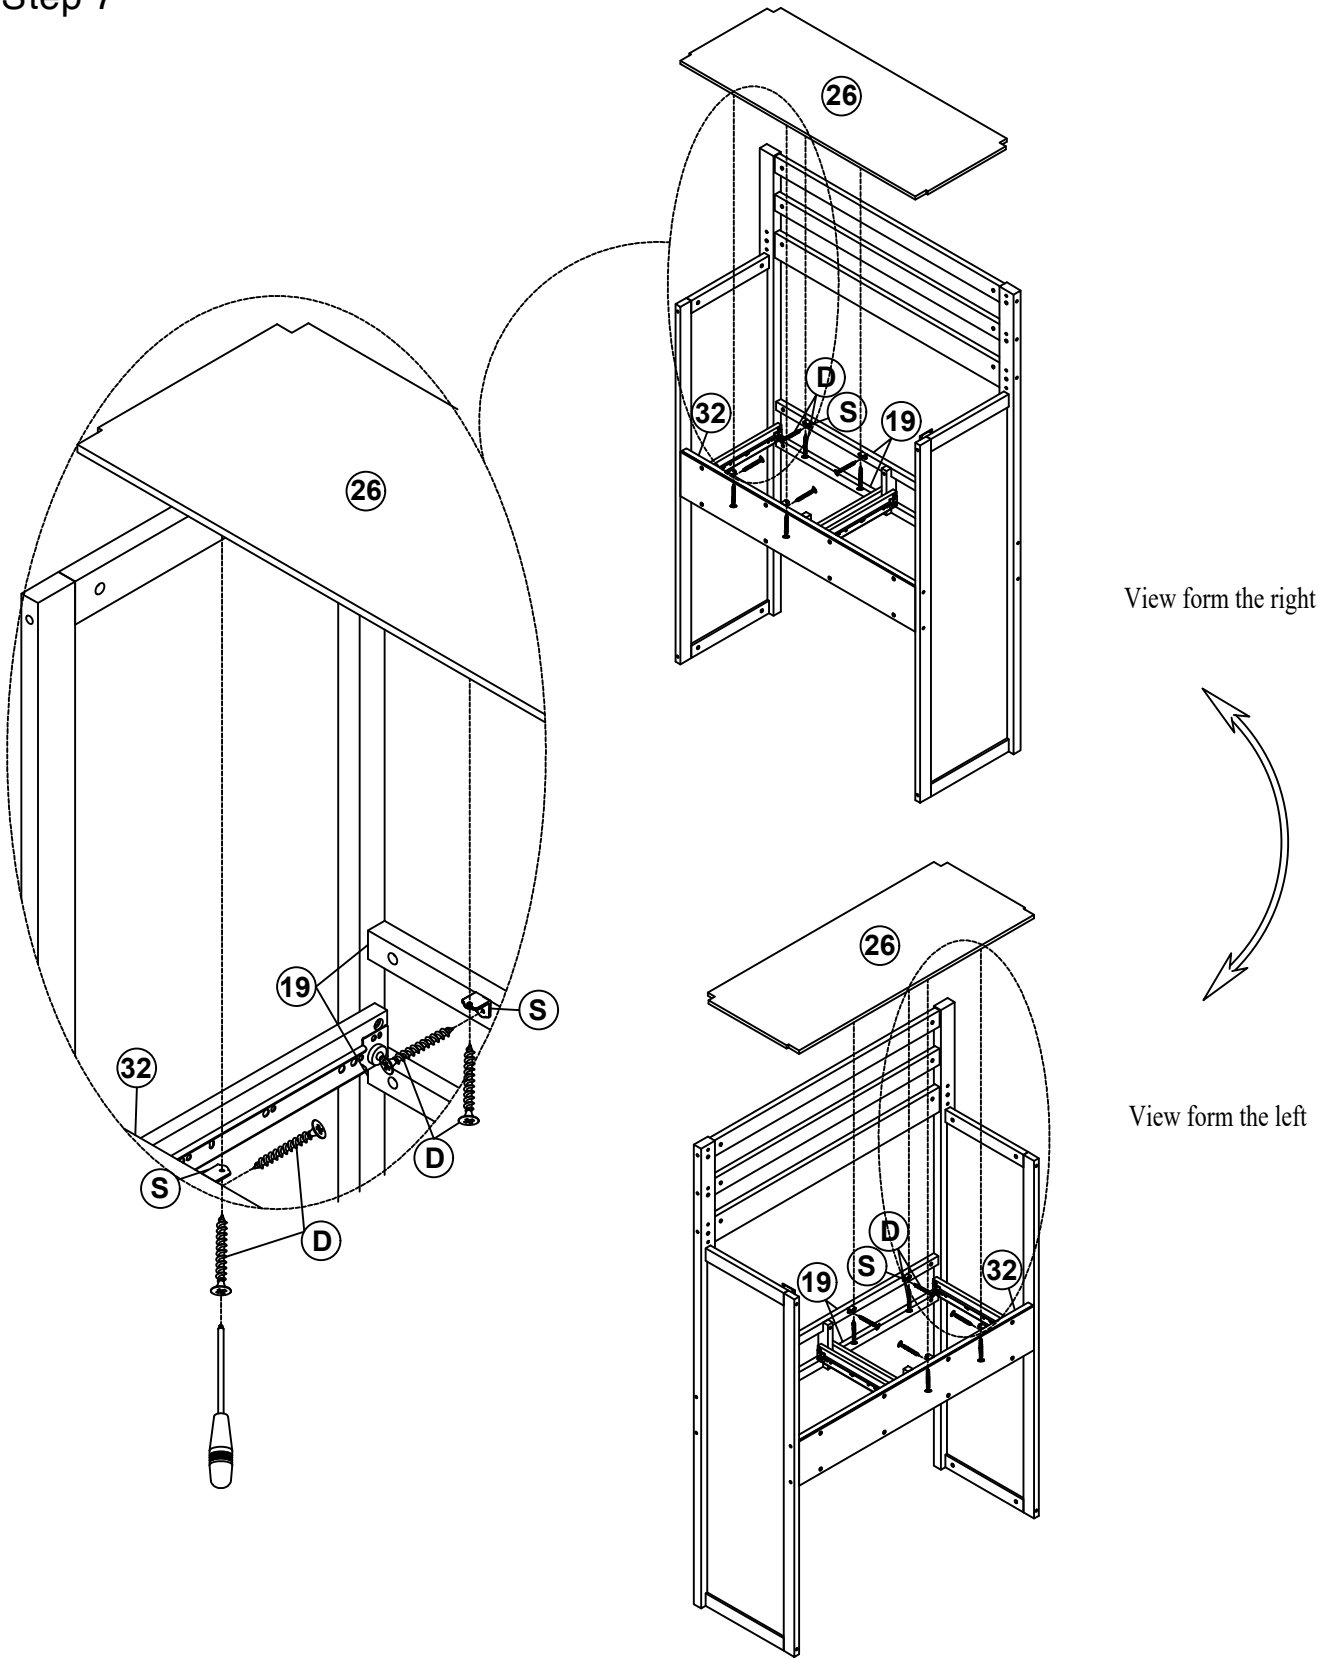


<b>D</b>	Ø3.5x12		16PCS	<b>S</b>	15x15x2		8PCS
----------	---------	---	-------	----------	---------	---	------


# ASSEMBLY INSTRUCTIONS

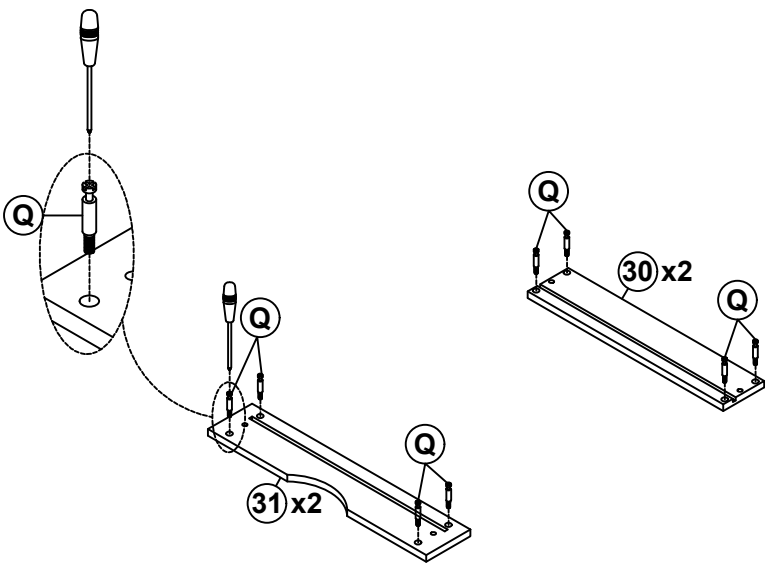

Step 8



<b>Q</b>	Ø 6.5x35		16PCS
----------	----------	---	-------

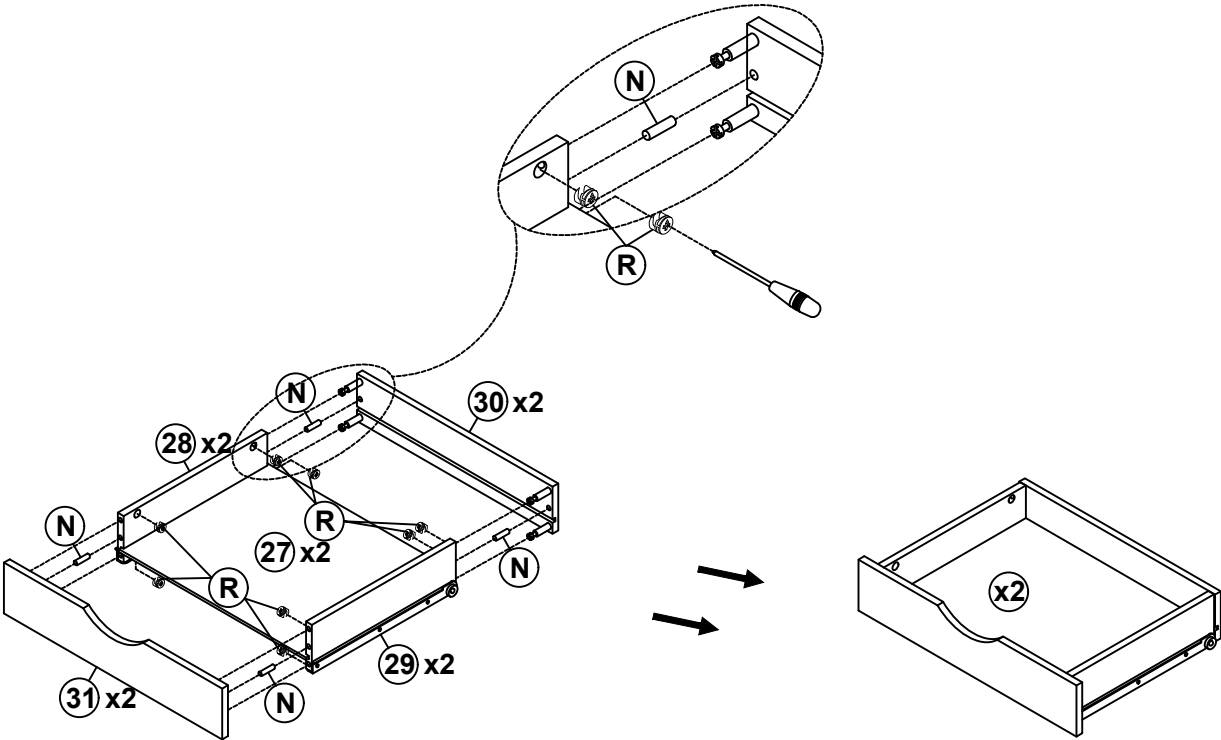
Step 9




<b>R</b>	Ø12x10		16PCS	<b>N</b>	Ø8x30		8PCS
----------	--------	---	-------	----------	-------	---	------

# ASSEMBLY INSTRUCTIONS


Step 10

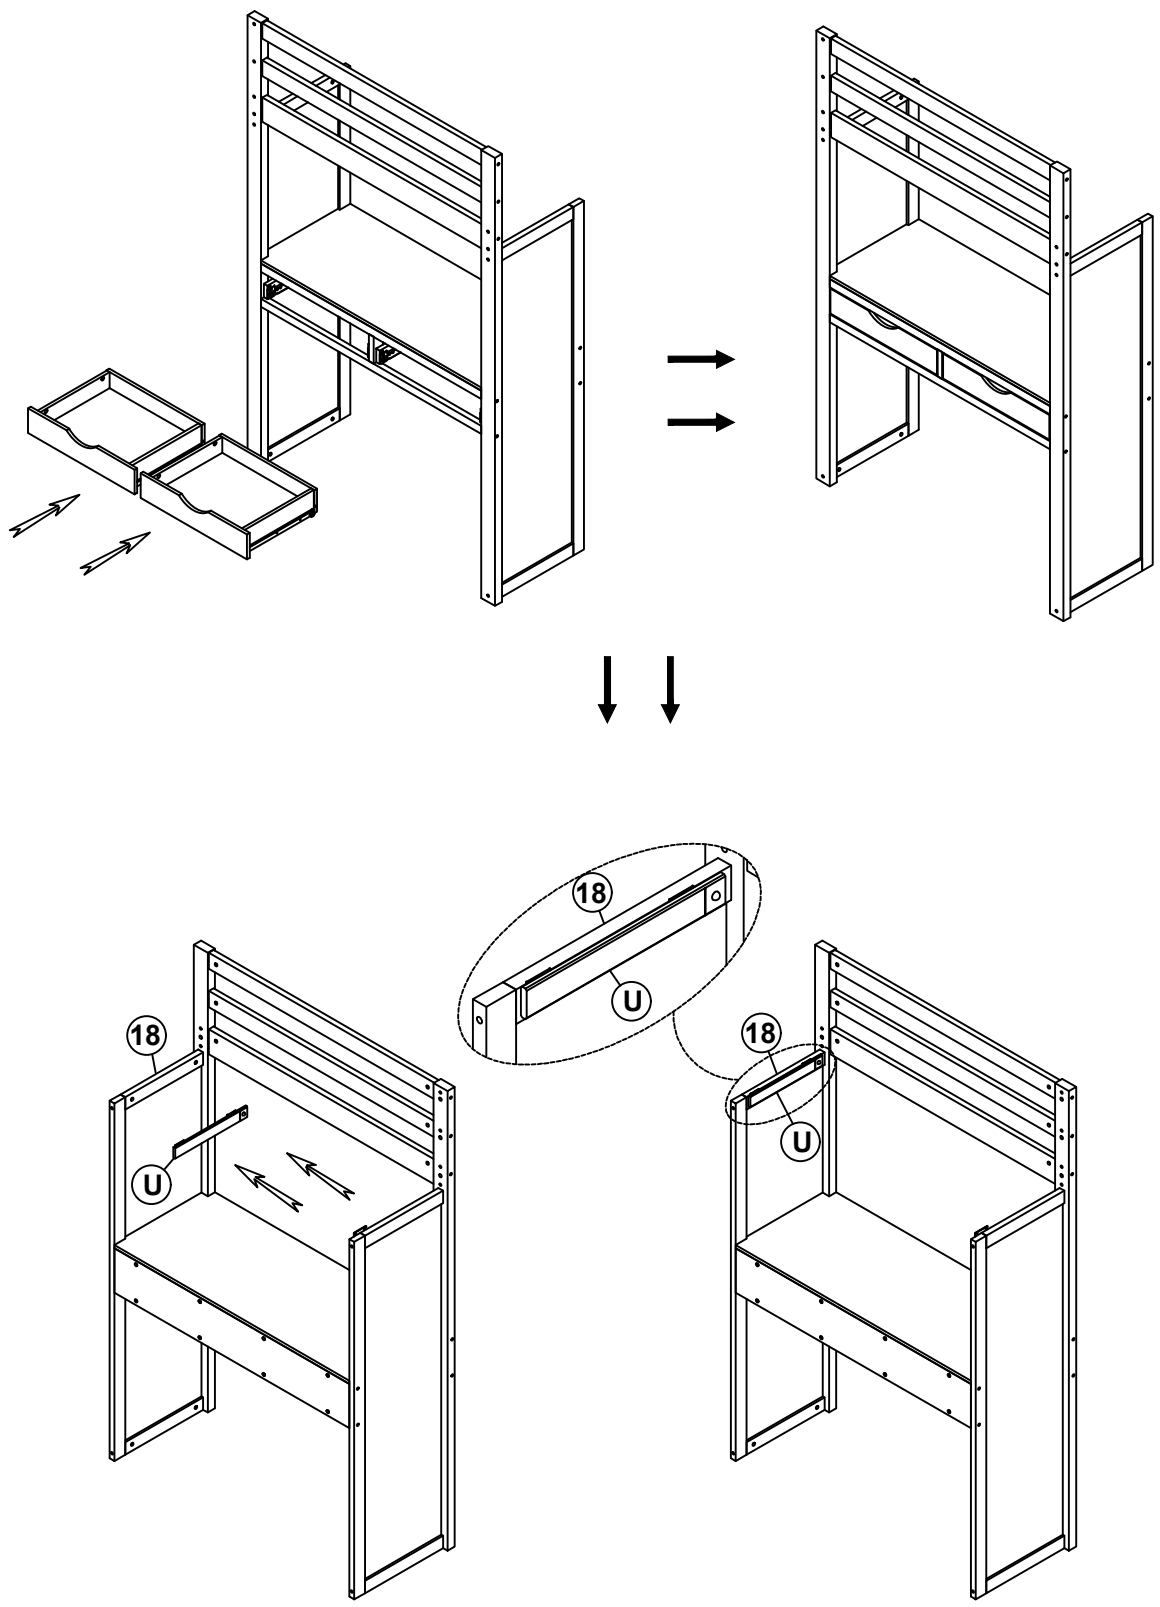




U		1PC
---	---	-----

# ASSEMBLY INSTRUCTIONS

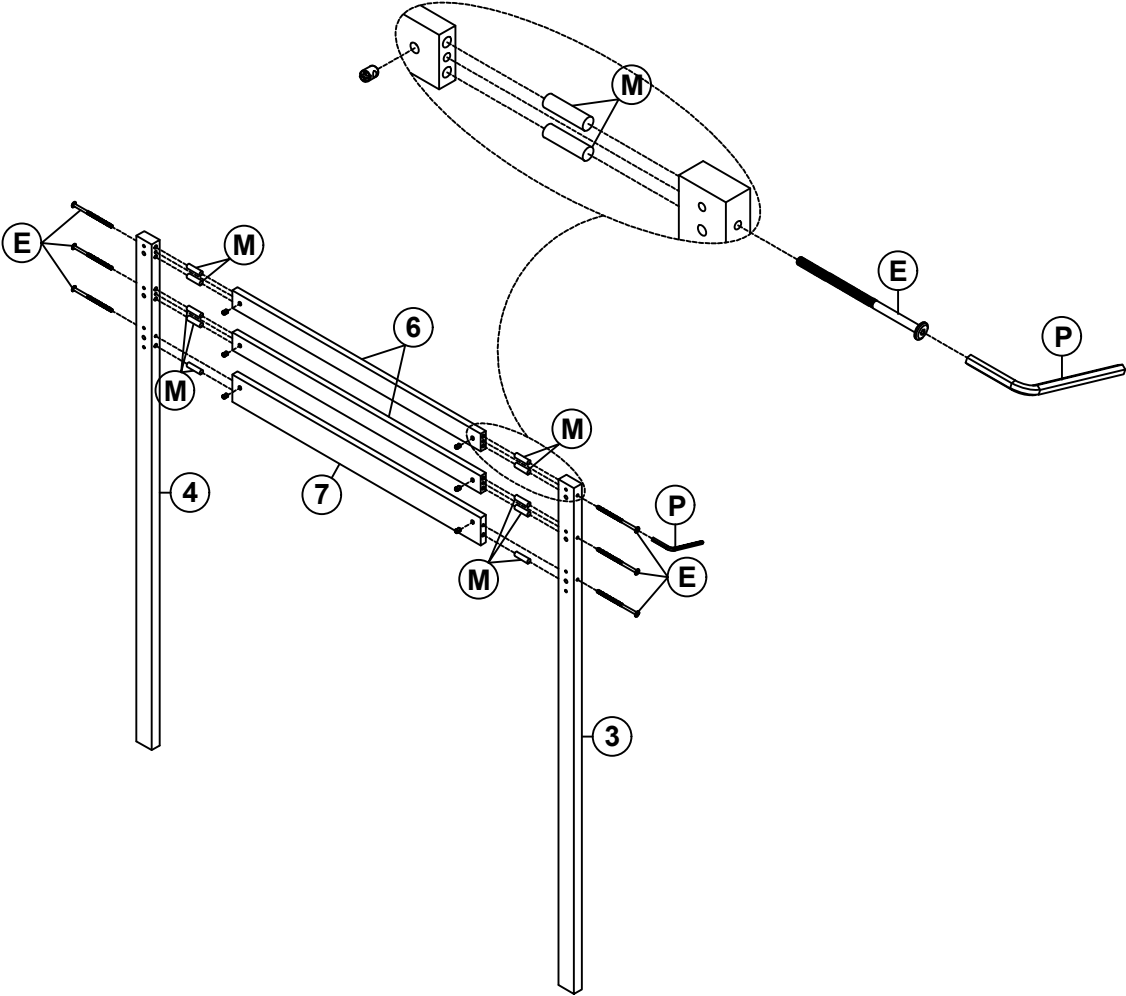
## Step 11






<b>P</b>	4x58		1PC			
<b>E</b>	1/4x110		6PCS	<b>M</b>	Ø10x40	 10PCS

# ASSEMBLY INSTRUCTIONS

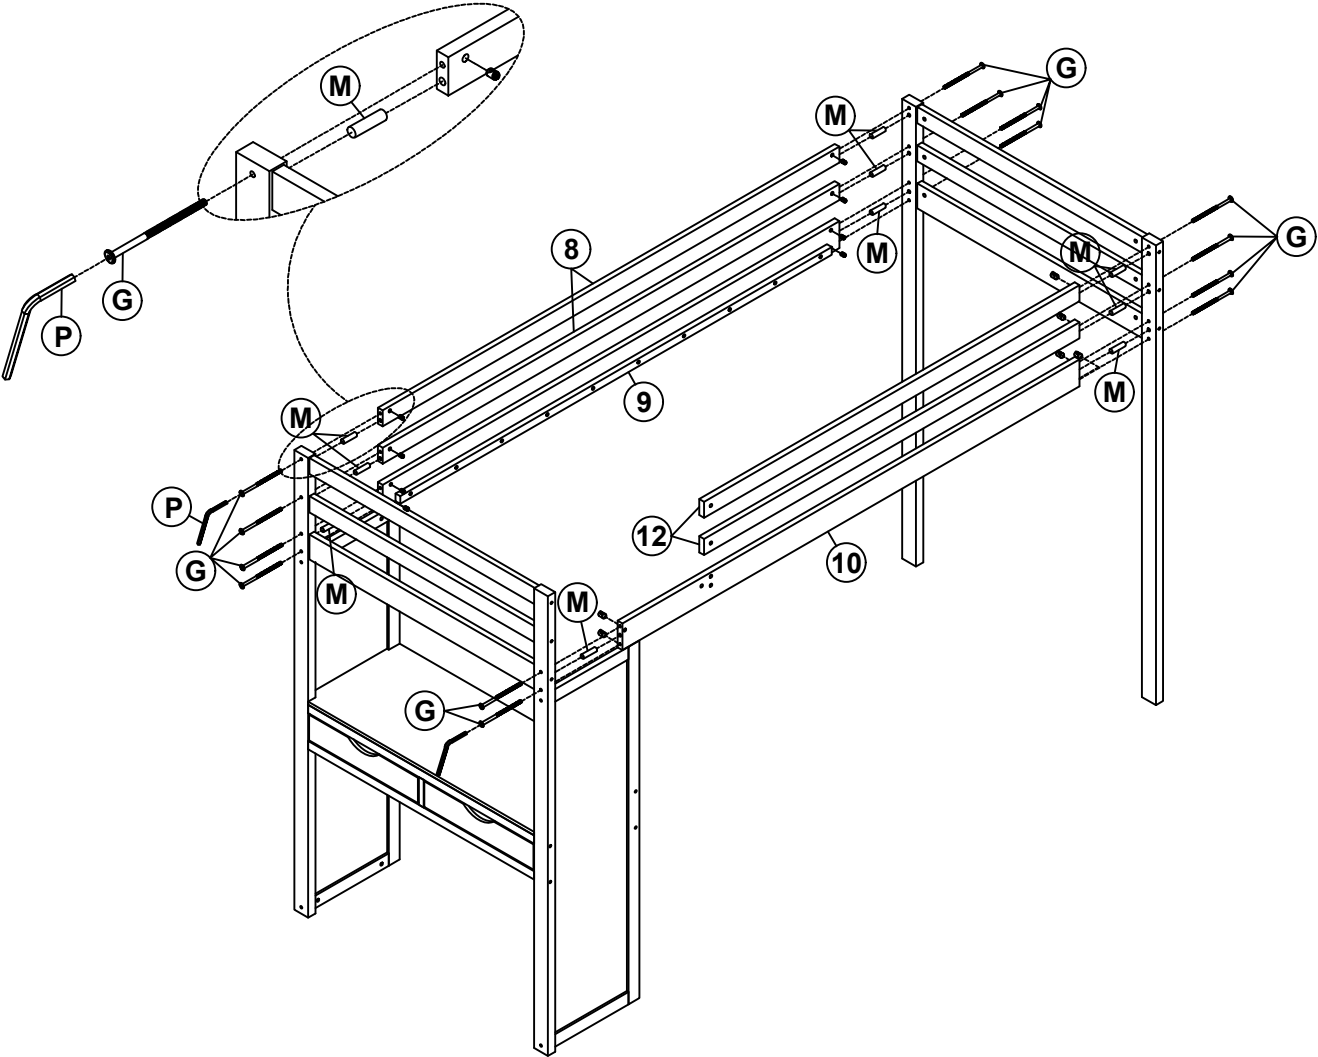
## Step 12








<b>P</b>	4x58		1PC			
<b>G</b>	1/4x75		14PCS	<b>M</b>	Ø10x40	 10PCS

# ASSEMBLY INSTRUCTIONS
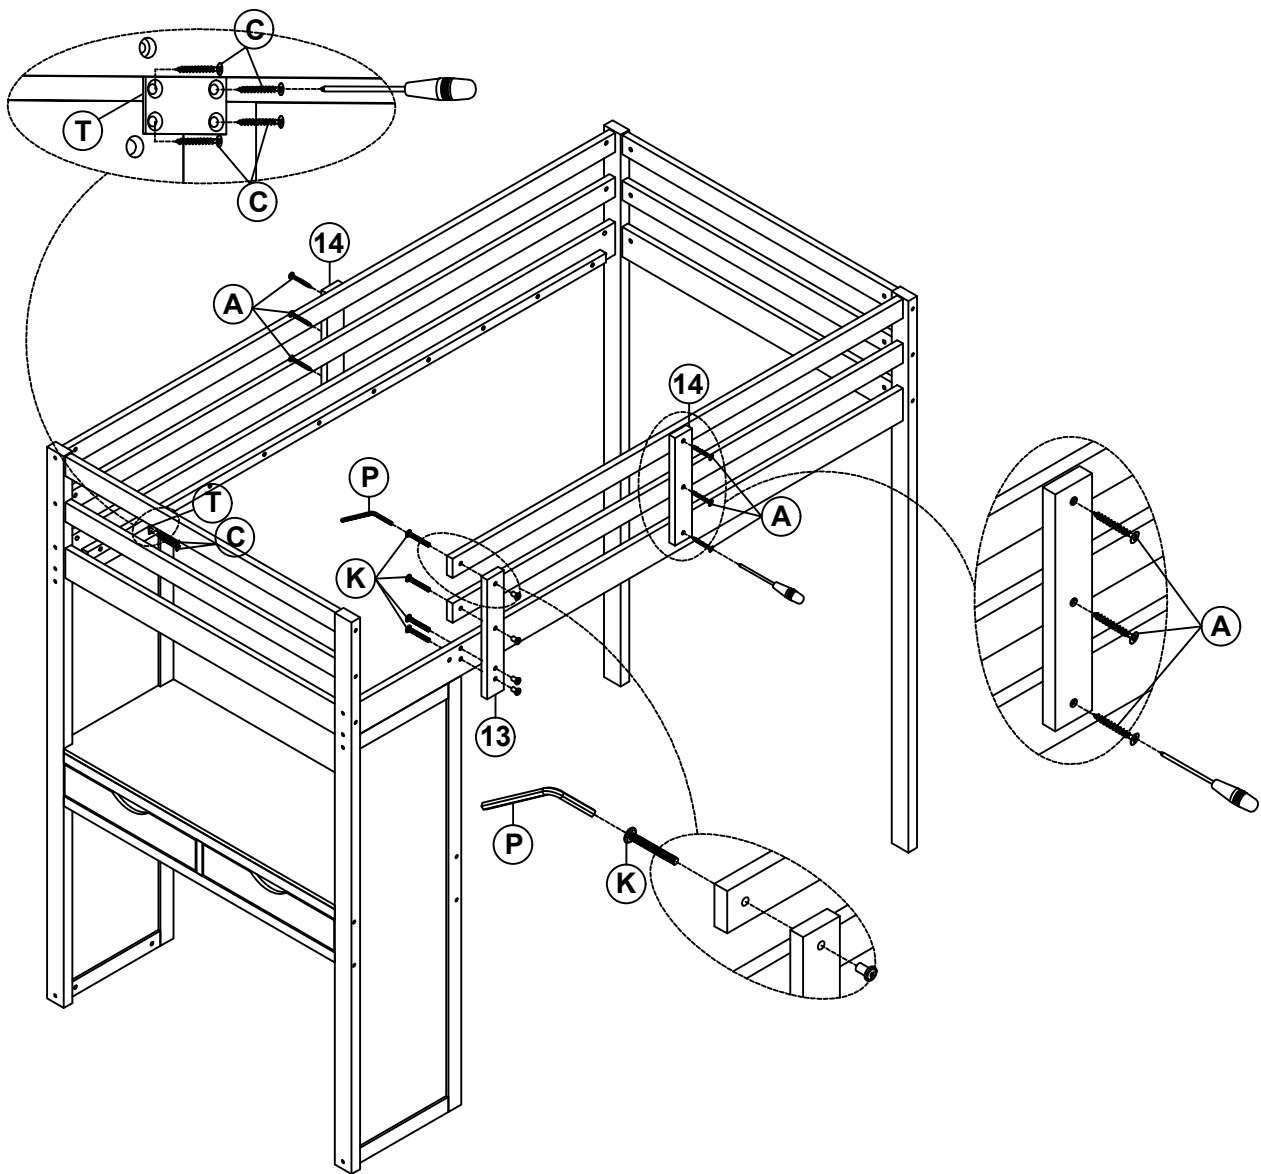
## Step 13








<b>C</b>	Ø4x15		4PCS			
<b>P</b>	4x58		1PC	<b>T</b>	50x28x2	 1PC
<b>K</b>	1/4x35		4PCS	<b>A</b>	Ø4x30	 6PCS

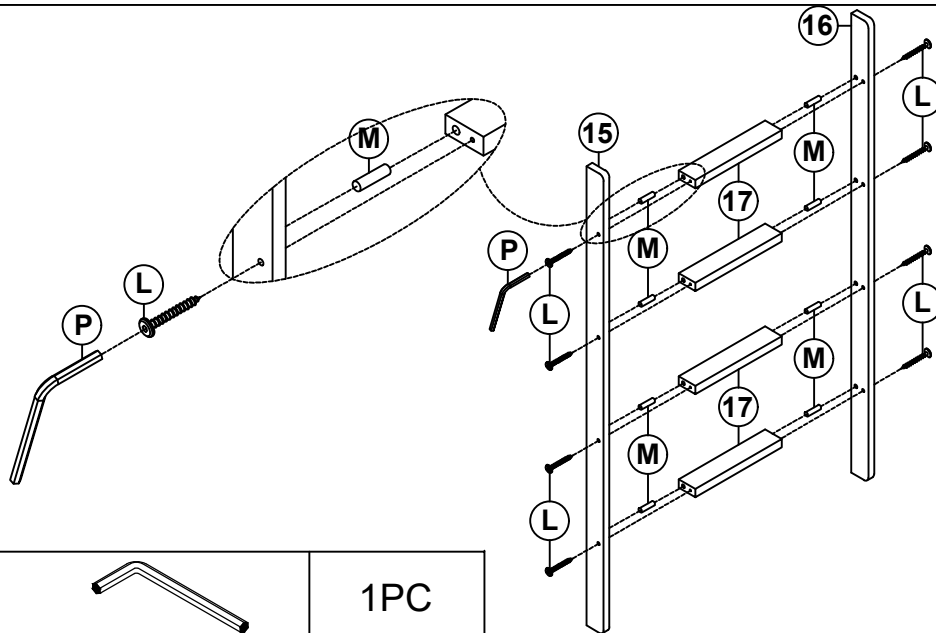


# ASSEMBLY INSTRUCTIONS





## Step 14

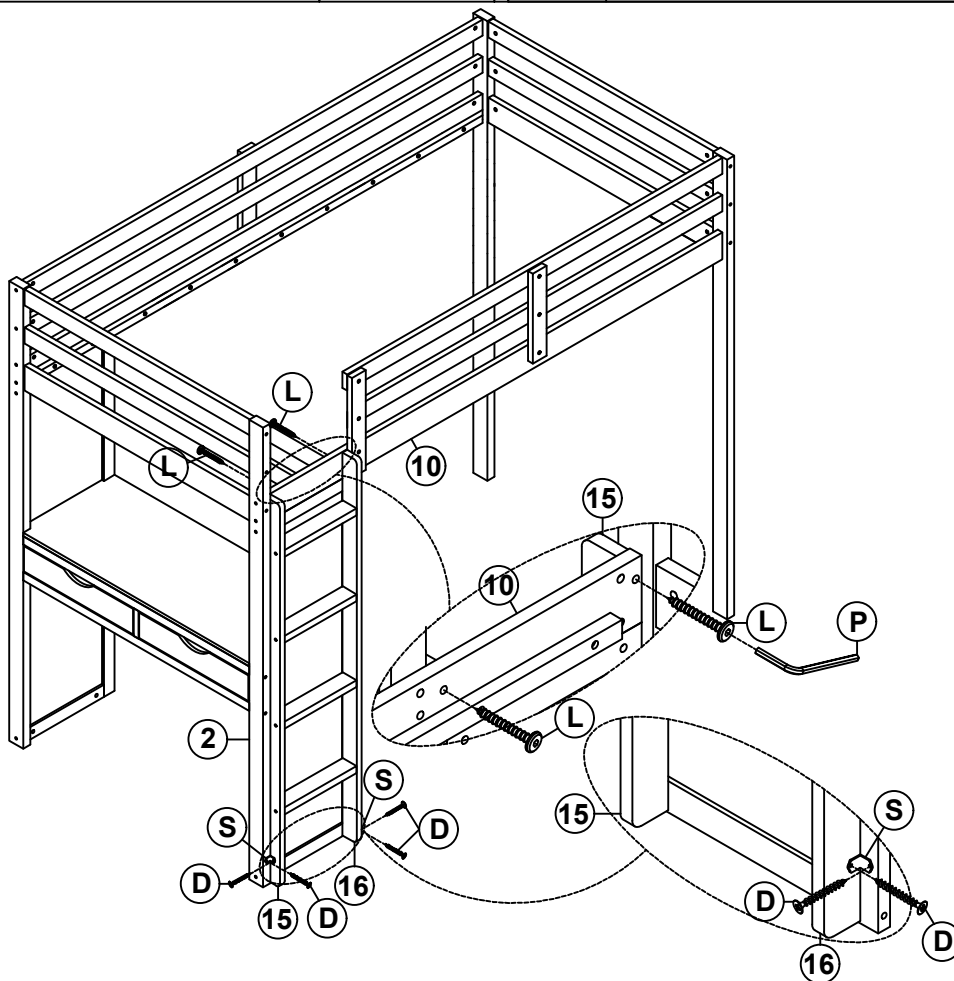

<b>P</b>	4x58		1PC				
<b>L</b>	6.5x60		8PCS	<b>M</b>	Ø10x40		8PCS

## Step 15







<b>P</b>	4x58		1PC	<b>L</b>	6.5x60		2PCS
<b>D</b>	Ø3.5x12		4PCS	<b>S</b>	15x15x2		2PCS

# ASSEMBLY INSTRUCTIONS

## Step 16

First attach 2pcs part 11 to the front and end of the frame between headboard. Then attach the remaining part 11 equidistantly between headboard

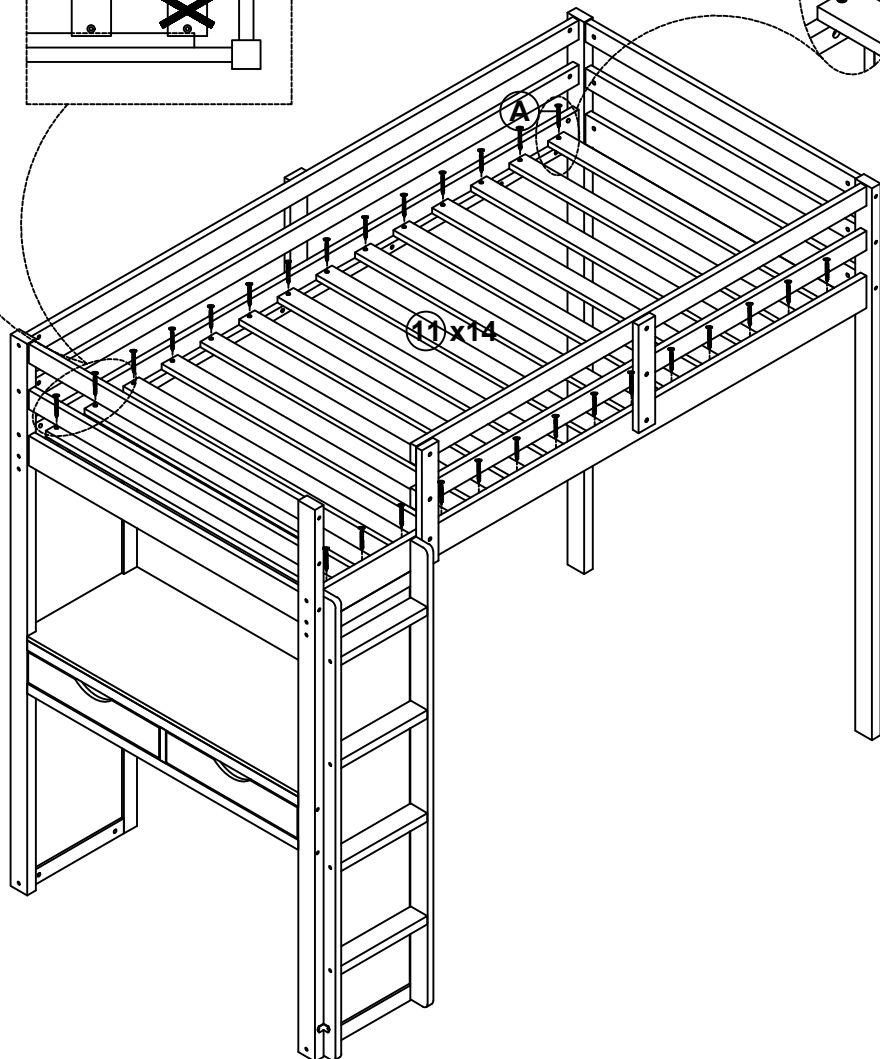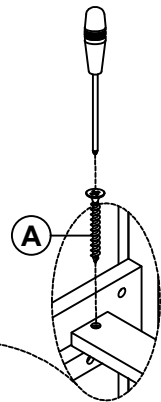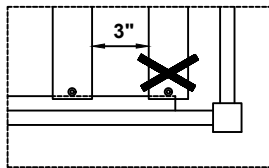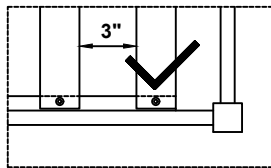

**A**


Ø4x30






28PCS


# ASSEMBLY INSTRUCTIONS

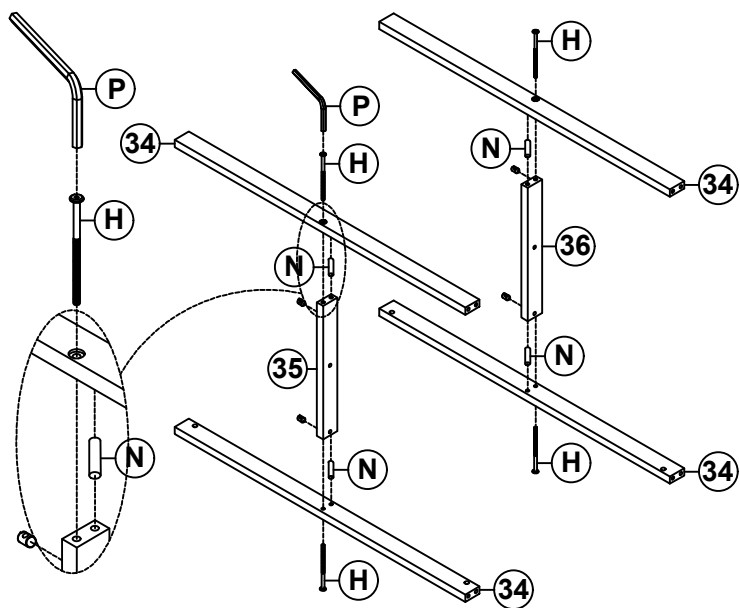
## Step 17



<b>P</b>	4x58		1PC				
<b>H</b>	1/4x60		4PCS	<b>N</b>	Ø8x30		4PCS


## Step 18

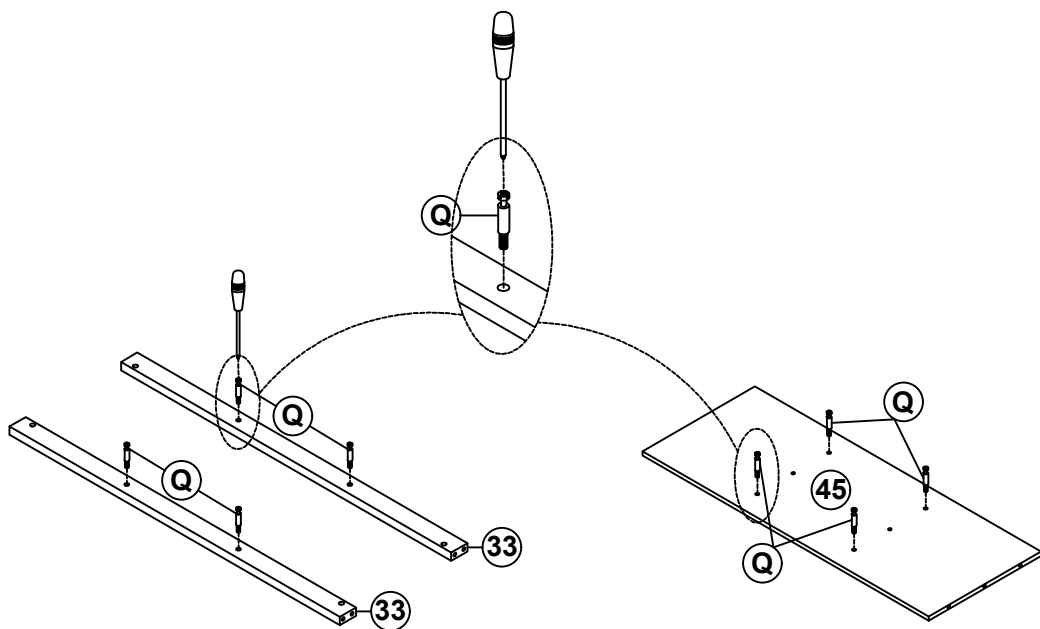

<b>Q</b>	Ø 6.5x35		8PCS
----------	----------	---	------


# ASSEMBLY INSTRUCTIONS

## Step 19

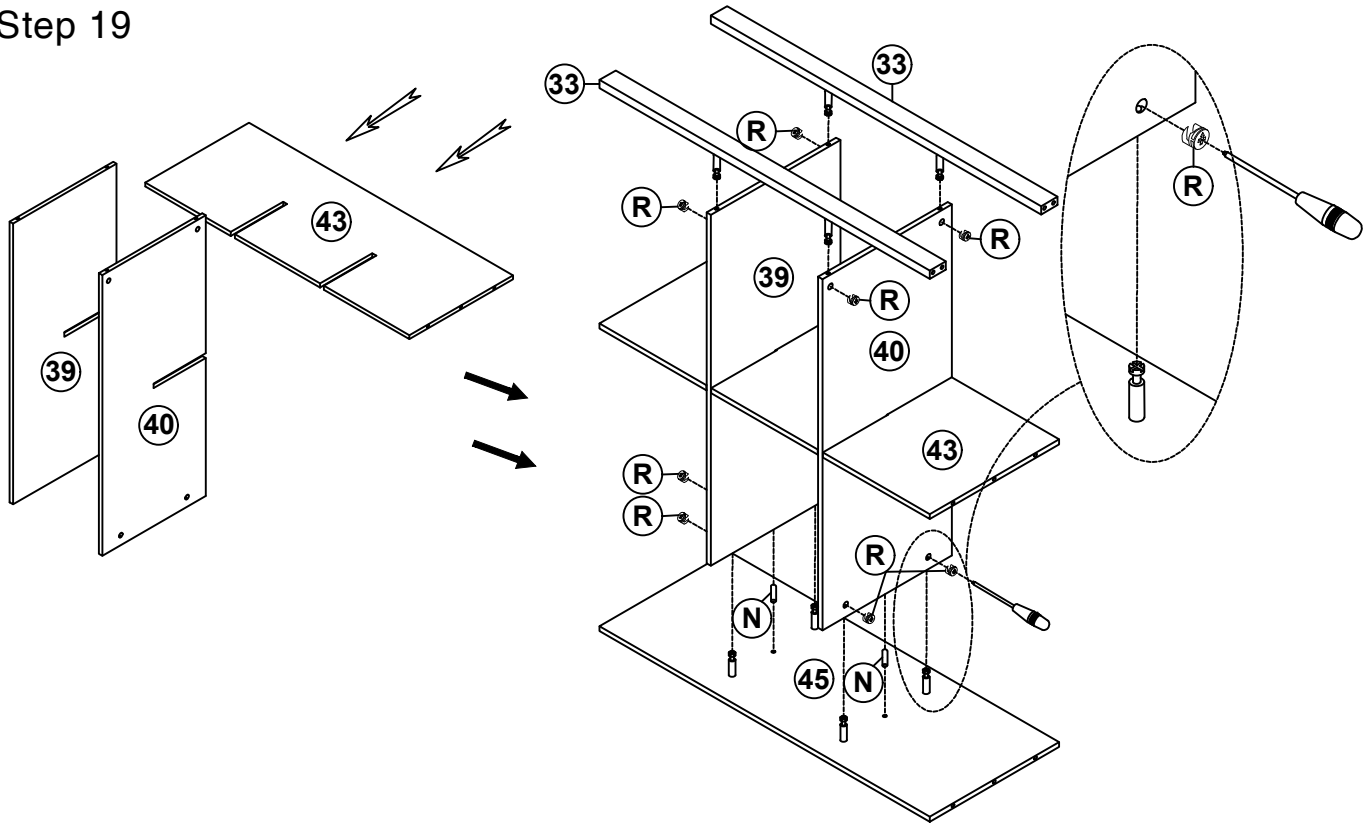

<b>R</b>	Ø12x10		8PCS	<b>N</b>	Ø8x30		2PCS
----------	--------	---	------	----------	-------	---	------


## Step 20

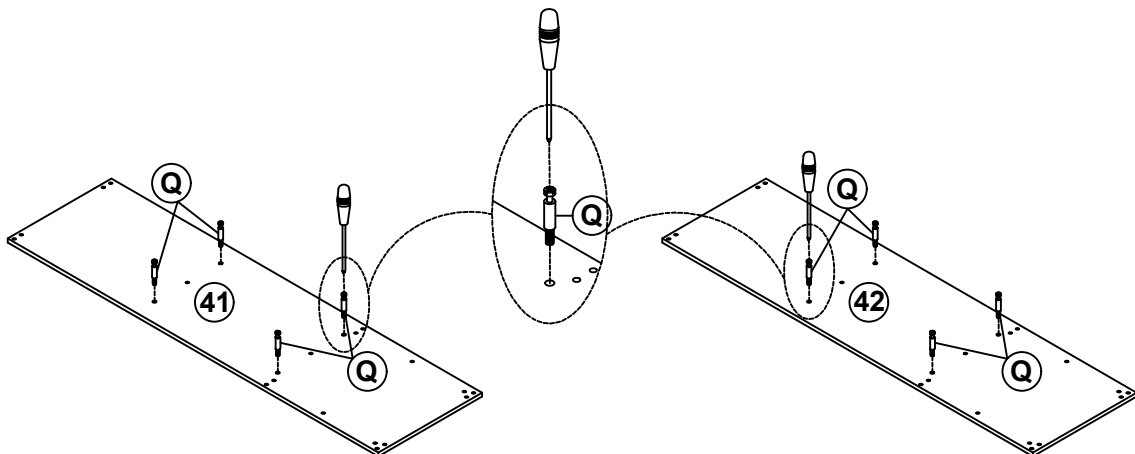

<b>Q</b>	Ø 6.5x35		8PCS
----------	----------	---	------

# ASSEMBLY INSTRUCTIONS


## Step 21

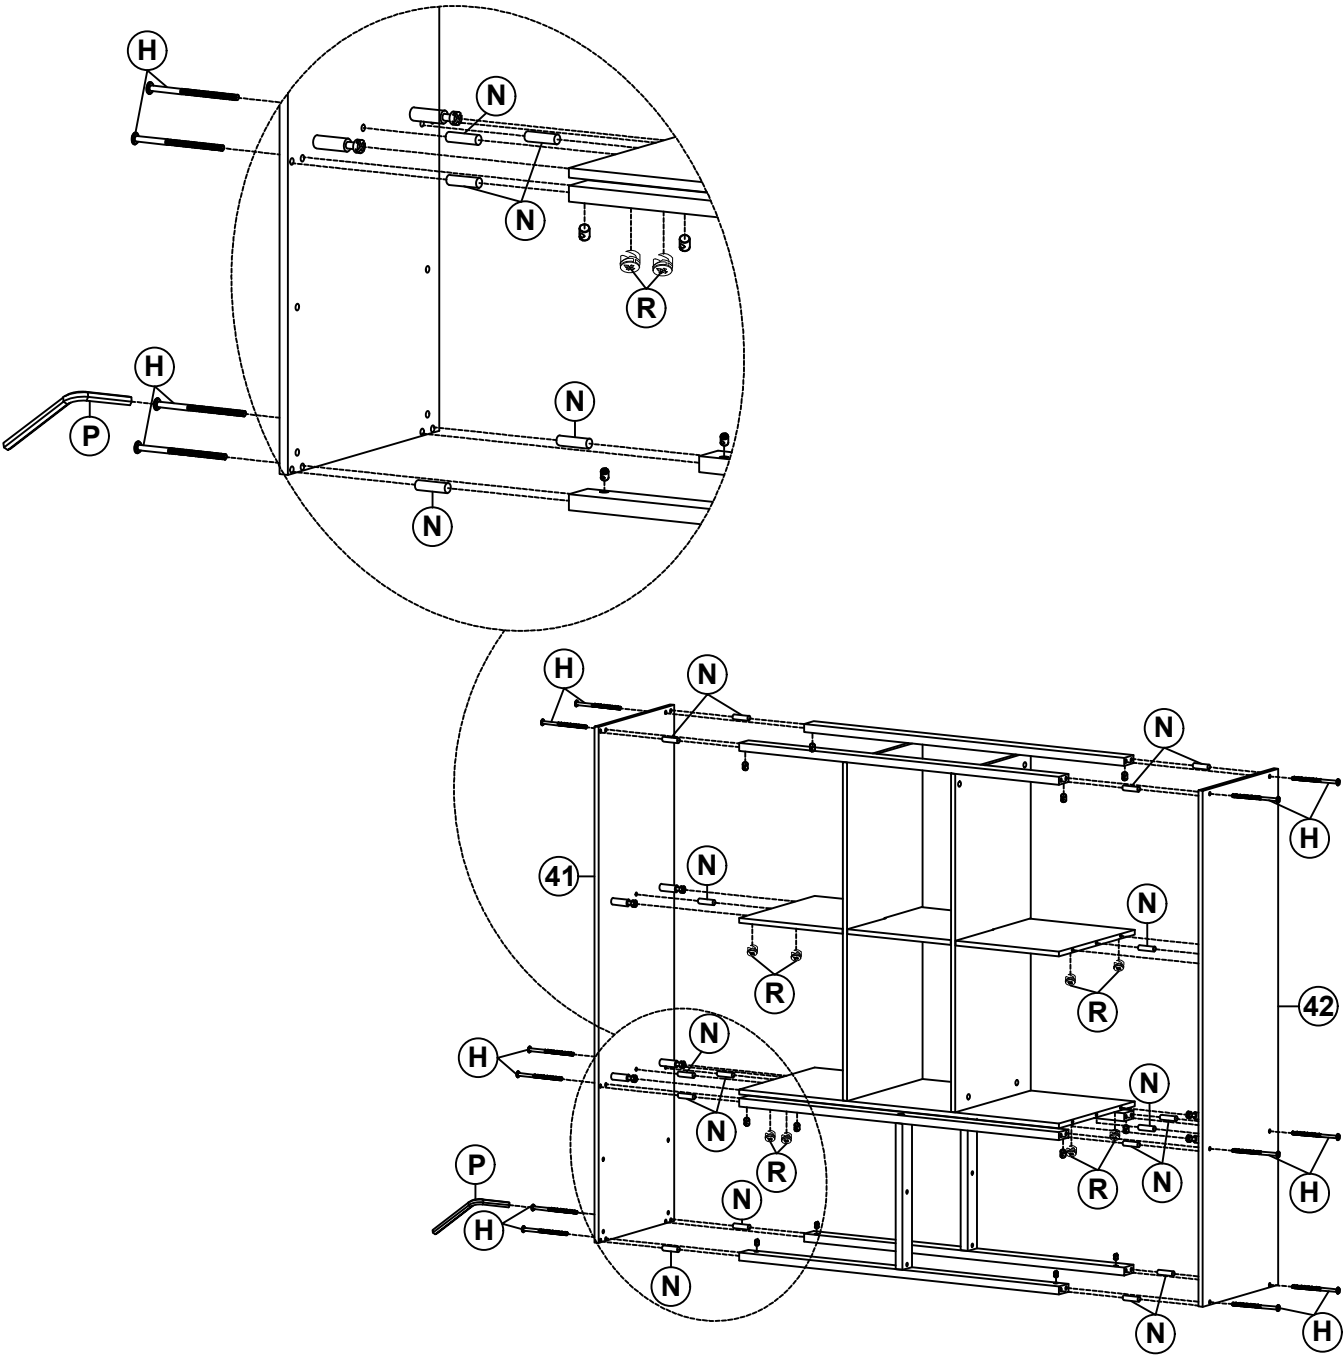



<b>R</b>	Ø12x10		8PCS	<b>P</b>	4x58		1PC
<b>H</b>	1/4x60		12PCS	<b>N</b>	Ø8x30		16PCS

# ASSEMBLY INSTRUCTIONS

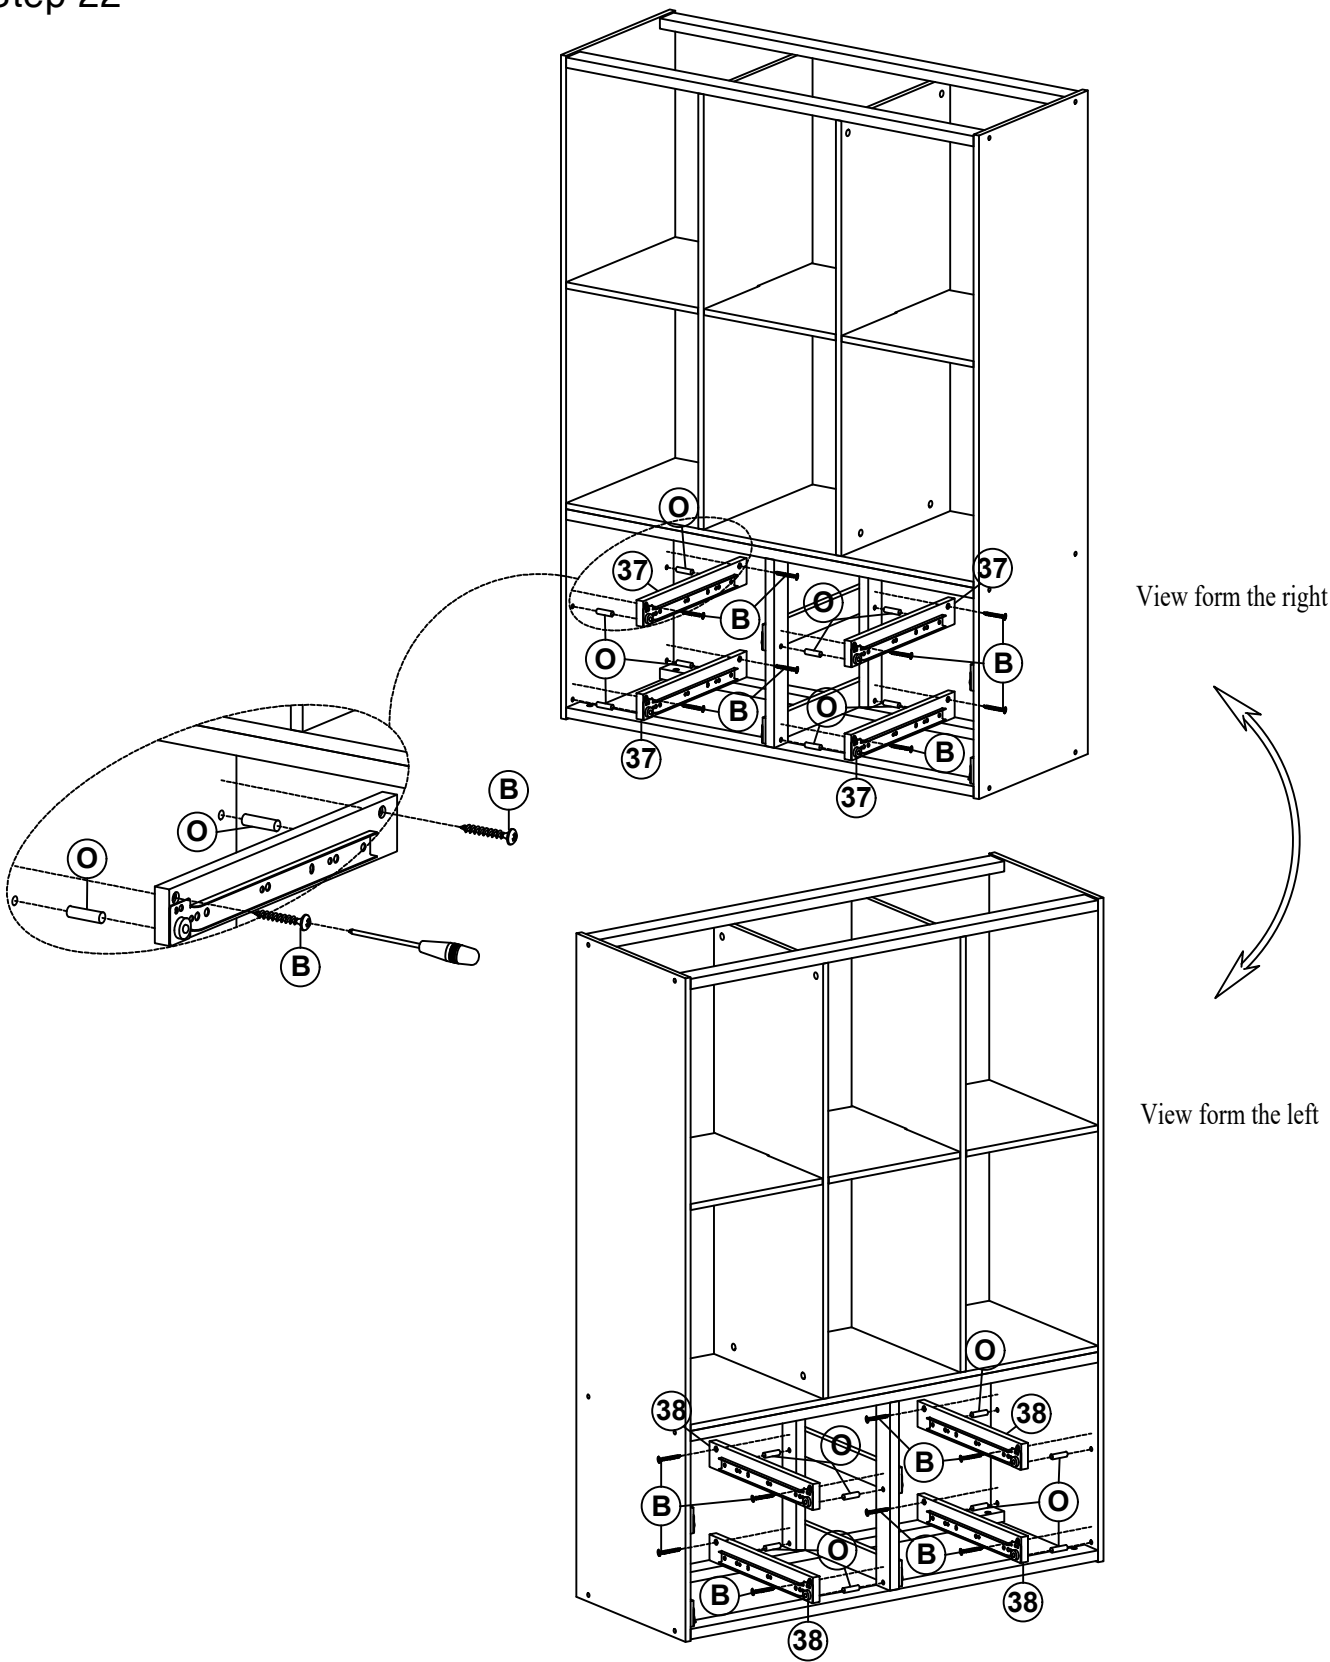
## Step 22



<b>B</b>	Ø4x20		16PCS	<b>O</b>	Ø8x20		16PCS
----------	-------	---	-------	----------	-------	---	-------


# ASSEMBLY INSTRUCTIONS

## Step 23

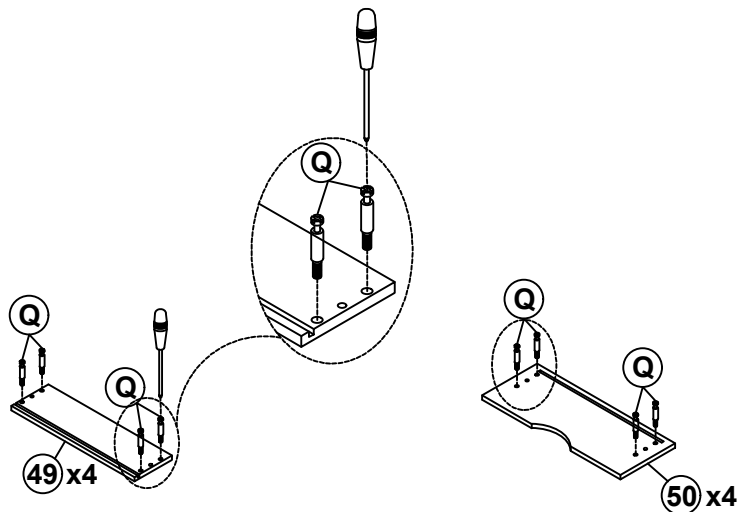


**Q**

Ø 6.5x35



32PCS

## Step 24

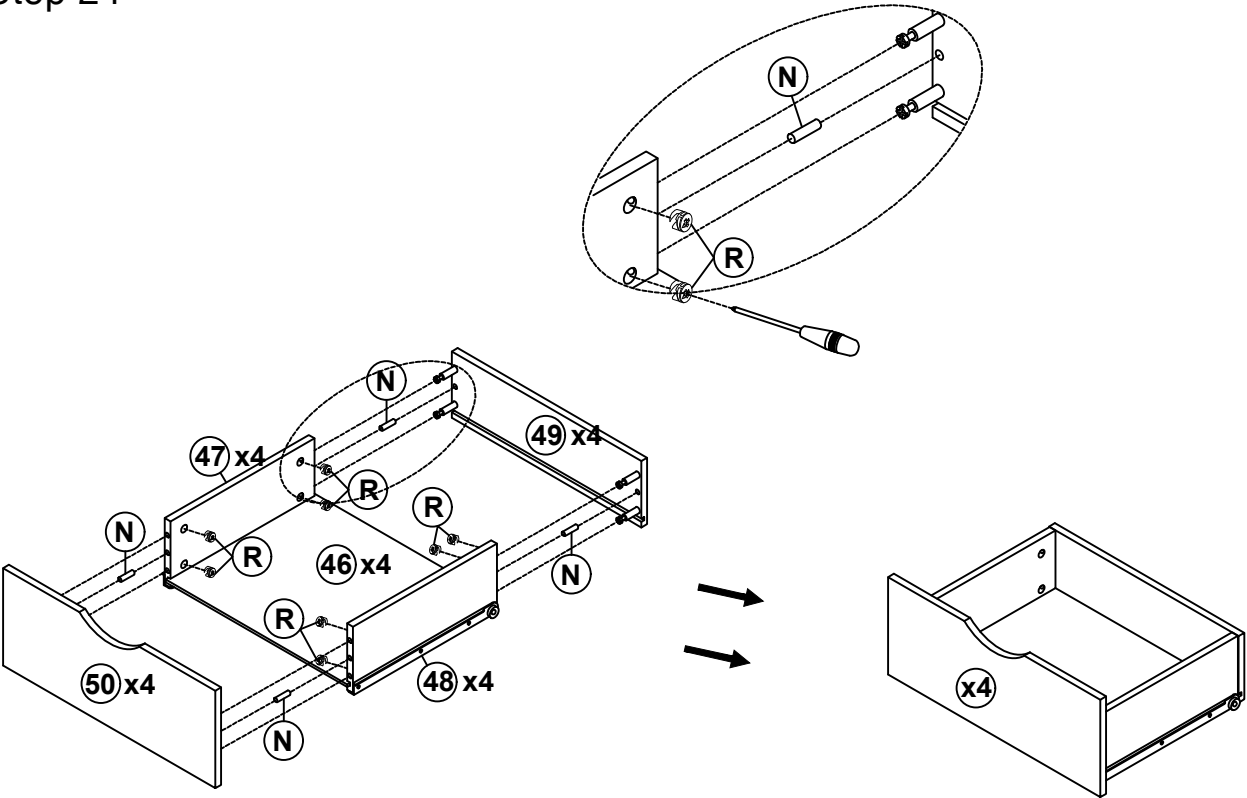

**N**

Ø8x30



16PCS

**R**


Ø12x10



32PCS

# ASSEMBLY INSTRUCTIONS


## Step 25

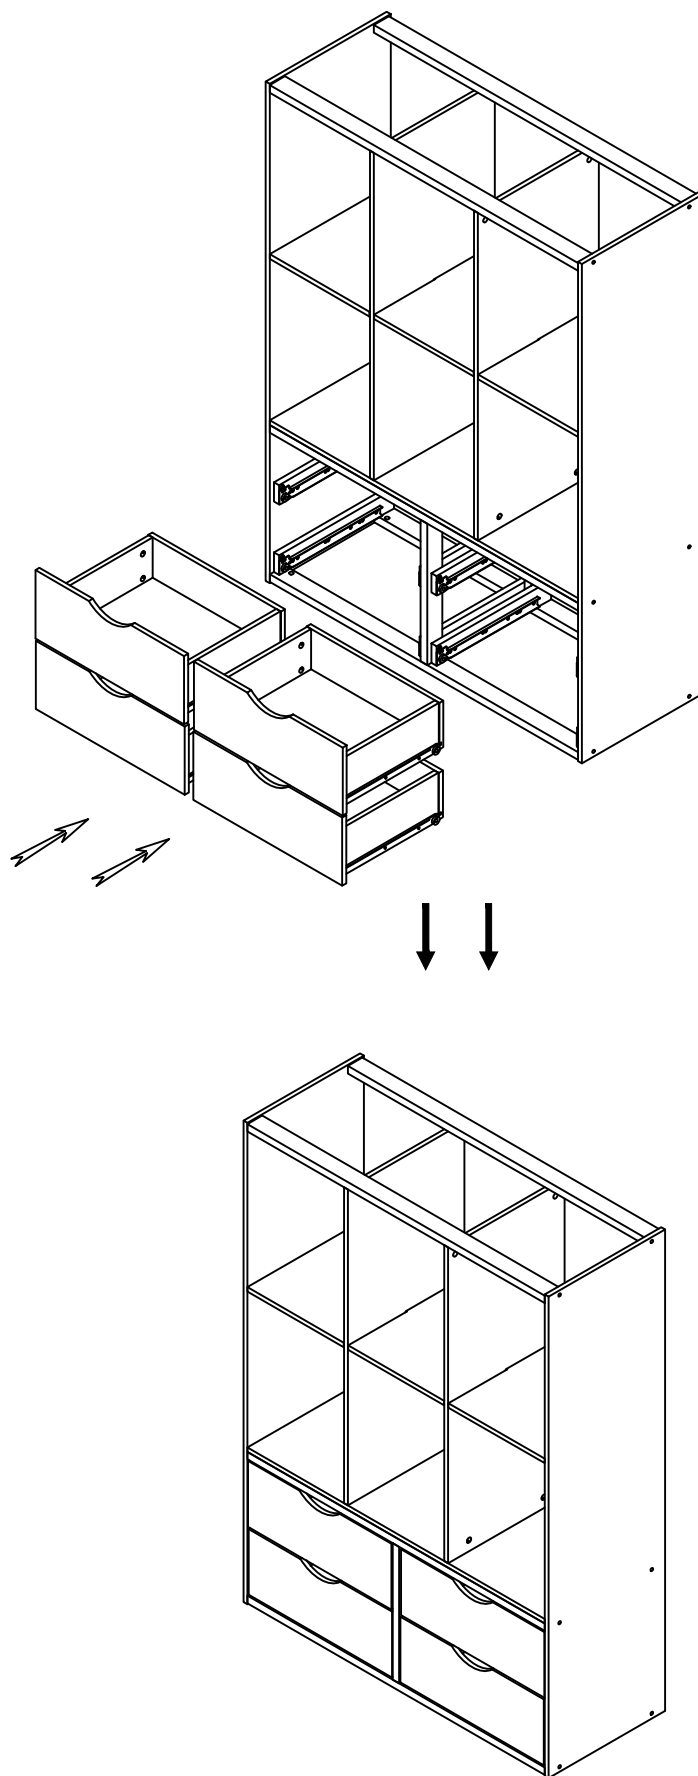




# ASSEMBLY INSTRUCTIONS

Step 26

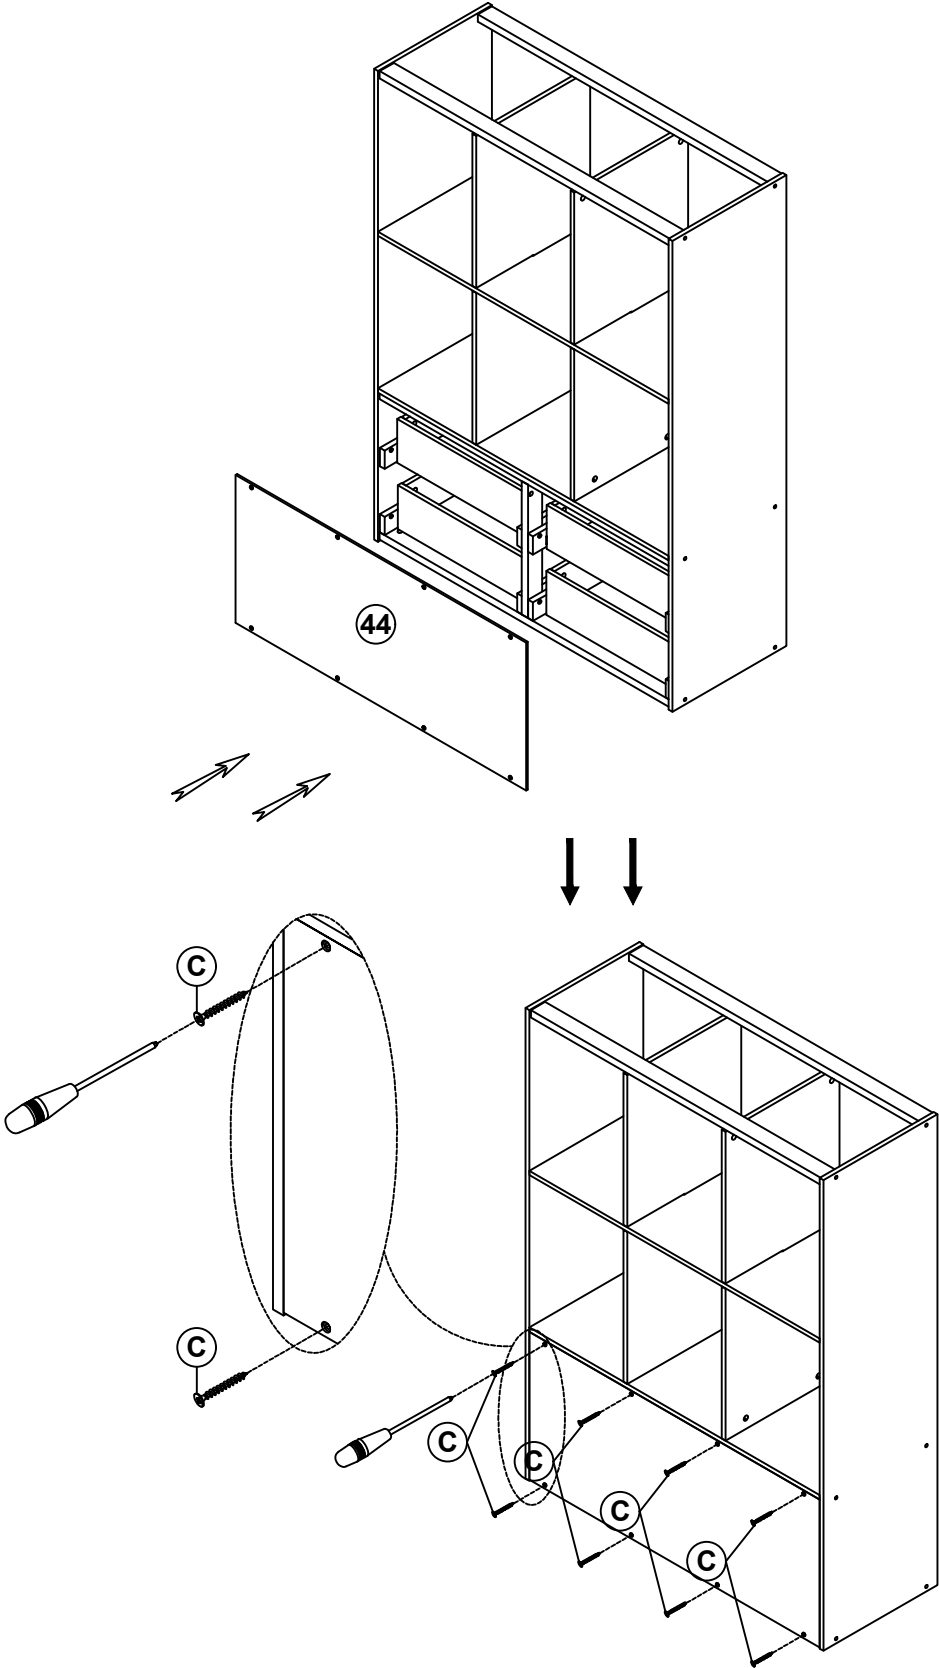

<b>C</b>	Ø4x15		<b>8PCS</b>
----------	-------	---	-------------

# ASSEMBLY INSTRUCTIONS

Step 27

