

Installation Instructions

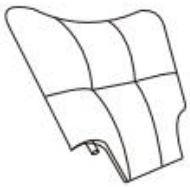

A  x 1	B  x 1	C  x 1
D  x 1	E  x 1	F  x 1
G  x 2	H M6*20  x 8	I M6*60  x 2
J 		

Attention :
1.screws should be only 50% tight.
2.after all the screws adjust the holes then tight screws 100% totally.

1

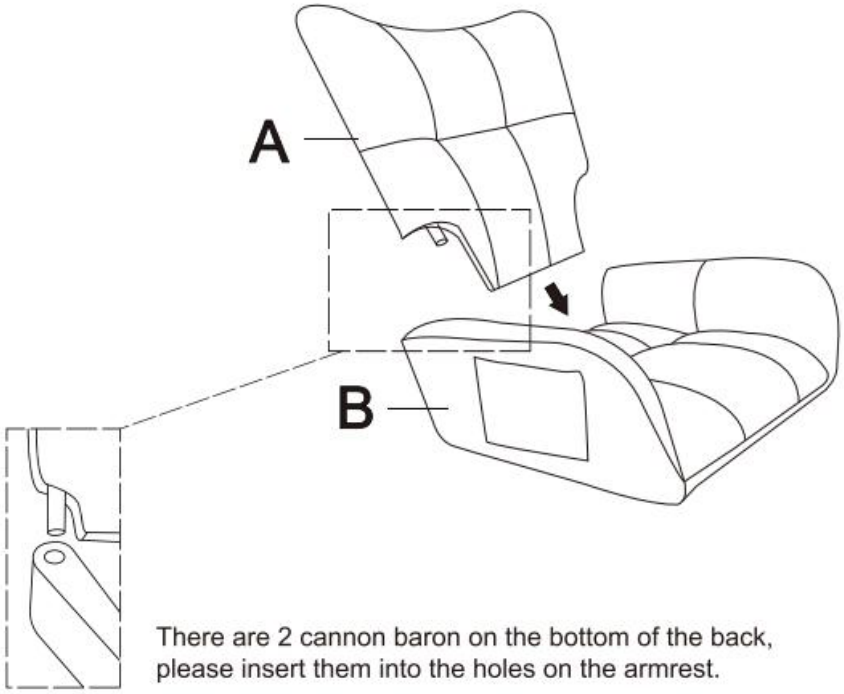


There are 2 cannon baron on the bottom of the back,
please insert them into the holes on the armrest.

Attention :
1.screws should be only 50% tight.
2.after all the screws adjust the holes then tight screws 100% totally.


2

Hold the backrest
and press down

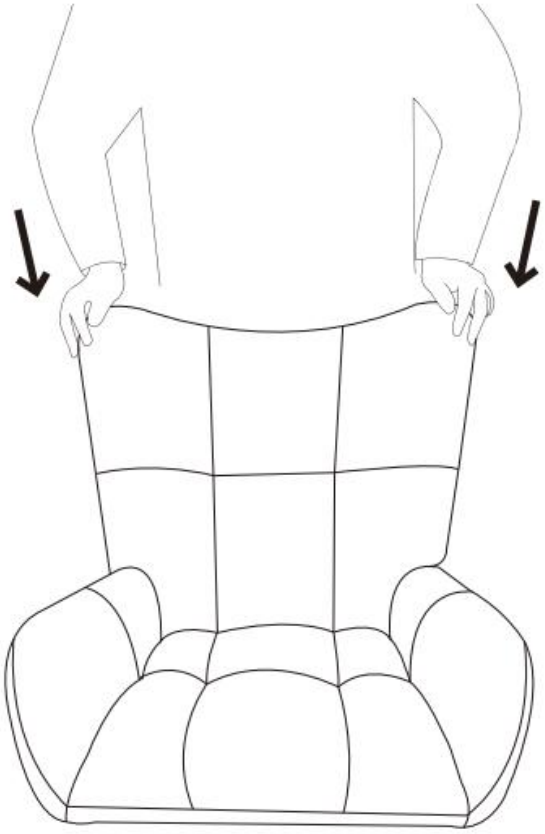

Attention :
1.screws should be only 50% tight.
2.after all the screws adjust the holes then tight screws 100% totally.

3 Make sure the back and the bottom tight fit,
then drew the screws in, then tighten.

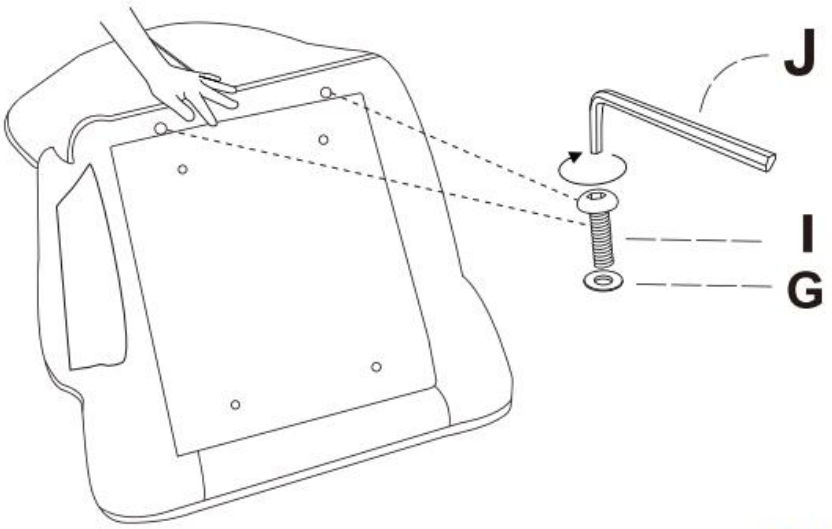


X2

G	2PCS
I	2PCS

Attention :
1.screws should be only 50% tight.
2.after all the screws adjust the holes then tight screws 100% totally.


4

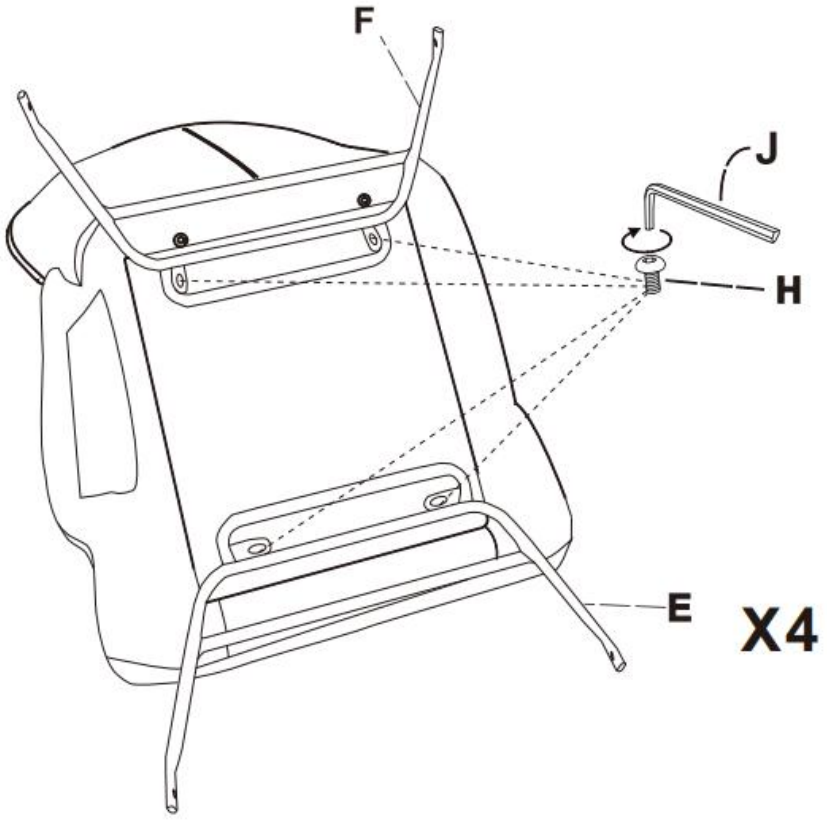

H 4 PCS

Attention :
1.screws should be only 50% tight.
2.after all the screws adjust the holes then tight screws 100% totally.

5 Make sure the longer side of C and D is facing the back of the chair.

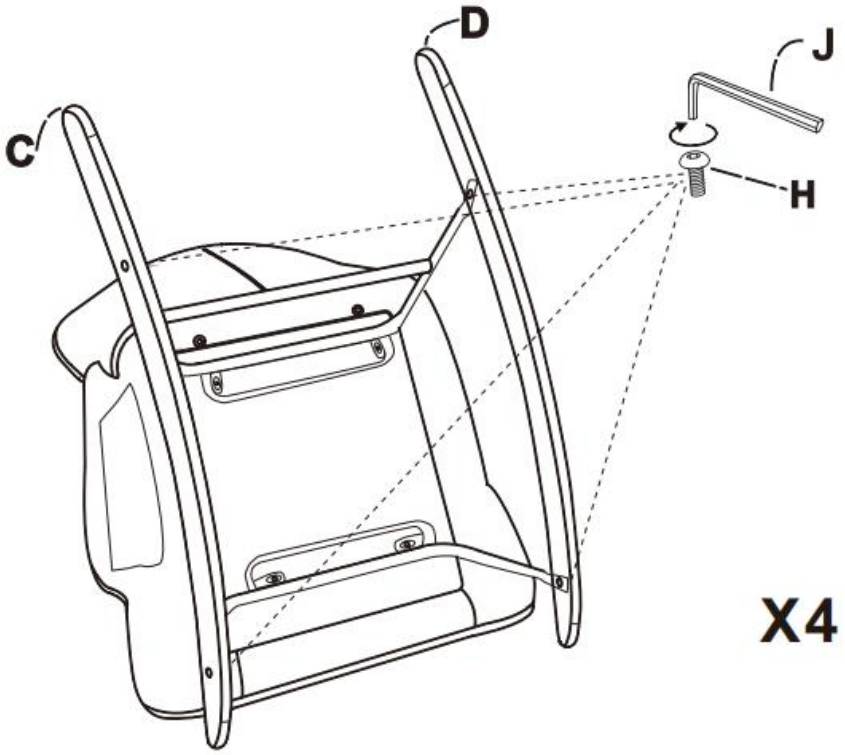

H 4PCS