




Plug into power outlet.






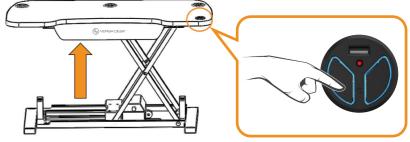

- Locate included cable clip and secure wire with clip on base as illustrated.
- Locate the 4 thumb screws in plastic bag (the shape of the thumb screws may be different from the diagram).

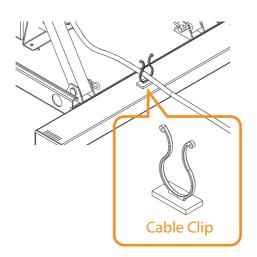

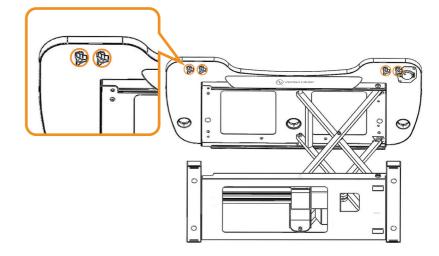










Insert the 4 thumb screws half way leaving a ¼ inch gap between the thumb screw and the bottom of the top surface.

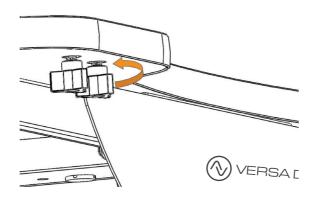

Pick up the keyboard surface. Align the slots on the side brackets to meet the loosened thumb screws on both the left and right sides. Gently slide the keyboard tray brackets into the gap between the thumb screws and the top surface.

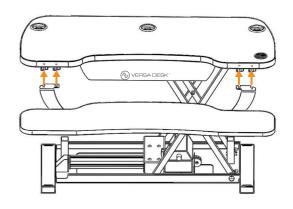

Make sure the keyboard tray is all the way in and the end of the keyboard tray is sitting under the middle bracket.

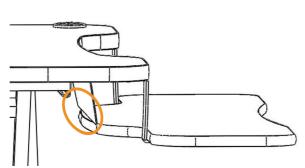

You're all ready to use

